



## INSTALLATION INSTRUCTIONS

### X3 Steering Wheel Launch Control Push Button

SKU(s): 702FC0031 (OEM), 702FC0038 (EVP)

#### INCLUDED PARTS

- |  |
|--|
| (1) Steering Wheel Launch Control Button Harness |
| (2) Zip Tie                                      |
| (1) Momentary Launch Switch                      |
| (1) OEM or EVP Steering Wheel Mounting Plate     |

#### REQUIRED TOOLS

- |                      |
|----------------------|
| T 15 & 30 Socket     |
| 13mm Open End Wrench |
| Drill Bit            |



WE'D LOVE TO HEAR FROM YOU - LEAVE A REVIEW & STAY CONNECTED!   



## INSTALLATION INSTRUCTIONS

**Step 1:** Remove the driver side upper dash by removing (7) T-30 screws and (3) push darts. One push dart is under the dash located in front of the key fob. It helps to tilt the steering column all the way down.

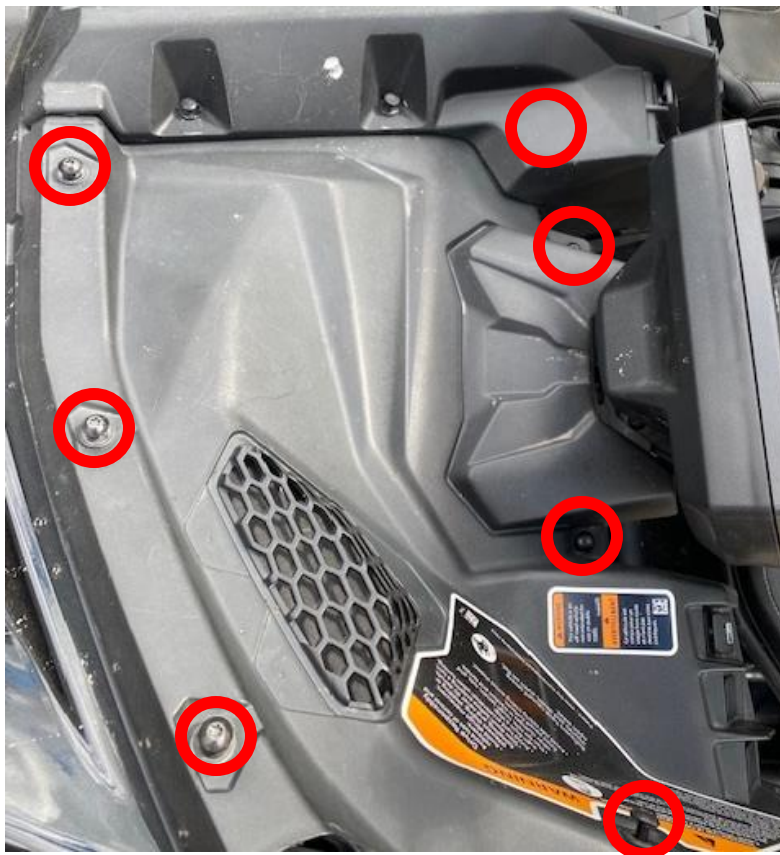


Figure 1



Figure 2

WE'D LOVE TO HEAR FROM YOU - LEAVE A REVIEW & STAY CONNECTED!   

**Step 2:** When removing the front dash its best to unclip the front harness clips and remove the front electronic suspension module (if equipped).



Figure 3

**Step 3:** Locate the break switch connector. The female end is stuck to the frame, unplug the male. There is one tab (that you cannot see) on the front side. Press in and remove.



Figure 4



Figure 5



**Step 4:** Install the supplied harness into the OEM brake switch harness.



Figure 6

**Step 5:** Locate where you want the momentary launch switch, push out the blank. Push the harness through the empty port, install the switch to harness, push the switch into the dash until fully seated.



Figure 7



Figure 8



Figure 9

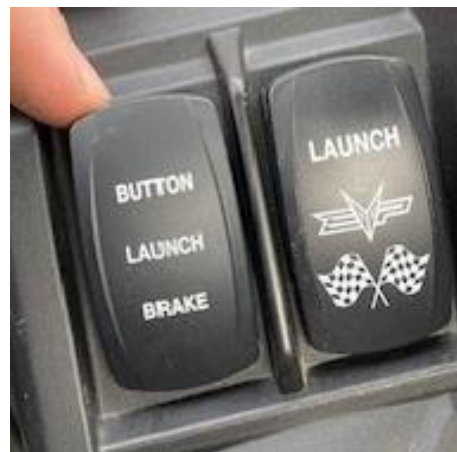


Figure 10



## INSTALLATION INSTRUCTIONS

**Step 6:** Install the push button through the mounting bracket, tighten lock washer and nut. This is a front mounting switch, make sure the teeth on the washer on pointing towards the push button when installing. Mount the bracket on the left or ride side of wheel. For the OEM steering wheel drill pilot holes and install with supplied hardware. For the EVP wheel, remove the (6) screws on the wheel and install behind the wheel.



Figure 11



Figure 12



Figure 13



## INSTALLATION INSTRUCTIONS

**Step 7:** Zip tie the harness to the mounting plate with the small zip tie. You can zip tie the excess coil to the steering column. Turn the wheel to make sure you have full movement.

**Optional:** You can use the standard hex nut to fasten down the button or the supplied EVP beauty nut.



Thank you for choosing Evolution Powersports products. If you require further assistance, please call our Tech Support @ (715) 247-3862

**Note:** This product is exempt from the emission standards and related requirements of 40 C.F.R. § 1051 as provided by 40 C.F.R. § 1051.620, and California law [e.g., vehicle code §§ 27156 and 38391]. This product is sold only for use in connection with EPA certified, purpose-built, nonroad vehicles used solely for closed course, nonroad competition/racing and not used for any recreational purpose or on public highways or right of ways maintained by and open to the public. This product is sold only in connection with machines that do not fall under state and/or federal noise or emission standards/regulations. Purchasers who/that purchase this product represent and warrant that the product is purchased only in connection with EPA -certified, emission-regulations-exempt and noise-regulations-exempt competition/racing vehicles as interpreted under applicable state and/or federal law. Questions: Call Evolution Powersports at (715) 247-3862.

WE'D LOVE TO HEAR FROM YOU - LEAVE A REVIEW & STAY CONNECTED! @ f d