



# MAKE A DIFFERENCE


## Front Bumper

**BXG.8007**

(INSTALLATION INSTRUCTION)

**ATTENTION** • Please verify all parts are present and read instructions carefully before starting installation.  
• Please feel free to contact your distributor if you have any kind of question about your purchase.

### CONTENTS

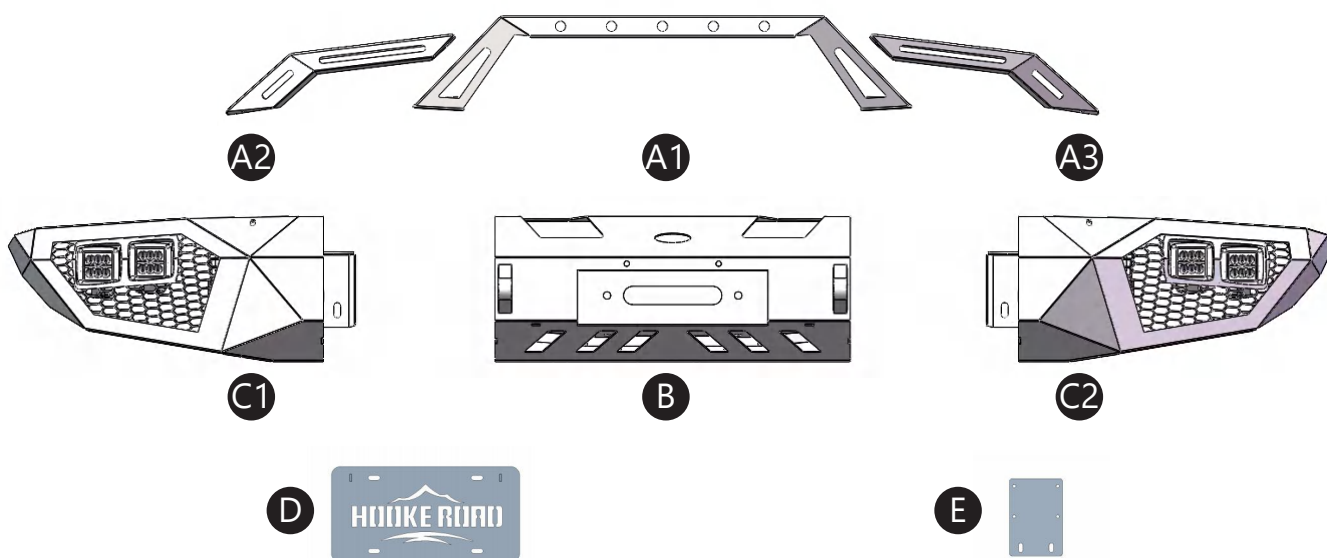












A1&amp;A2&amp;A3: Bull Bar

B: Main Body

C1&amp;C2: Wings

D: License Plate Bracket

E: Winch Power Control Box Bracket

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
4	Hex Bolt	M12×35		10	Flat Washer	M8×16×1	
6	Hex Bolt	M12×30		2	Flat Washer	M6×12×1	
10	Hex Bolt	M8×20		10	Hex Nut	M12	
2	Button Bolt	M6×16		10	Flange Lock Nut	M8	
10	Split Lock Washer	D12		2	Nylon Lock Nut	M6	
10	Split Lock Washer	D8		2	EVA		
14	Flat Washer	M12×30×2					

## 2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 10mm, 13mm Wrench

◆ 4mm Hex Bit Socket

◆ 19mm Wrench


To view online instruction, please scan the QR code.



## 3 INSTALLATION INSTRUCTION

### Step 1

Place the vehicle in park, remove the factory bumper from the frame.

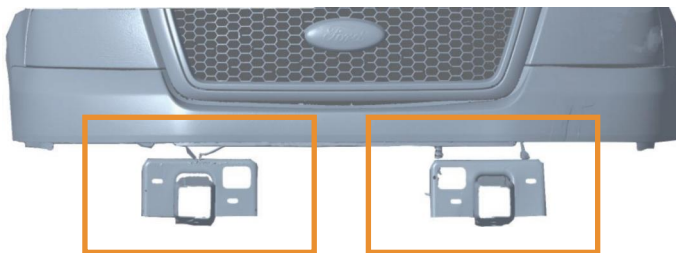


### Step 2

First, stick the EVA to the main body.

Assemble your Hooke Road bumper. Align the outer profile with the inner profile and tighten the hardware. Repeat this step on the other side of the bumper.


- (2) EVA
- (6) M12×30 Hex Bolt
- (6) M12×30×2 Flat Washer
- (6) D12 Split Lock Washer
- (6) M12 Hex Nut

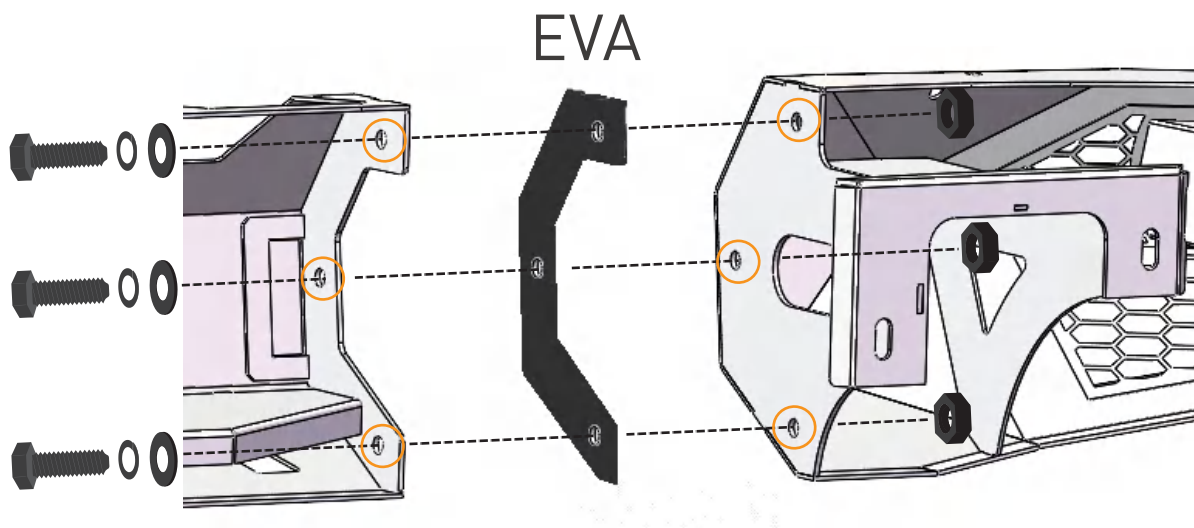

**Step 3**


Secure the bull bar to the bumper and tighten the hardware. Repeat this step for the opposite of the bumper.

- (8) M8×20 Hex Bolt                      •(8) M8×16×1 Flat Washer
- (8) D8 Split Lock Washer            •(8) M8 Flange Lock Nut

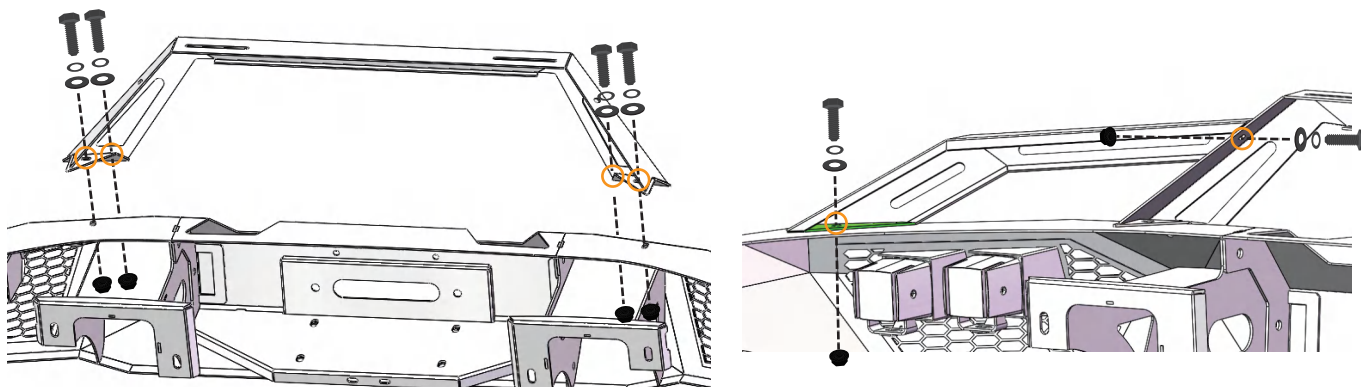**Step 4**


Secure the winch power control box bracket to the bumper and tighten the hardware.

- (2) M8×20 Hex Bolt                      •(2) M8×16×1 Flat Washer
- (2) D8 Split Lock Washer            •(2) M8 Flange Lock Nut

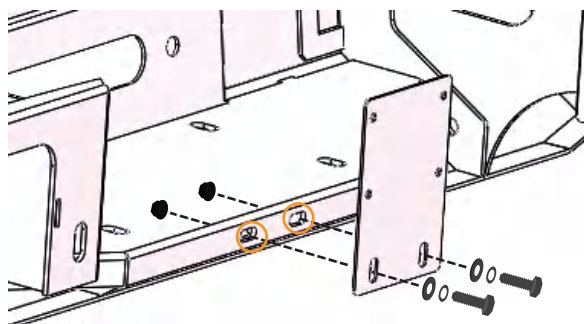**Step 5**

Secure the license plate bracket to the bumper and tighten the hardware.

- (2) M6×16 Bottom Bolt                •(2) M6 Nylon Lock Nut
- (2) M6×12×1 Flat Washer

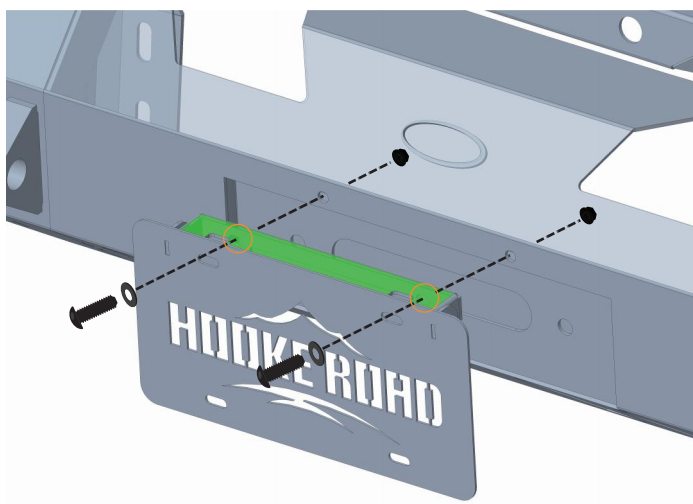


Secure the bumper to the vehicle frame.

Adjust the bumper to the desired position. Repeat this step on the other side of the vehicle.

**Finally, tighten all bolts.**

- (4) M12×35 Hex Bolt      •(8) M12×30×2 Flat Washer
- (4) D12 Split Lock Washer      •(4) M12 Hex Nut

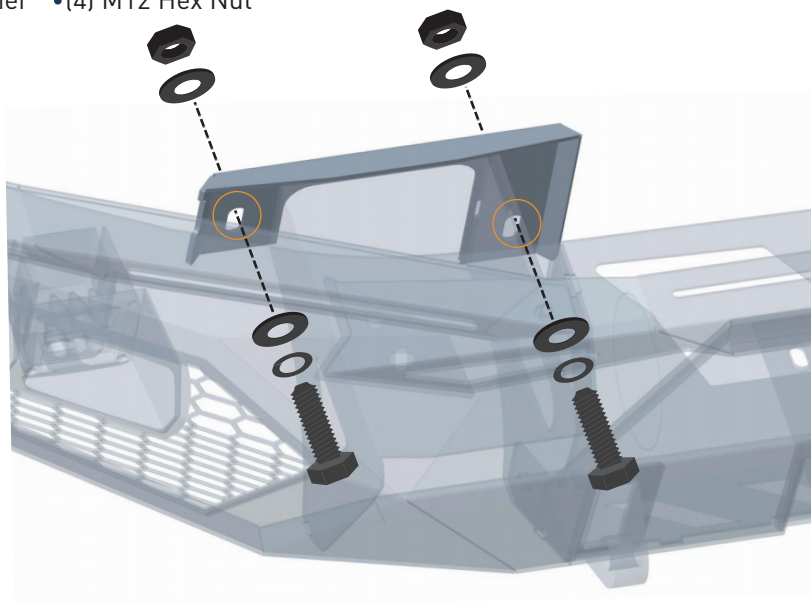

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

