

# Electric Windscreen Controller Supplementary Manual



## BMW R1300GS ABS TC 2023- (EWC-01)

Secure the bike on a stand.



Remove the windscreen.

Remove the plastic covers from the  
dashboard holder.

Locate the dashboard connector.



Cut the Purple wire about 2,5cm (1") of  
the connector.

Connect the EWA Green wire to the  
Purple wire end, which goes to the  
dashboard. Use a yellow butt connector.




# Electric Windscreen Controller Supplementary Manual



## BMW R1300GS ABS TC 2023- (EWC-01)

Connect the EWA Blue wire to the Purple wire end, which is at the wiring harness side. Use a yellow butt connector.

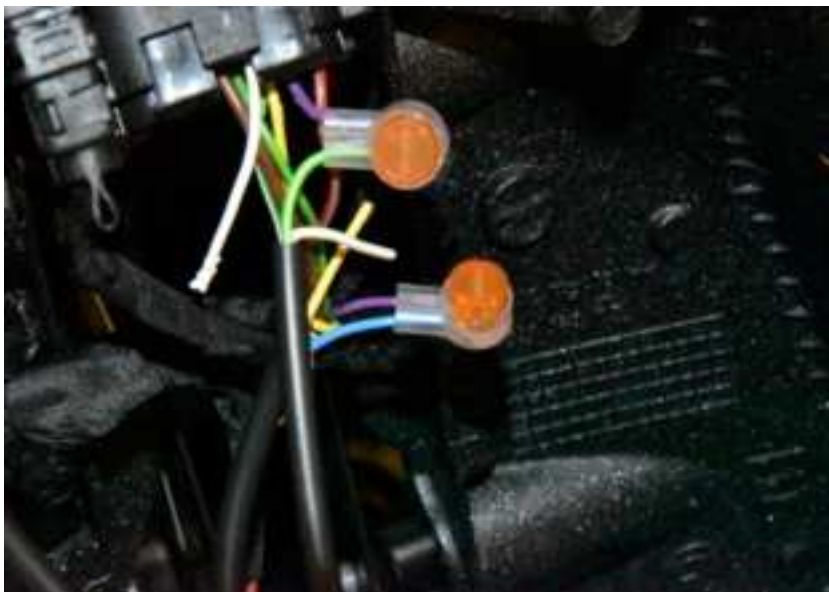

Cut the White wire about 2,5cm (1") of the connector.

Connect the EWA White wire to the White wire end, which goes to the dashboard. Use a yellow butt connector.



Connect the EWA Yellow wire to the White wire end, which is at the wiring harness side. Use a yellow butt connector.



# Electric Windscreen Controller Supplementary Manual



## BMW R1300GS ABS TC 2023- (EWC-01)

Plug the EWA connectors in-line with the USB connector.



Typical position for the Electric  
Windscreen Adjuster.

Secure the unit properly.

