


# ASSEMBLY INSTRUCTIONS SS16301

## Patio Sectional Sofa

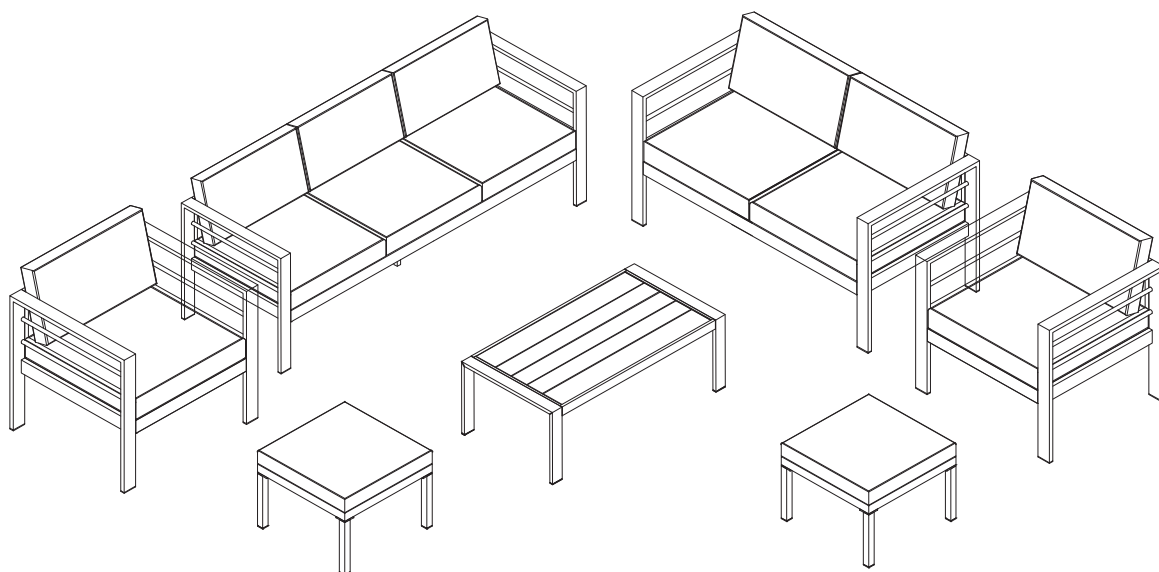








Thanks for choosing our product. Please kindly check parts listed below and read this manual carefully, then assemble them step by step. Please feel free to contact us for any questions.
















### Attention














- 1.We care about every customer's feeling, please feel free to contact us if you have any problem. We will help you to offer the best solution.
- 2.We recommend to use waterproof furniture cover for entire Patio Sectional Sofa which better helps you to protect your sofa set outside.
- 3.Please keep your children away when you assembly. This item contains small parts which can be swallowed by kids just in case.
- 4.THE SOFA SET COMES WITH 5 SEPARATE BOXES AND MAY ARRIVE AT DIFFERENT TIME, PLEASE BE PATIENT!

### Parts List A

<b>A</b> X1  Right Armrest	<b>B</b> X1  Left Armrest	<b>C1</b> X1  Seat Panel	<b>D1</b> X1  Backrest
<b>F</b> X2  Backrest Cushion	<b>G</b> X3  Seat Cushion	<b>J</b> X10  Washer <b>M</b> X10  Bolt M6×30mm	<b>H</b> X1  Allen Key














Parts List B			
<b>A</b> X1  Right Armrest	<b>B</b> X1  Left Armrest	<b>F</b> X3  Backrest Cushion	<b>G</b> X2  Seat Cushion
<b>E</b> X2  Table Foot	<b>I</b> X1  Table Panel	<b>J</b> X21  Washer	<b>K</b> X10  Bolt M6×18mm
<b>M</b> X11  Bolt M6×30mm	<b>N</b> X1  Allen Key		

Parts List C		
<b>C</b> X1  Seat Panel	<b>D</b> X1  Backrest	<b>E</b> X1  Middle Support Foot

2×Parts List D			
<b>A</b> X1  Right Armrest	<b>B</b> X1  Left Armrest	<b>C2</b> X1  Seat Panel	<b>D2</b> X1  Backrest
<b>F</b> X1  Backrest Cushion	<b>G</b> X1  Seat Cushion	<b>O</b> X1  Footrest Panel	<b>P</b> X4  Foot
<b>Q</b> X1  Footrest Cushion	<b>J</b> X18  Washer	<b>K</b> X8  Bolt M6×18mm <b>M</b> X10  Bolt M6×30mm	<b>N</b> X1  Allen Key



# Three person sofa

## Parts List

<b>A</b> X1  Right Armrest	<b>B</b> X1  Left Armrest	<b>C</b> X1  Seat Panel	<b>D</b> X1  Backrest
<b>E</b> X1  Middle Support foot	<b>F</b> X3  Backrest Cushion	<b>G</b> X3  Seat Cushion	<b>H</b> X2  Table Foot
<b>I</b> X1  Table Panel	<b>J</b> X21  Washer	<b>K</b> X10  Bolt M6×18mm <b>M</b> X11  Bolt M6×30mm	<b>N</b> X1  Allen Key


## Assembly Instruction SS16301

### STEP1

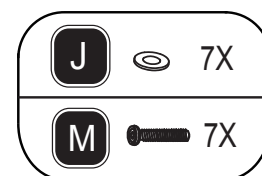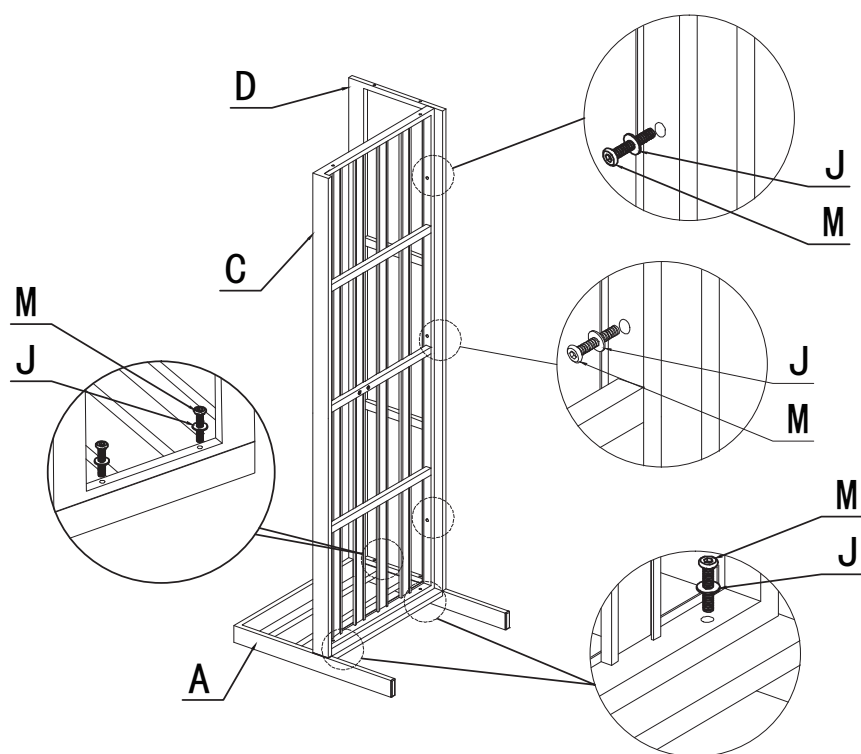


**Tip:** Please insert each washer into each bolt first, then insert bolt with washer into frame.

## STEP2

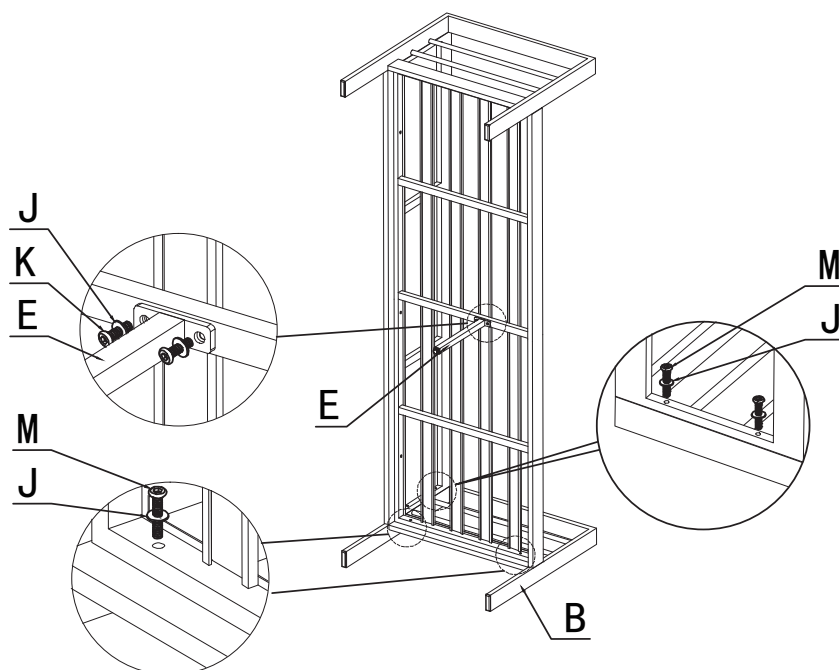


J		6X
K		2X
M		4X

## STEP3

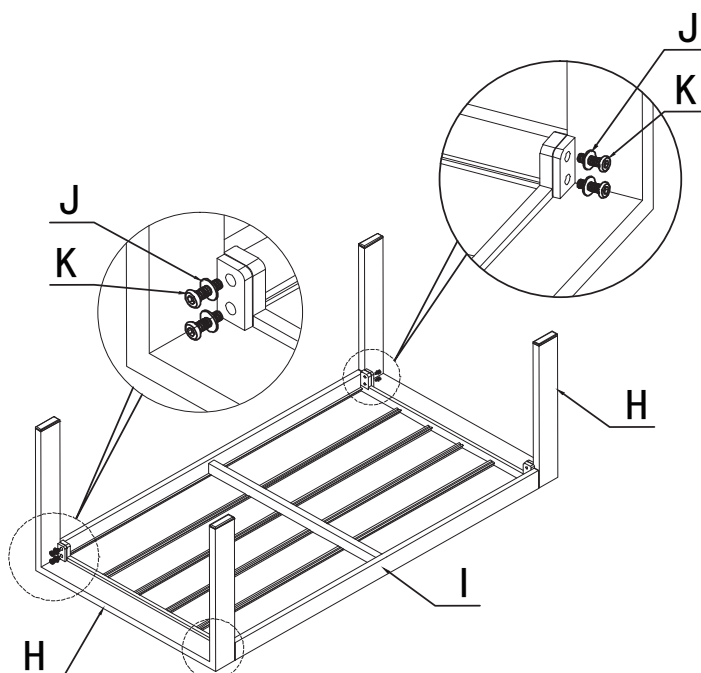









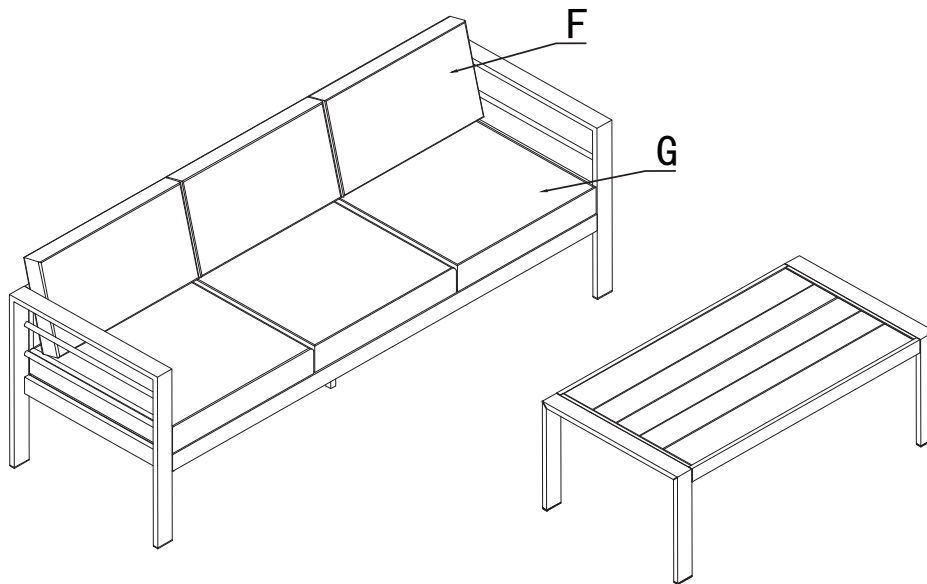
J		8X
K		8X

## STEP4





## Two person Sofa



### Parts List

<b>A</b> X1  Right Armrest	<b>B</b> X1  Left Armrest	<b>C1</b> X1  Seat Panel	<b>D1</b> X1  Backrest
<b>F</b> X2  Backrest Cushion	<b>G</b> X2  Seat Cushion	<b>J</b> X10  Washer <b>M</b> X10  Bolt M6×30mm	<b>H</b> X1  Allen Key


## STEP1

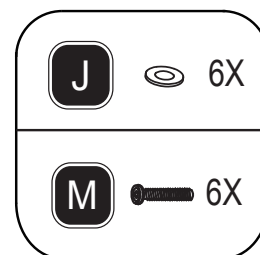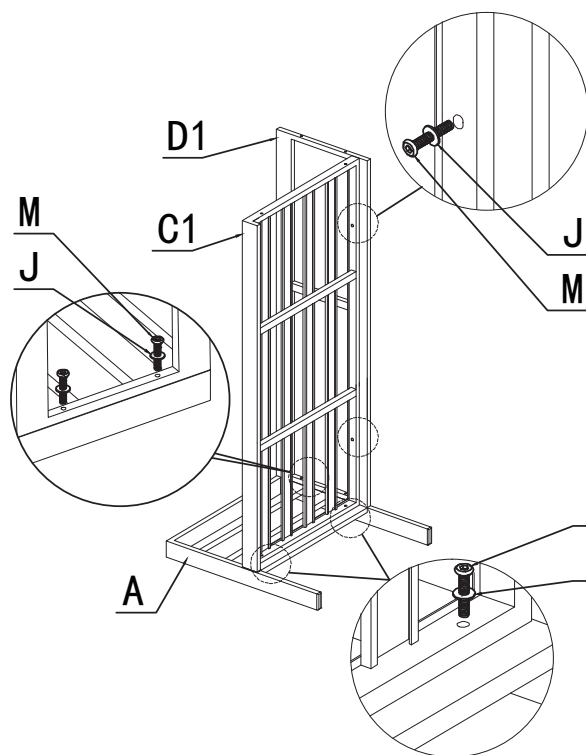

## STEP2

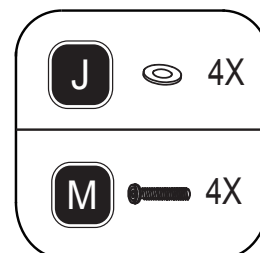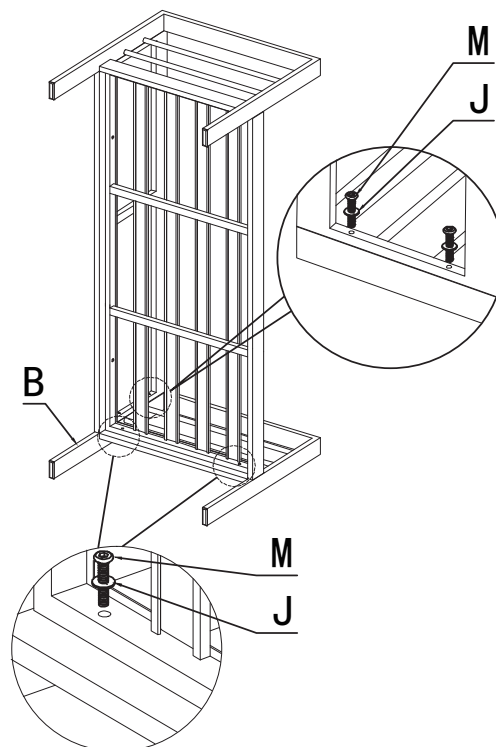












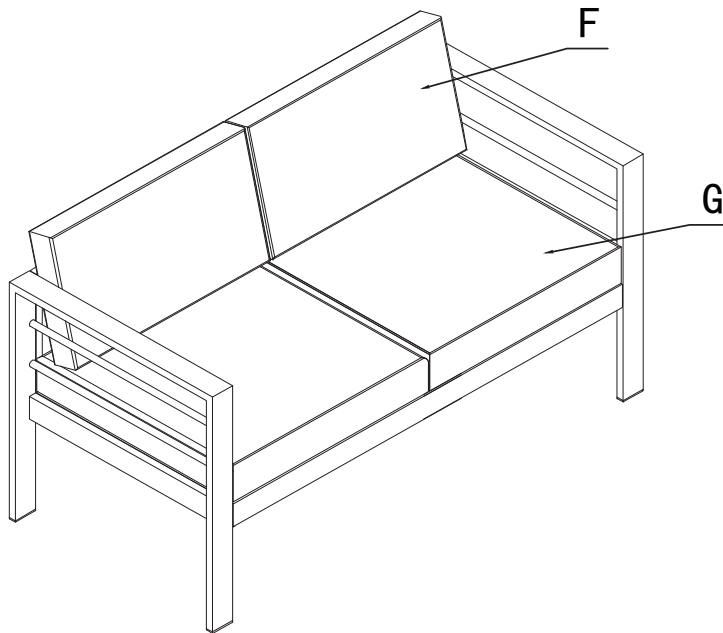

## STEP3




## Single Sofa

### Parts List

<b>A</b> X1  Right Armrest	<b>B</b> X1  Left Armrest	<b>C2</b> X1  Seat Panel	<b>D2</b> X1  Backrest
<b>F</b> X1  Backrest Cushion	<b>G</b> X1  Seat Cushion	<b>O</b> X1  Footrest Panel	<b>P</b> X4  Foot
<b>Q</b> X1  Footrest Cushion	<b>J</b> X18  Washer	<b>K</b> X8  Bolt M6×18mm <b>M</b> X10  Bolt M6×30mm	<b>N</b> X1  Allen Key


## STEP1

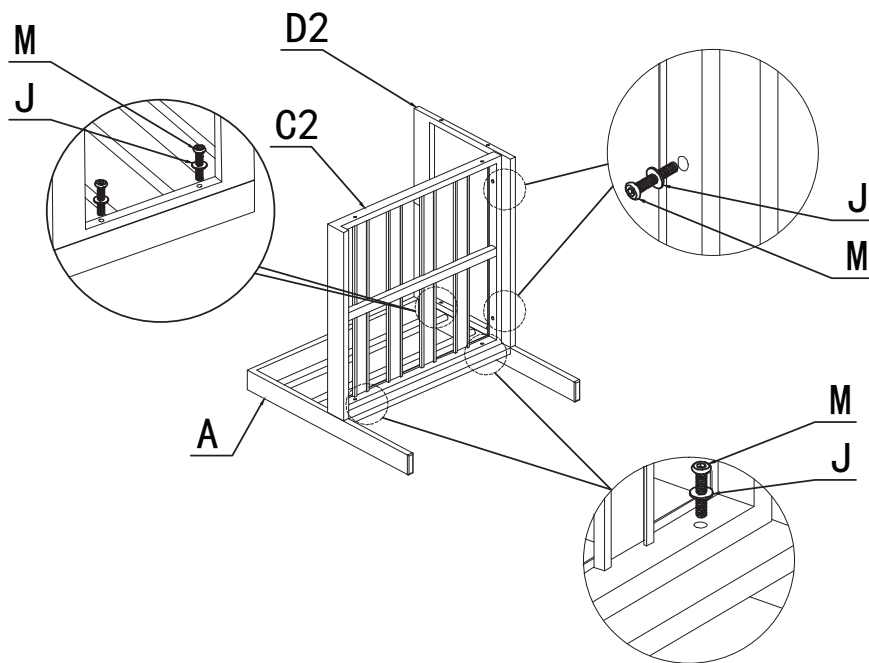

J 6X

M 6X

## STEP2


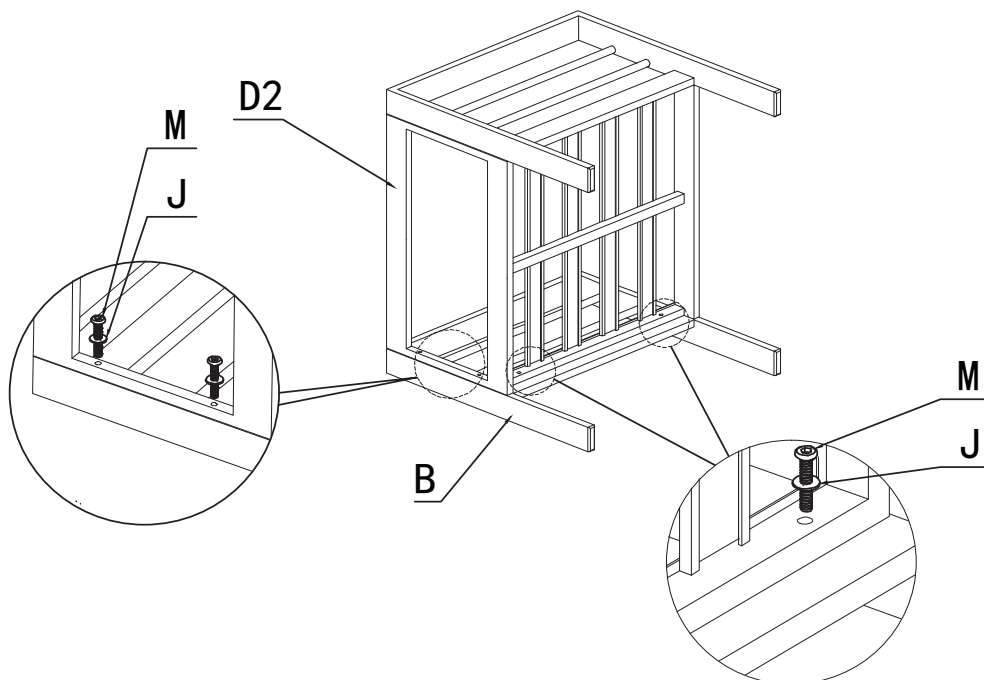


J 4X

M 4X



## STEP3

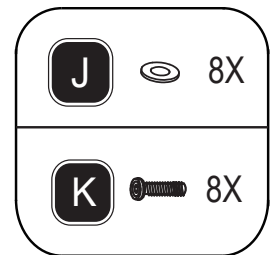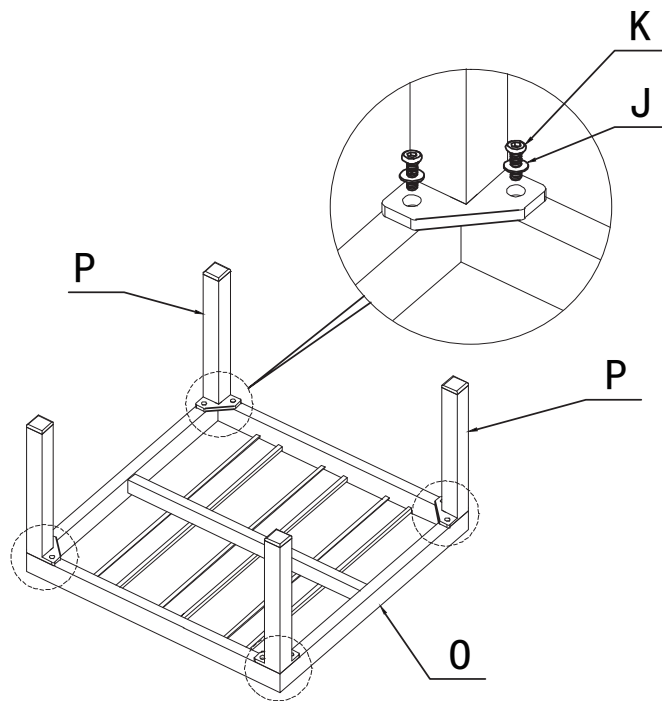

## STEP4

**Tip:** Please attach the strap together to fix the seat cushion.

