



MAKE A DIFFERENCE

Rear Bumper

BXG.9530

(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
• Please feel free to contact your distributor if you have any kind of question about your purchase.

1 CONTENTS

Left

Right

**B1****B2****A****C1****C2**

A: Main Body

B1&B2: Trailer Plug Brackets

C1&C2: Mounting Brackets

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
6	Hex Bolt	M12*35		10	Split Lock Washer	D12	
4	Hex Bolt	M12*30		20	Flat Washer	M12*25*2	
3	Button Bolt	M6*16		10	Hex Nut	M12	
8	Button Bolt	M4*20		3	Nylon Lock Nuts	M6	

2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 10mm, 19mm Wrench

◆ 4mm Hex Bit Socket

◆ 19mm Shallow Socket

To view online instruction, please
scan the QR code.



3 INSTALLATION INSTRUCTION

Remove the factory bumper.



Step 1

Remove and install the factory sensors.


- (4) Sensors
- (8) M4x20 Button Bolts




Step 2

Install the trailer plug bracket to the bumper. Choose the correct bracket for the 7 way trailer plug. Attach bracket to 7-way connector.

- (3) M6x16 Button Bolts
- (3) M6 Nylon Lock Nuts

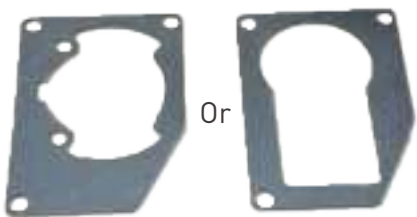


Or

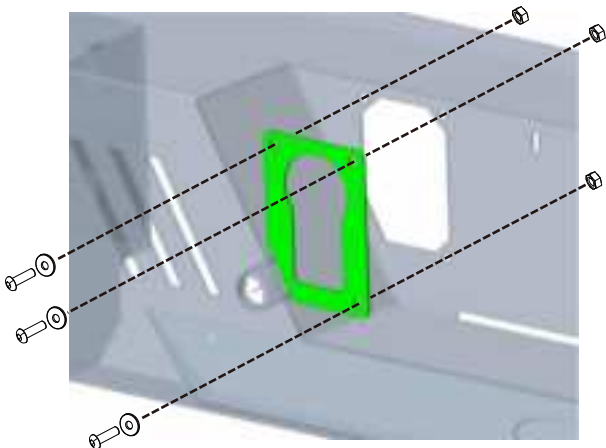

Step 3

(Driver Side) Install the mounting brackets. Repeat this step for the opposite of the vehicle. **Do not fully tighten hardware to allow adjustability.**


- (1) Left Mounting Bracket C1
- (1) Right Mounting Bracket C2
- (6) M12x35 Hex Bolts
- (6) D12 Lock Washers
- (12) M12x25x2 Flat Washers
- (6) M12 Hex Nuts

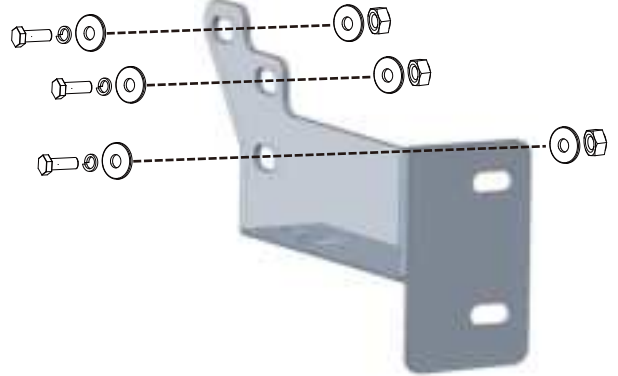

Step 4

(Driver Side) Secure the bumper. Repeat this step for the opposite of the bumper. Tighten all hardware.

- (1) Rear Bumper
- (4) M12x30 Hex Bolts
- (4) D12 Lock Washers
- (8) M12x25x2 Flat Washers
- (4) M12 Hex Nuts

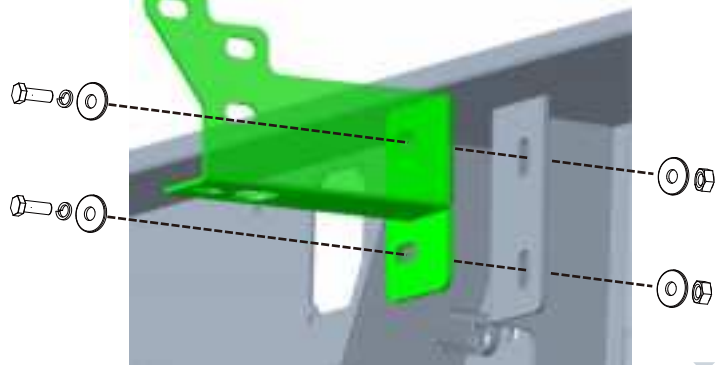

Step 5

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

Step 6

