

Install Steps:

1. Open the folder

名称	修改日期	类型	大小
CutterProCdr	2018/3/30 16:50	文件夹	
GMS	2018/4/7 13:46	文件夹	
CDR插件使用手册.doc	2016/6/29 17:05	Microsoft Word ...	419 KB
CoreDraw Plugin _manual.doc	2016/6/29 17:04	Microsoft Word ...	486 KB
L3_X4.xslt	2018/4/7 13:45	XSLT 文件	21 KB
mfc100.dll	2010/3/18 9:15	应用程序扩展	4,241 KB
msvcp100.dll	2010/3/18 9:15	应用程序扩展	412 KB
msvcr100.dll	2010/3/18 9:15	应用程序扩展	753 KB
Setup.exe	2016/7/9 16:42	应用程序	31 KB

2. Very important:A: Copy the CutterproCdr folder into your computer C disc.

CutterProCdr	2018-03-30 16:50	文件夹	
GMS	2018-04-07 13:46	文件夹	
CDR插件使用手册.doc	2018-04-09 13:38	Microsoft Word ...	314 KB
CoreDraw Plugin _manual.doc	2018-04-09 13:42	Microsoft Word ...	318 KB
L3_X4.xslt	2018-04-07 13:45	XSLT 文件	21 KB
mfc100.dll	2010-03-18 9:15	应用程序扩展	4,241 KB
msvcp100.dll	2010-03-18 9:15	应用程序扩展	412 KB
msvcr100.dll	2010-03-18 9:15	应用程序扩展	753 KB
Setup.exe	2016-07-09 16:42	应用程序	31 KB

这台电脑 > 本地磁盘 (C:)			
名称	修改日期	类型	大小
Config.Msi	2017-07-17 9:52	文件夹	
CutterProCdr	2017-07-20 16:27	文件夹	
dlcache	2017-01-11 11:34	文件夹	
Program Files	2017-06-28 15:32	文件夹	
Windows	2017-08-02 9:43	文件夹	
用户	2016-04-21 9:54	文件夹	


B: Copy the 5 files inGMS folder in plugin to your Co

reldraw software GMS folder.


ThAddBoundaryLine.gms	2018-01-03 18:57	GMS 文件	23 KB
ThAddFourLMark2.gms	2018-04-08 18:57	GMS 文件	30 KB
ThDeleteMark.gms	2018-01-03 18:58	GMS 文件	19 KB
ThOutput.gms	2018-02-27 10:12	GMS 文件	29 KB
ThOutputOutline.gms	2018-03-09 16:37	GMS 文件	29 KB


这台电脑 > 本地磁盘 (C:) > Program Files > CorelDRAW X4 SP2 > Draw > GMS				
名称	修改日期	类型	大小	
SDFncs	2016-04-27 10:58	文件夹		
AIClipBrd.gms	2009-07-22 18:43	GMS 文件	86 KB	
CalendarWizard.gms	2006-06-21 14:36	GMS 文件	423 KB	
ColorReplacer.gms	2008-06-18 10:43	GMS 文件	104 KB	
ConverTo.gms	2008-08-01 16:08	GMS 文件	21 KB	
CorelVbacn_cachet印章.gms	2009-01-19 8:25	GMS 文件	100 KB	
Emboss.gms	2006-02-17 0:12	GMS 文件	54 KB	
FileConverter.gms	2005-03-07 13:03	GMS 文件	251 KB	
FileConverteren.gms	2005-03-07 13:03	GMS 文件	251 KB	
FitObjects.gms	2008-06-18 10:42	GMS 文件	60 KB	
Node.gms	2008-10-04 17:18	GMS 文件	51 KB	
RectangleFixer.gms	2008-06-18 10:41	GMS 文件	27 KB	
SecuriDesign.gif	2007-11-16 23:41	GIF 文件	19 KB	
SecuriDesign.gms	2008-06-18 10:41	GMS 文件	330 KB	
ThAddAutoMark.gms	2016-07-09 16:30	GMS 文件	32 KB	
ThAddHandMark.gms	2016-07-09 16:35	GMS 文件	19 KB	
ThDeleteMark.gms	2016-07-09 16:30	GMS 文件	15 KB	
ThOutput.gms	2016-07-11 9:19	GMS 文件	18 KB	
ThOutputOutline.gms	2016-07-11 9:19	GMS 文件	19 KB	
ToJPG.gms	2008-08-20 16:57	GMS 文件	37 KB	
版本转换器.gms	2009-05-15 17:44	GMS 文件	50 KB	
书脊计算.gms	2009-07-22 18:44	GMS 文件	28 KB	


3. Open the CorelDRAW , click “tools—>>customization...”

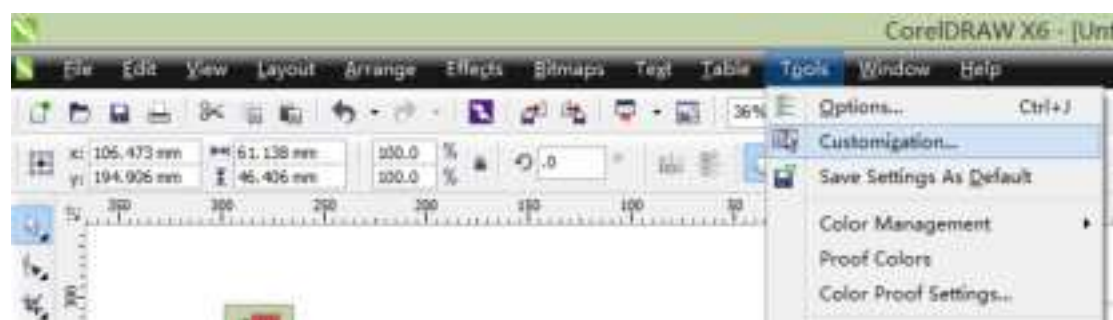


Show dialog

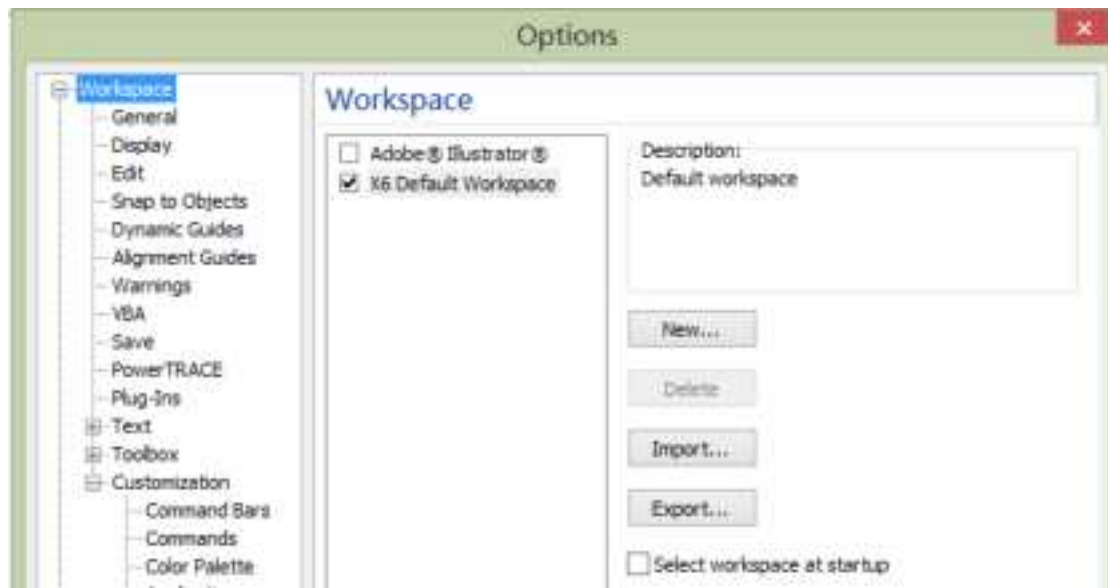


Click select “workspace” , click button  , show dialog

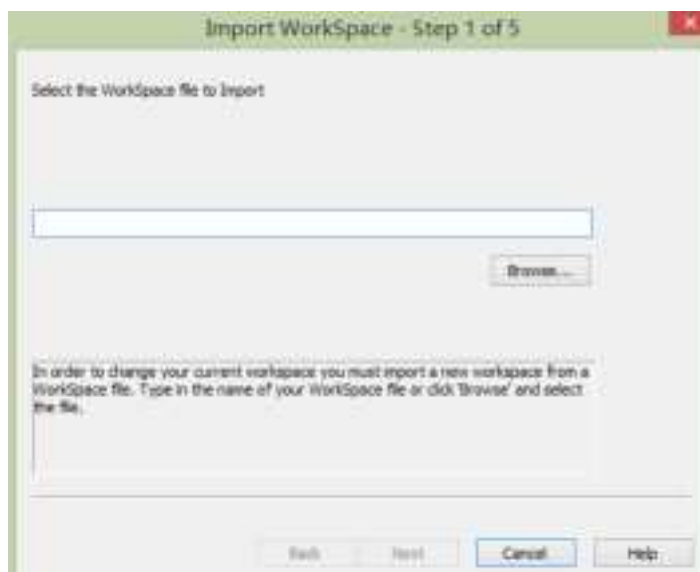


, click button
“Browse...”

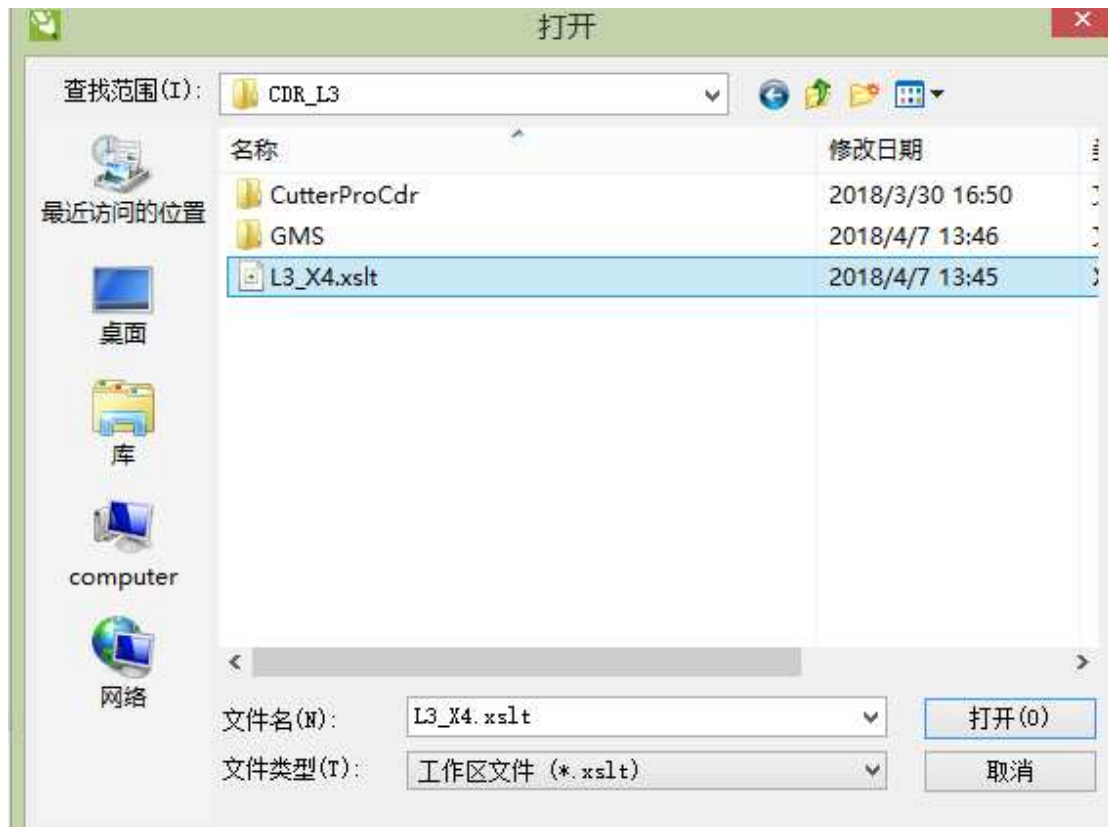


X3, X4, X5, X6 Select file “L3_X4.xslt” ,

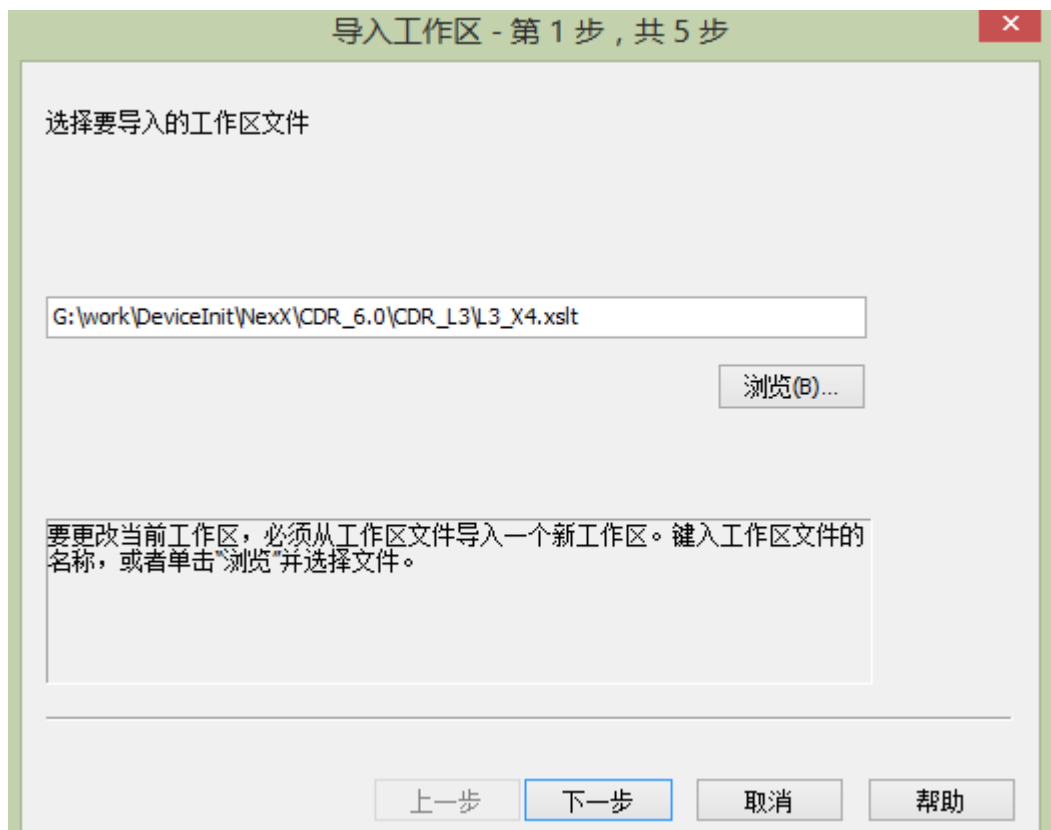


Click “next”

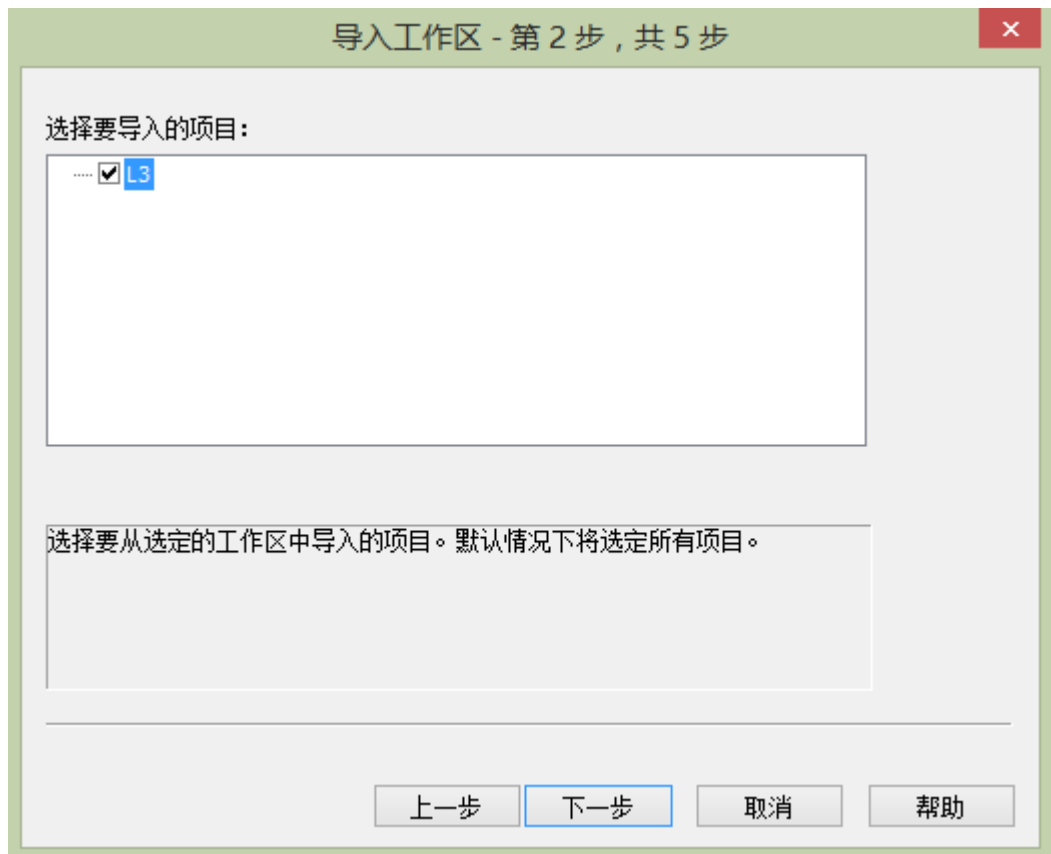


Click "next"

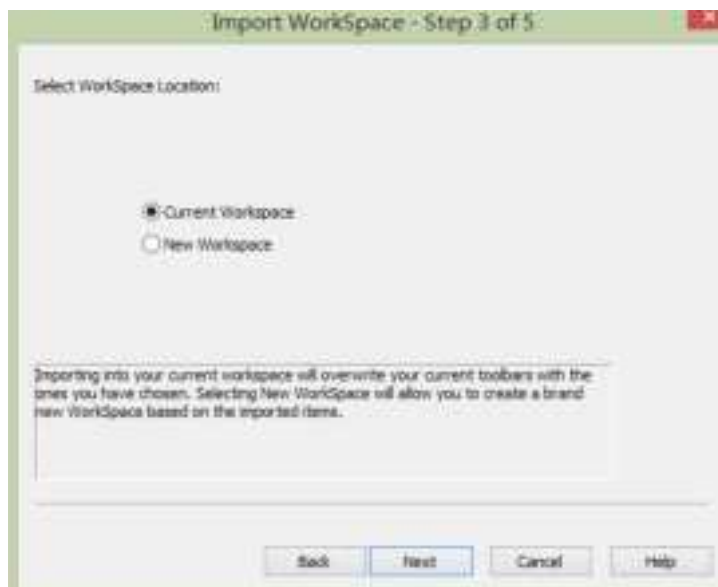

Click "next"

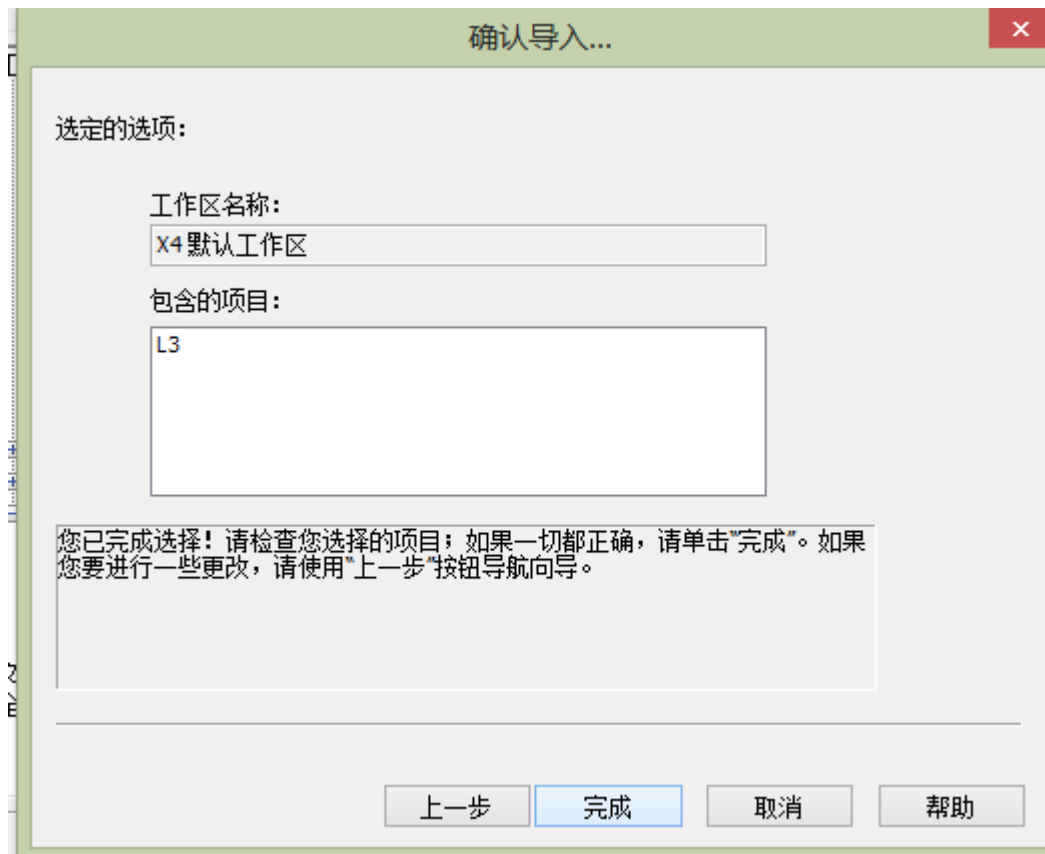


Click “finish”

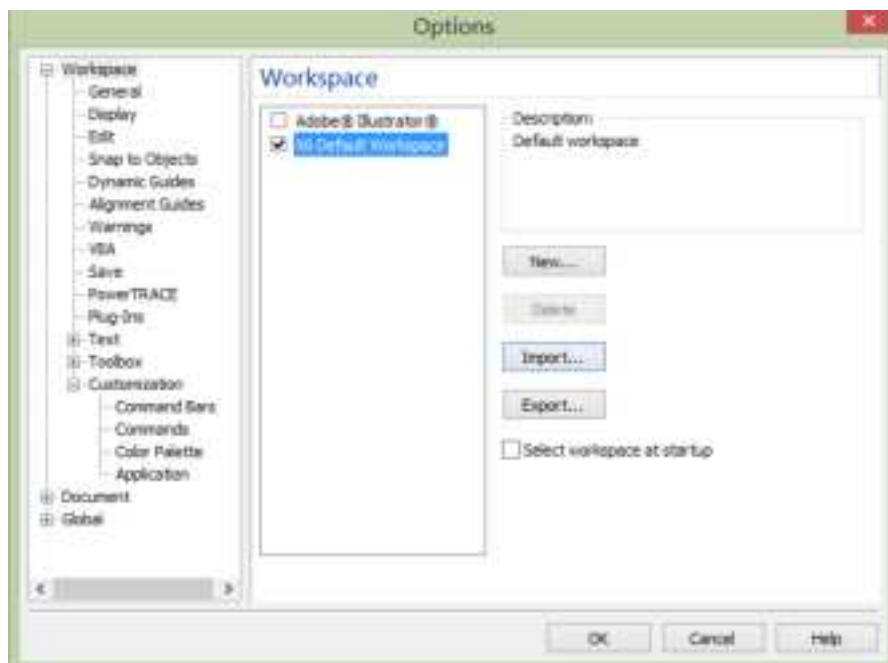


Click “ok”,

If Install Ok, you can see the new tool bar

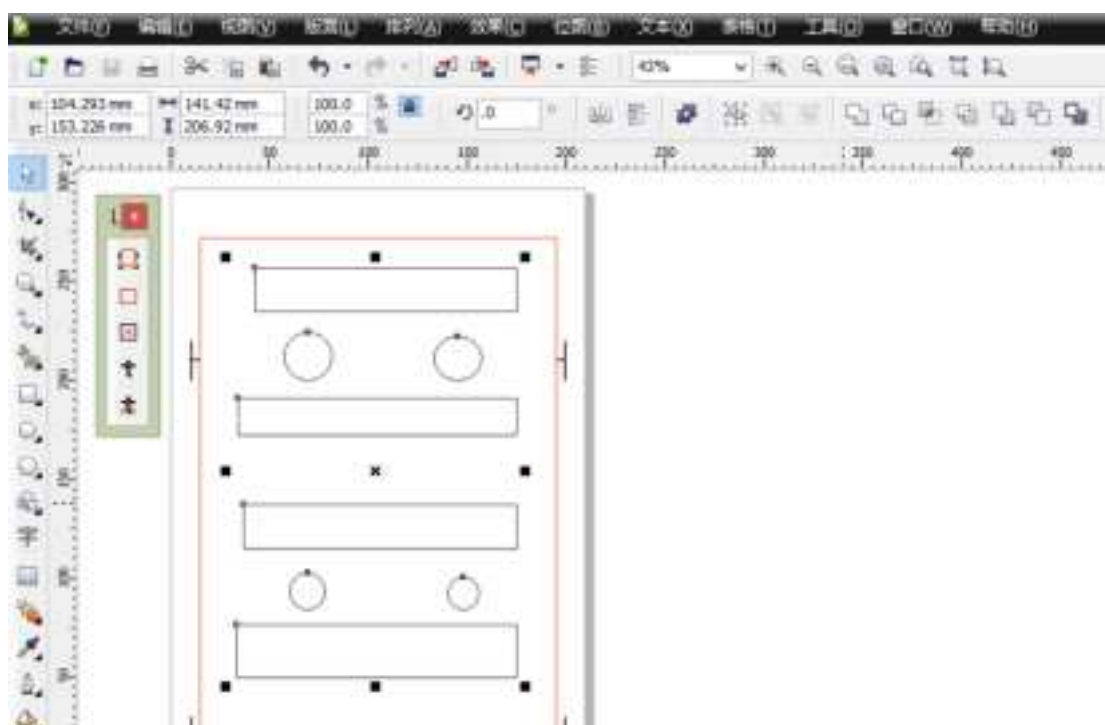

NOTICE : Install finished, if the new tool bar no display ,click mouse right button at tool bar blank , show dialog

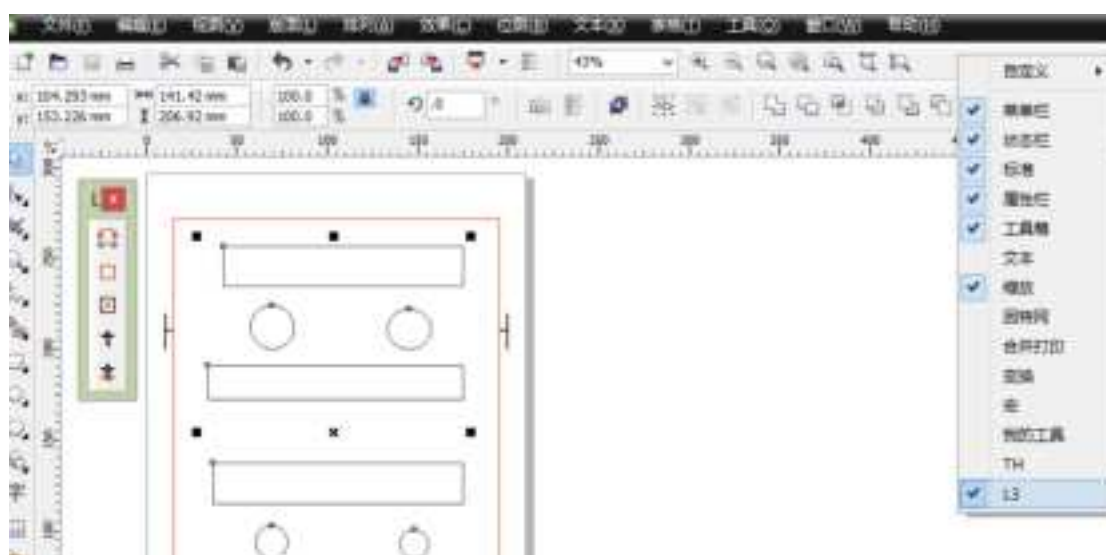

select “L3” tool。