
## Kalado






## **Vacuum Installation**

- Insert the extension rod into the handeld part until you hear a "click".
- Insert the floor brush to the head of the extension rod until you hear a "click".

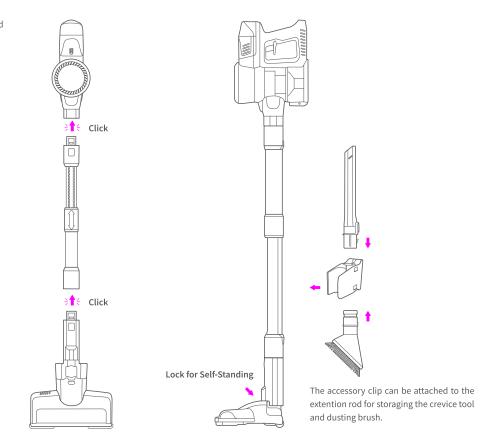

## **Accessories Installation**

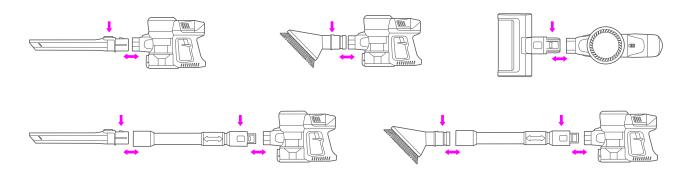

## Power On

