ASSEMBLY INSTRUCTION



3*Cross Bars

1* Grab Bar

1* Grab Bar

2* Grab Bar Connections

- **8*M7*13mm**
- 8*M6*49mm
- 4*Non-slip Pads
- 1*Open-end Wrench
 - 2* Sizes Hex Wrench



INSTALL THE OTHERS TWO CROSS BARS.

- Handrail holders must face outwards.
- Use two M7*13mm screws and hex wrench.
- The cross bars should be level.

Tip: If you find support brackets not level, please adjust the cross bars.




INSTALL THE UPPER WO-ODEN PANEL

- The panel with logo "YEEZOO" is the upper panel, logo outwards.
- Four countersinks and wood surface texture face upwards.
- Use four M6*49mm screws and hex wrench to fix the panel.



INSTALL THE FIRST WOODEN PANEL

- Four countersinks and wood surfa -ce texture face upwards.
- Use four M6*49mm screws and he
 -x wrench to fix the panel.
- Check and tighten all screws.

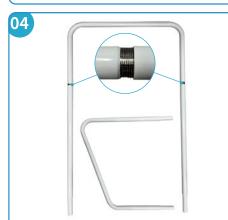

PREPARE TWO GRAB BARS

- The higher one: bar connection and grab bar are screw thread connected.
- The shorter one: No need to assemble.



INSTALL HANDRAILS AND FIX THEM

- Insert the handails into the handrail holders.
- Use four M7*13mm screws and hex wrench to fix from it's bottom.
- The two grab bars do not distinguish between left and right handrail hold -ers.



INSTALL THE FOUR NON-SLIP PADS

- Warm Tip1: Please double check to make sure all screws have been tigh -tened before stepping on.
- Warm Tip2: Please don't shake th -e handrail or jump on the steps to avoid dangers.