



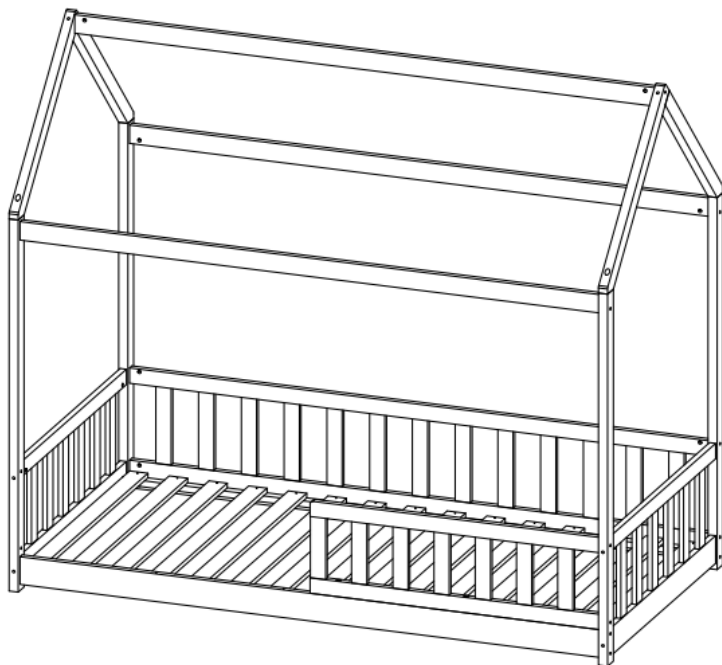

Luther Kids' House Bed Frame

SLTHRKBDNA

Components

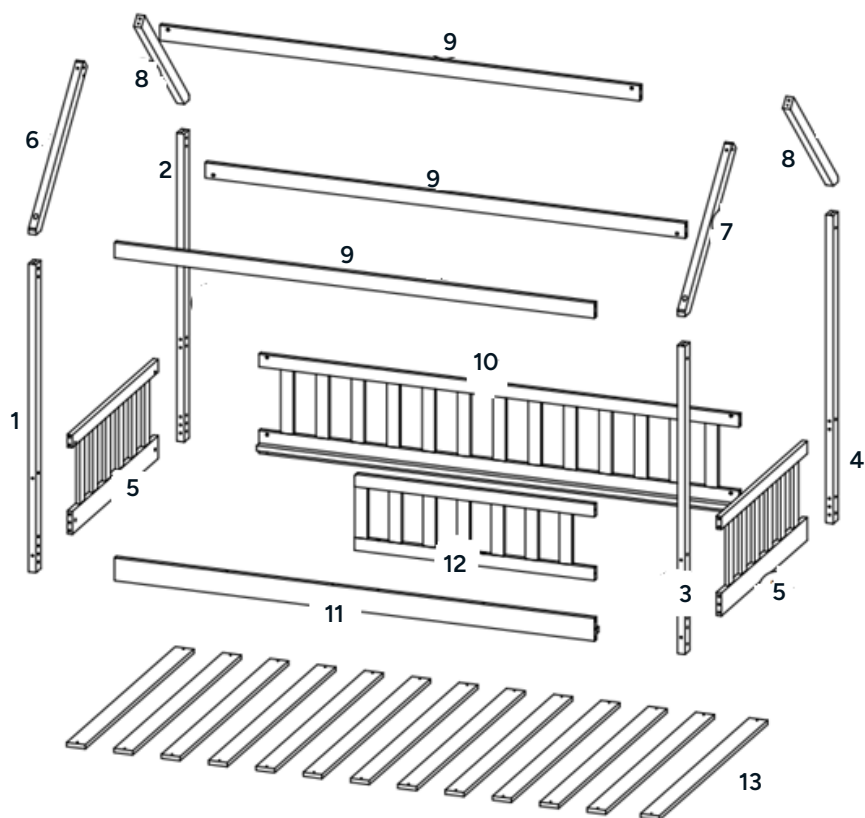

- | | | | |
|---|---------------------|----|-----------------|
| 1 | Front Left Upright | 8 | Rear Roof (x2) |
| 2 | Rear Left Upright | 9 | Roof Slats (x3) |
| 3 | Front Right Upright | 10 | Rear Rail |
| 4 | Rear Right Upright | 11 | Lower panel |
| 5 | End Board (x2) | 12 | Front Rail |
| 6 | Front Left Roof | 13 | Bed Slats (x13) |
| 7 | Front Right Roof | | |



A M6x90 Screw (x8)



B Cam Connector
(x24)




C M6x70 Screw (x16)



D Dowels (x30)




E Ø6x90 Screw (x6)



F Ø6x80 Screw (x4)




G Allen Key




H Ø4x30 Screw (x26)

Tools Required



Phillips Head Screwdriver





Flat Blade Screwdriver



Hammer


Assembly

1. Attach Dowels (D) to the following parts: (9, 10, 11 & 5) in the positions shown below.

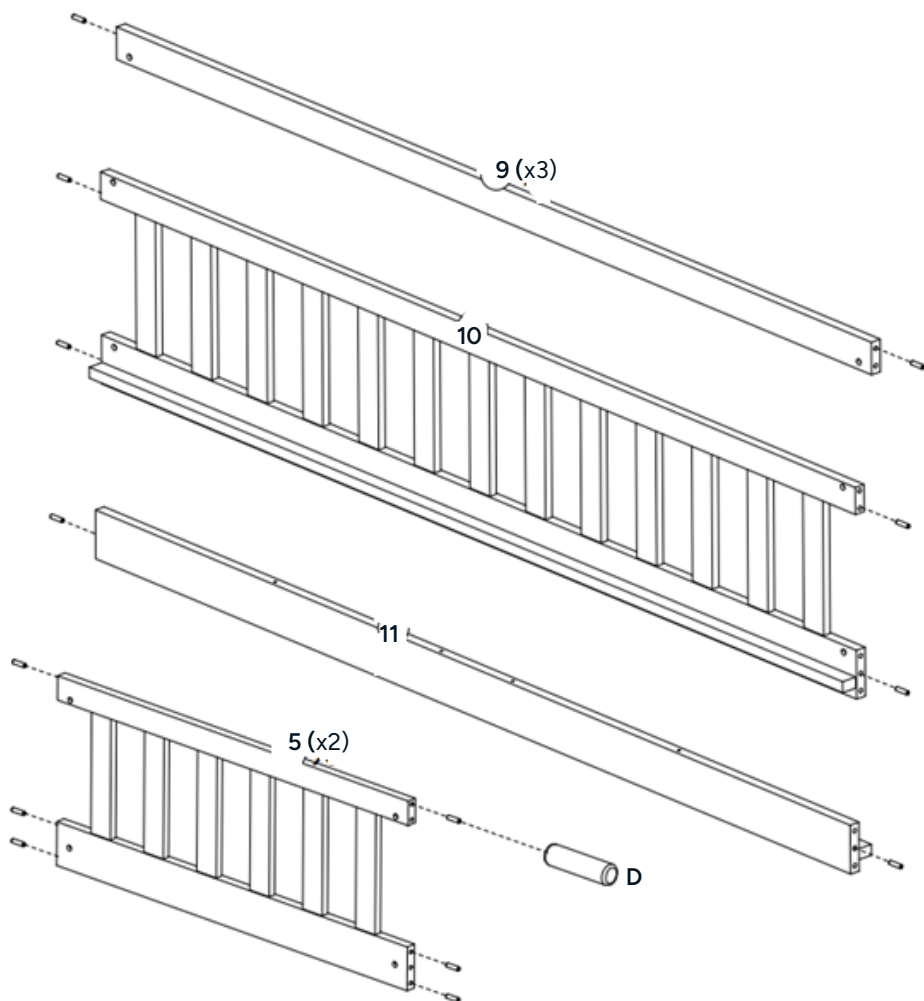


2. Attach the Front Left Upright **(1)** and Rear Left Upright **(2)** to one of the End Boards **(5)** using x4 M6x90 Screws **(A)** and x4 Cam Connectors **(B)**.

	
A M6x90 Screw (x4)	B Cam Connector (x4)

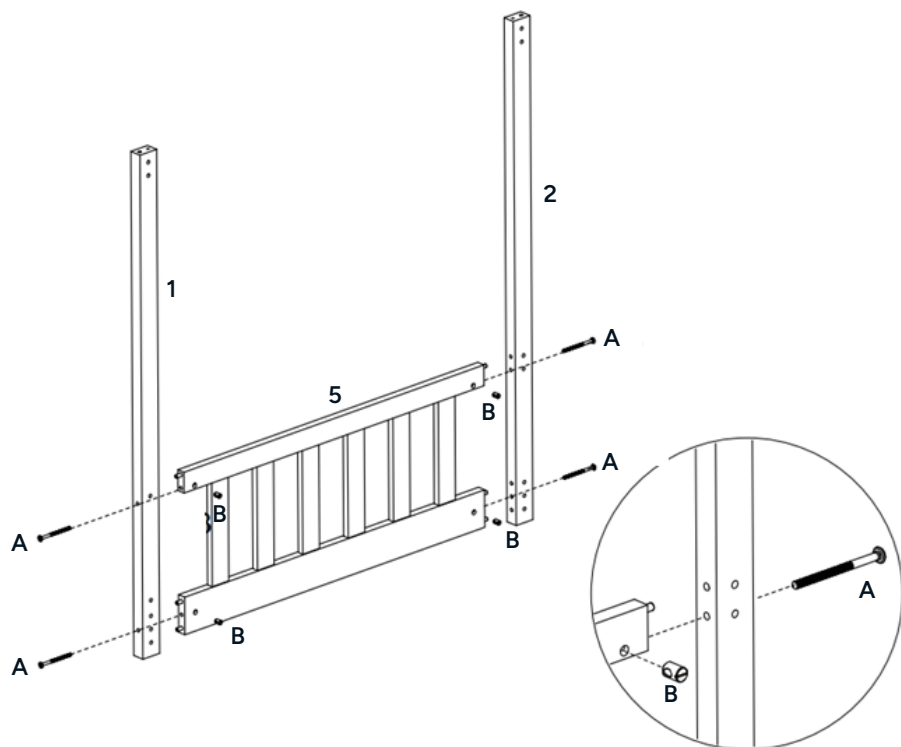


3. Attach the Front Right Upright (3) and Rear Right Upright (4) to one of the End Boards (5) using x4 M6x90 Screws (A) and x4 Cam Connectors (B).

	
A M6x90 Screw (x4)	B Cam Connector (x4)

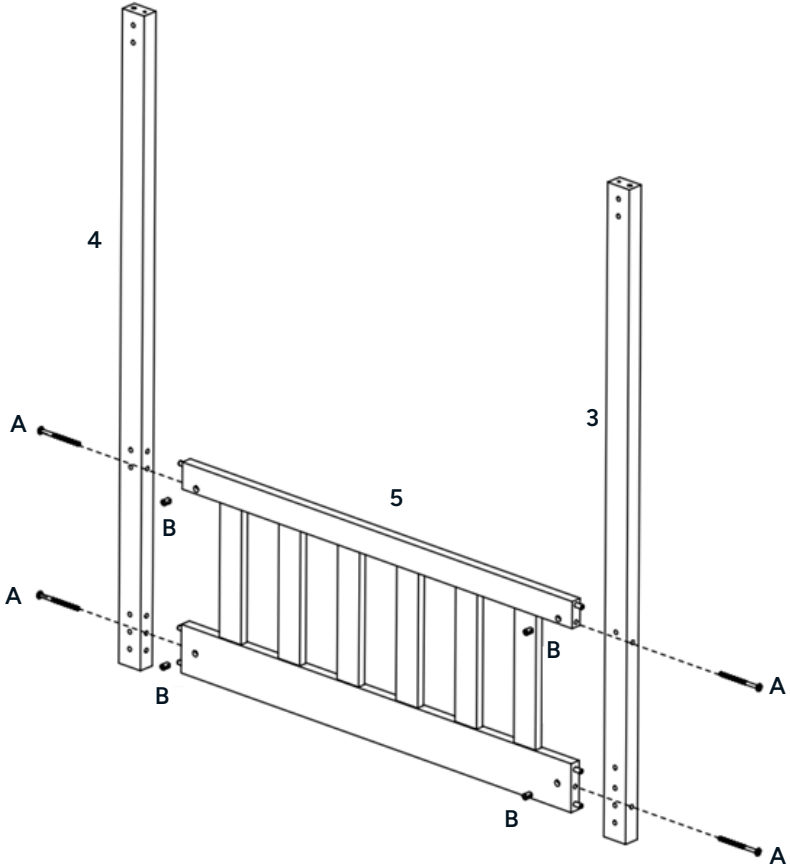


4. Attach the 2 upright assemblies to the Lower Panel (**11**) and Rear Rail (**10**) using x10 M6x70 Screws (**C**) and x10 Cam Connectors (**B**).

	
C M6x70 Screw (x10)	B Cam Connector (x10)

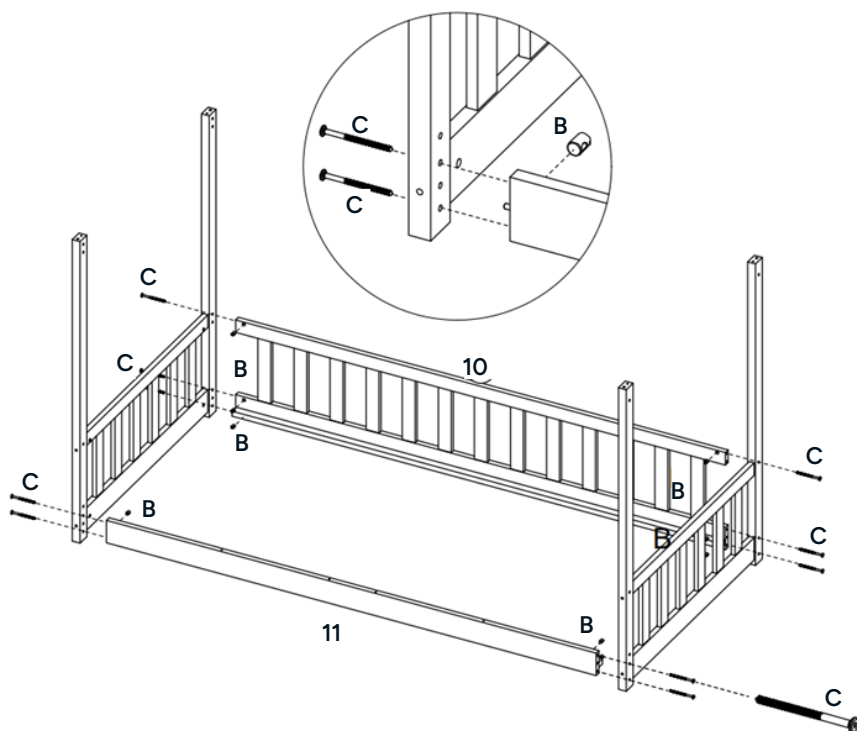


5. Attach the Front Left Roof (6) to one the Rear Roof (8) using a Dowel (D) and Ø6x90 Screw (E).
6. Attach the Front Right Roof (7) to one the Rear Roof (8) using a Dowel (D) and Ø6x90 Screw (E).

	
E Ø6x90 Screw (x2)	D Dowel (x2)

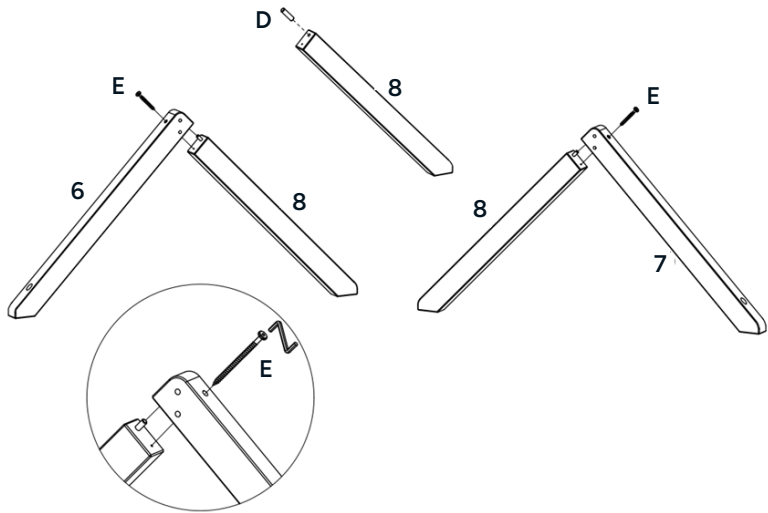


7. Attach the x2 roof assemblies to the bed frame using x4 Dowels (**D**) and x4 Ø6x90 Screws (**E**).

	
E Ø6x90 Screw (x4)	D Dowel (x4)


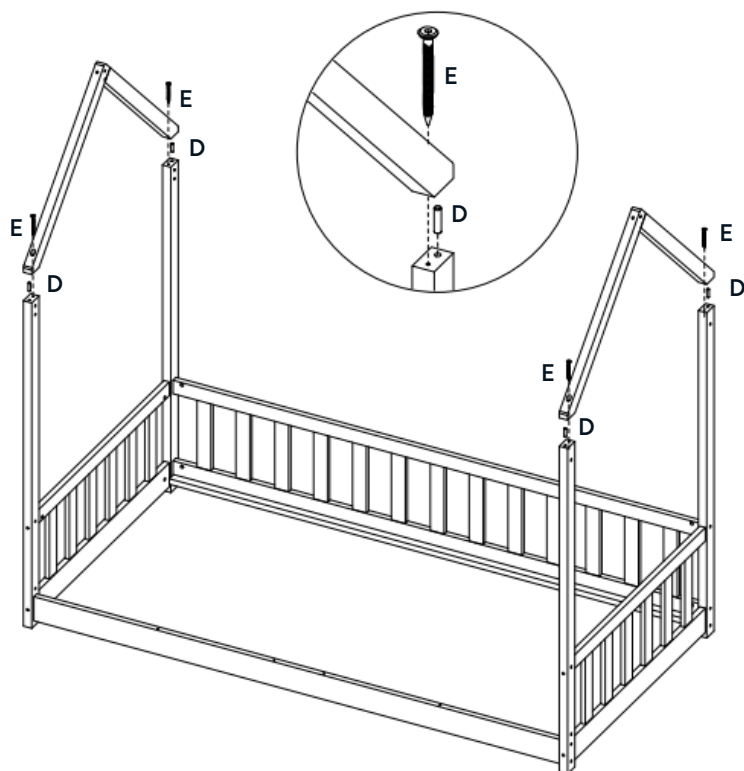


8. Attach the x3 Roof Slats (9) to the bed frame using x6 M6x70 Screws (C) and x10 Cam Connectors (B).


	
C M6x70 Screw (x6)	B Cam Connector (x6)

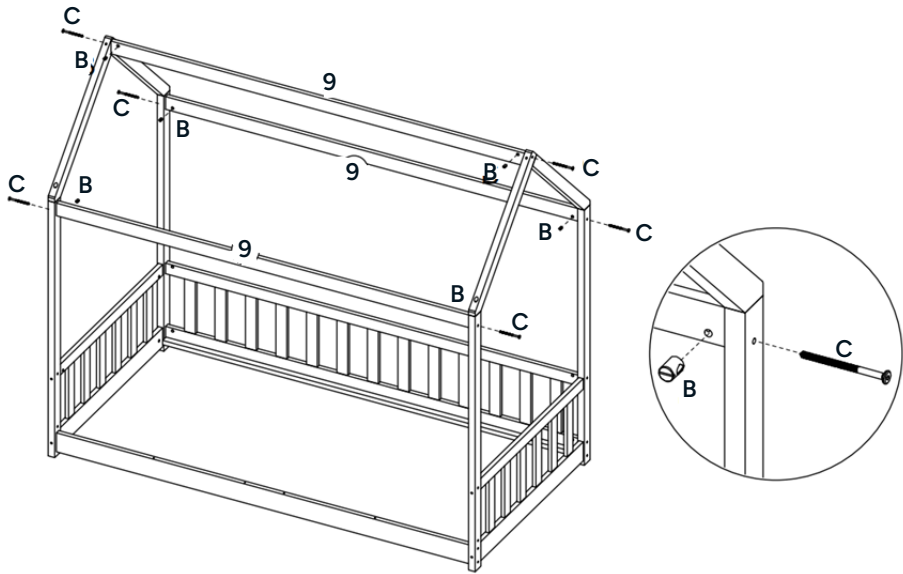



9. Attach the Front Rail (12) to the bed frame using x4 Ø6x80 Screws (F).

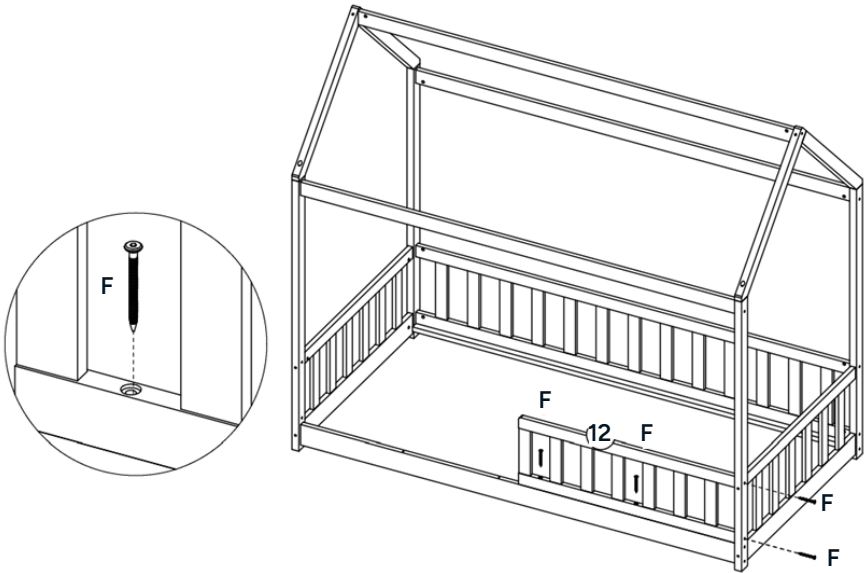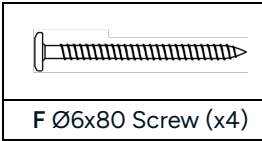

10. Attach the x13 Bed Slats to the bed frame using x26 Ø4x30 Screws (**H**).



H Ø4x30 Screws (x26)

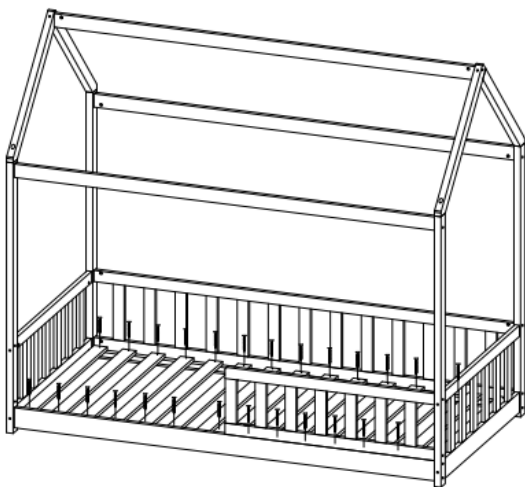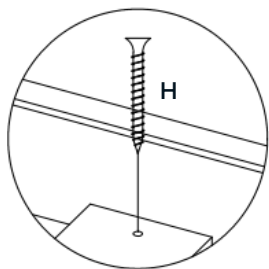

[illegible]



Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.Kogan.com**.

