




Assembly Instructions

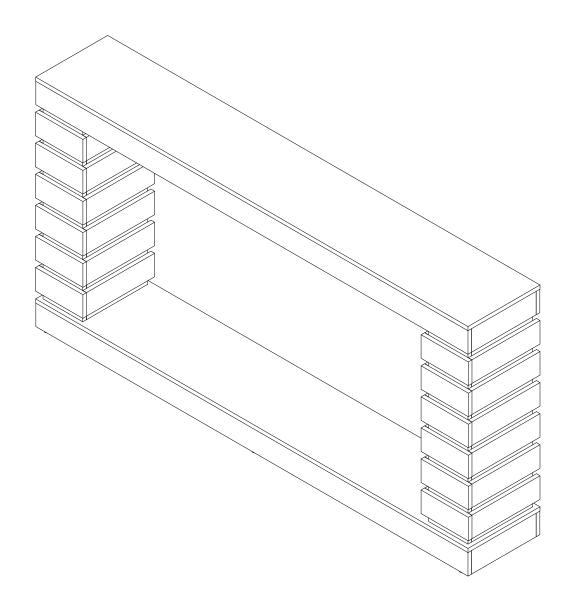

Model No. HOGA-F2000

Console Table

Call us! We're here to help!

If you have any issues with this product, please contact our customer service team **before returning** it.



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us at support@tribesigns.com or call us at **1-424-220-6888.** We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

Assembly Instructions:

- 1. Carefully read these instructions and keep them for future reference.
- 2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us FIRSTLY BEFORE assembling.
- 3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
- 4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.

Follow Tribesign:













www.tribesigns.com Tribesigns

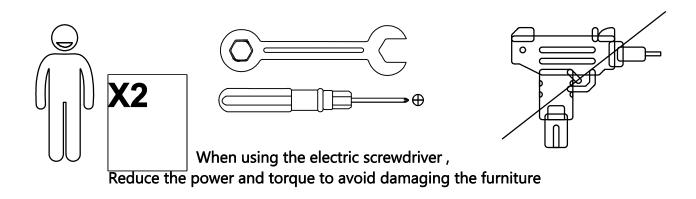

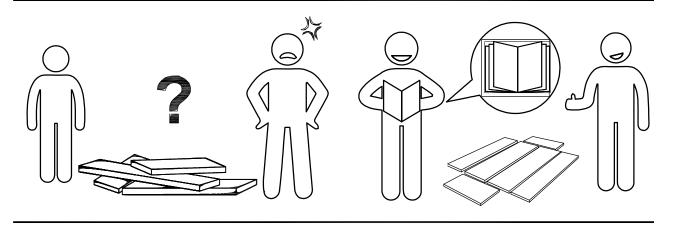

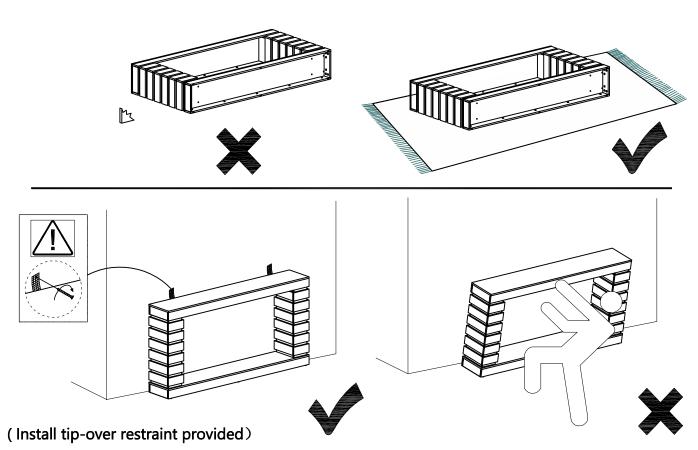


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

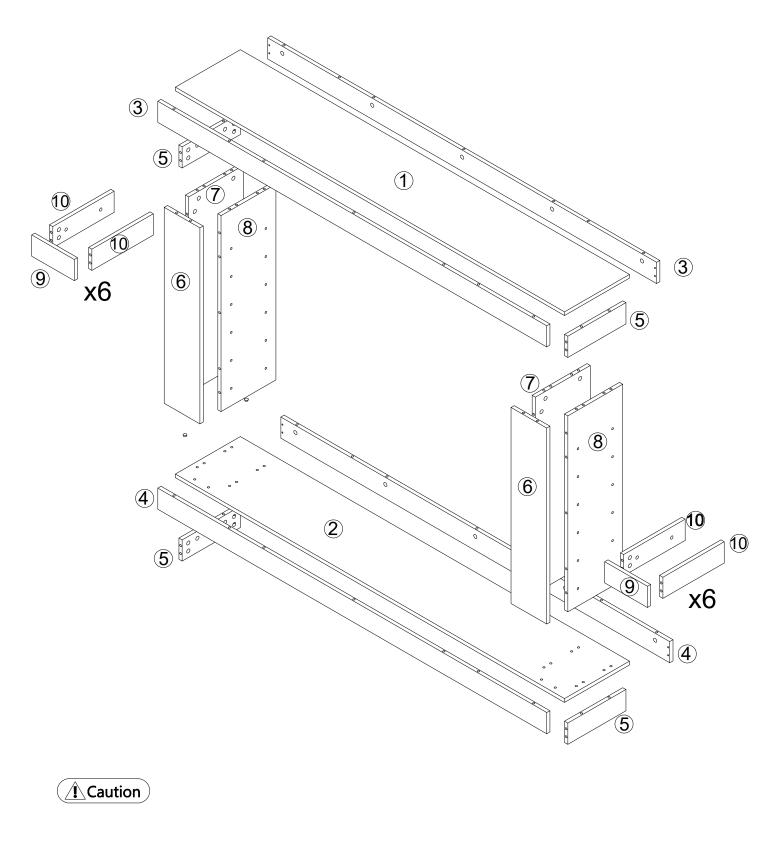

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for free replacement if having damaged or missing parts.



Parts & Hardware List

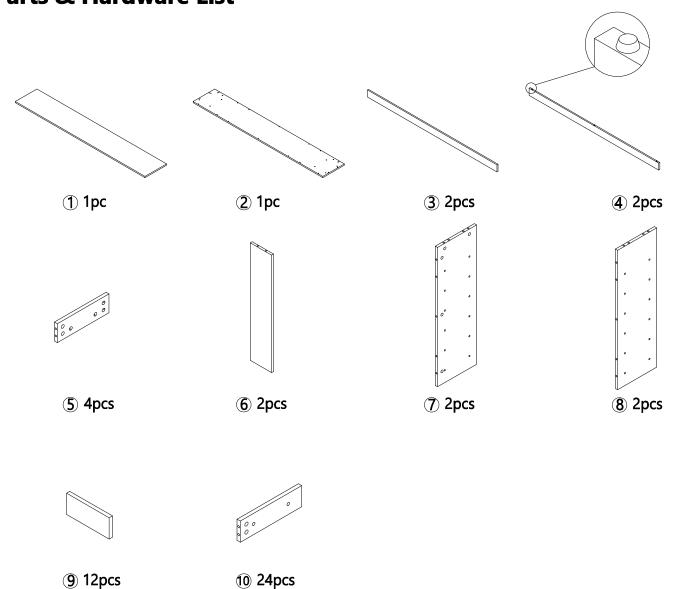

Hardware List

φ4X35mm

Α	X116+1	В	X116+1	С	X32+1	D	X12+1	E	X48+1
				07777					
φ6X35mm		φ15X12mm		φ8X30mm		M7X47mm		M6X25mm	
F	X2+1	G	X2	Н	X2+1		X2	J	X1

φ3.5X14mm

φ8X40mm

155X20mm


P-04

M4X64mm





Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

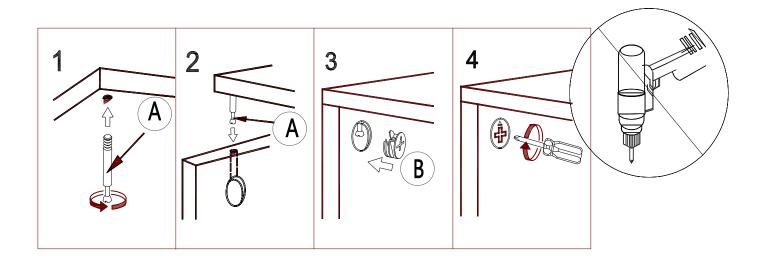



Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

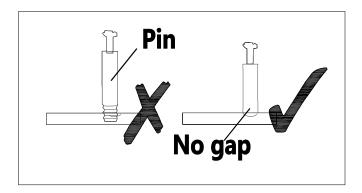

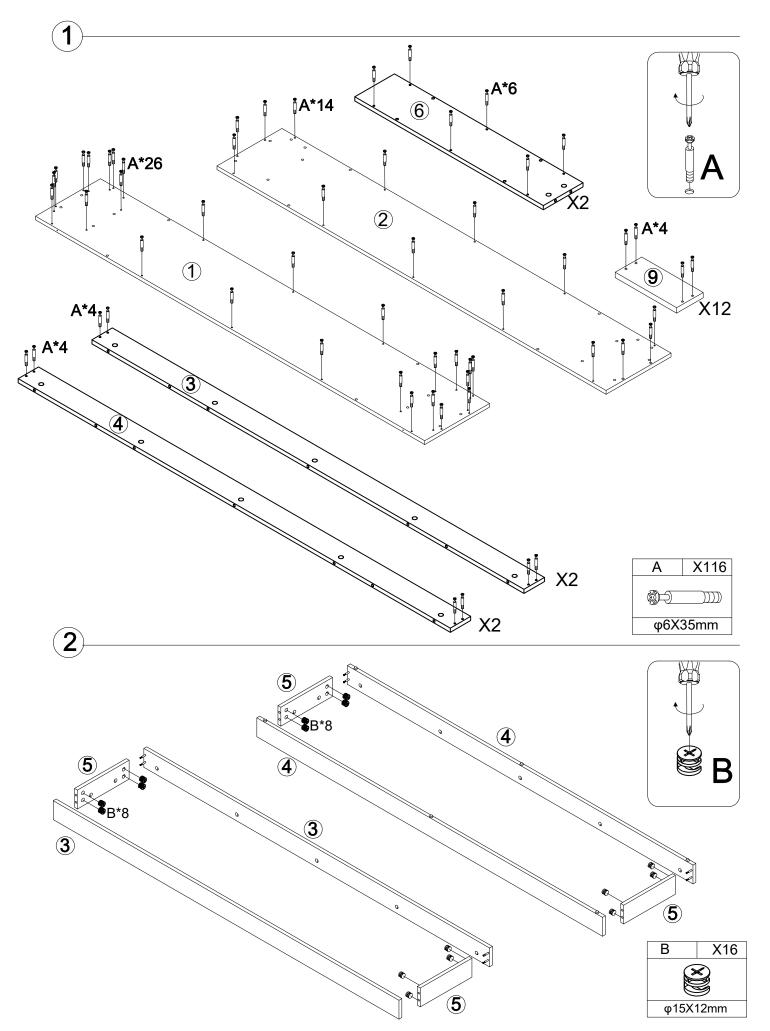




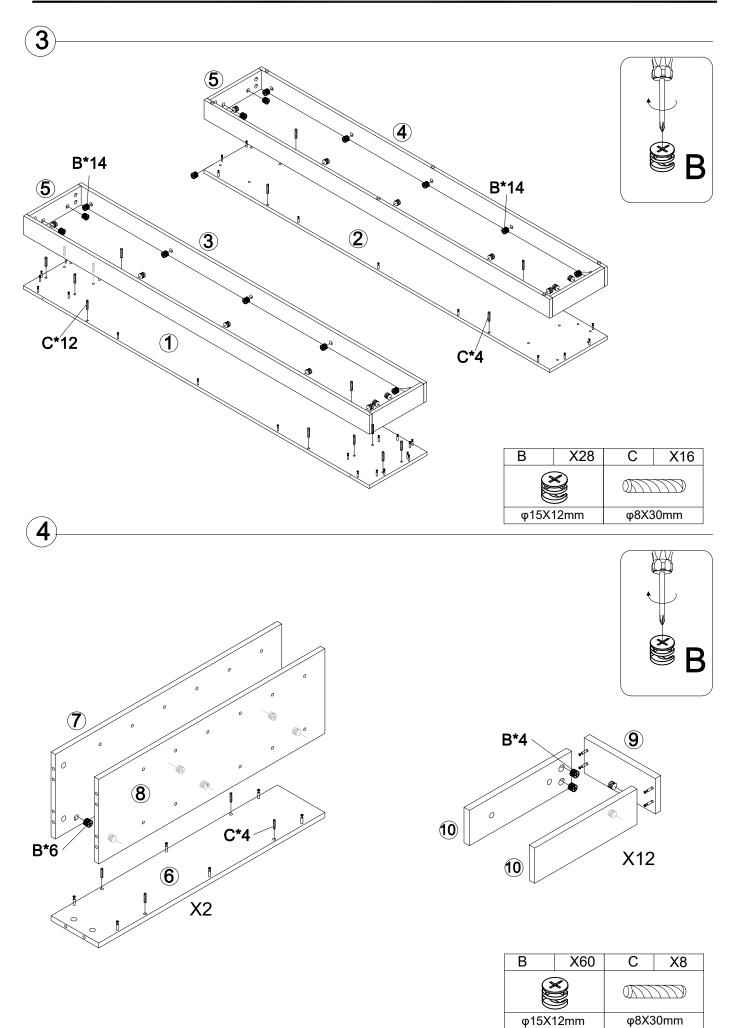


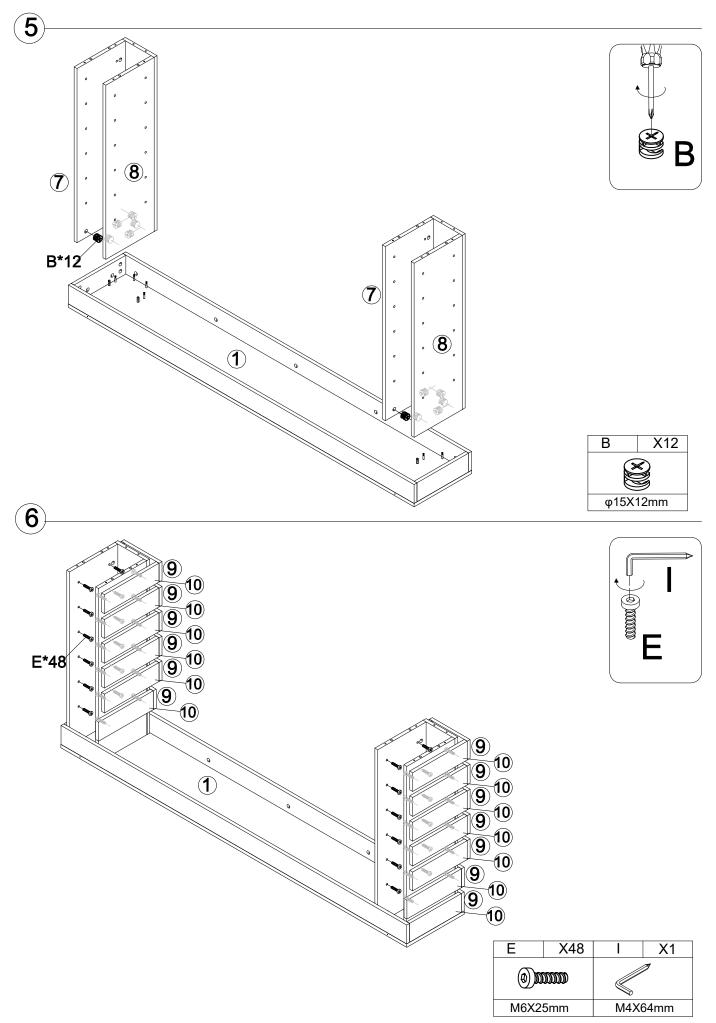






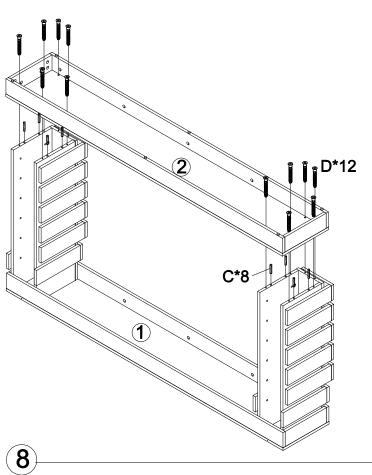




С	X8	D	X12	J	X1
0277770		(D)			
φ8X30mm		M7X4	7mm	M4	

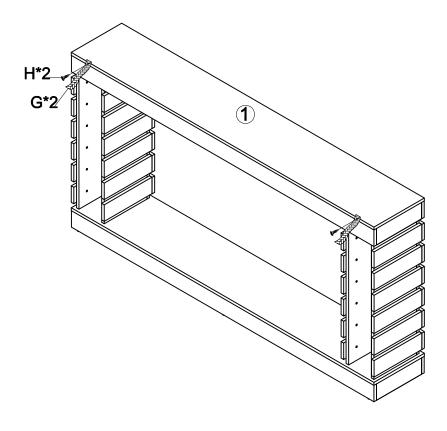

Н	X2	G	X2	
3.5X1	4mm	155X20mm		



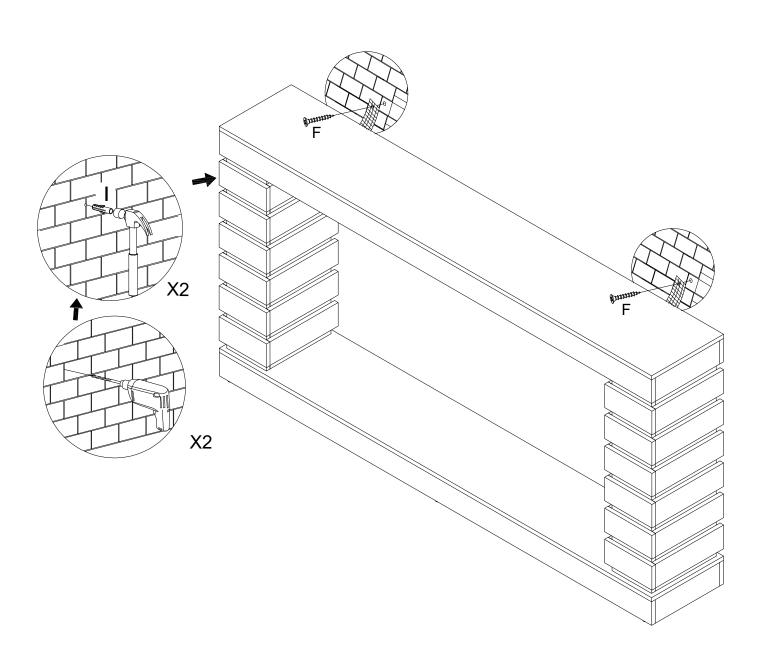

F		X2	I	X2		
				0 3111		
4>	4X35mm		φ8X40mm			



No heartburn, when we handle the return

Our way Support@tribesigns.com Re-package item Replacement/Refund You Track package Replacement Replacement You You You Track package You

Contact our customer service team



support@tribesigns.com www.tribesigns.com

