


Chicken Coop Run Instruction Manual

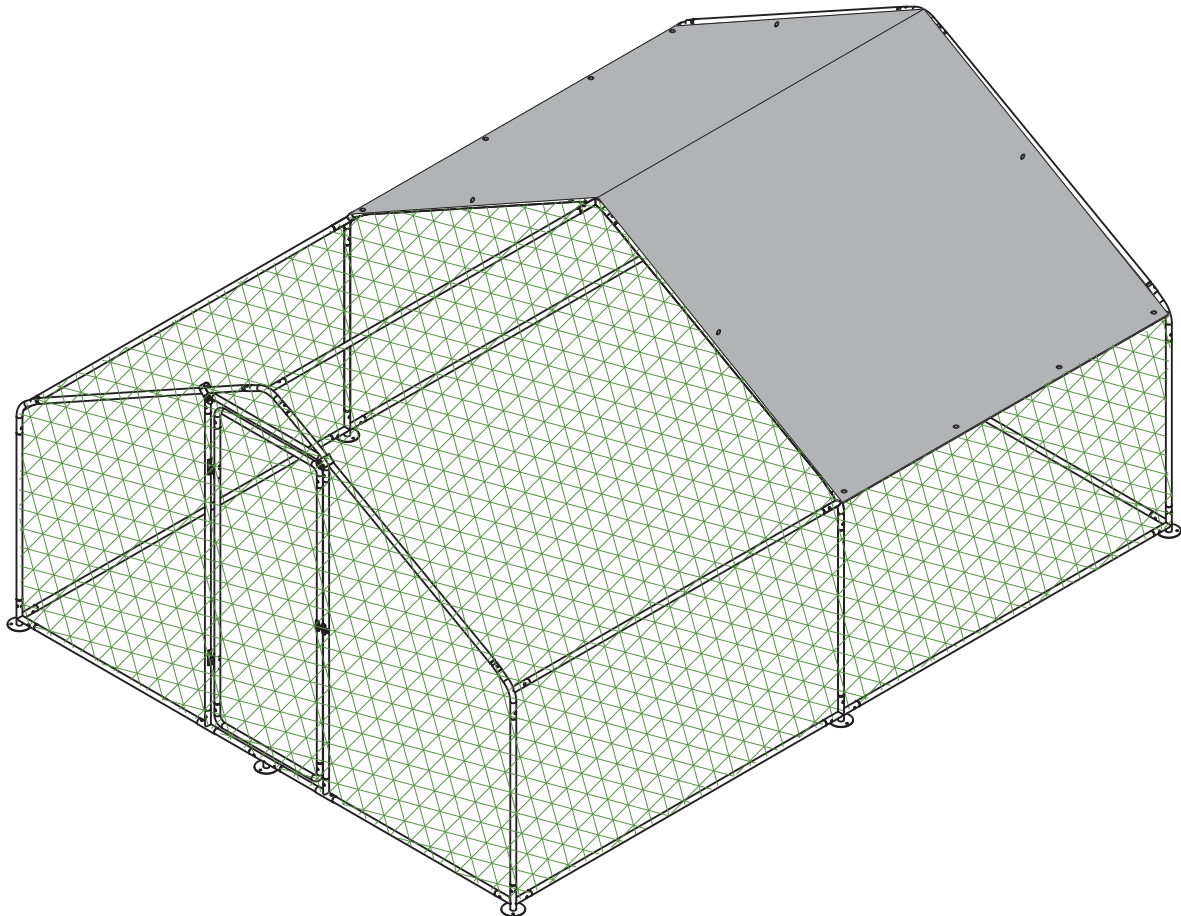












For Specification: 9.8'Lx13.1'Wx6.4'H (3m*4m*1.95m)








Note: If you encounter any problem with the installation, Please Contact ROOMTEC Installation Help, Missing or Replacement Parts. Please also tell us your "ORDER ID," we will solve for you as soon as possible.












TEL: **(800)209.3199** (MON-FRI 9:00am-5:00pm Eastern Time)
Email: service@room-tec.com





PARTS LIST

- Carefully remove all the parts from the carton and Make sure all accessories are complete.
- Carefully and strictly According these assembly&installation instructions to ensure a completed product as designed.
- Do not tighten all the screws until each part is properly assembled

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪
										
1370mm 4pcs	1840mm 10pcs	950mm 6pcs	1480mm 6pcs	1810mm 1pc	1610mm 1pc	1480mm 1pc	1610mm 1pc	1480mm 1pc	723mm 1pc	640mm 2pcs

A	B	C	D	E	F	G
						
4pcs	1pc	3pcs	5pcs	1pc	2pcs	3pcs

					
Stake 14pcs	U Clips 2pcs	Electro hex 1pc	Cable tie 350pcs	Oxford Cover 1pc	Rubber rope 14pcs
					
M6 screws 4pcs	M6 screw nuts 4pcs	M8 screws 2pcs	M8 screw nuts 2pcs	M5 screws 2pcs	


			
Screwdriver	Wrench	Scissor	Glove

CHICKEN COOP RUN ASSEMBLY

STEP 1


NOTE: Arrange the required accessories according to the serial number in the picture

- I According the step diagram , connect ①、② to A
- II use ① connect C to both sides
- III use ② connect C to both sides
- IV First put two F on two ① respectively, and then use B to connect the two ①

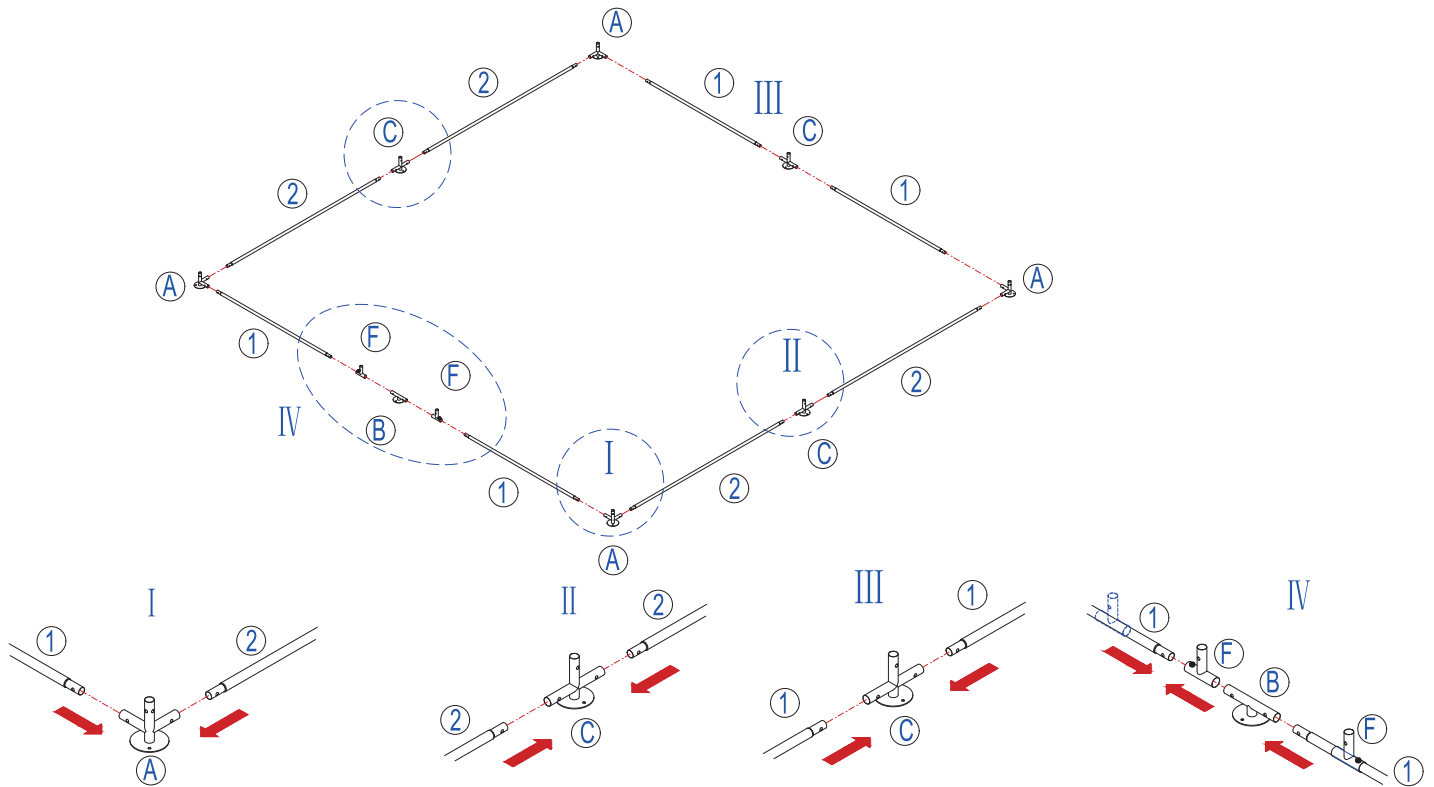

STEP 2

- I According the step diagram , Insert 4 pieces of ③ into A
- II Insert 2 pieces of and ③ into C
- III Insert 1 pieces of and ⑤ into C

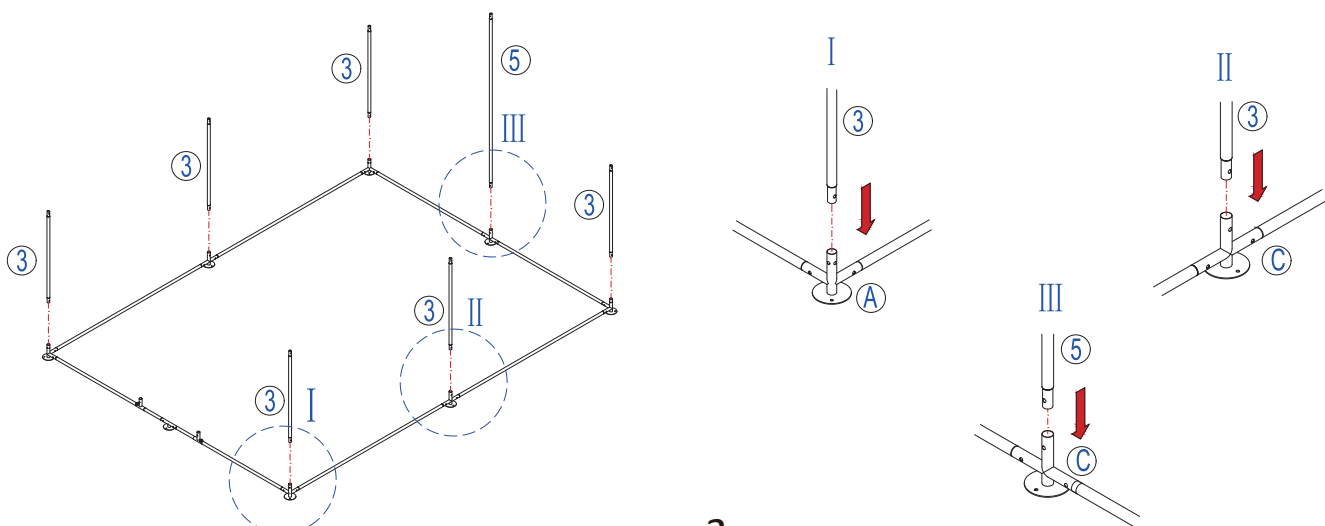

CHICKEN COOP RUN ASSEMBLY

STEP 3

I According the step diagram,Insert the 4 pieces of D into the ③ respectively


II Insert the 2 pieces of G into the ③

III insert two ④ into two D respectively, and then use D to connect the two ④ at the top

IV insert two ④ into G respectively, and then use G to connect the two ④ at the top


V Insert the E into the ⑤, and then insert two ④ into E from both sides

Notice:The direction of installation D、E needs to be strictly in accordance with the diagram

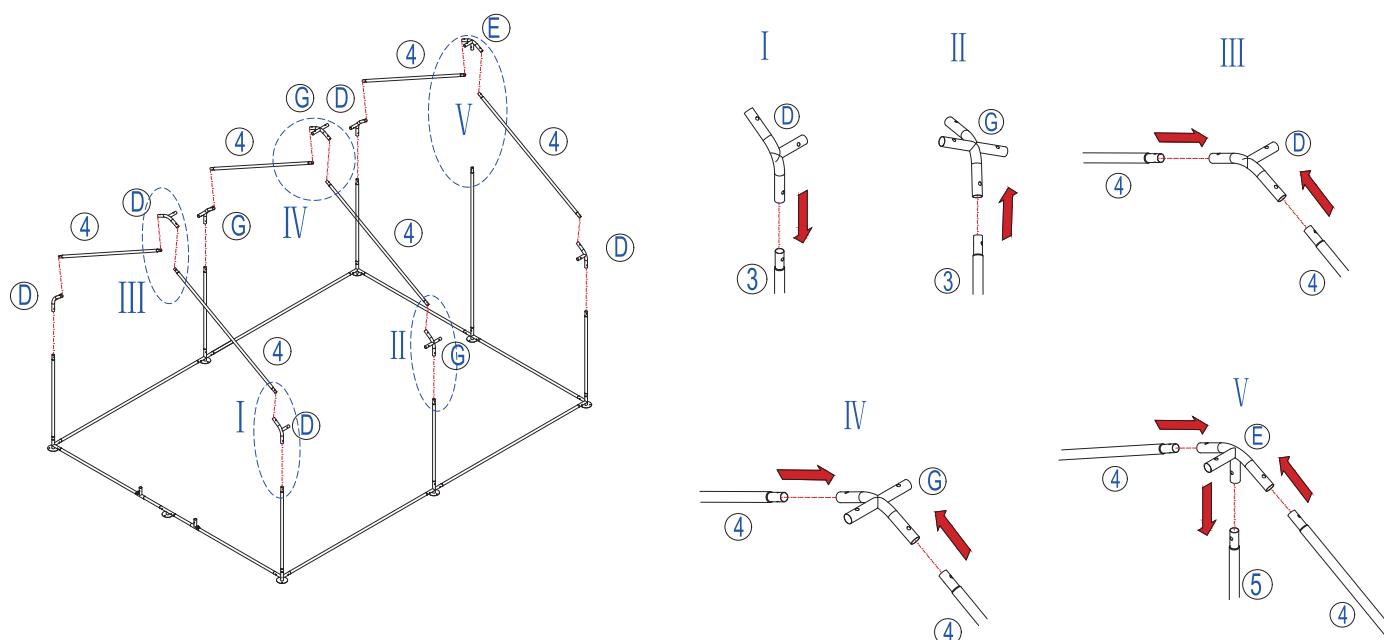

STEP 4



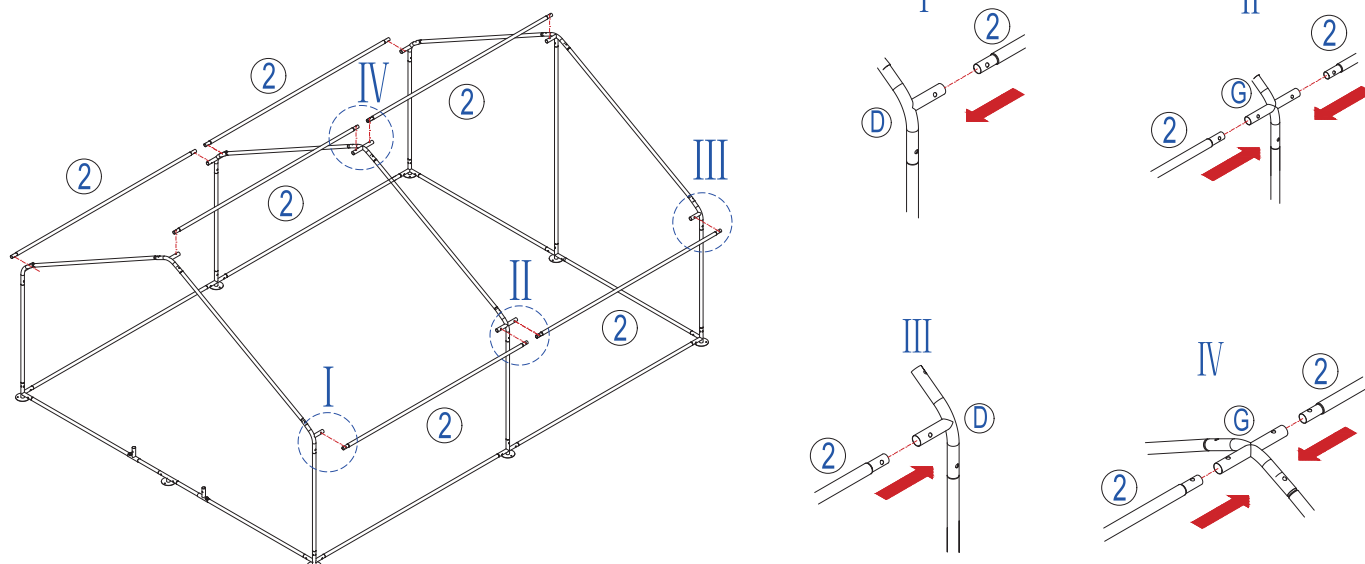


I According the step diagram, Use 6 pieces of ② to connect the ends of D、G、E on the roof respectively






CHICKEN COOP RUN ASSEMBLY

STEP 5




- I According the step diagram,insert ⑥ and ⑧ into two F respectively, and then insert ⑩ into the top of ⑥ and ⑧
- II Use screwdriver to Screws M5 to tighten F
- III Use U clips to fix the position of the door frame, then Use screwdriver to Screws M6 tighten U clips

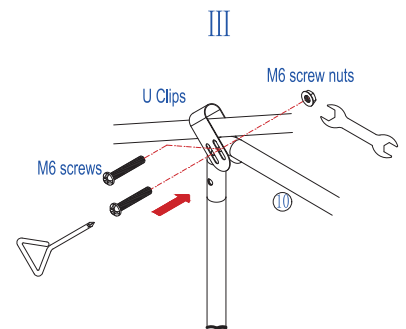
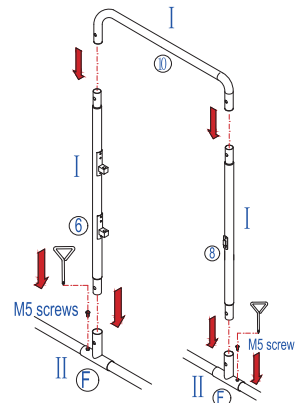
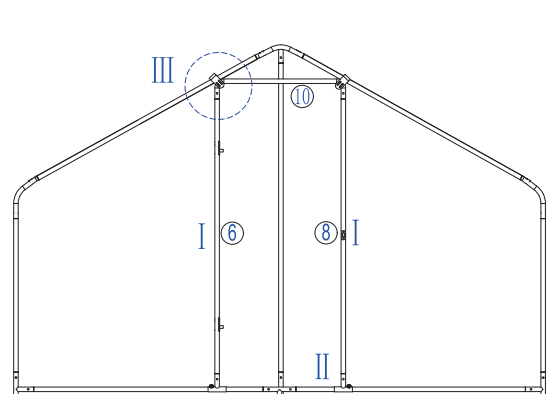
Required Tools				
				
M5 screws x 1	M6 screws x 2	M6 screw nuts x 2	Screwdriver x 1	Wrench x 1



STEP 6

- I According the step diagram,use ⑦ and ⑨ connect two ⑪ to form a door frame, then put the door frame into the door hinge, using M8 to tighten it

Required Tools		
		
M8 screws x 2	M8 screw nuts x 2	Wrench x 1

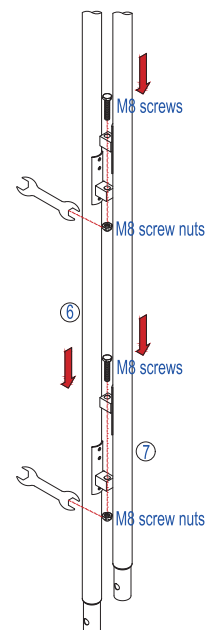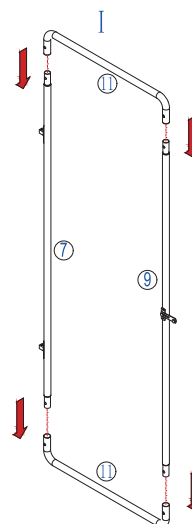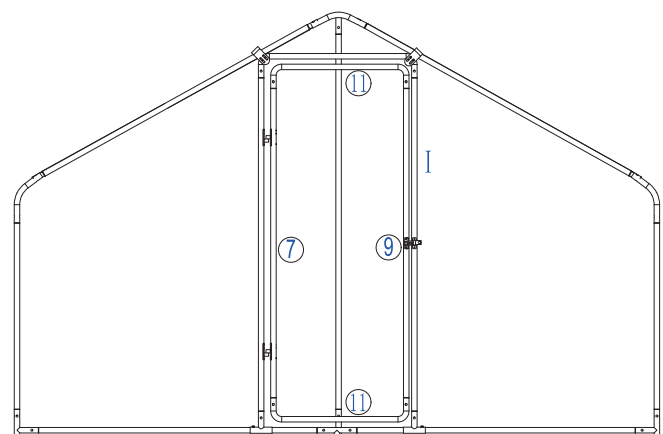






CHICKEN COOP RUN ASSEMBLY




STEP 7

I Secure the base with ground stakes

II According the step diagram, Cover the cage frame with hexagonal wire mesh and carefully cut along the frame, Cut the hexagonal wire mesh shape



III Use cable ties to fix the hexagonal wire mesh



Required Tools				
				
Stake	Electro hex	Cable tie	Scissor	Glove

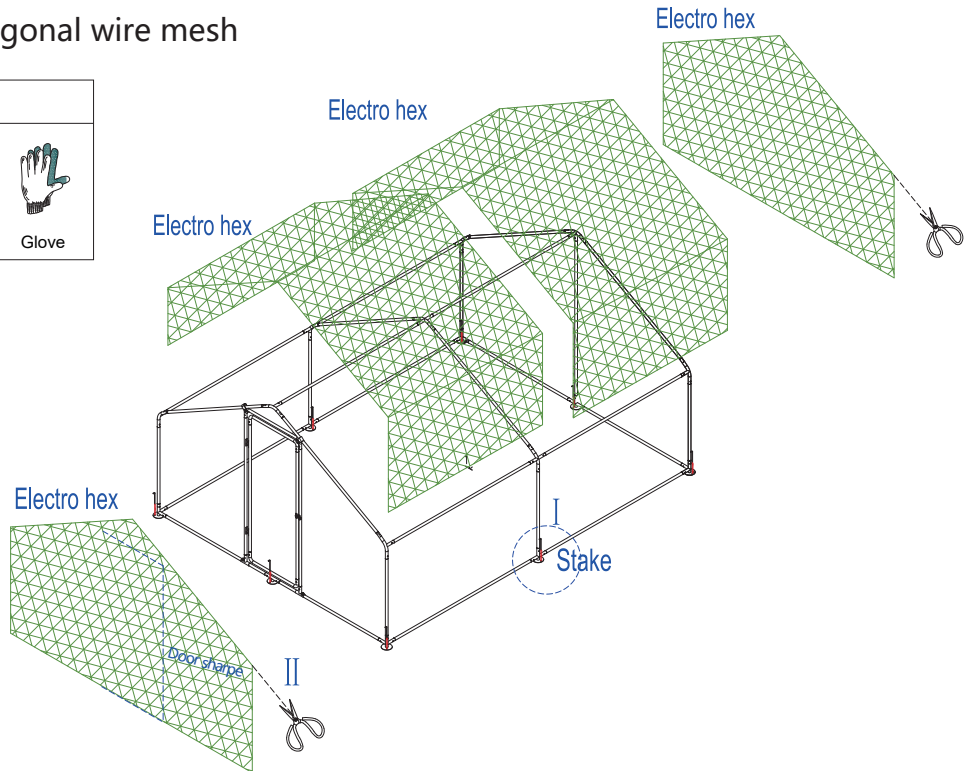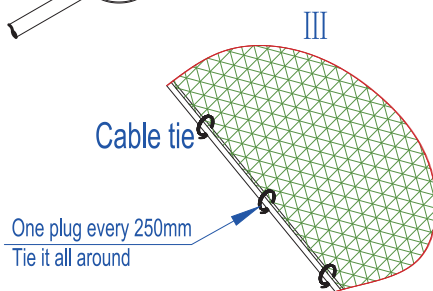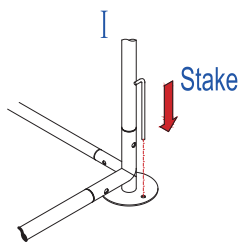

STEP 8

I Use rubber rope to fix the Oxford cloth

Required Tools	
	
Oxford Cover	Rubber rope

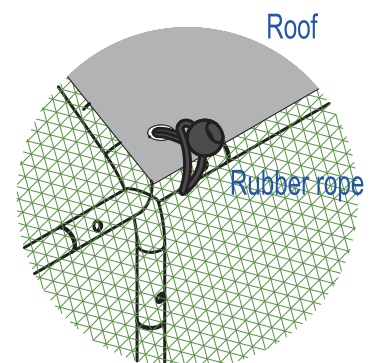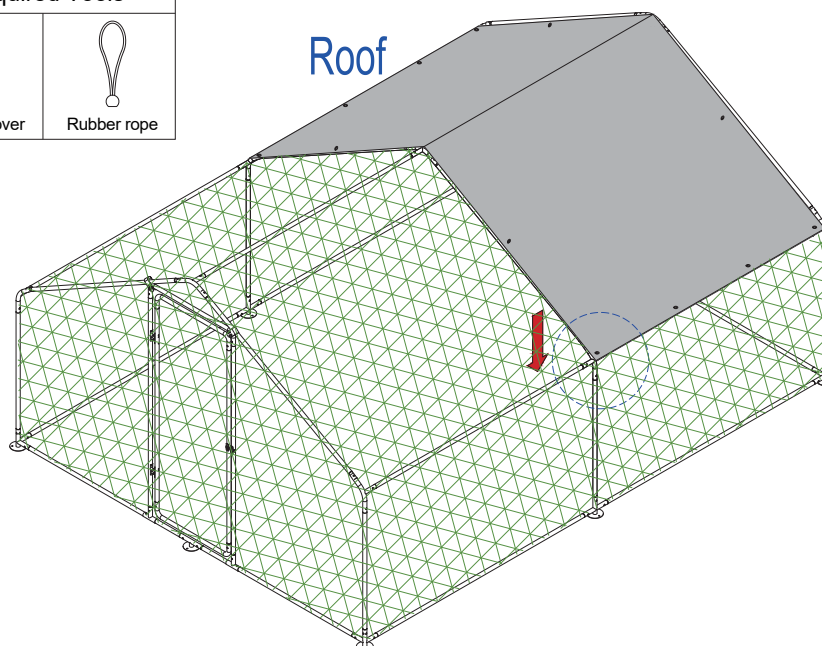

AFTER-SALES SERVICE CARD

We sincerely thank you for trusting our service and our products, and may this product add enrichment to your home. We guarantee that the product has undergone strict quality inspection and meticulous packaging. If you encounter any issue regarding either shipping or the product, please feel free to contact us at any time. We'd be more than happy to serve you wholeheartedly.

Yours Sincerely

- Please avoid harsh, corrosive and abrasive cleaners
- Keep dry and avoid damp environments.

***Customer Service:(800)209.3199(MON-FRI 9:00am-5:00pm
Eastern Time)***

Address: 3005 Breckinridge Blvd, Suite 200, Duluth, GA 30096

If you have any questions or concerns please feel free to contact us. We're committed to providing our customers with the quality service.