



Altura

Wall Mounted Outdoor Shower with Handheld




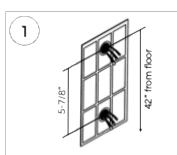


Install 1/2'' hot θ cold supplies at 42" height from the finished floor and 5-7/8" apart on center. Use the included NPT to G thread adapters and make sure the end of the adapter does not protrude from the finished wall.

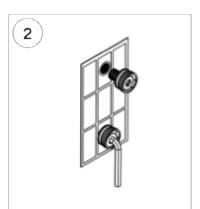


Insert the adjustable brass connectors and tighten until they are flush with the finished wall.

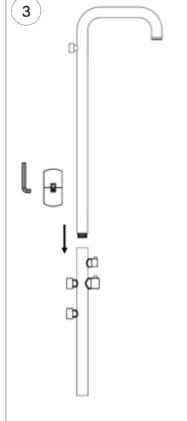

Assemble the fixture by inserting the upper part into the lower part. Align the indicator on the back of the fixture and tighten the set screw.

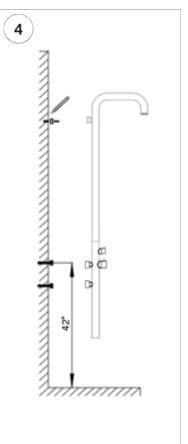

Hold the assembled fixture in place and mark the position of the upper bracket. Then, install the upper bracket.

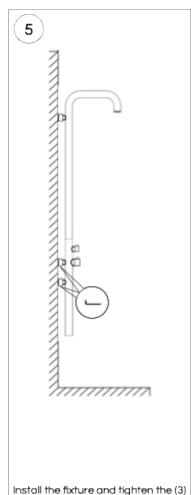

set screws.