

BATTERY REPLACEMENT PROCEDURE FOR SENECA Z-PC SERIES DATA LOGGERS

Z-LTE: REFERENCE MODEL



The buffer battery replacement kit includes a battery pack and a front adhesive label. This guide illustrates the replacement procedure using the Z-LTE model as a reference, but the instructions are valid for all SENECA Z-PC series data loggers.

STEP 1



Remove the front antenna.

STEP 2



With the help of a screwdriver, remove the product terminals and DIN rail mounting hooks.

STEP 3




Remove the front label.

STEP 4




Use the tabs to remove the product cover.

STEP 5

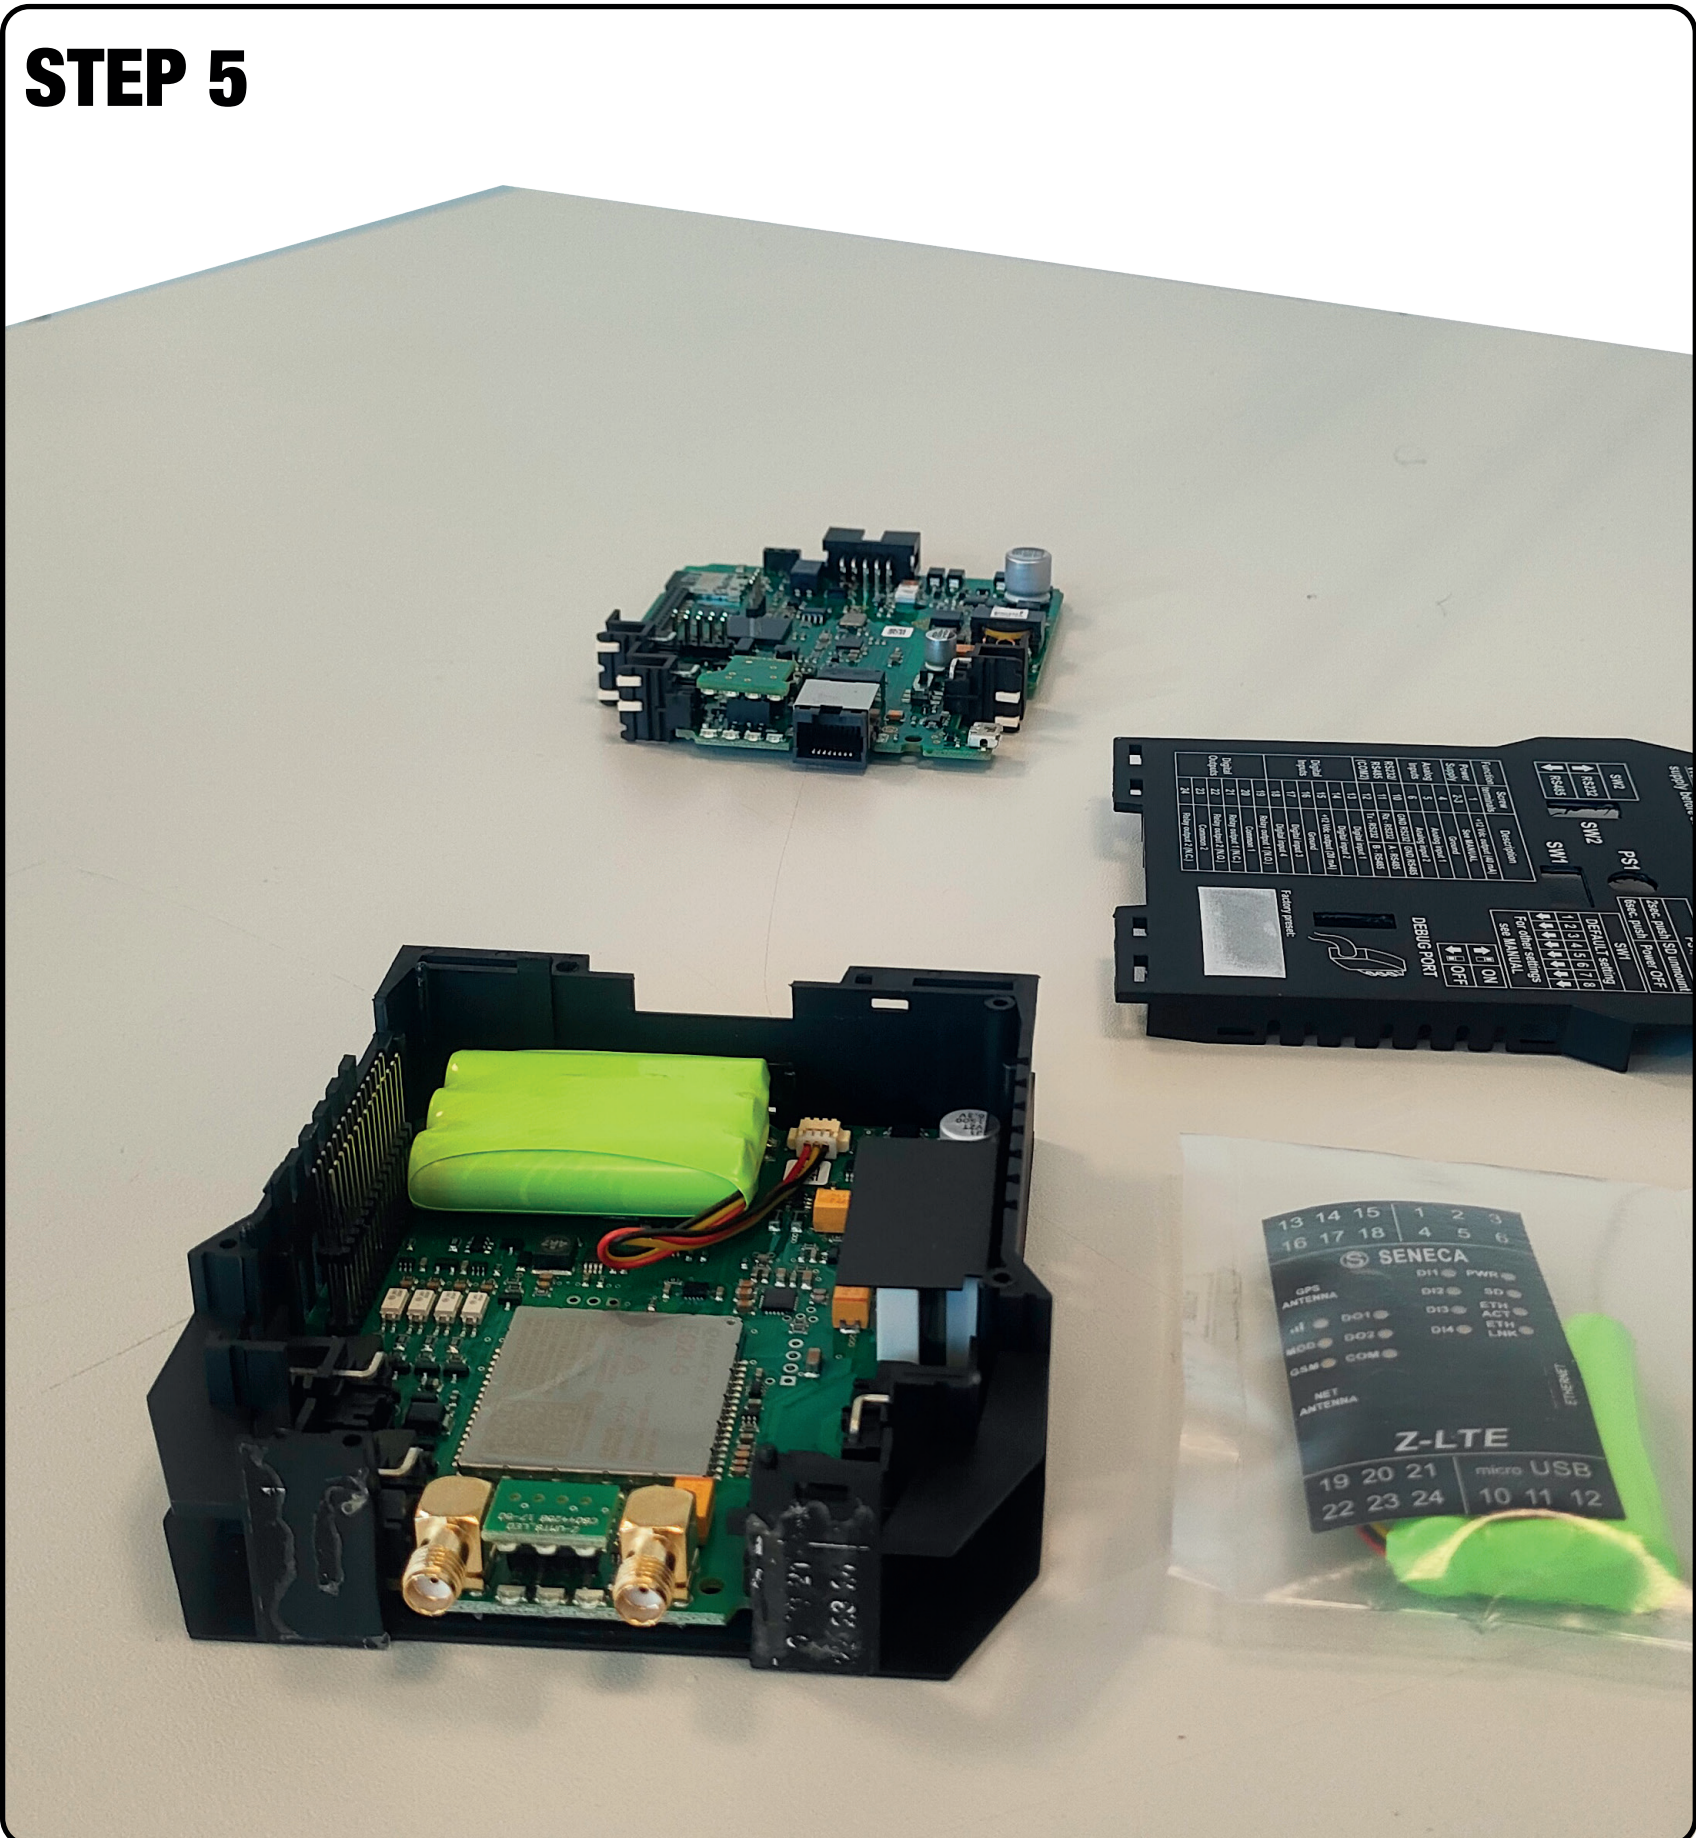


Disconnect the upper board to access the depleted and/or damaged battery pack.

STEP 6

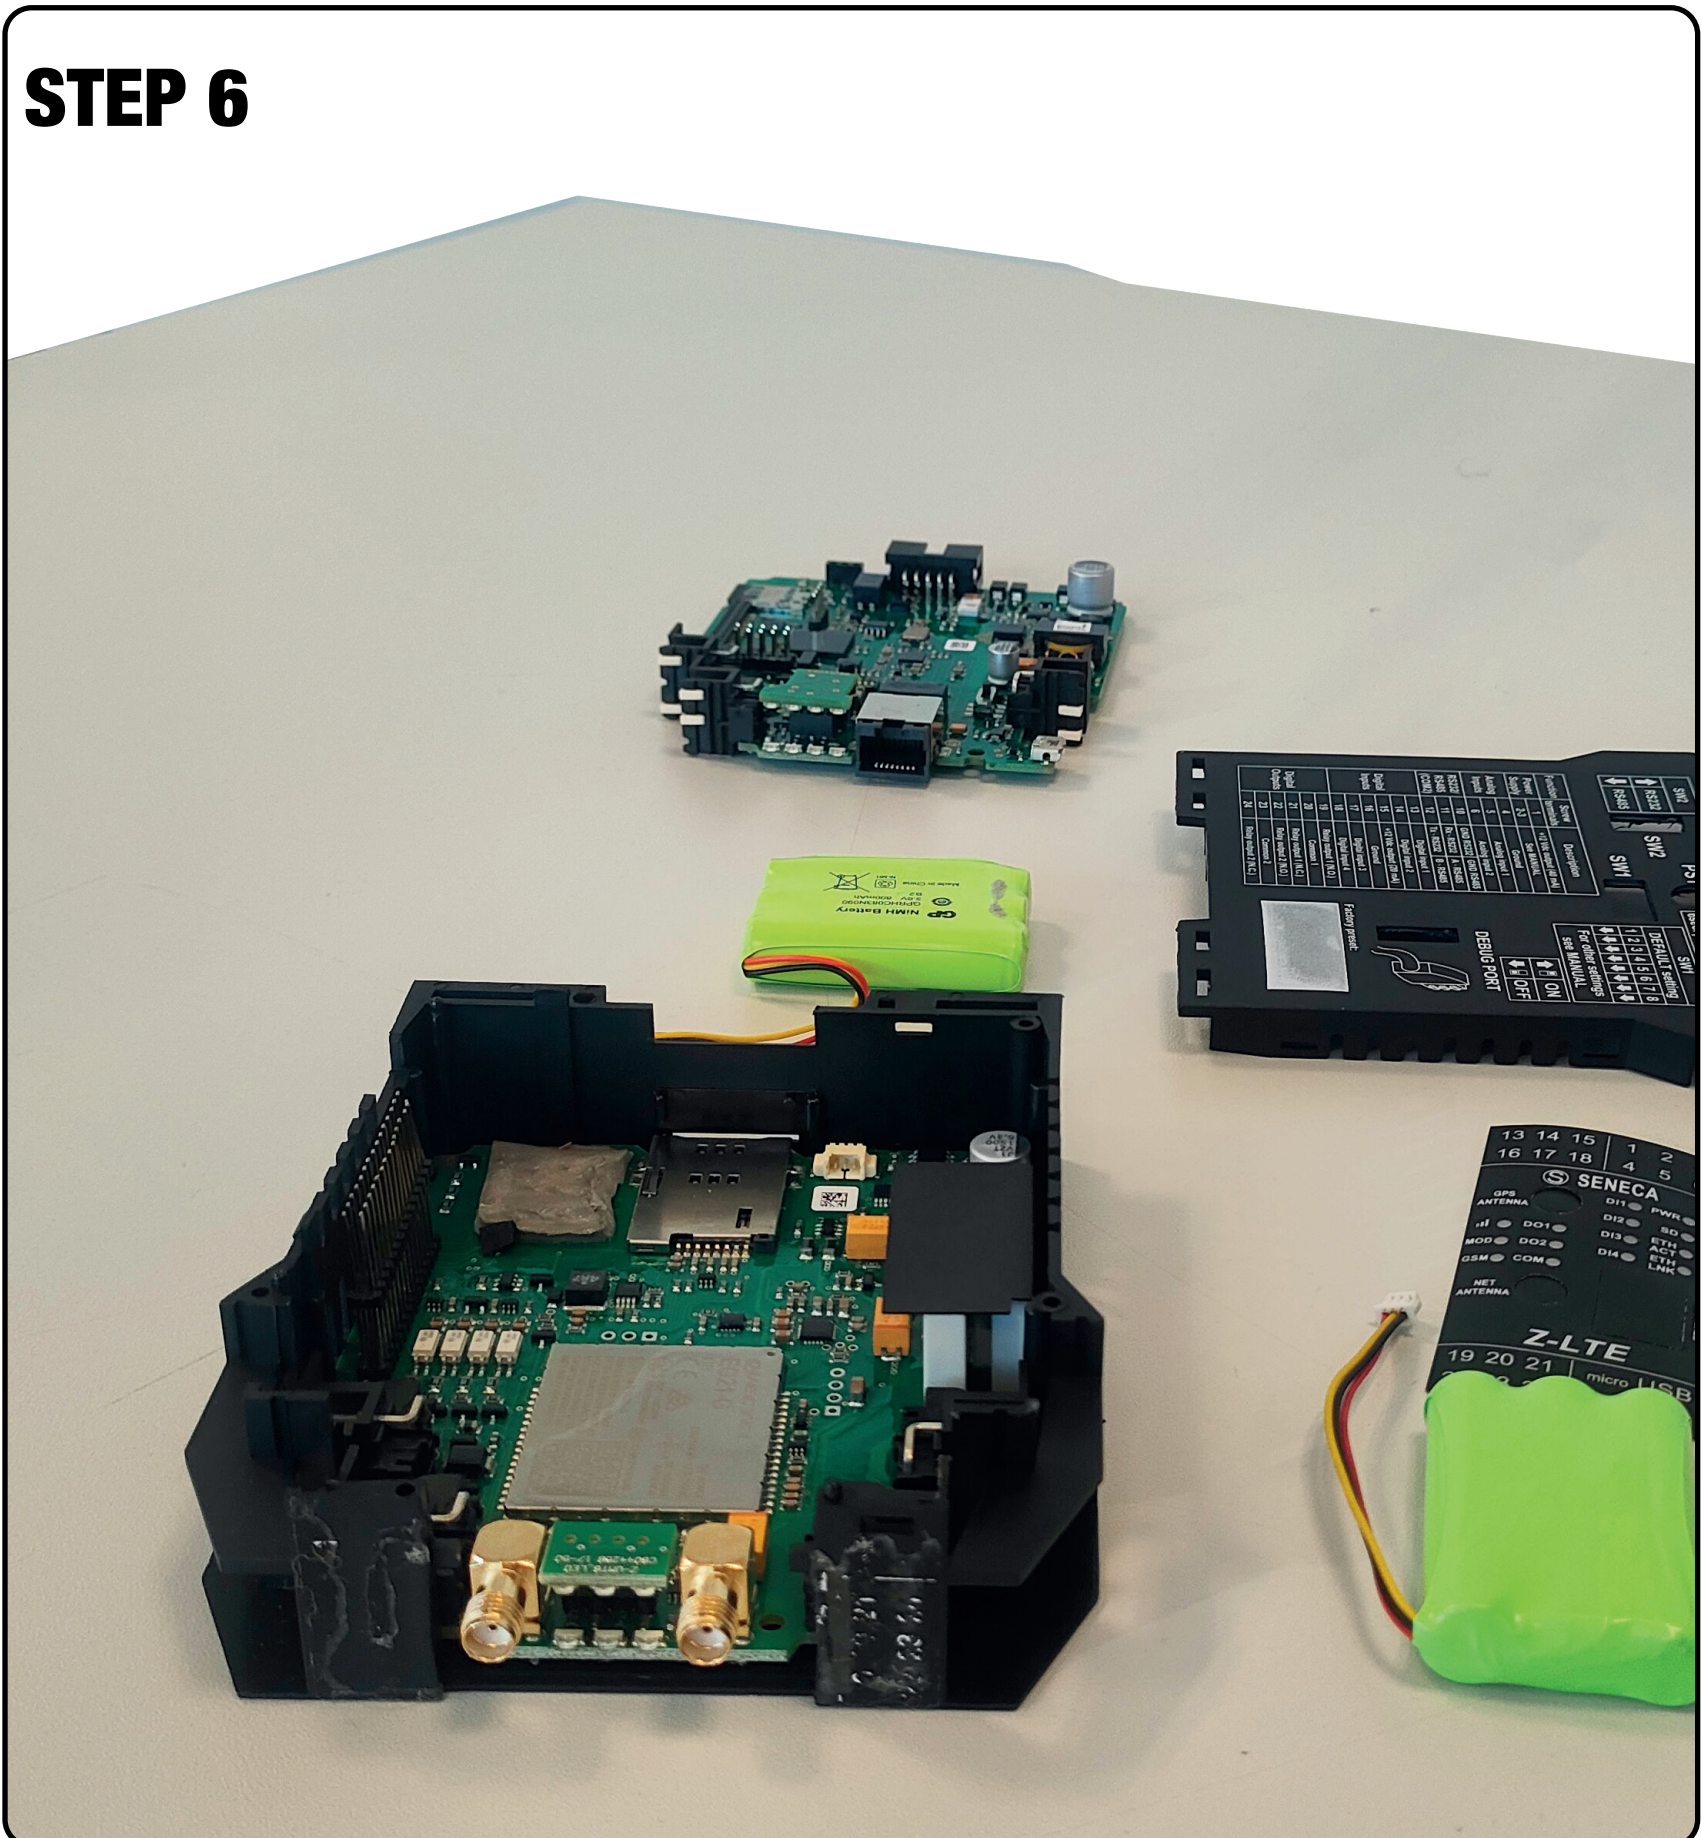


Disconnect the spent battery from the contact pin.

STEP 7

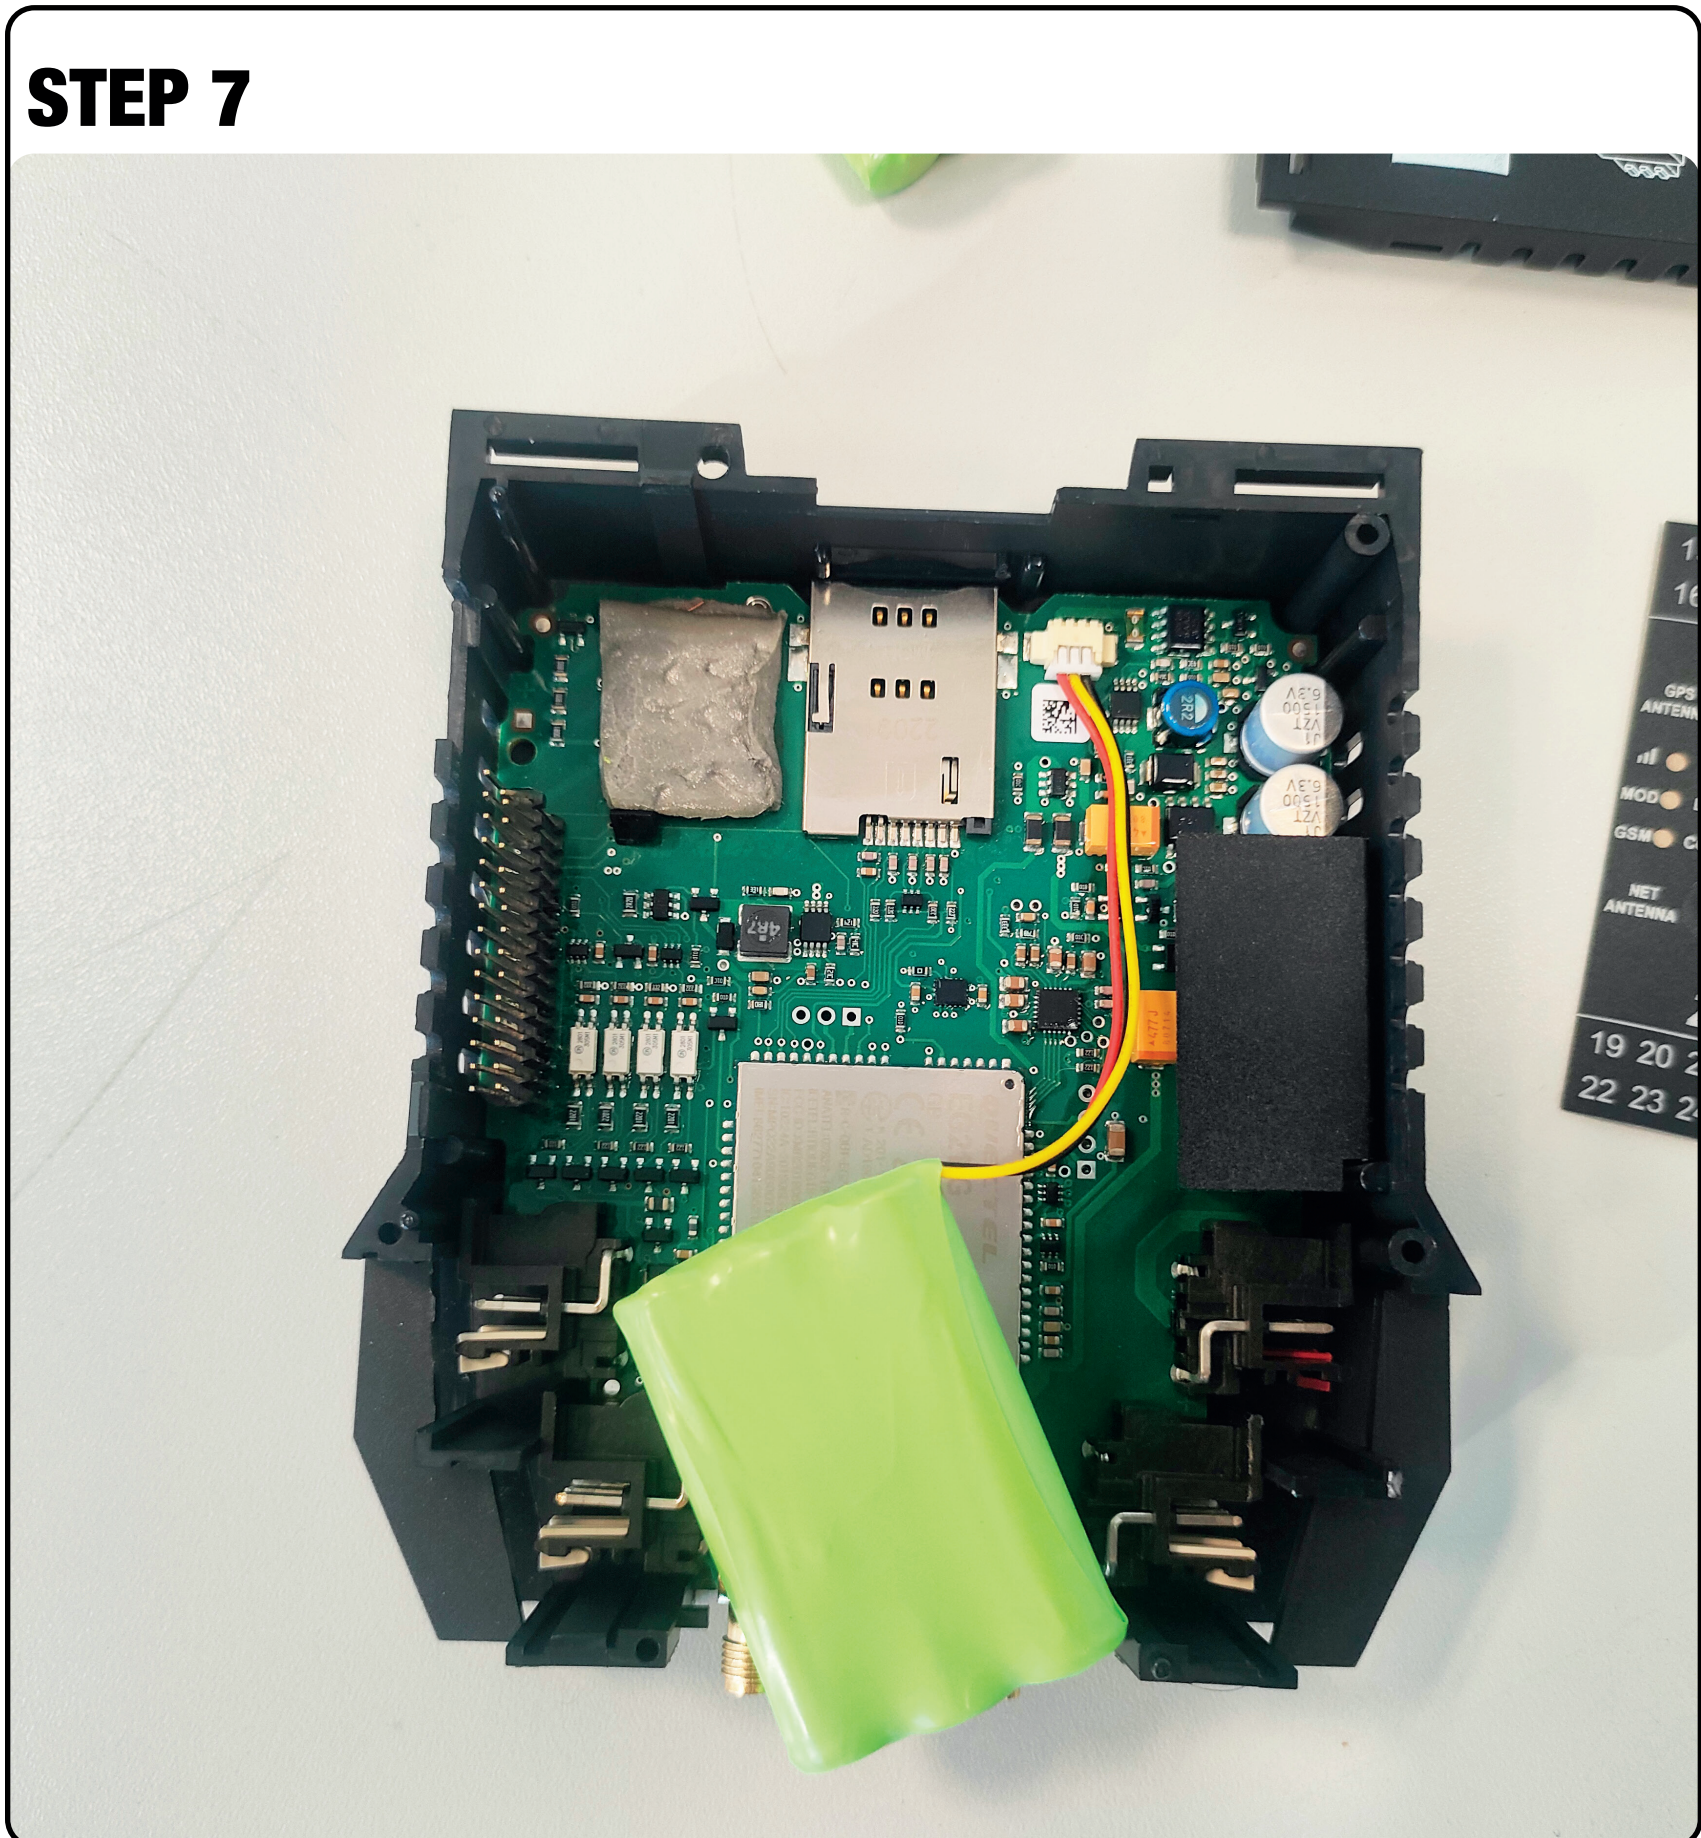

Connect the new battery to the contact pin.

STEP 8

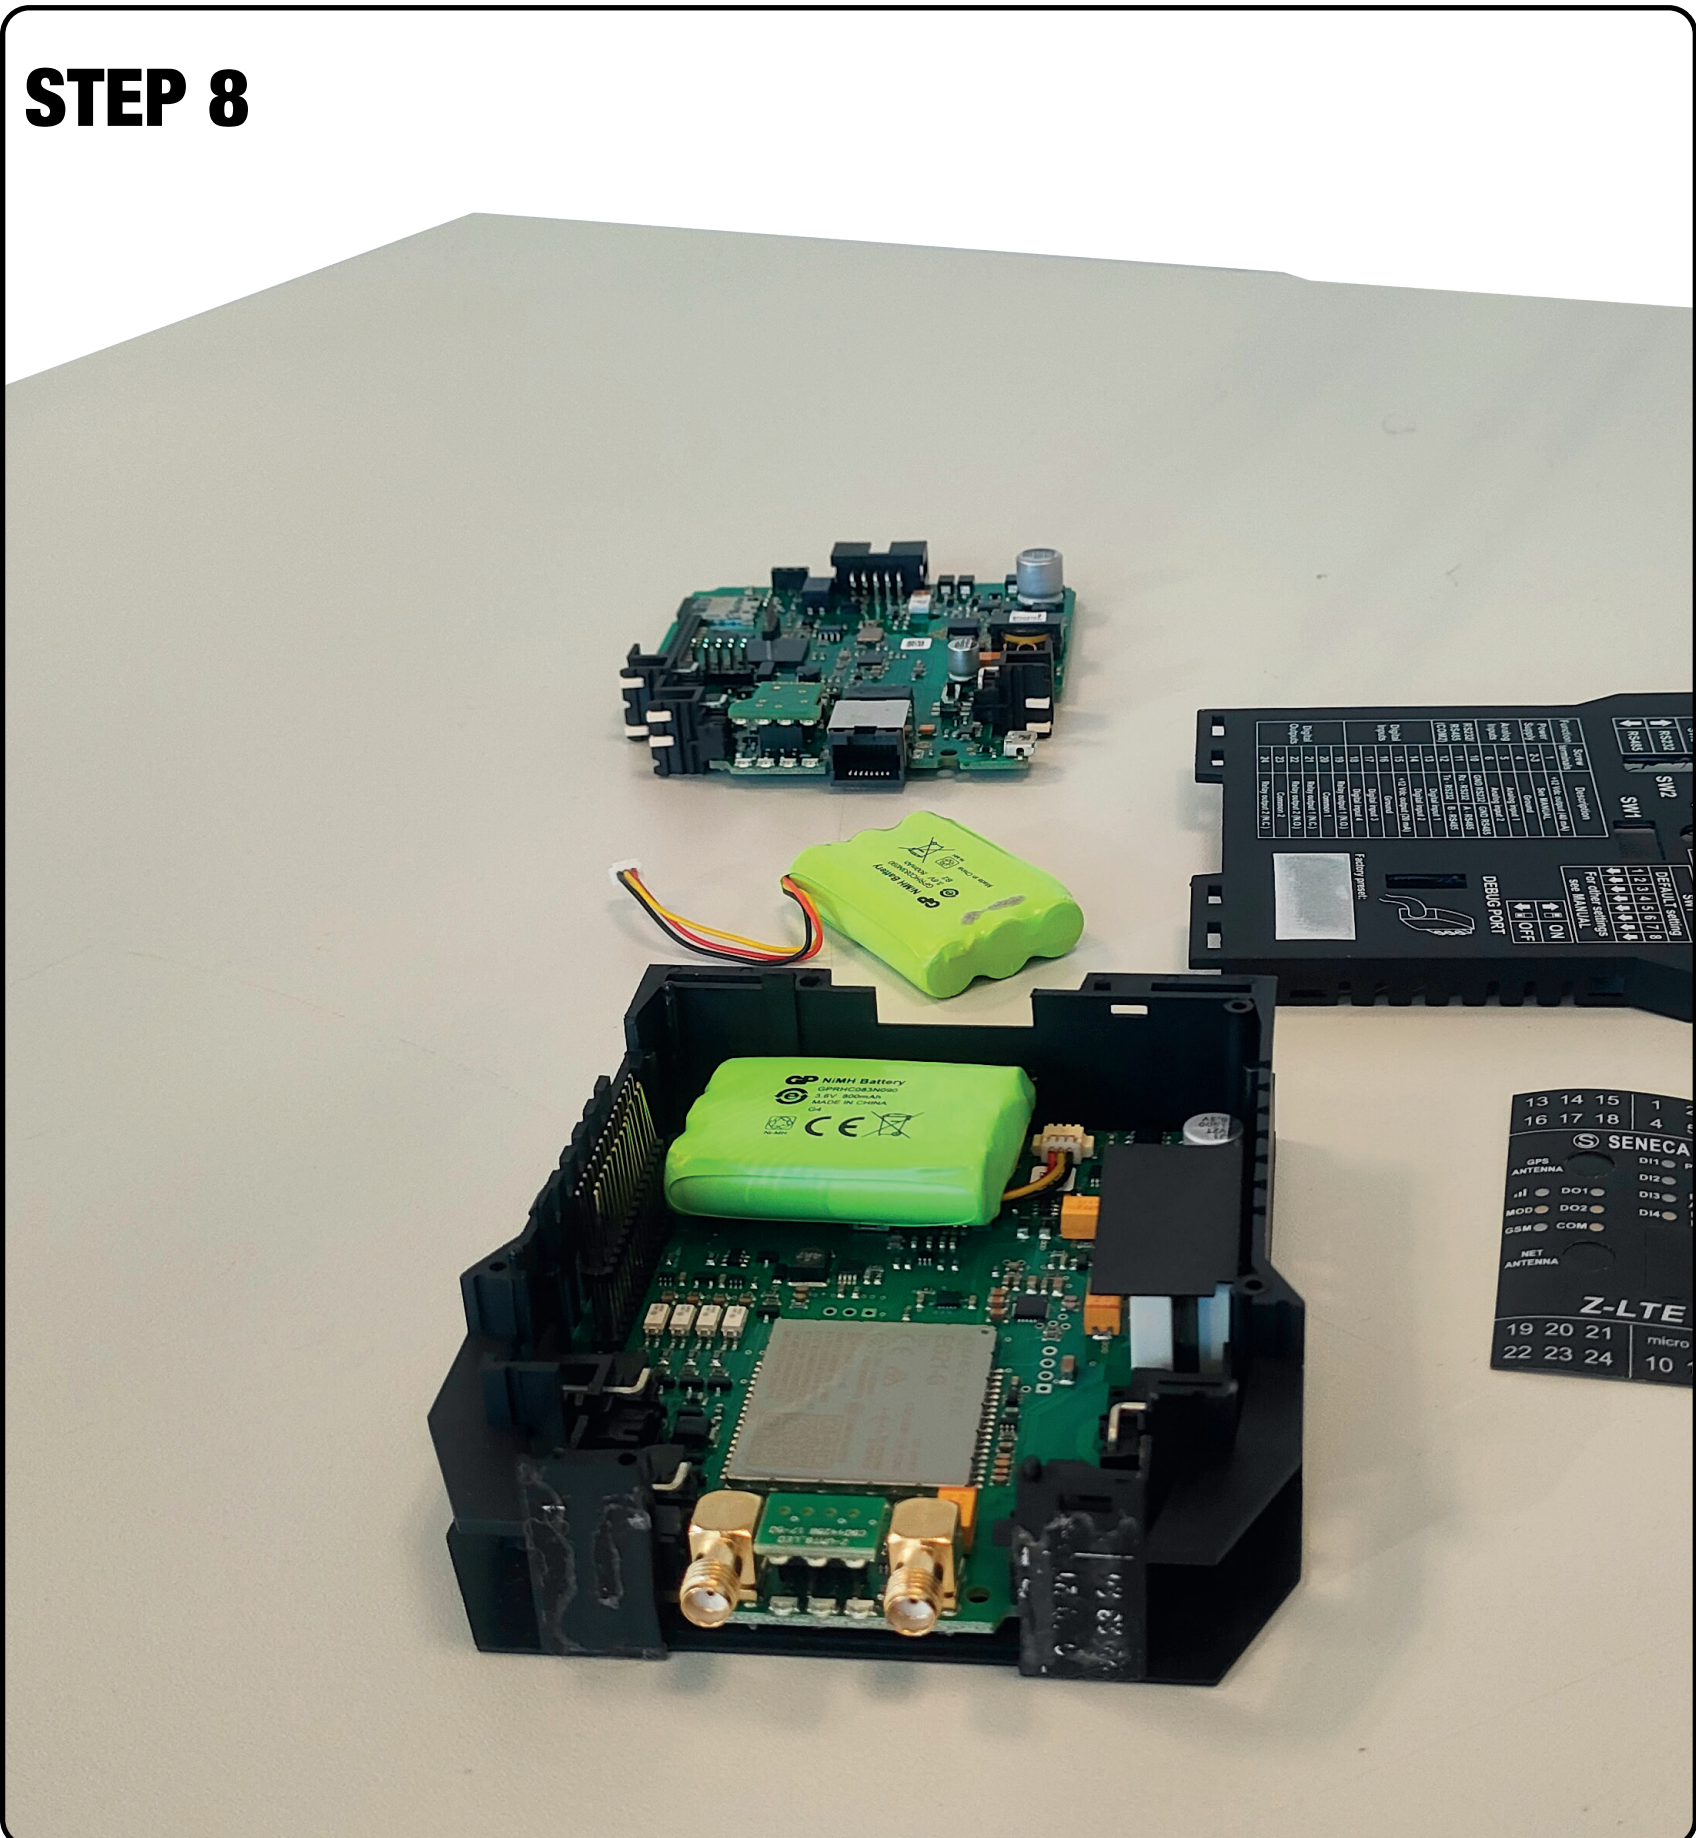

Reposition the new battery to its original location and proceed to close the product.

⚠ ATTENTION

Depending on the product model and its hardware revision, the replacement kit may vary. To purchase the correct replacement part, consult the SENECA website or your sales contact.