



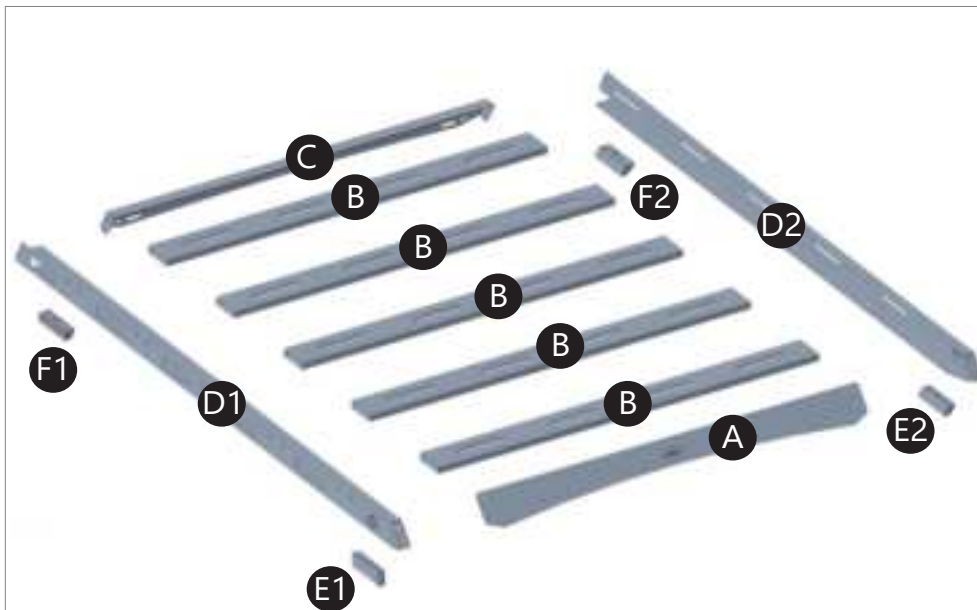
MAKE A DIFFERENCE

Roof Rack

BXG.9820-S
(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
Please feel free to contact your distributor if you have any kind of question about your purchase.

1 CONTENTS



A: Front Faring






B: Crossbars

C: Rear Faring

D1&D2: Side Rails

E1&E2: Front Mount Brackets

F1&F2: Rear Mount Brackets

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
8	Hex Flange Bolts	M8*65		36	Flat Washer	M8*16*1.5	
28	Button Bolts	M8*20		8	Flange Hex Lock Nuts	M8	
16	Rubber Gasket	19*6.5*3					

2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 13mm Wrench

◆ 5mm Hex Bit Socket

◆ 13mm Shallow Socket

To view online instruction, please scan the QR code.



3 INSTALLATION INSTRUCTION

Step 1

Remove the factory vehicle roof rack. Use a a easy door panel removal tool to remove the plastic cover, and then unscrew the factory screws.



Step 2

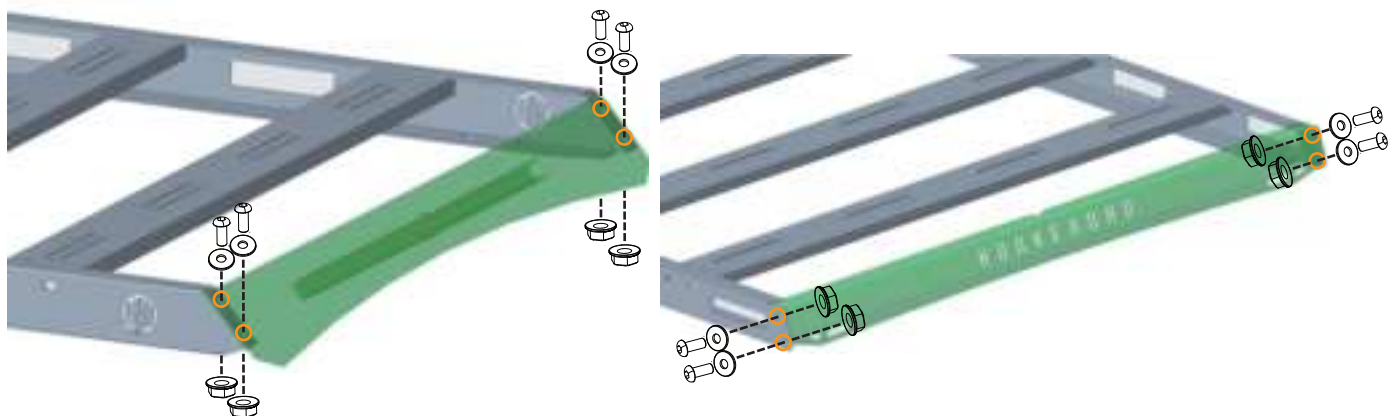
Install the crossbars to the side rails using the (20) M8x20mm button bolts, (20) M8x1.5x16mm flat washers.

Do not tighten the hardware at this time.

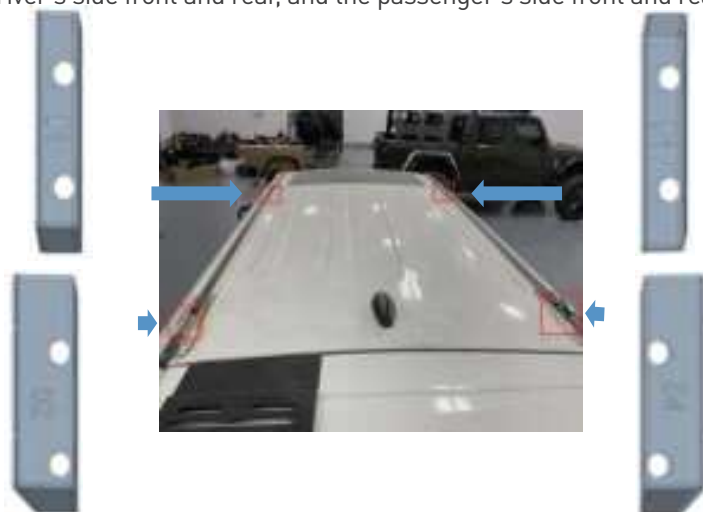


Step 3

Install the front & rear farings to the side rails using the (8) M8x20mm button bolts, (8) M8x1.5x16mm flat washers, (8) M8 flange lock nuts. **Tighten all bolts.**

**Step 4**

Please differentiate the installation positions of the mounting brackets. The brackets are marked with D1, D2, P1, P2, corresponding to the driver's side front and rear, and the passenger's side front and rear.

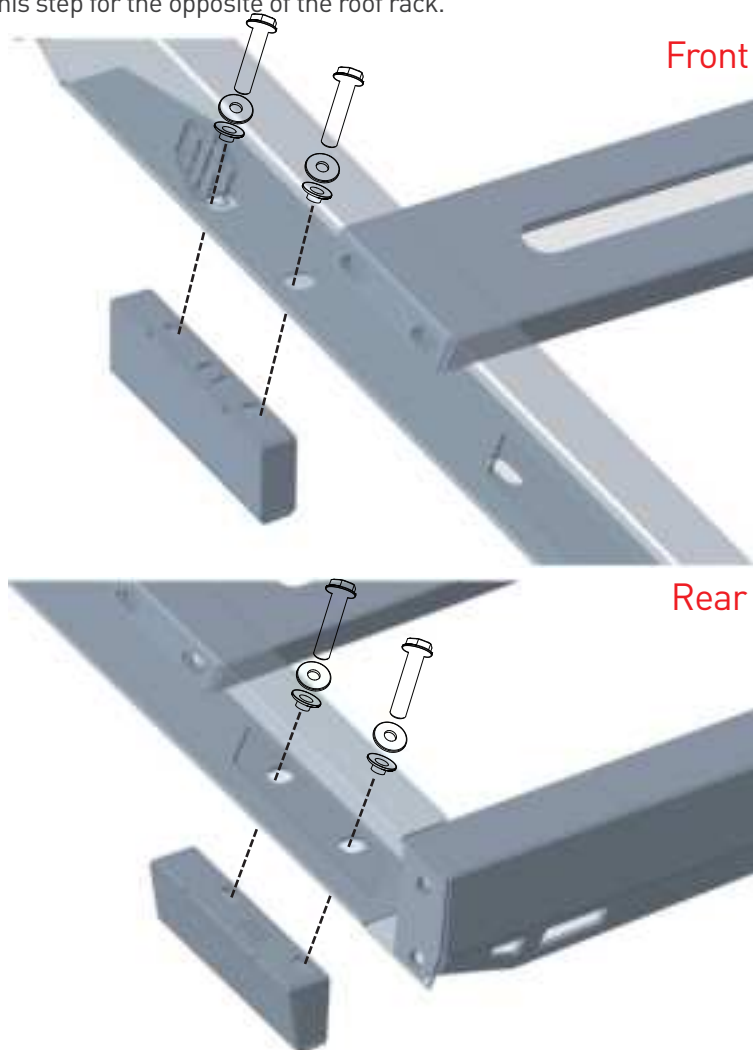
**Step 5**

Put the rubber gasket to the factory holes.



Step 6

(Driver Side) Install the roof rack to the vehicle using the (4) M8x65mm hex flange bolts, (4) M8x1.5x16mm flat washers, (4) rubber gasket. Repeat this step for the opposite of the roof rack.

**Step 7**

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

