


DGWD-V1




FTLFCT-6027
FTLFCT-6028
FTLFCT-6029

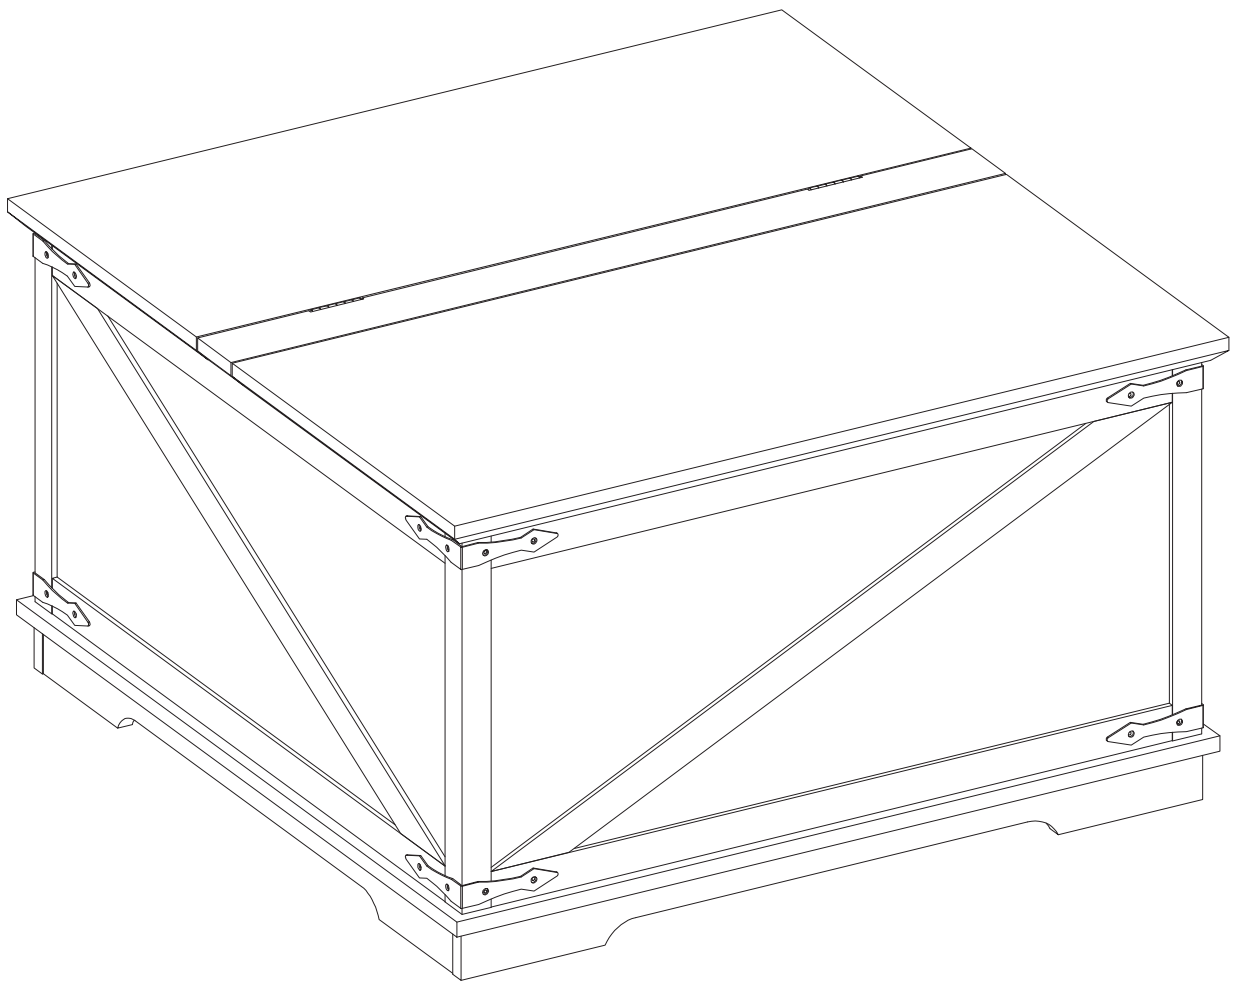


COFFEE TABLE


Notice:

1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.

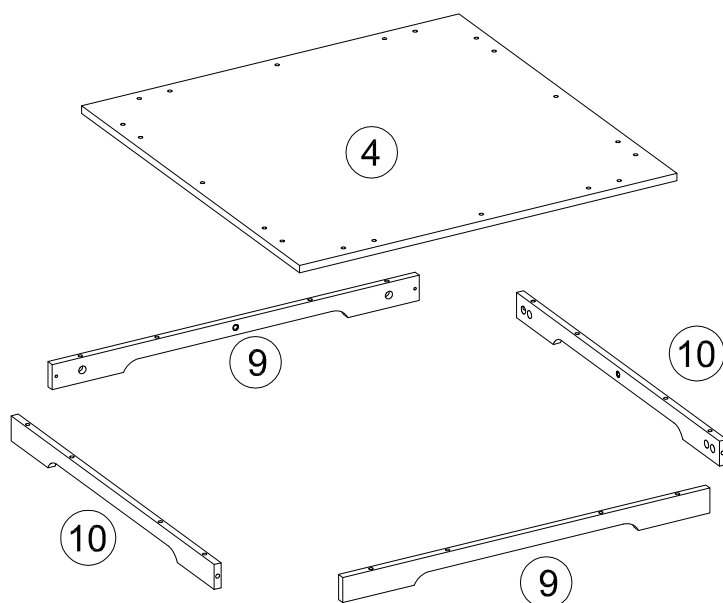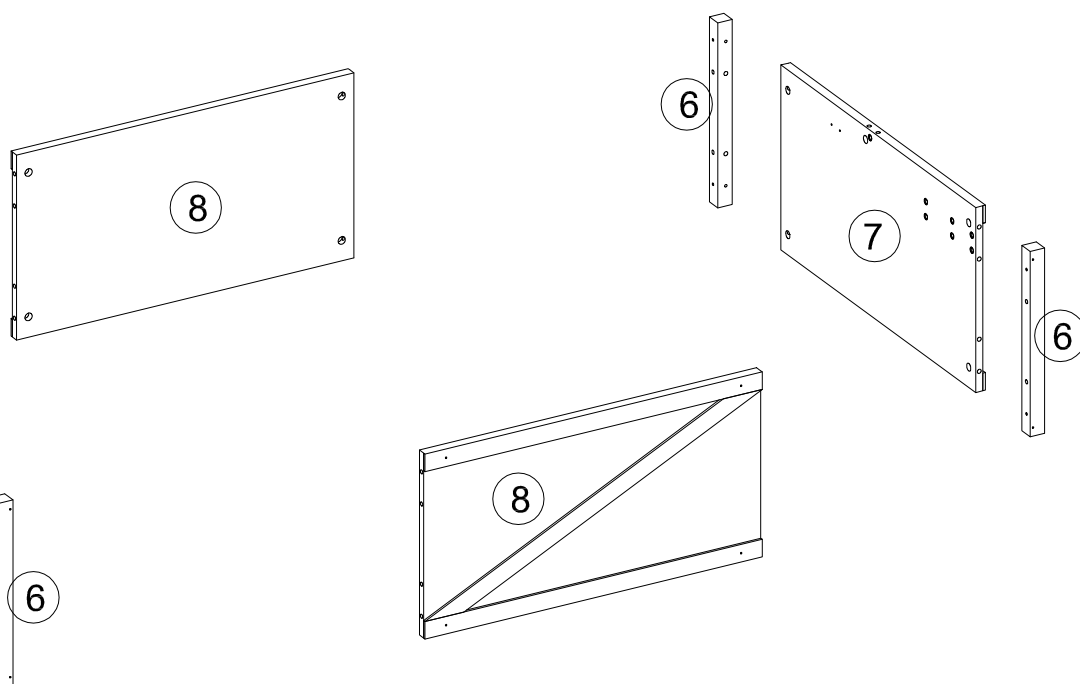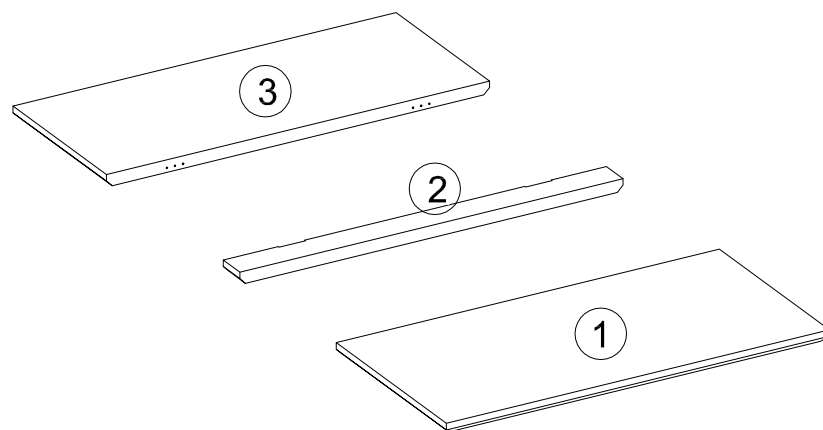


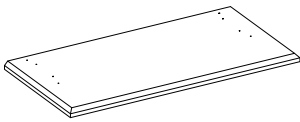


① x1




② x1




③ x1

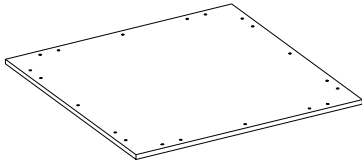


④ x1

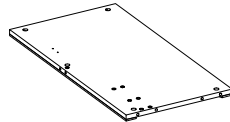


⑤ x1



⑥ x4

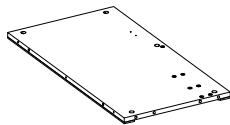


⑦ x1








⑧ x2













⑨ x2












⑩ x2

A	x30	B	x30	C	x34	D	x12	E	x30
									
Ø6x35mm		Ø15x11mm		Ø8x30mm		Ø6.7x48mm		Ø30mm	





F	x20	G	x8	H	x1	I	x24	J	x6
									
Ø4x15mm		Ø5x14mm		M4x57mm		M6x12mm		25x25mm	

K	x8	L	x2	M	x1	N	x1	O	x1
									
100x100mm		50x22mm							




P	x1	Q	x1	R	x2	S	x4	T	x4
									

U	x8	V	x1	W	x1	X	x32
							
				10g		Ø6x15mm	

1

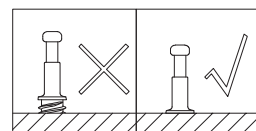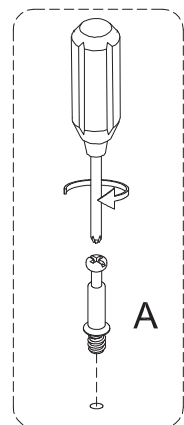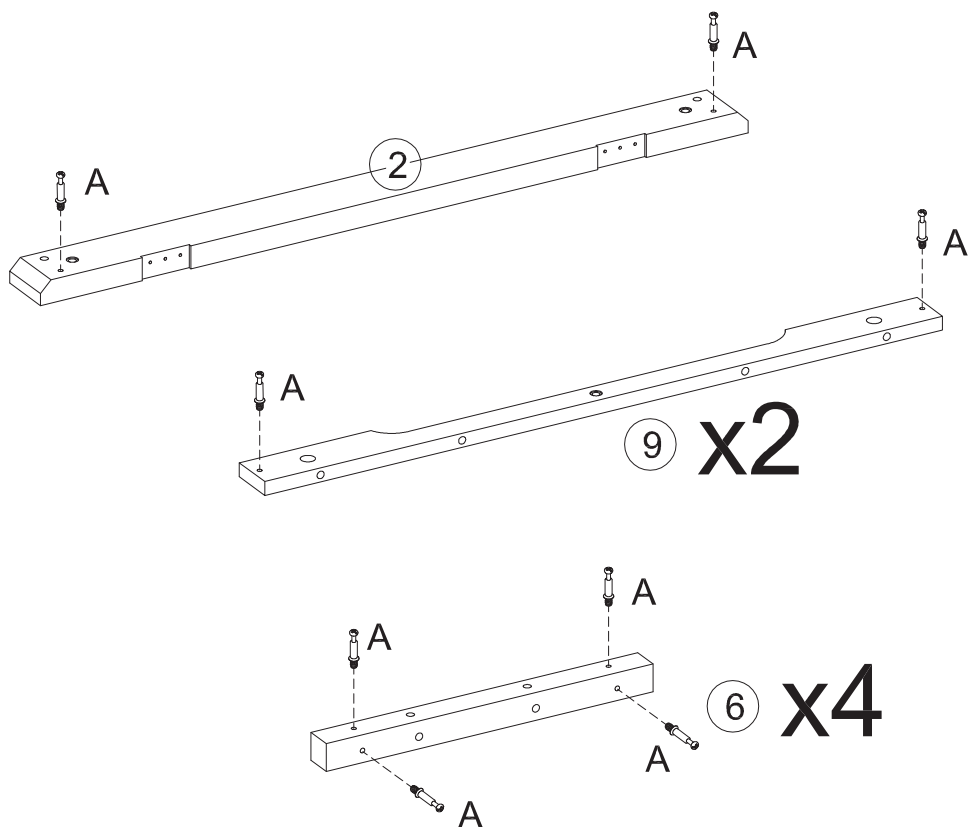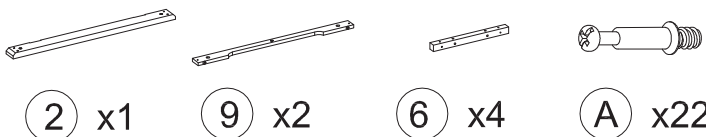



2

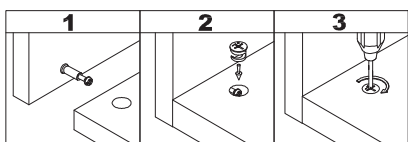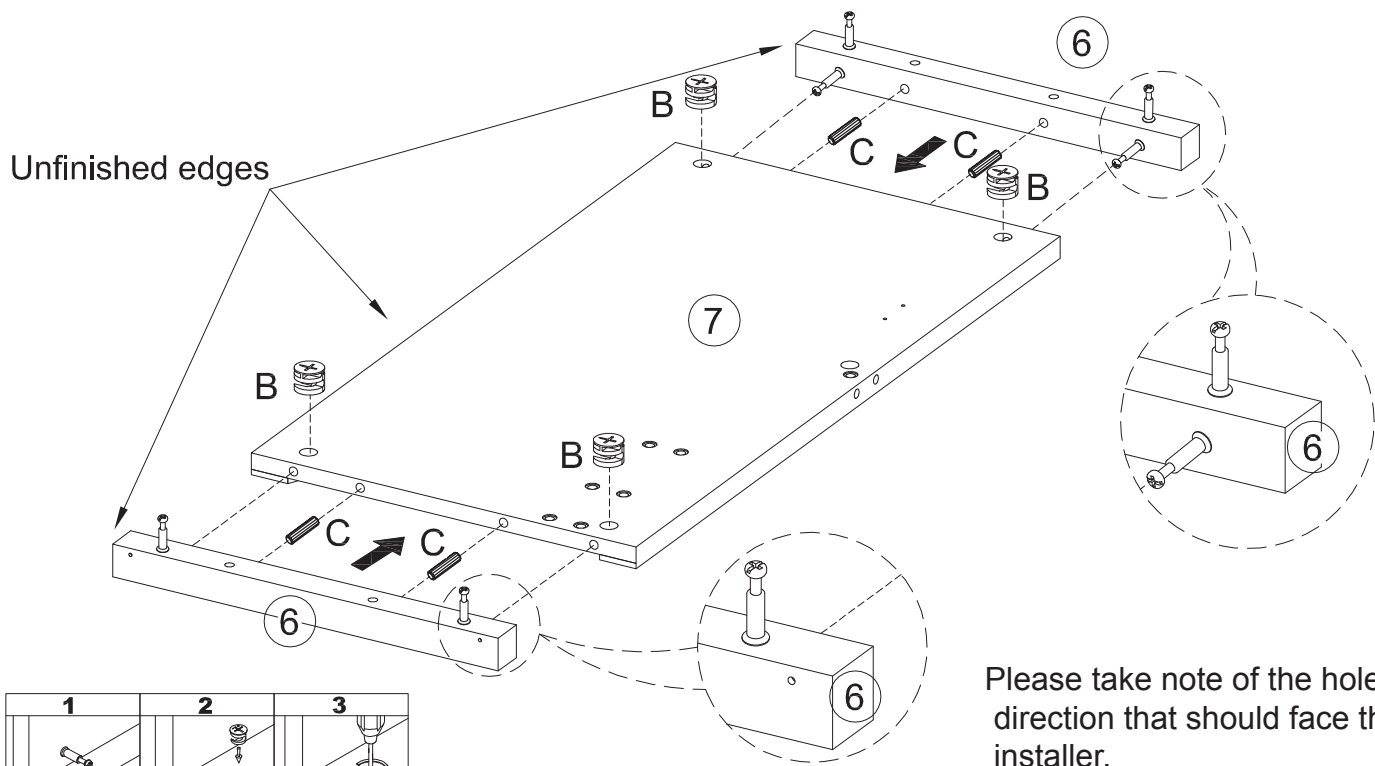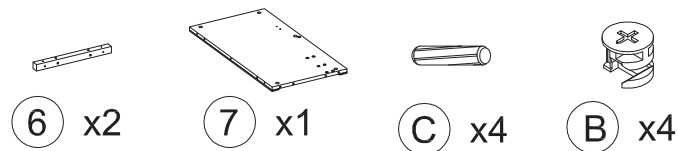


Please take note of the hole direction that should face the installer.

5



3

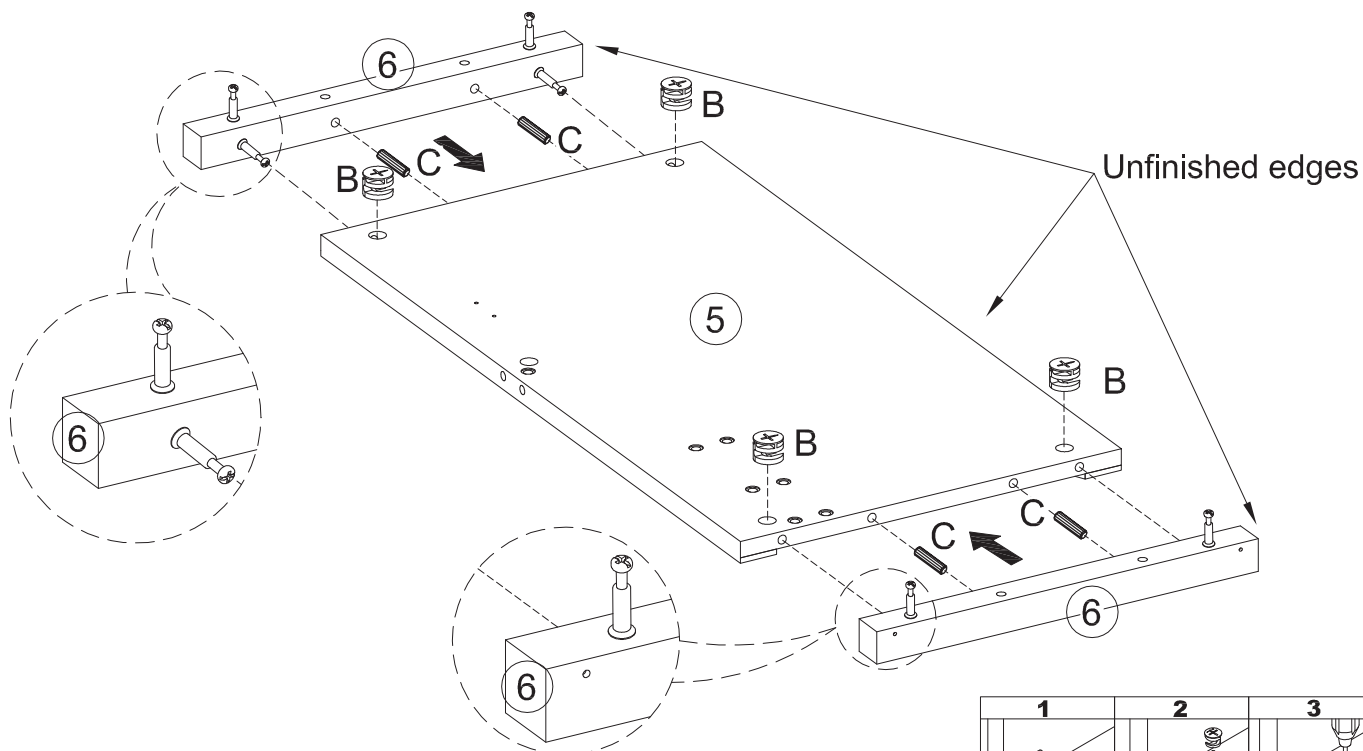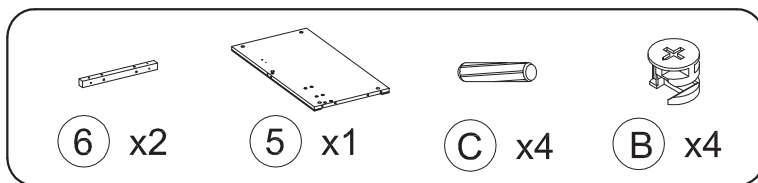

Pay attention to the orientation of the hole.

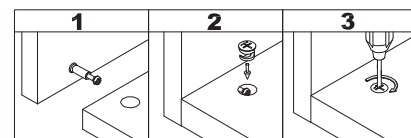


4

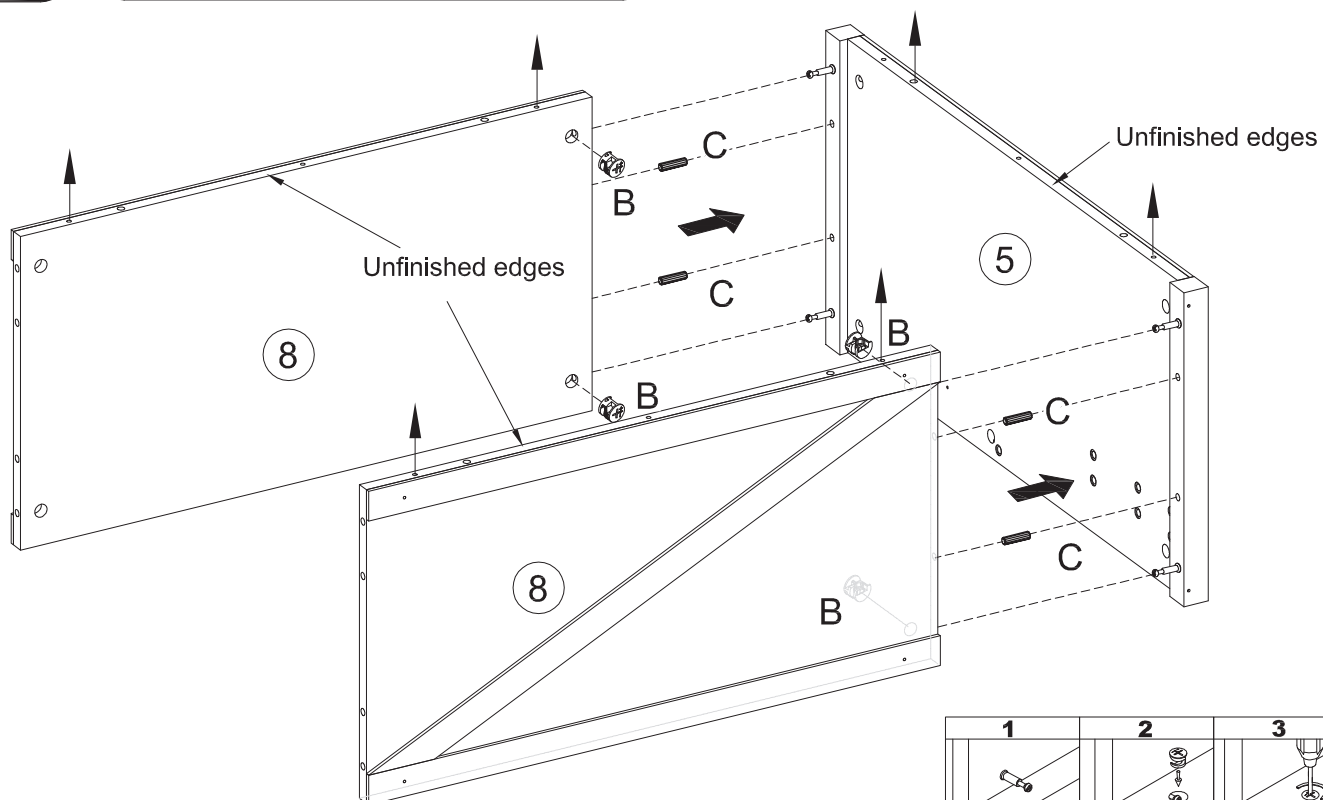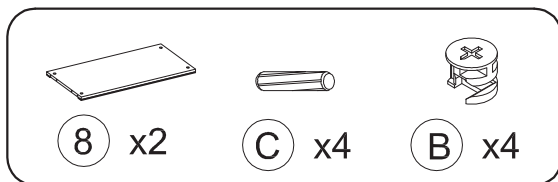

Pay attention to the orientation of the hole.

6

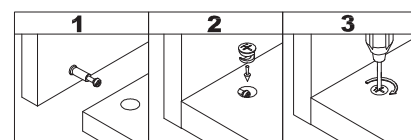


5



(C) x4




(B) x4

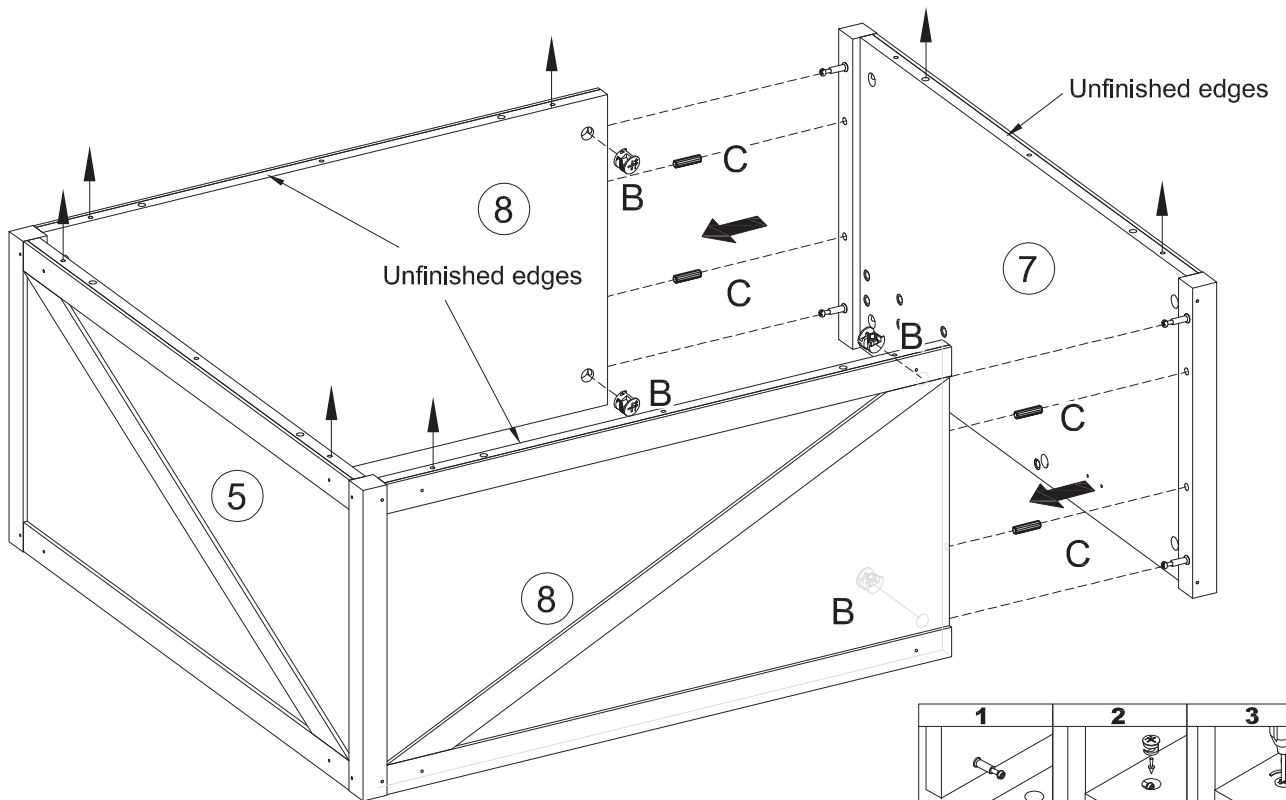

Pay attention to the orientation of the hole.


6



(4) x1





(C) x8



(D) x12





(H) x1

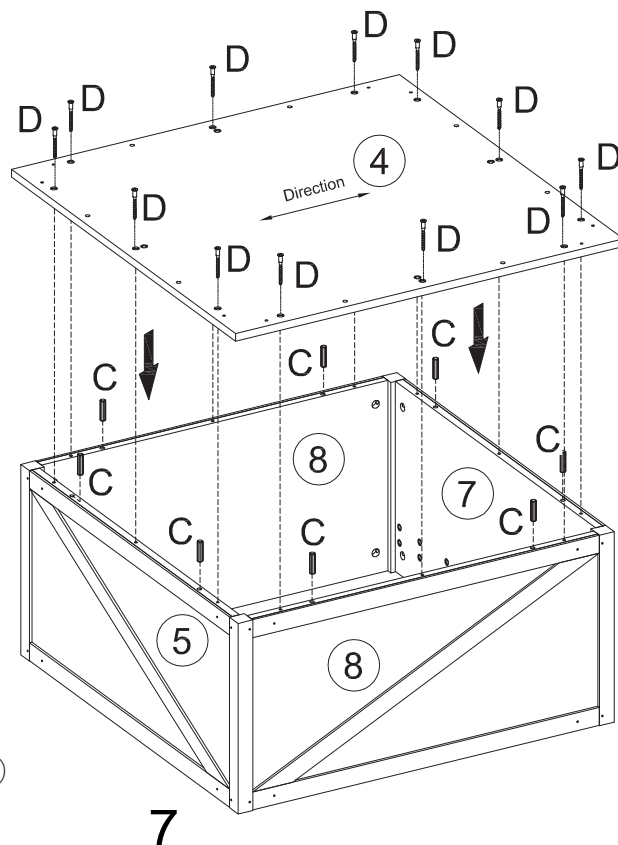
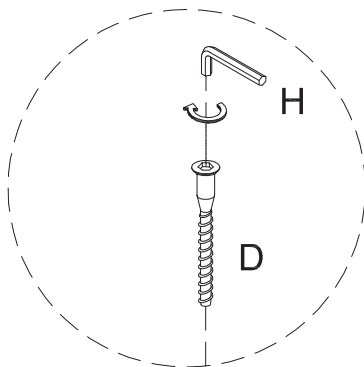


Note: The grain direction of part (4) must be parallel to part (8).



7

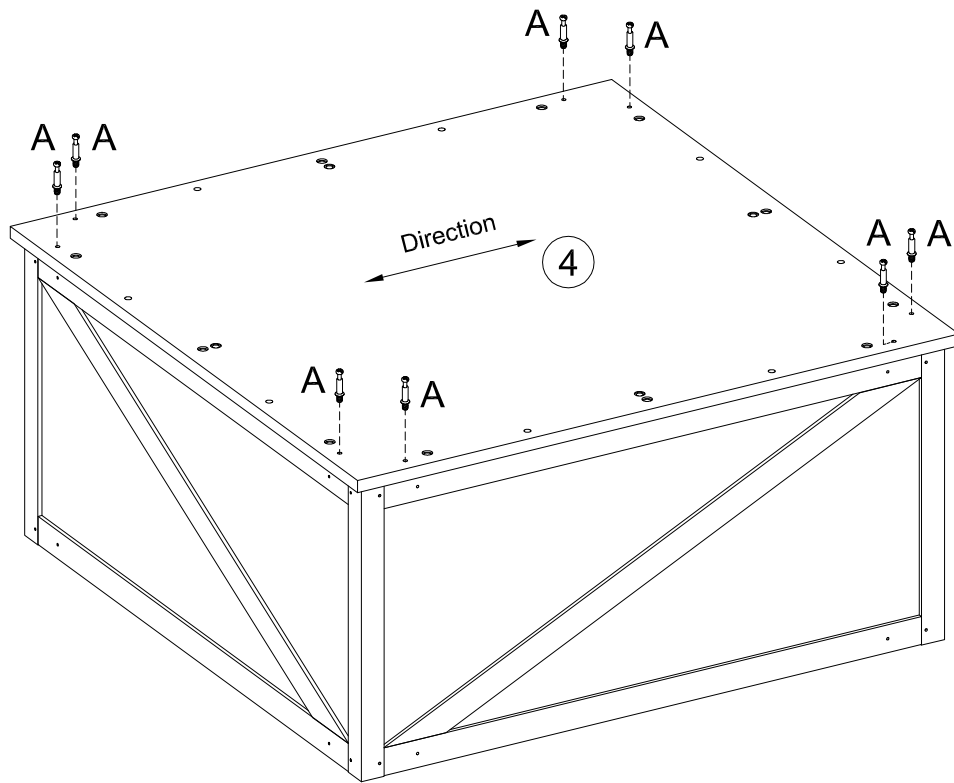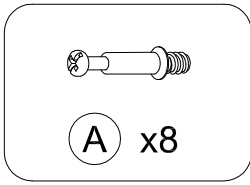


8

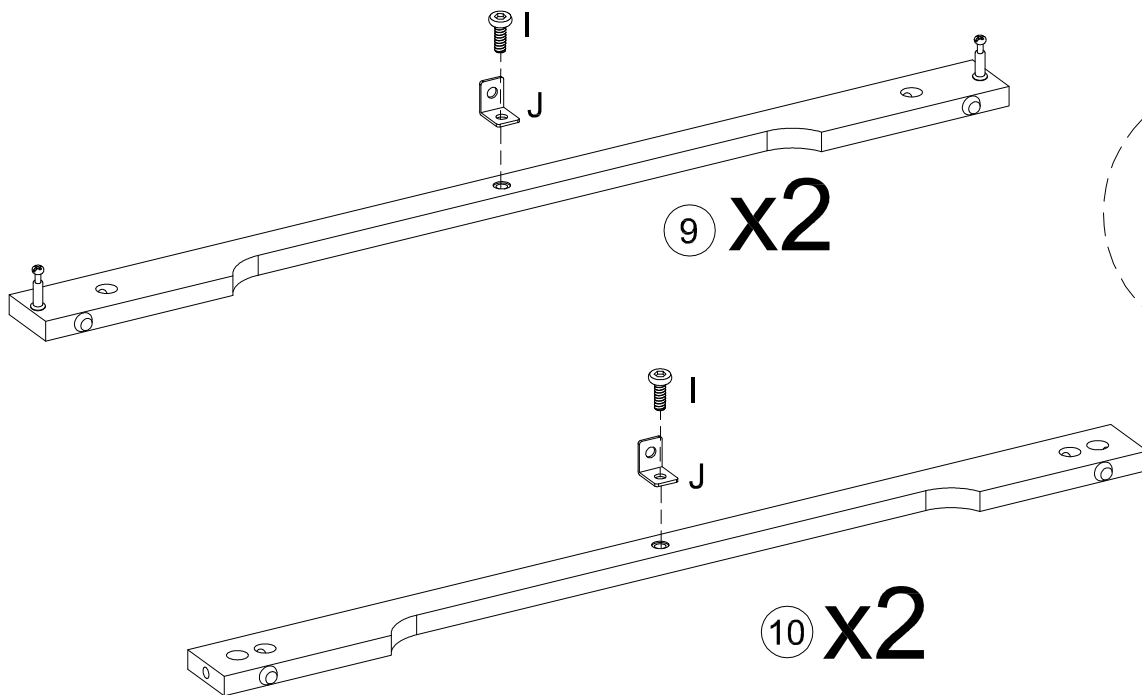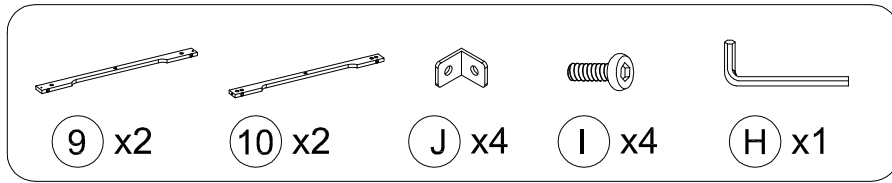




9

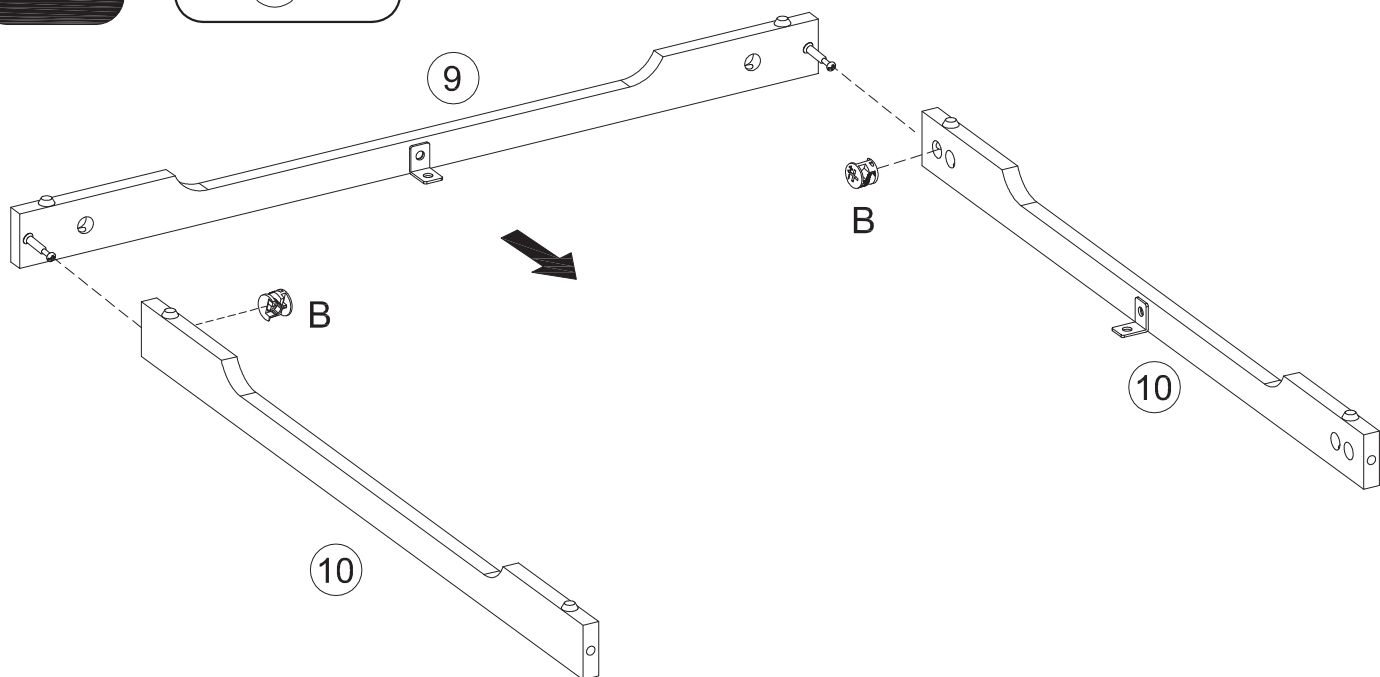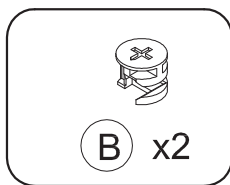

Please take note of the curved directions of parts ⑨ & ⑩.

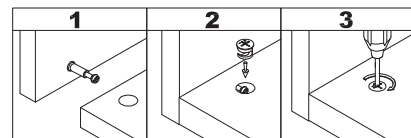

10

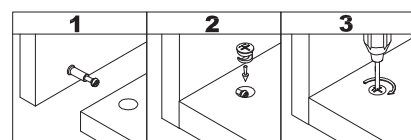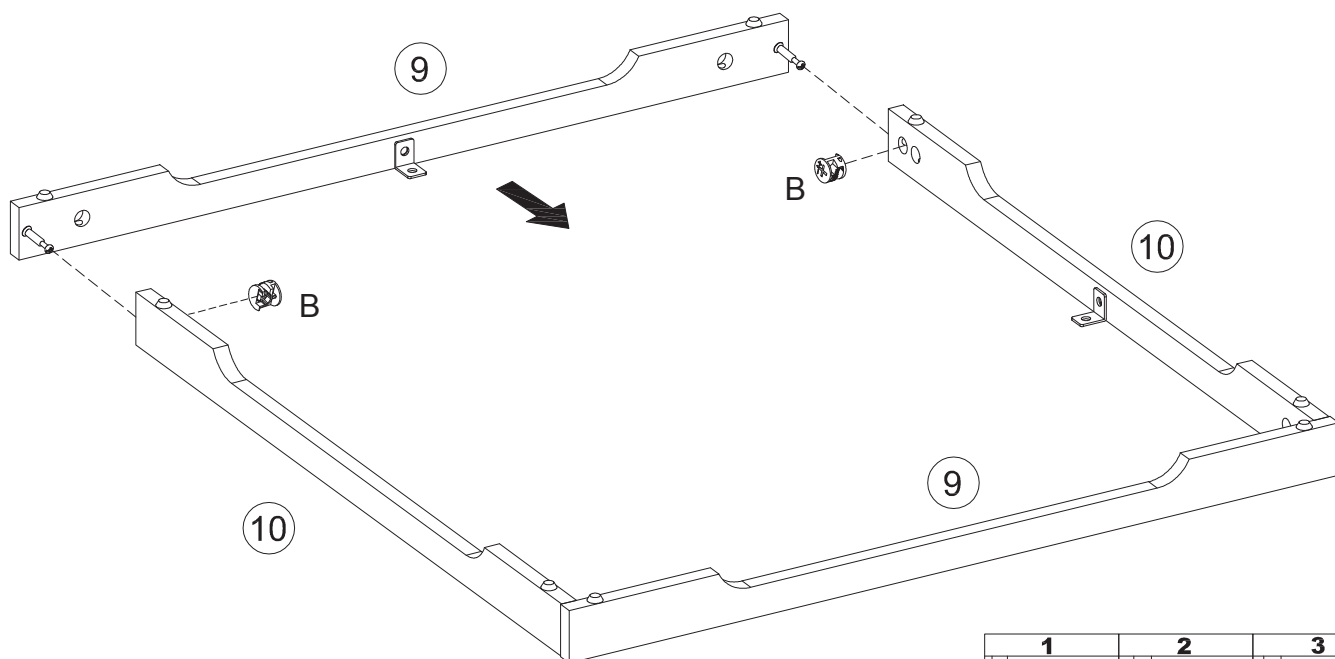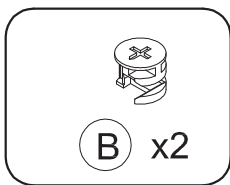

9


11




(C) x8



(B) x8

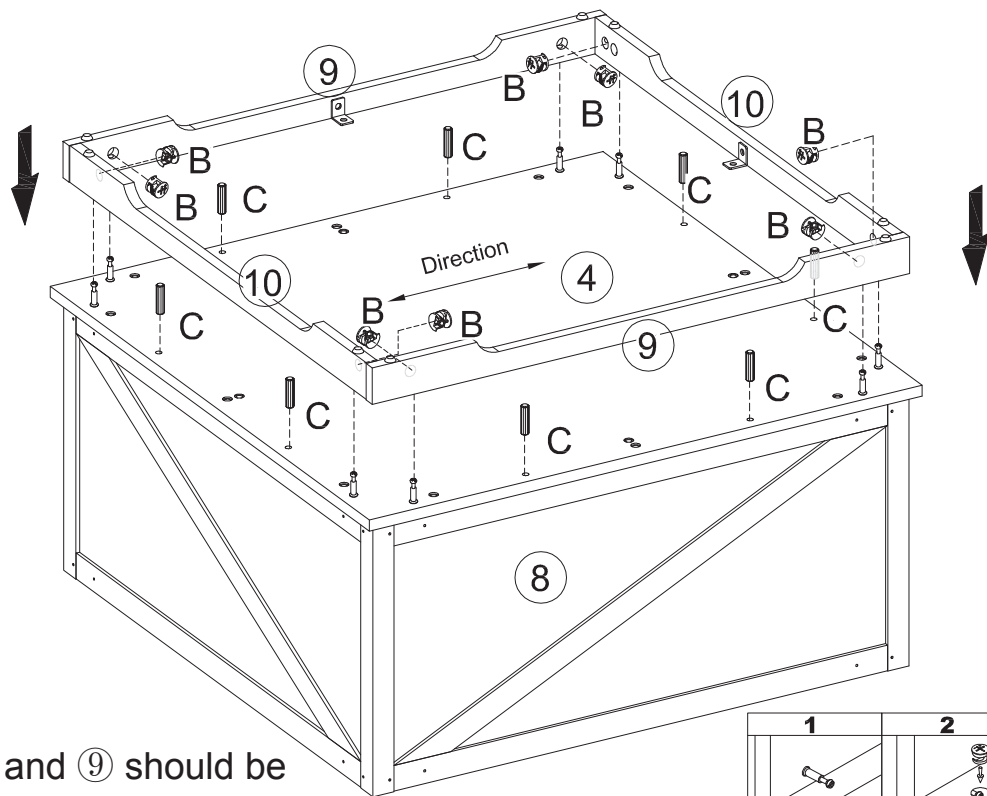

Note: Panels ⑧ and ⑨ should be installed on the same surface.

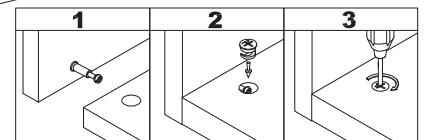



12



(I) x4



(H) x1

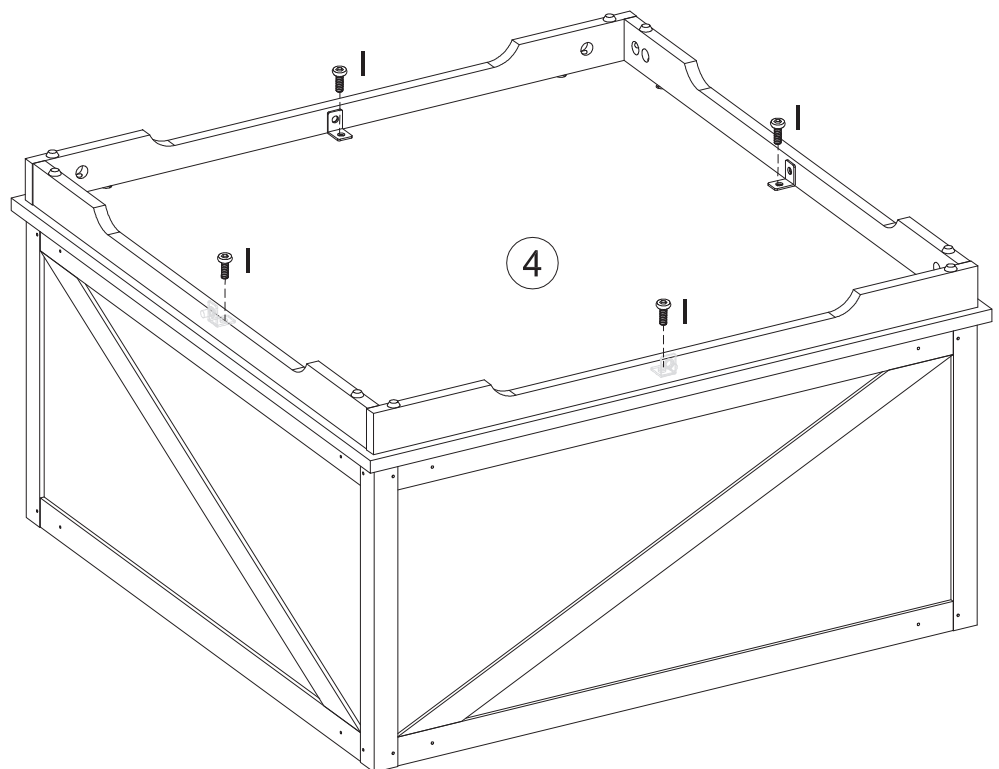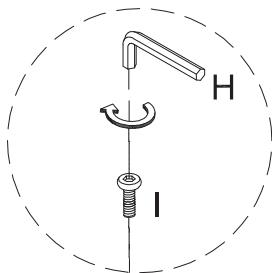


10


13



(X) x16



(K) x4

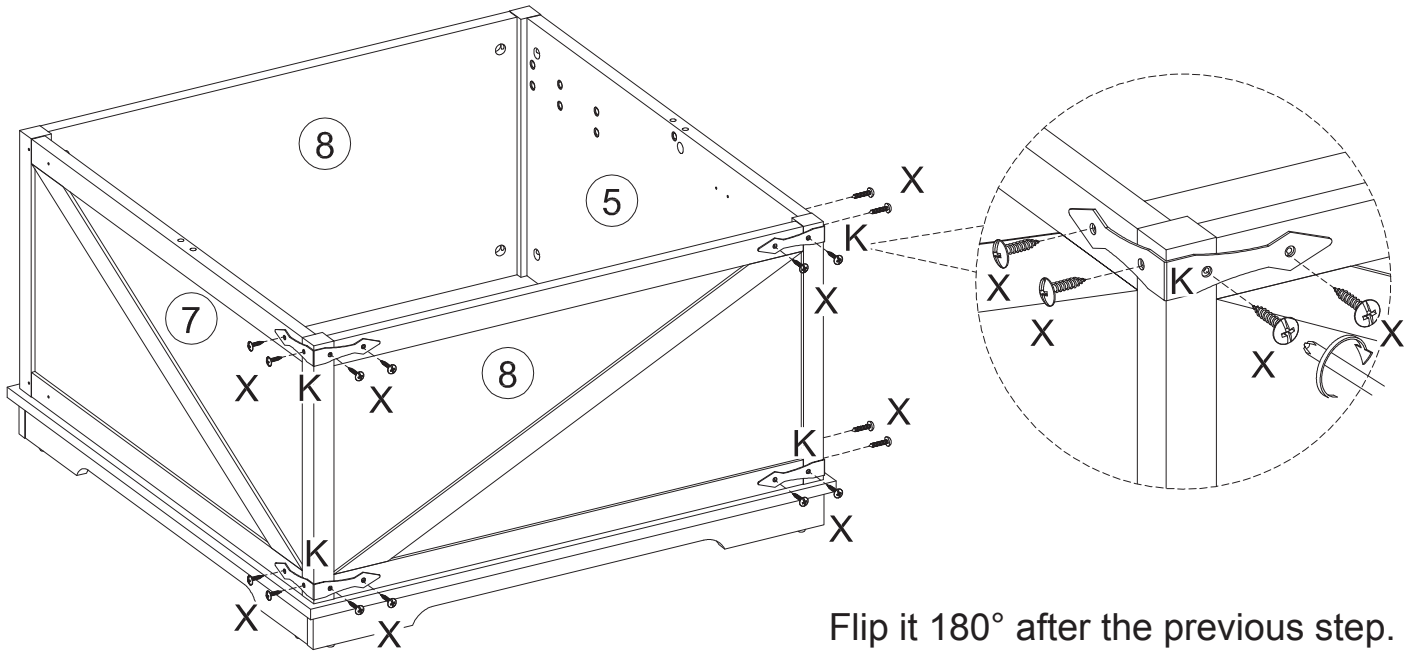

Flip it 180° after the previous step.


14




(X) x16



(K) x4

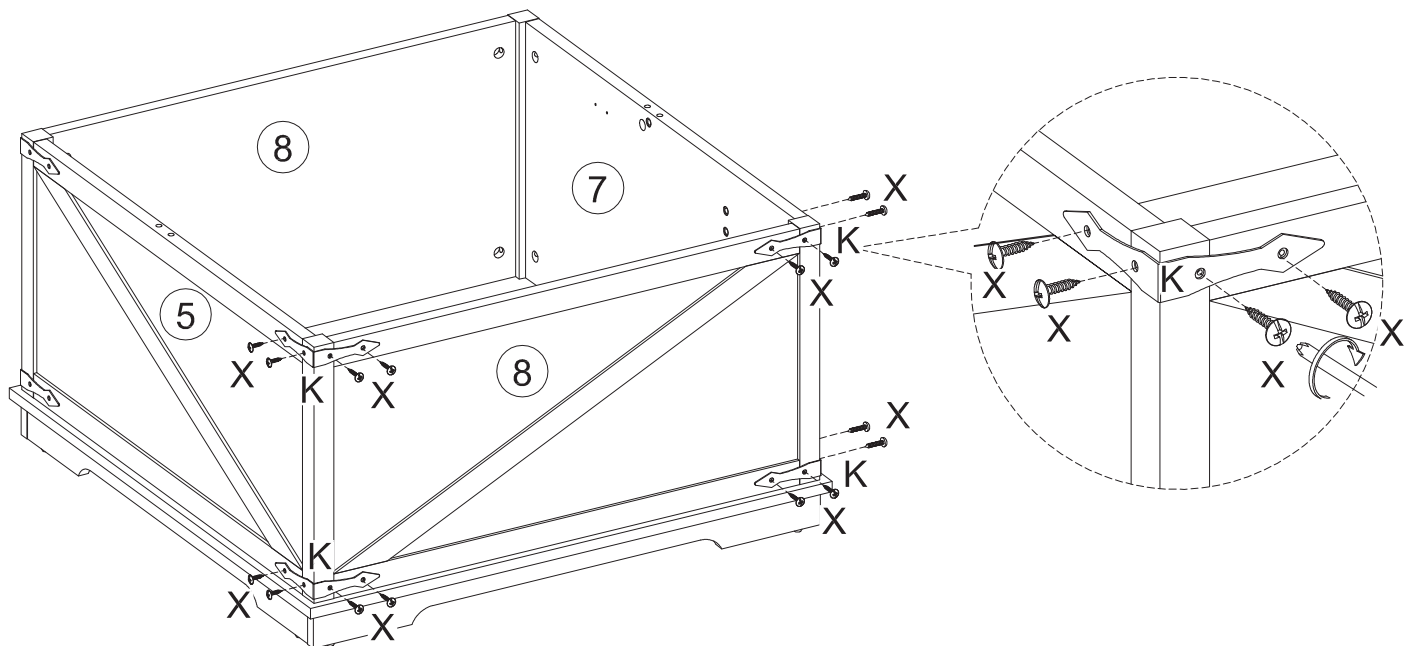

15




3 x1



F x6



L x2

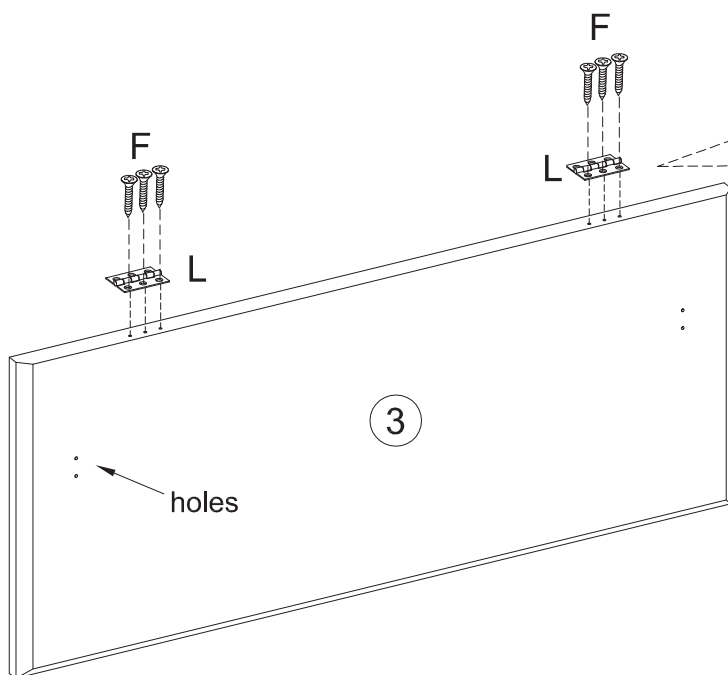



16



2 x1




F x6

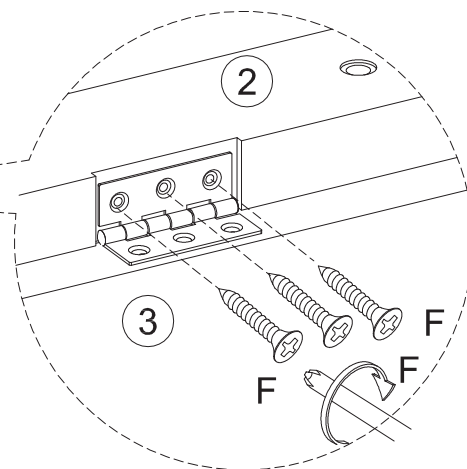
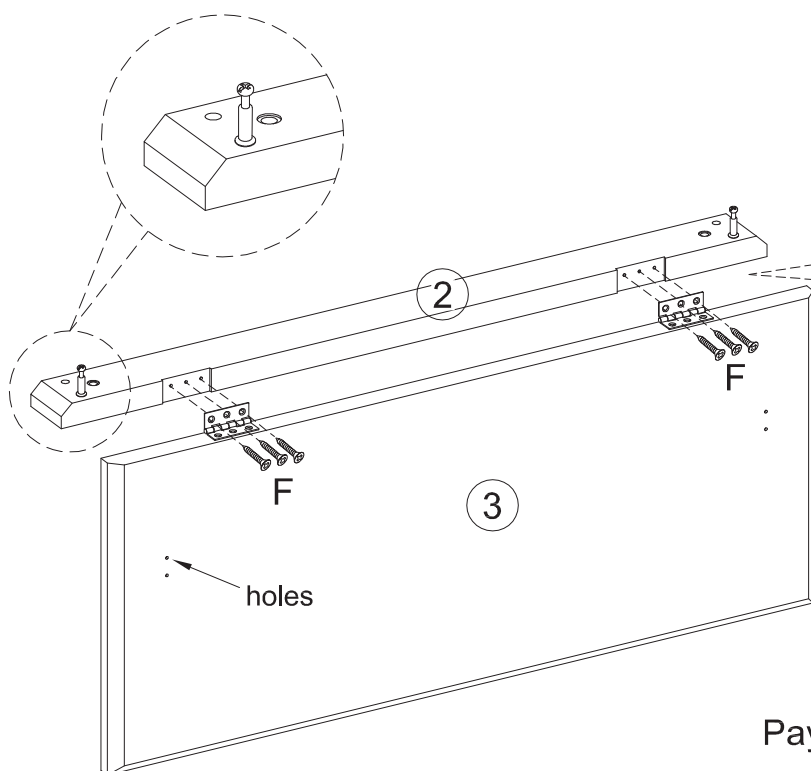


Pay attention to the orientation of the hole.




17

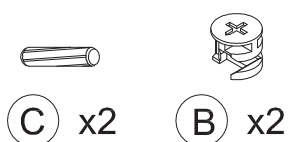

Note: Keep the fold of part ③ in the middle of the tabletop.

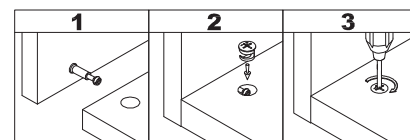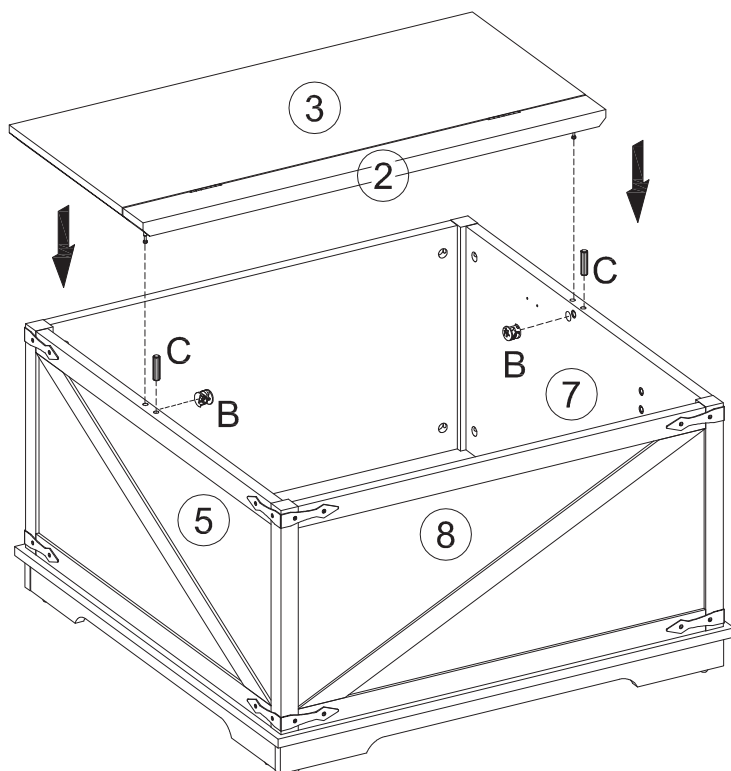

18

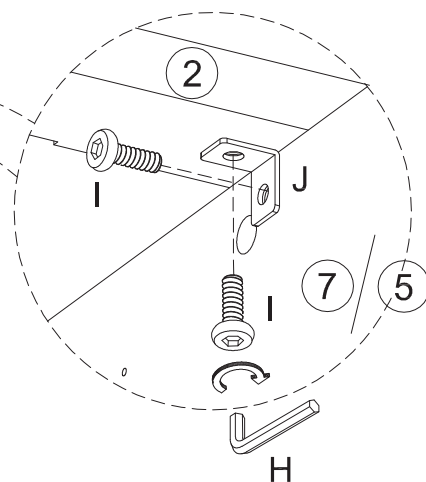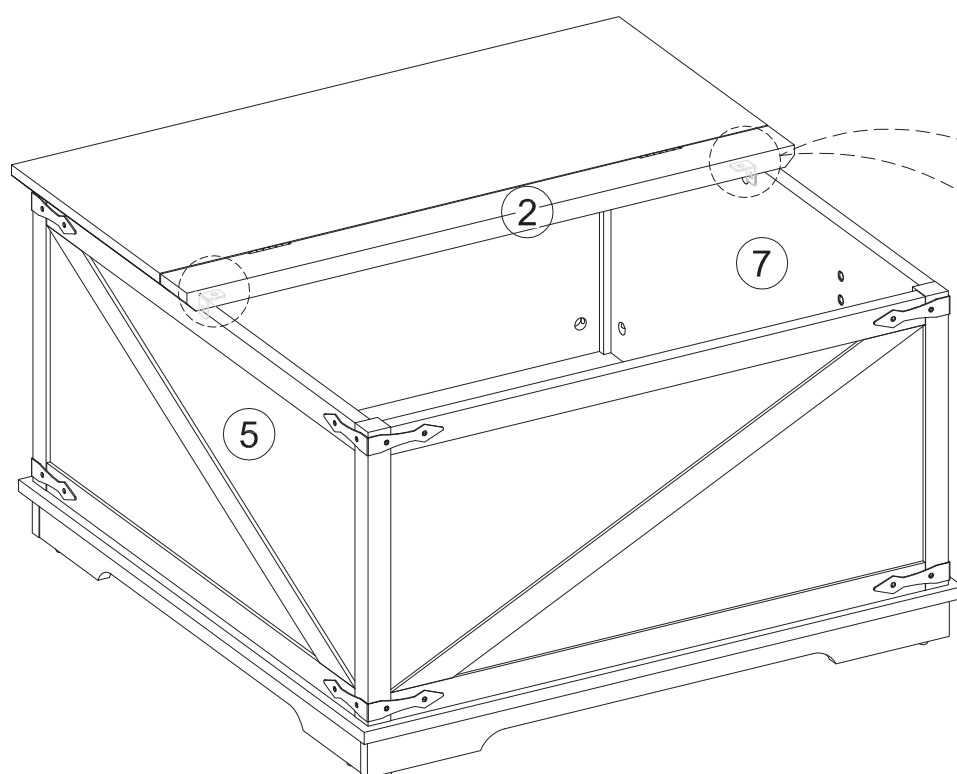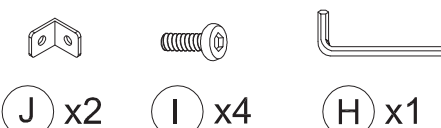



19



(N) x1




(F) x4

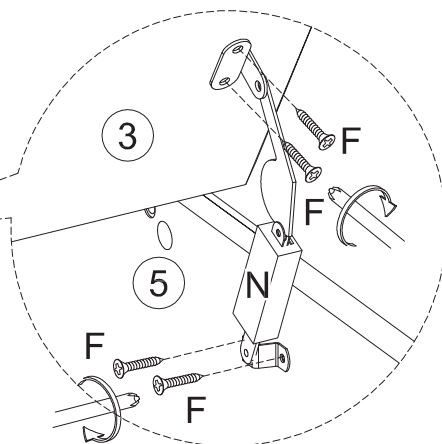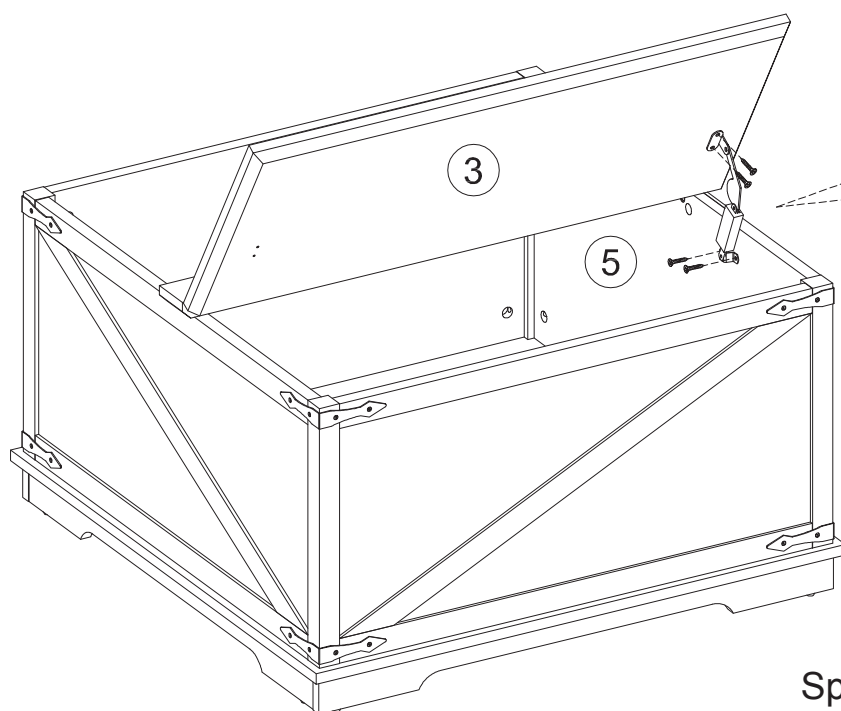

Spin it 180° after the previous step.



20




(M) x1



(F) x4

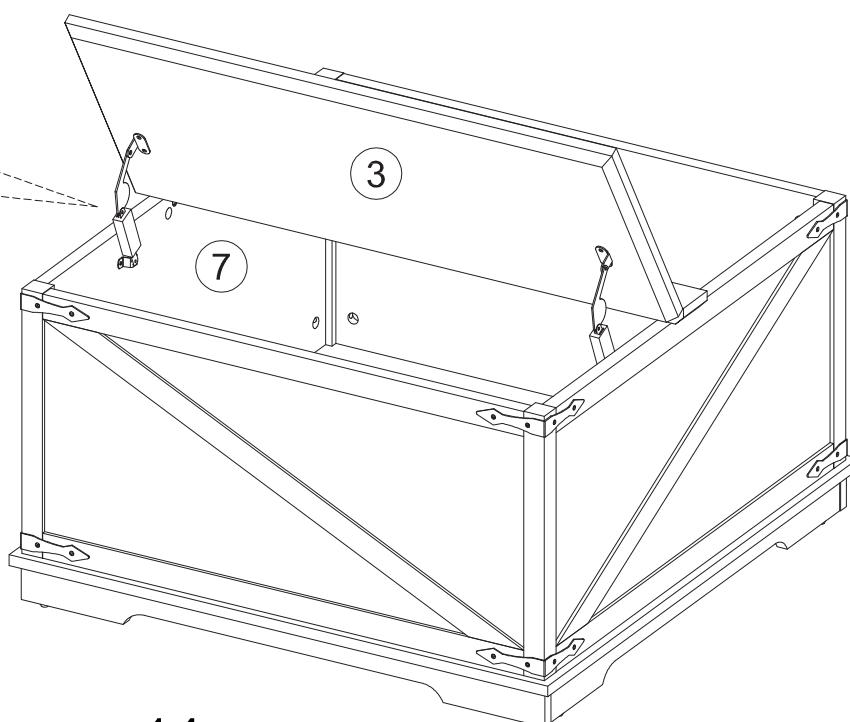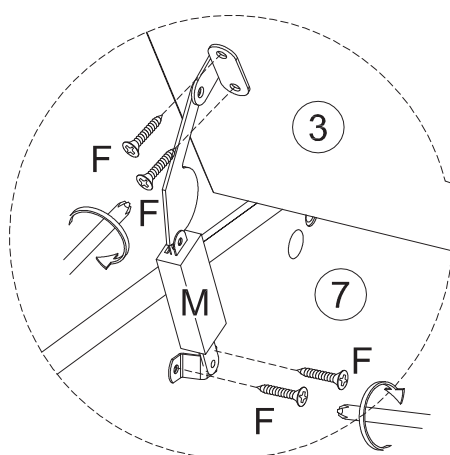


21




① x1



G x8








O x1



P x1

Tips: It's easier to install this lifting mechanism by loosening one screw of the hydraulic rod.

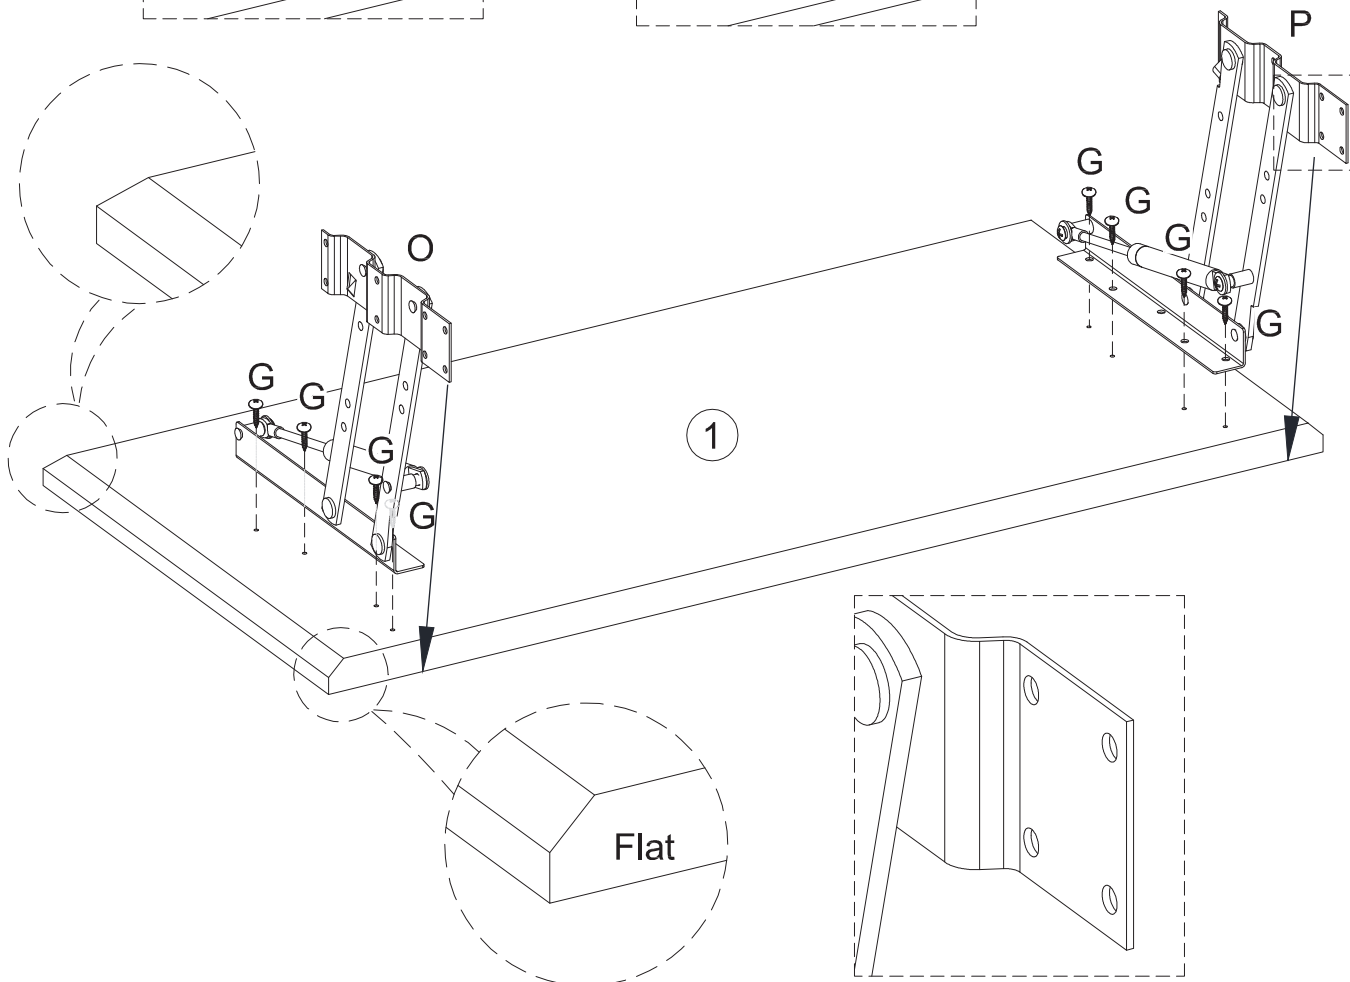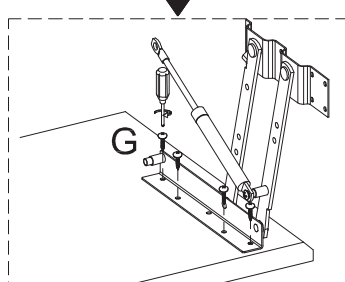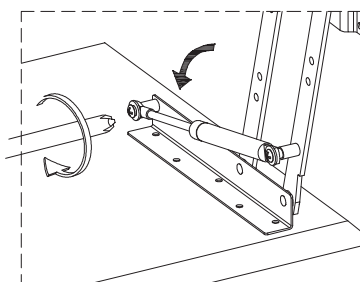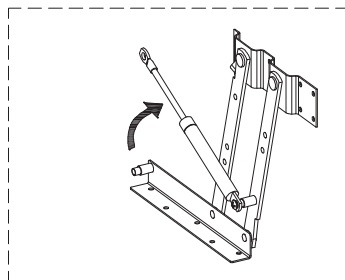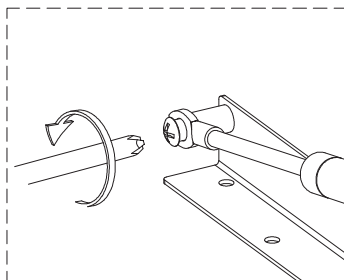

The side of part O/P with 4 holes and the flat side of panel ① should be on the same side.


22



I x12



H x1

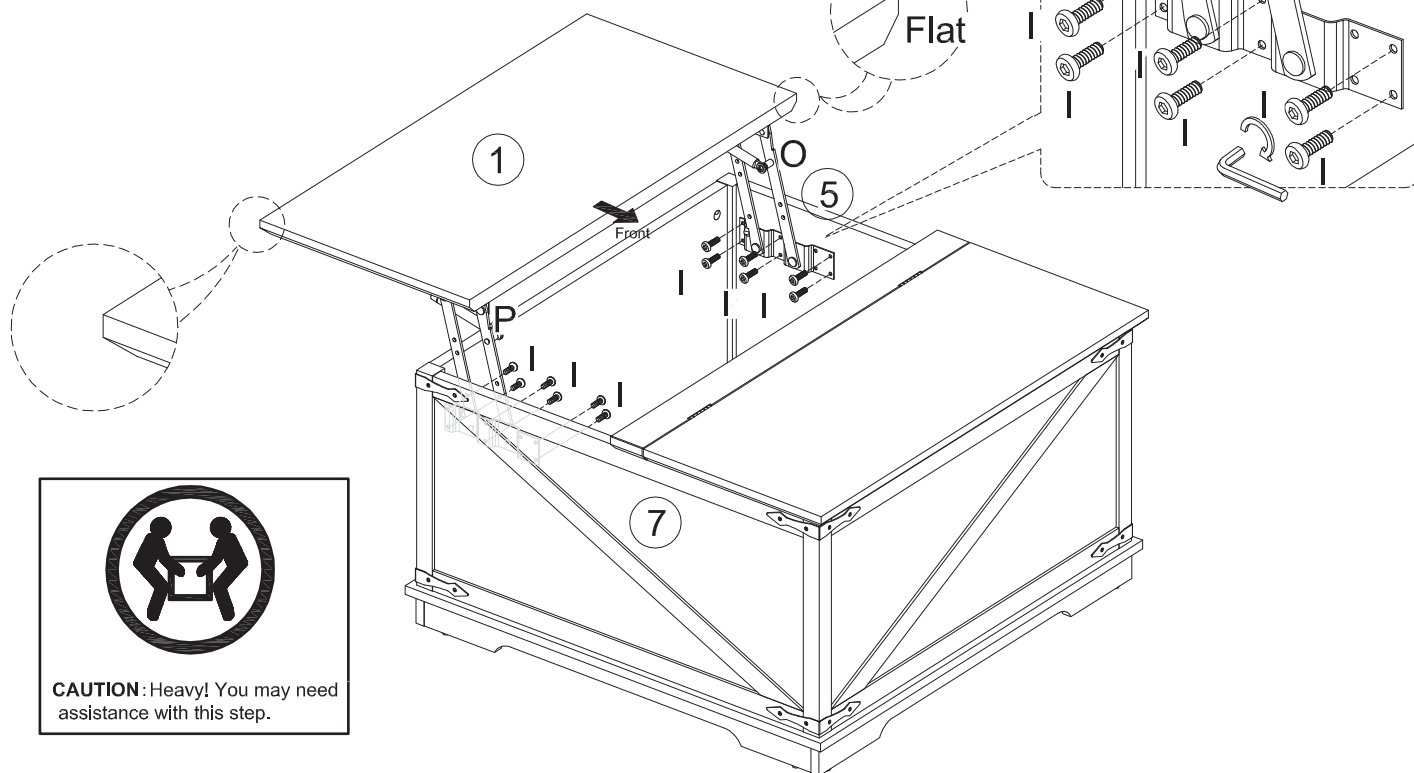

23



Q x1



R x2




S x4



V x1



U x4

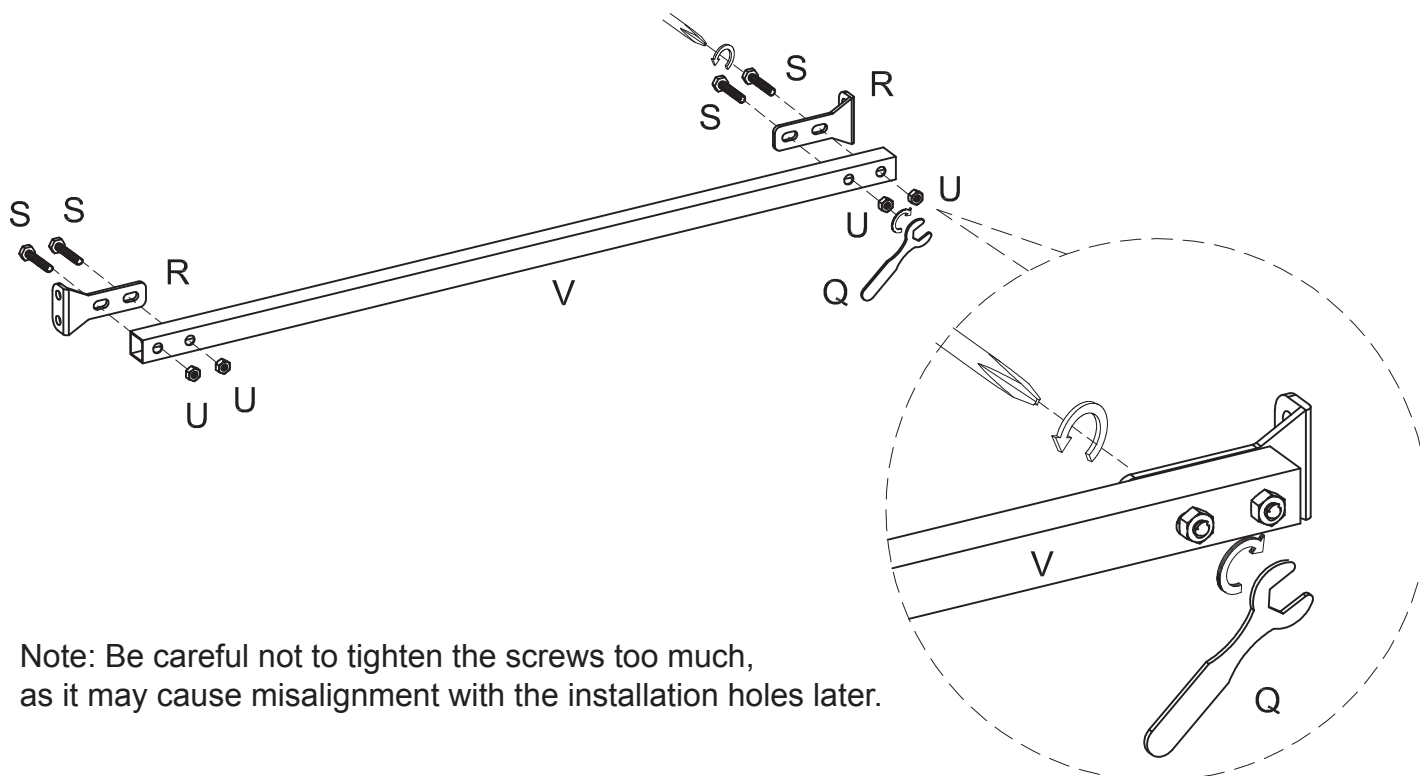

24




Q x1






T x4



U x4

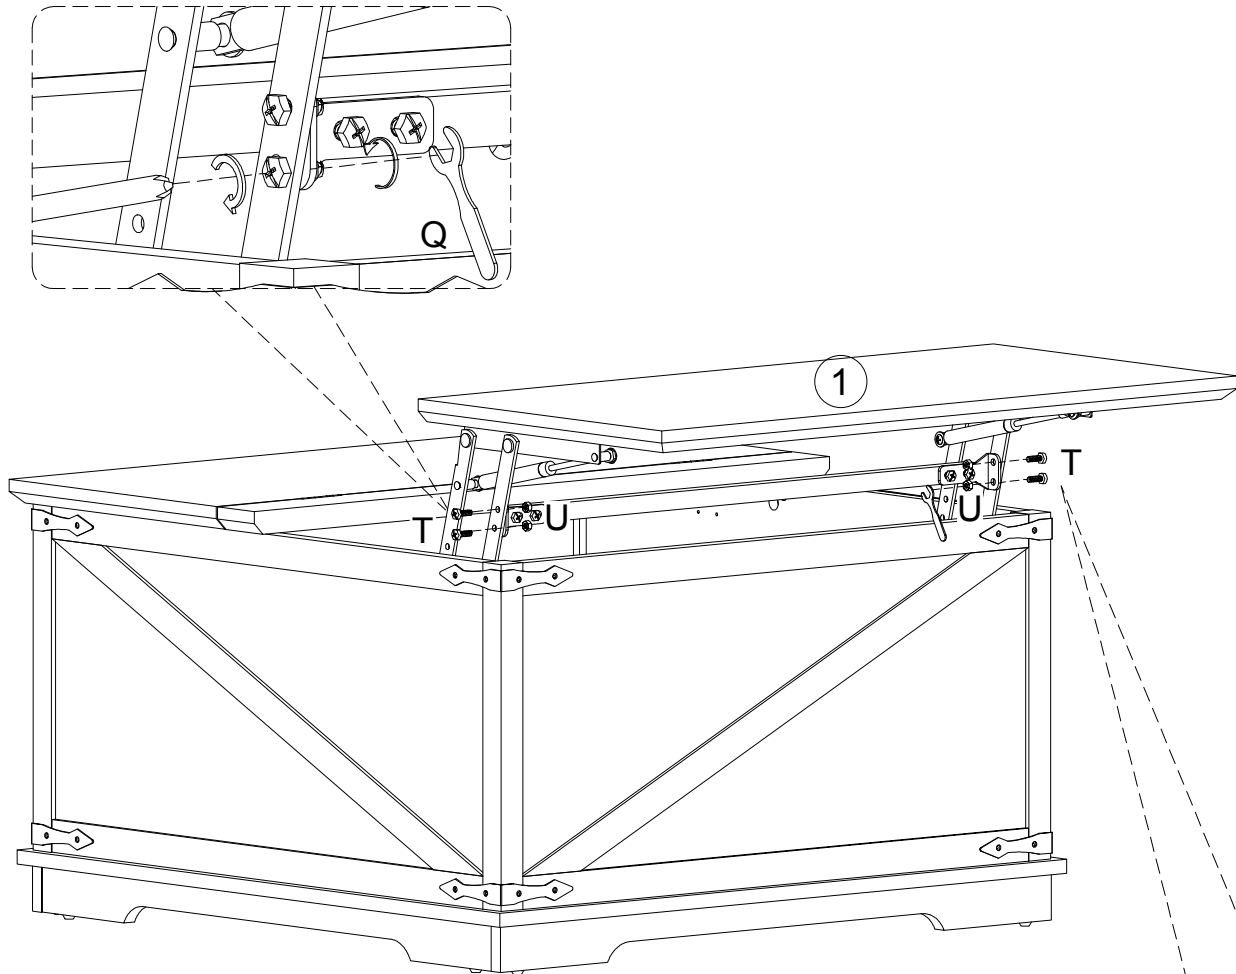

After this step, reinforce all the screws on the lifting mechanism.

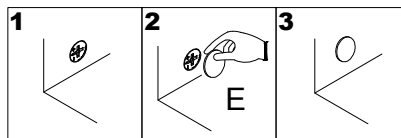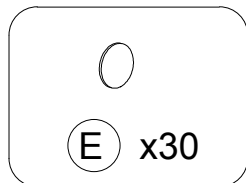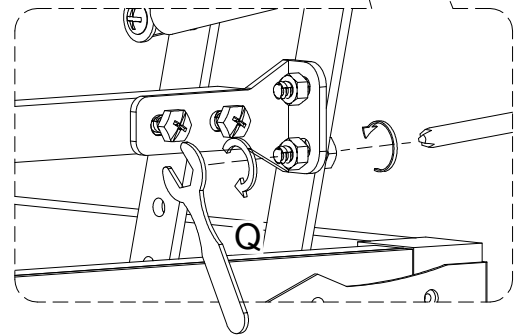

.Stick stickers (E) on cam locks (B).

Installation Completed



Pure & Easy