

## **ASSEMBLY INSTRUCTIONS**

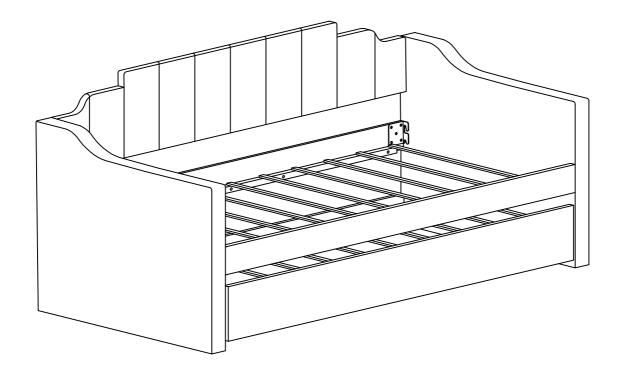

## IMPORTANT NOTE

- \*\*PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- \*\* BEFORE YOU BEGIN, KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- \*\*DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP


## **ASSEMBLY INSTRUCTIONS**

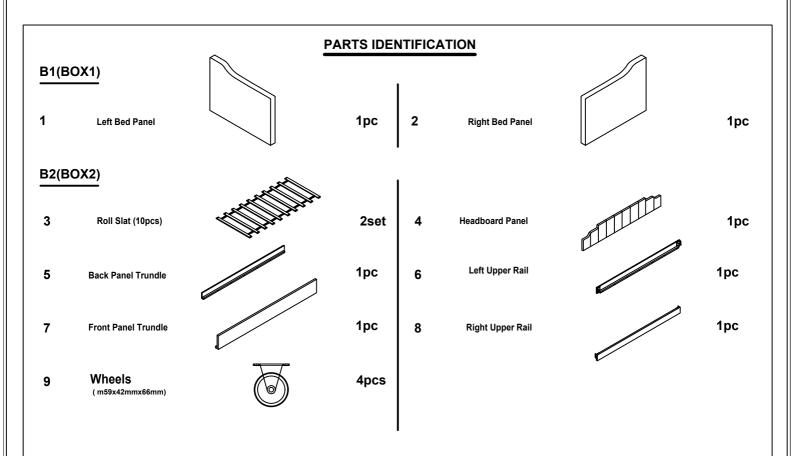


#### HARDWARE IDENTIFICATION

**B1(BOX1) HARDWARES IN** 


Α	Flat Head Screw ( m4x15mm-RBW)	<del>  111111</del>	40pcs	В	Flat Head Screw ( m4x30mm-RBW)	fmmmm>	40pcs
С	<b>Bolt</b> (Ø 5/16 "X25mm)		16pcs	D	Spring Washer (Ø 5/16 "-RBW)		16pcs
E	Flat Washer (Ø 5/16 "-RBW)		16pcs	F	Patch (100mmx40mmx2mm)		4pcs
G	Allen Wrench (M4x75mm x32mm)		1pc	Н	Square Patch ( 38mmx38mmx25mmx2mm)	000	4pcs

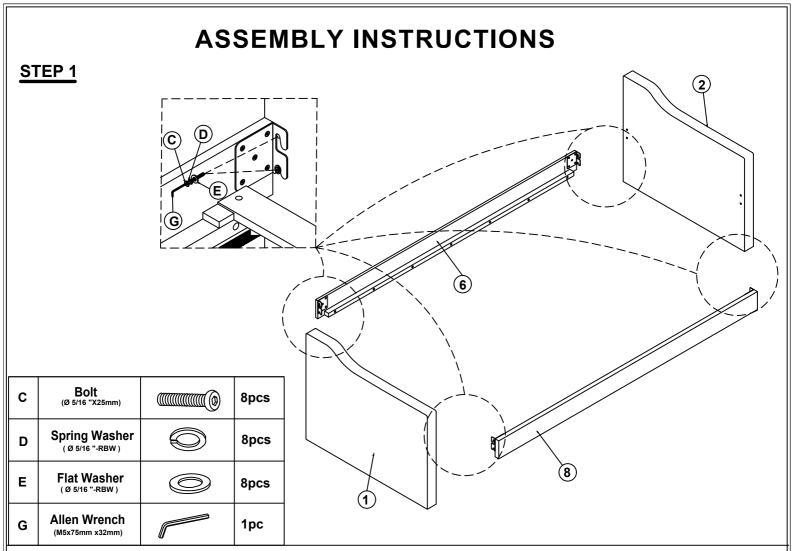

## STEP 2

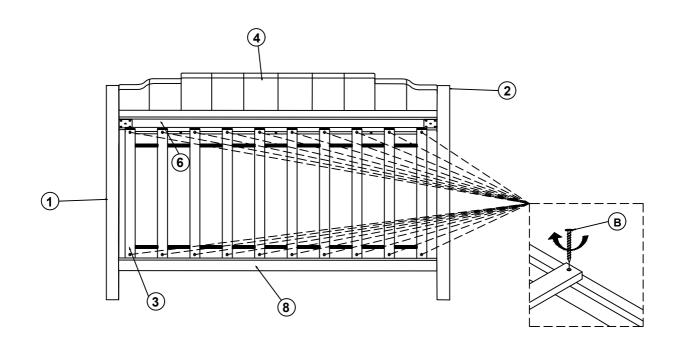


В	Flat Head Screw ( m4x30mm-RBW)	<del>  mmmm</del>	20pcs
---	--------------------------------	-------------------	-------

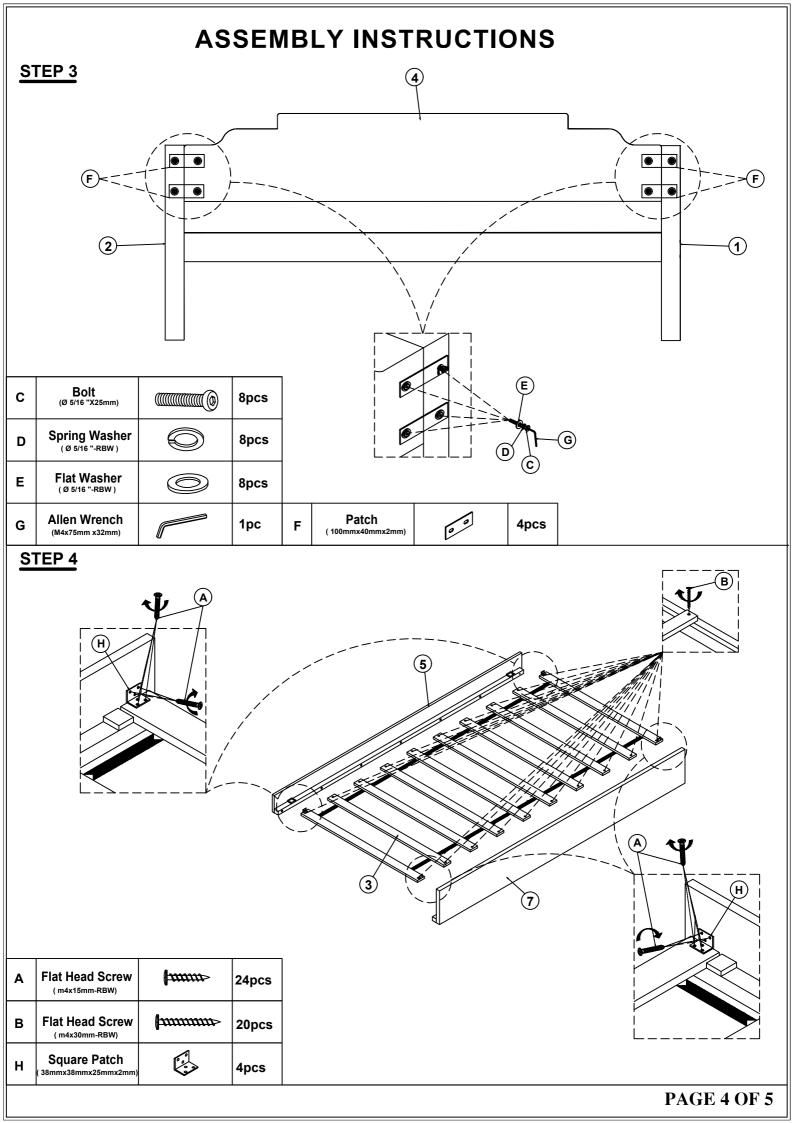





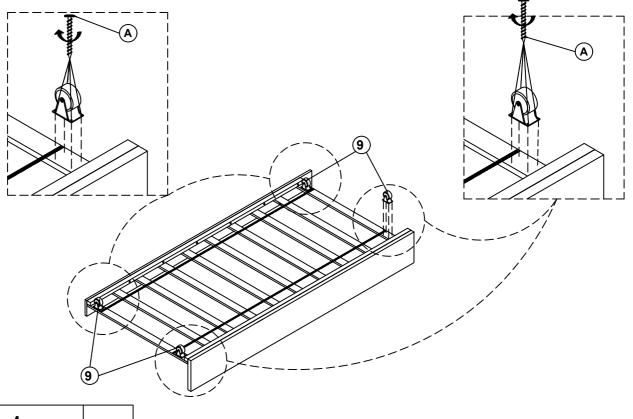

A	Flat Head Screw (m4x15mm-RBW)	<del>''''''</del>	16pcs
9	Wheels (m59x42mmx66mm)		4pcs

# STEP 6 COMPLETE

