

INDEPENDENT INSTRUCTION

Resources Required

- A. Drill with 11/64" bit
- B. Rear latch (04264)
- C. Front latch (04263)
- D. Rivets (4233)

Procedure

1. Drill out the rivets of the existing latch with a 1/8" drill (Fig. 1).
2. Increase hole diameter with a 11/64" drill (Fig. 2).



Fig. 1



Fig. 2

3. Install the front latch (3A) and rear latch (3B) with the rivets provided.

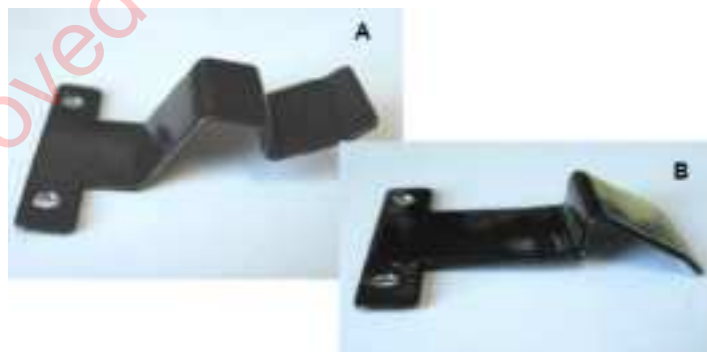


Fig. 3

INSTRUCTION INDÉPENDANTE

Resources Required

- A. Perceuse avec mèche 11/64"
- B. Loquet arrière (04264)
- C. Loquet avant (04263)
- D. Rivets (4233)

Procedure

1. Enlever les rivets existants avec une mèche de 1/8" (Fig. 1).
2. Agrandir les trous avec une mèche 11/64" (Fig. 2).



Fig. 1



Fig. 2

3. Installez le loquet avant (3A) et le loquet arrière (3B) avec les rivets fournis.

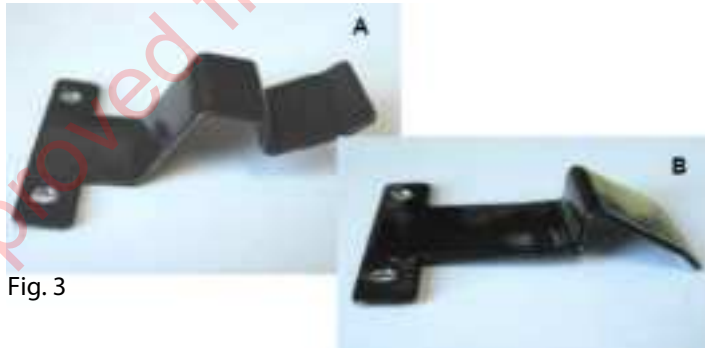


Fig. 3