


Assembly Instructions

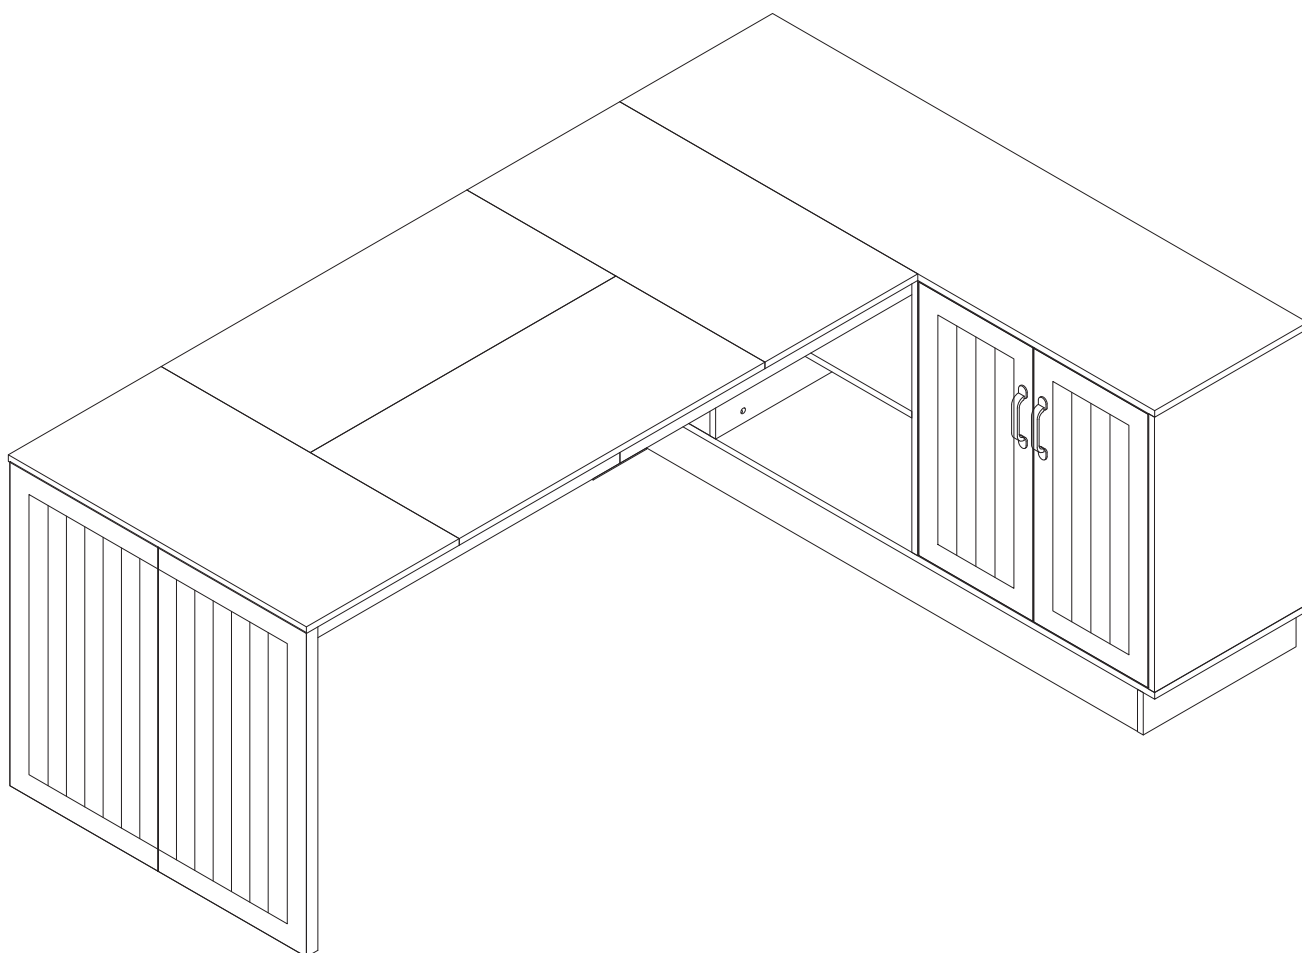

Executive Desk

Model No.
HOGA-F2271-A

Contact Us




We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

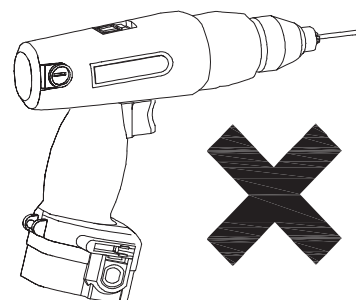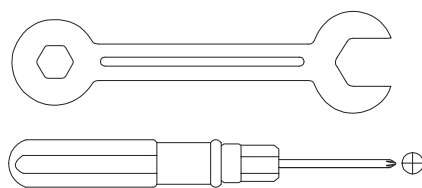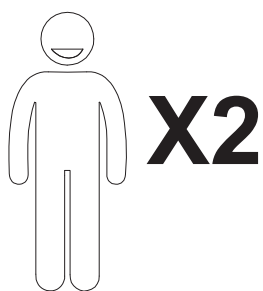



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

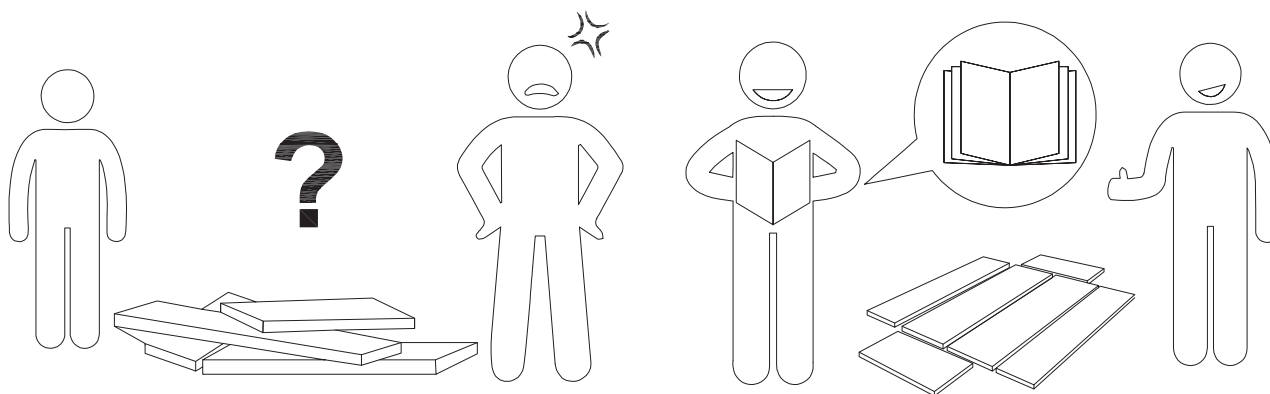

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.












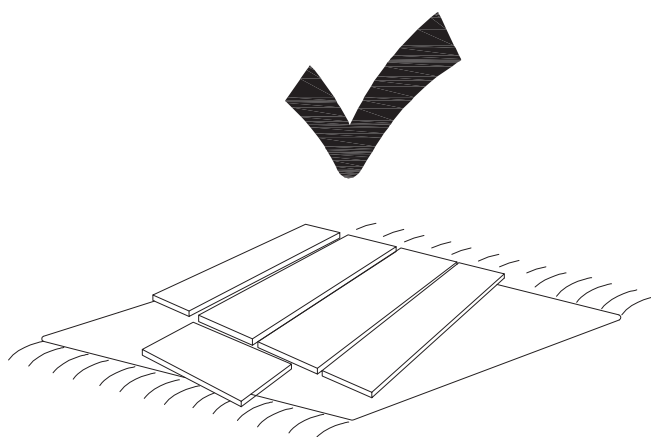
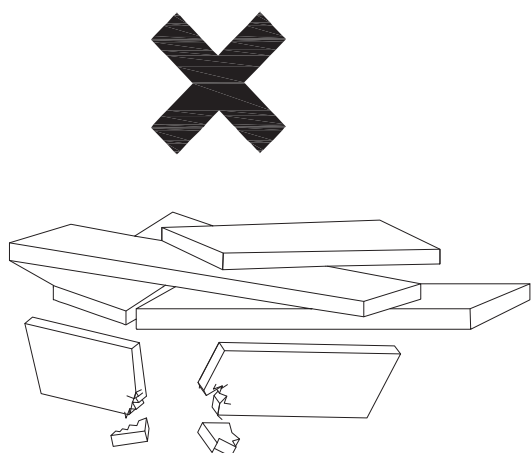


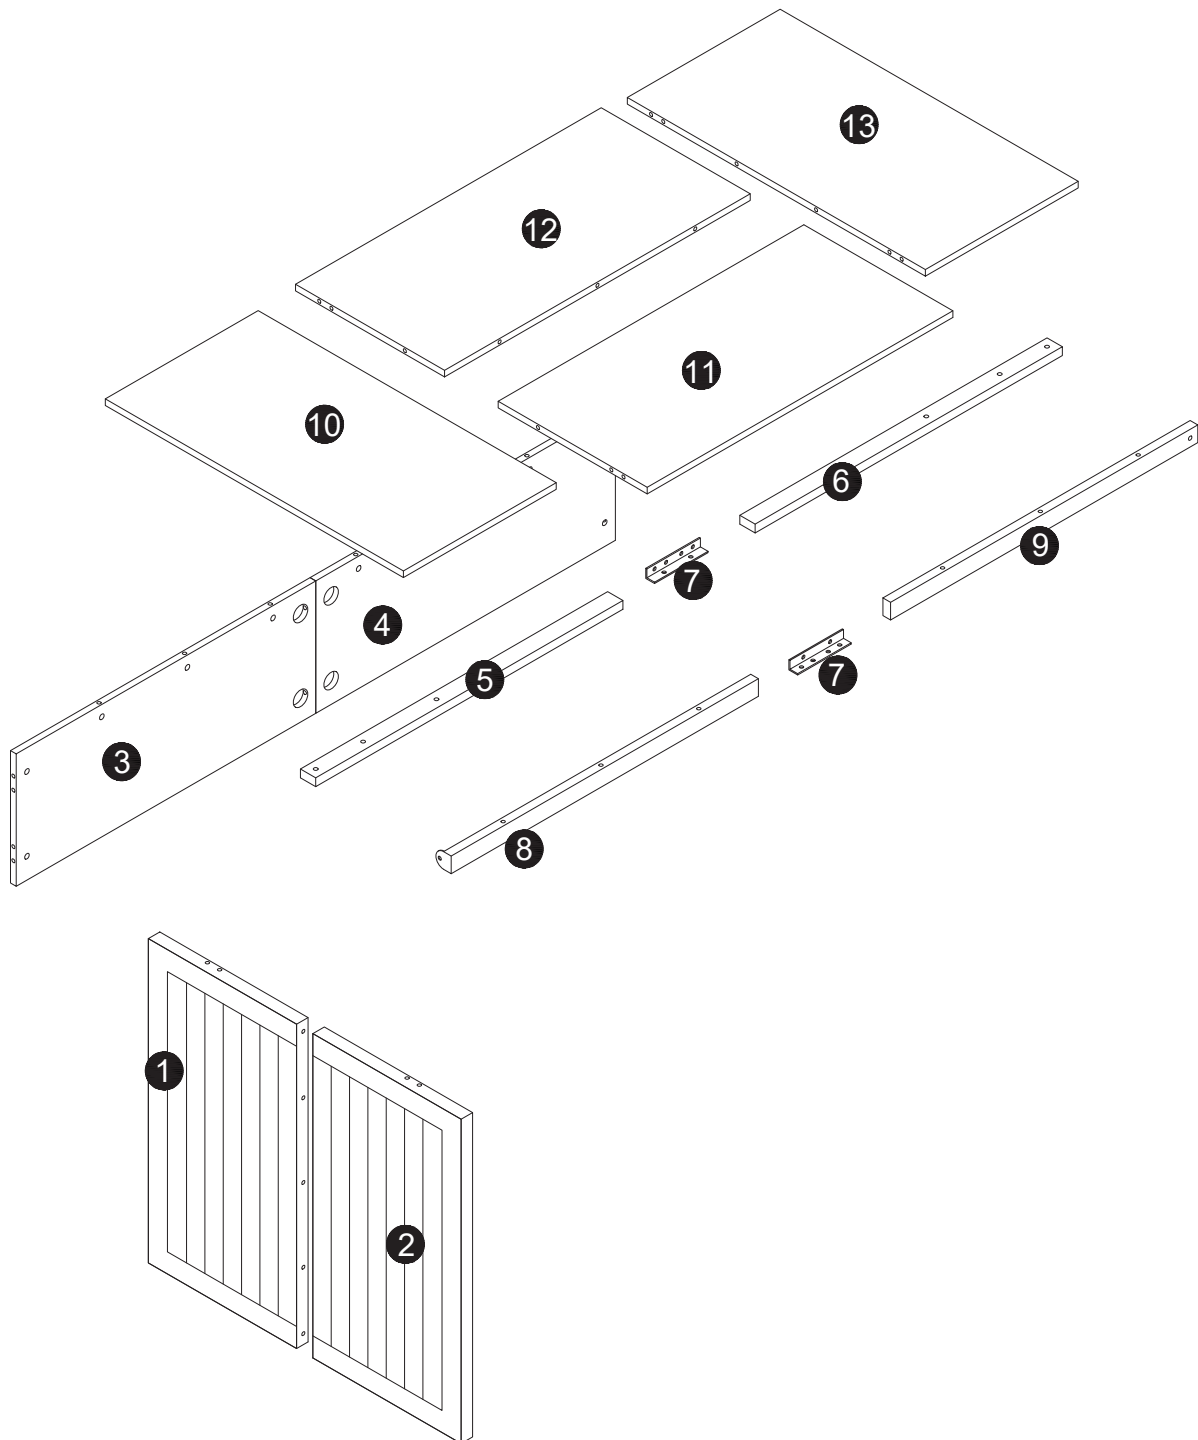







⚠ Caution







Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
 Contact us for a free replacement if you encounter any damaged or missing parts.

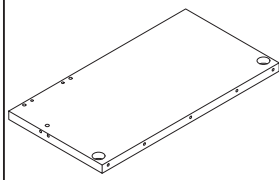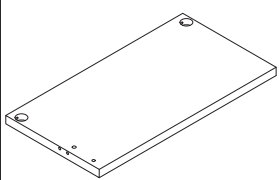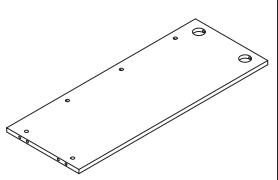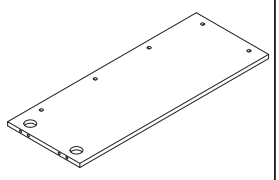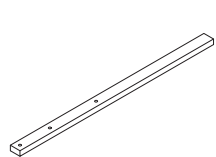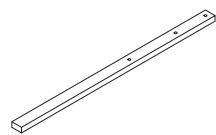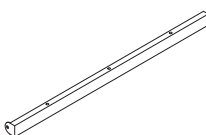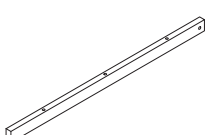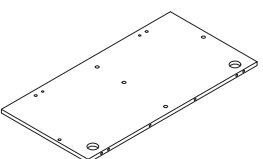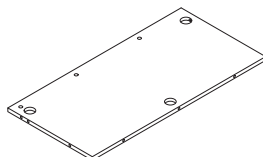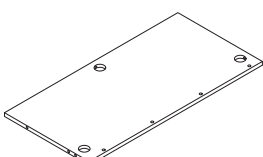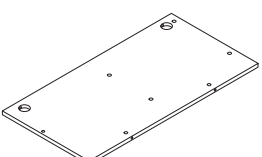





Parts List

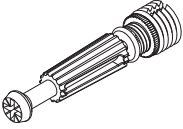

<div>1</div> <div></div> <div>1 pc</div>	<div>2</div> <div></div> <div>1 pc</div>	<div>3</div> <div></div> <div>1 pc</div>	<div>4</div> <div></div> <div>1 pc</div>	<div>5</div> <div></div> <div>1 pc</div>
<div>6</div> <div></div> <div>1 pc</div>	<div>7</div> <div></div> <div>2 pcs</div>	<div>8</div> <div></div> <div>1 pc</div>	<div>9</div> <div></div> <div>1 pc</div>	<div>10</div> <div></div> <div>1 pc</div>
<div>11</div> <div></div> <div>1 pc</div>	<div>12</div> <div></div> <div>1 pc</div>	<div>13</div> <div></div> <div>1 pc</div>		

Hardware List

A	B	C	D	E	F
					
M6x35mm	Ø12x10mm	Ø8x30mm	Ø6x80mm	M6	M6
12+1 pcs	14+1 pcs	21+1 pcs	7+1 pcs	14+1 pcs	14+1 pcs

G	H	I	J	K	L
					
Ø8x80mm	M8	M8	M6x10mm	M6x35mm	
2+1 pcs	4+1 pcs	4+1 pcs	13+1 pcs	2+1 pcs	2 pcs

M	N	O	P	Q	R
					
M4	Wrench M6	Wrench M8	M6x30mm	M6x50mm	Ø50 Hole paste
1 pc	2 pcs	2 pcs	7+1 pcs	6+1 pcs	10 pcs



S	T				
					
Ø18 Hole paste	Screwdriver				
18 pcs	1 pc				

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.







No gap


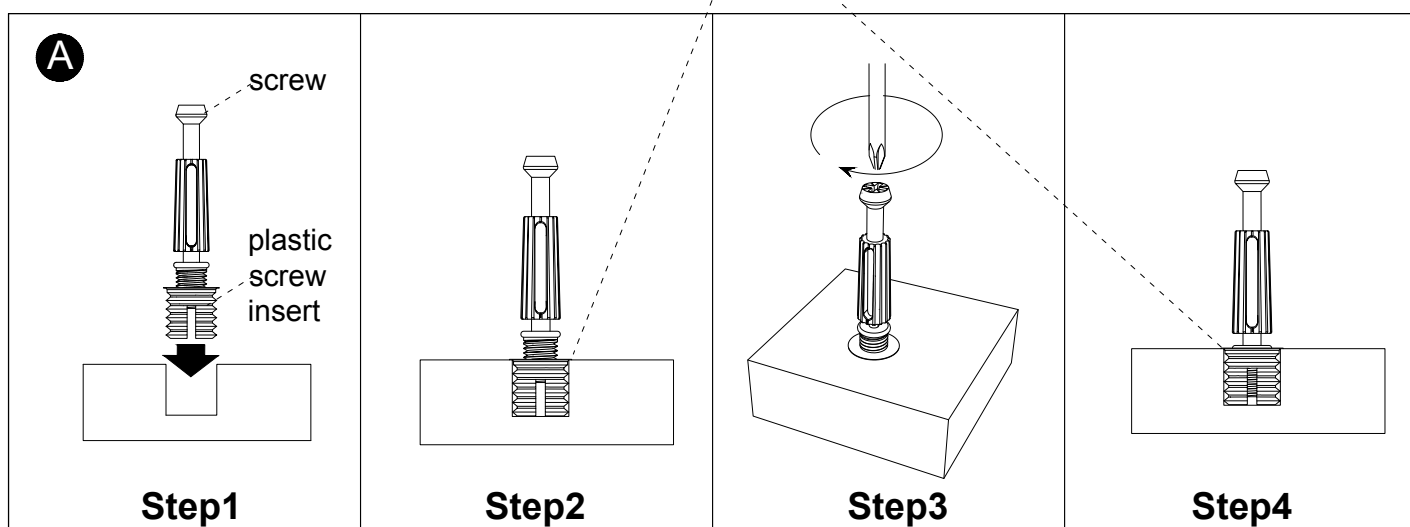
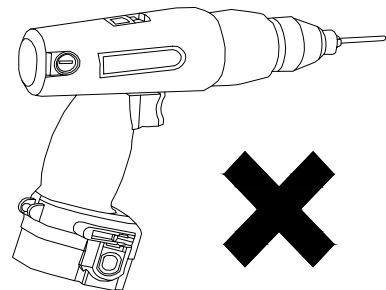


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

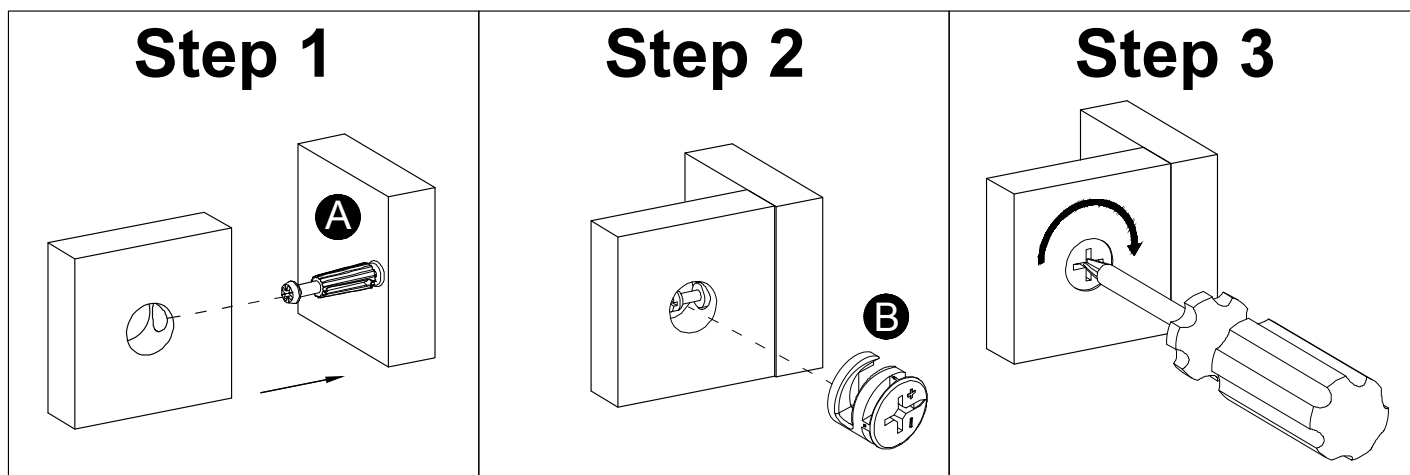



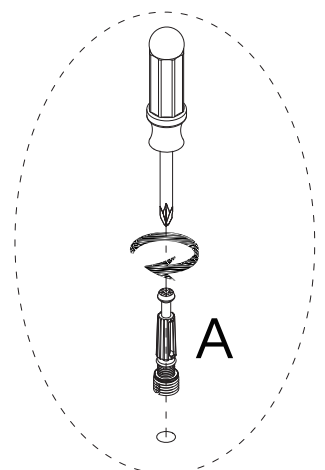
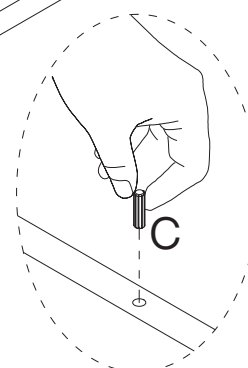
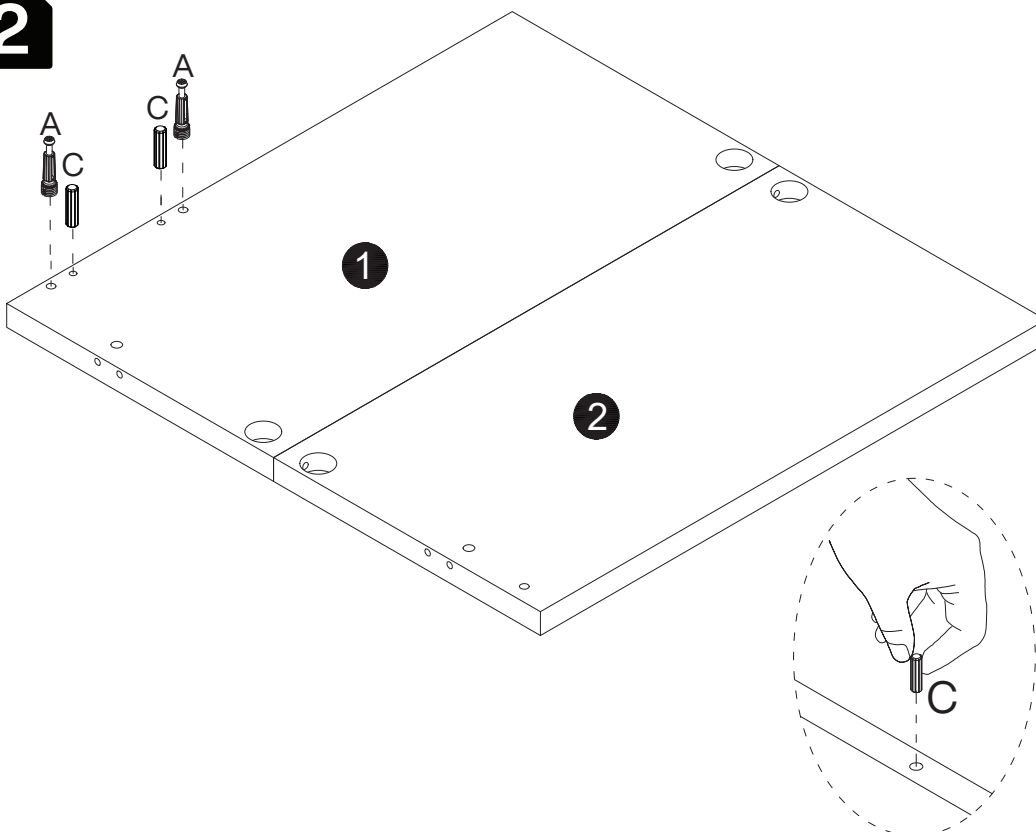
1

C	G	H	I
			
Ø8x30mm 3 pcs	Ø8x80mm 2 pcs	M8 4 pcs	M8 4 pcs

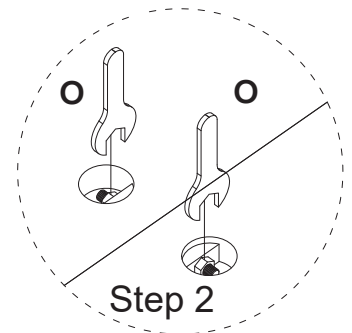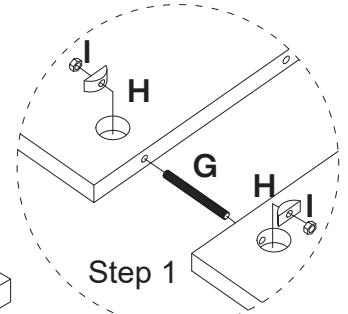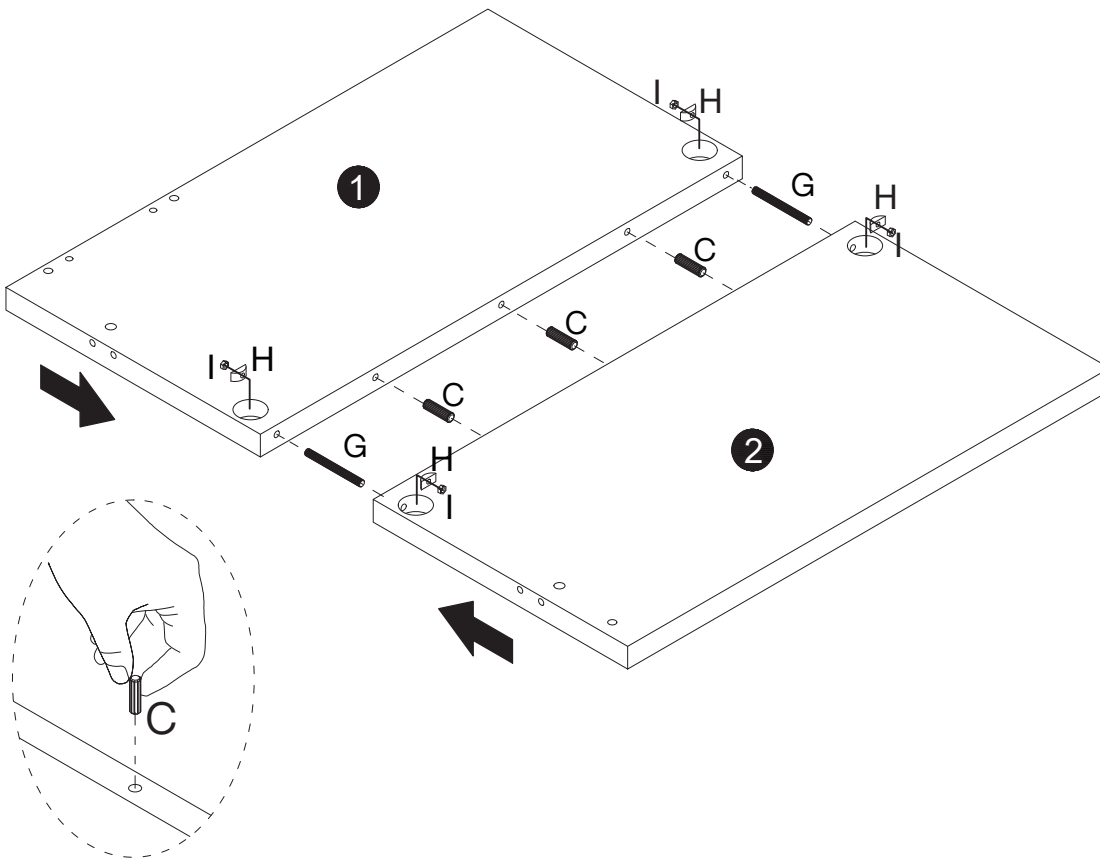





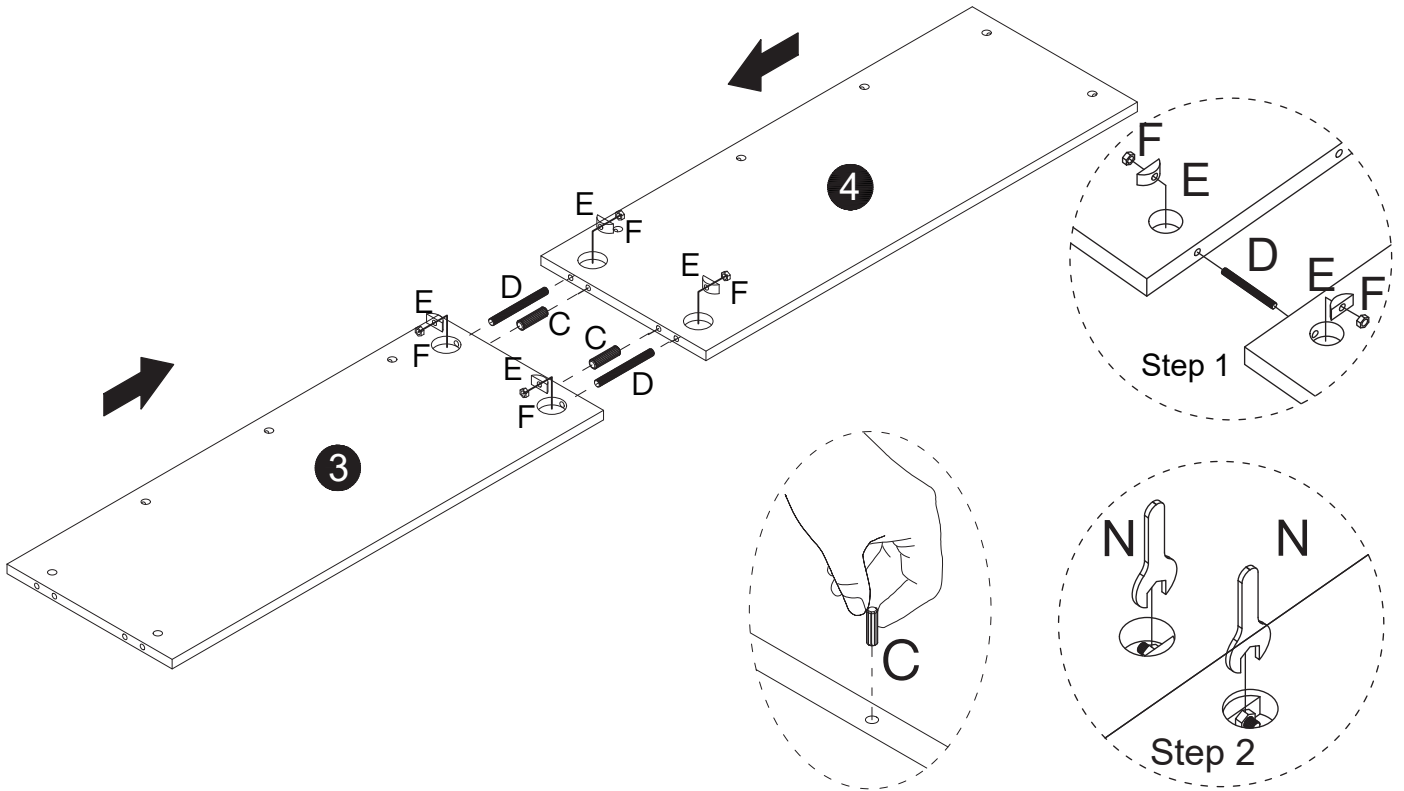
2

C	A
	
Ø8x30mm 2 pcs	M6x35mm 2 pcs





3

C	D	E	F
			
Ø8x30mm	Ø6x80mm	M6	M6
2 pcs	2 pcs	4 pcs	4 pcs





4

J

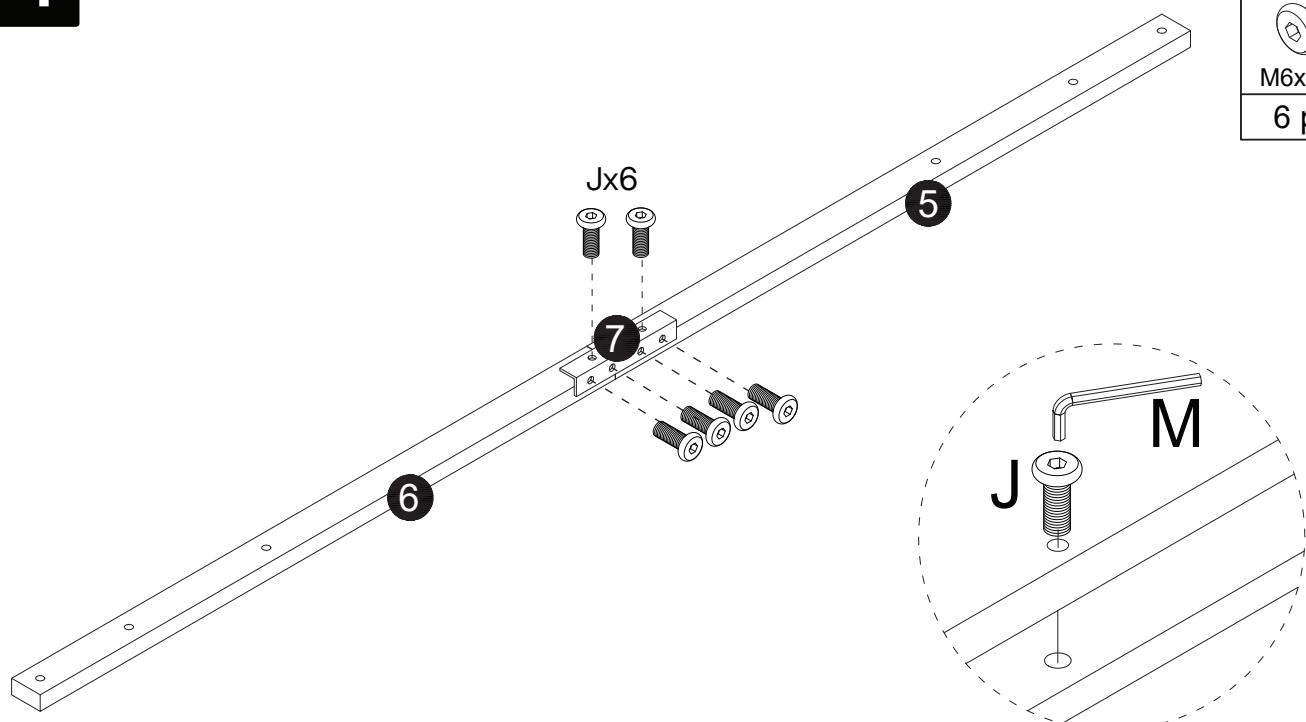M6x10mm
6 pcs






5

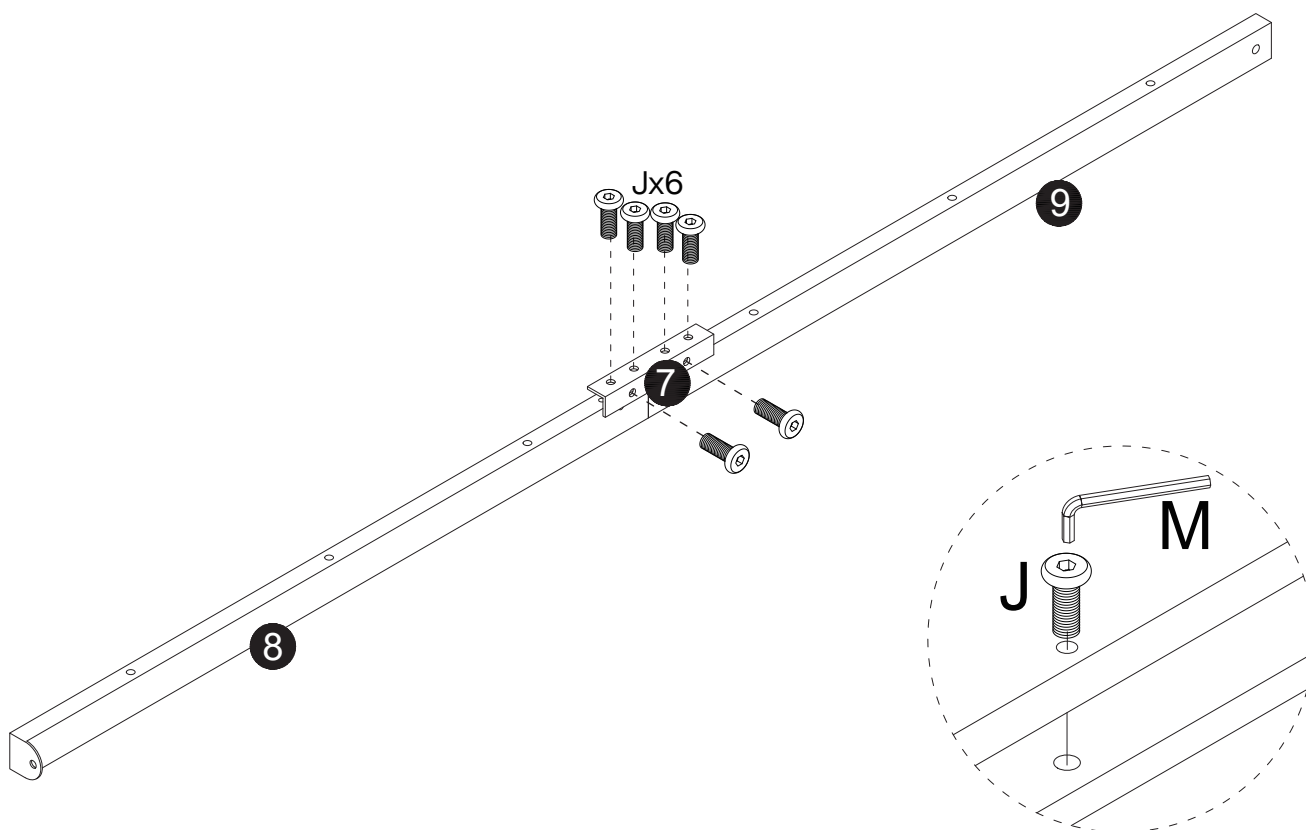J

M6x10mm
6 pcs







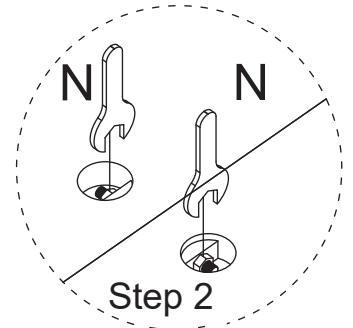
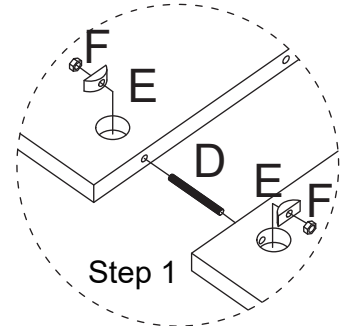
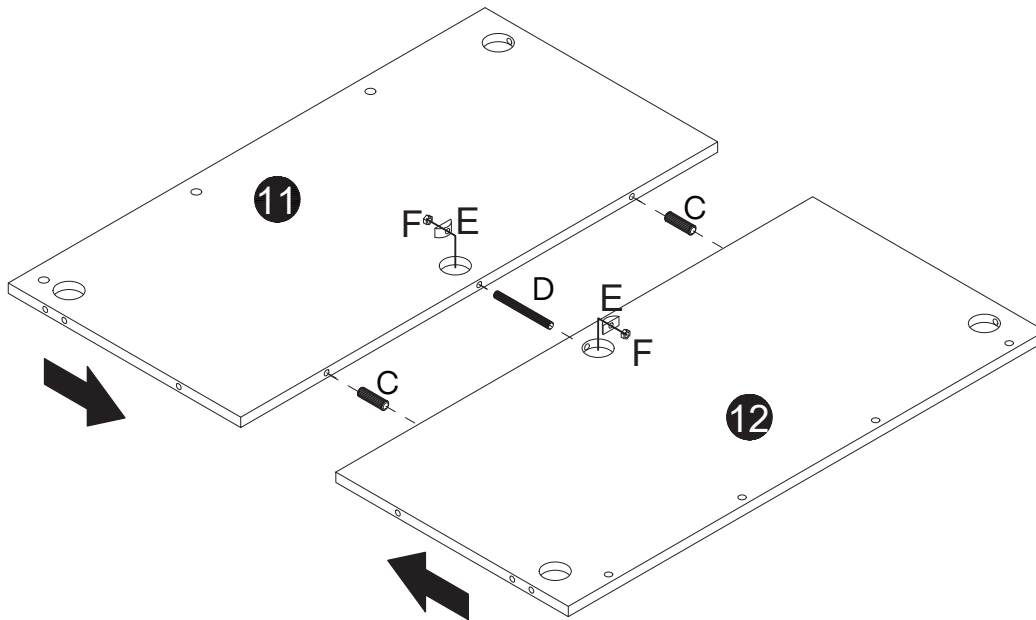
6

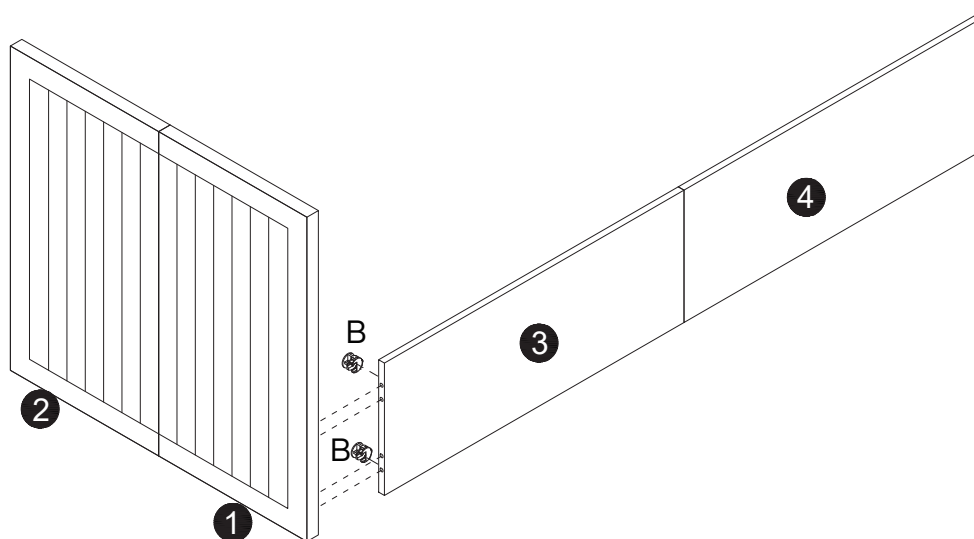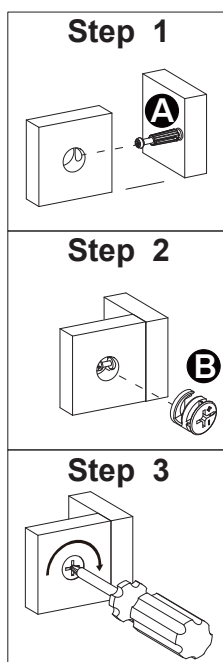B

Ø12x10mm
2 pcs







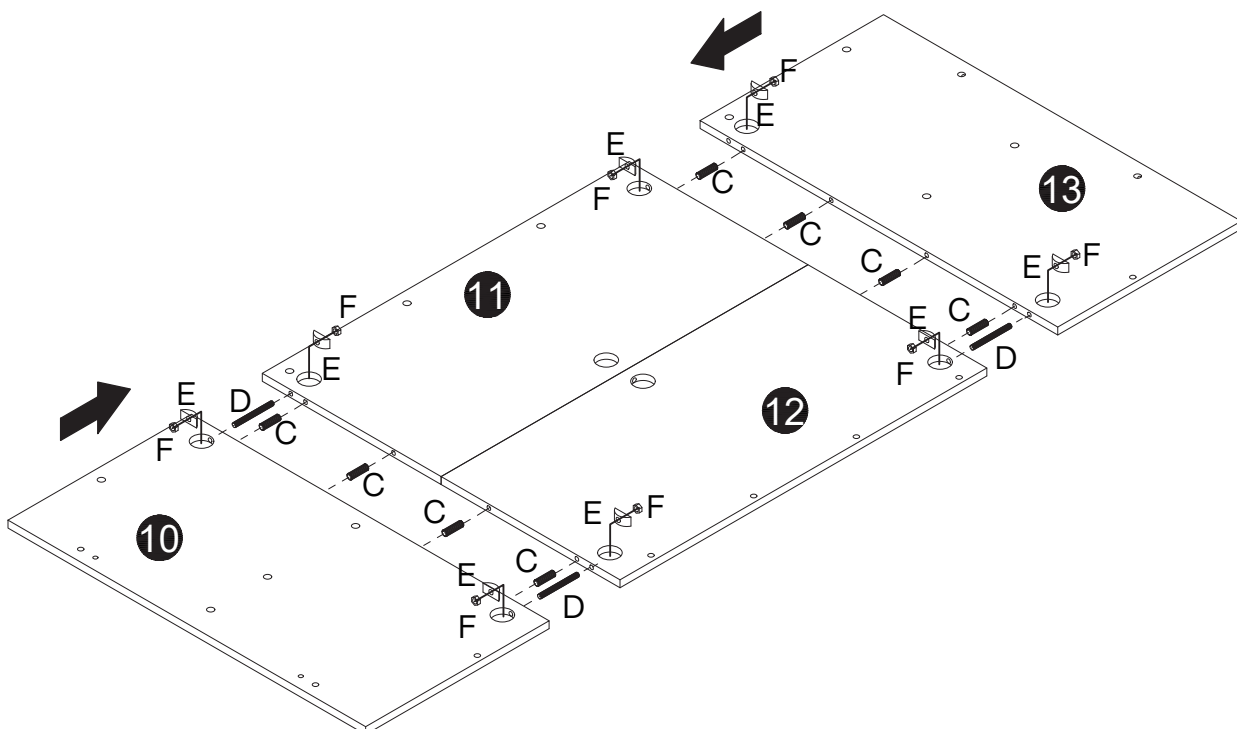
7

C	D	E	F
			
Ø8x30mm	Ø6x80mm	M6	M6
2 pcs	1 pc	2 pcs	2 pcs








8

C	D	E	F
			
Ø8x30mm	Ø6x80mm	M6	M6
8 pcs	4 pcs	8 pcs	8 pcs








9

C	A
	
Ø8x30mm	M6x35mm
2 pcs	8 pcs

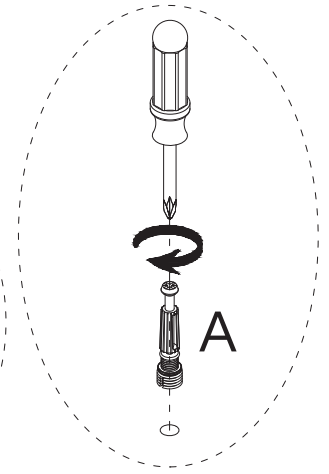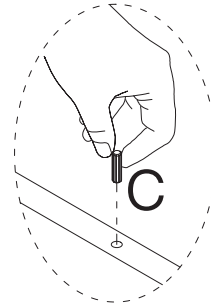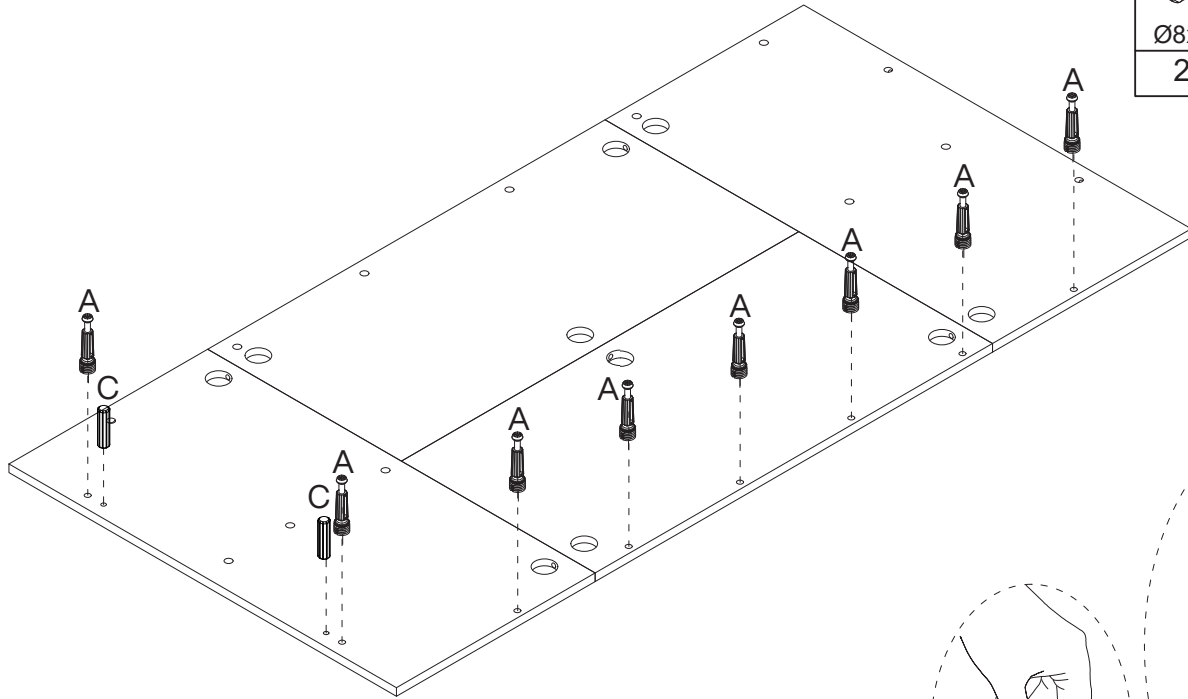

10



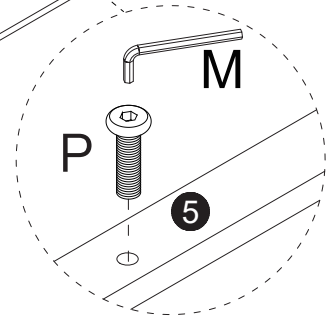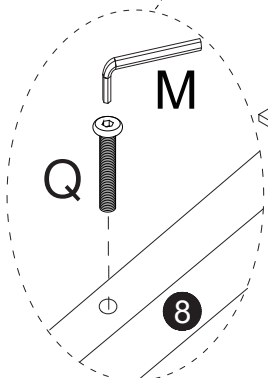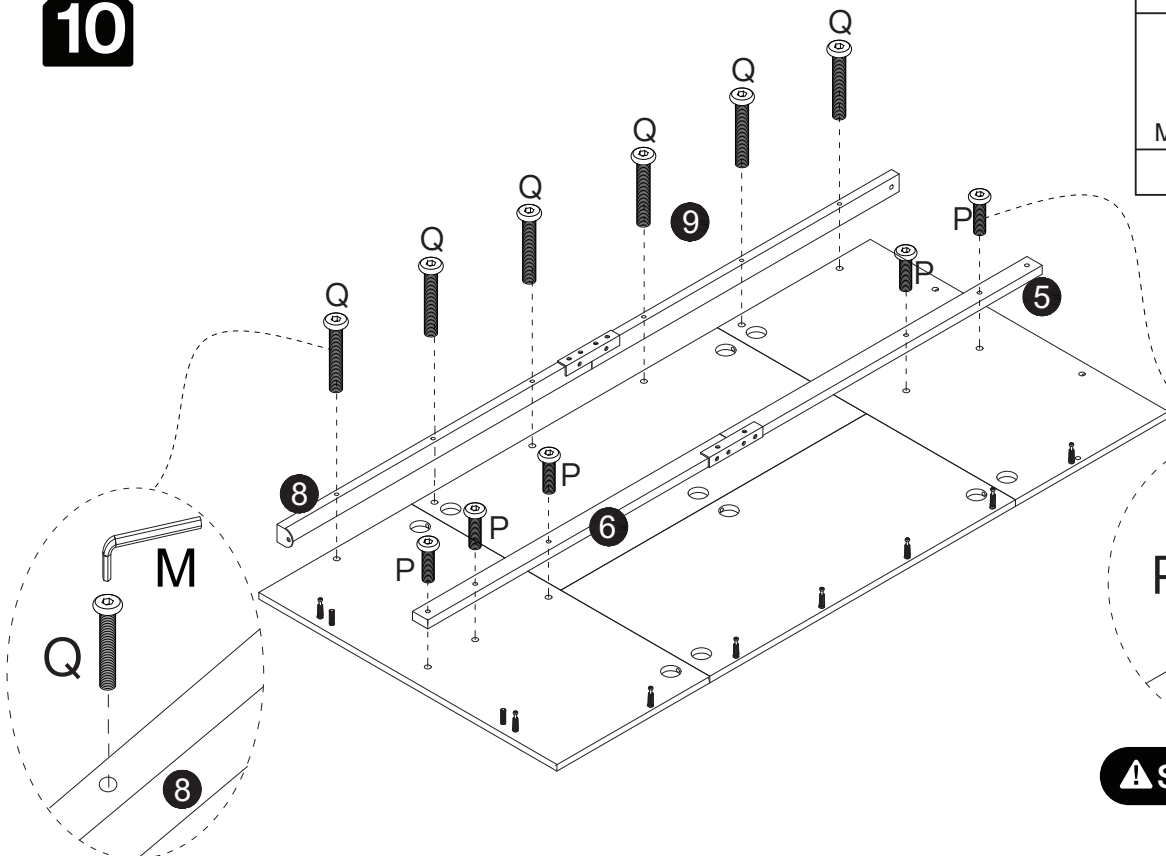P	Q
	
M6x30mm	M6x50mm
5 pcs	6 pcs





⚠ Screw M6X50mm


⚠ Screw M6X30mm


11


J	B
	
M6x10mm	Ø12x10mm
1 pc	8 pcs

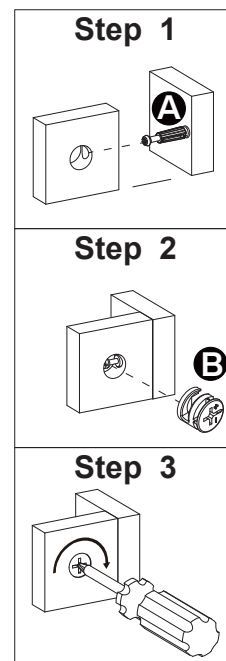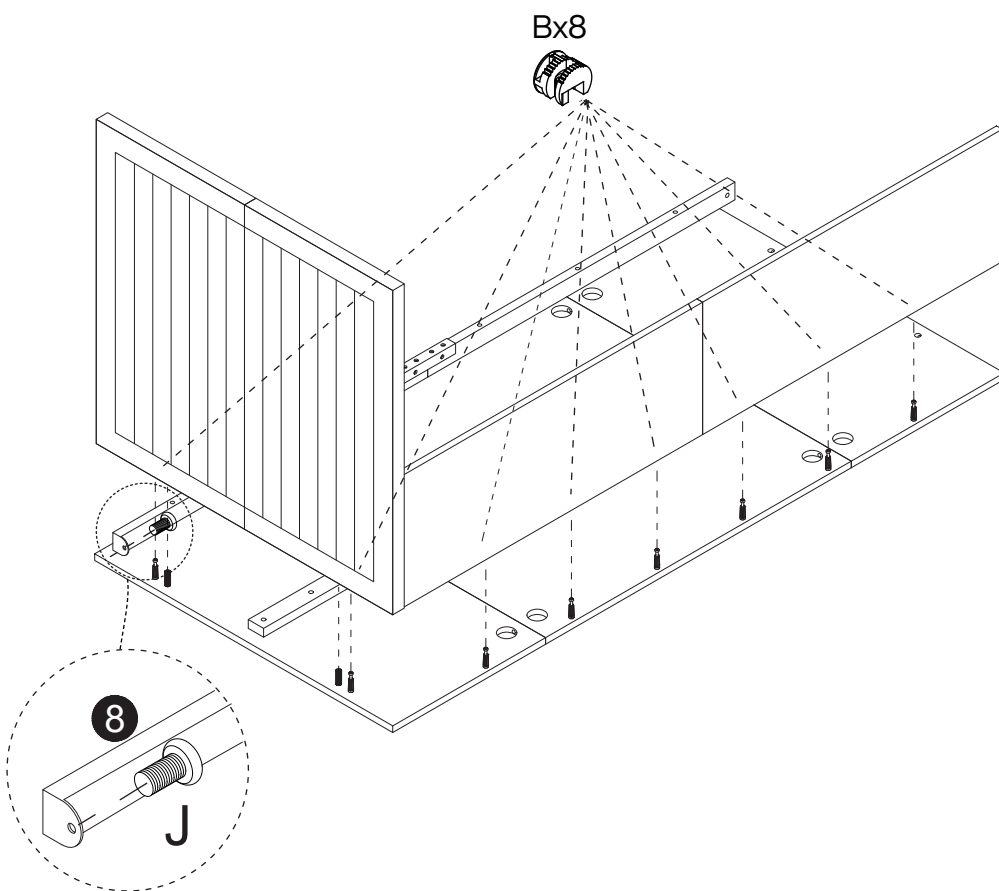




12





L

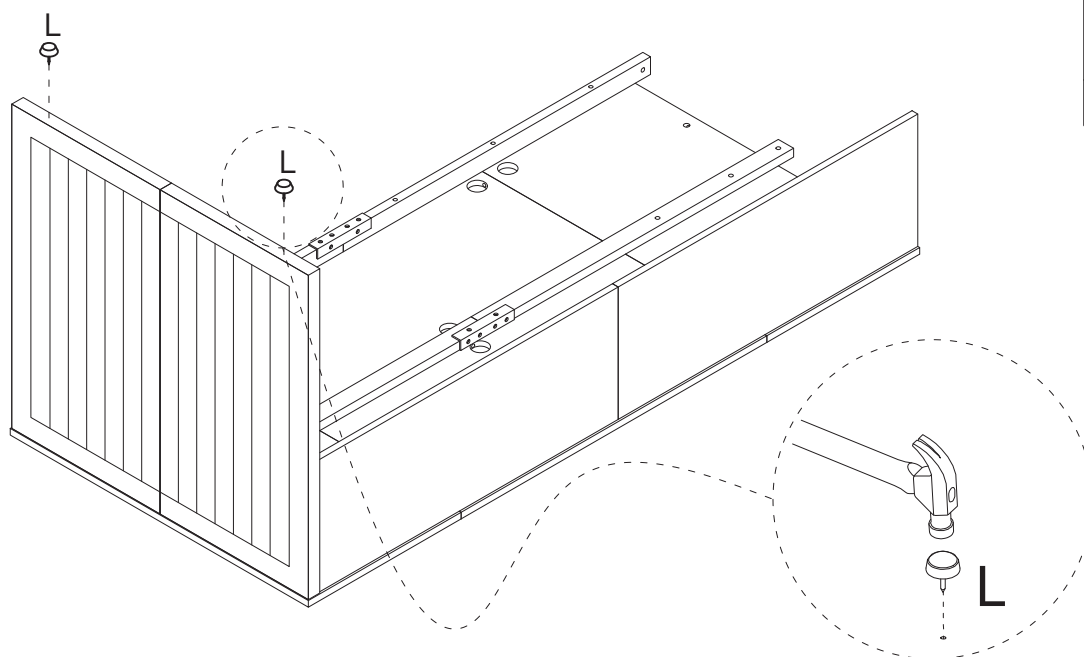2 pcs




 Caution! Tap lightly



13

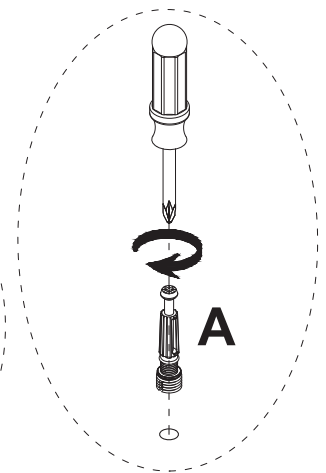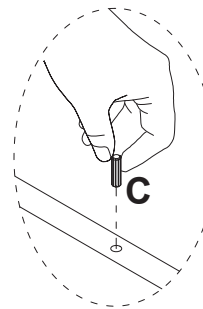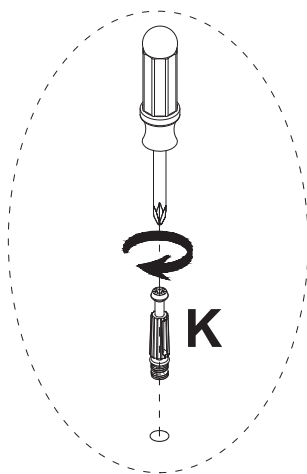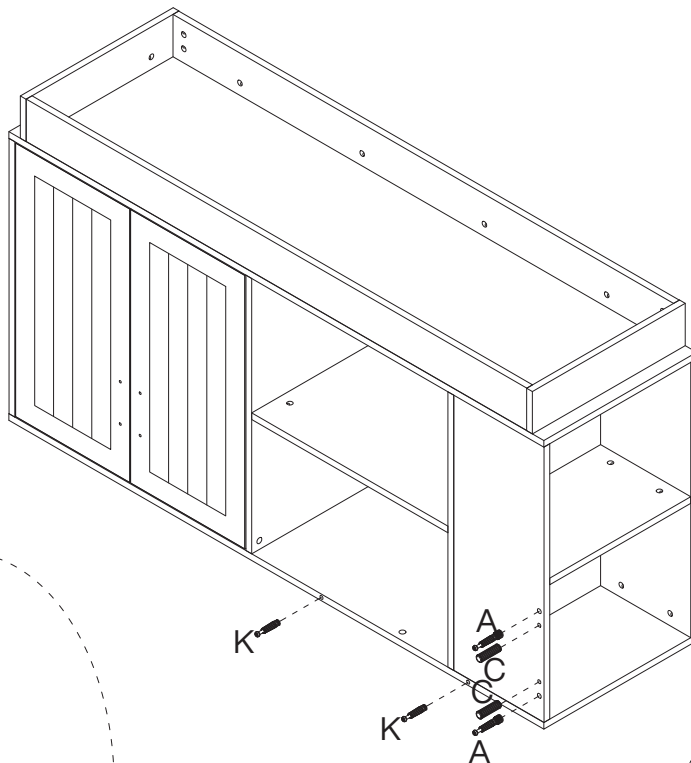K	C	A
		
M6x35mm	Ø8x30mm	M6x35mm
2 pcs	2 pcs	2 pcs






14

B

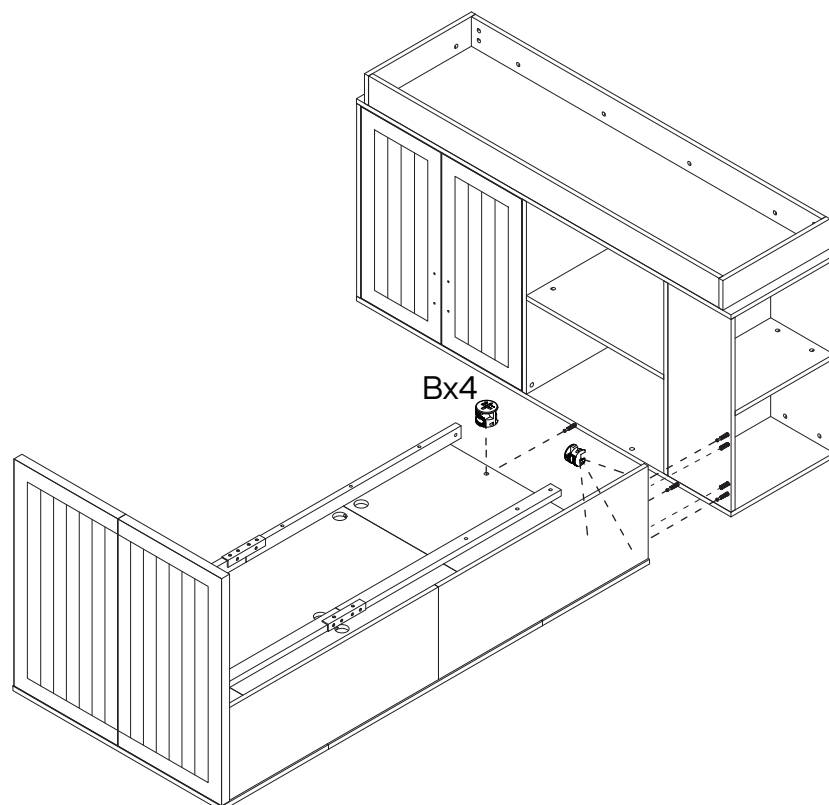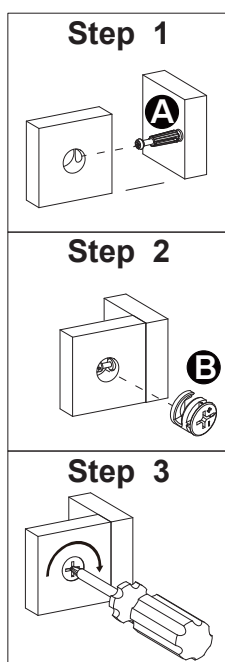Ø12x10mm
4 pcs

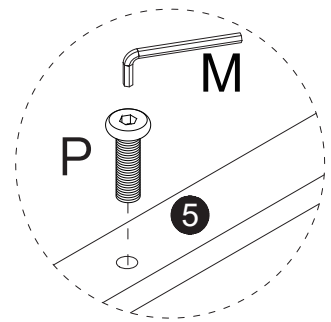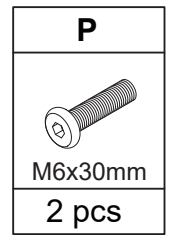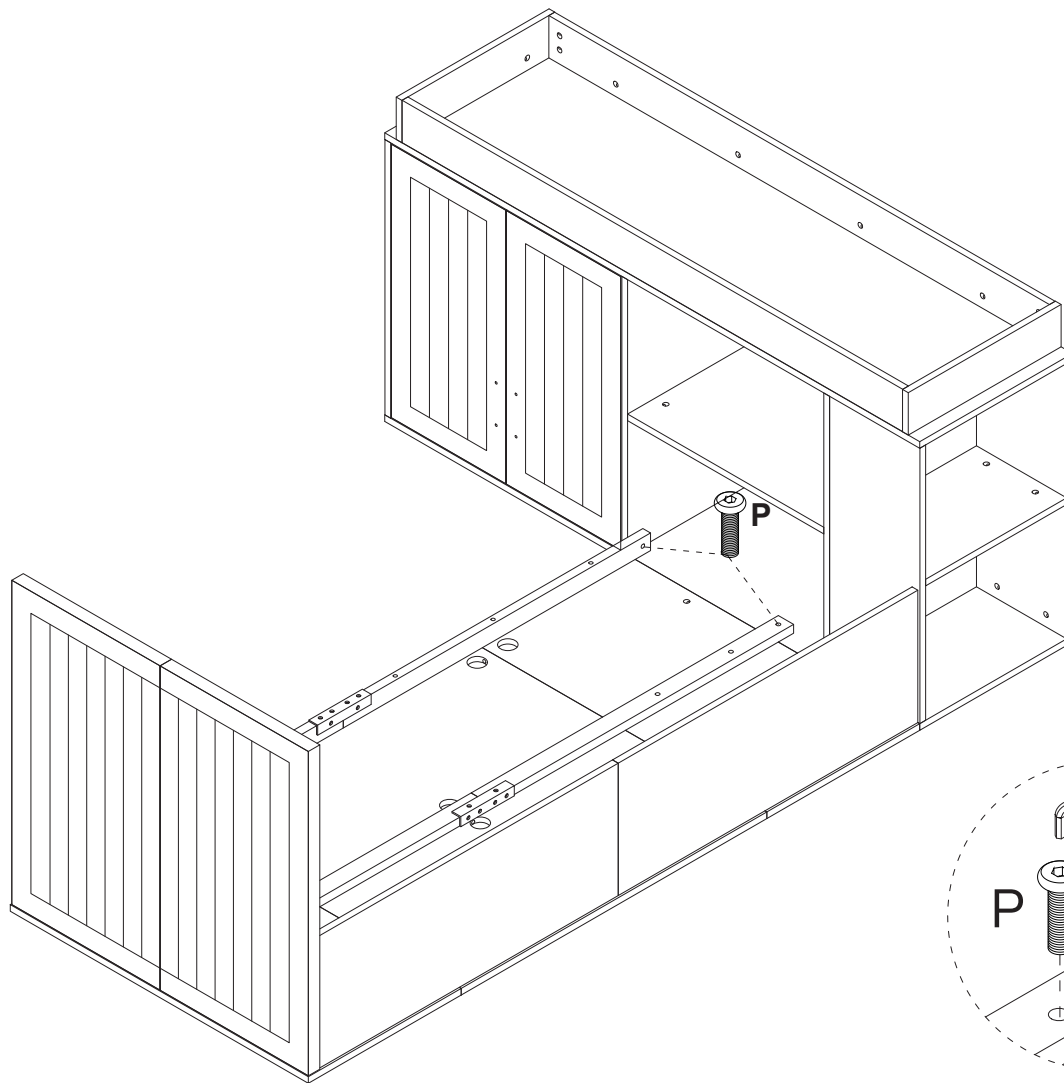


15



⚠ Screw M6X30mm

16

Note: Recommend to turn the product over 180° by two adults.

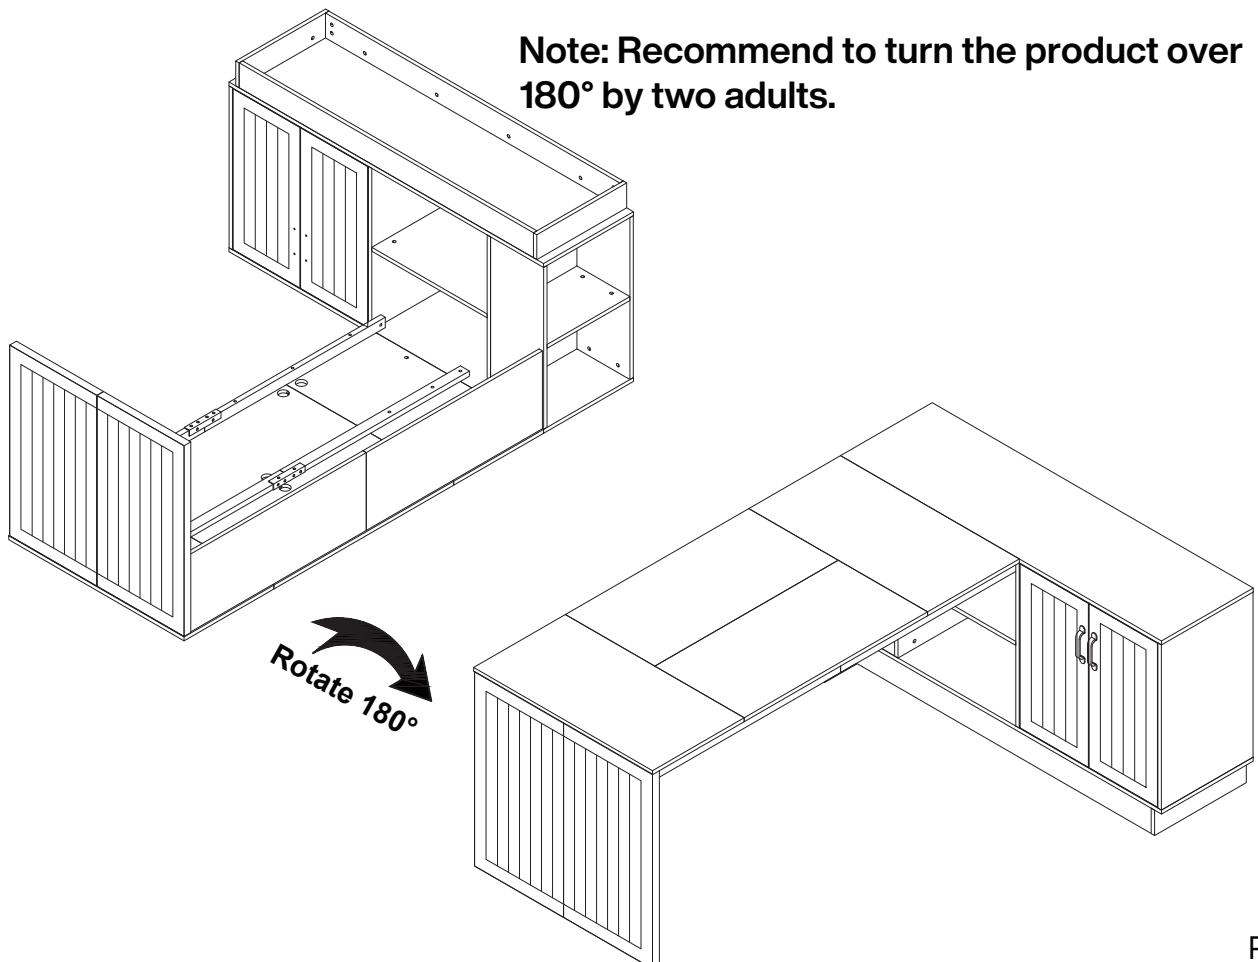

Thank you for your support!

