
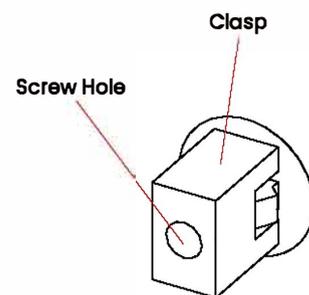



TOSOT Installation Instruction for PTAC Grille

The grille must be installed before the PTAC installation.
Read the instructions thoroughly before proceeding.

- Note:** The grille has sharp edges and handle it with care. Gloves are recommended.
1. Install 6 clasps at the 6 holes of the grille. The screw hole of the clasp is on the inside.

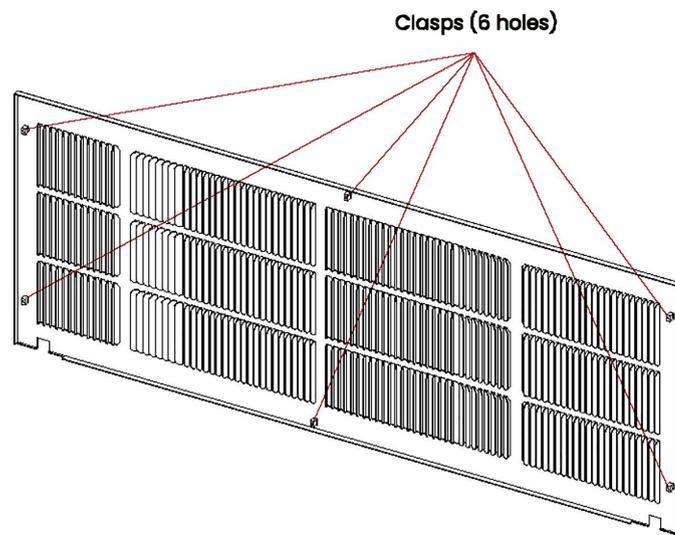

2. The grille shall align to the backside of the wall sleeve. The side where the guide track and slots are located should face towards the floor rather than the ceiling. The screw hole of the clasp shall align with the screw hole of the wall sleeve. Attach the grille to the wall sleeve from the outside of the sleeve, then install 6 screws from the inside of the sleeve to secure the grille to the sleeve.

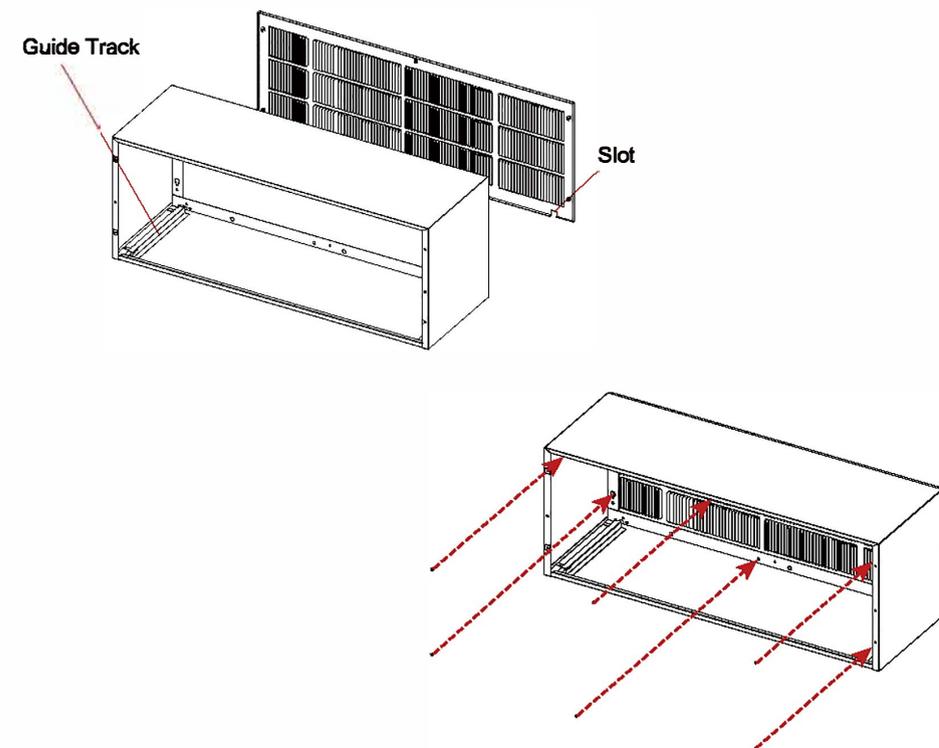

Questions? We are here to help.

✉ support@tosotdirect.com

🌐 www.tosotdirect.com

