# SKU#300369 ABBLE® Console Table

- Thank you for purchasing ABBLE® product.
- You are welcomed to visit www.abblestore.com for more ABBLE® products.
- We are committed to providing customers with quality products and a good purchasing experience.
- Need any help regarding purchase or customer service, please email us by cs@abbleinc.com (will be responded within 24 working hours)



## Attention for assembly

- 1. Read the instruction carefully and completely before assembling the product.
- 2. Follow the instructions step by step. Any wrong operation might damage the product, which will not be considered as quality defect of product itself. Any return caused by this reason will not be accepted.
- 3. Place product on soft floor (carpet, cardboard, wood) for assembly to prevent scratching or damage, never on concrete, sand or slate floor.
- 4. Verify all components and hardware are included according to the part list before start assembling. In case of missing of any part, stop assembling and contact us right away.
- 5. Electrical tools (not included) help assembly yet do not over drive the screws, bolts, nuts, etc.
- 6. Follow the manpower request for assembly. Shortage of manpower might cause unsuccessful assembly or personal injury.
- 7. Do not use the product until all the components, screws, bolts, nuts are fastened tightly.
- 8. Contact us when you have any problem regarding assembly or any product issues, we will response as soon as possible to help you out of problem. Don't return the goods on your purchase platform right away.

#### Maintenance

- 1. Clean the product with a damp cloth.
- 2. Indoor use only.


**Limited Warranty:** 1 year (12 months)

People Required: 2




**Tools Required: Phillips Screwdriver (Not Included)** 


**Assembly Time: 60 minutes** 

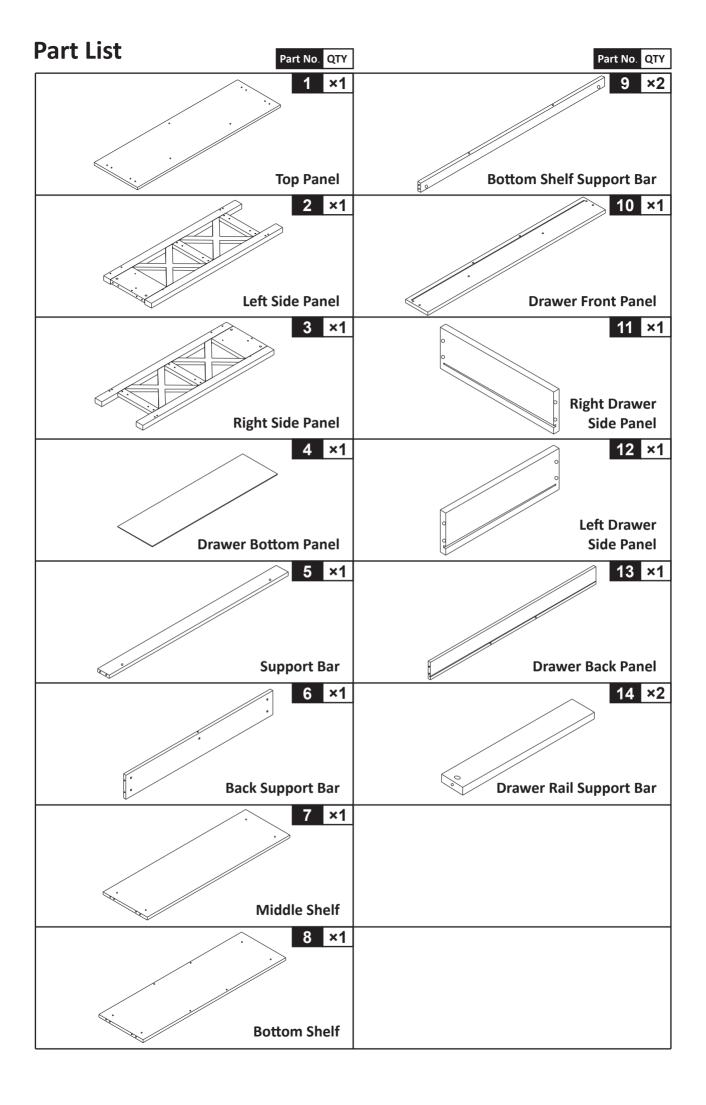


**Hardware** List Hardware No. QTY Hardware No. QTY Hardware No. QTY ×29 ×1 ×2 **Cam Bolt** Screw Washer B ×29 | ×2 P ×1 **Anti-tip Rope Cam Lock Drawer Handle** C ×18 Q ×1 ×1 **Wooden Dowel** Glider **Long Screw** D ×8 K ×1 Glider **Screw E** ×2 ×1 Screw **Left Drawer Rail E** ×10 M ×1 **Right Drawer Rail Screw** G ×2 N ×1 **Handle Bolt Anchor** 




- 1. Attach Left Drawer Rail (L) on Left Drawer Side Panel (2) by Screws (D).
- 2. Attach Right Drawer Rail (M) on Right Drawer Side Panel (11) by Srews (D).
- 3. Attention: Make sure srews (D) are fastened through the right holes as indicated.

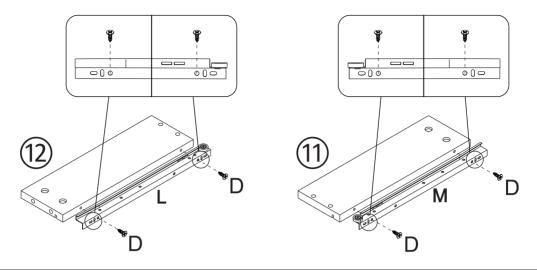






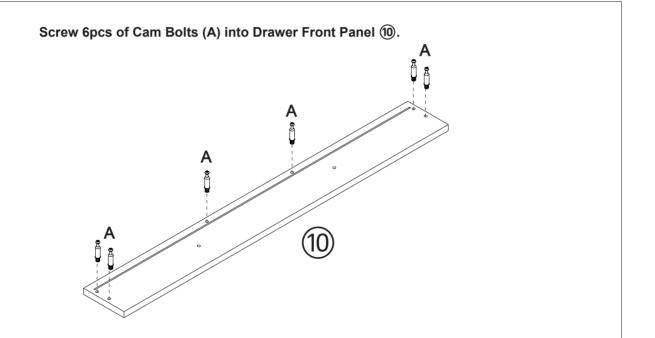




- 1. Attach Drawer Side Panel ①+② to Drawer Back Panel ③ by using Screws (F).
- 2. Attach Drawer Rail Support Bar (4) to Drawer Back Panel (3) by using Screws (E).

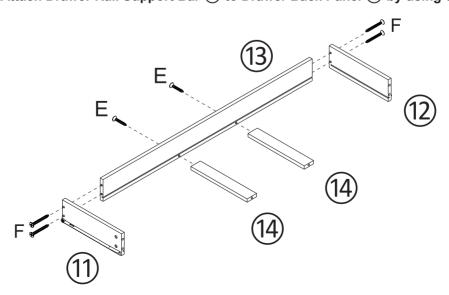







- 1. Insert Drawer Bottom Panel 4 into grooves of drawer.
- 2. Asssemble Drawer Front Panel (10) as the arrow indicates by using Cam Locks (B).

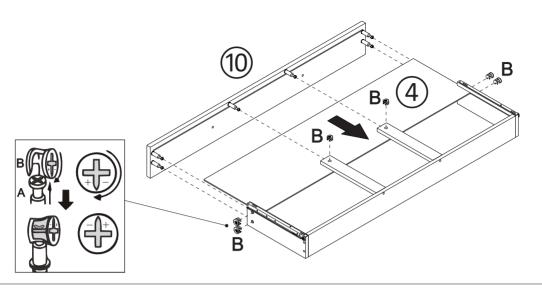




Attach 2pcs of Drawer Handles (I) on Drawer Front Panel (10) by using Handle Bolts (G).

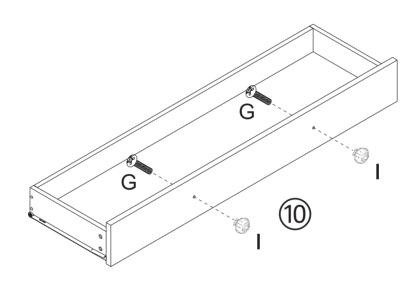




- 1.Screw Cam Bolts (A) into Left Side Panel ② and Right Side Panel ③, make sure the screws go through the correct holes.
- 2.Attach Glider (J) to Left Side Panel ② by using 2pcs of Screws (D).
- 3.Attach Glider (K) to Right Side Panel 3 by using 2pcs of Screws (D).

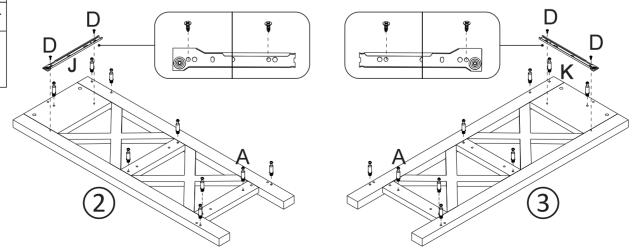







- 1. Insert 1pc of Wooden Dowel (C) into Support Bar (5) as indicated.
- 2. Connect Right Side Panel ③ to Support Bar ⑤ and Back Support Bar ⑥

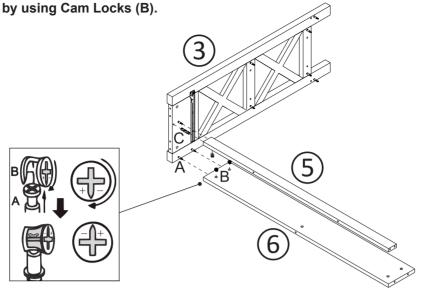




- 1. Insert 2pcs of Wooden Dowels (C) into Right Side Panel ③ as indicated.
- 2. Connect Middle Shelf 7 to Right Side Panel 3 by using 2pcs of Cam Locks (B).

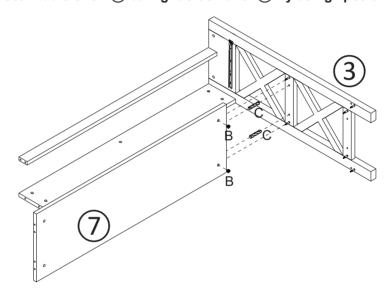

## Step 9




Attach Bottom Shelf (8) to Bottom Support Bars (9) by using 4pcs of Screws (F).

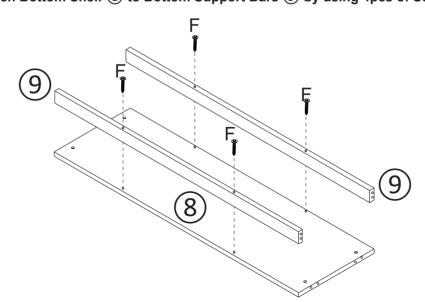

9 x 1 (3) x 1 (8) x 1 Hardware No. & QTY B x 4 C x 4


- 1. Insert 4pcs of Wooden Dowels (C) into Right Side Panel ③ as shown. Make sure the right holes to be inserted.
- 2. Connect Bottom Shelf (8) to the Right Side Panel (3) by using 4pcs of Cam Locks (B).

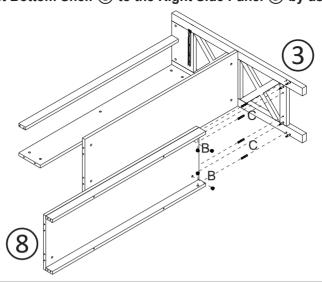


## Step 11





- 1. Insert 7pcs of Wooden Dowels (C) into Left Side Panel (2).
- 2. Assemble Left Side Panel (2) by using 9pcs of Cam Locks (B) as indicated.

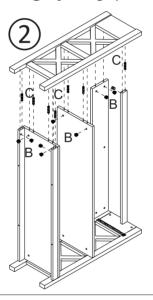




- 1. Screw 5pcs of Cam Bolts (A) into Top Panel ①.
- 2. Insert 4pcs of Wooden Dowels (C) into the holes of side panels 2+3as indicated.
- 3. Assemble Top Panel ① by using 5pcs of Cam Locks (B) and 2pcs of Screw (F).

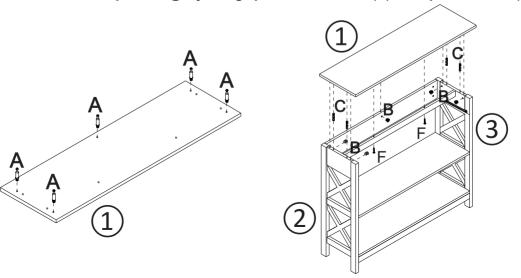

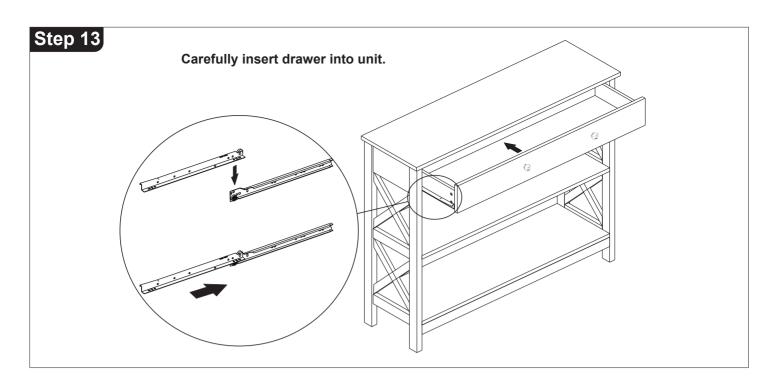



Attach anti-tip rope on the Back Support Bar ① by using screw (H) and Washer (O) as indicated.

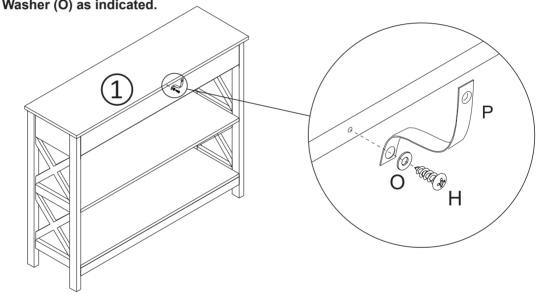



- 1. Place unit against wall and mark hole for anti-tip rope.
- 2. Drill a hole in wall make sure the hole is slightly smaller than Anchor (N) then gently tap Anchor (N) into hole.
- 3. Attach the anti-tip rope on wall by using Washer (O) and Long Screw (Q).

