


# HORIZONTAL LOUVERED WALL

Assembly Instructions


# Horizontal Privacy Panel

Please read the following instructions completely before you begin assembly. Any errors made during installation are not covered by the product's warranty. If you have any questions during the installation process, please call us .





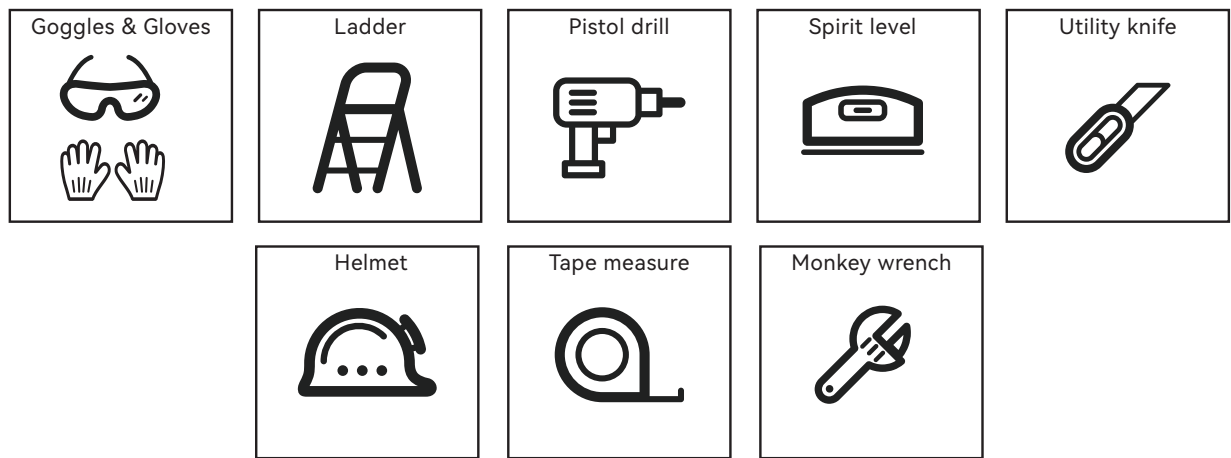




## NECESSARY TOOLS AND SAFETY GEAR(NOT SUPPLIED)



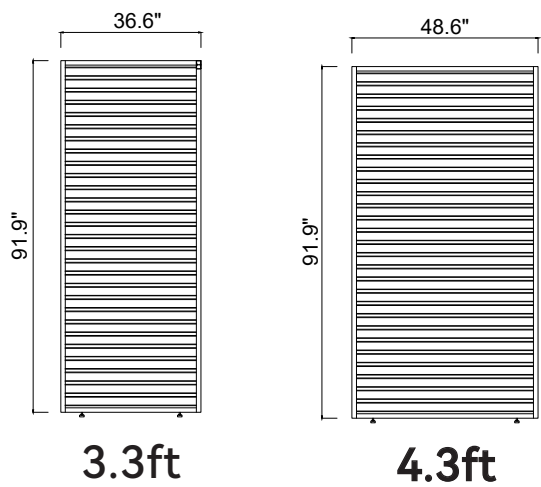







## 2D&3D FOOTING MEASUREMENT




CARTON

REF	ICON	QTY
M1		1
M2		1
N1		1
N2		1
H1		2
E1	 	1
E2	 	27



REF	ICON	QTY
W1	 3.9×25mm	14
W2		2
W3		2

REF	ICON	QTY
W4	 5×19  8mm	2
W5	 PH2	1
W6	 8mm	1
K1		2

1

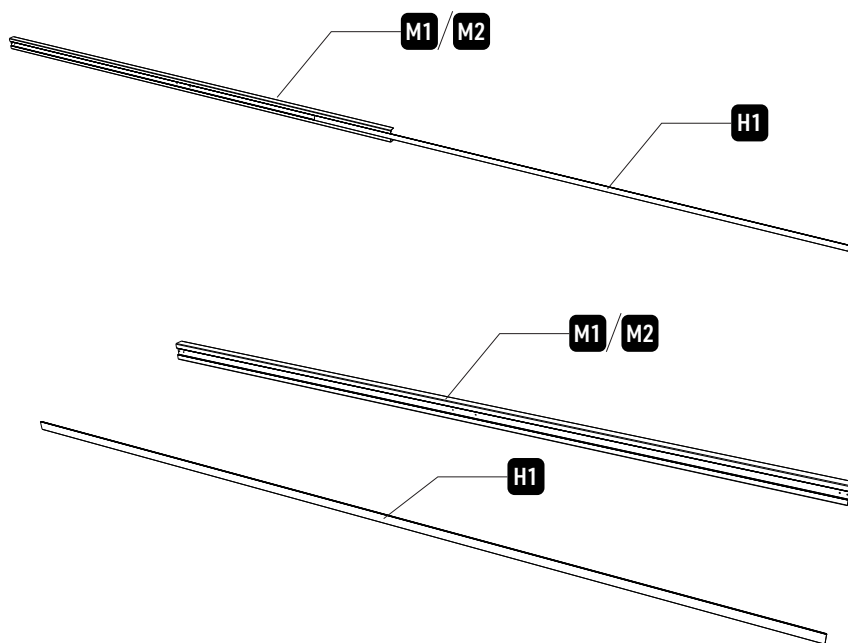


2

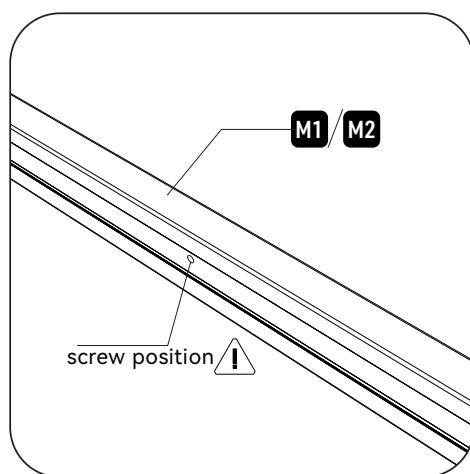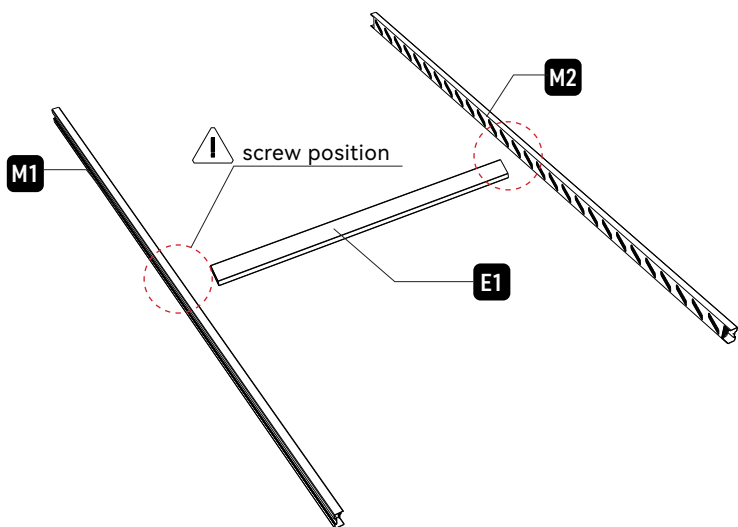





3

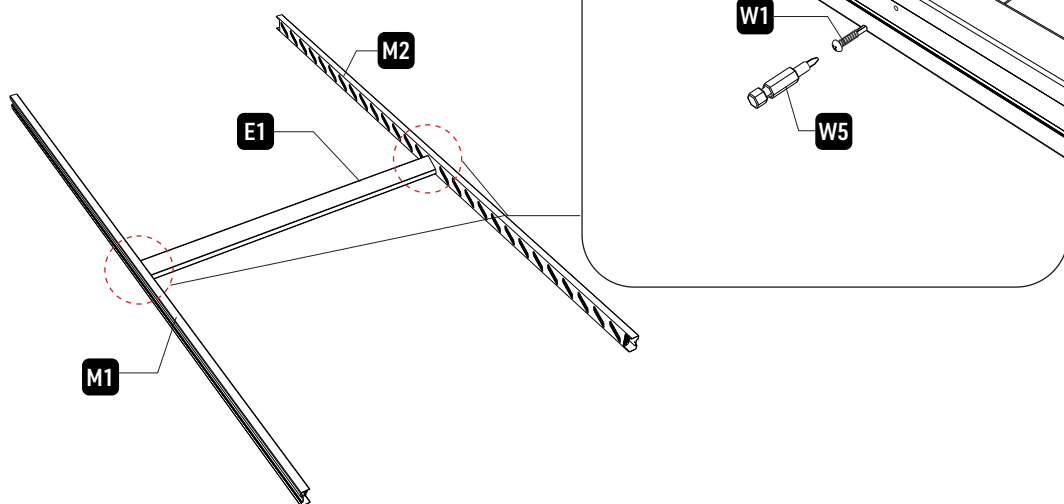


4


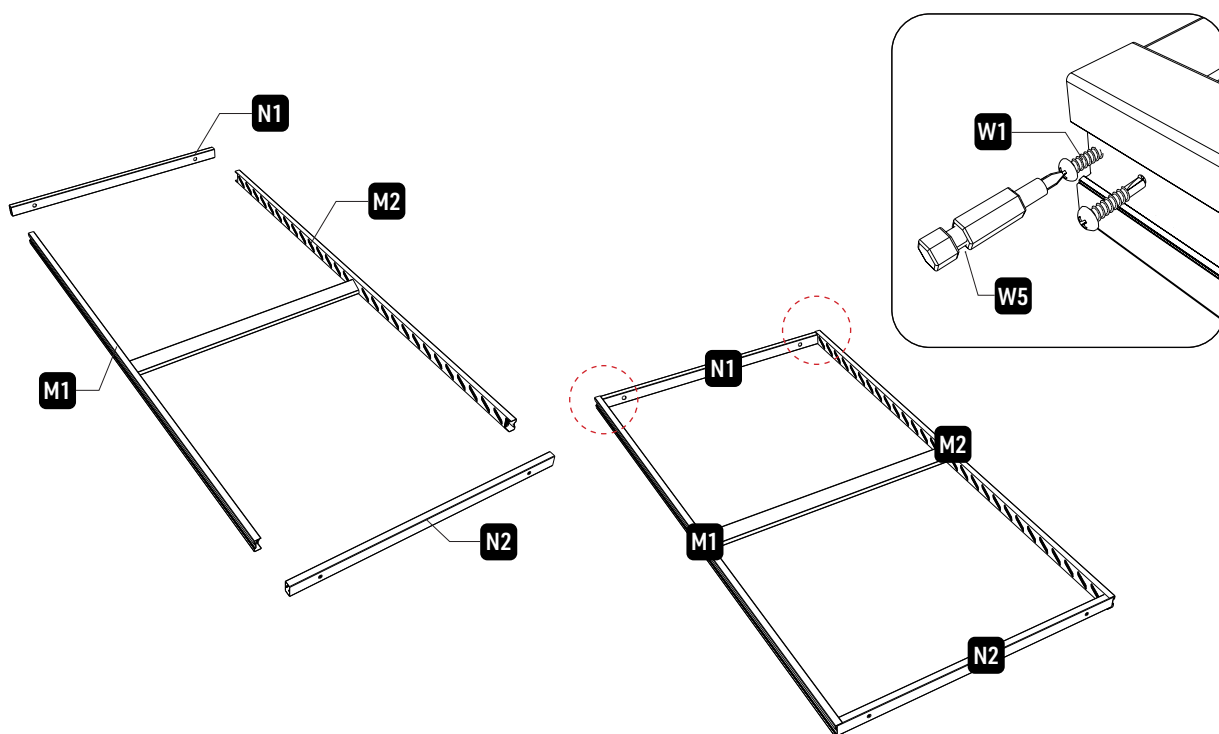


5


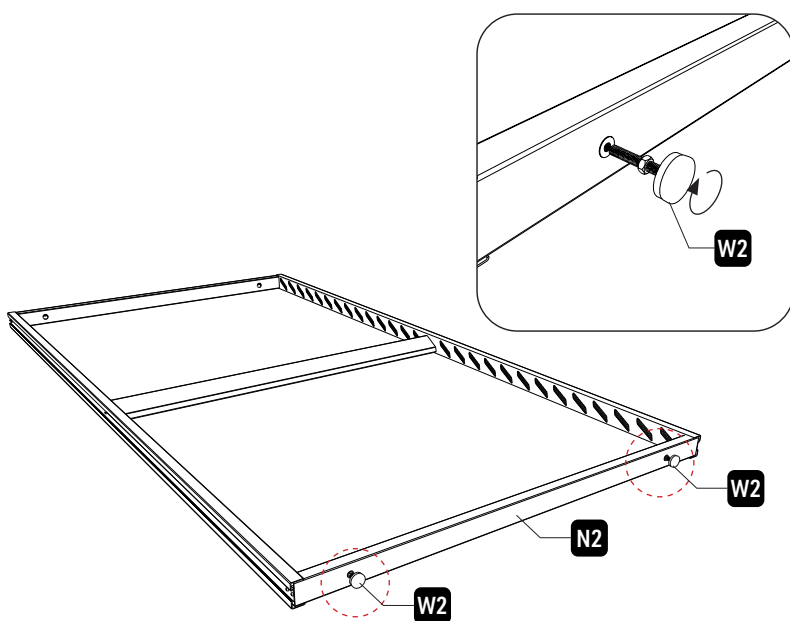


6



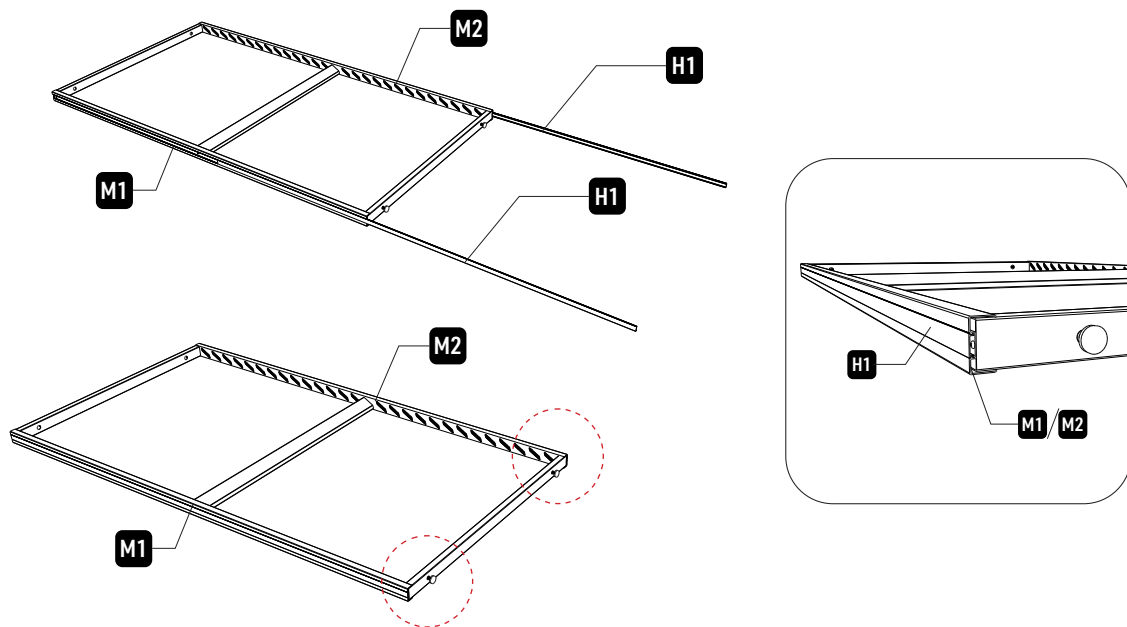





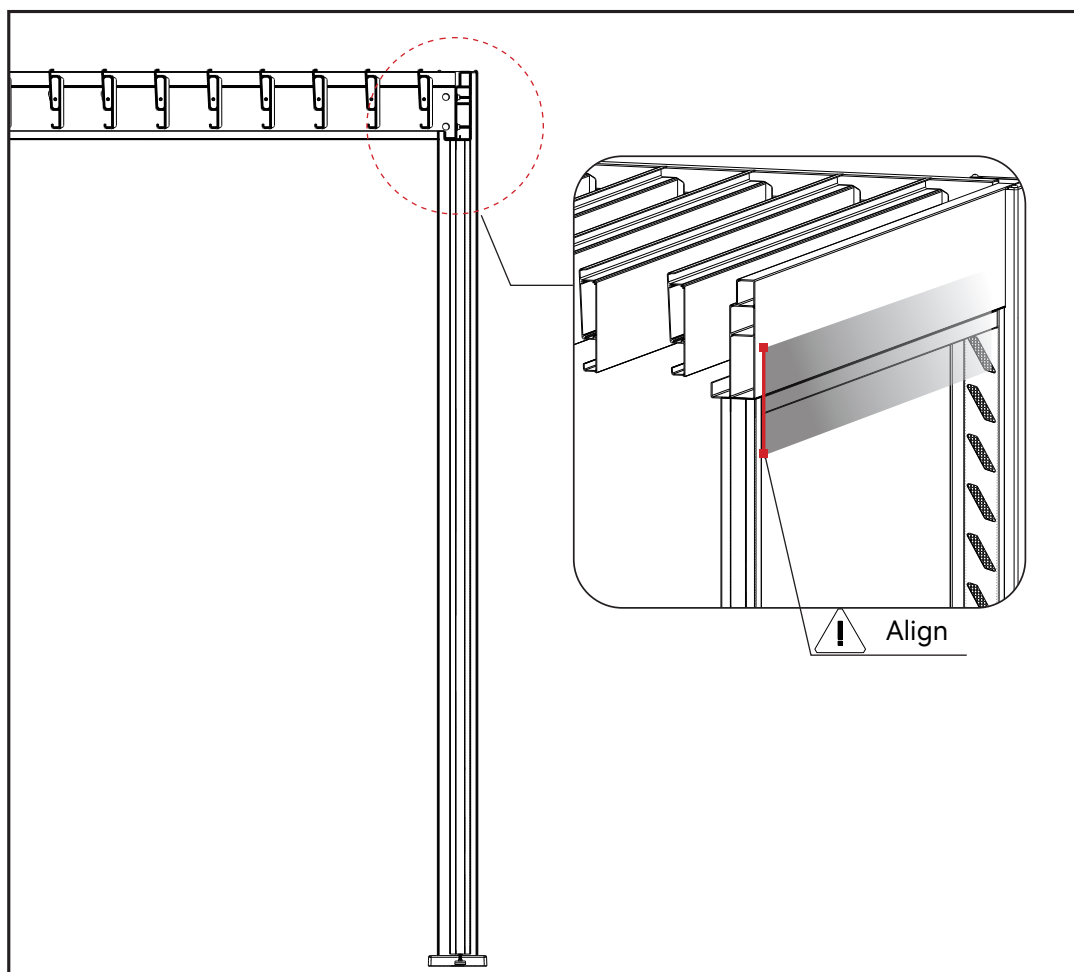
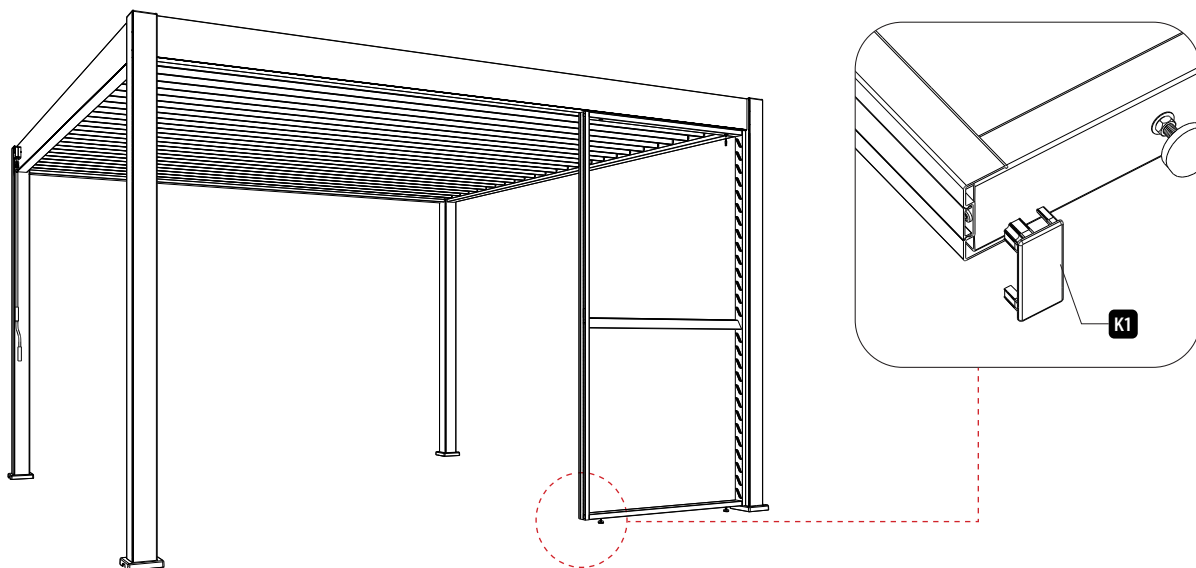







8

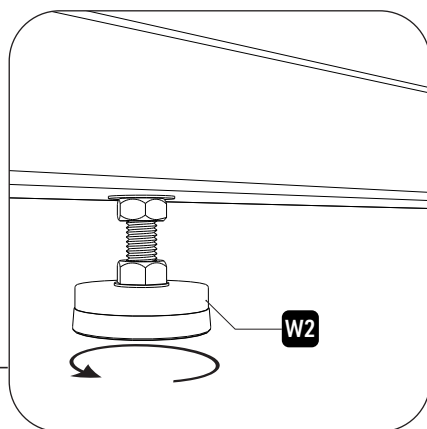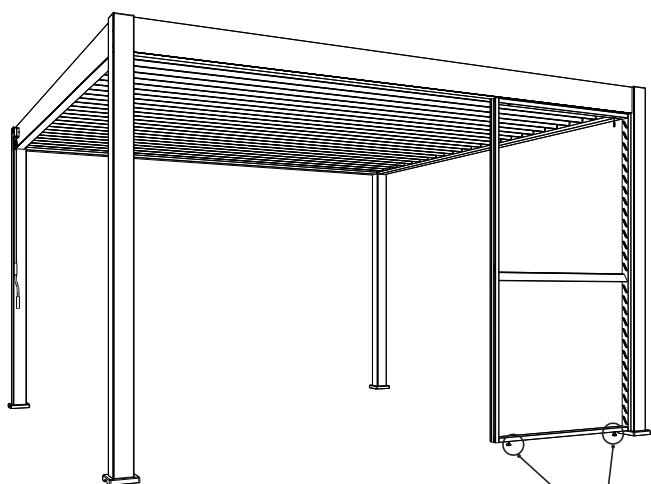

9

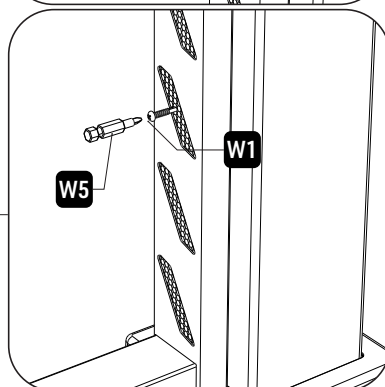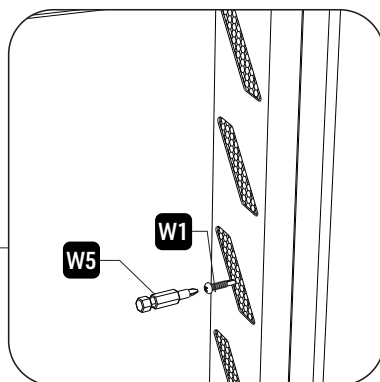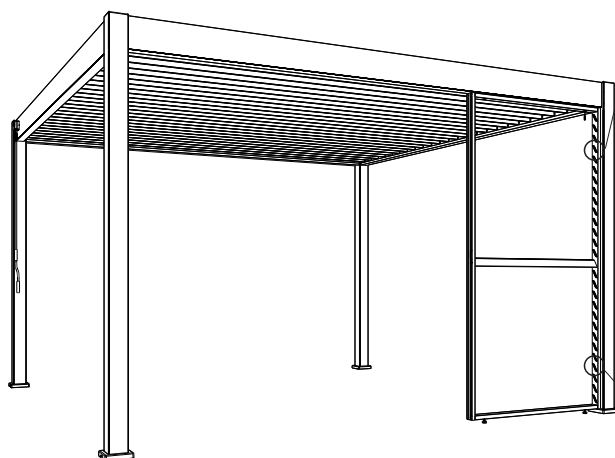

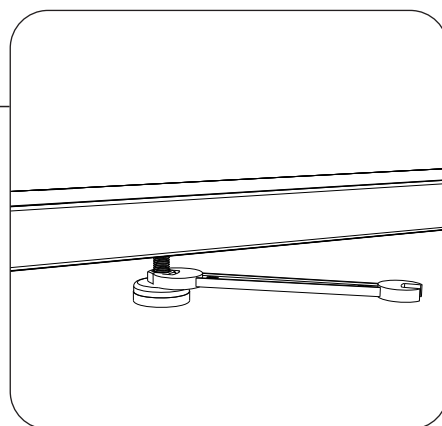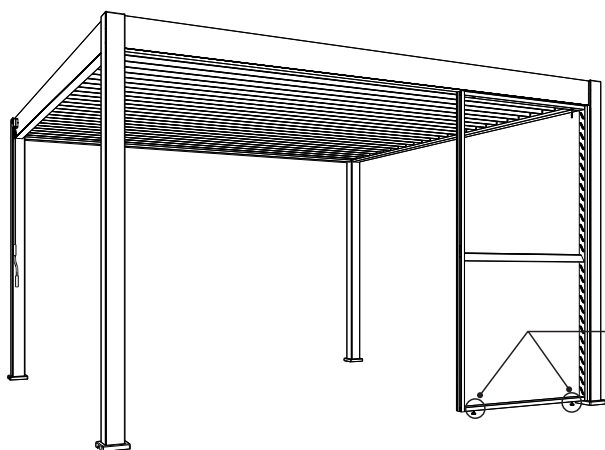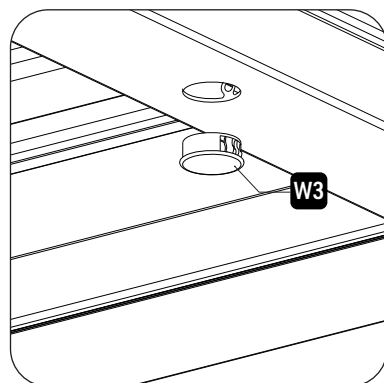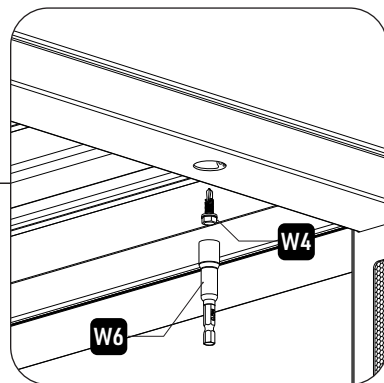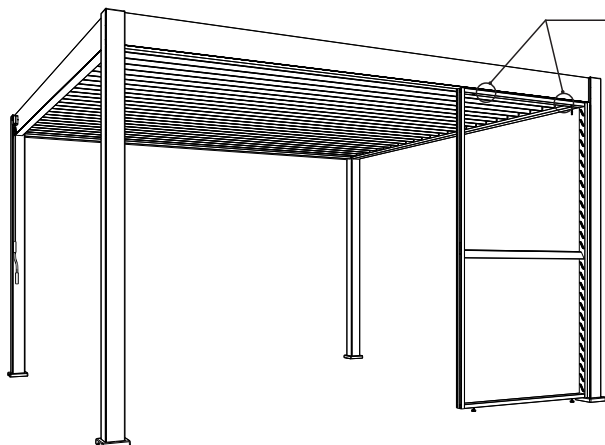

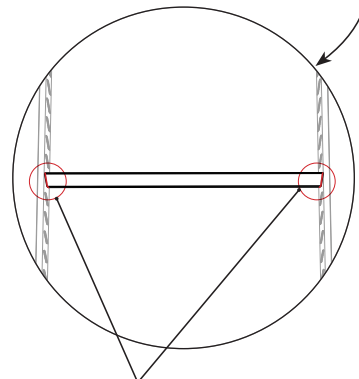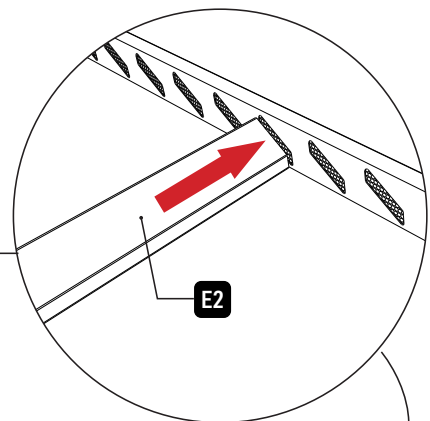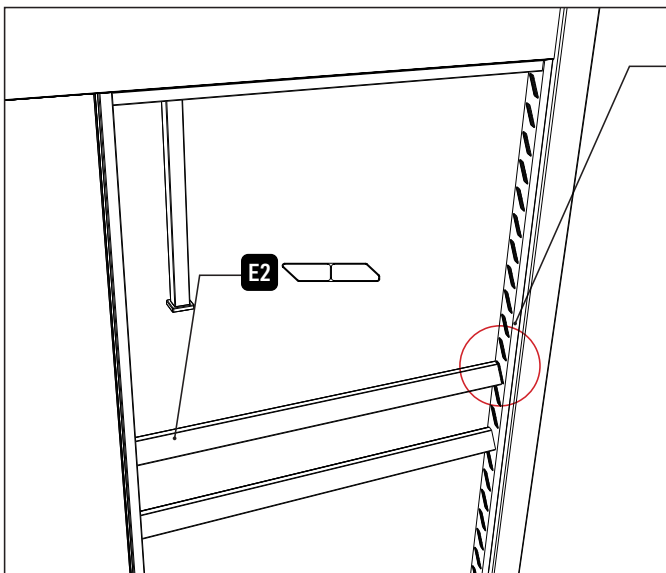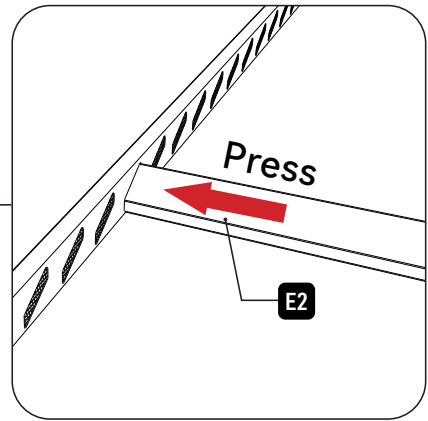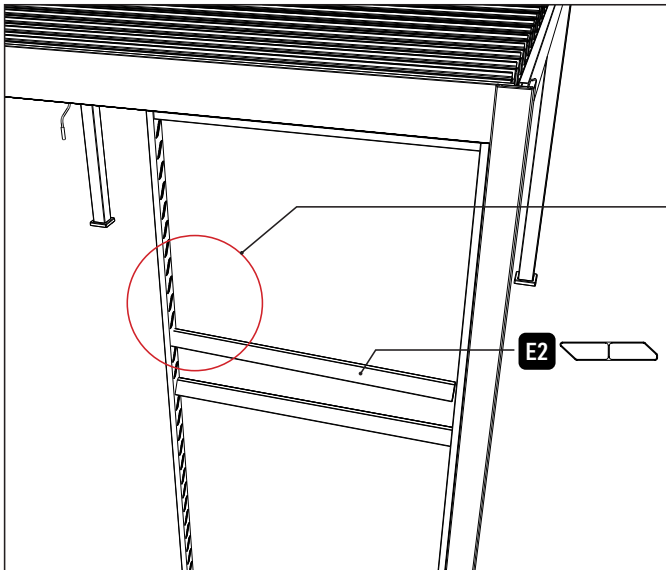

Stuck In Sponge

