HS5066H Assembly Instruction



After-Sales Phone Number: (+1) 2093231586



Scan the QR code to watch the installation video.



After-Sales Phone Number: (+1) 2093231586



installation video

Instructions for Use







Up and Down Adjustment

Free Tilt Tension

Strong Loading Capacity

Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order. After the assembly, keep the instruction properly. Make sure all the parts are included (12 kinds in total)

Accessories List

(1) Backrest	(2) Seat Cushion	(3) 2 Armrests	(4) Base Plate	(5) Foot Stool	(6) Air Rod
	(8) 5 M6*20mm Screws	(9) 8 M8*25mm Screws			(12) Hexagon Wrench

Notice

[If any questions, please get in touch with HeroSet-Service@outlook.com/HeroSet-Sales@outlook.com]


- Do not stand in this chair or use the chair as a step ladder use it as a chair only. This chair is designed for one person to use at a time.
- Do not use this chair unless all bolts, screws and knobs are firmly secured.
- Check all bolts, screws and knobs every 90 days. Tighten them if any are loose.
- Failure to follow these instructions may result in serious injury or death of yourself and people around you.
- Some parts are heavy and have sharp edges, please install them carefully to avoid hurting you and the people around you.

Assembly Instruction

Please assemble in a wide and flat place.

Step 1


Insert 5 Foot Stool (5) into the central base tube as shown. Align with the holes on both sides, tighten 5 M6*20mm Screws (8) with Hexagon Wrench (12).

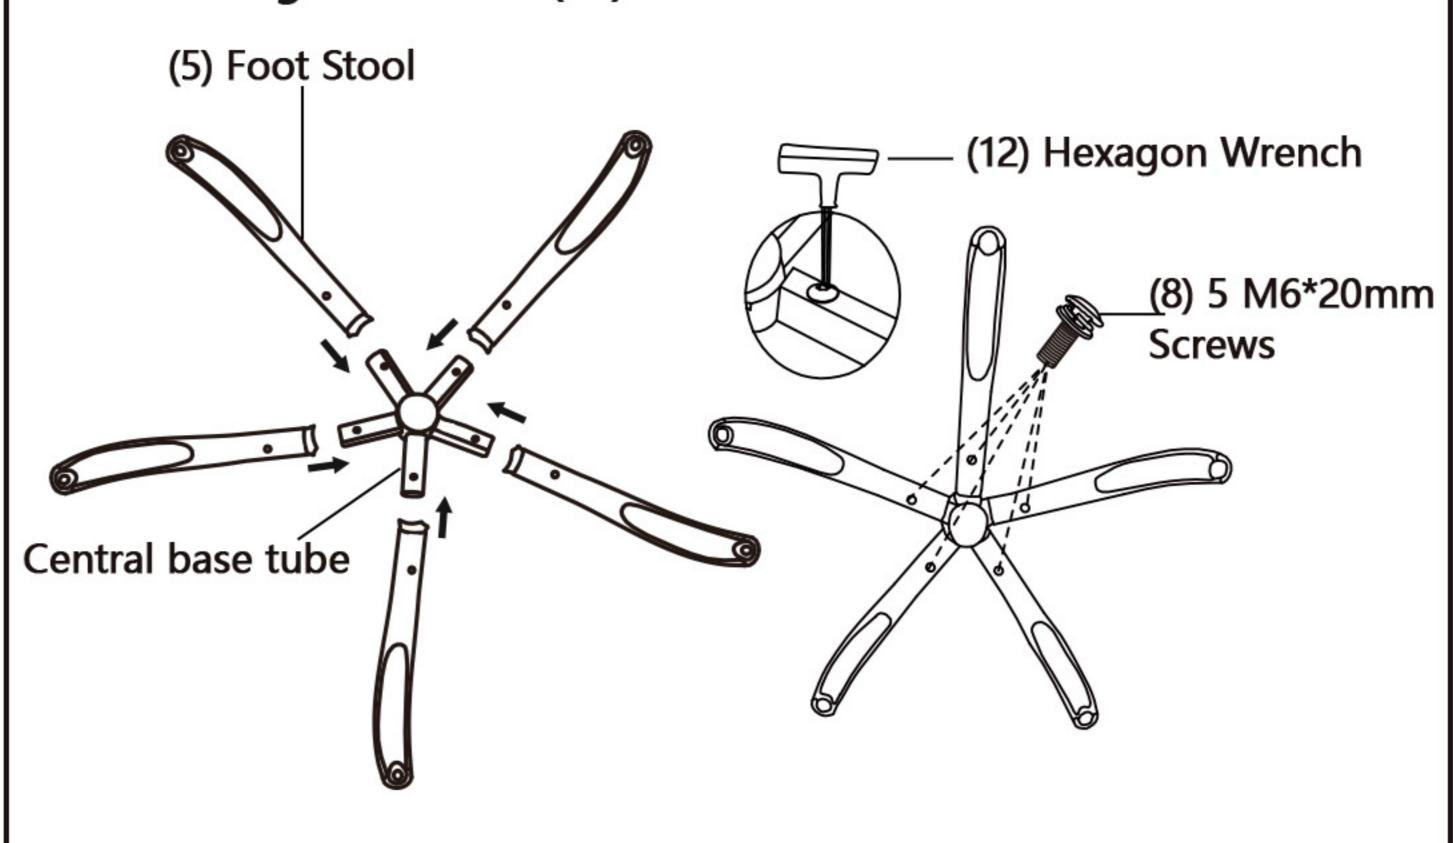

Step 2

Insert 5 Castors (7) to the Foot Stool (5) installed in step 1 and press them in firmly. Put Air Rod (6) into the hole of the central base tube as shown.


* Caution: Confirm 5 Castors (7) must be inserted deeply. Otherwise, the castors

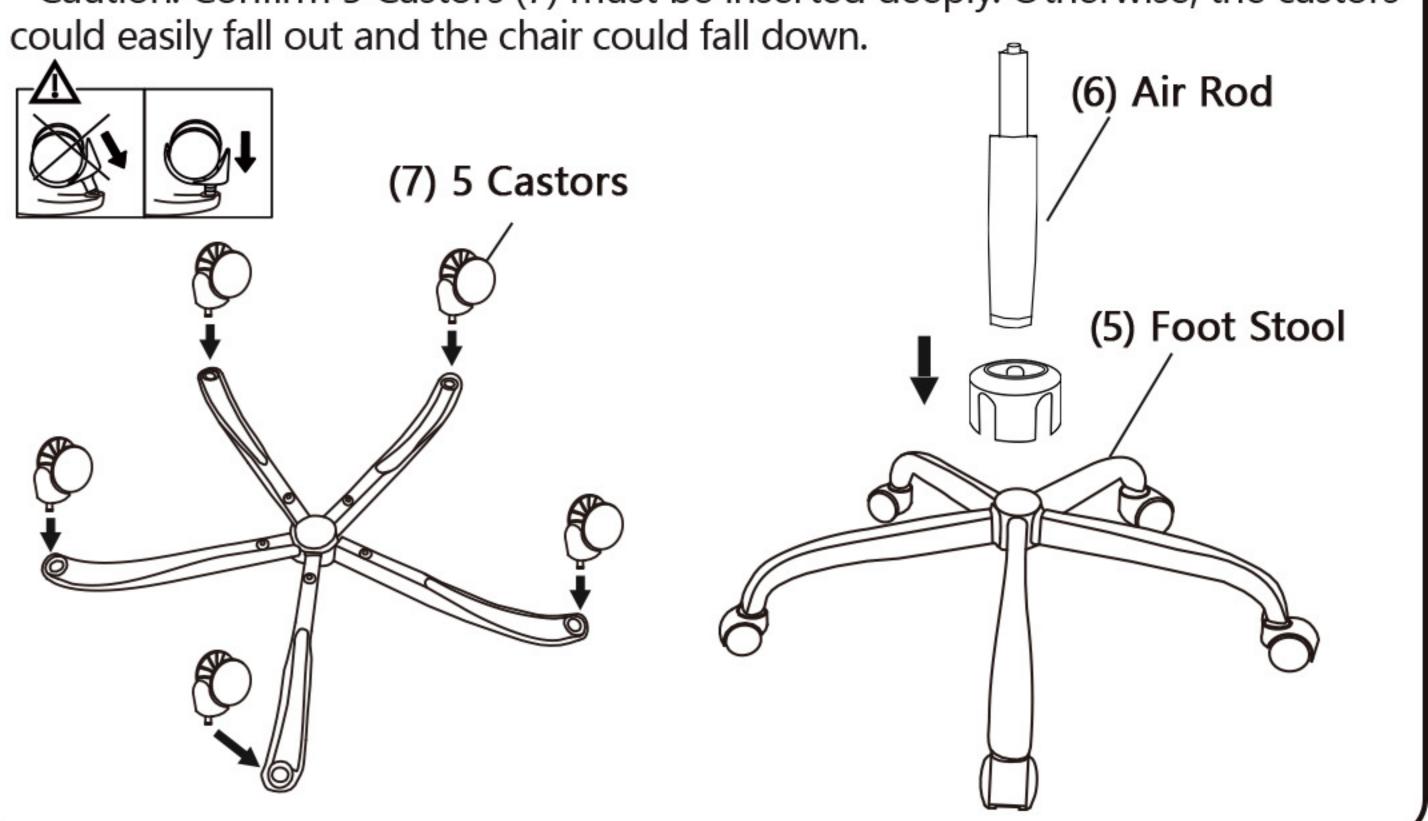

Step 3


Fix the Base Plate (4) to the bottom of the Seat Cushion (2). Tighten the 4 M6*30mm Screws (10) with Hexagon Wrench (12) firmly.

*Caution: Align the direction with the 'FRONT' mark for installation, half-tighten the screws first, and tighten four screws after aligning the holes to prevent the chassis from shifting and being difficult to tighten.

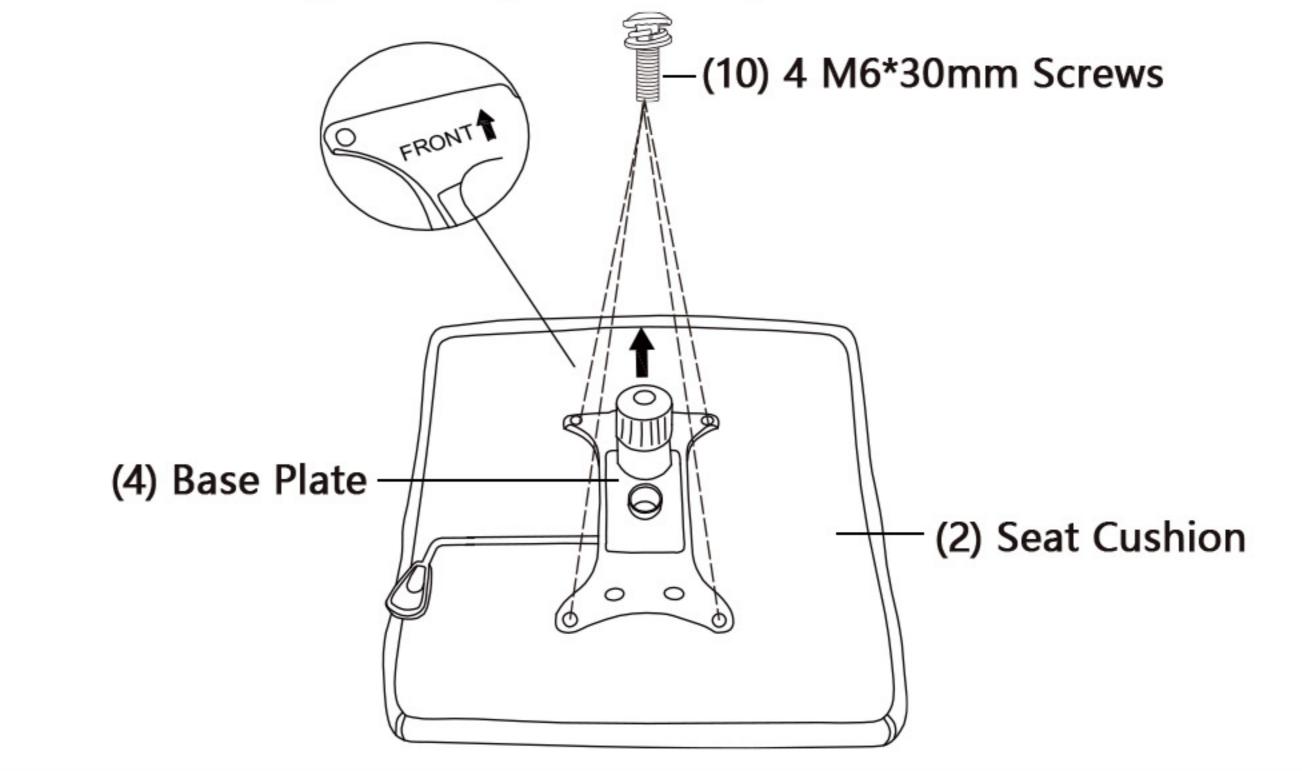


Step 4

Insert the Air Rod (6) into the step 3' Base Plate (4) as shown. Press the Seat Cushion (2) from top to bottom, and use your whole body's strength to insert it firmly. Then take out the 2 Armrests (3), tighten the 4 M8*25mm Screws (9) with Hexagon Wrench (12) and fix the 2 Armrests (3) to the two sides of the Seat Cushion (2).

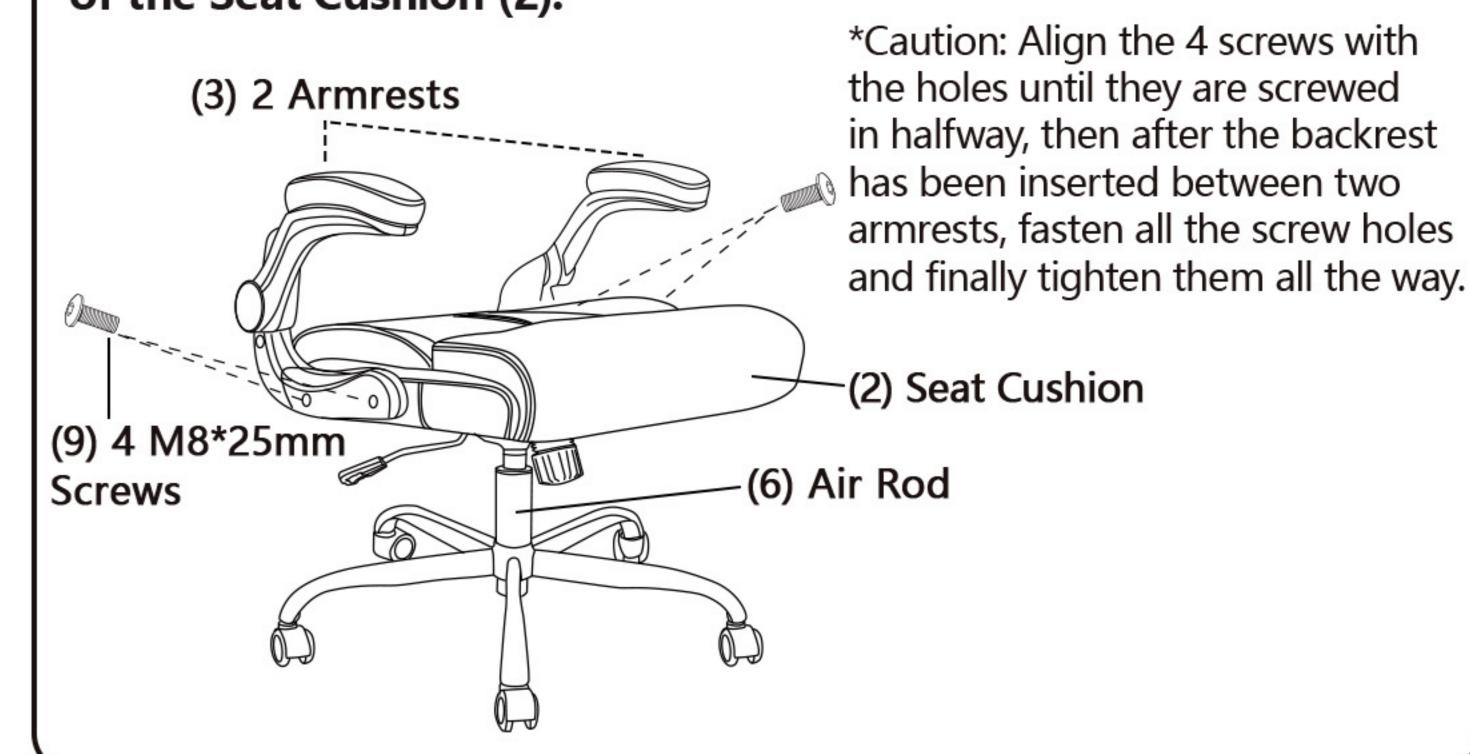


Step 5

Insert the Backrest (1) between the 2 Armrests (3), align the holes then press the armrests in and fasten them, then tighten with 4 M8*25mm Screws (9).

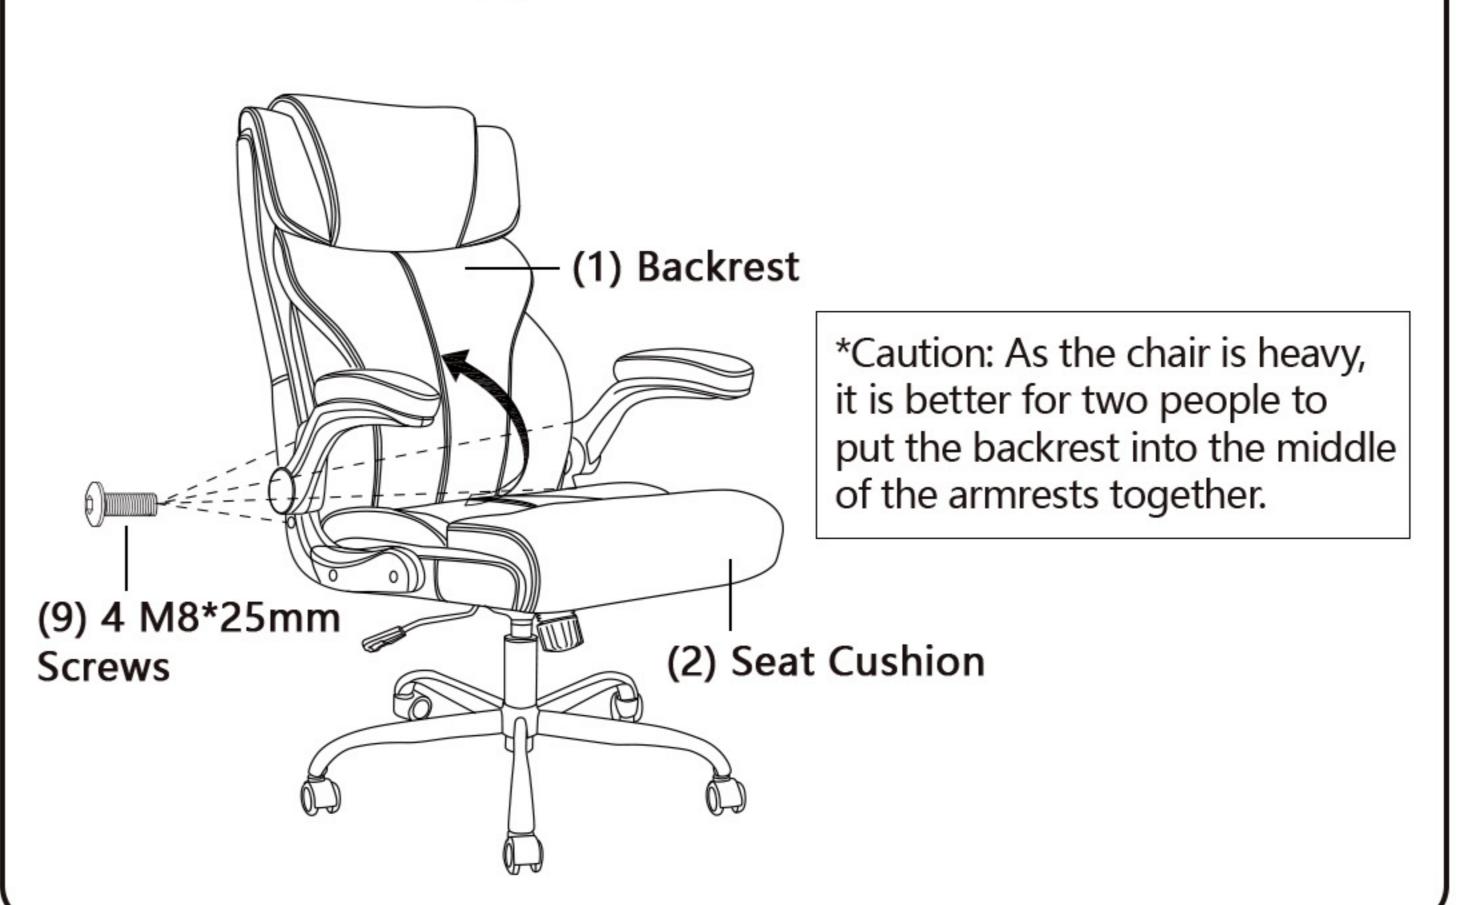

Step 6

Cover the screw holes on both sides of 2 Armrests (3) with

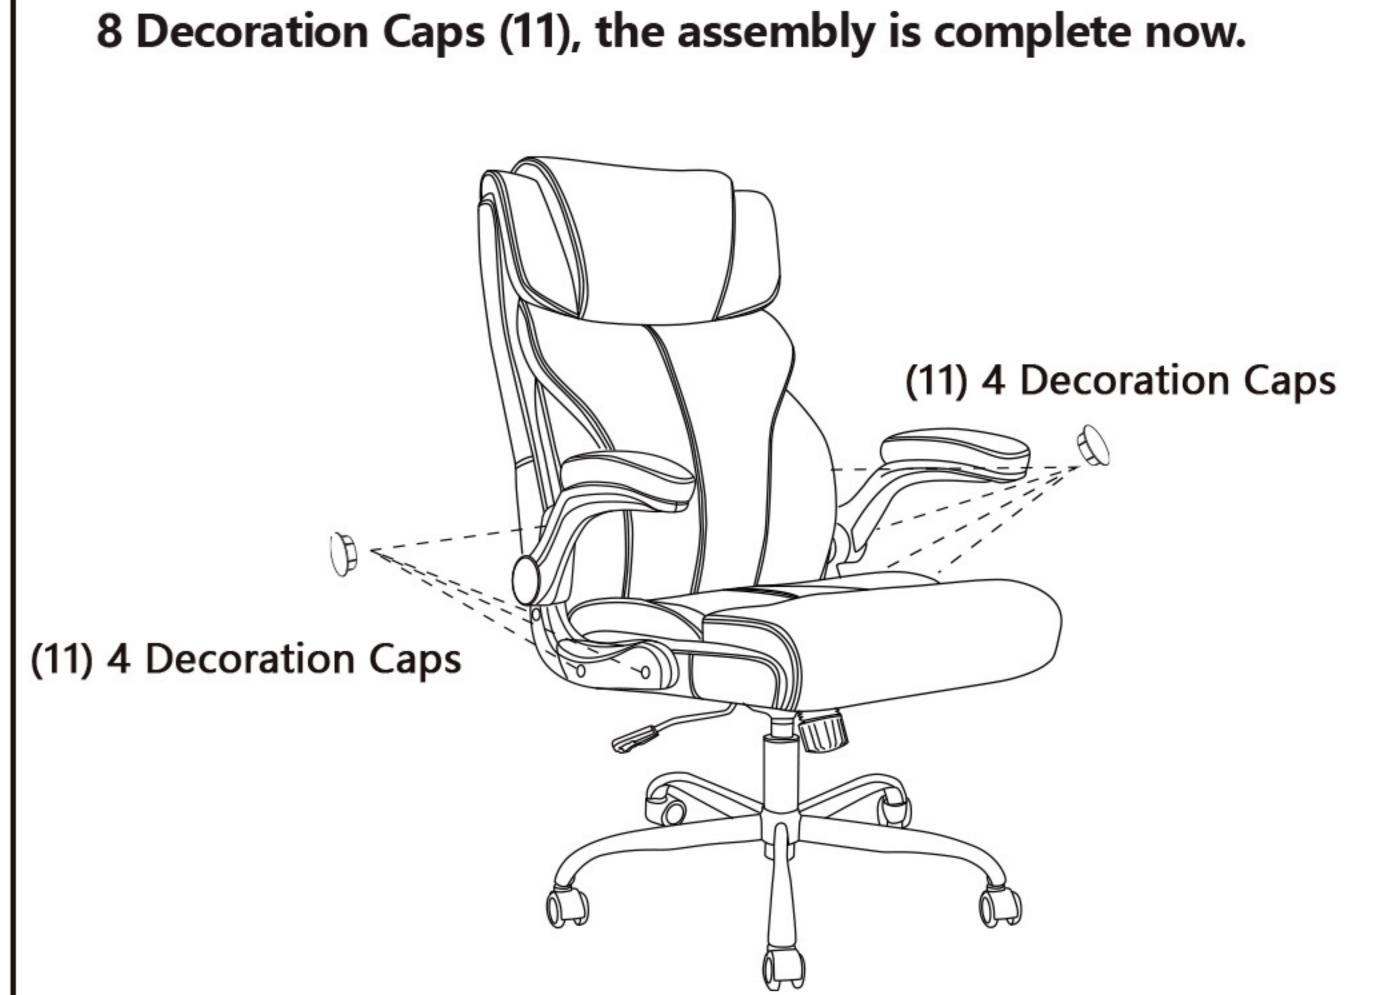

Activate Your Warranty Now!

We guarantee you a pleasant buying experience. Please scan the QR code to activate your warranty, so that you can enjoy priority and better after-sales service.

