


We are so happy you chose a
hama product.

Enjoy using it!

hama

Quick Installation Guide


Required tools

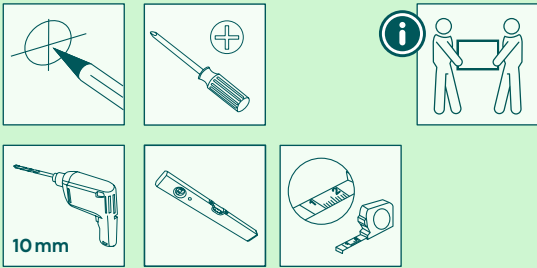


Installation kit

A1		8x60 (x4)
A2		Ø10x60 (x4)
A3		M8 (x4)
B1		M6 (x4)
B2		Ø8x10 (x4)
B3		Ø8x20 (x4)
C1		M6x12 (x4)
C2		M6x20 (x4)
D1		M8x12 (x4)
D2		M8x20 (x4)
D3		M8x30 (x4)
D4		M8x50 (x4)
E1		M4x12 (x4)
E2		M4x20 (x4)
F1		Ø8,5 (x4)
F2		M8 (x4)
F3		M8, M6 (x1)
F4		6x6 (x1)
F5		4x4 (x1)
H1		(x1)
H2		M6x6 (x4)


1 Preparation

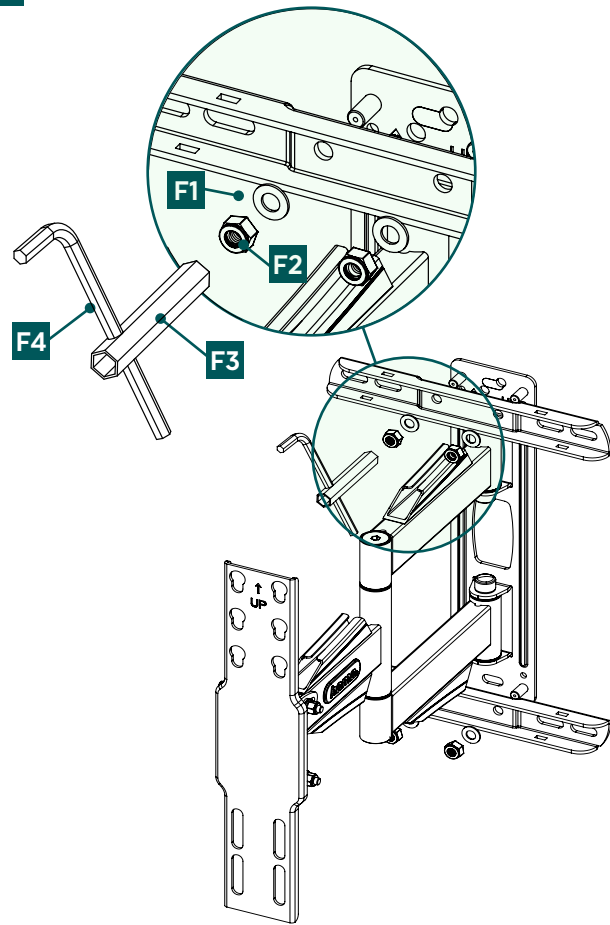

2 Wall mounting the bracket

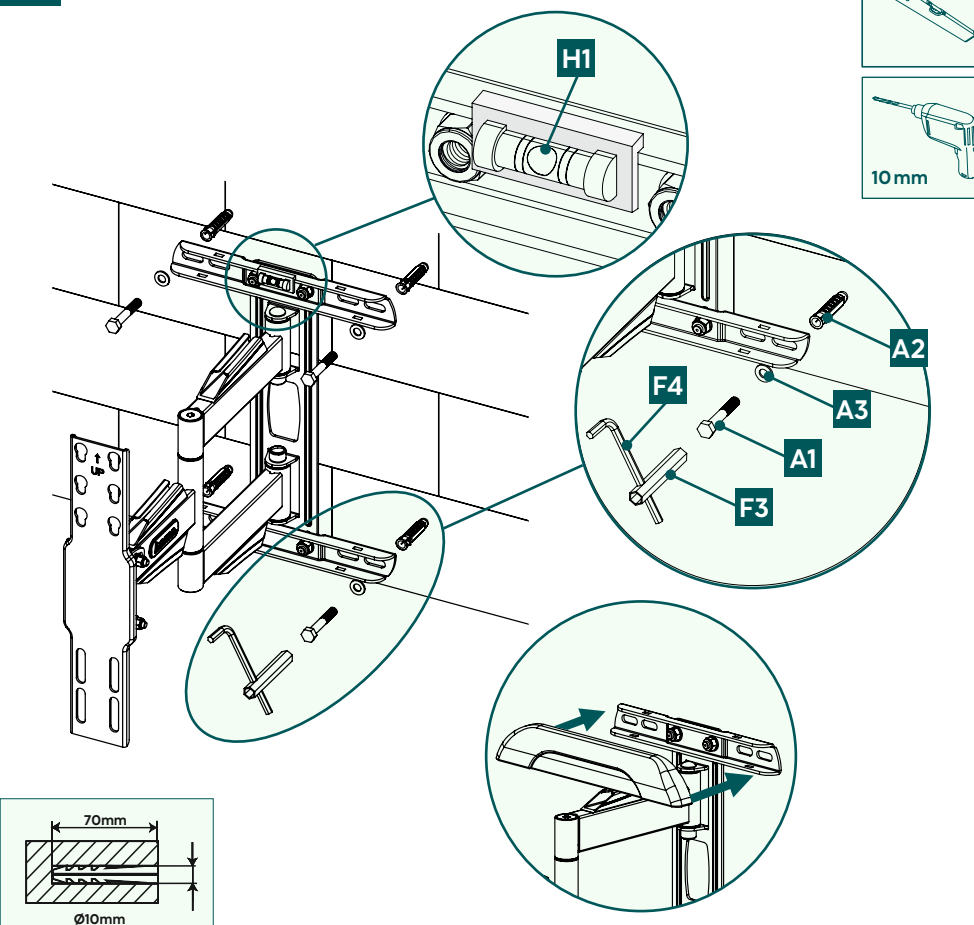

3a Mounting on TV

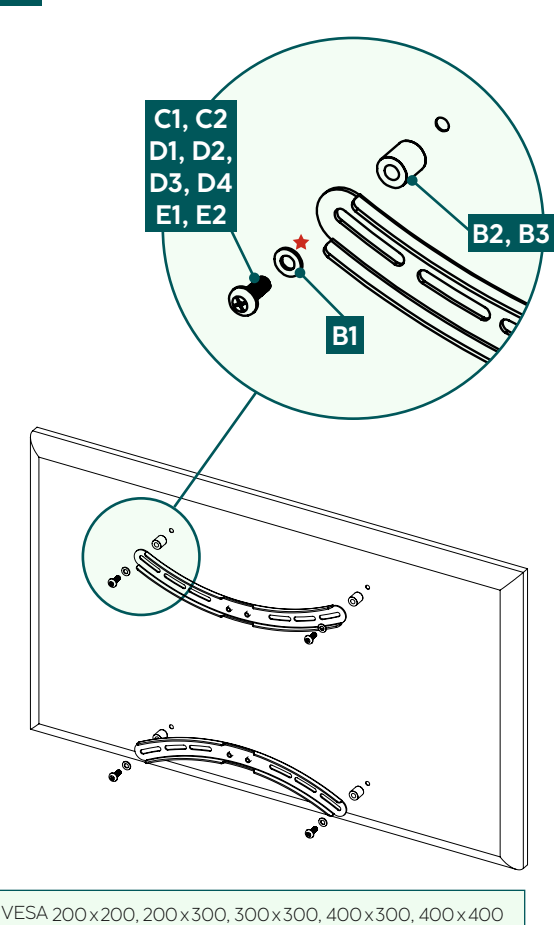

Flat TV backside
C1, D1, D4, E1 + B1

Curved TV backside
C2, D2, D4, E2 + B1 + B2

D3, D4 + B3

★ You do not need a washer for the D-screws


M8x50 + Ø8x5 = M8x45 (D4)

✓

✗


VESA 200x200, 200x300, 300x300, 400x300, 400x400

3b VESA variation

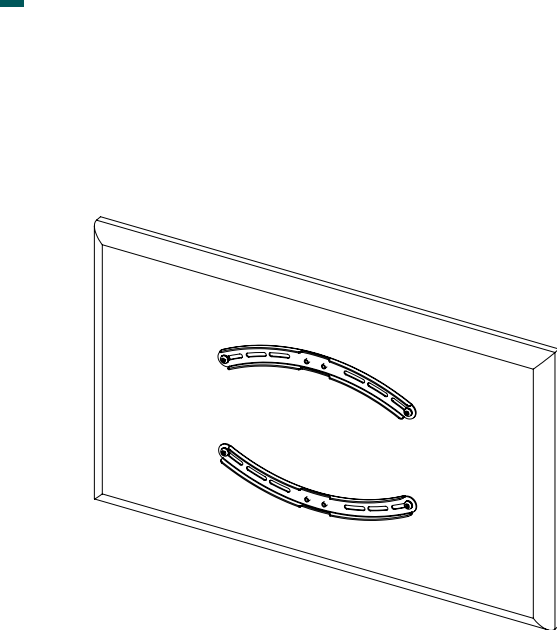


VESA 300x200, 400x300


4 Mounting TV on bracket

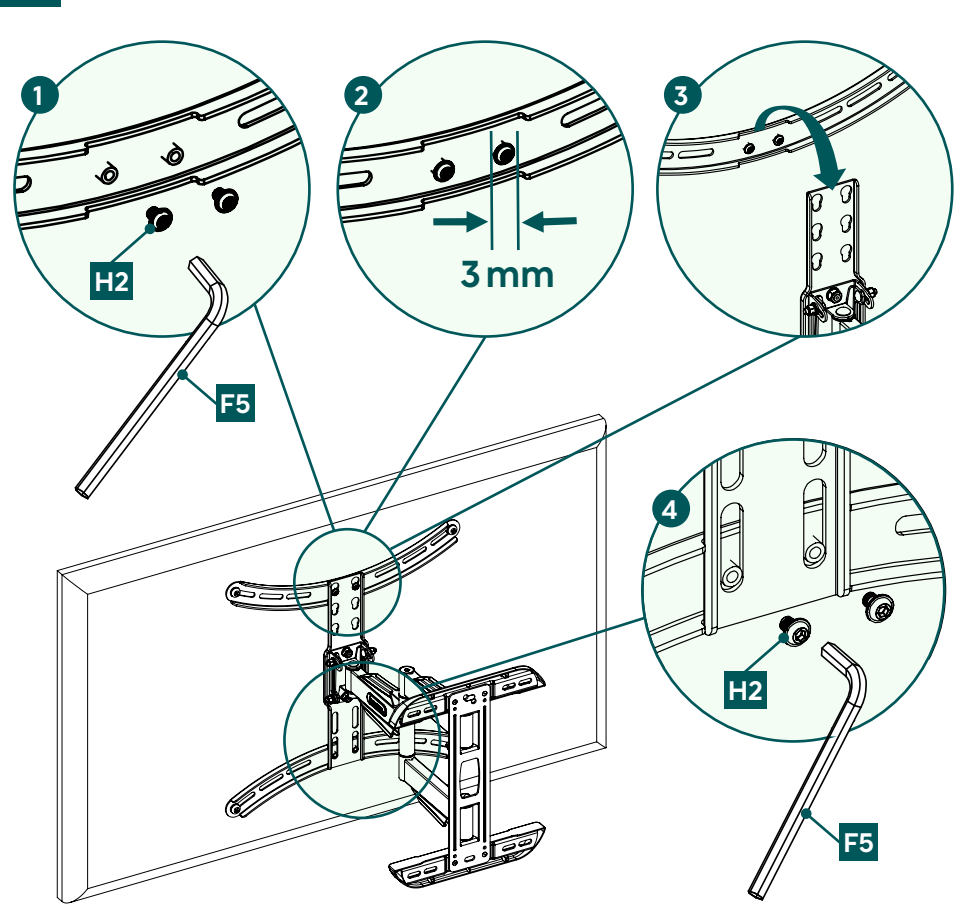

5 Adjustments

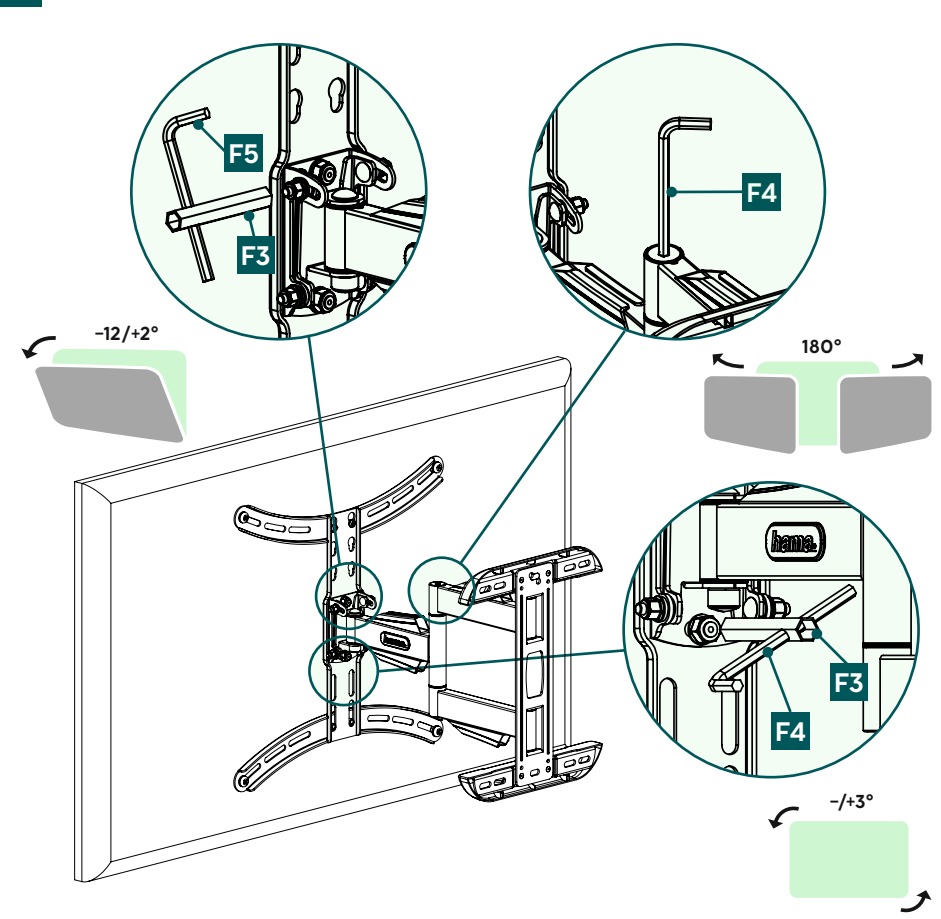

Do you need more help?

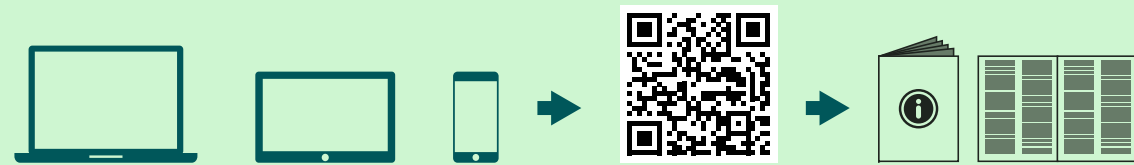

Scan QR or visit: www.hama.com
➔ 00220841 ➔ Downloads

