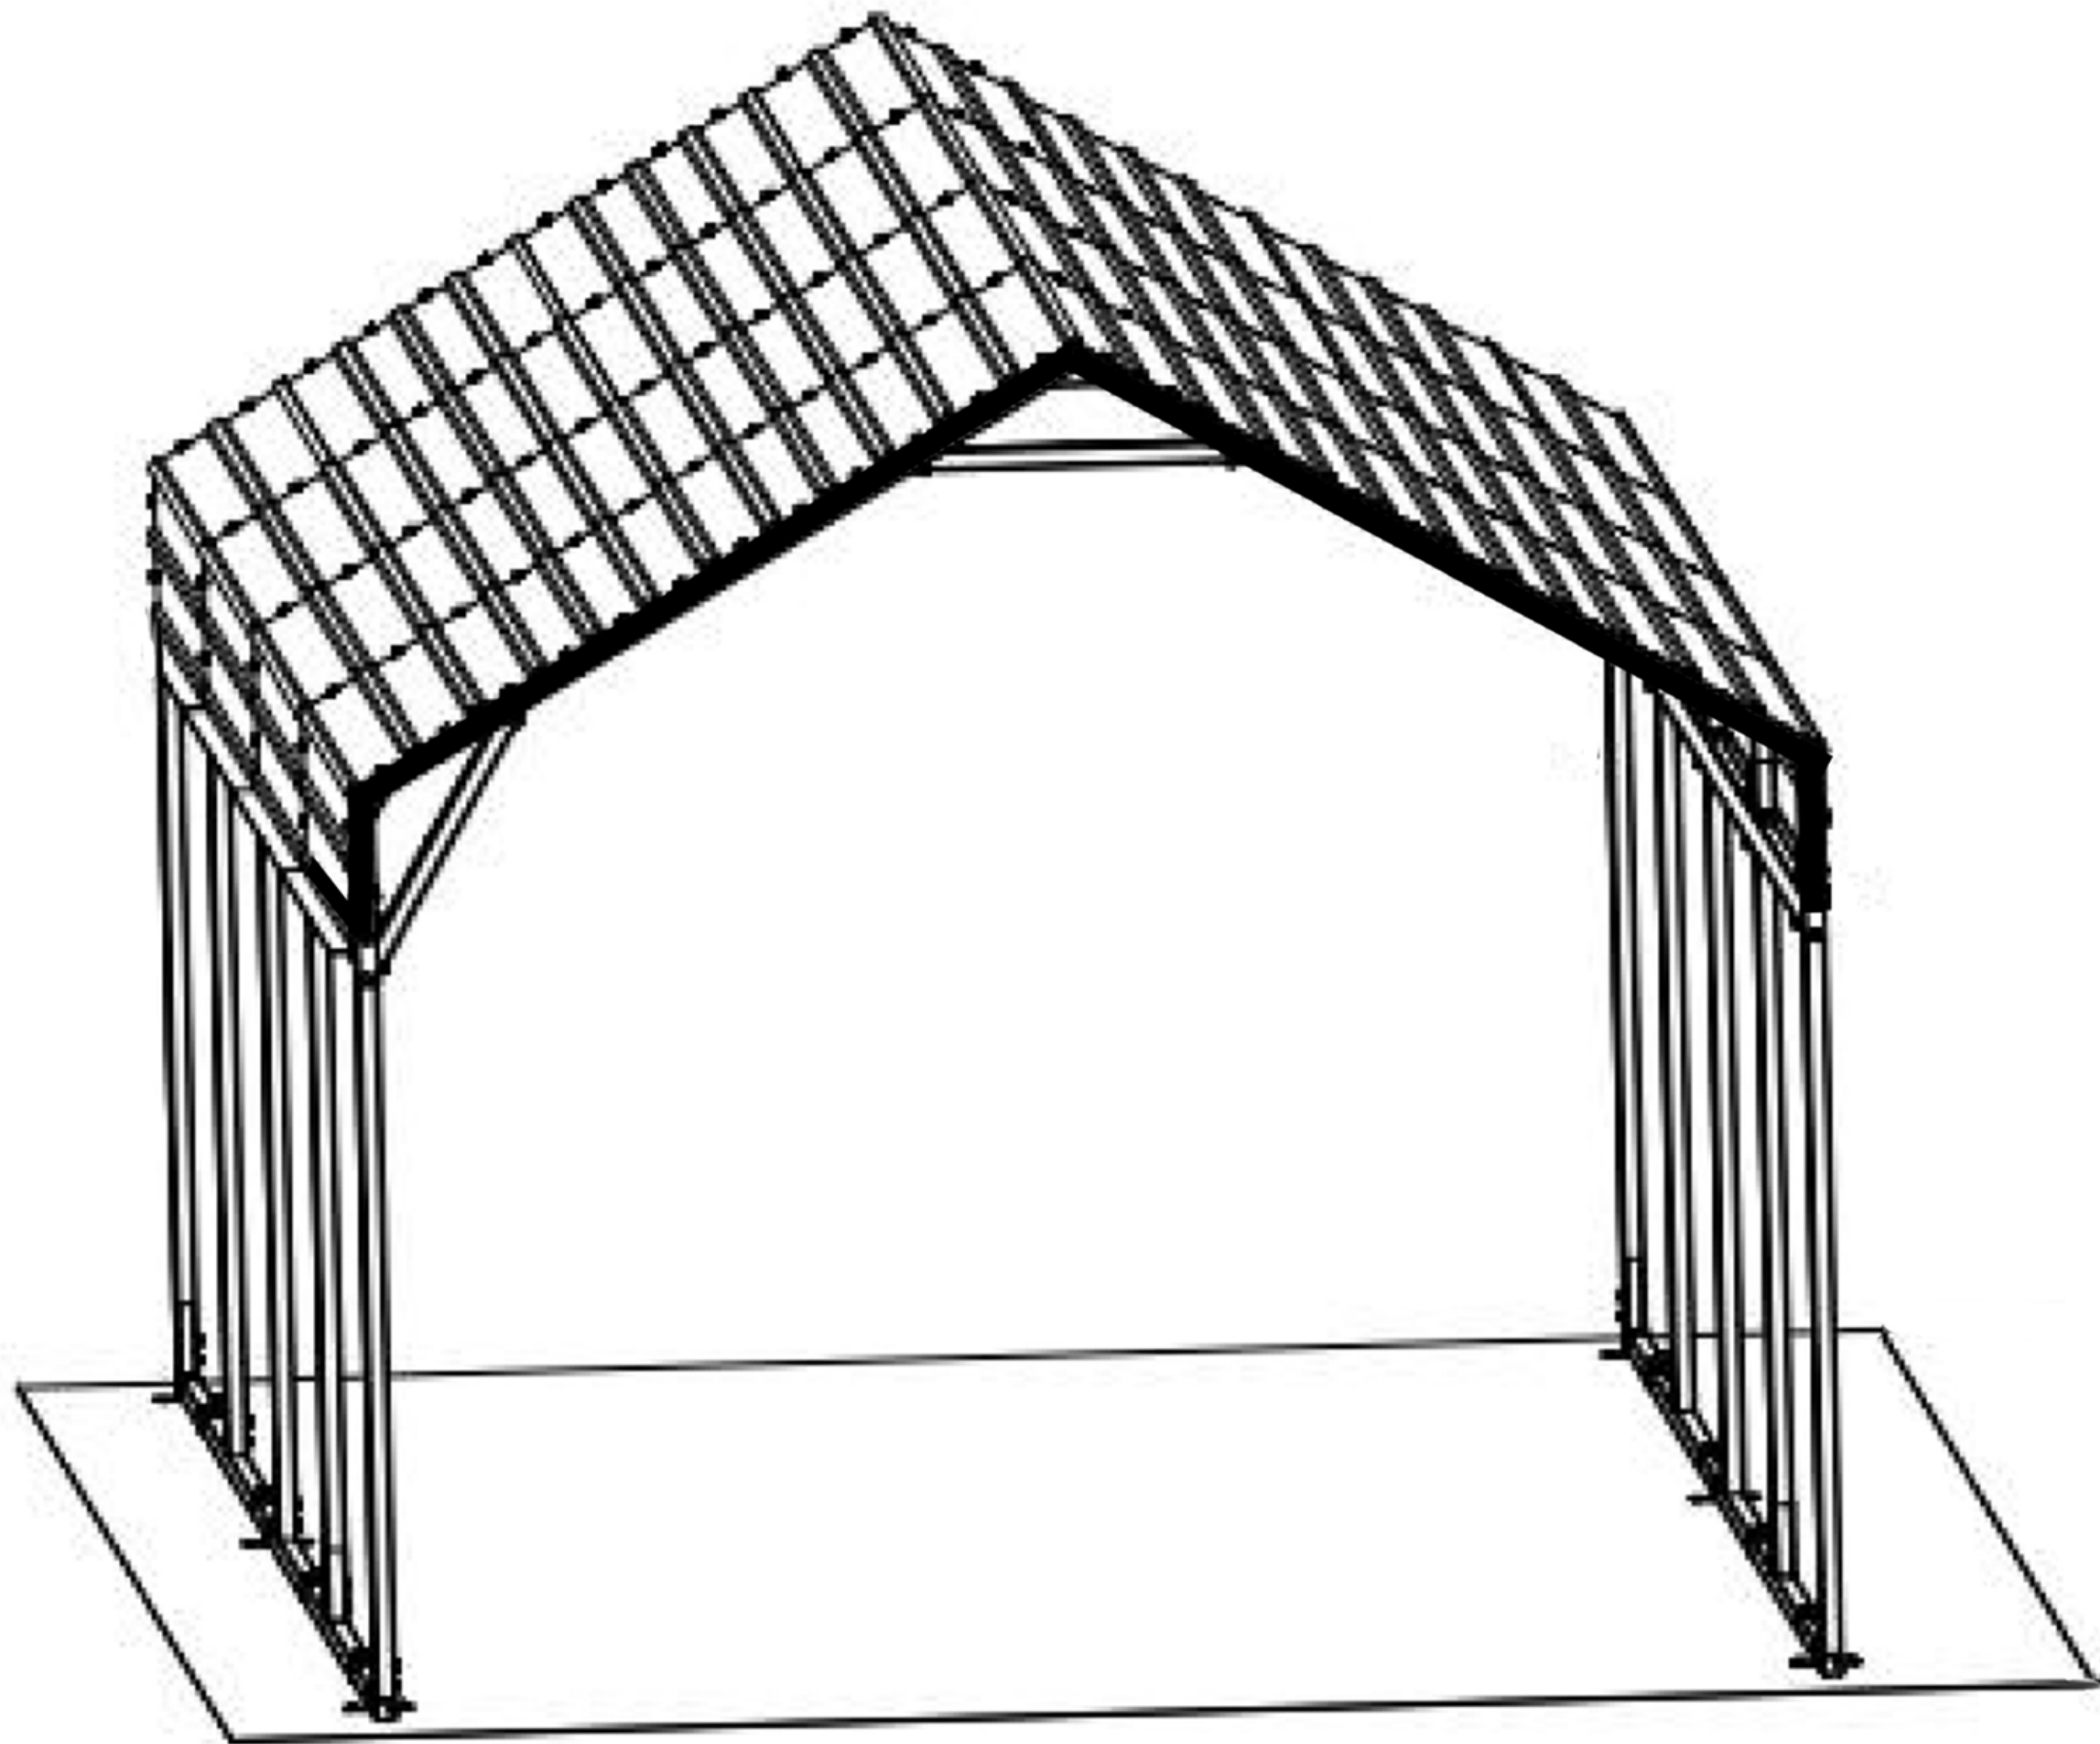


Installation instructions for Carport

- Preparation before installation




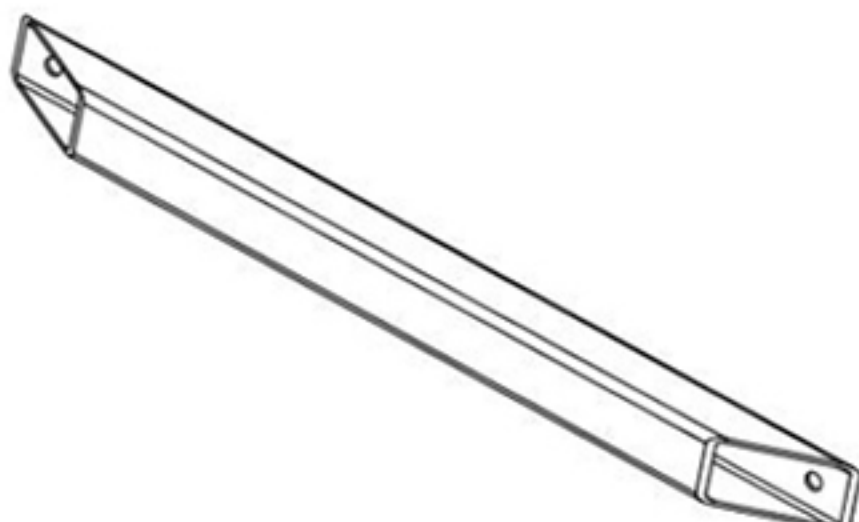

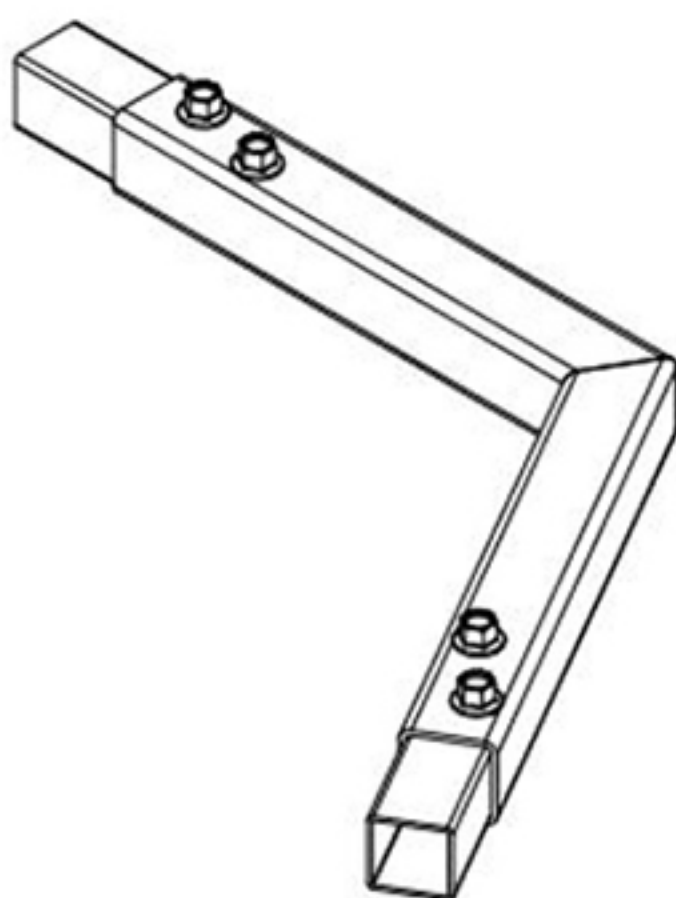
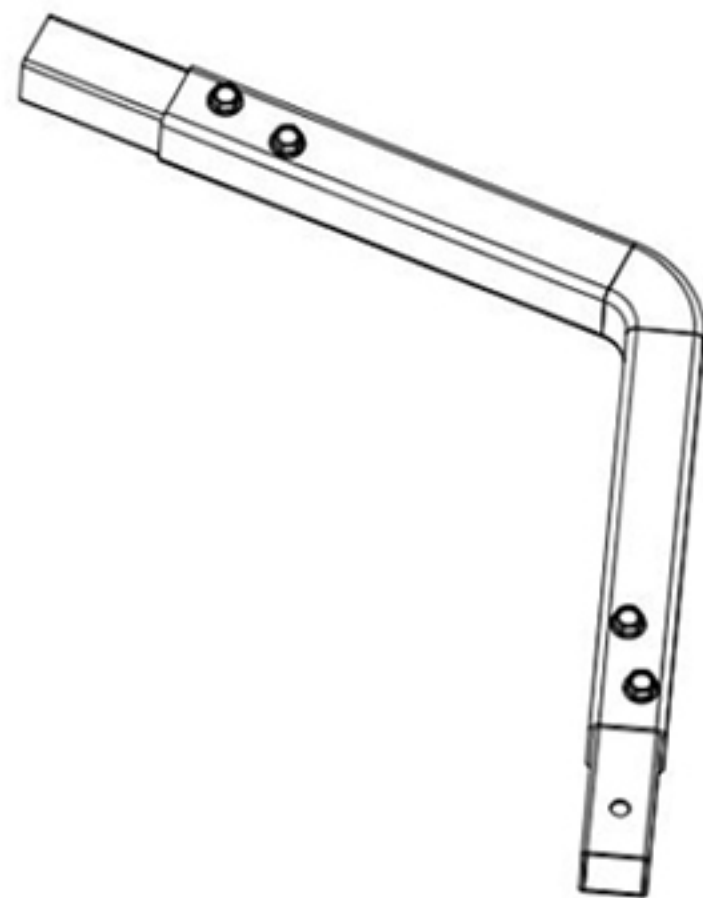
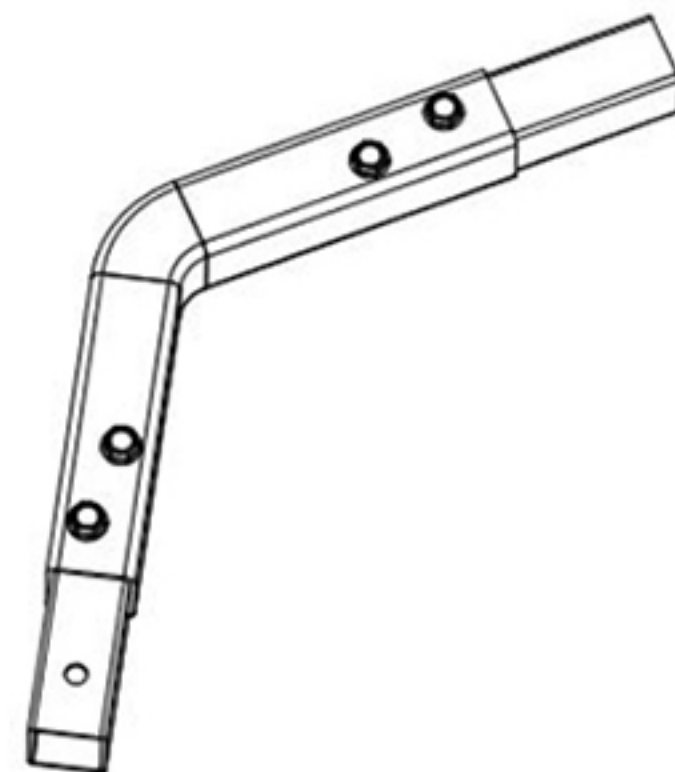
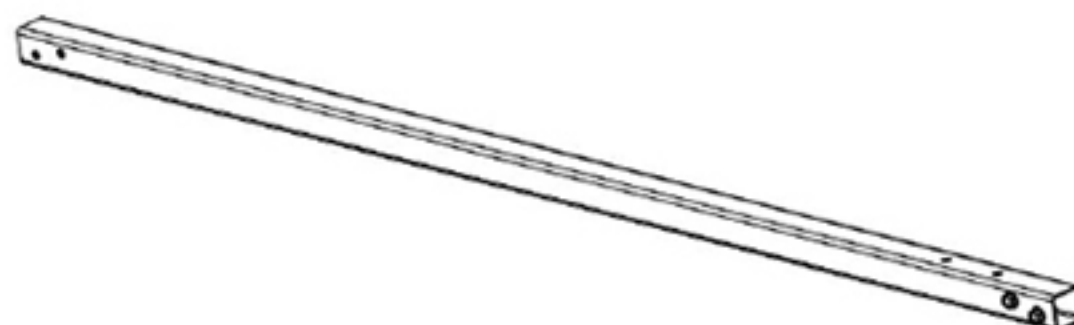
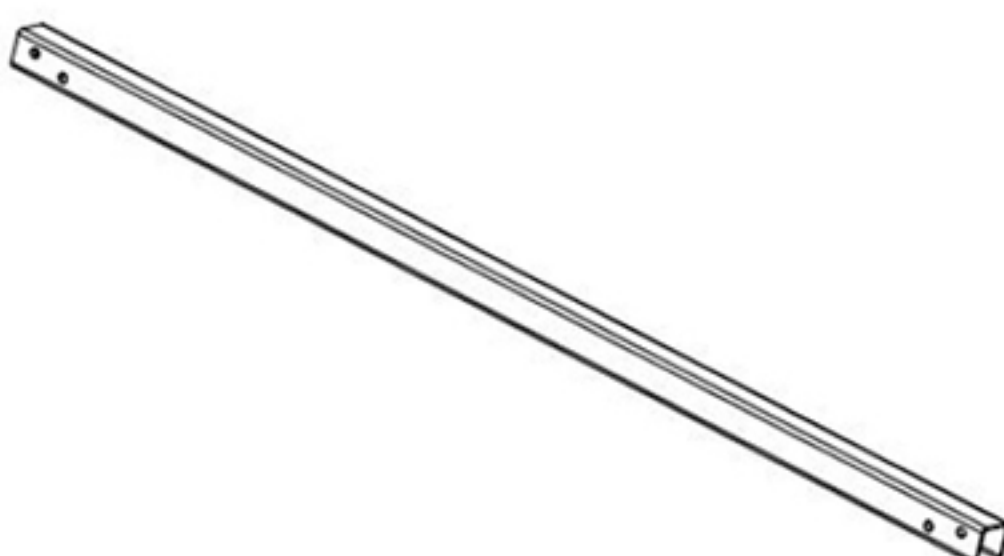
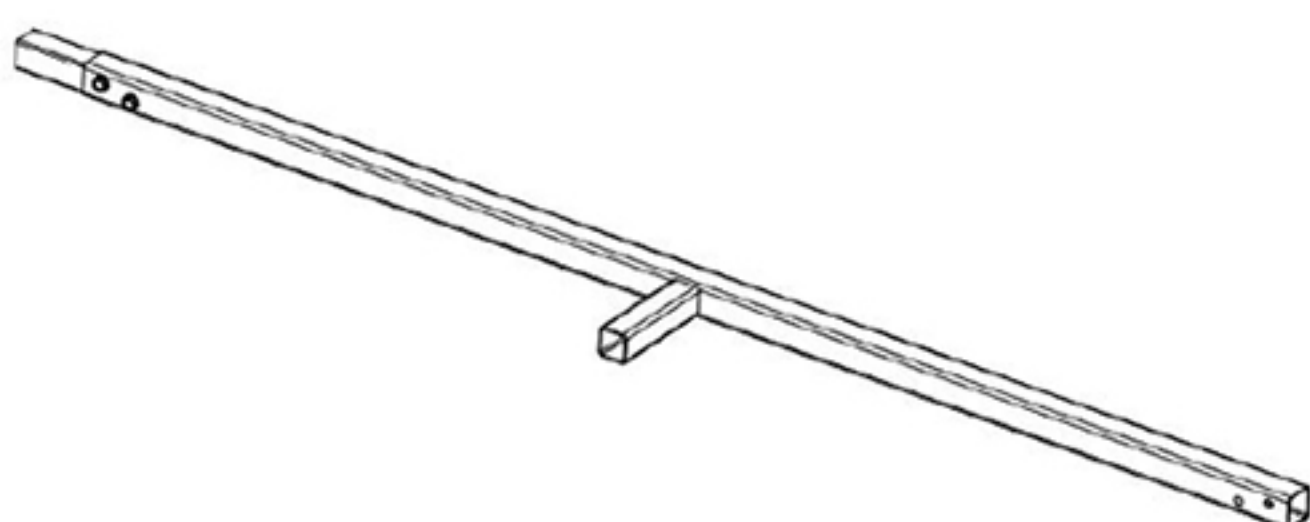
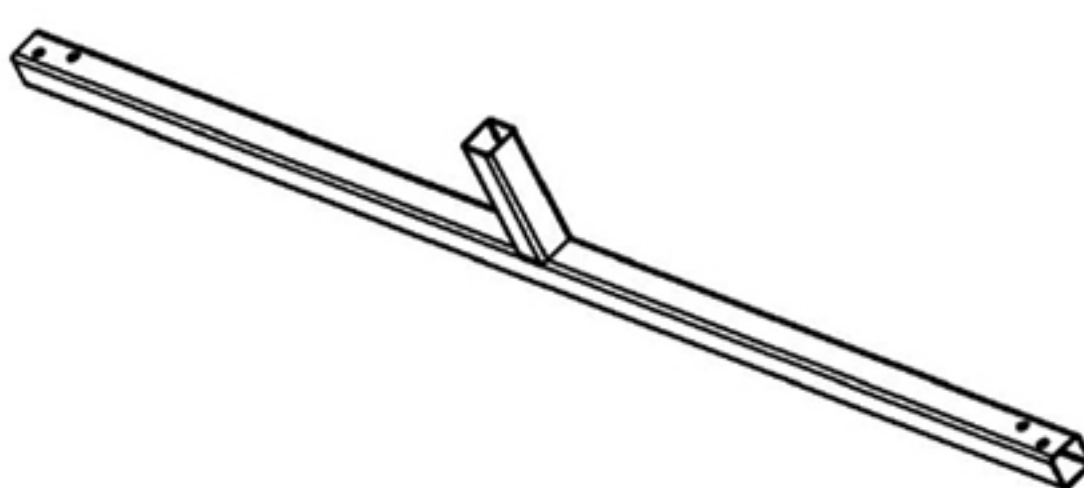
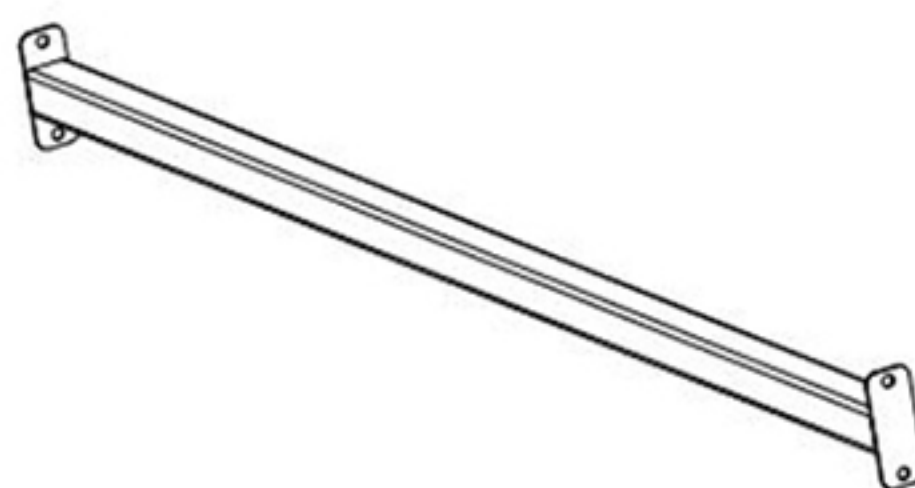
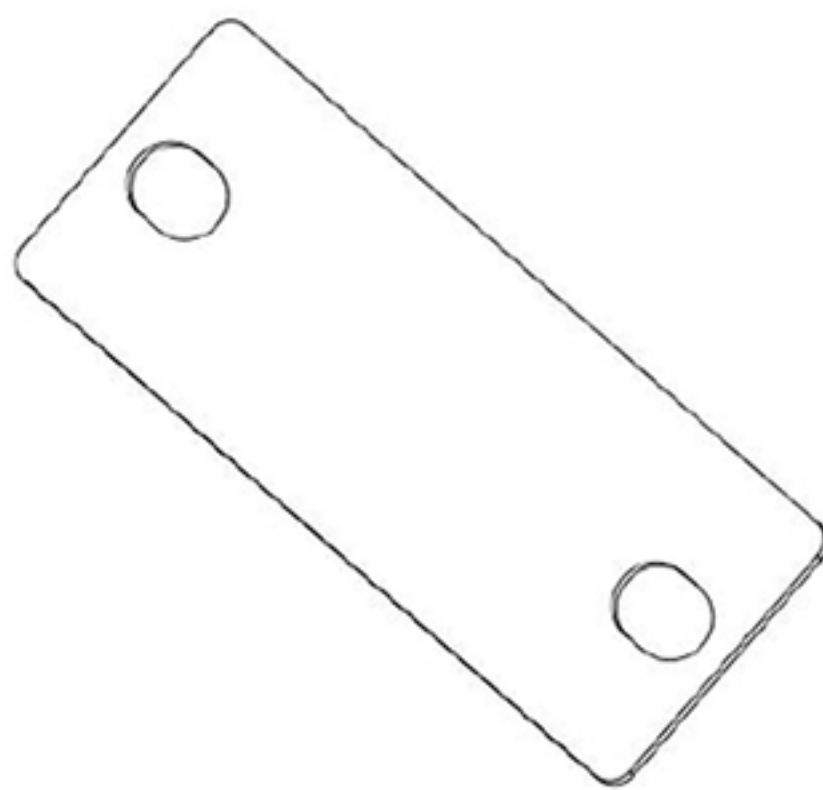
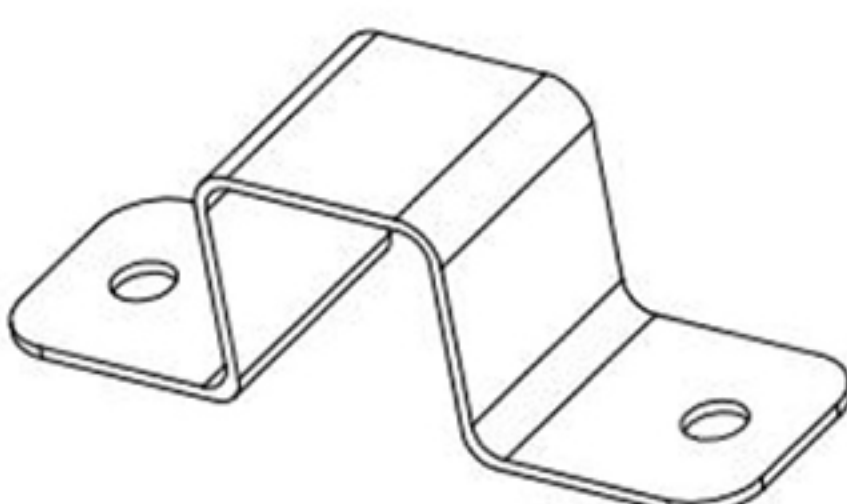
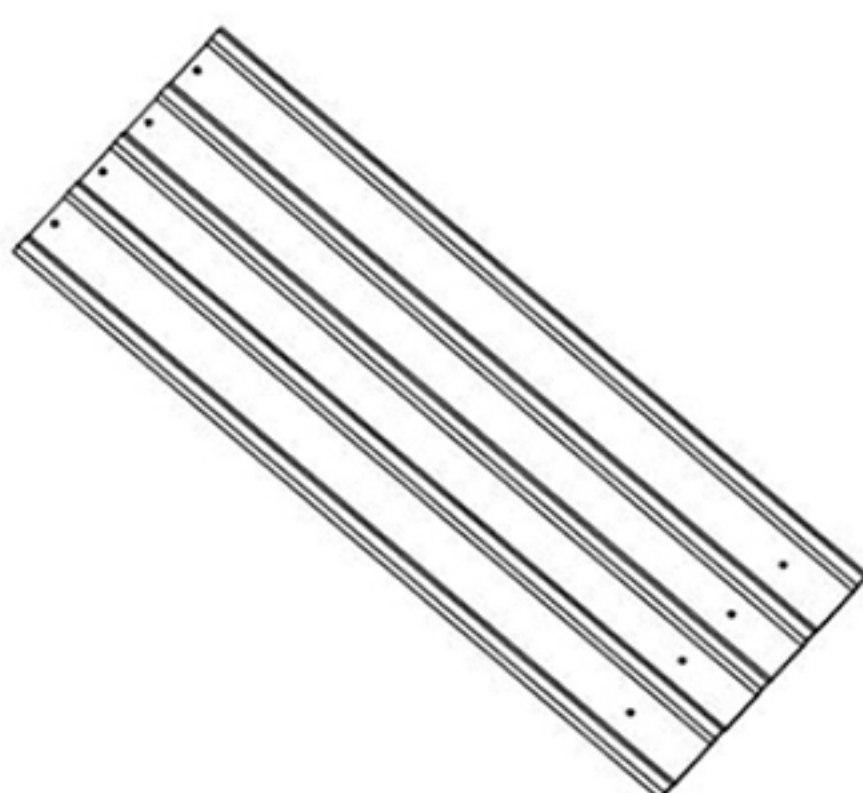
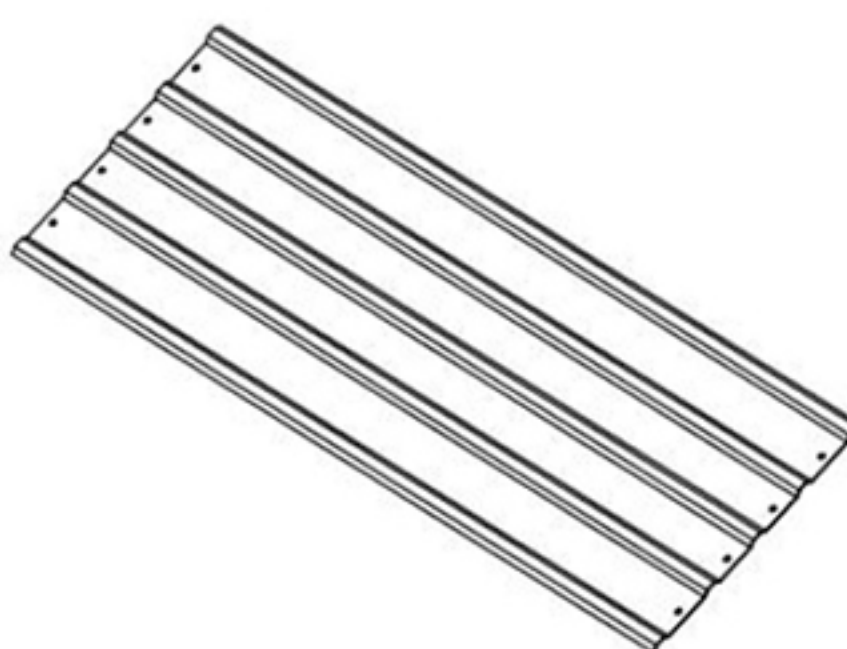
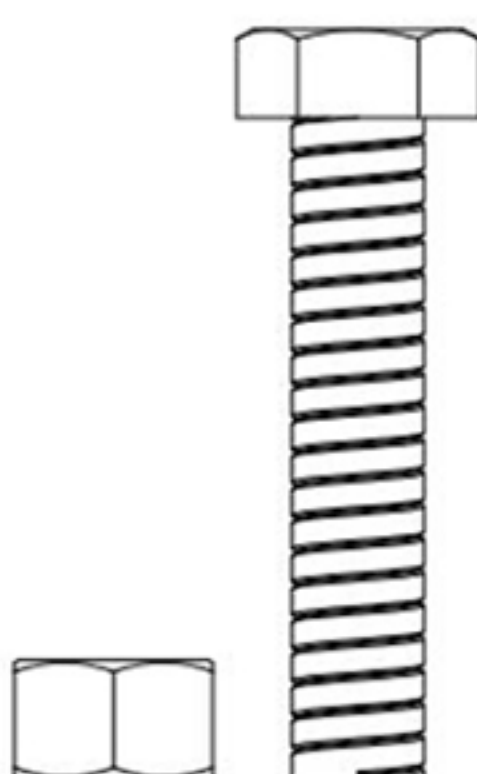
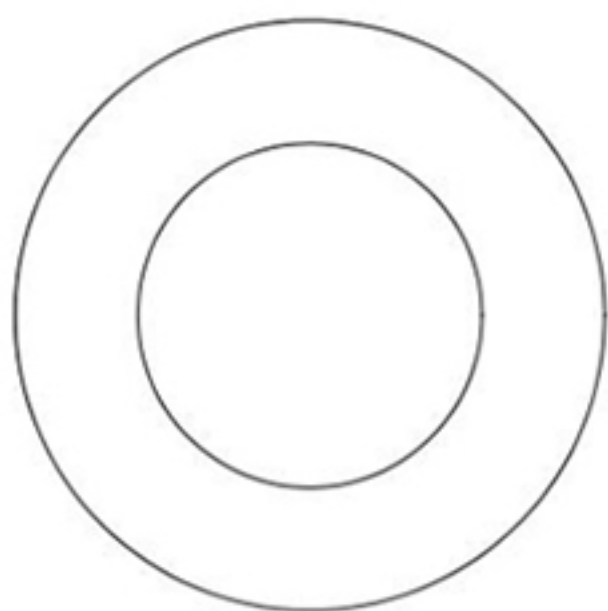



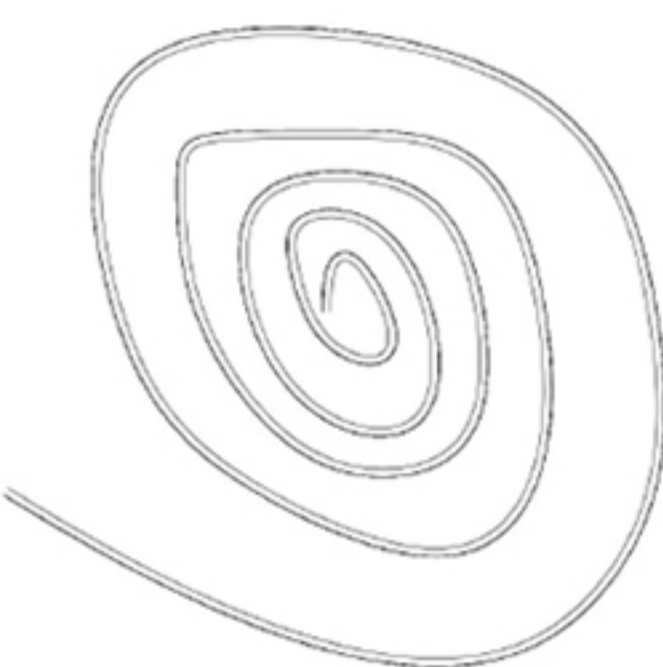
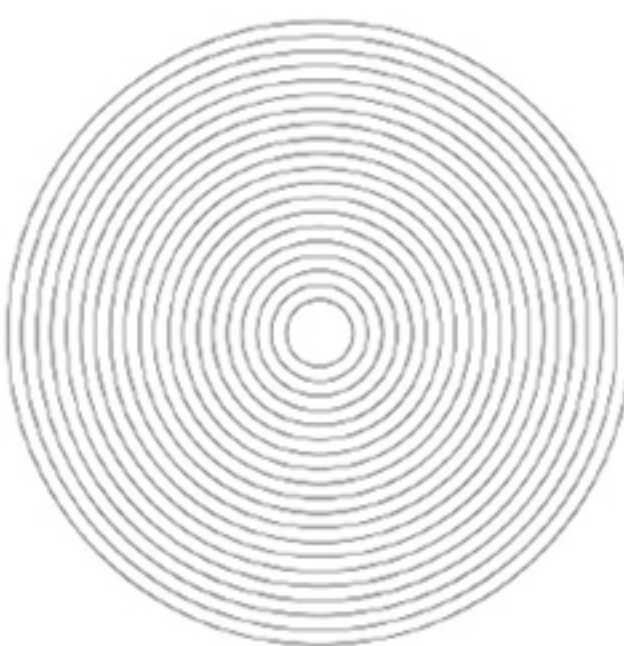
Important Read Before Assembly:

- 1.The ground for installing the carport must be flat and solid (suitable for expansion screws).***
- 2.Always wear gloves, safety helmets, and other protective gear to prevent injuries during installation.***
- 3.The product is packaged in four separate boxes, which may arrive at different times. Please be patient and wait for all four boxes to arrive before starting the assembly.***
- 4.Ensure you have a power drill, screwdriver, scissors, and a ladder ready for the installation.***
- 5.At least two or more people are required for assembly.***

CONTACT US:




If you have any questions about your purchase , please feel free to contact our after-sales email at info@garvee.com TEL:+1 (888) 857-8979

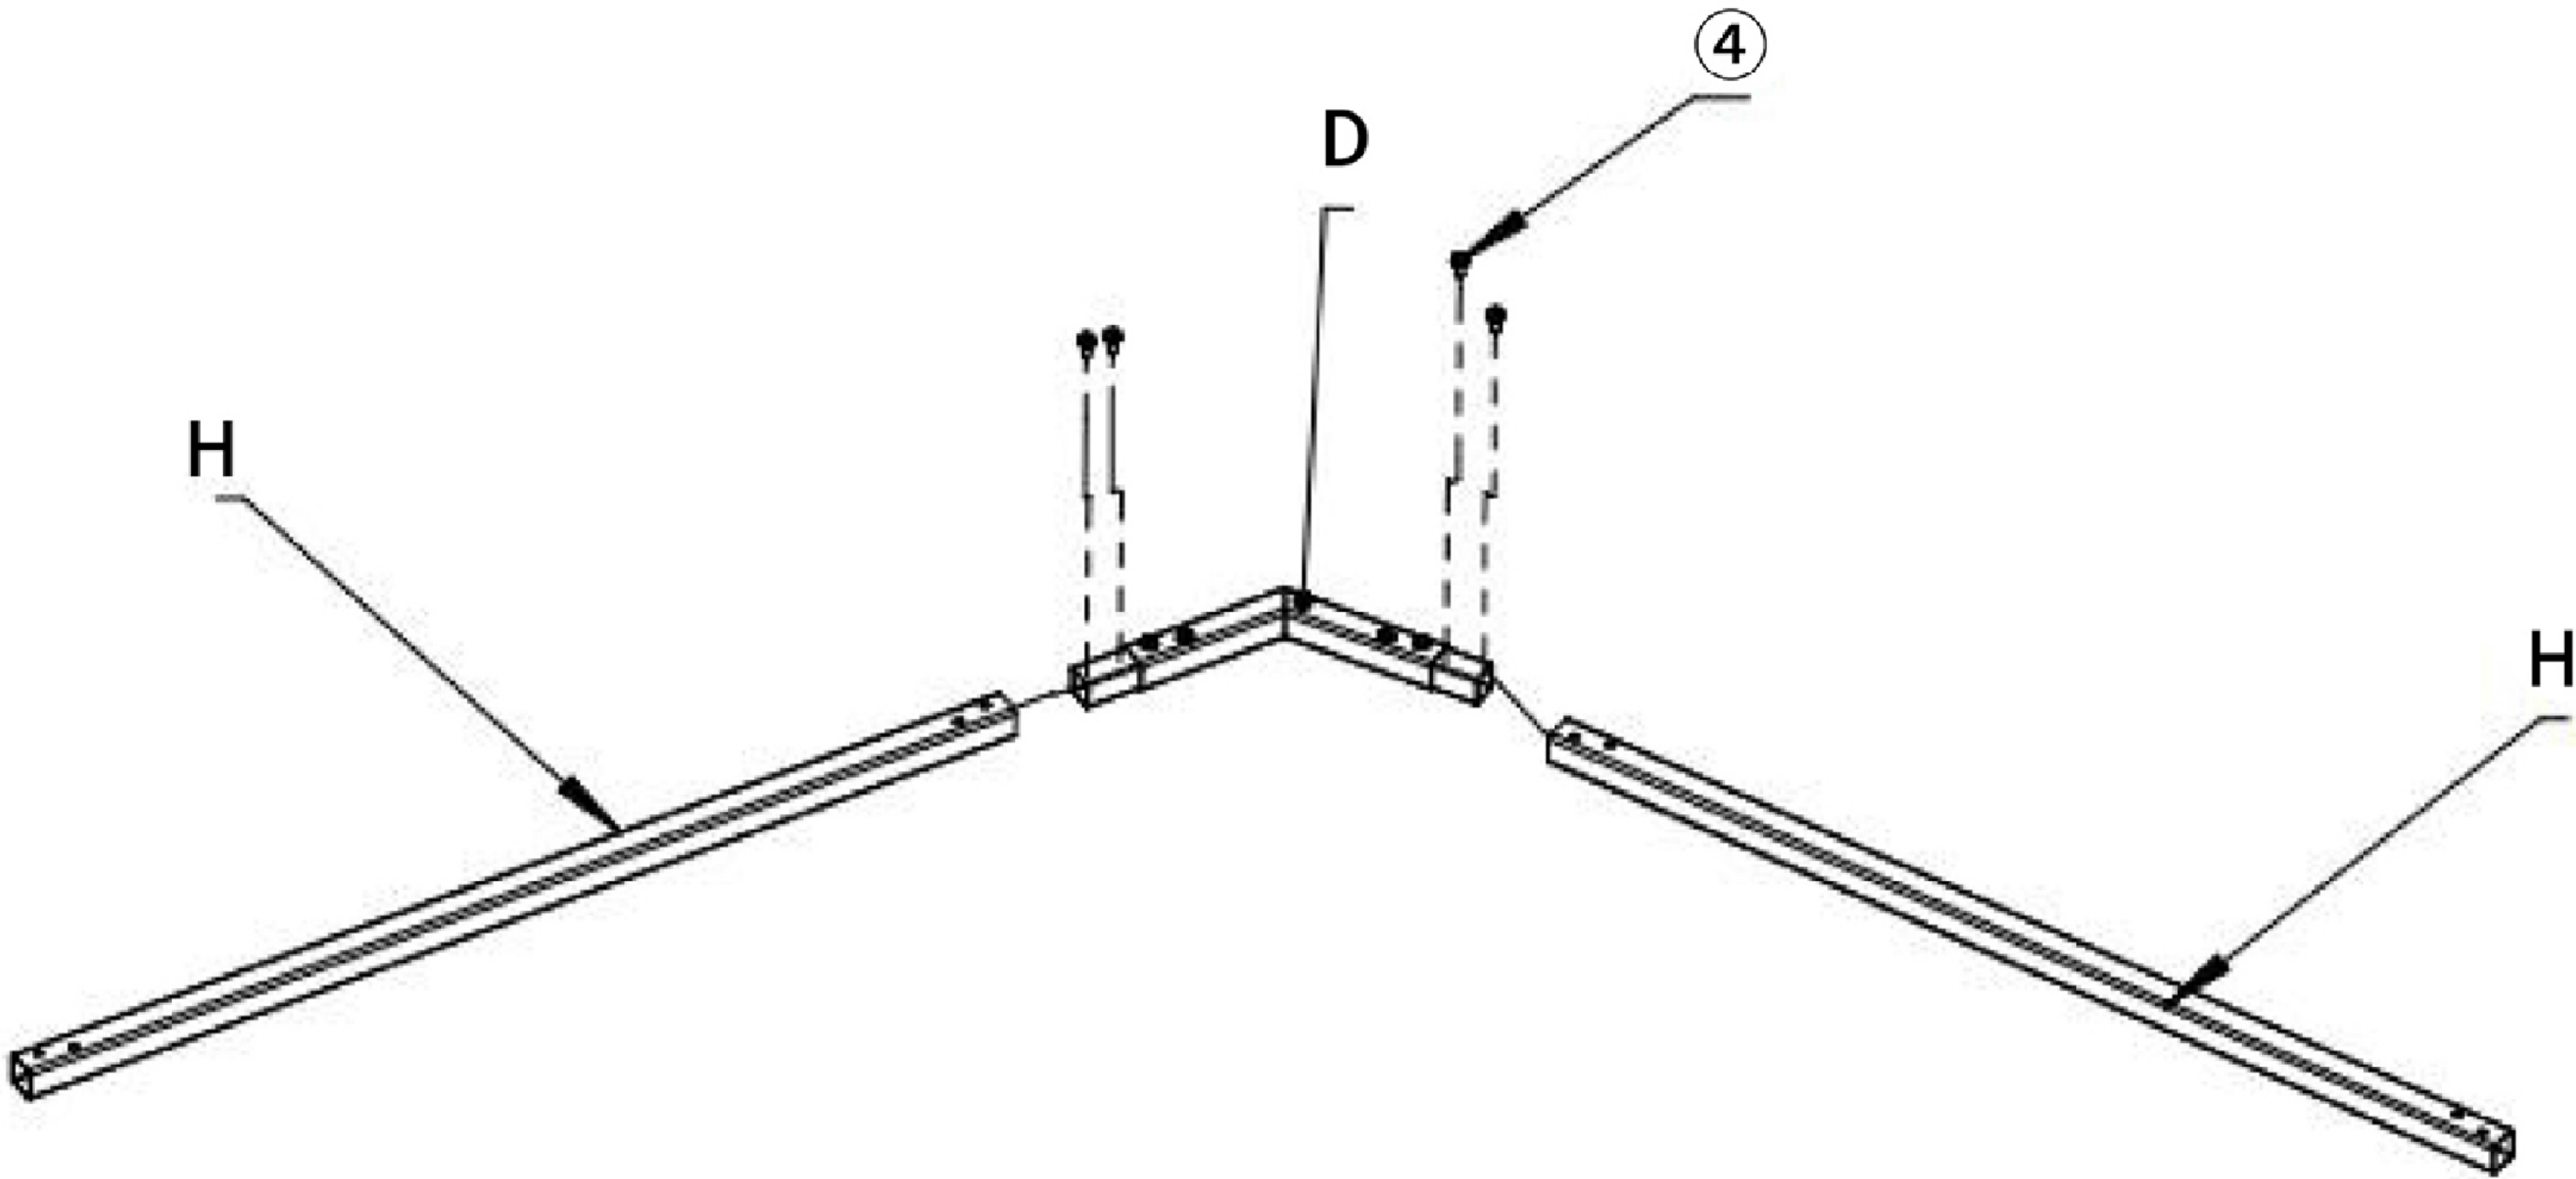
Assembly Instructions

A  X4	B  X10	C  X5	D  X5
E  X5	F  X5	G  X10	H  X10
I  X4	J  X2	K  X8	L  X4
M  X6	N  $L_N > L_P$ X18	P  X18	①  M6x60mm X20
②  M6 X20	③  M10X60mm X12	④  M5x25mm X306	⑤  X4
⑥  Sealing strip X2	⑦  foam tape x1		



Assembly Steps:

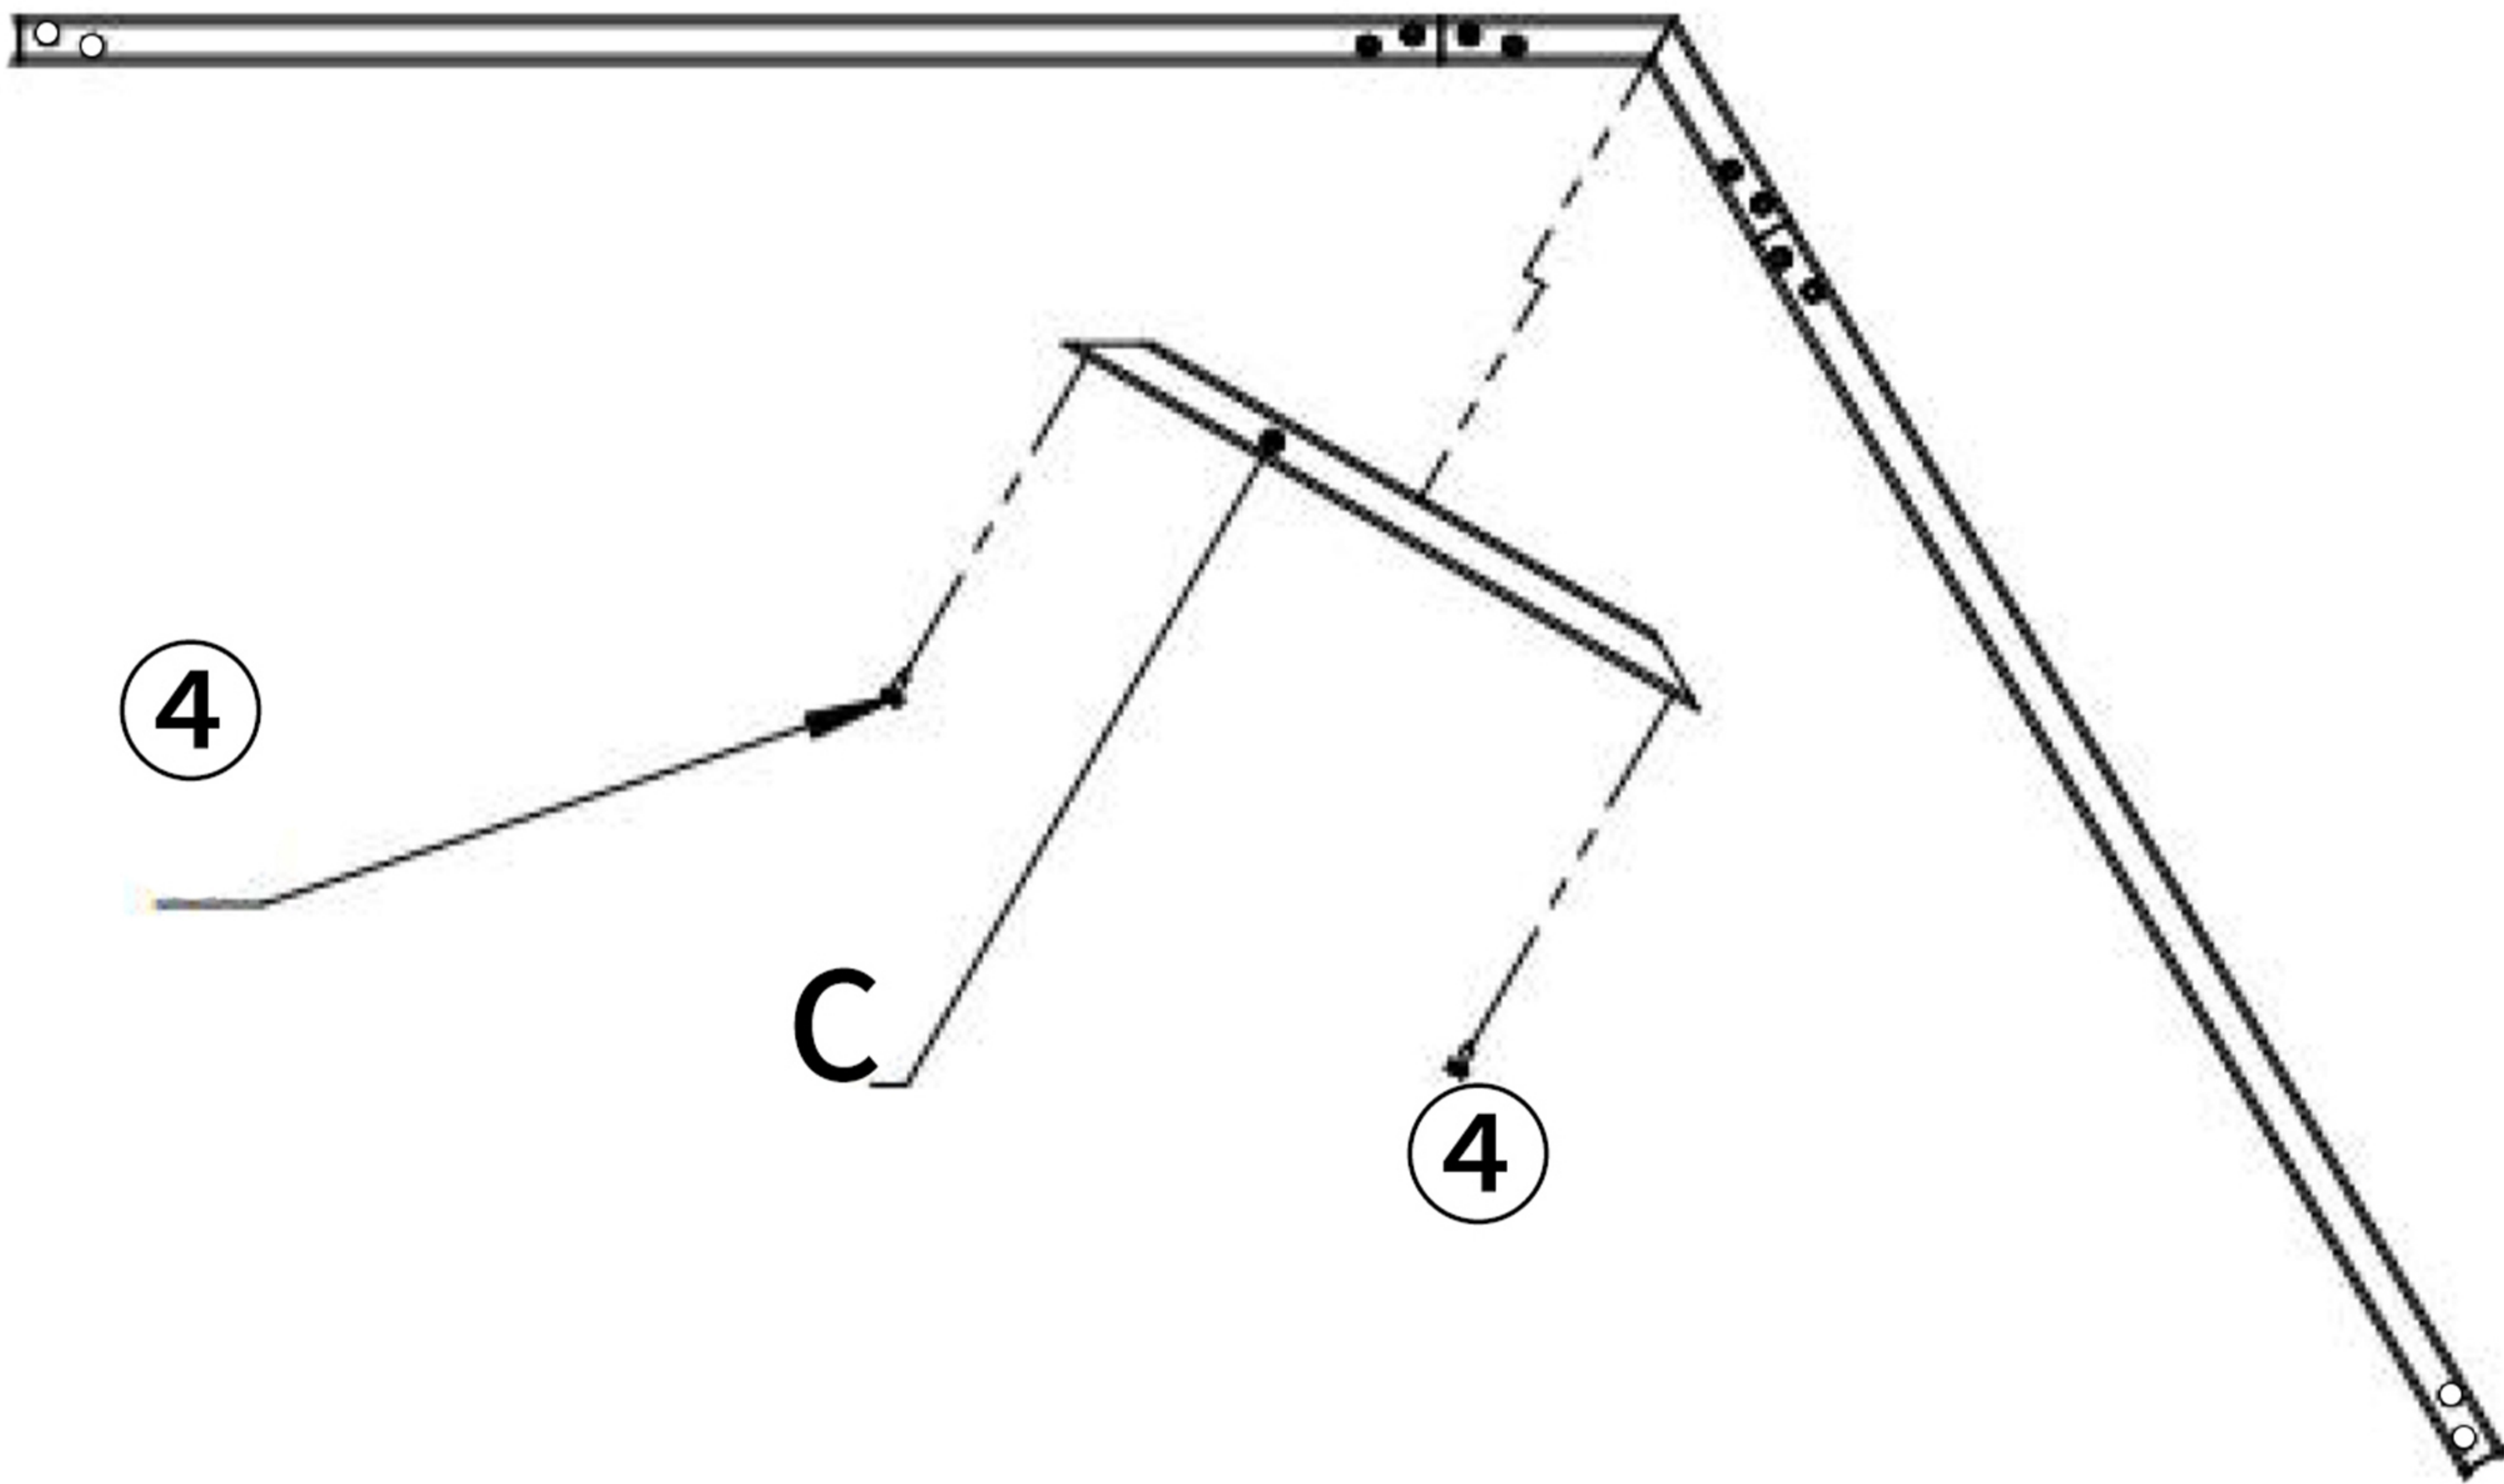
Step 1: Use self-tapping screws (#4) to connect and secure the part (#D) to the steel post (#H).

H		2pcs
D		1pcs
④		4pcs






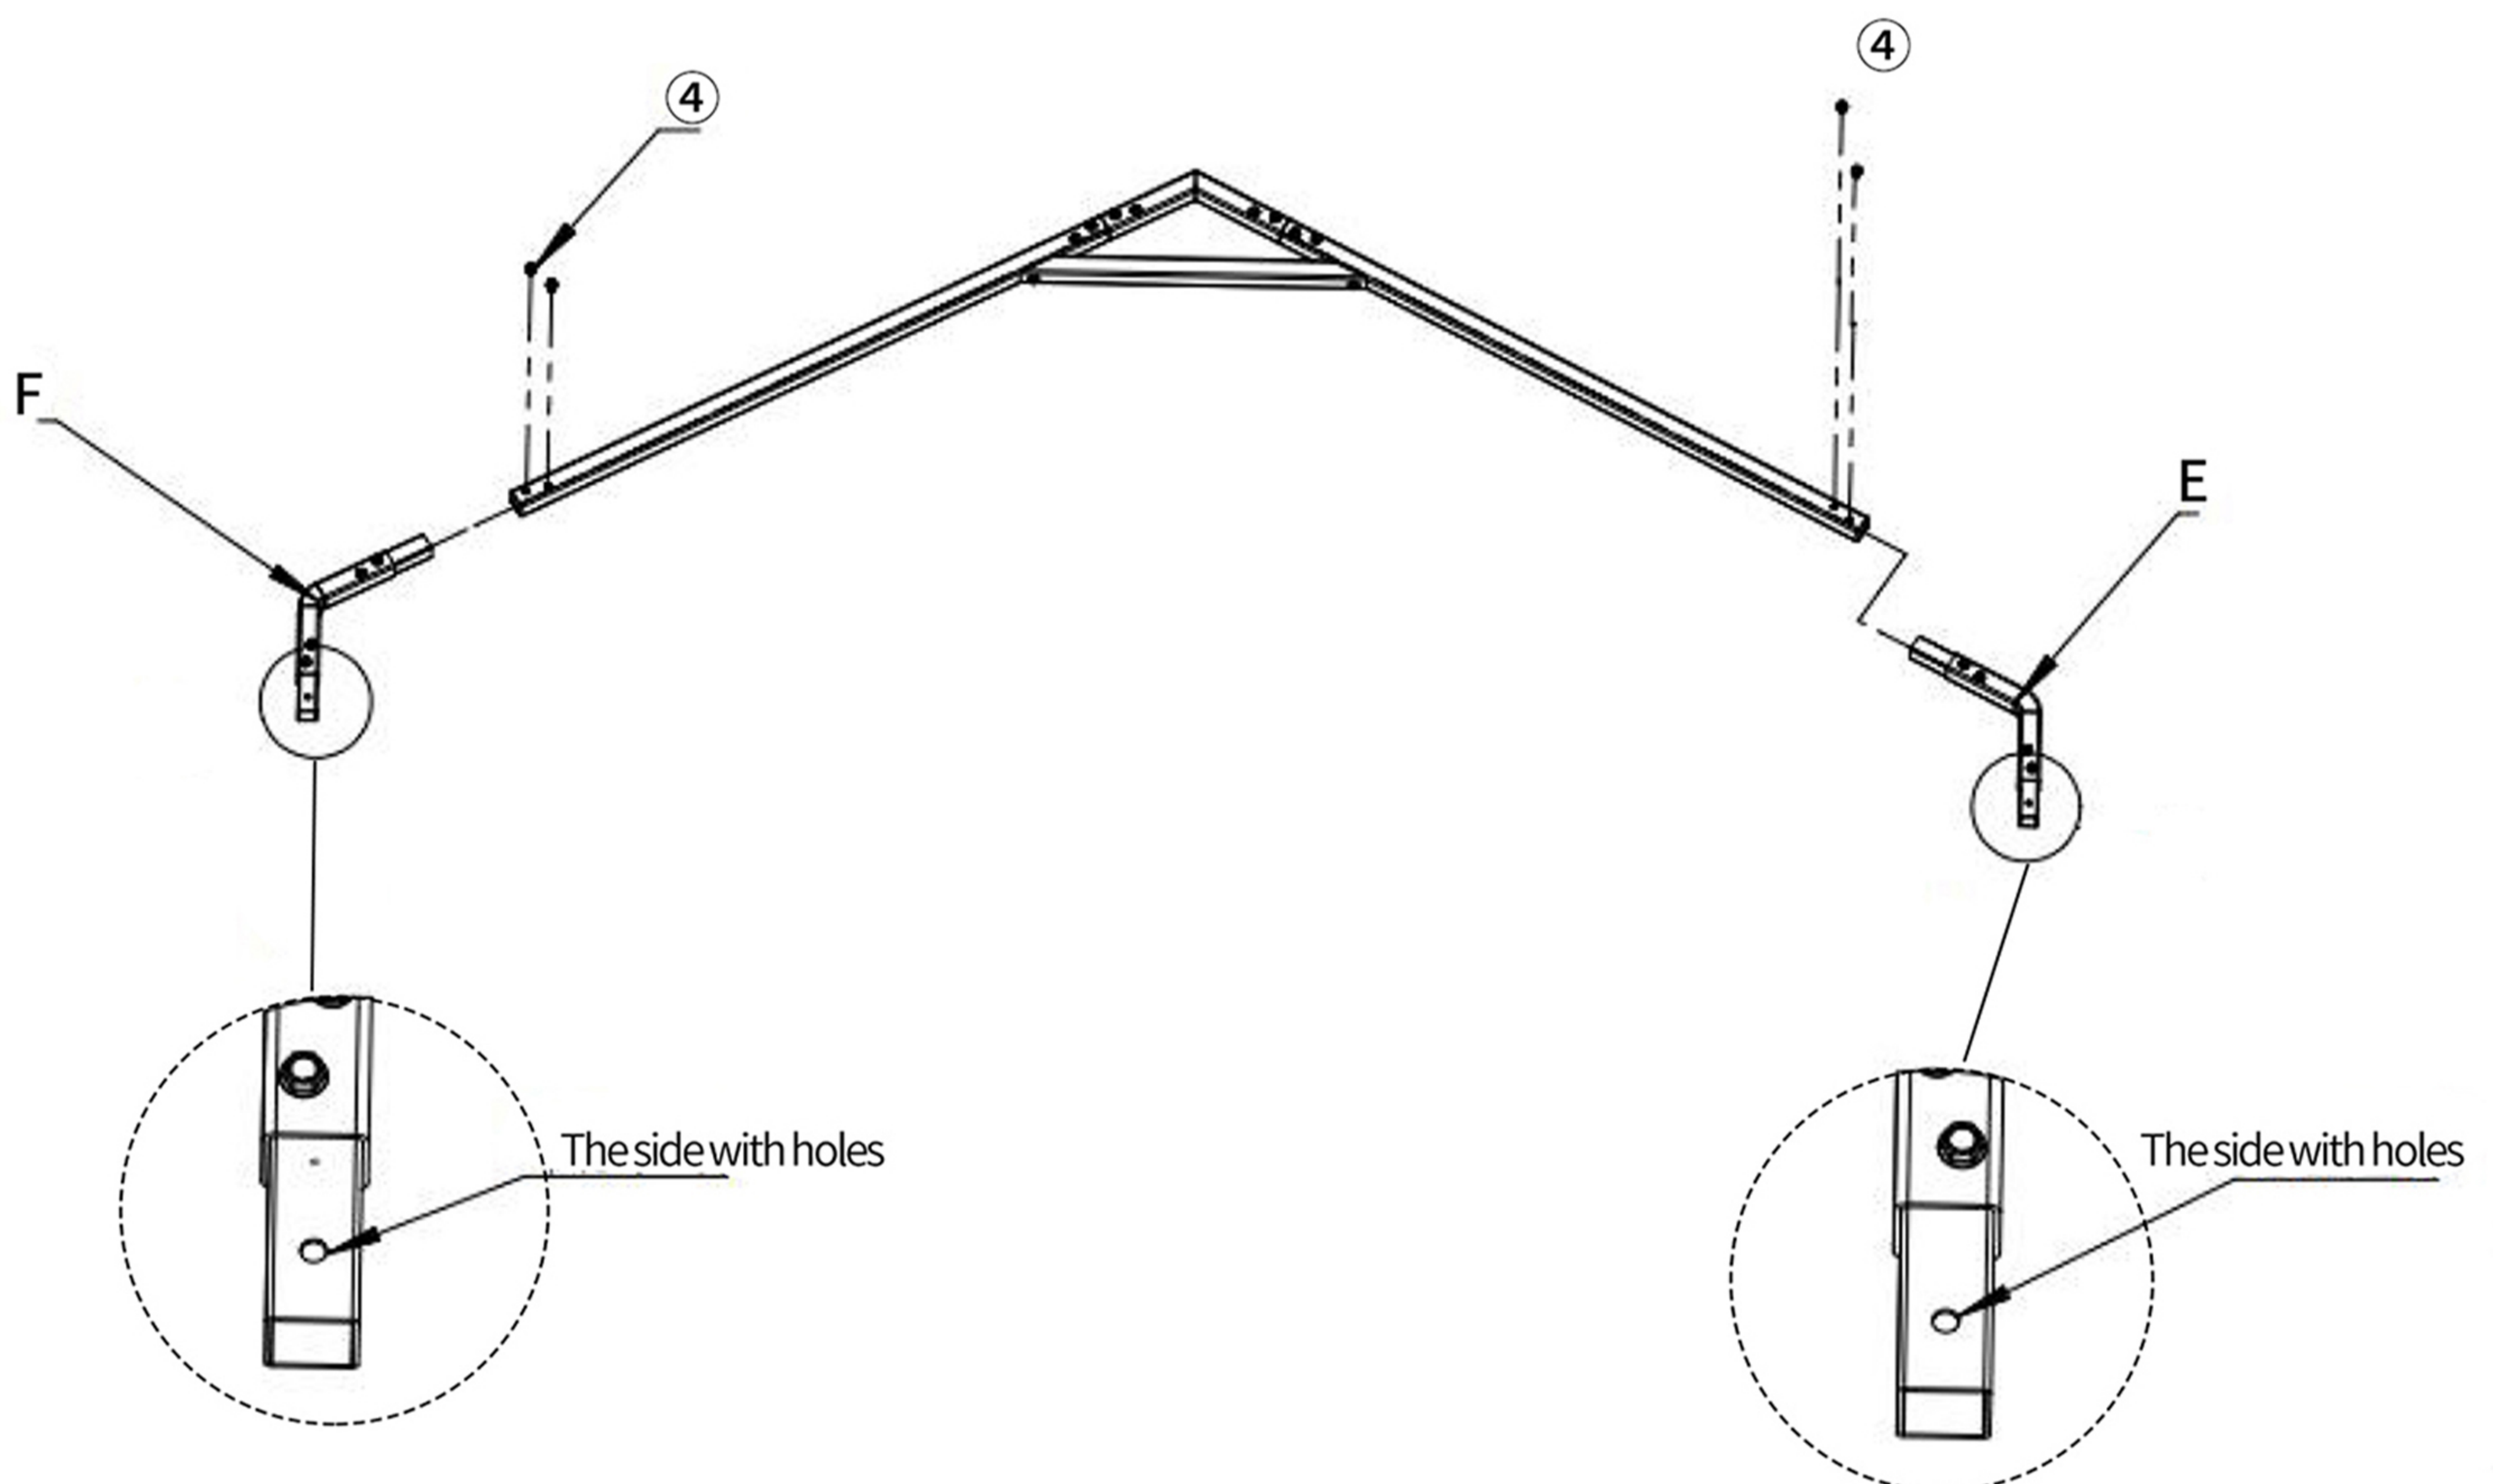
Step 2: Attach the top reinforcement bar (#C) to the assembled section of Step 1 using self-tapping screws (#4).

④		2pcs
C		1pcs

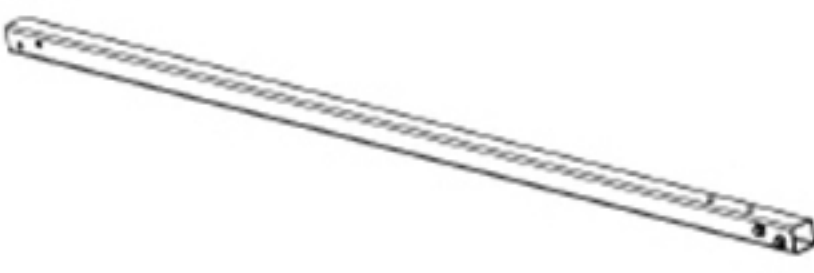



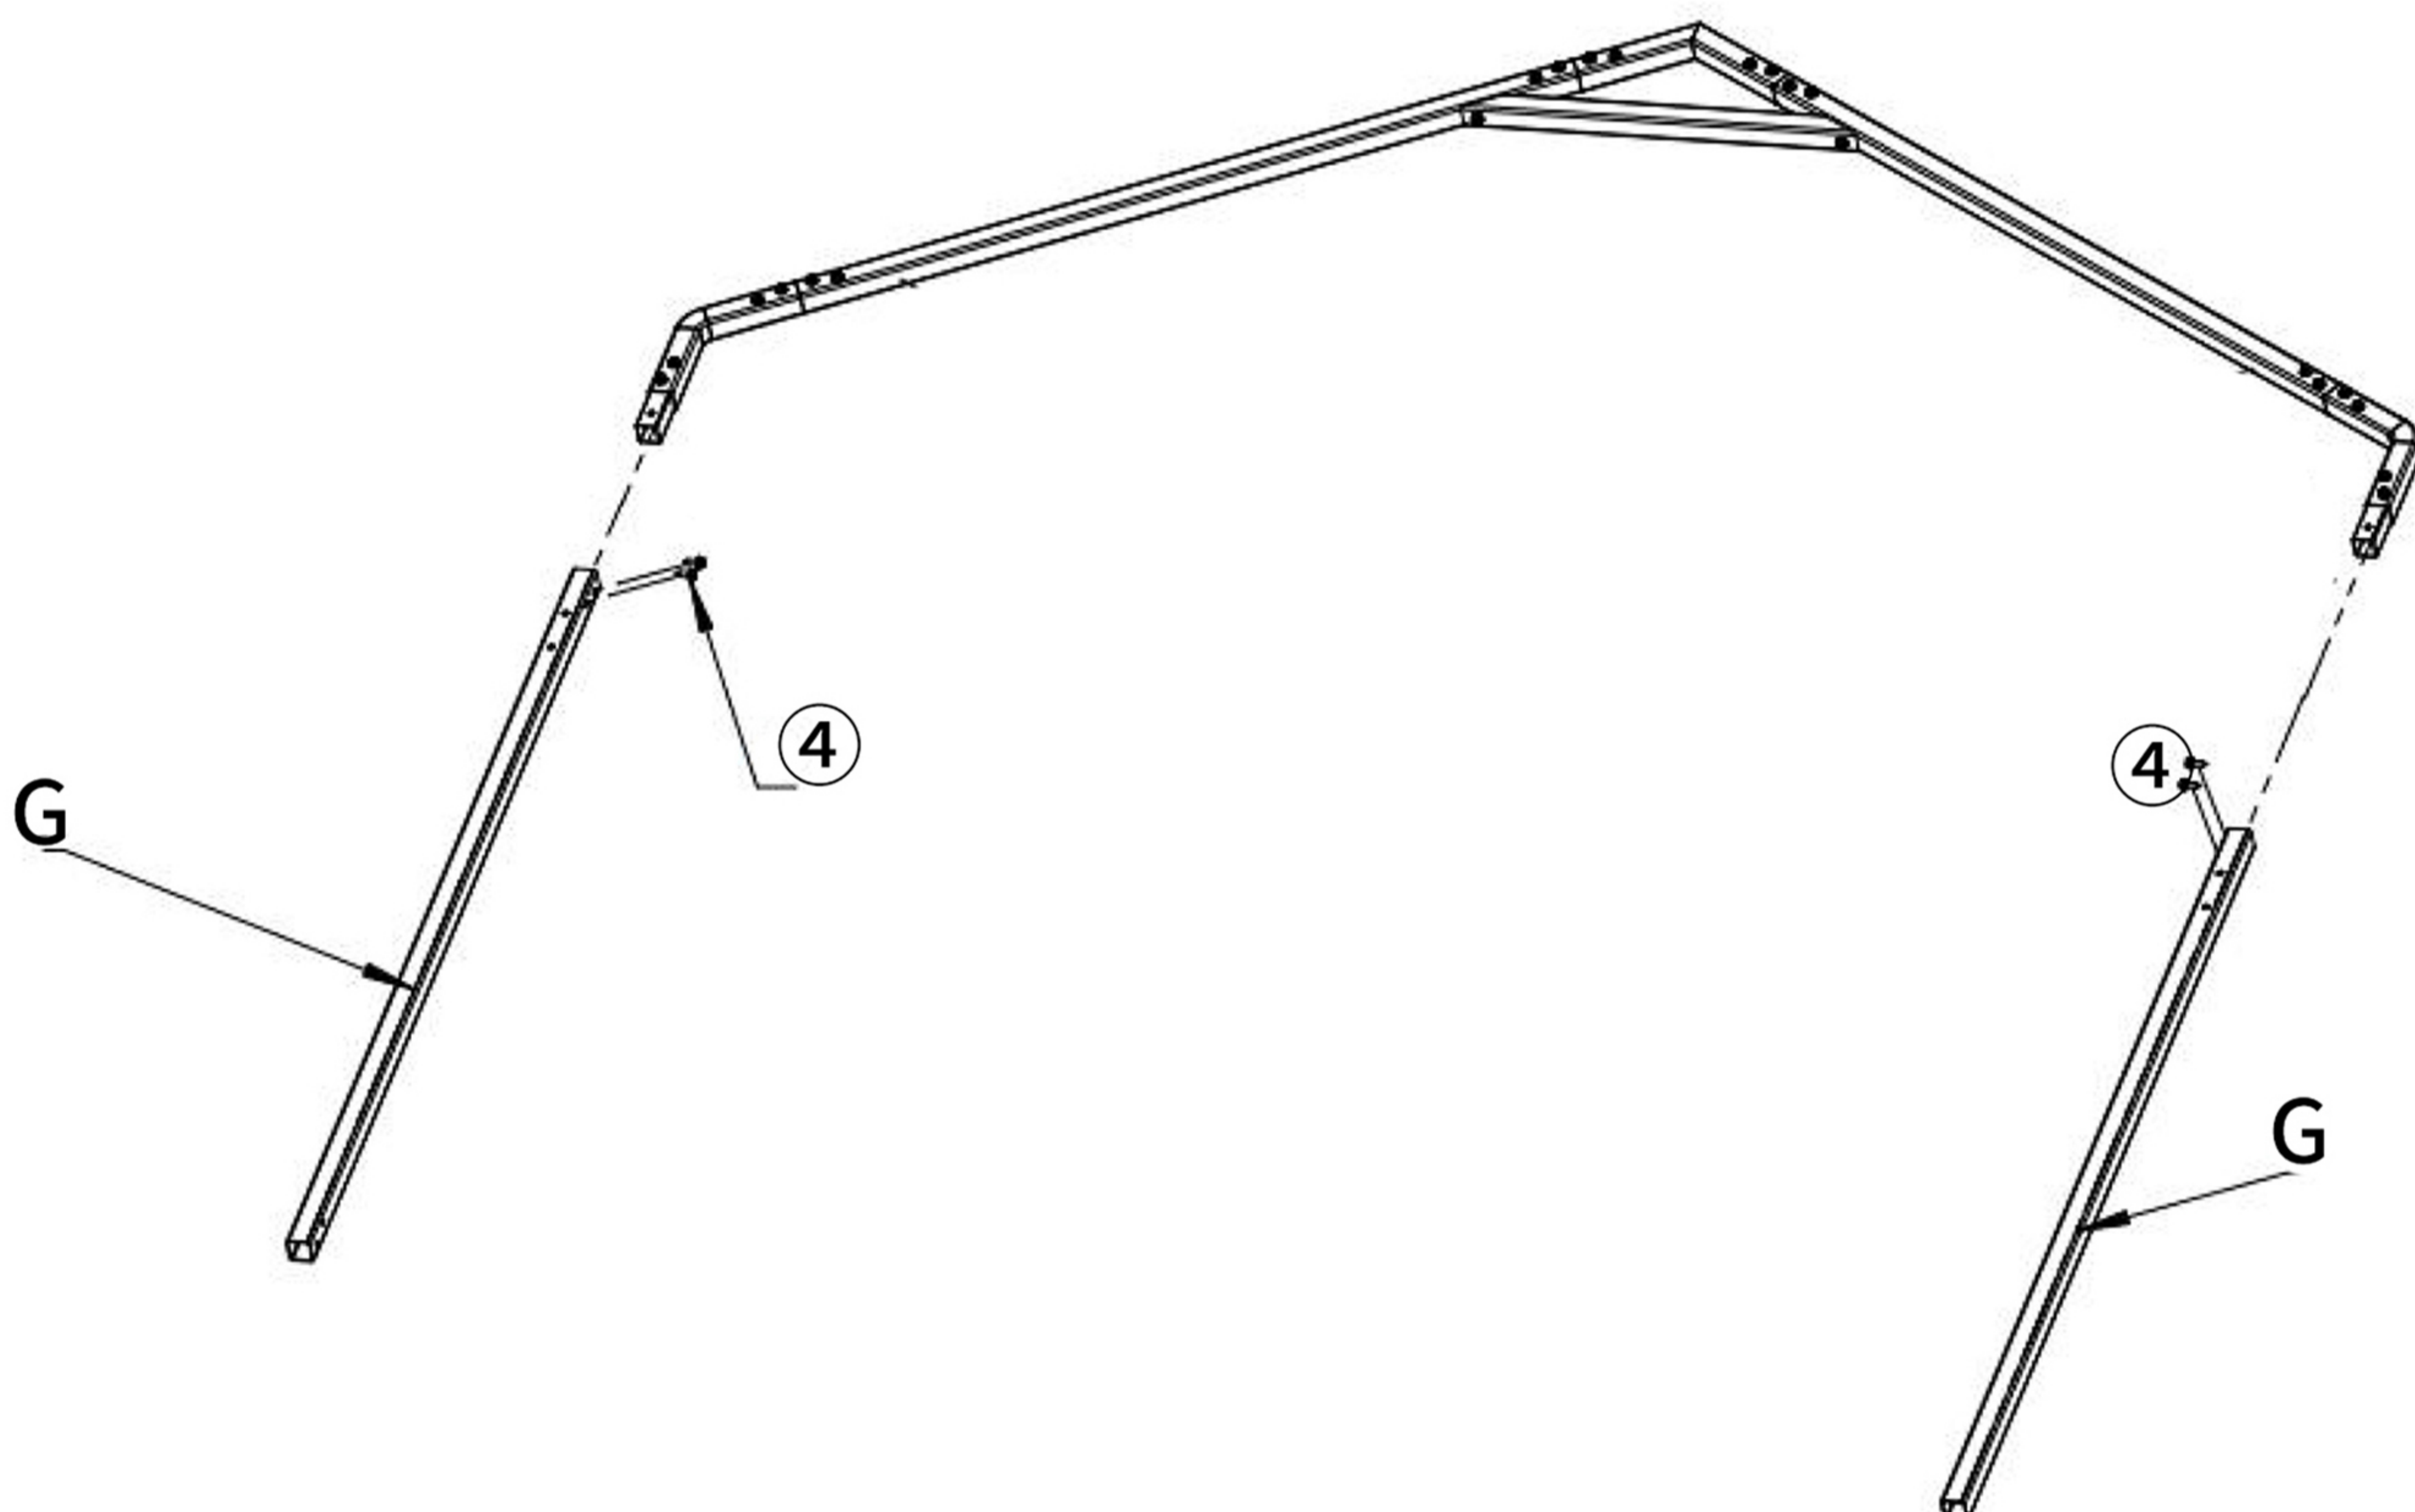
Step 3: Use self-tapping screws (#4) to connect and secure the parts (#E and #F) to the steel post (#H), ensuring the side with the pre-punched on (#E and #F) is facing down.

F		1pcs
E		1pcs
④		4pcs

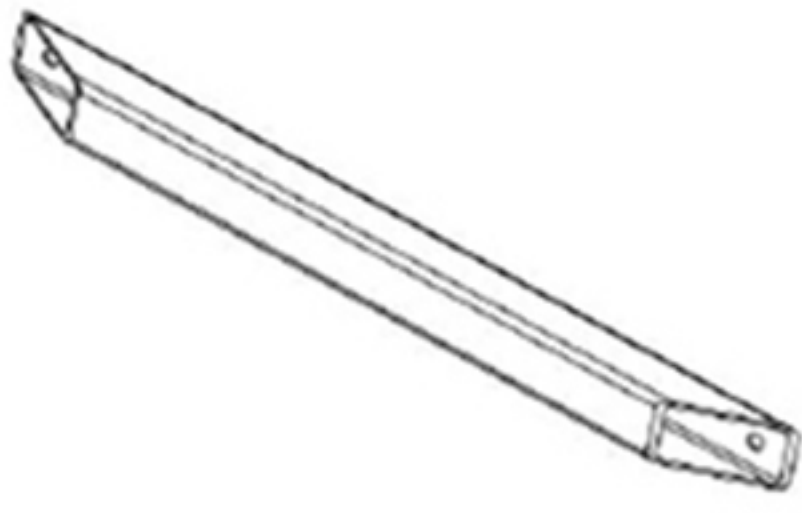



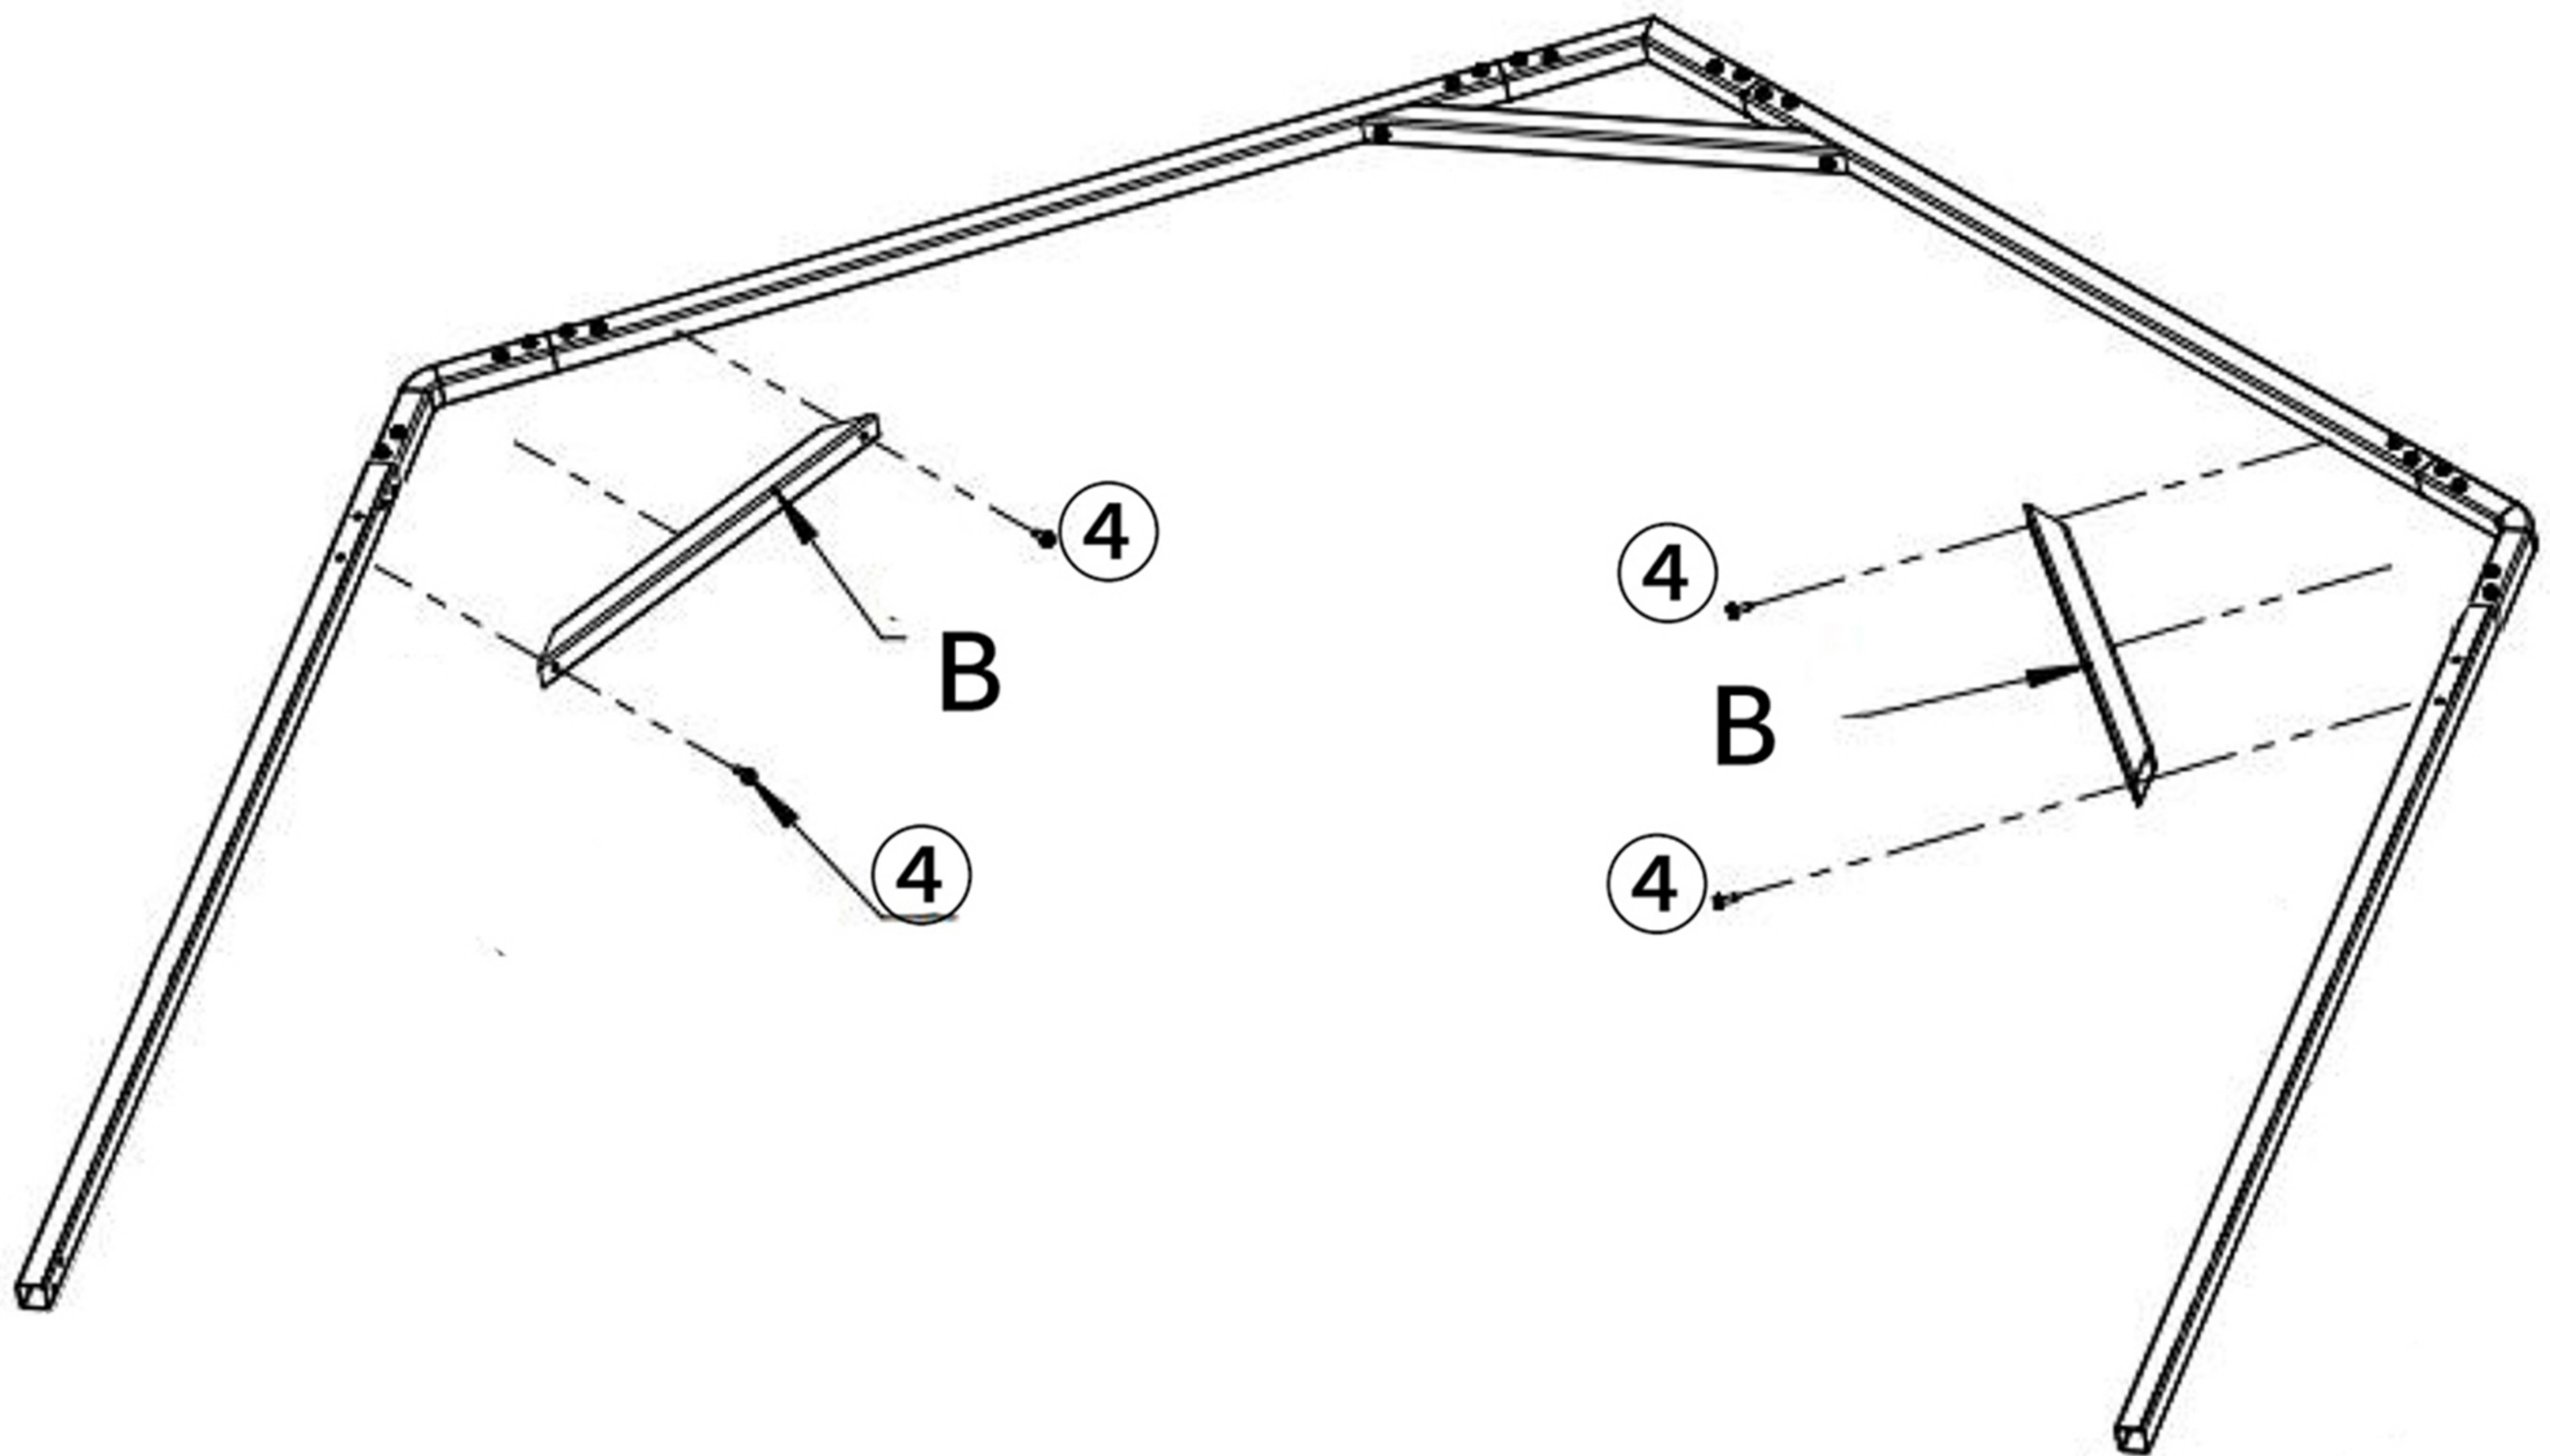
Step 4: Connect and secure the steel post (#G) to the parts (#E and #F) using self-tapping screws (#4).

G		2pcs
④		4pcs



Step 5: Secure the reinforcement bars (#B) between the steel posts (#G and #H) with self-tapping screws (#4).


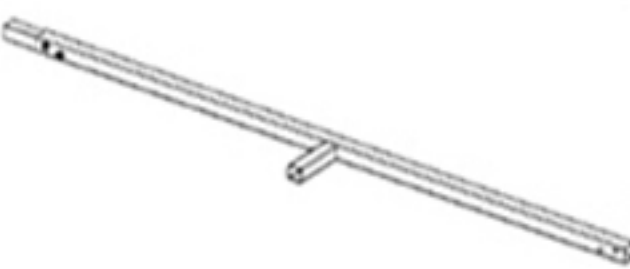
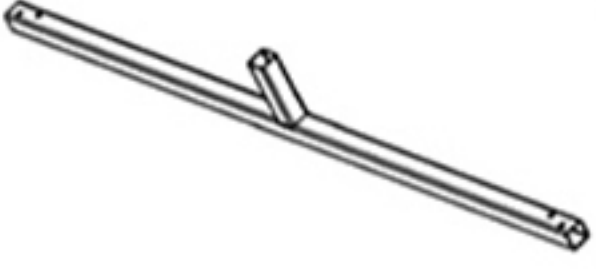

B		2pcs
④		4pcs

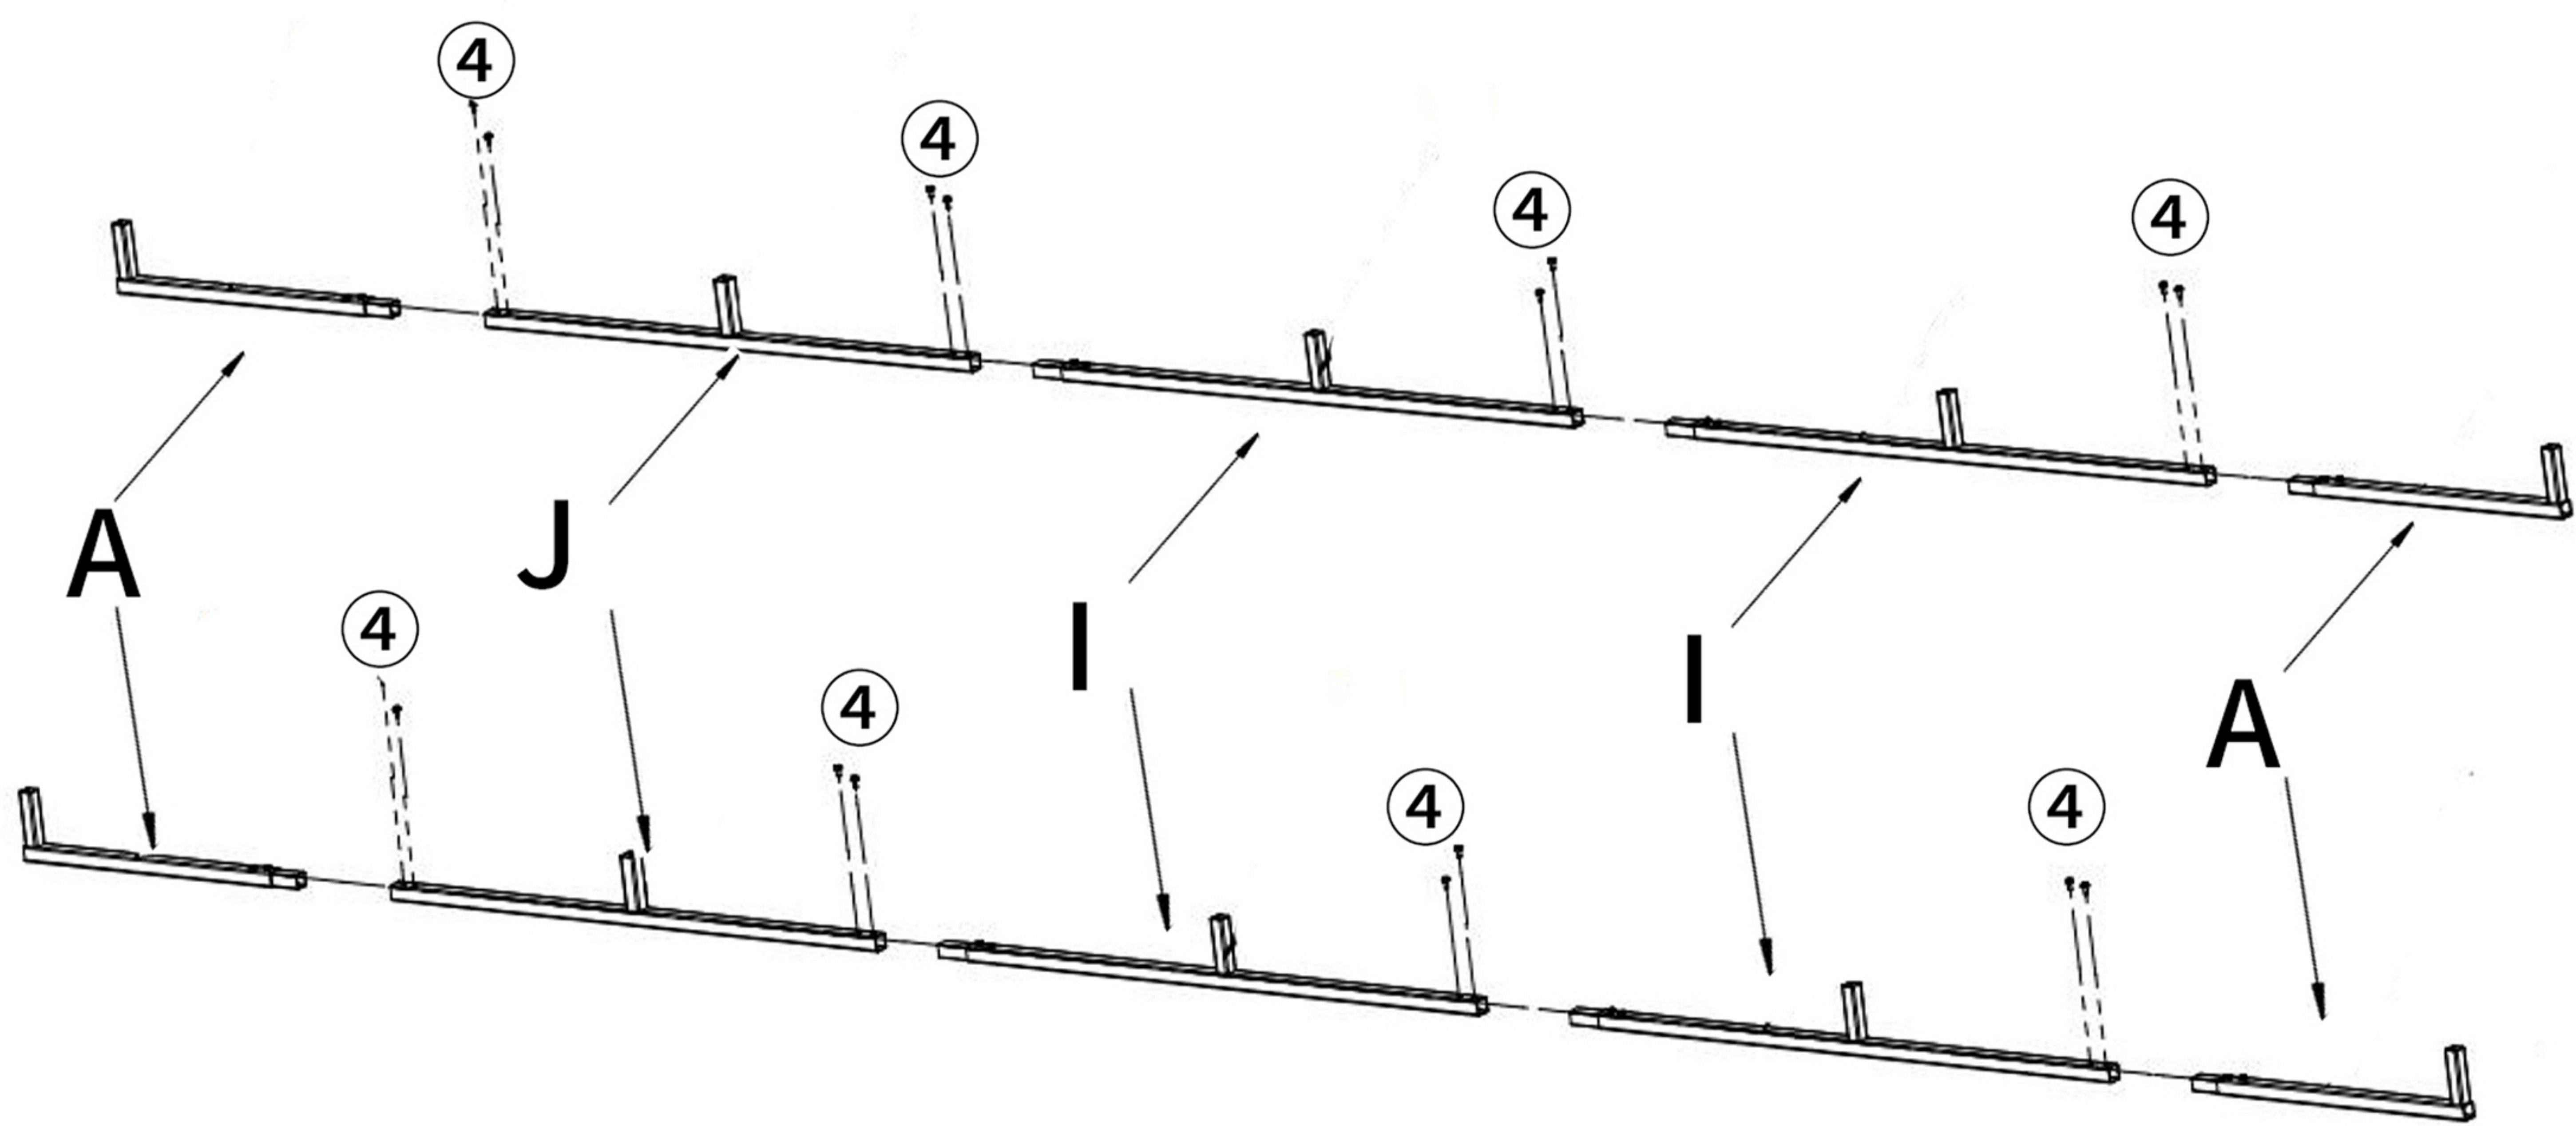


Repeat the above 5 steps to assemble five mainframes.




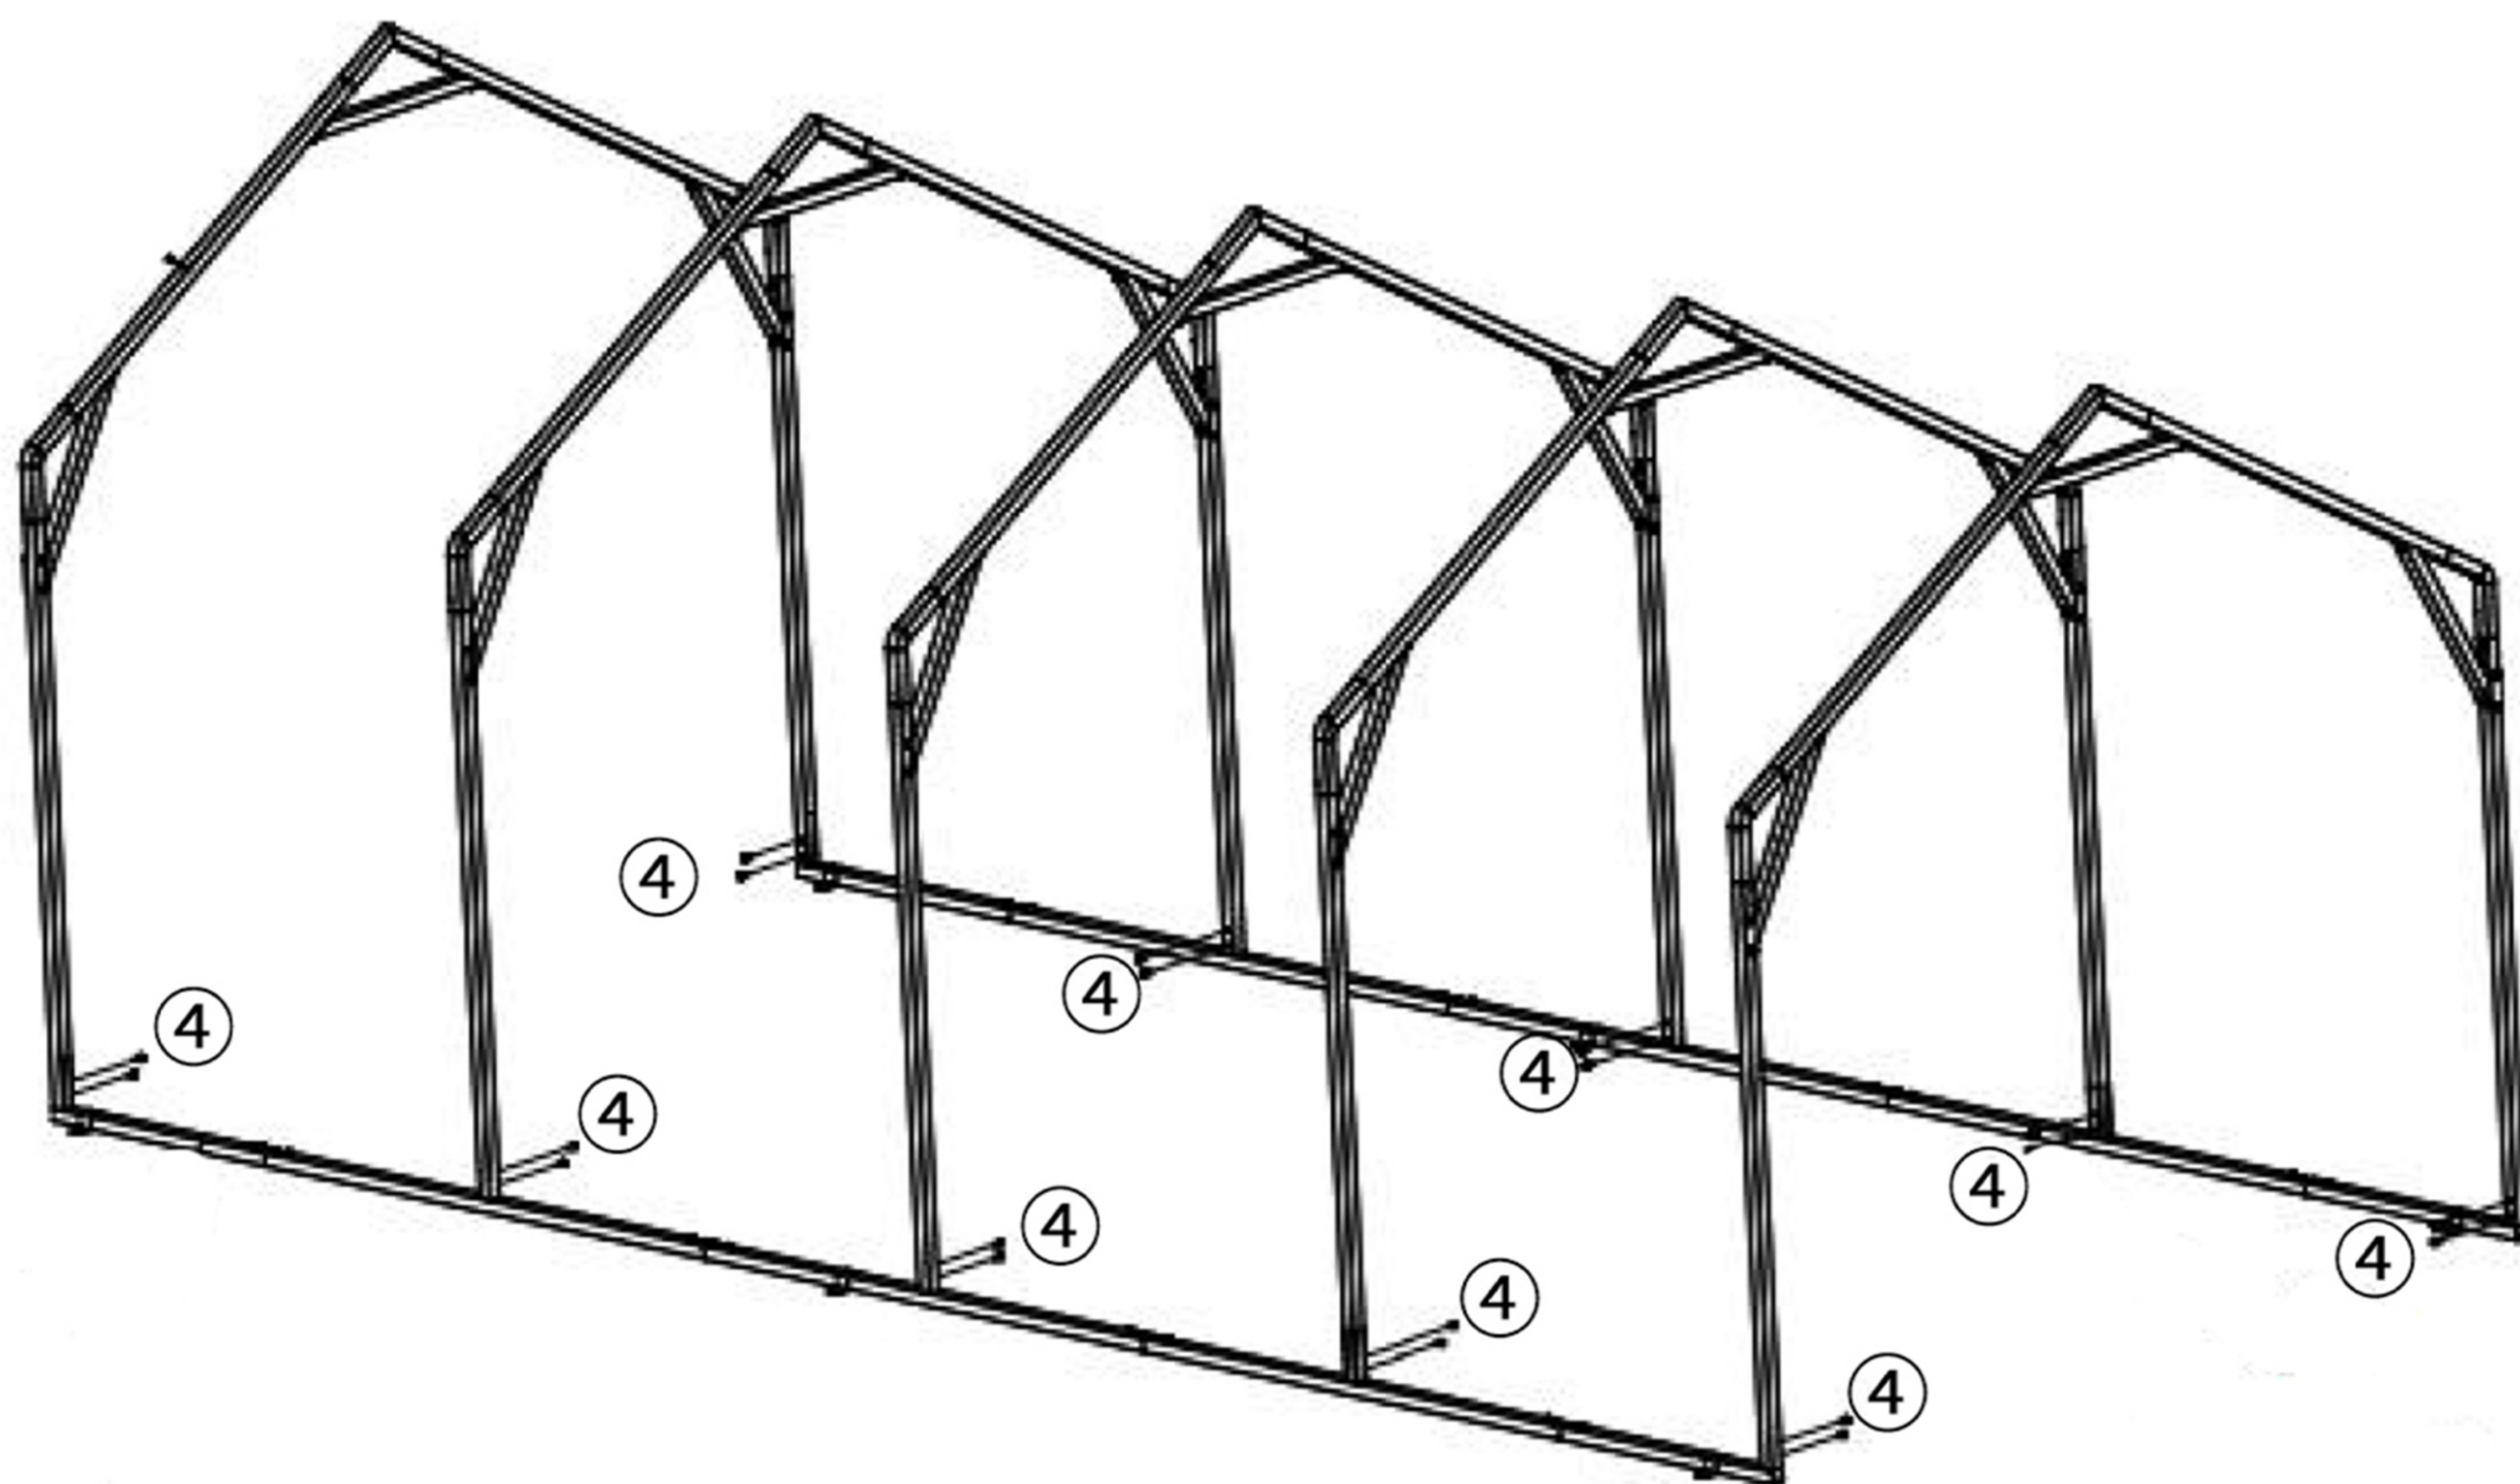
Step 6: Arrange components #A, #J, #I, #I, and #A from left to right as shown, and secure them using self-tapping screws (#4).

A		4pcs
I		4pcs
J		2pcs
④		16pcs


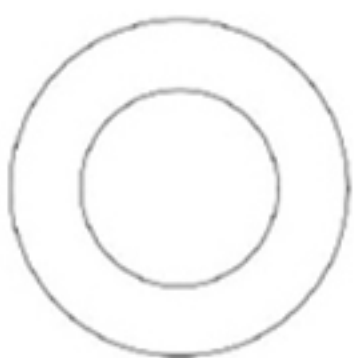




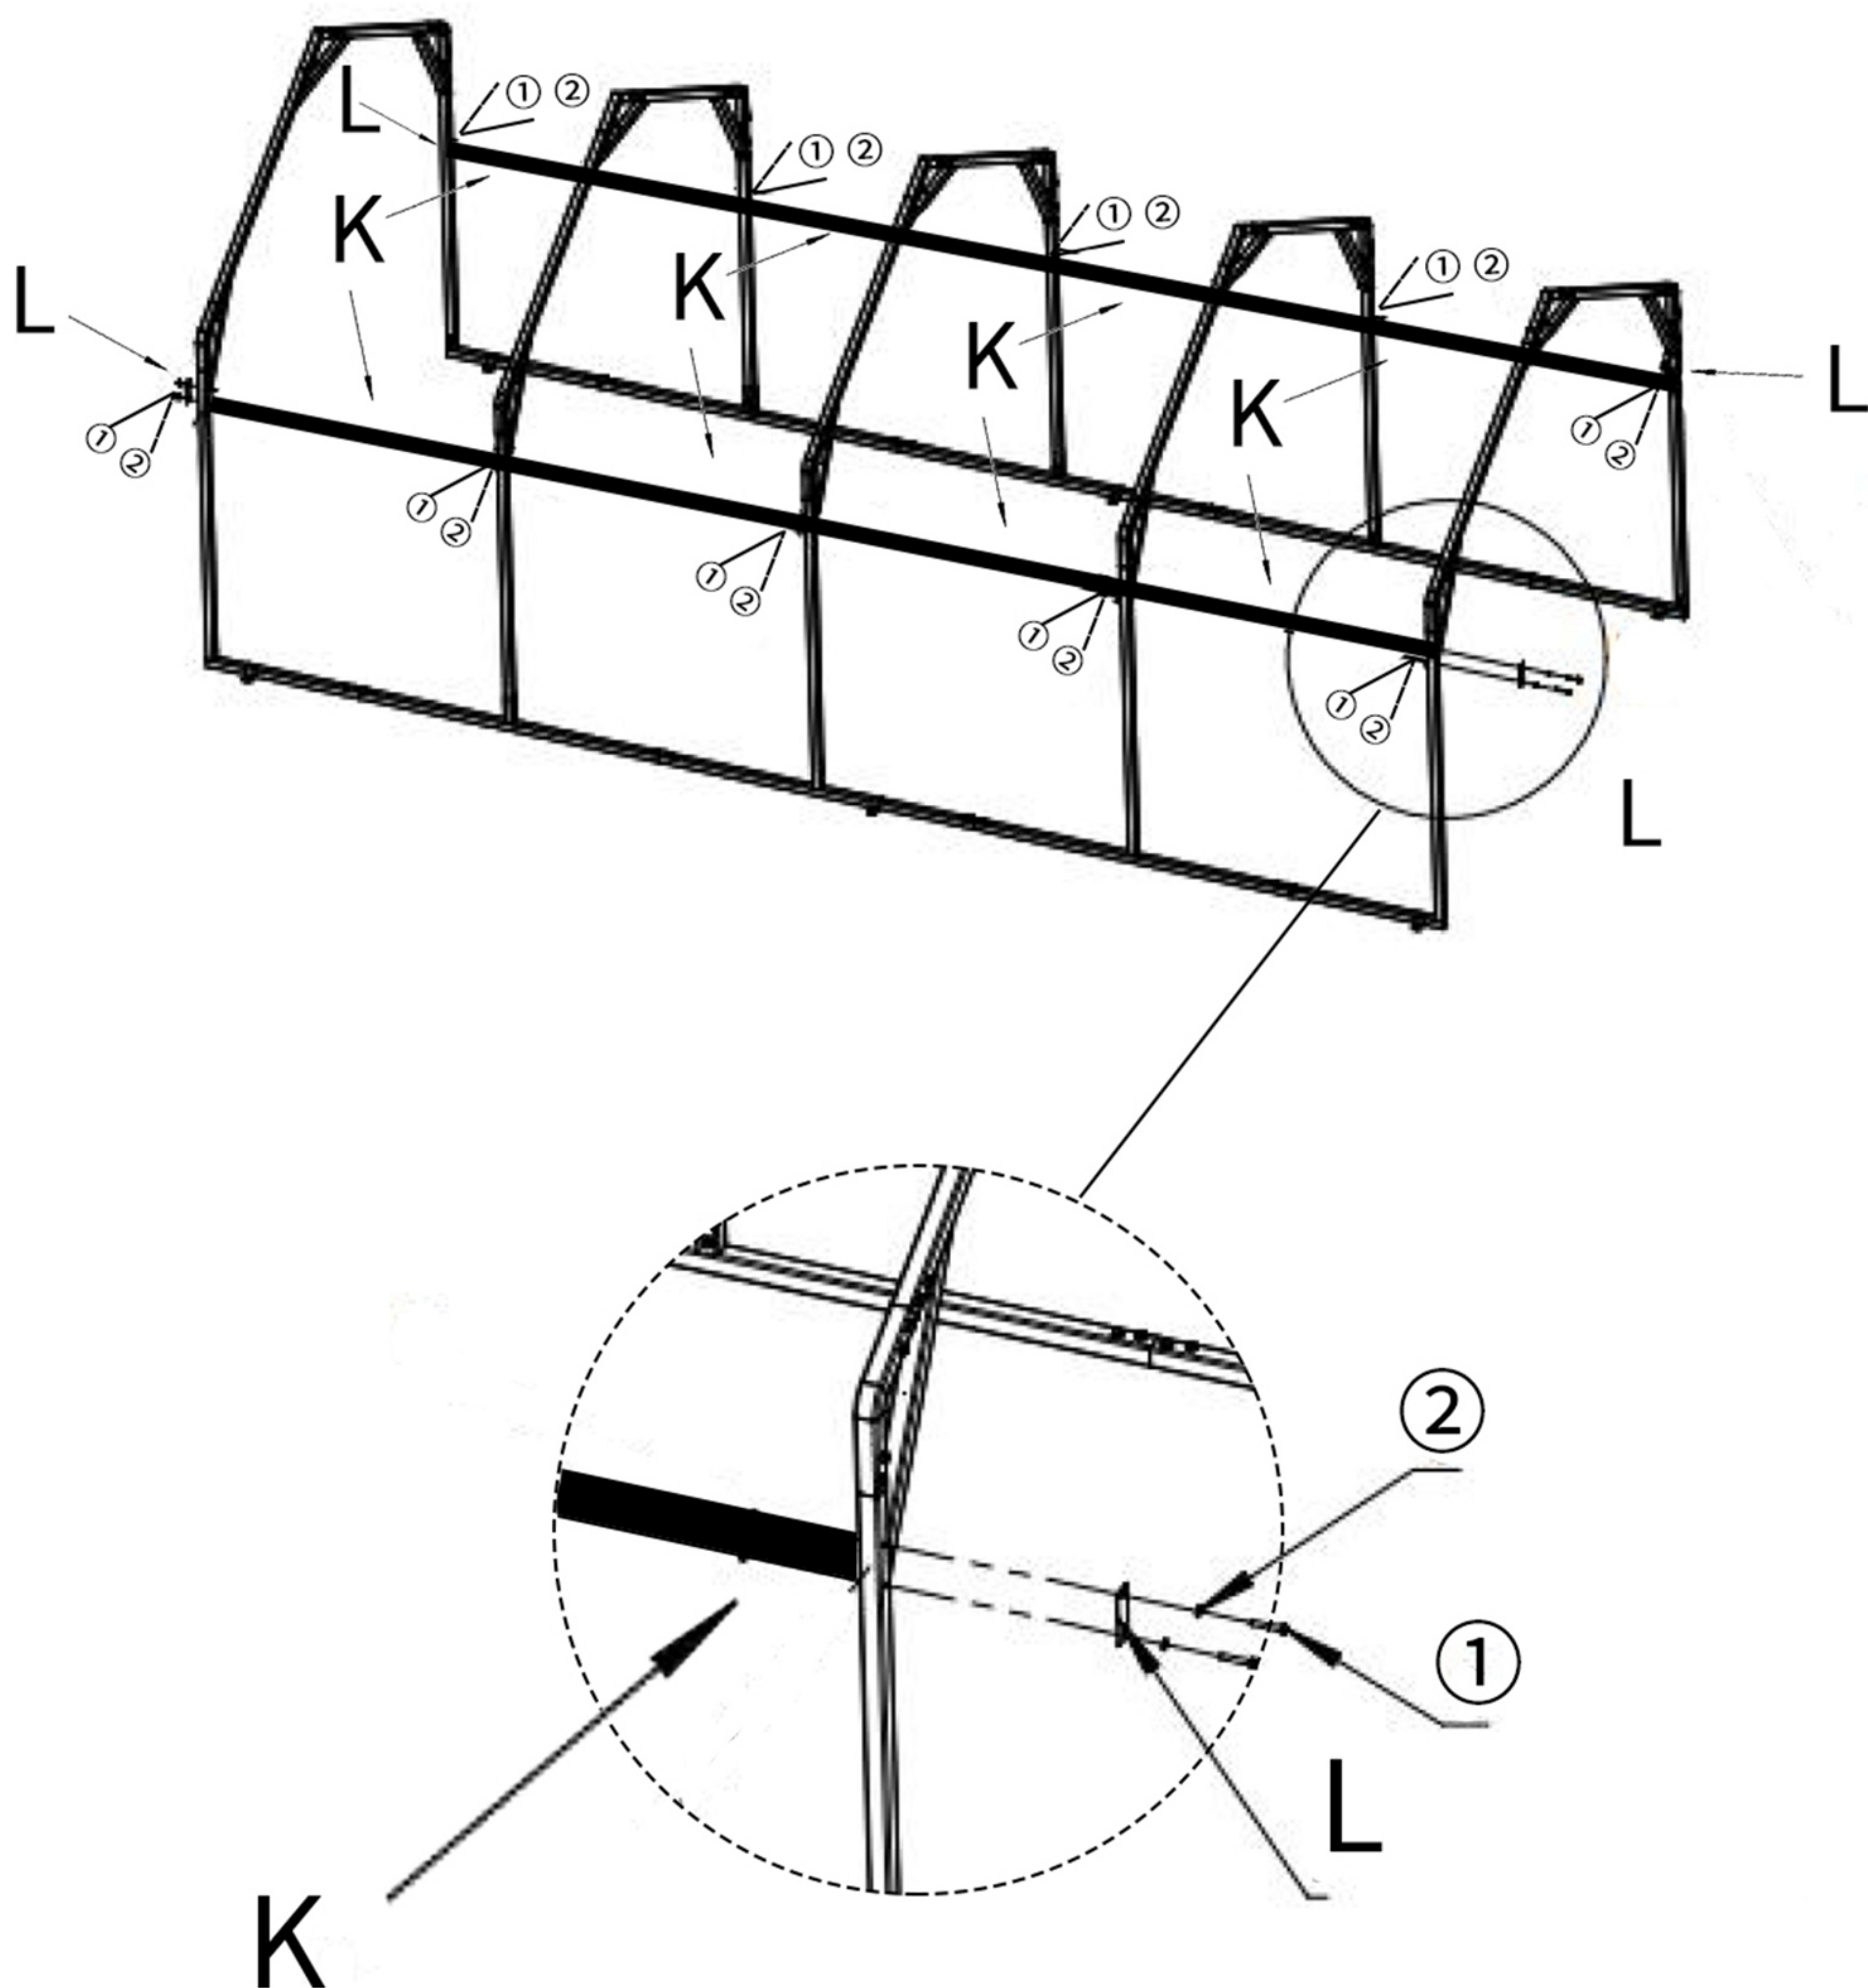
Step 7: Place the five mainframes above the base and secure them with self-tapping screws (#4). (At least two people should work together to complete this step.)

④		20pcs
---	---	-------


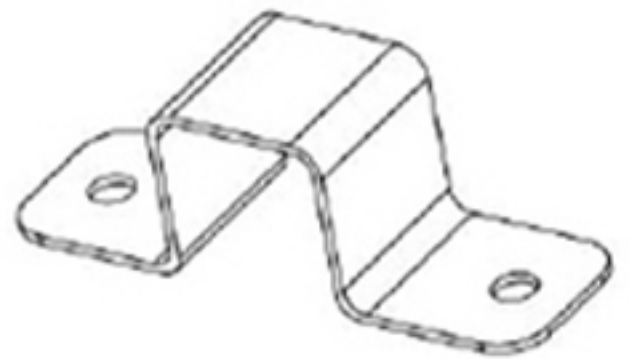


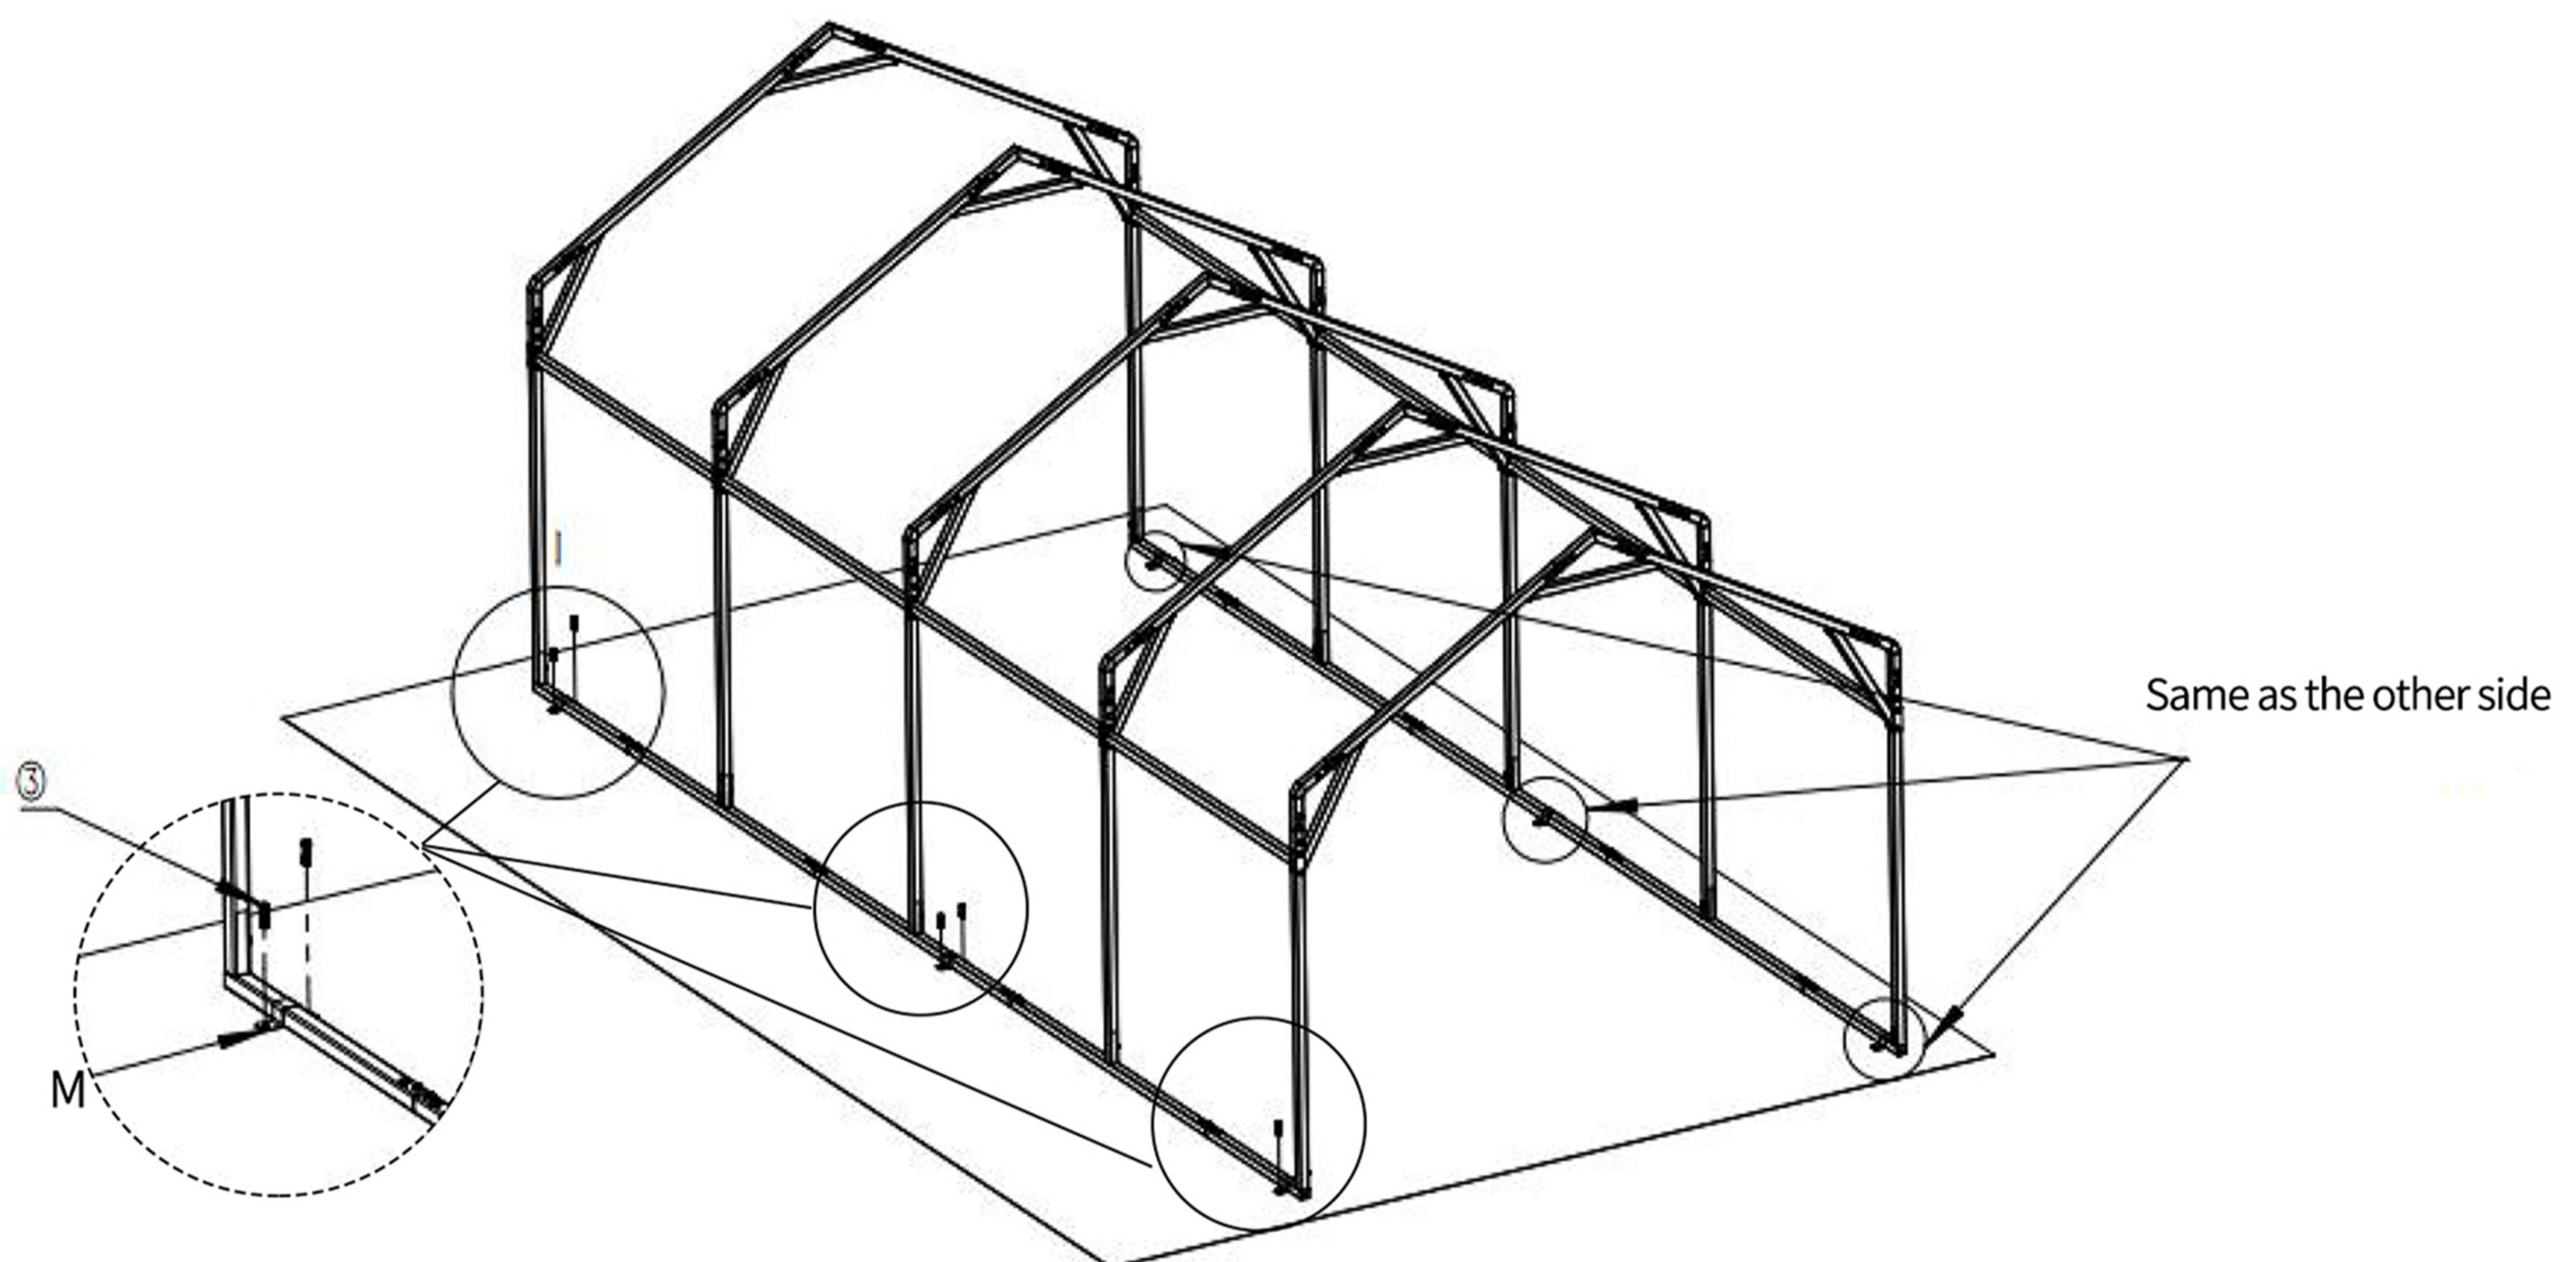
Step 8:
Attach the washer (#2) with the metal sheet (#L), then use M6 screws (#1) to connect and secure the steel post (#K) to the steel post (#G). Repeat this connection for the steel posts (#K) at all four corners. Then use M6 screws (#1) to attach the remaining steel posts (#K) to the steel posts (#G).

①		20pcs
②		20pcs
K		8pcs
L		4pcs

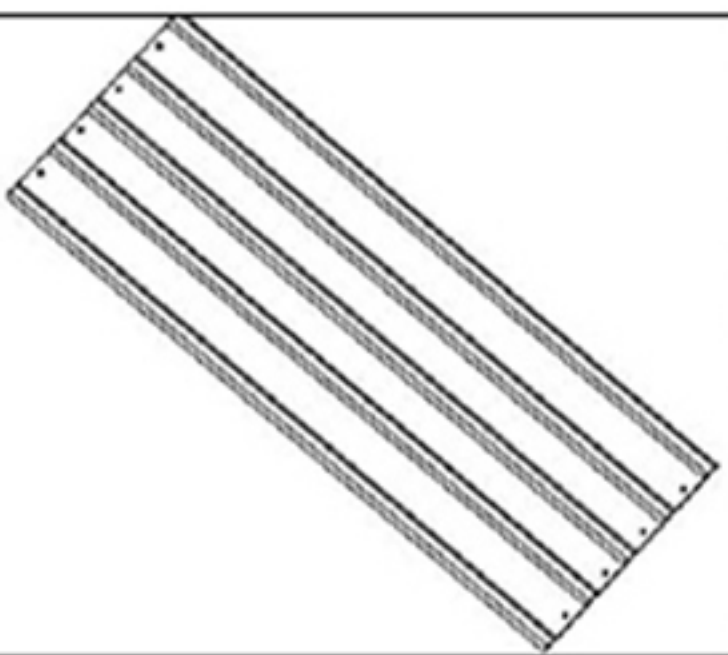



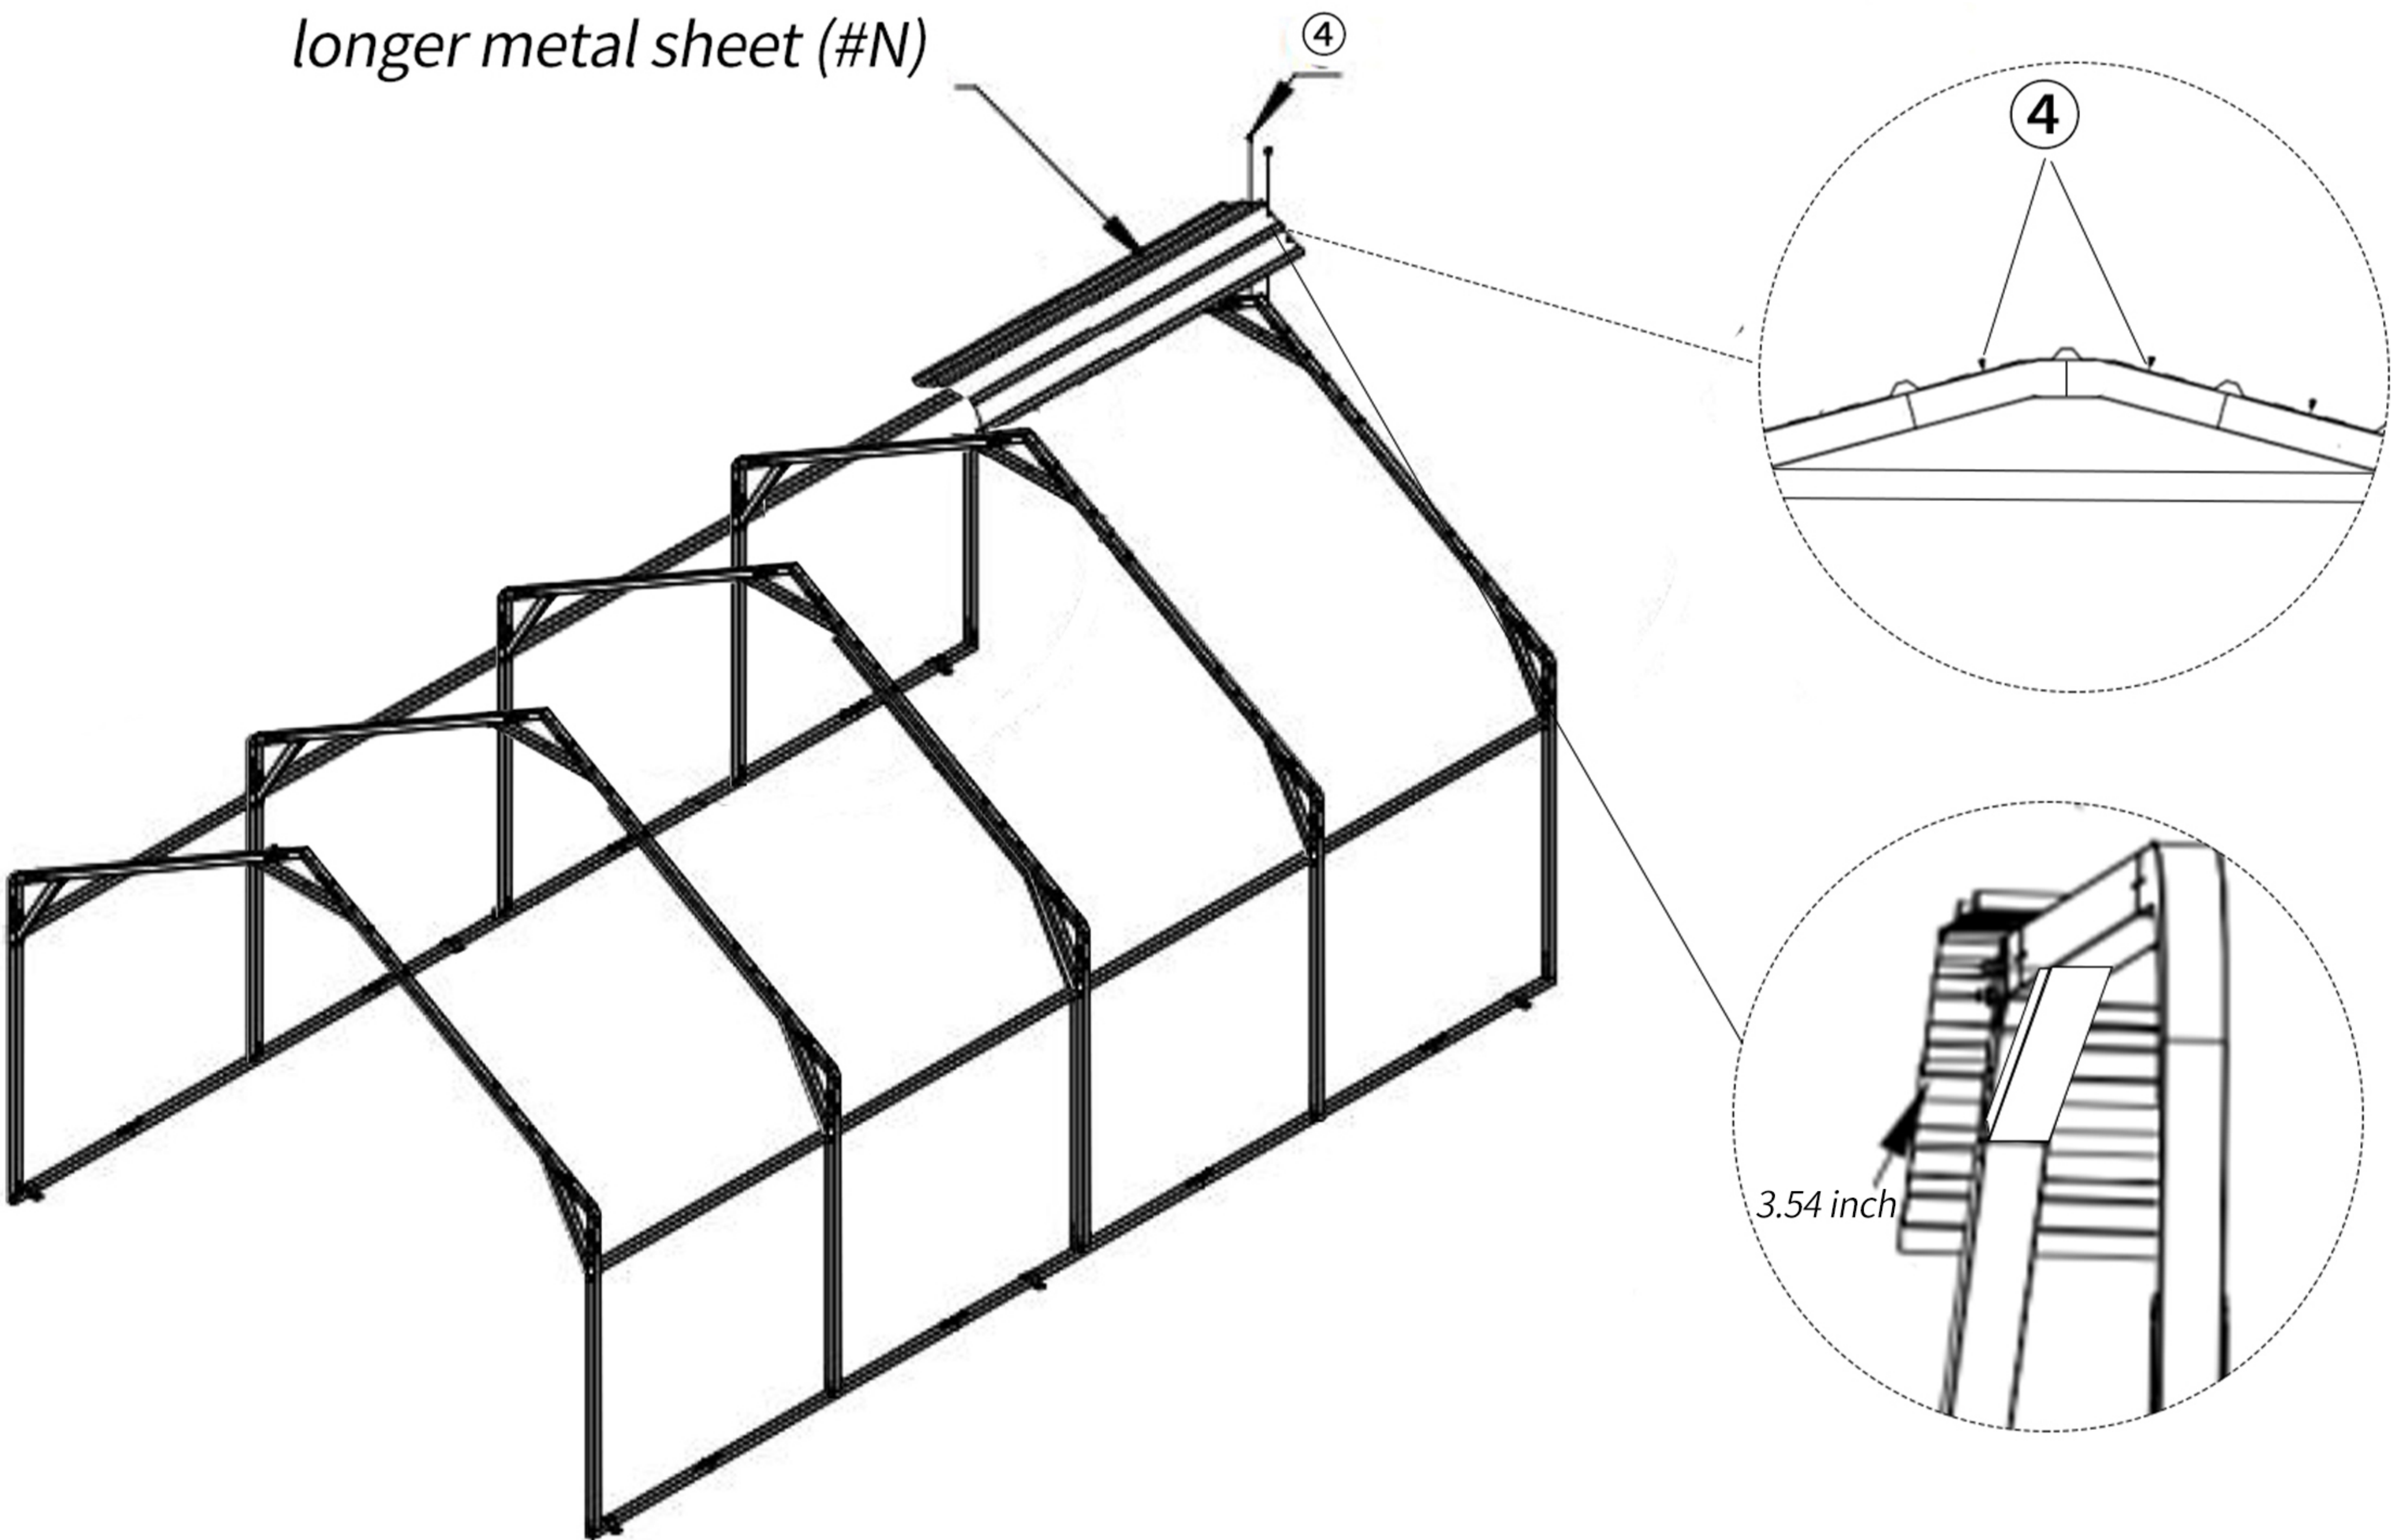
Step 9: Place the fasteners (#M) on the base (three on each side), and use a power drill to create twelve 10mm diameter holes in the ground. Then secure using expansion screws (#3).

③		12pcs
M		6pcs


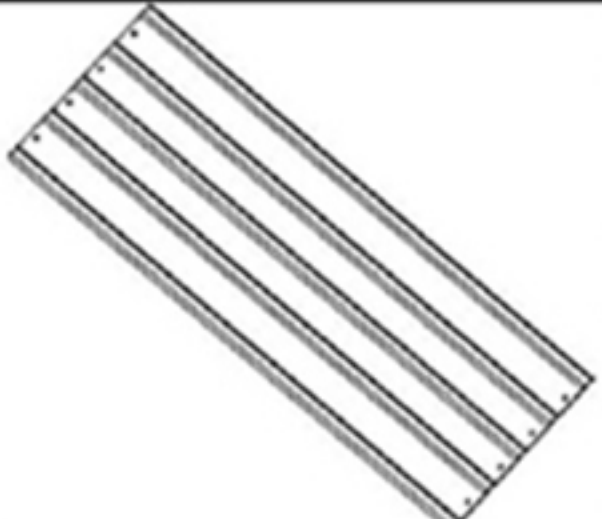




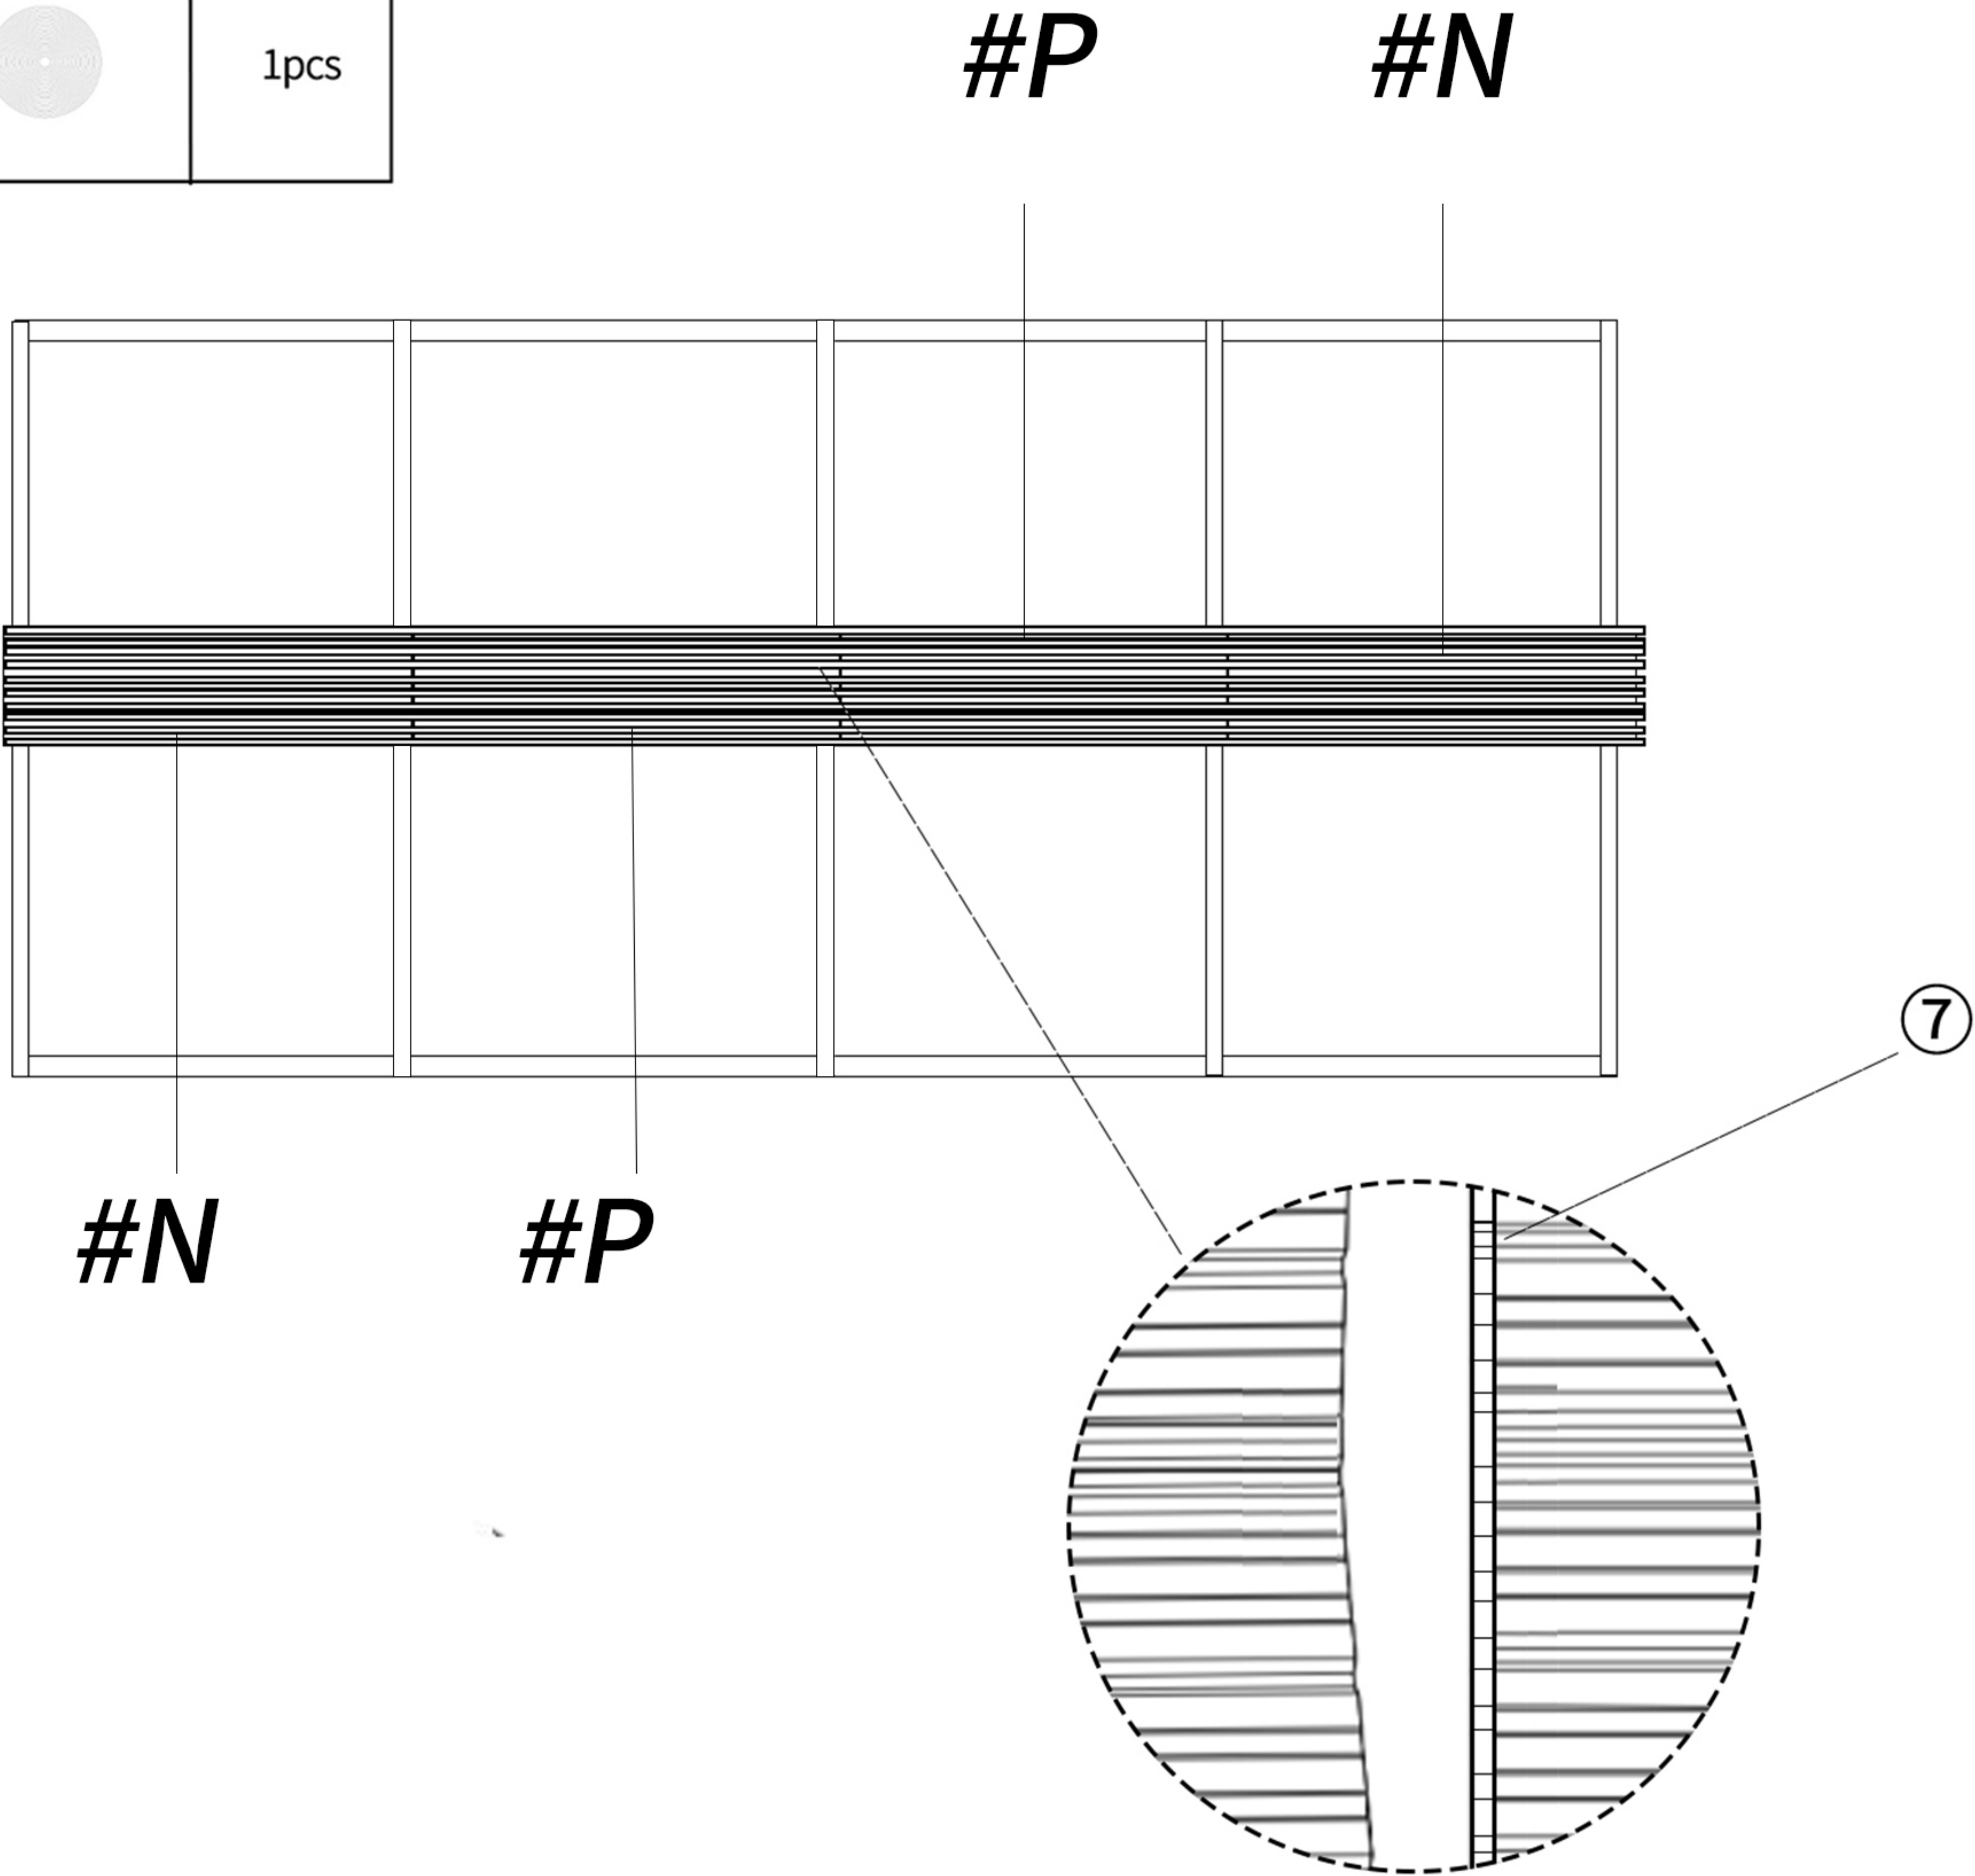
Step 10: Install the longer metal sheet (#N) at both ends using pre-punched holes as reference points; ensure that the ends of the metal sheet extend 3.54 inch beyond the main frame.

N		1pcs
④		2pcs

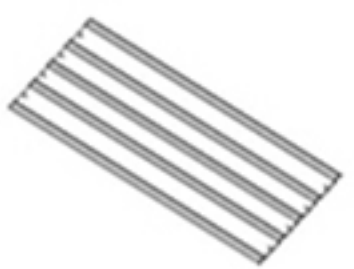




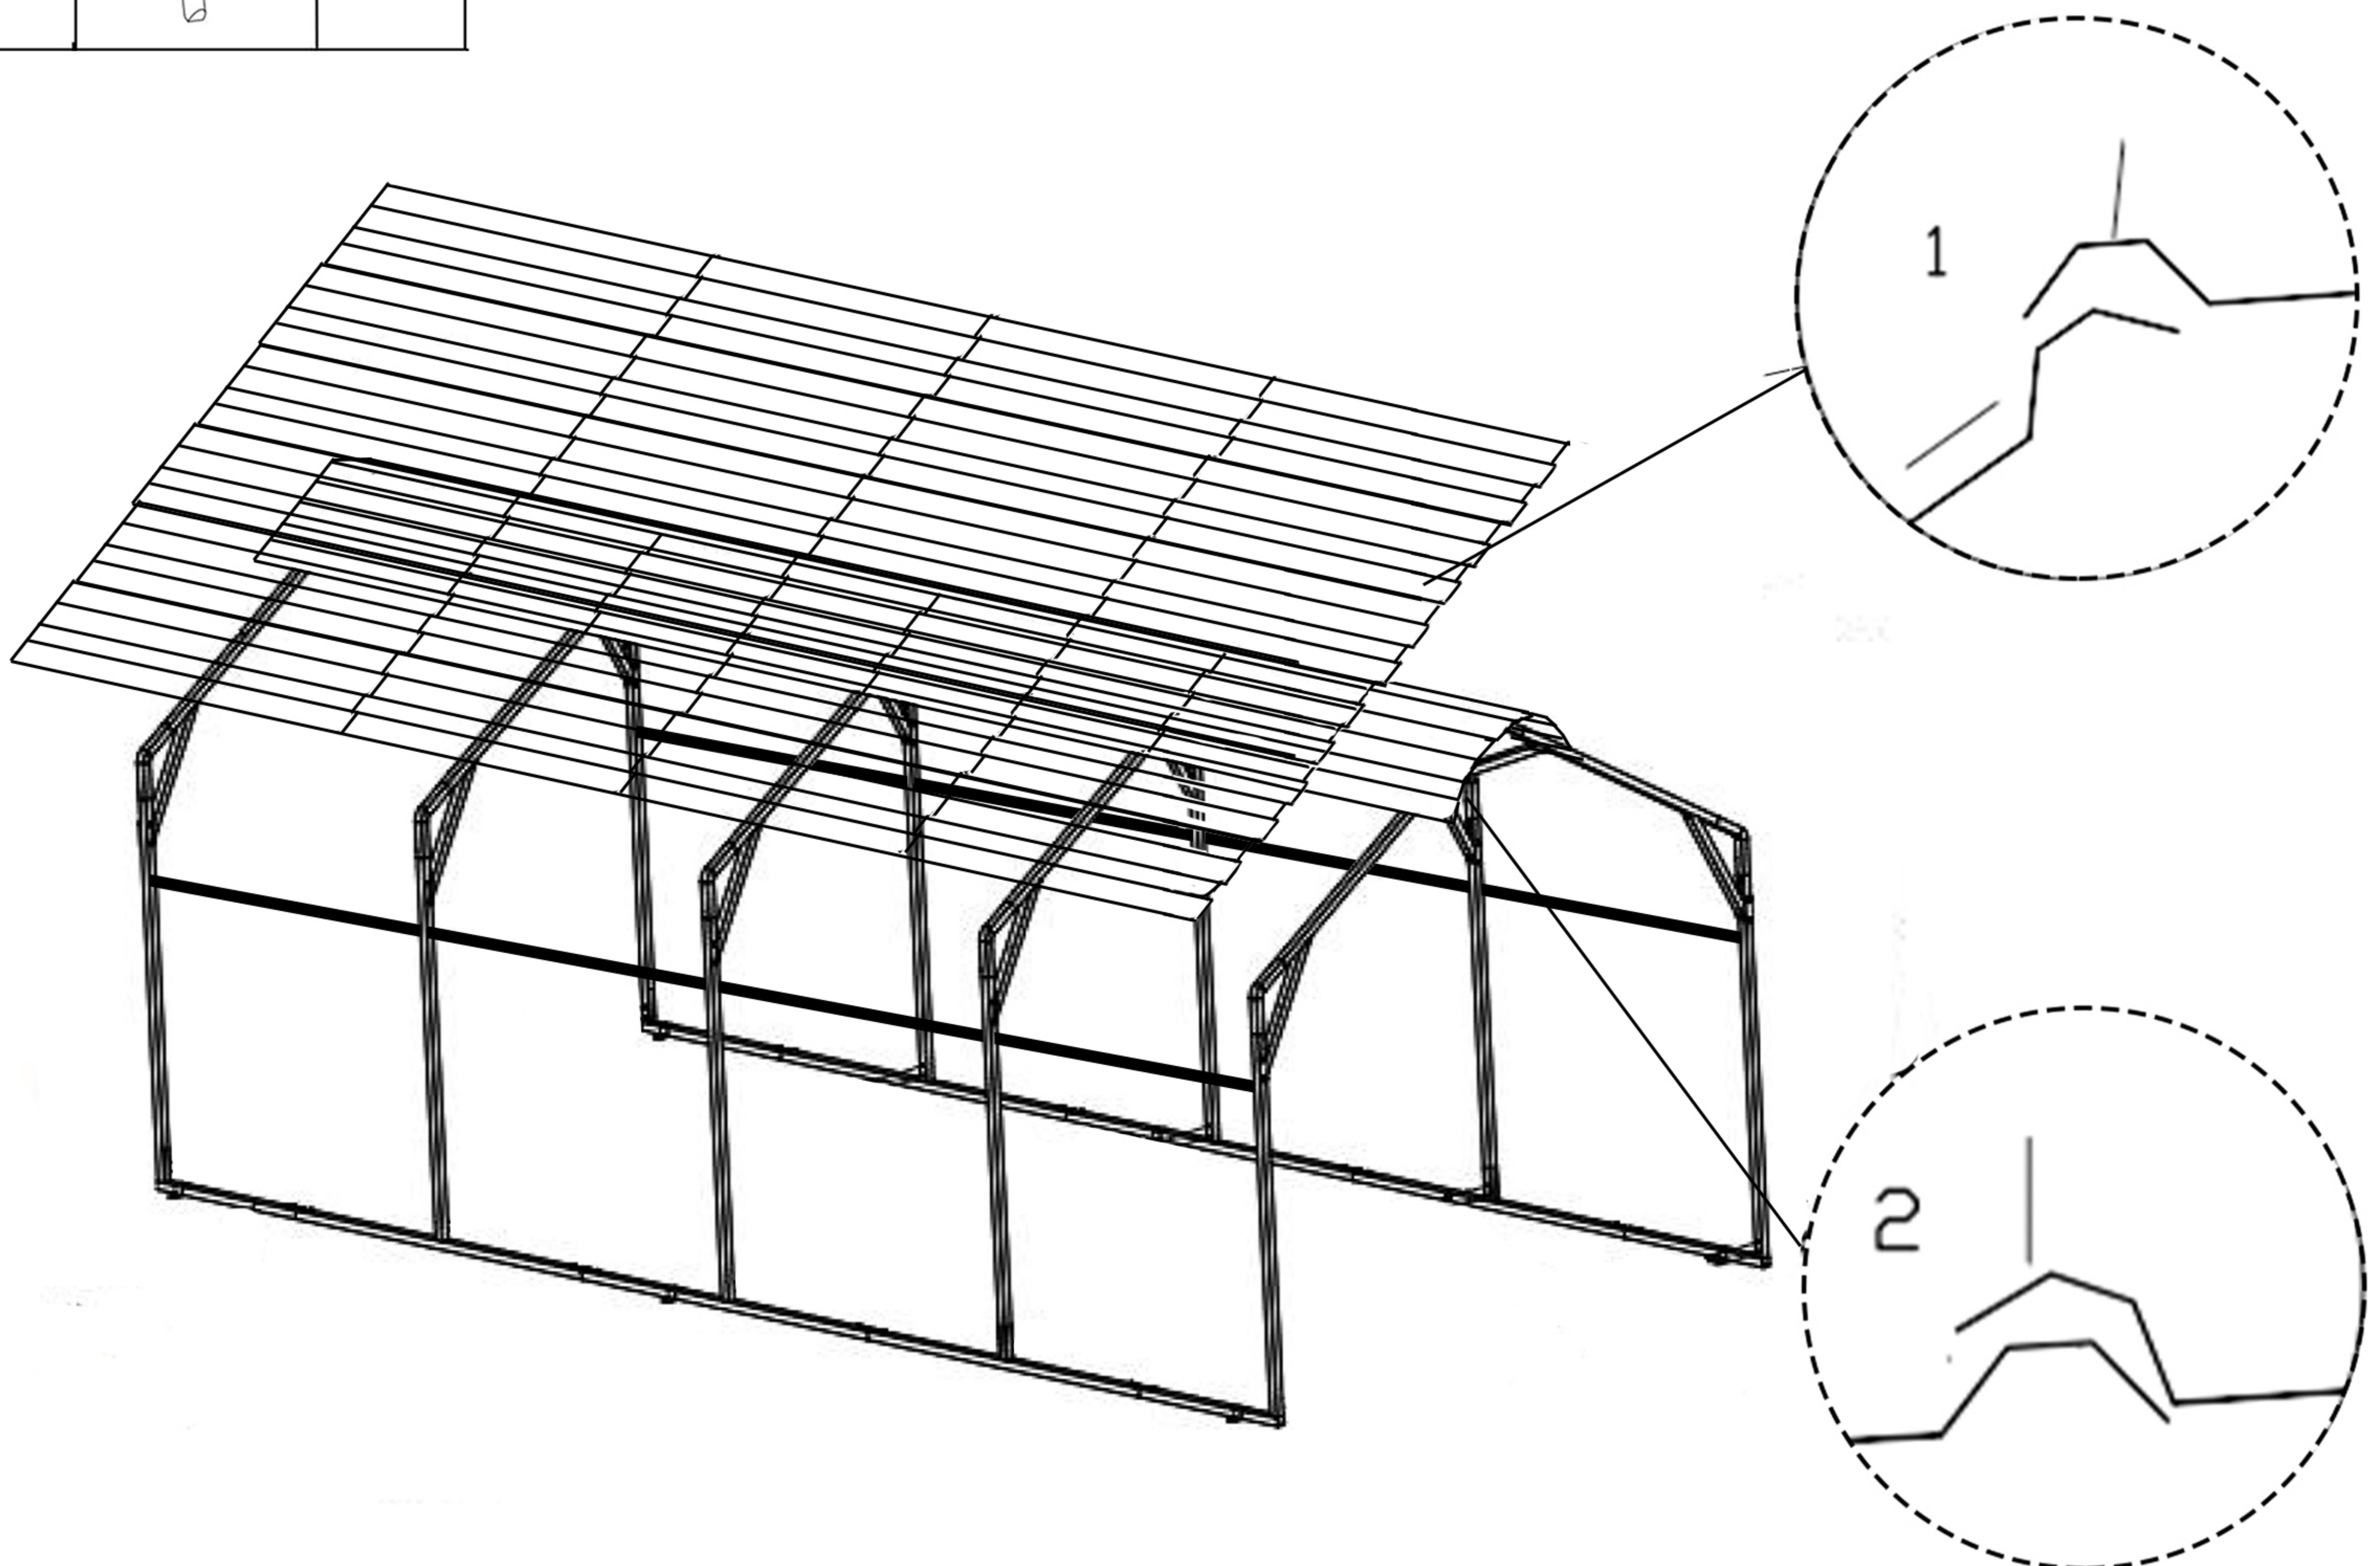
Step 11: Overlap every 2 metal sheets by about 1 inch for waterproof tape, and install the first row of metal sheets.

P		2pcs
N		1pcs
④		8pcs
⑦		1pcs




Step 12: Pay attention to the overlapping method of different rows of metal sheets, and install the remaining metal sheets (#N and #P) in the same manner. Use self-tapping screws (#4) fix all the metal sheets on the frames.

P		16pcs
N		16pcs
④		170pcs



Step 13: Use sealing strips (# 6)to install cover both ends of metal sheet roof

⑥		2pcs
---	---	------

