



Installation Guide for 15-23 Dodge Charger | SRT Hellcat Headlights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX HEADLIGHTS** for your 2015-23 Dodge Charger | SRT Hellcat

DO NOT USE DIELECTRIC GREASE!



Table of Contents



NOVA-Series
LED Headlights



LUXX-Series
LED Headlights

PART I REMOVE HEADLIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Disconnecting the negative battery terminal
- **STEP 2.** Remove the front bumper
- **STEP 3.** Remove the headlight bolts
- **STEP 4.** Remove the headlights

PART II INSTALL HEADLIGHTS


- **STEP 1.** Tap the fuse and route the DRL harness
- **STEP 2.** Plug the headlights
- **STEP 3.** Install the headlights
- **STEP 4.** Test the headlight functions
- **STEP 5.** Adjust headlight level
- **STEP 6.** Complete installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE HEADLIGHTS

INSTALLATION TOOLS


PREPARE THESE TOOLS FOR INSTALLATION



Metal
Panel
Popper



Flat
Screwdriver

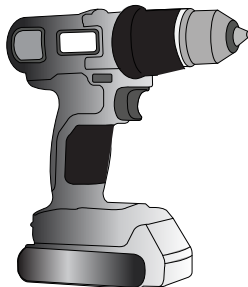

Power Tool



Wrench



1/4 Ratchet



1/4 Extension

7mm
8mm
10mm



Socket

NOTE: Whenever using a power tool, please make sure do not overtighten the bolts.



STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.




STEP 2. REMOVE THE FRONT BUMPER


Begin by extracting the push-in pins from the radiator support cover.

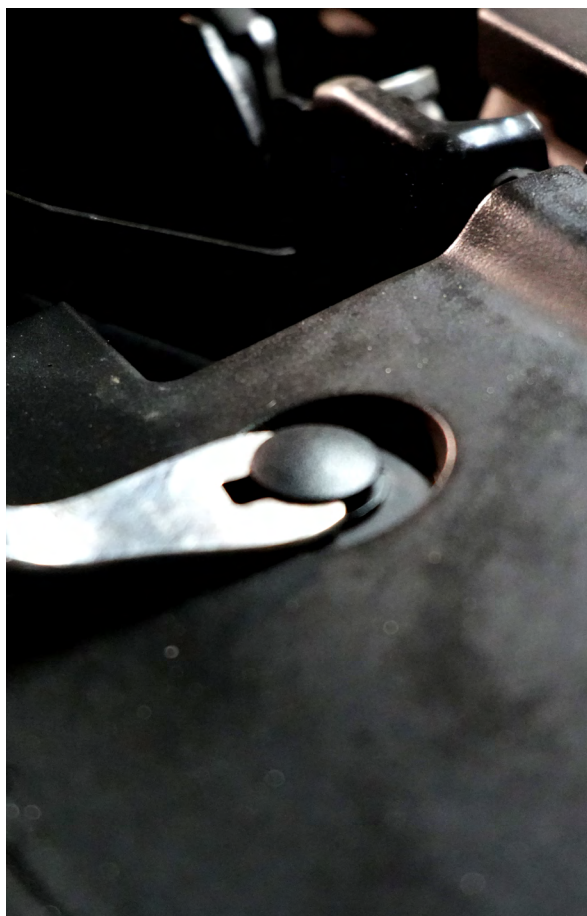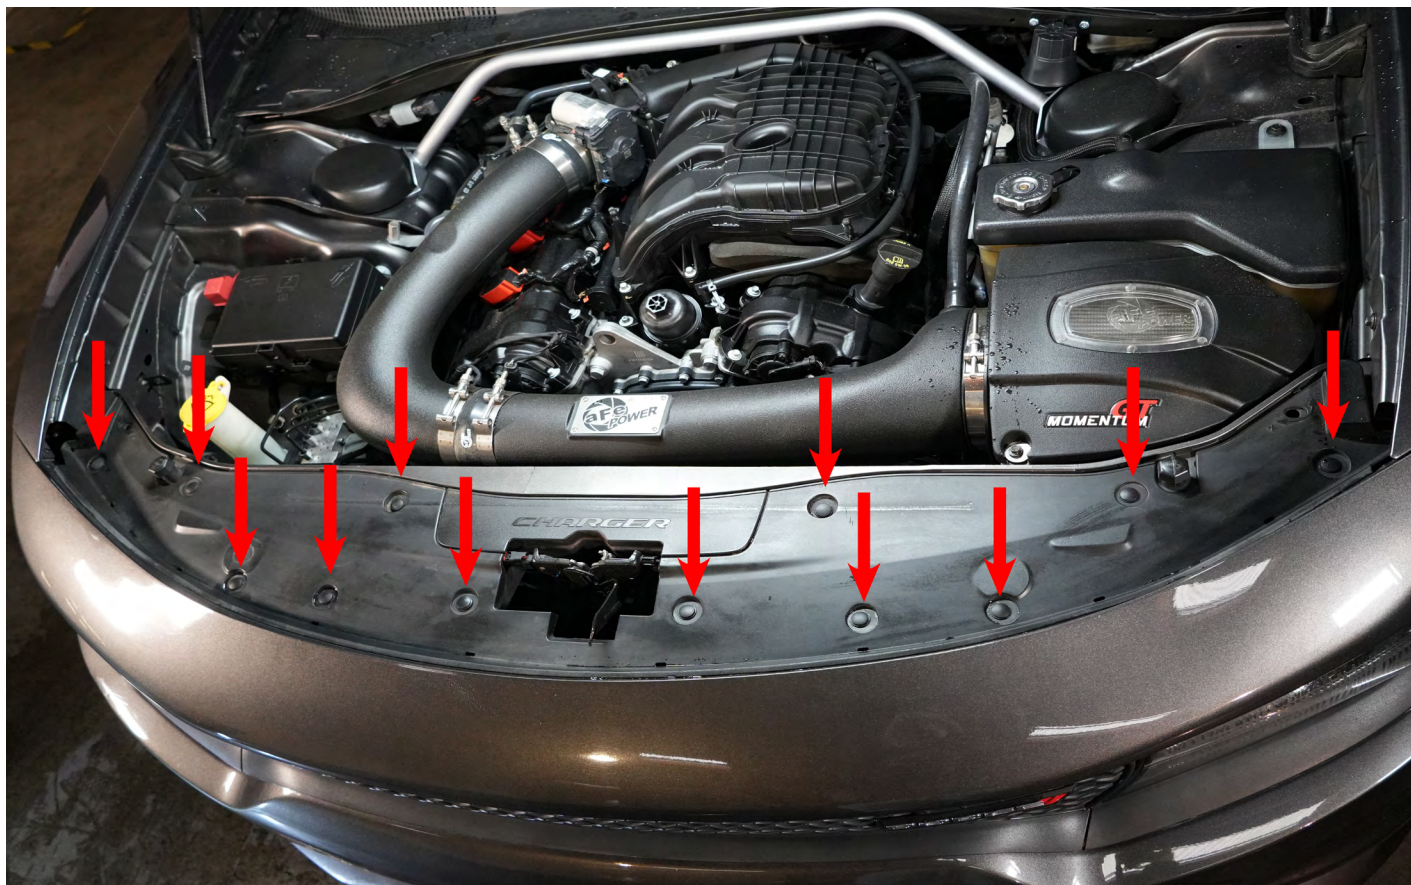


Remove the two 10mm bolts, located individually on either side of the upper bumper corner.

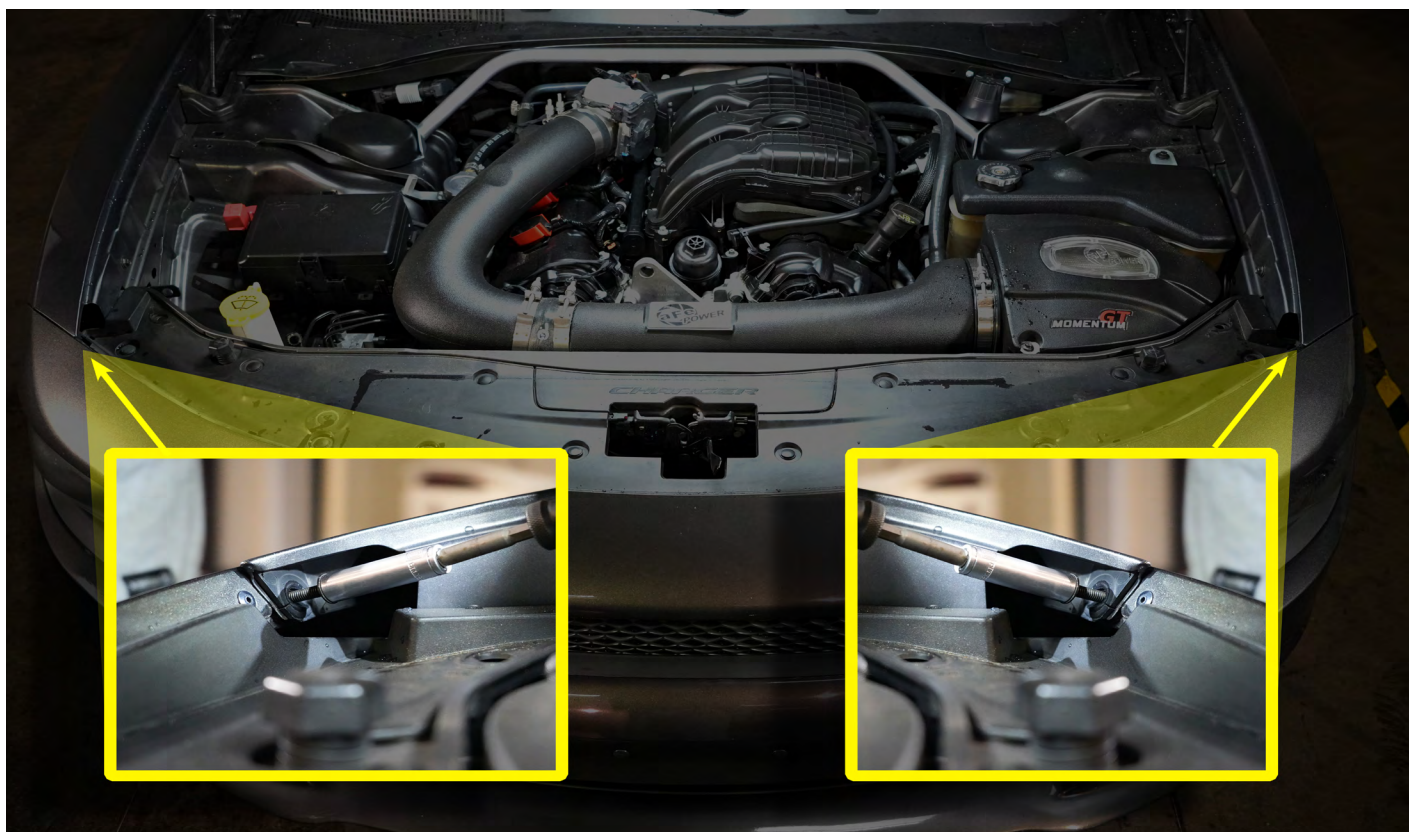

Extract the four push-in pins from both sides of the wheel fender.

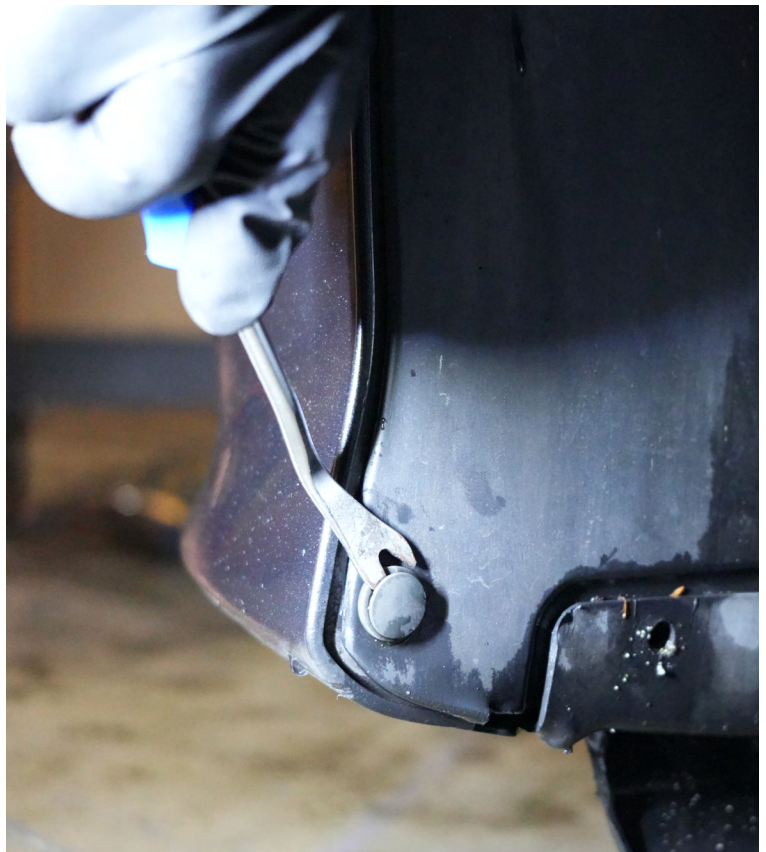

Subsequently, spread open the fender liner widely and use the wrench to disengage the two 10mm bolts securing the front bumper.

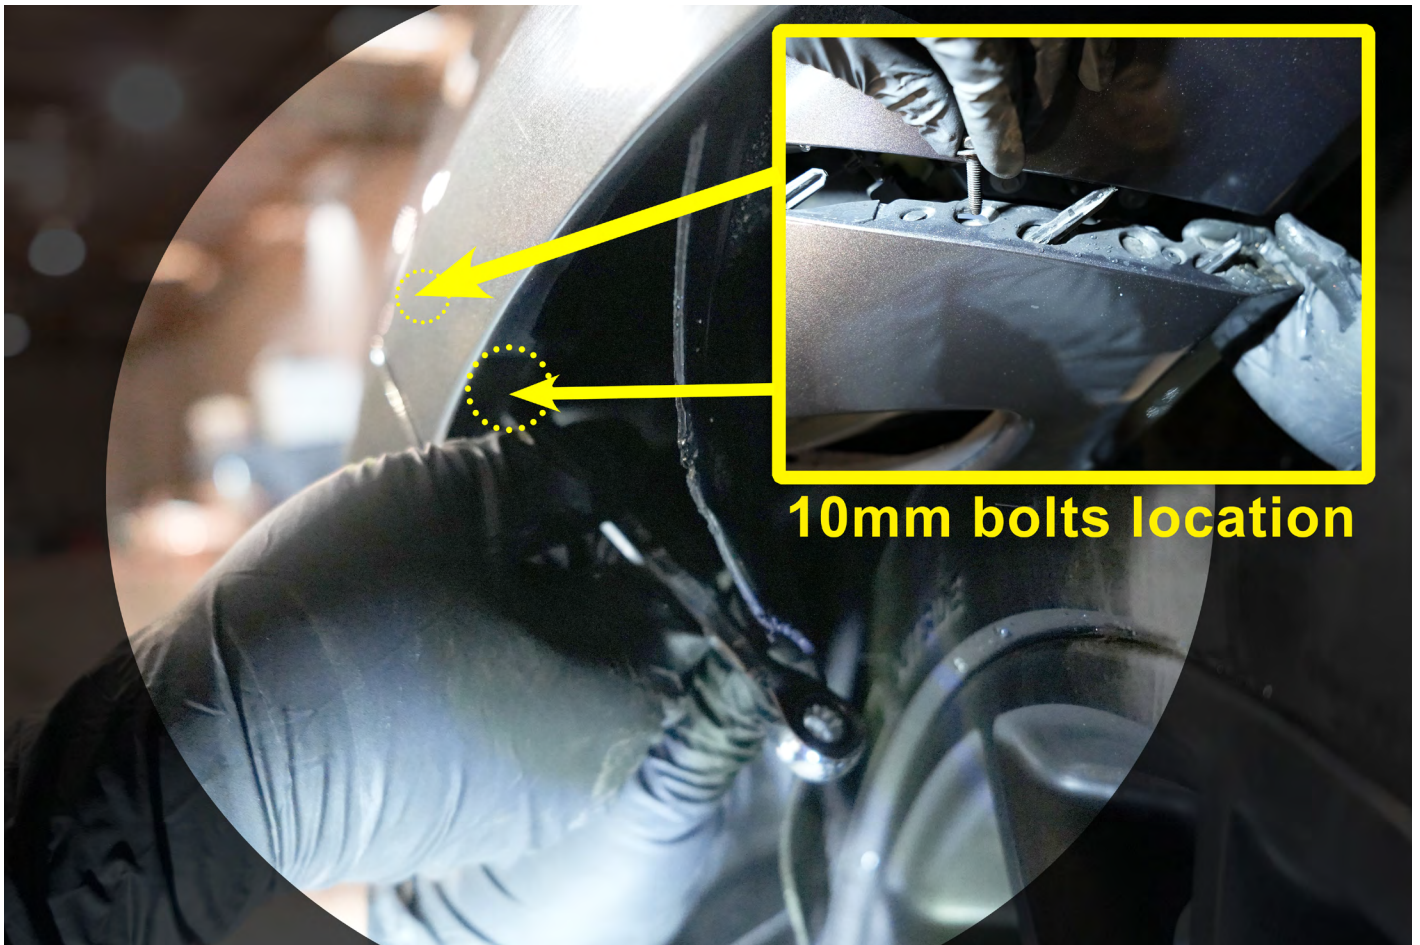

Repeat the identical steps on the opposite side of the wheel fender. Open the fender liner widely and remove the two 10mm bolts securing the front bumper.



Take out the eight 7mm bolts located underneath the front bumper.



Gently detach the front bumper by pulling outward from each side, disengaging it from the mounting clips.




Disconnect the fog light connectors and side marker connectors, then proceed to remove the front bumper entirely. Set it aside for later reinstallation.



STEP 3. REMOVE THE HEADLIGHT BOLTS

Remove the 4 X 8mm bolts from the headlight assembly.
Follow the same steps for the other side.

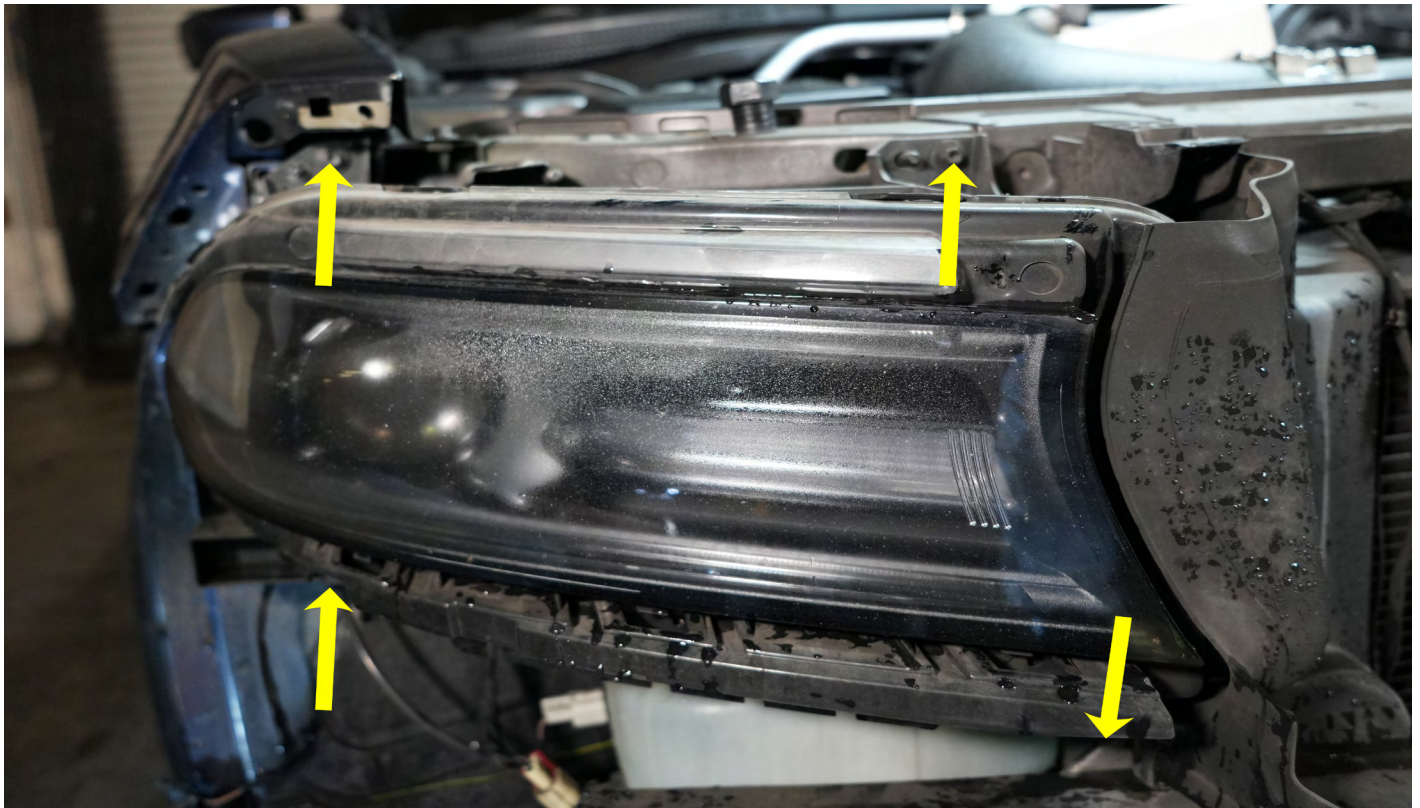



STEP 4. REMOVE THE HEADLIGHTS

Gently pull the headlight assembly outward to disengage.
Unplug the headlight's sockets to complete the headlights removal.





Follow the same steps to remove the other side of the headlight.





PART II INSTALL HEADLIGHTS







STEP 1. TAP THE FUSE AND ROUTE THE DRL HARNESS

To ensure proper operation of the Daytime Running Lights (DRL), it's essential to connect to the fuse and route the harness accordingly. Begin by locating the fuse box. Then, attach the red wire to the positive (+) terminal and the black wire to the negative (-) ground terminal on the firewall.

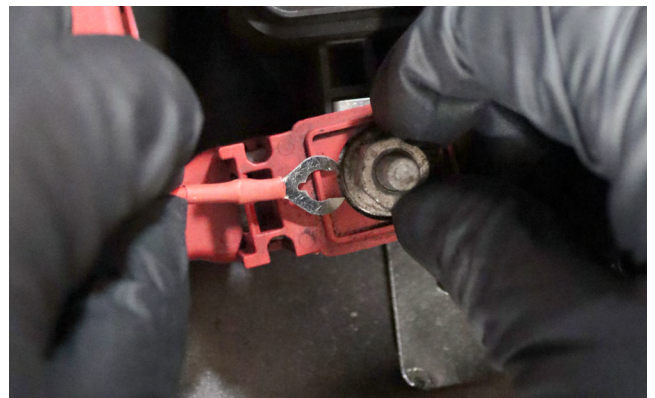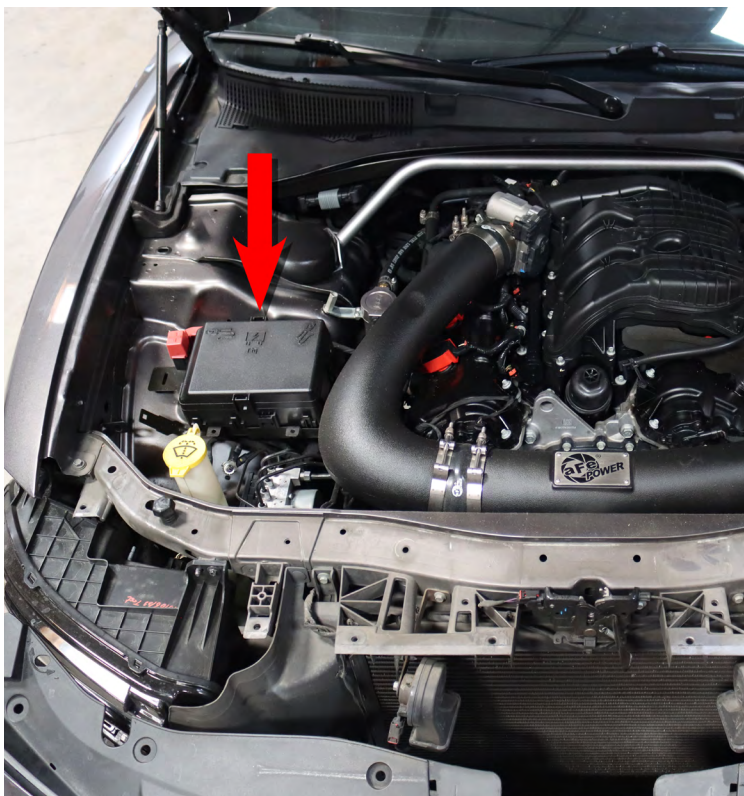

To initiate, open the fuse box and tap the red wire into the fuse F39 (10A).

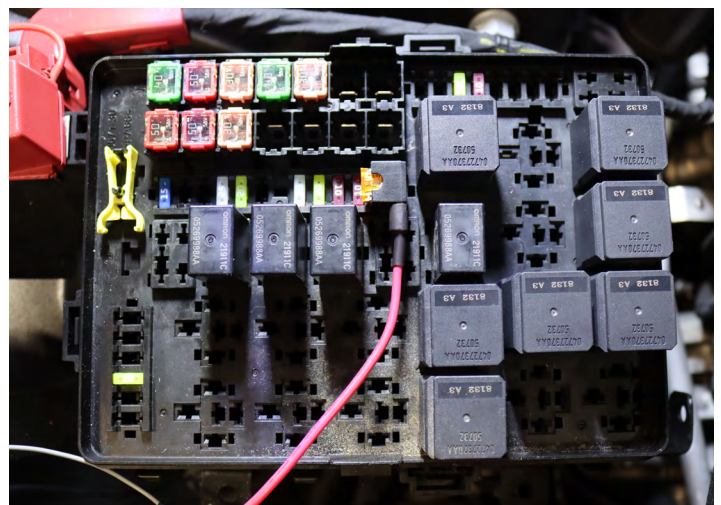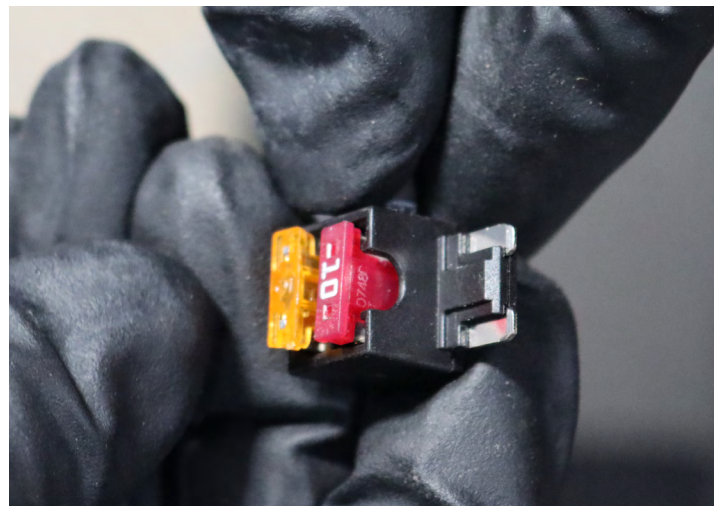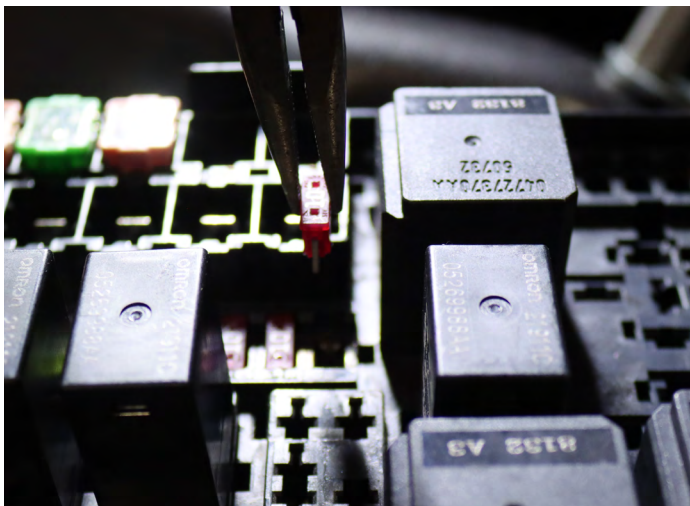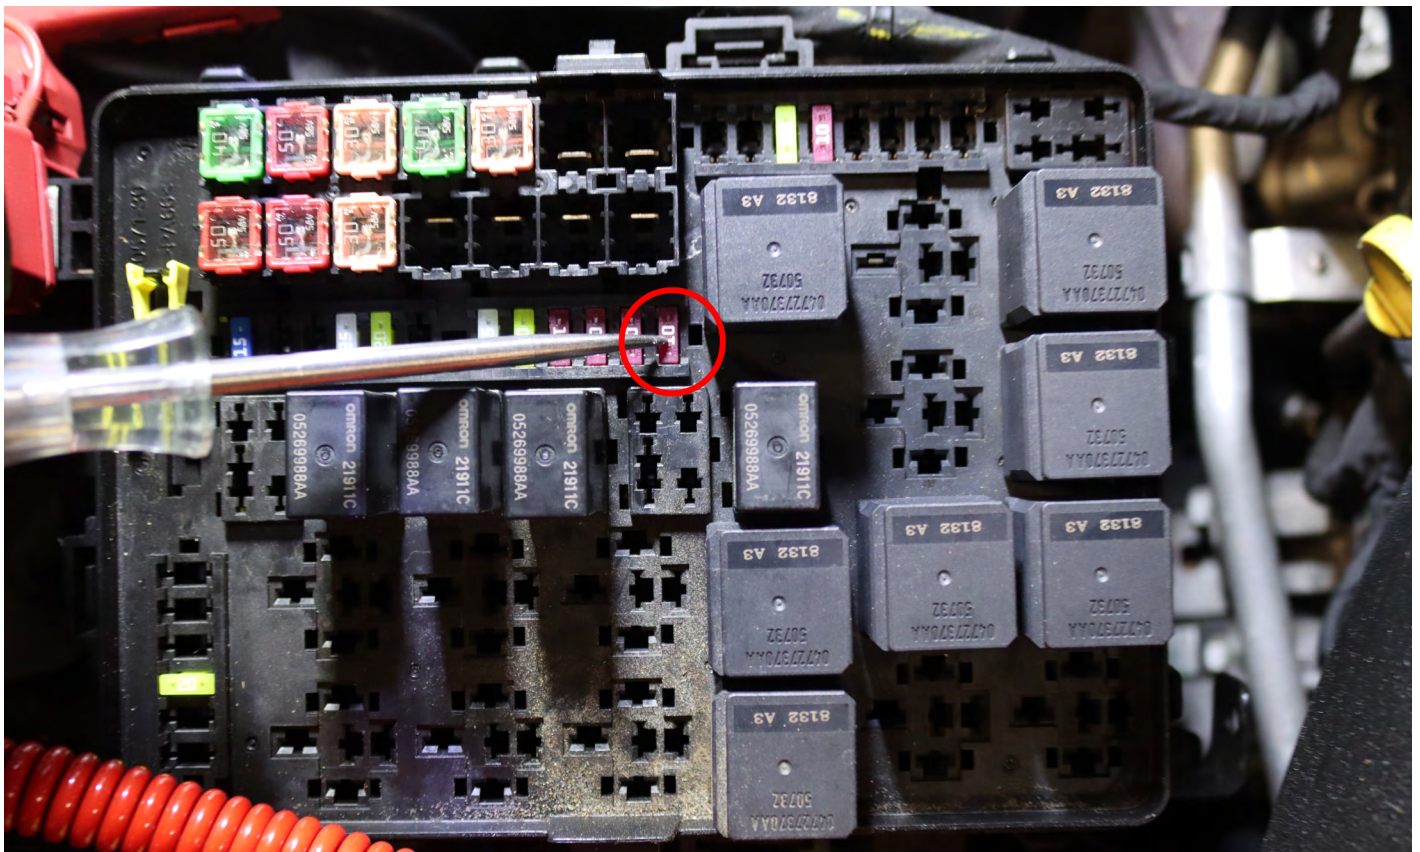

Next, proceed to route the DRL wire harness towards the headlights.



STEP 2. PLUG THE HEADLIGHTS


Connect the headlight socket, DRL connector, and turn signal connector to the new ALPHAREX headlight assembly. **DO NOT USE DIELECTRIC GREASE!**



STEP 3. INSTALL THE HEADLIGHTS

Screw the 4 X 8mm bolts into place securely, ensuring a proper fit. Repeat the same steps for the other side of the headlights.



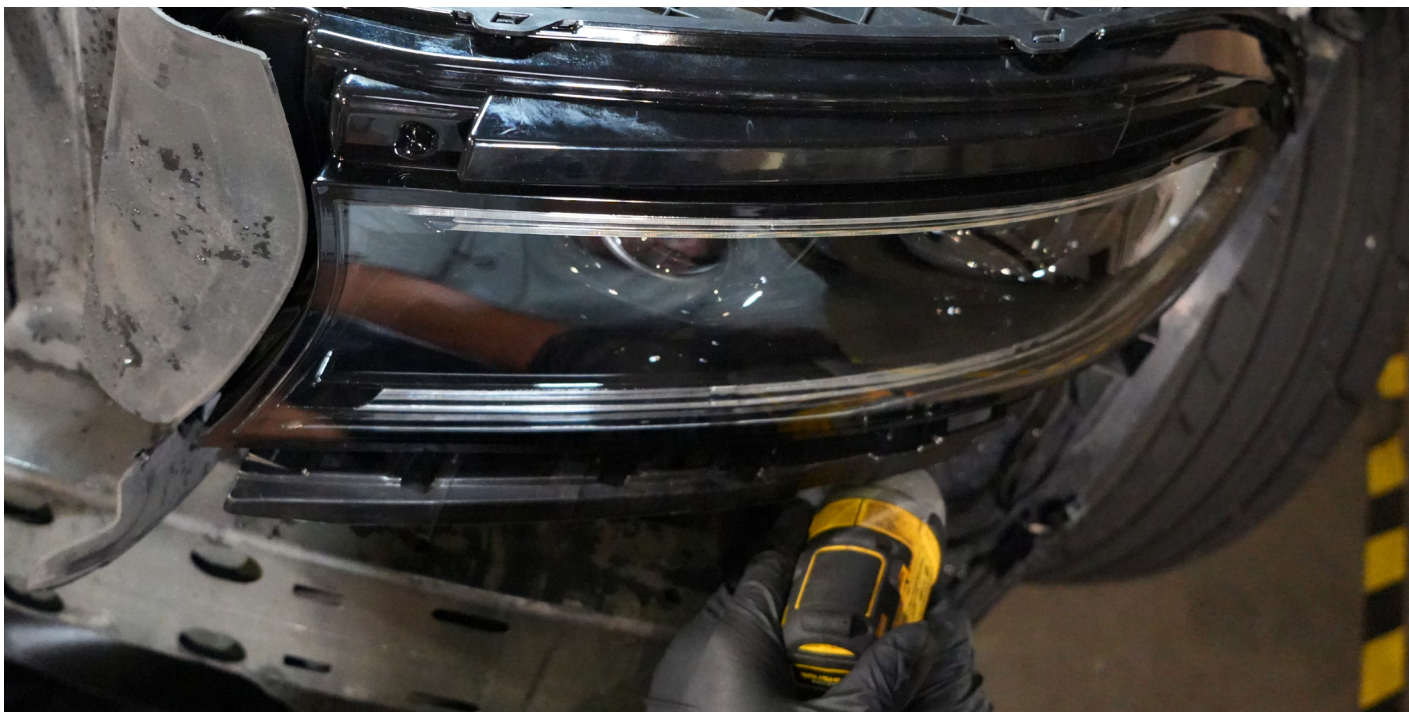

To complete the installation, reverse the uninstallation process, ensuring all previous steps are followed in the opposite order.




STEP 4. TEST THE HEADLIGHT FUNCTIONS

Test the functions of your ALPHAREX headlights to ensure everything works properly.



STEP 5. ADJUST HEADLIGHT LEVEL

Once everything has been tested, aim your ALPHAREX headlights by parking 25ft from a wall and level the headlight evenly.

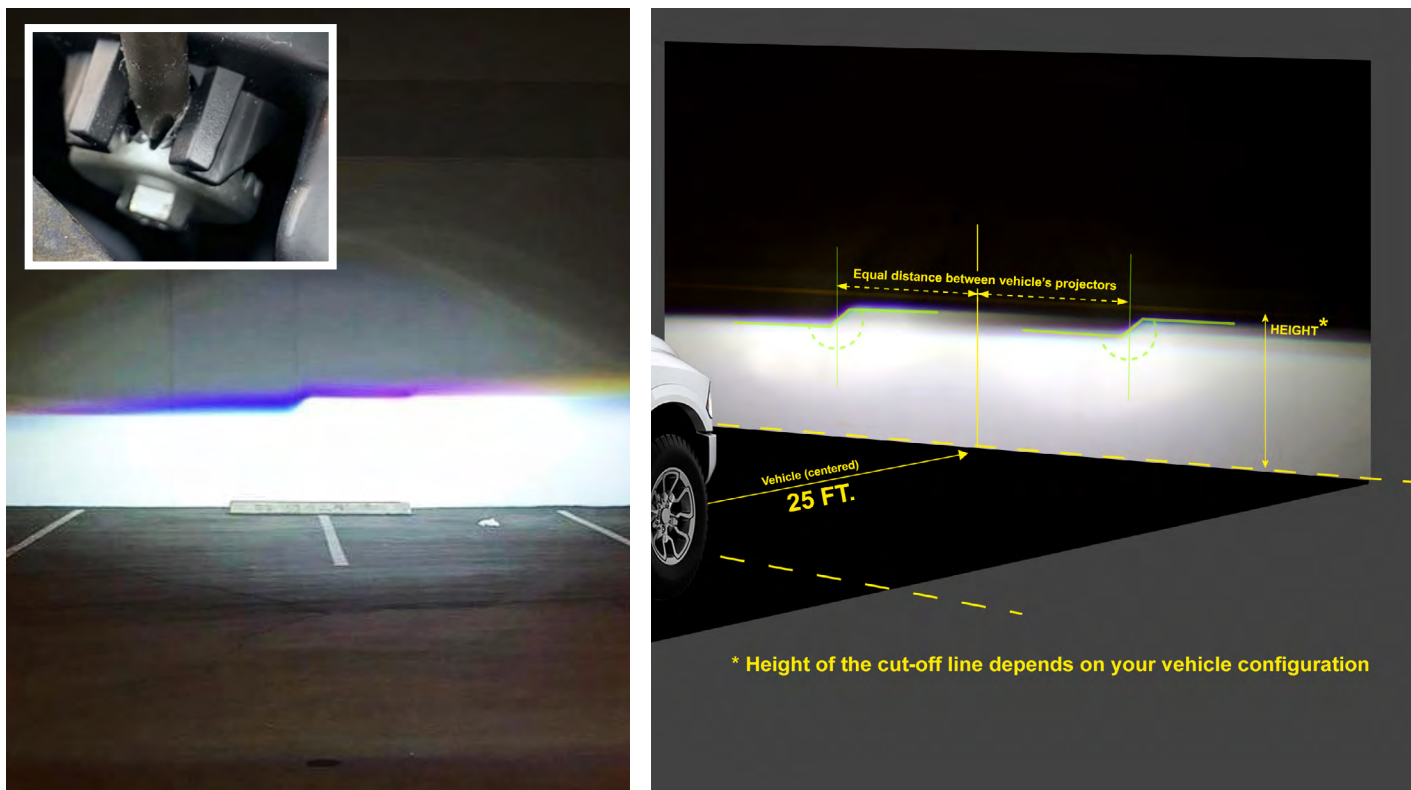

STEP 6. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX **15-23 Dodge Charger | SRT Hellcat HEADLIGHTS.**

