

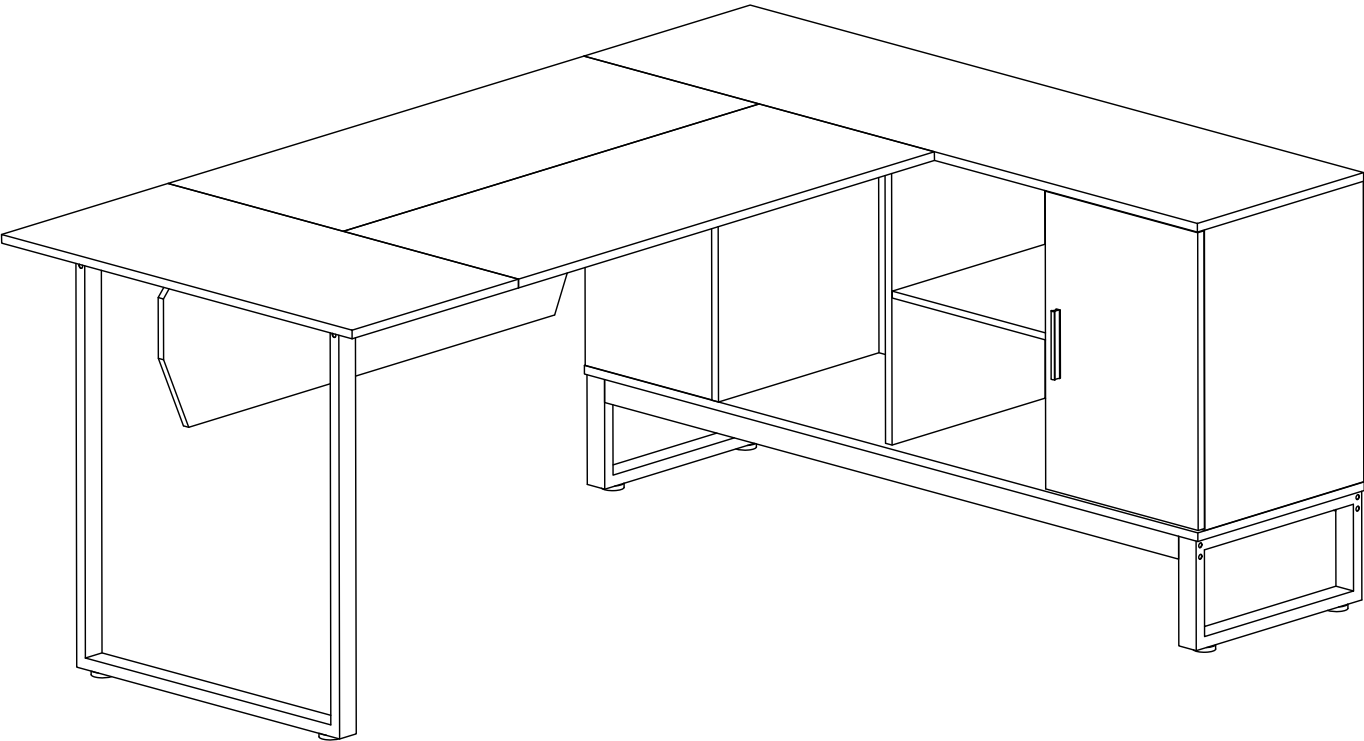
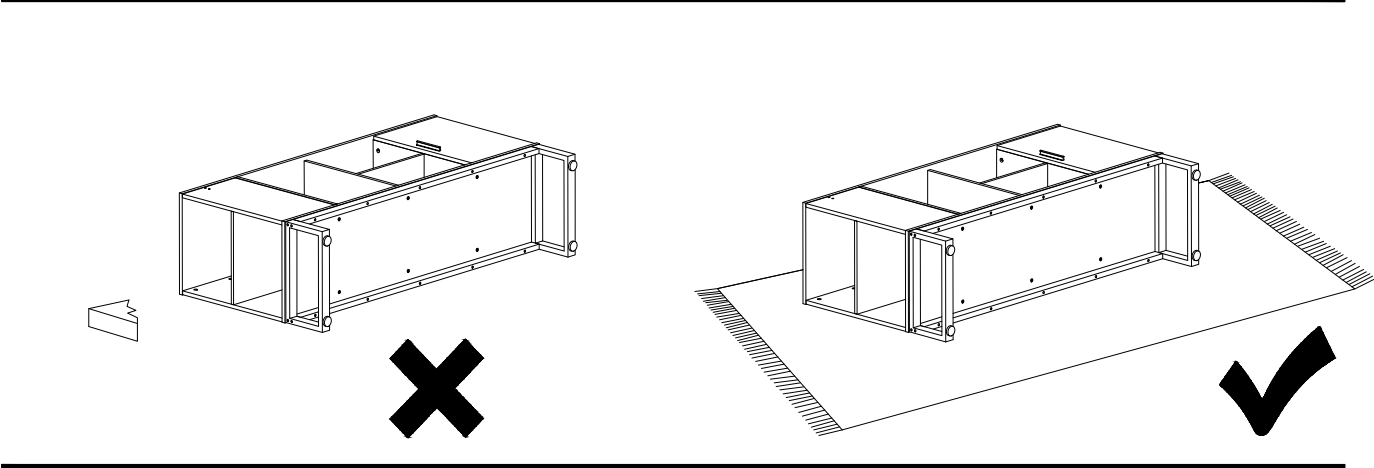



Tribesigns
LITTLE TREE
Assembly Instructions

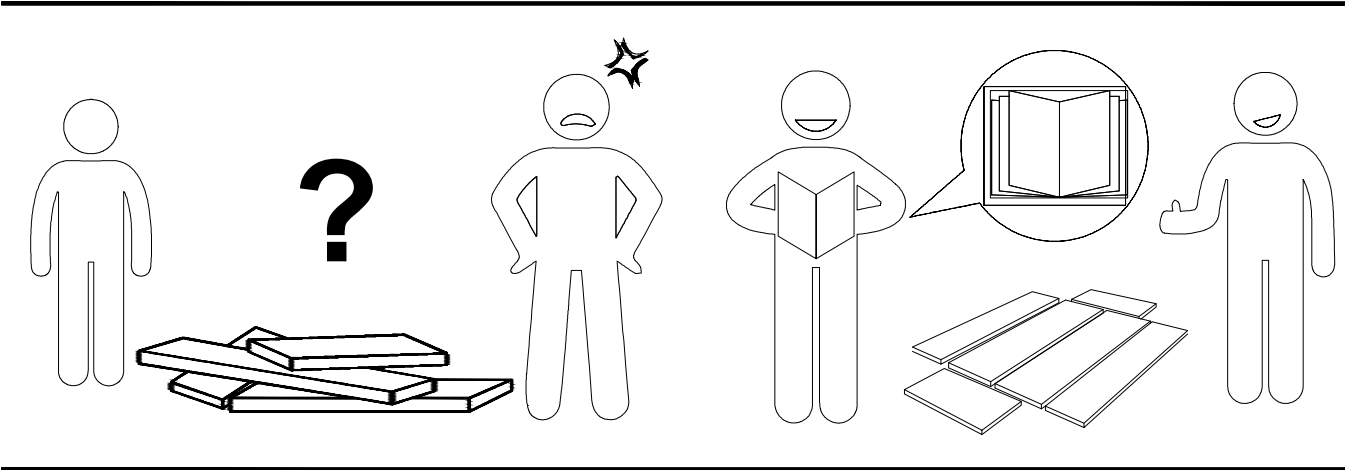

Model No. HOGA-XK00592-A/B-HOGA-XK00593-A/B

Multifunctional Computer Desk

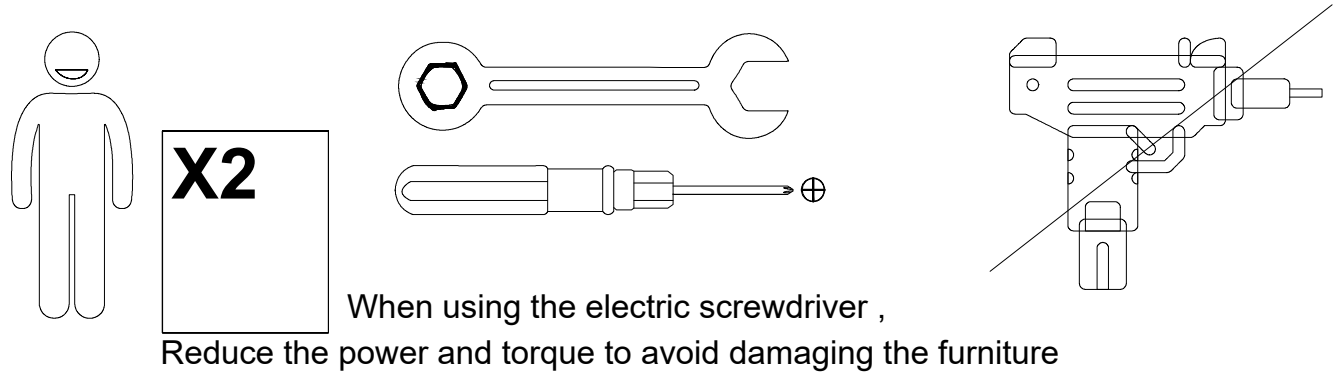

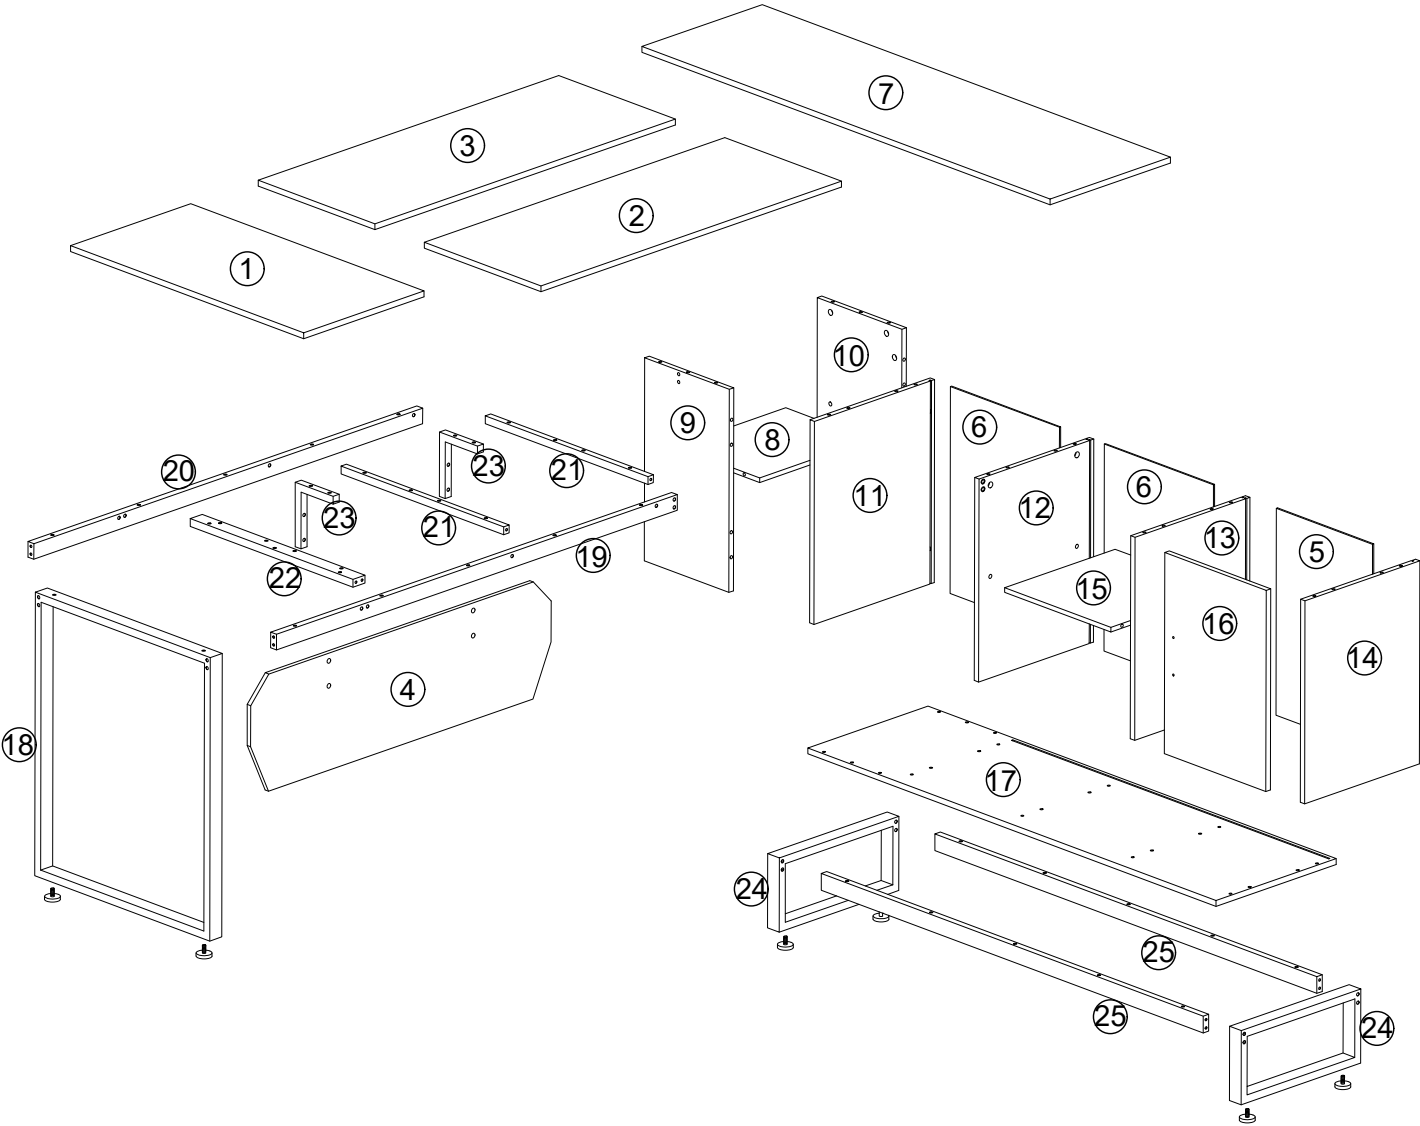


SKU	PARTNO.	QUANTITY
XK00592-A XK00593-A	②	1
	③	1
	④	1
	⑦	1
	⑭	1
	⑰	1
	⑲	1
	⑳	1
	㉑	2
	㉒	1
	㉓	2

SKU	PARTNO.	QUANTITY
XK00592-B XK00593-B	①	1
	⑤	1
	⑥	2
	⑧	1
	⑨	1
	⑩	1
	⑪	1
	⑫	1
	⑬	1
	⑭	1
	⑮	1
	⑯	1
	㉑	2
	㉒	2
	㉓	2




 **Caution**





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.

Parts & Hardware List

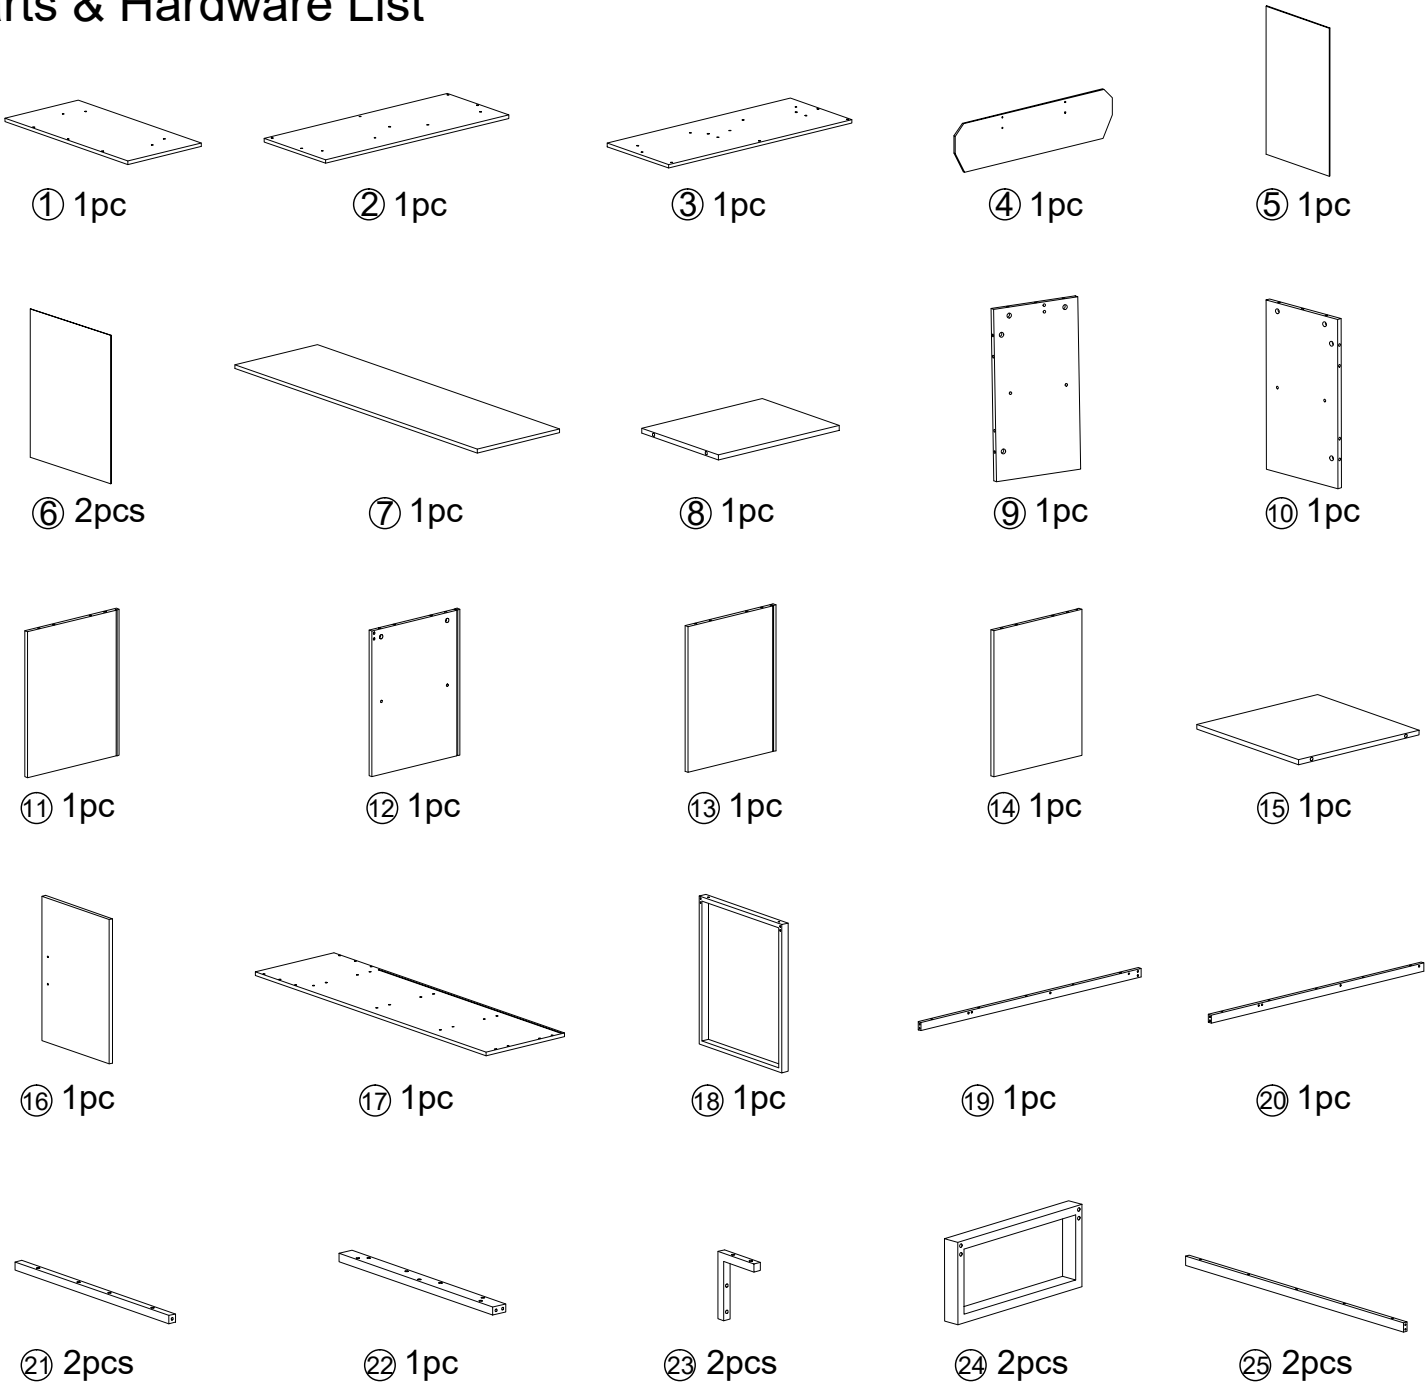

Hardware List


A	X16+1	B	X16+1	C	X12+1	D	X32+1	E	X12+1	F	X1	G	X12+1	H	X4+1
															
Ø6X40mm		Ø15X12mm		3X18mm		Ø8X30mm		Ø7X47mm		M4X64mm		3.5X14mm		M6X25mm	

I	X23+1	J	X10+1	K	X20+1	L	X12+1	M	X1	N	X2+1	O	X6	P	X2
															
M6X30mm		M6X40mm		M6X50mm		M6X60mm		106X16X8mm		M4X18mm		M6XØ23mm			


Q	X12+1
	
17x16x10.5	

Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

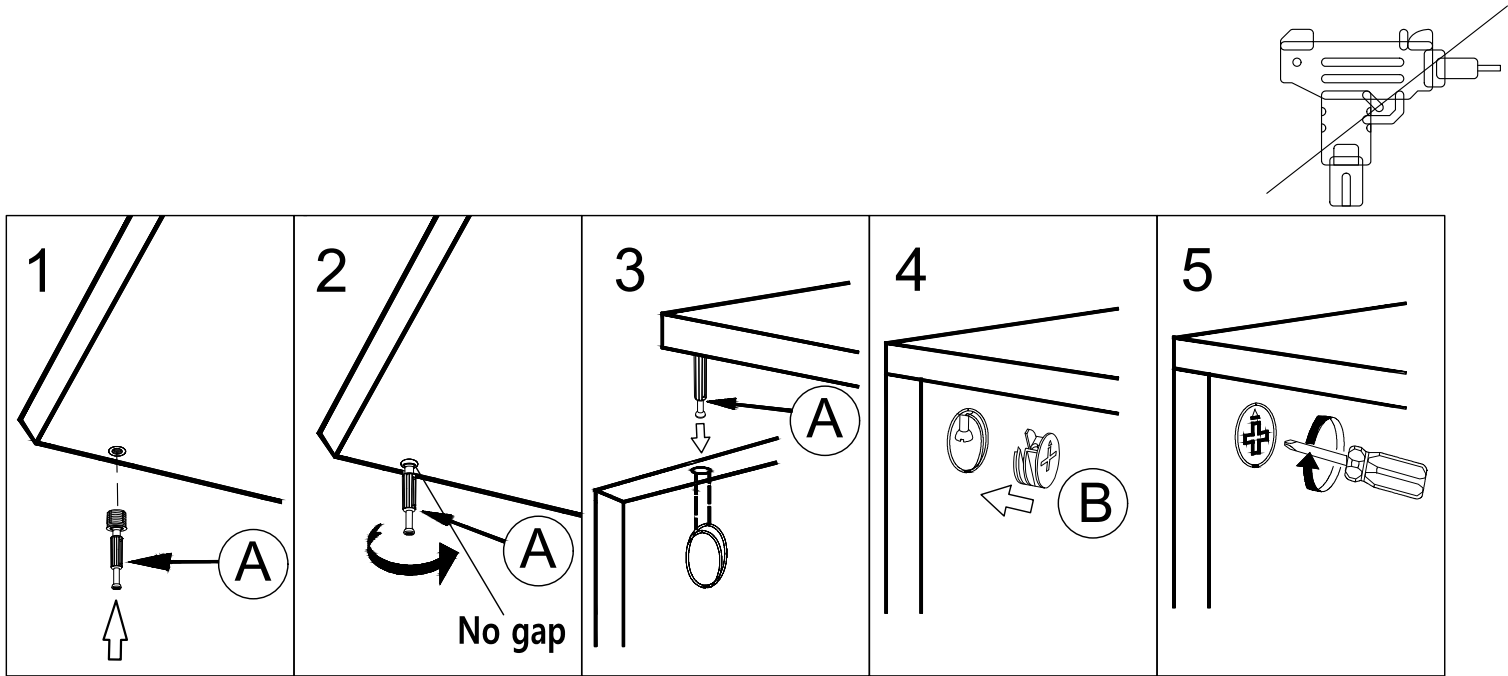


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

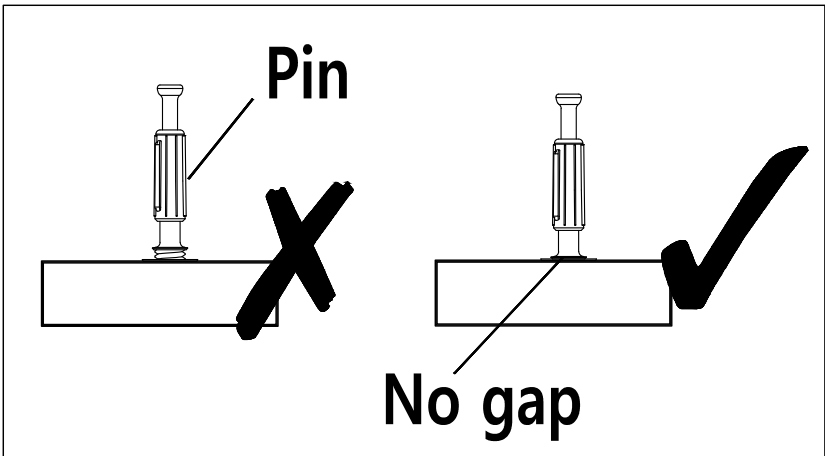


1

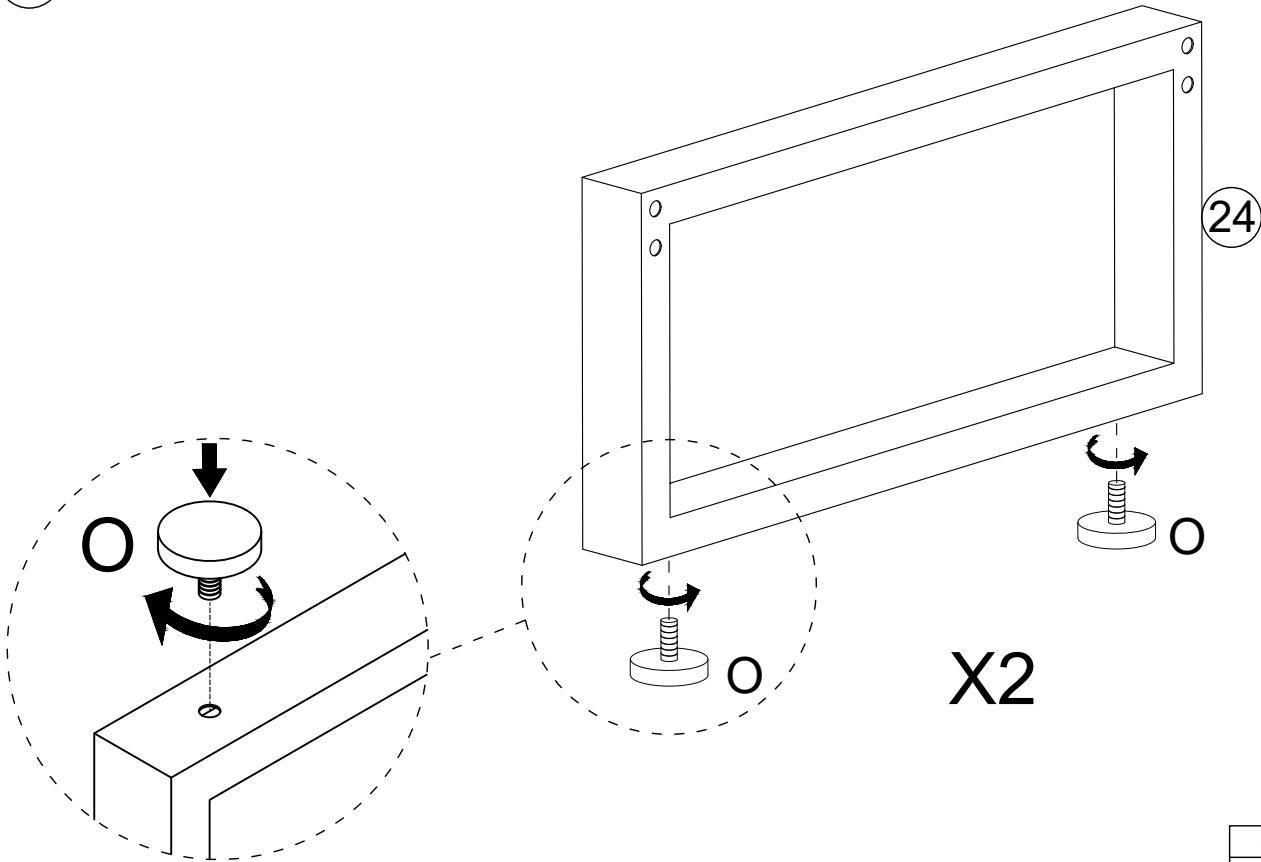


2

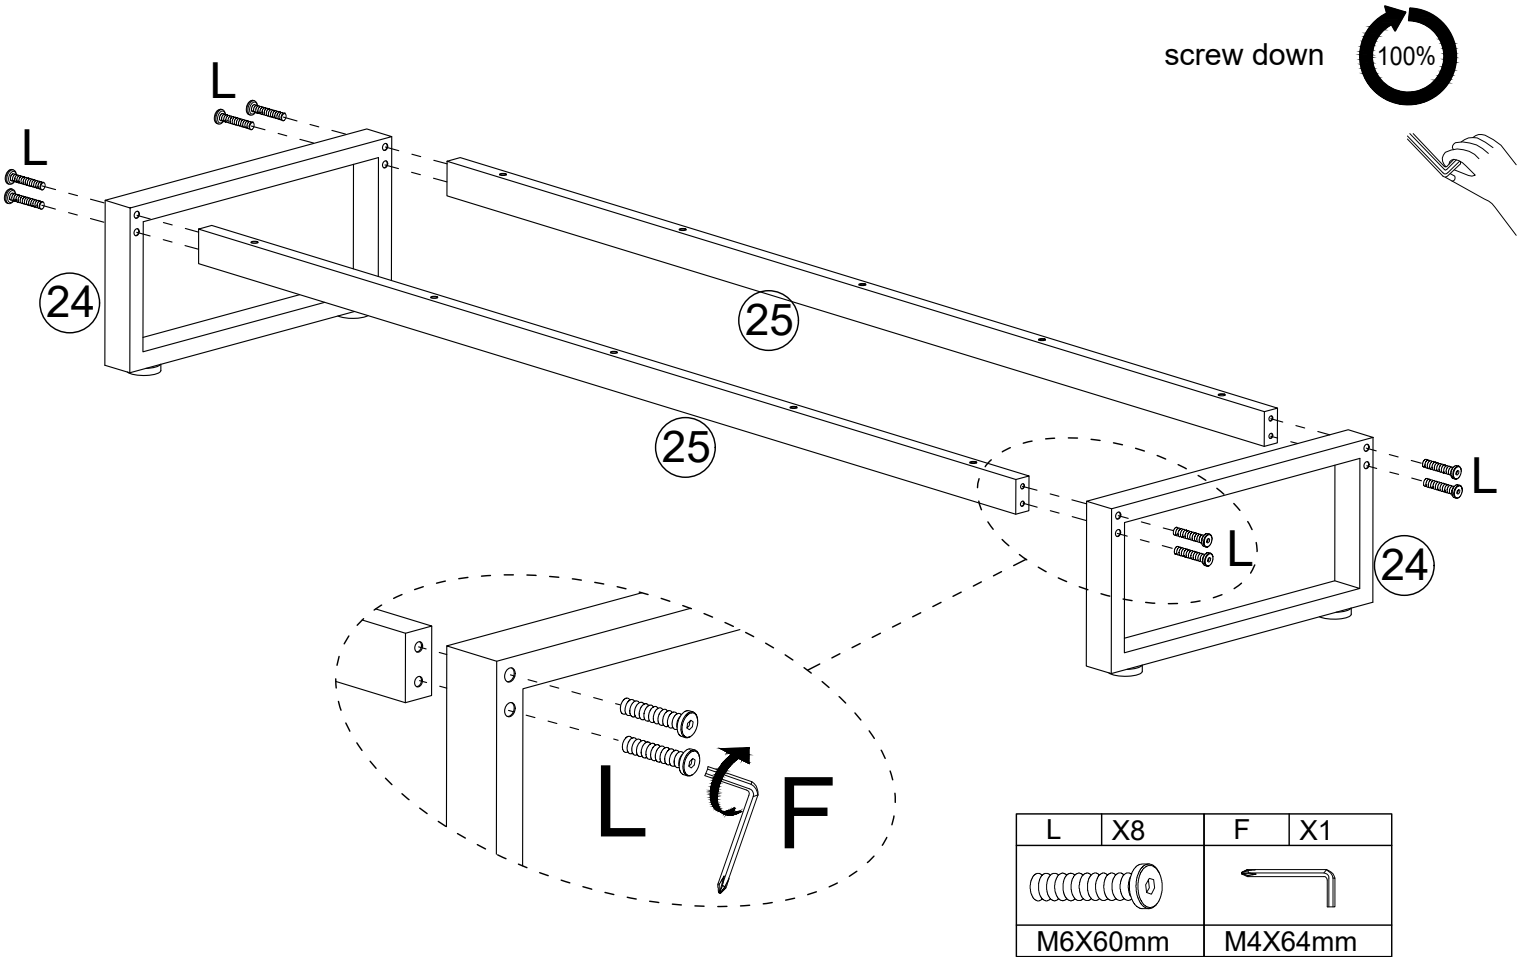



3

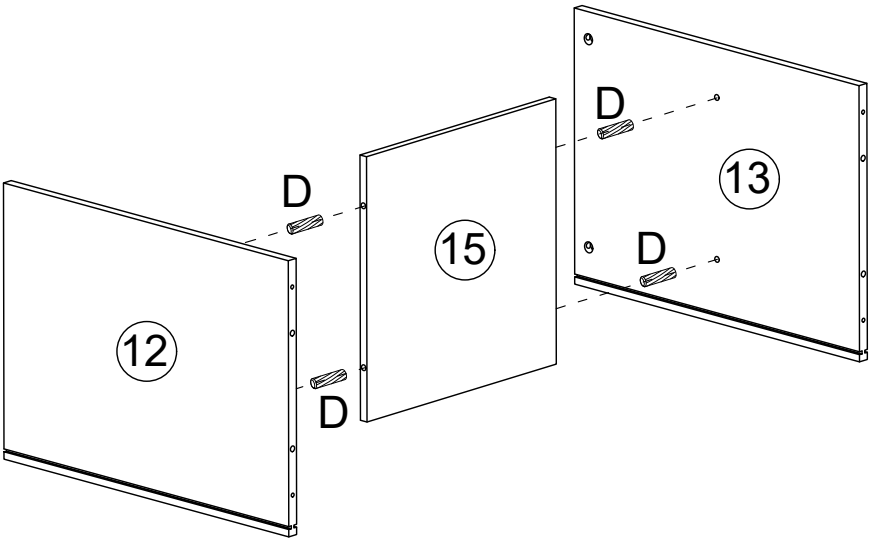


D	X4
	
Ø8X30mm	

4

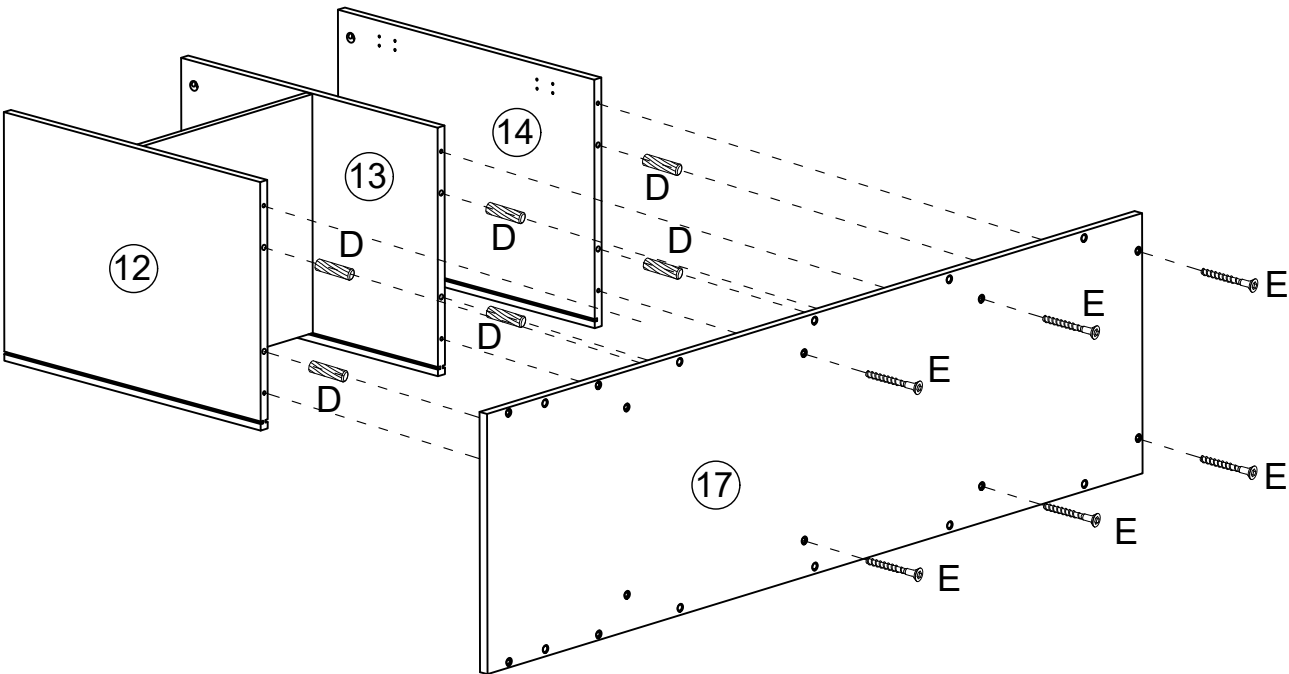


D	X6	E	X6
			
Ø8X30mm		Ø7X47mm	


5

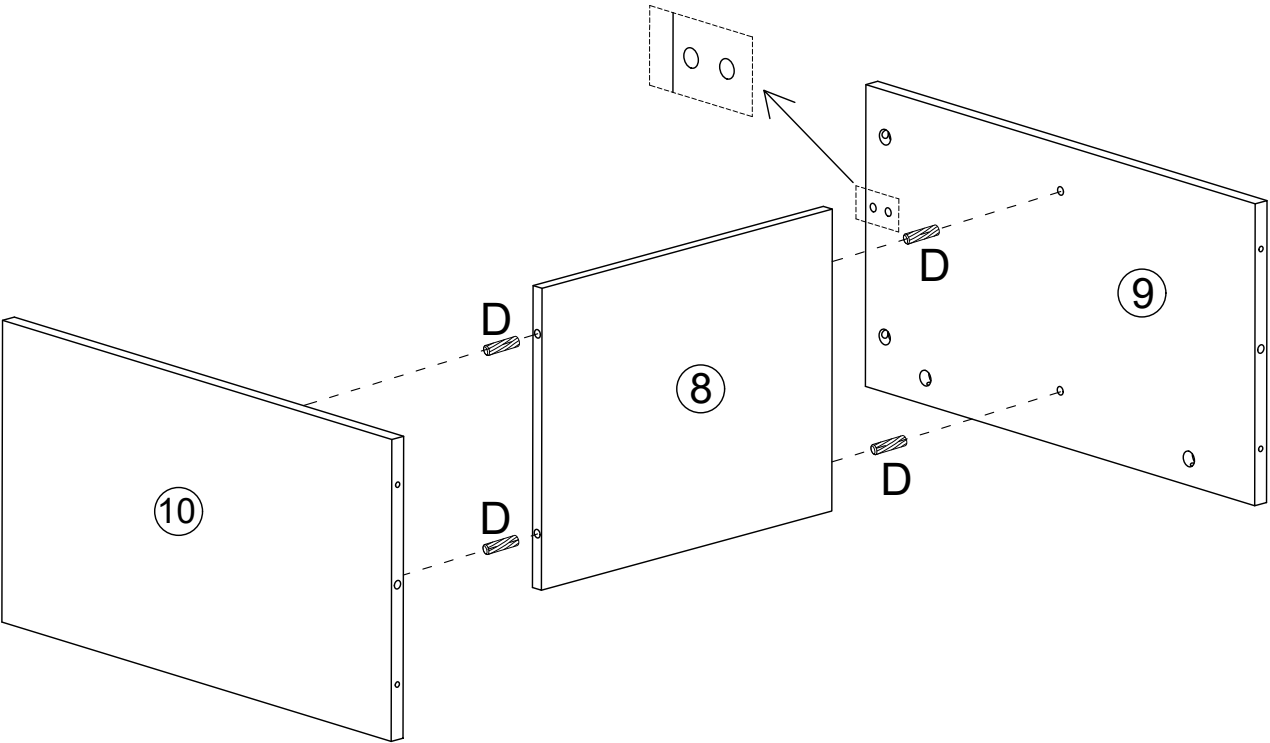


D	X4
	
Ø8X30mm	



6

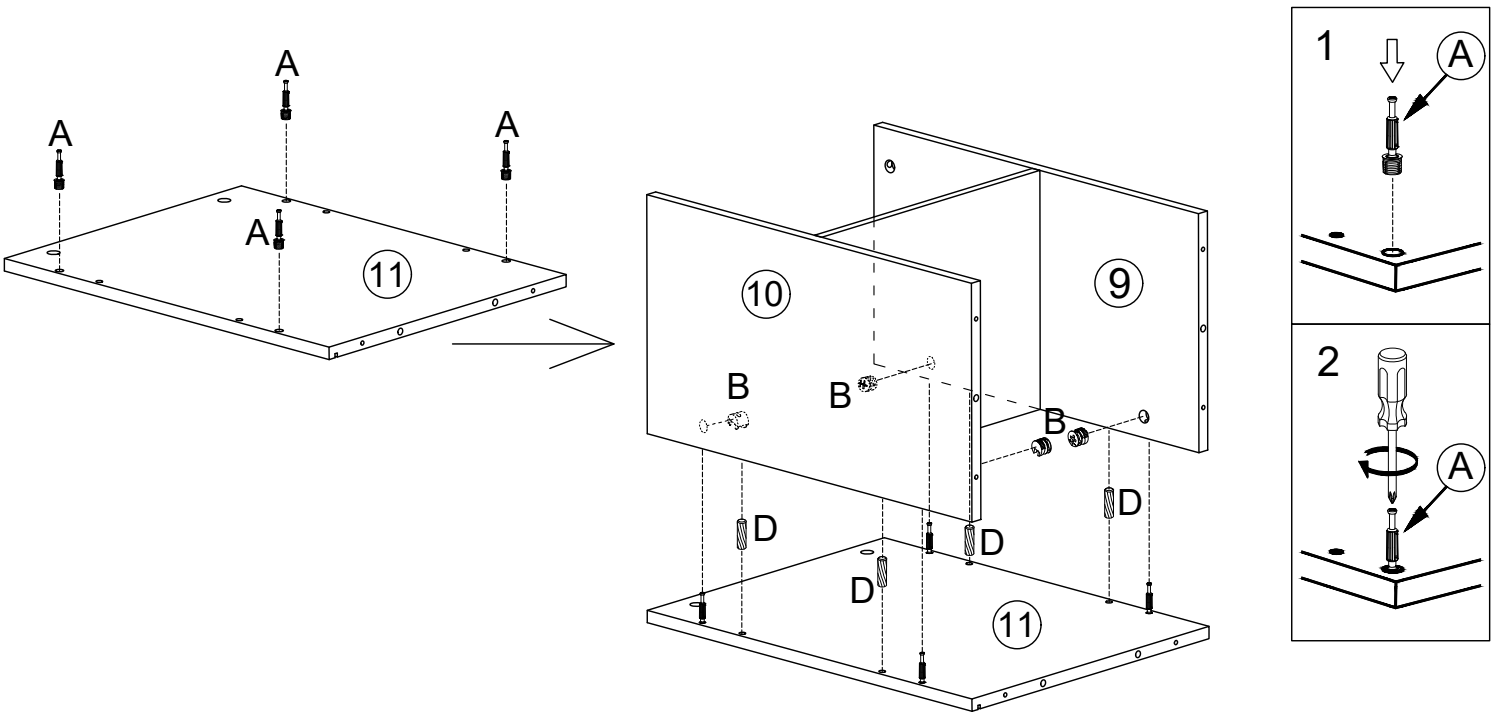


A	X4	B	X4	D	X4
					
Ø6X40mm		Ø15X12mm		Ø8X30mm	

7

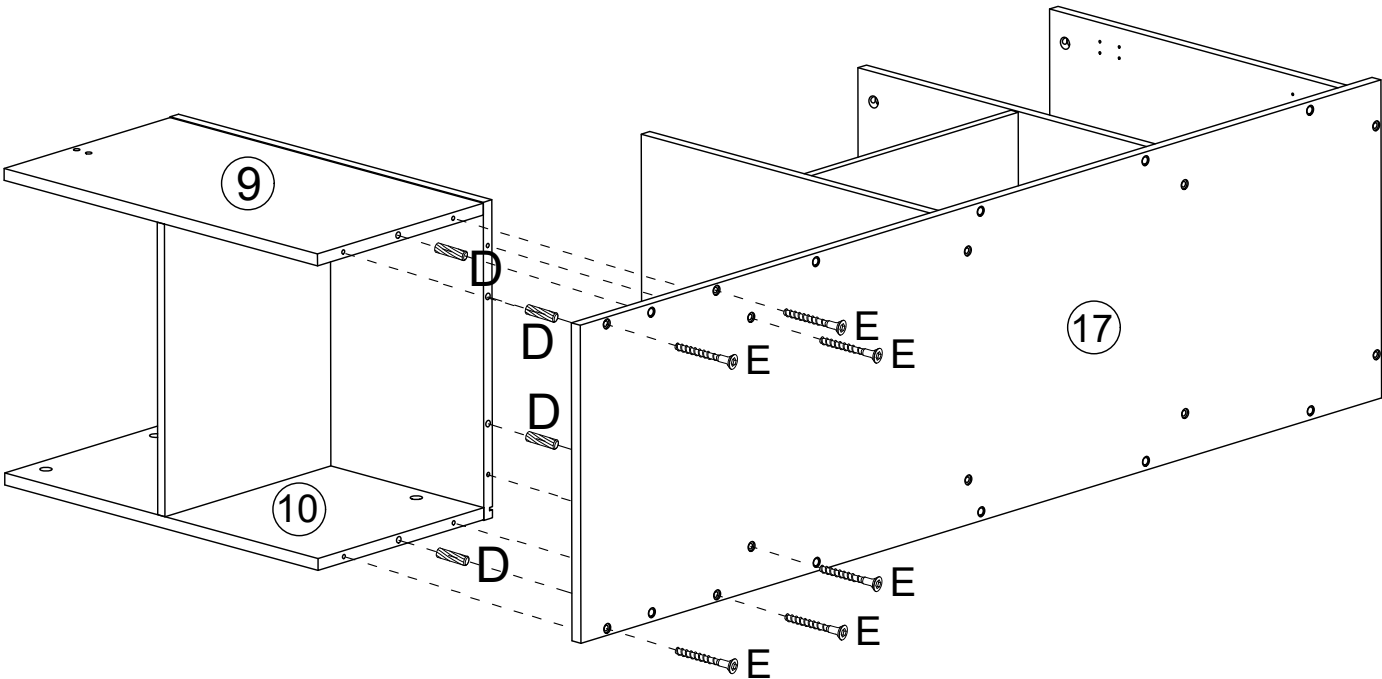


D	X4	E	X6
			
Ø8X30mm		Ø7X47mm	

8

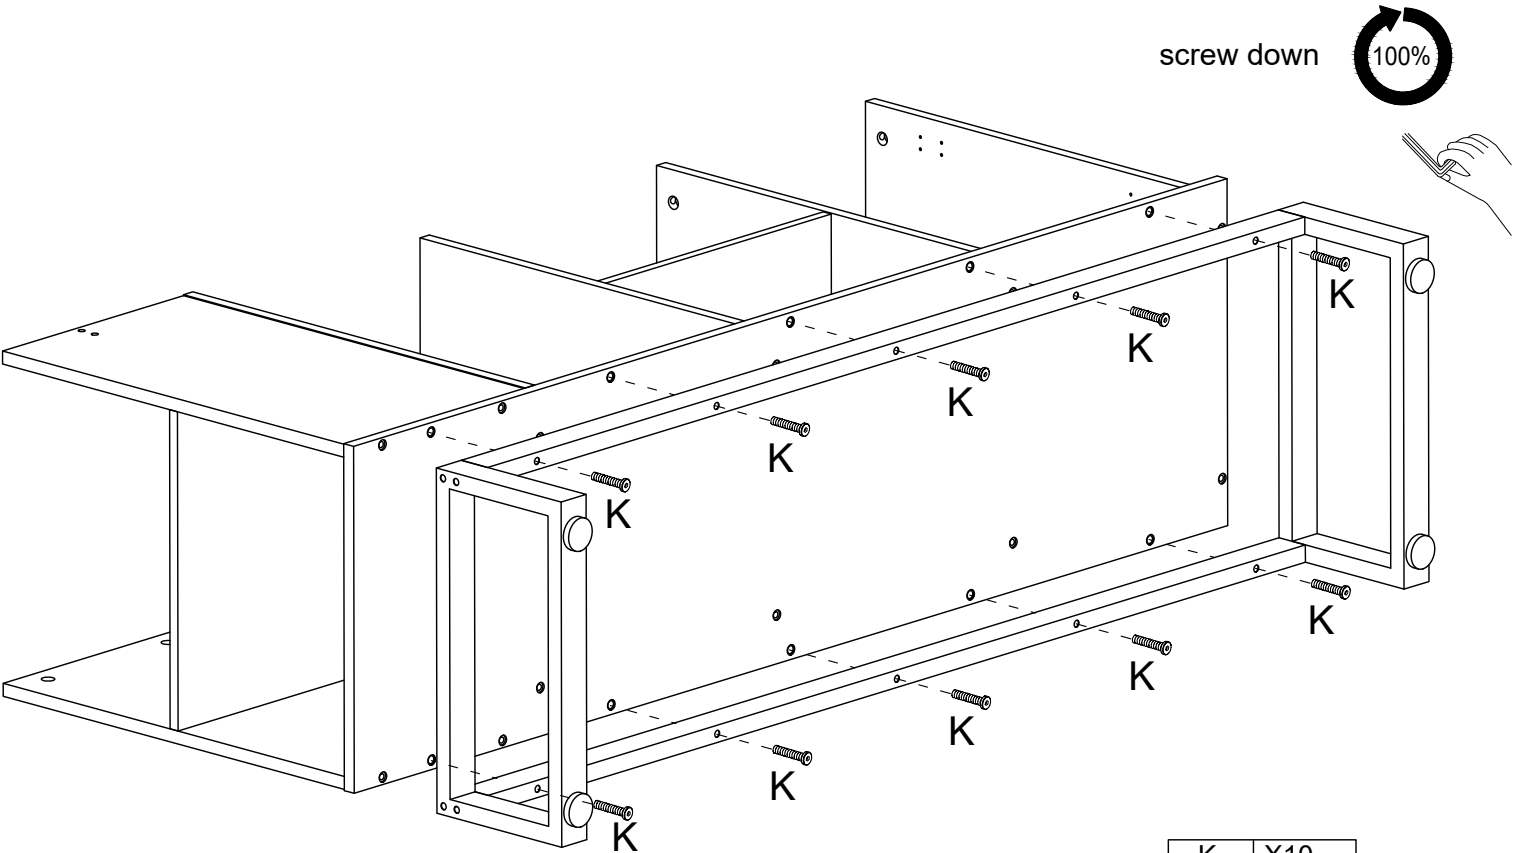


K	X10
	
M6X50mm	


9

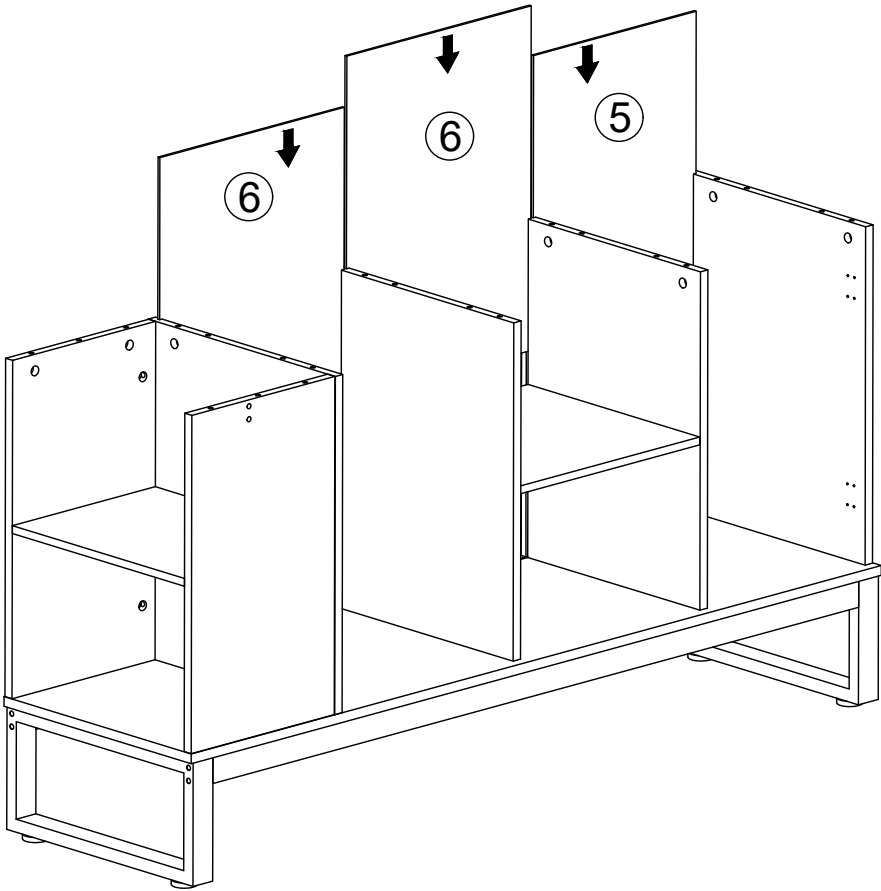


10

pre-drill 70% 

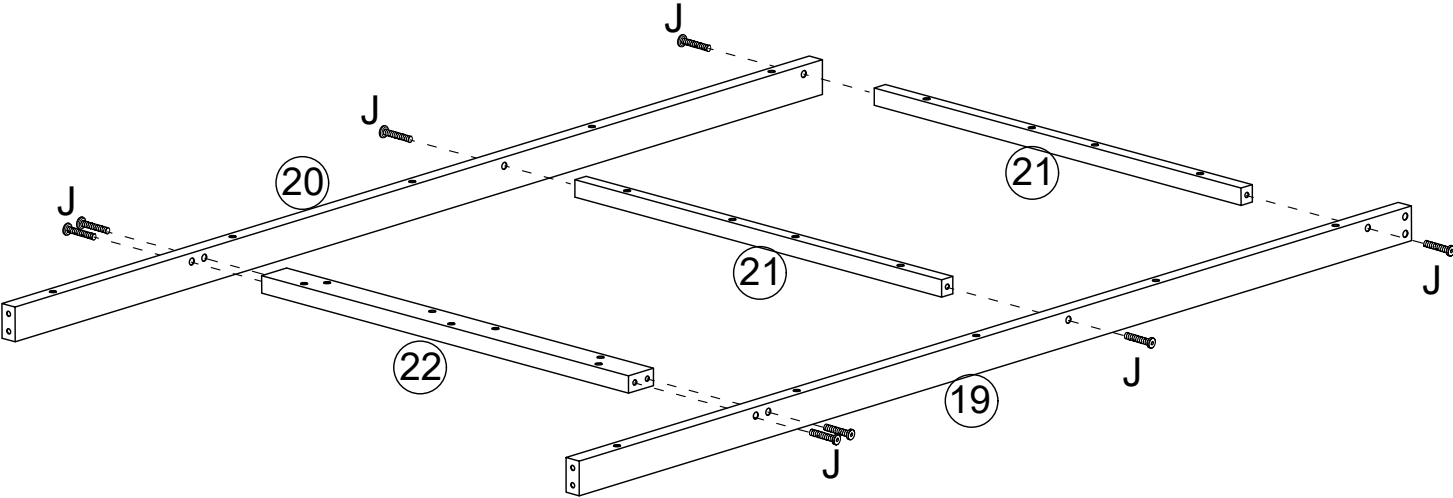



J	X8
	
M6X40mm	

11

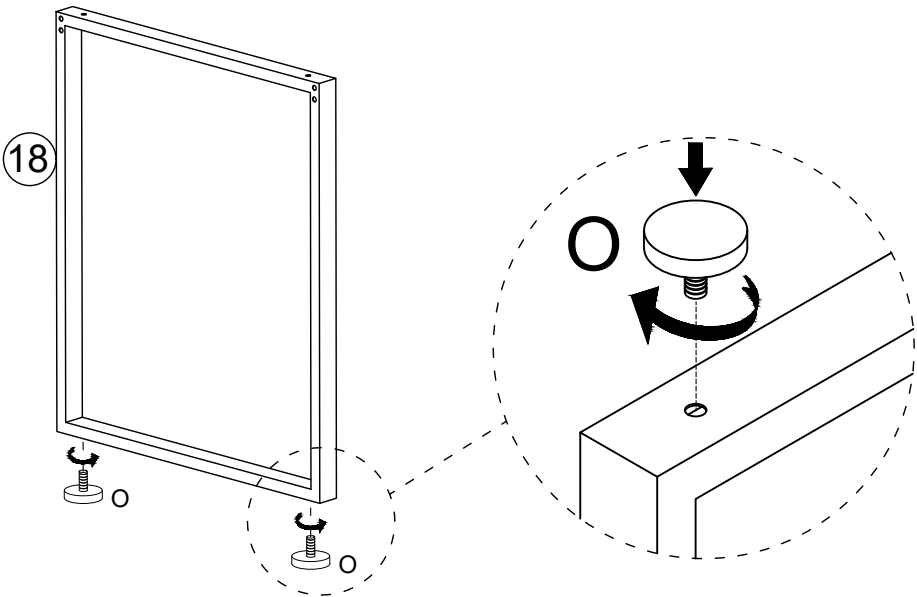

O	X2
M6XØ23mm	

12

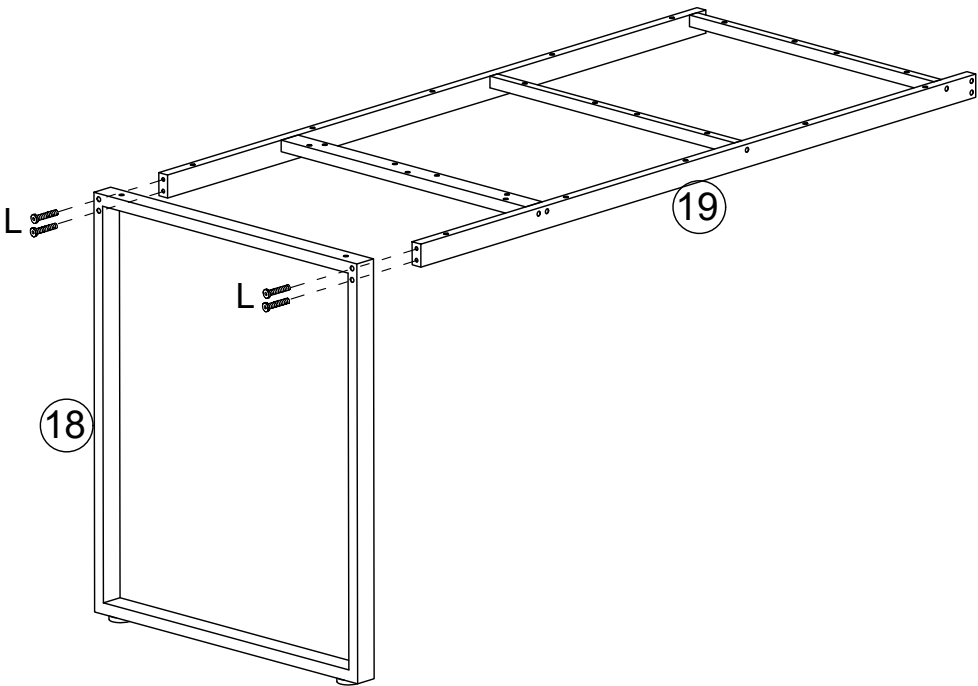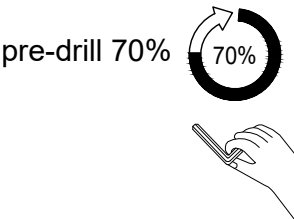


L	X4
M6X60mm	


13

pre-drill 70%

70%



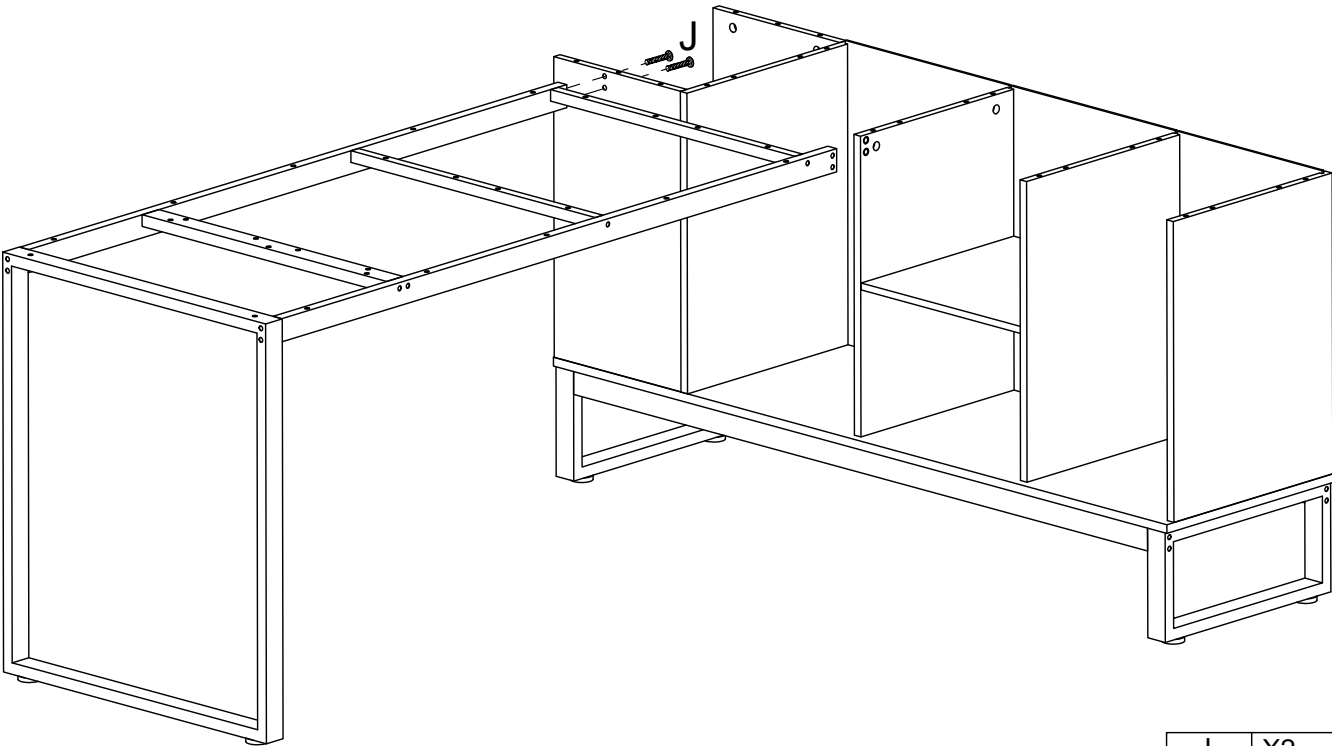


J	X2
	
M6X40mm	


14

screw down



100%



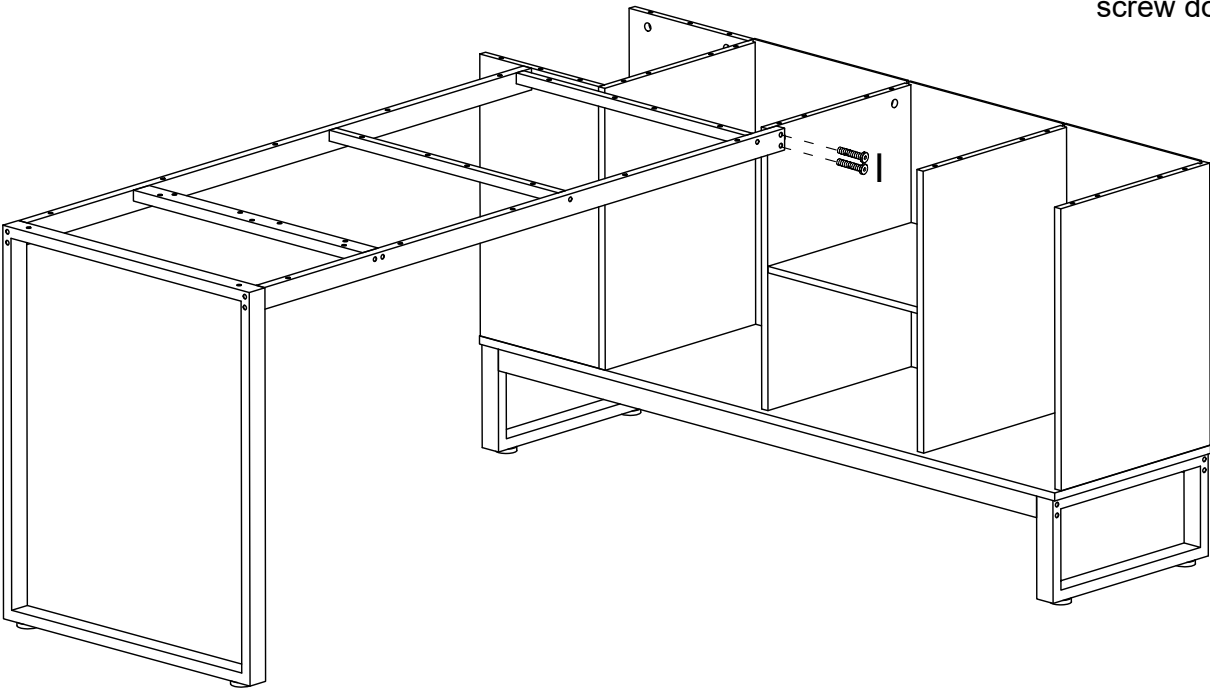


I	X2
	
M6X30mm	

15

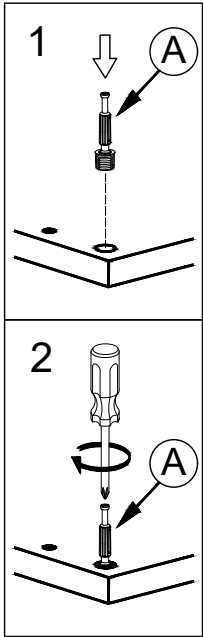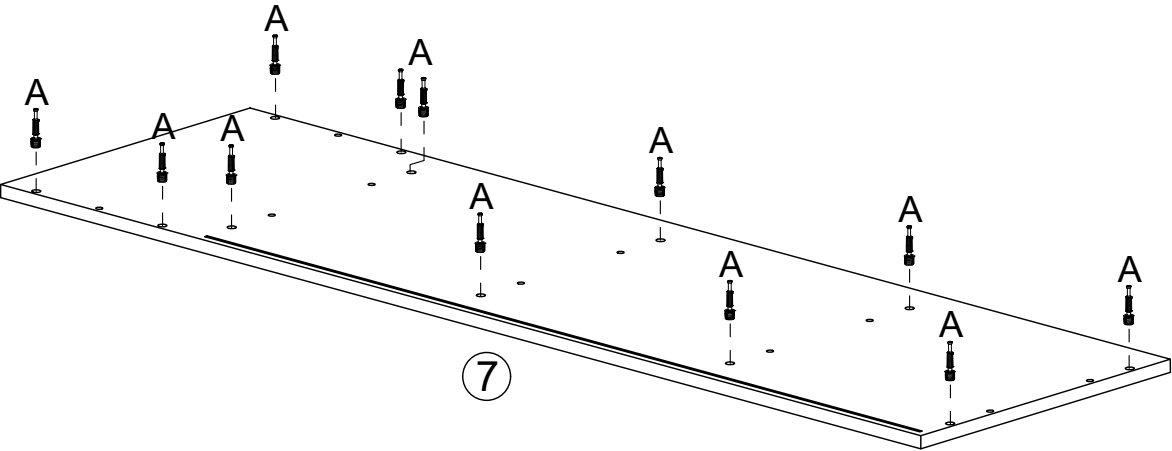


A	X12
Ø6X40mm	

16

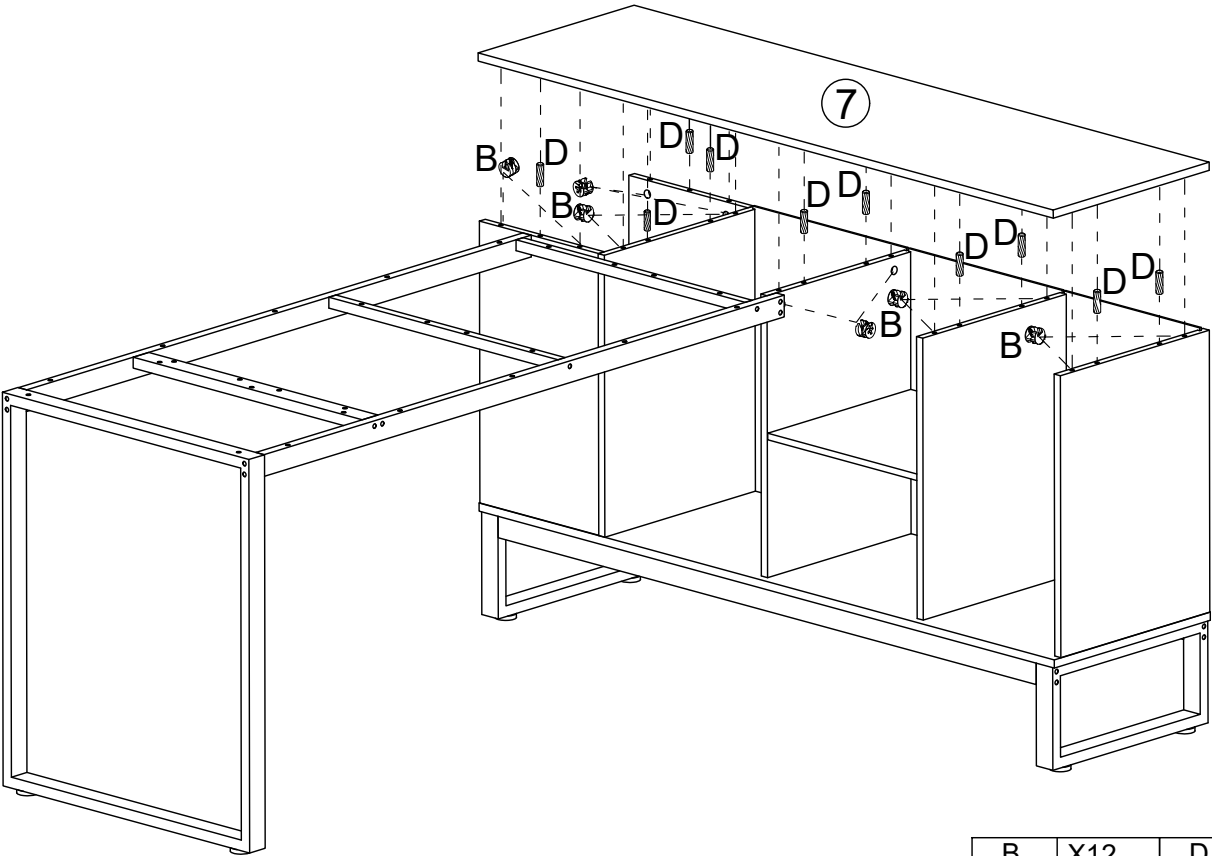


B	X12	D	X10
Ø15X12mm		Ø8X30mm	

17

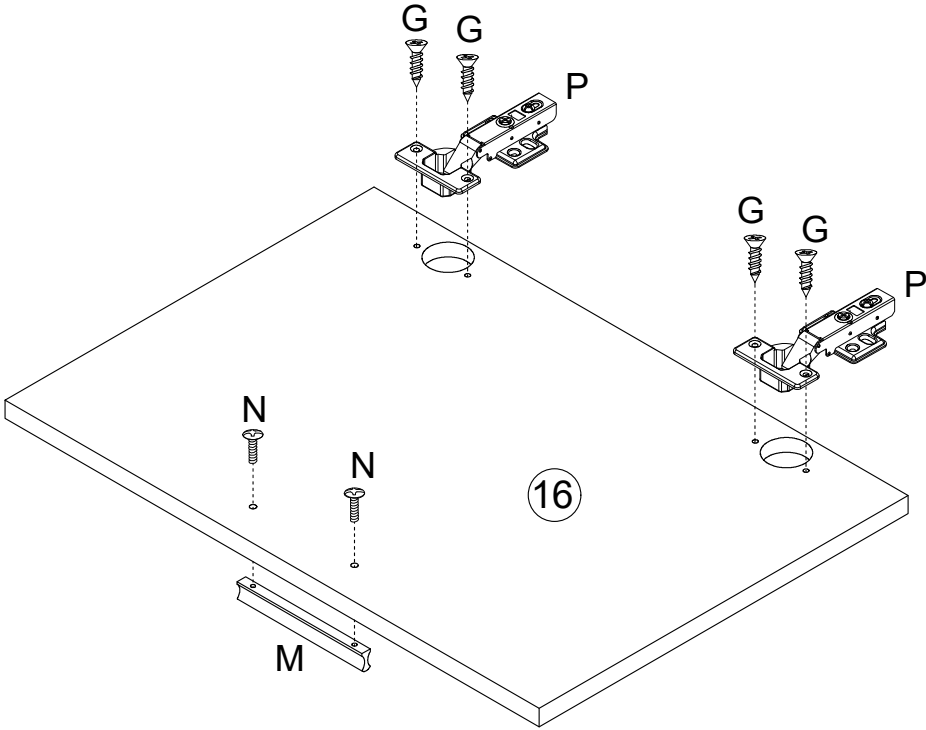


G	X4	M	X1	N	X2	P	X2
							
3.5X14mm		106X16X8mm		M4X18mm			


18

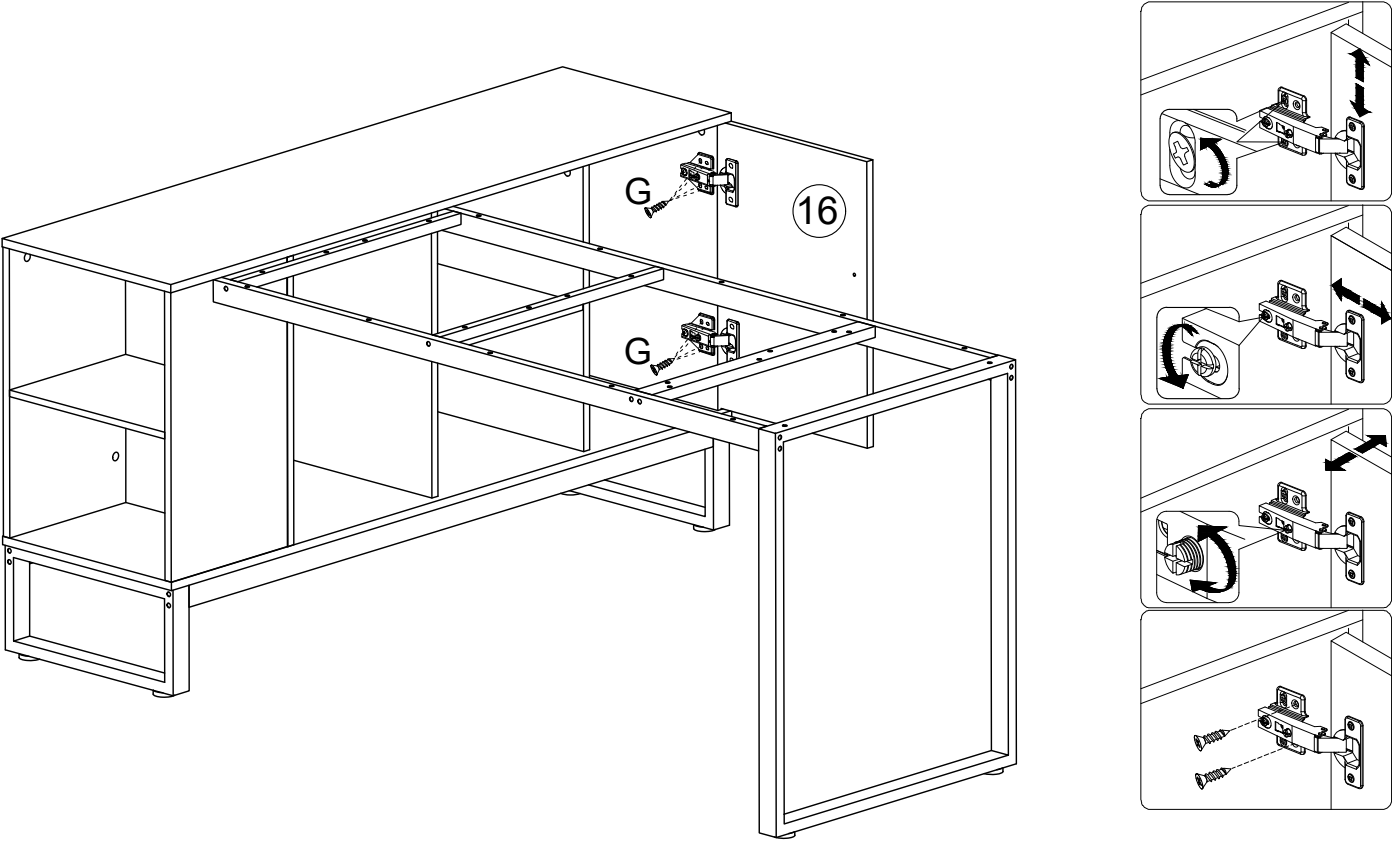


G	X8
	
3.5X14mm	


19

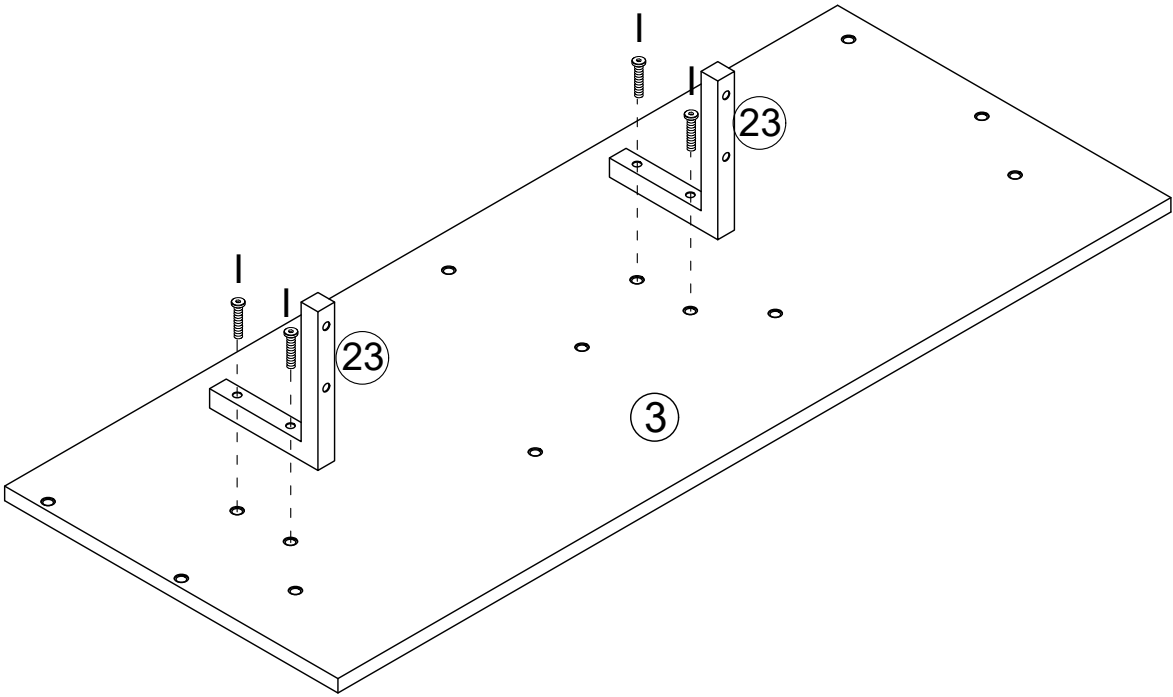


I	X4
	
M6X30mm	


20

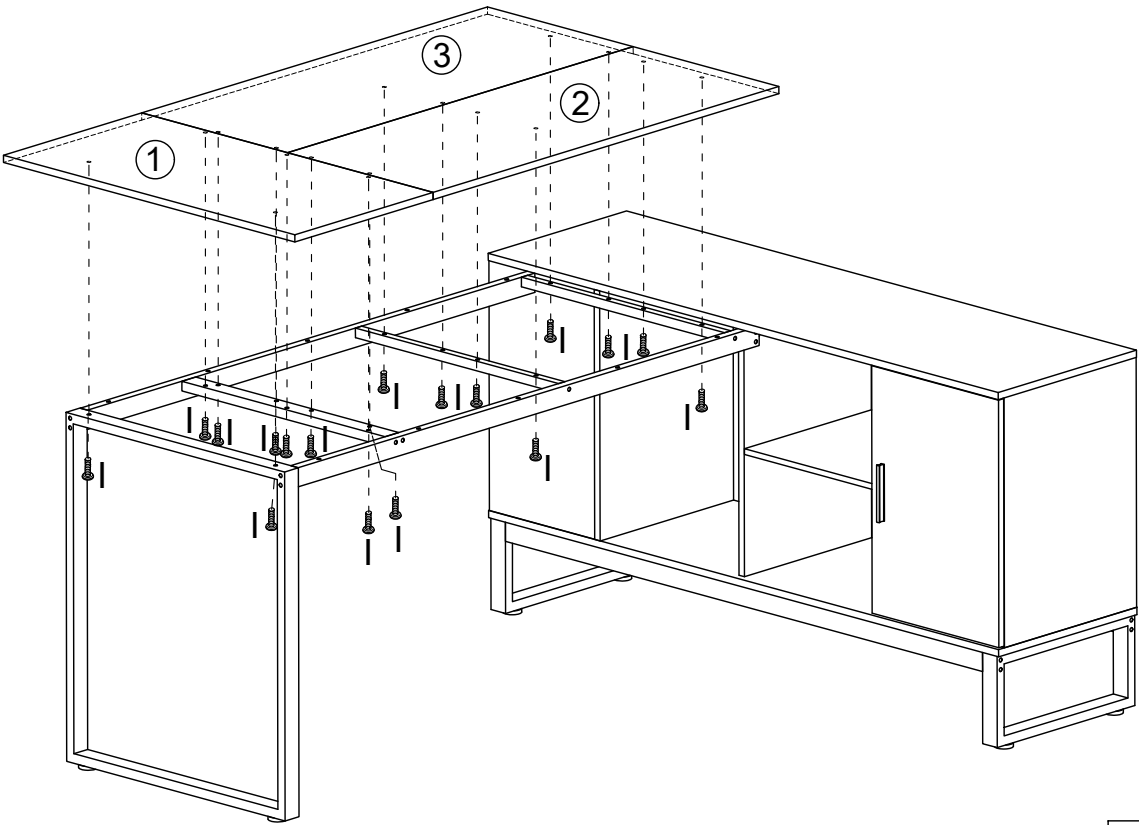


I	X17
	
M6X30mm	


21

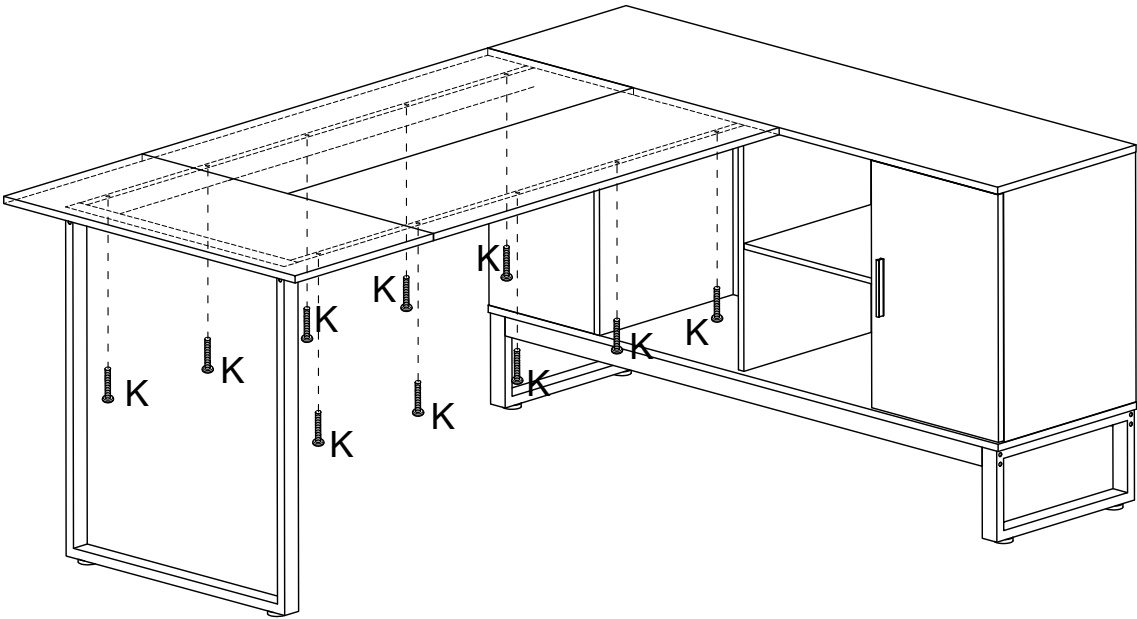


K	X10
	
M6X50mm	

22

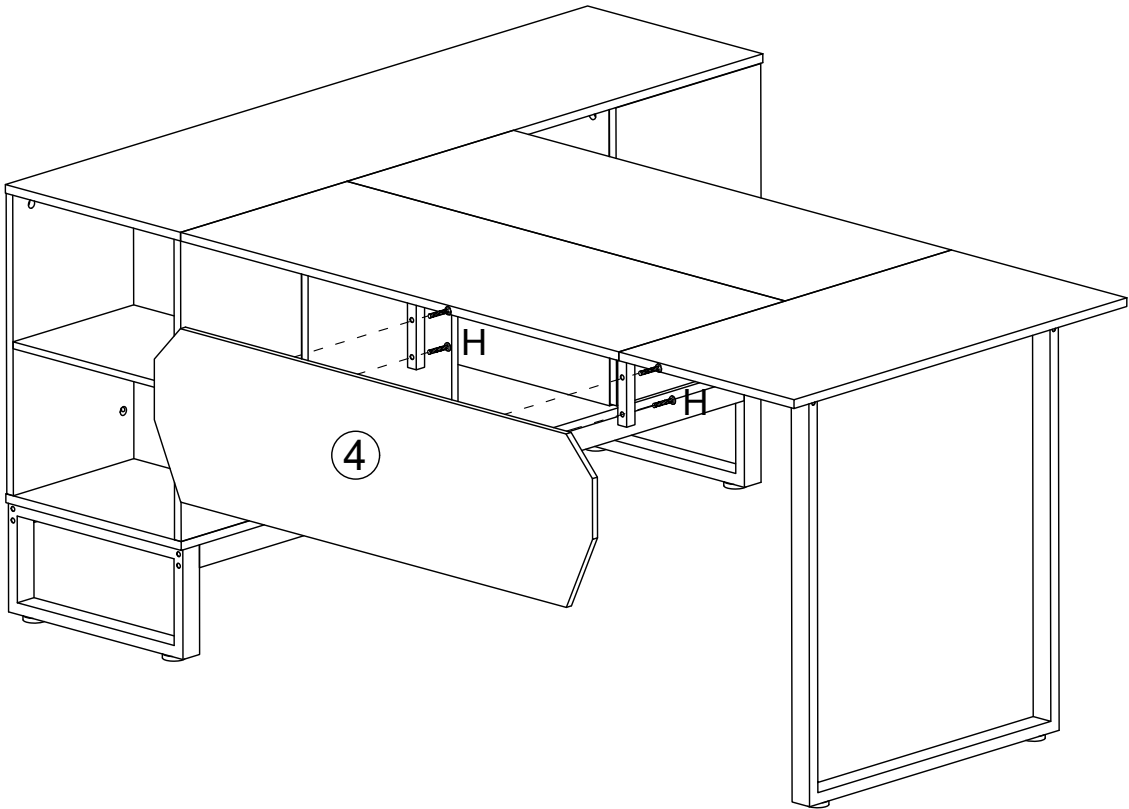

H	X4
	
M6X25mm	

23

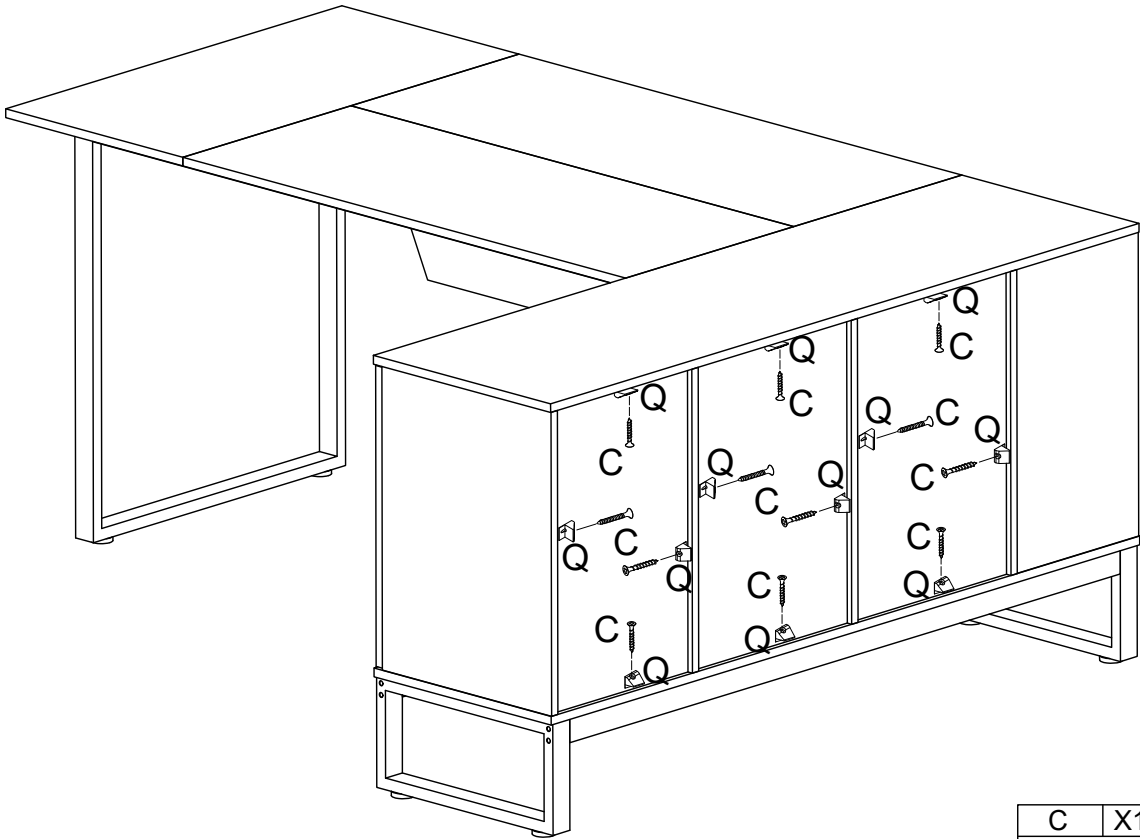

C	X12	Q	X12
			
3X18mm		17x16x10.5	

24

