



MAKE A DIFFERENCE

Front Bumper

BXG.9460


(INSTALLATION INSTRUCTION)

ATTENTION • Please verify all parts are present and read instructions carefully before starting installation.
Please feel free to contact your distributor if you have any kind of question about your purchase.

CONTENTS

Left

Right

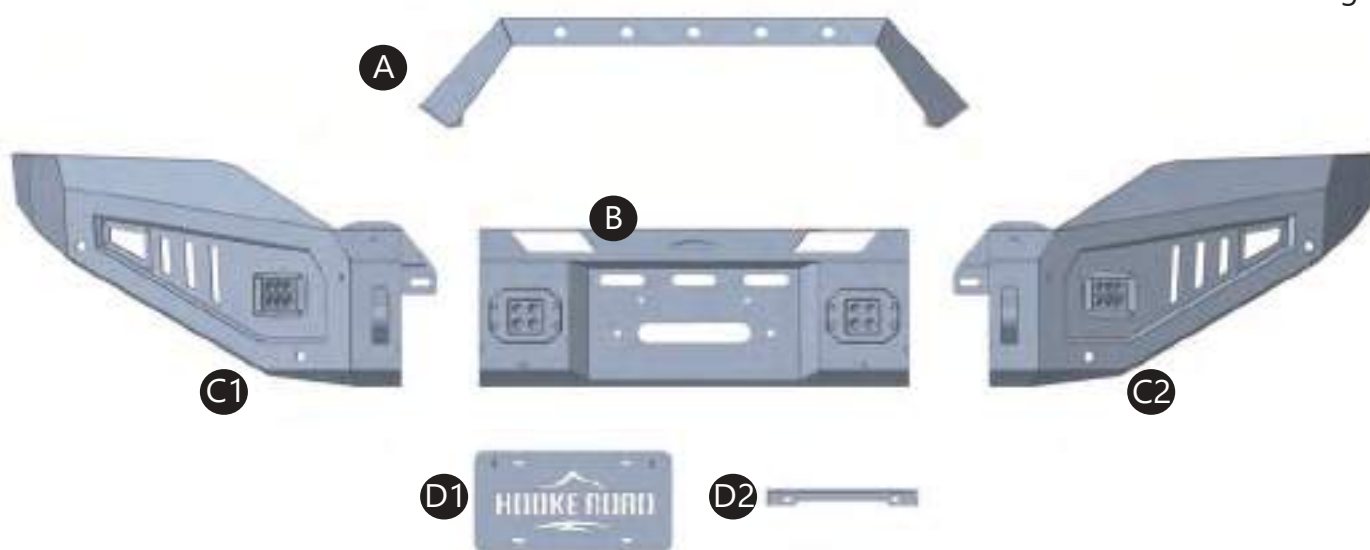

A: Bull Bar

B: Main Body

C1&C2: Wings

D1&D2: License Plate Bracket

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
6	Hex Bolt	M12*30		4	Flat Washer	M8	
4	Hex Bolt	M8*20		4	Flat Washer	M6*12*1	
4	Button Bolt	M6*16		2	Nylon Round Spacer	M6*12*1.3	
8	Button Bolt	M4*20		6	Hex Nut	M12	
6	Split Lock Washer	D12		4	Flange Hex Lock Nut	M8	
4	Split Lock Washer	D8		4	Nylon Lock Nut	M6	
6	Flat Washer	M12*30*1.5		1	L-Wrench	M4	
				4	Sensor Bracket		

2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 10mm, 14mm Wrench

◆ 4mm Hex Bit Socket

◆ 17mm, 19mm Wrench


To view online instruction, please scan the QR code.



3 INSTALLATION INSTRUCTION

Step 1

Place the vehicle in park, remove the factory bumper from the frame.

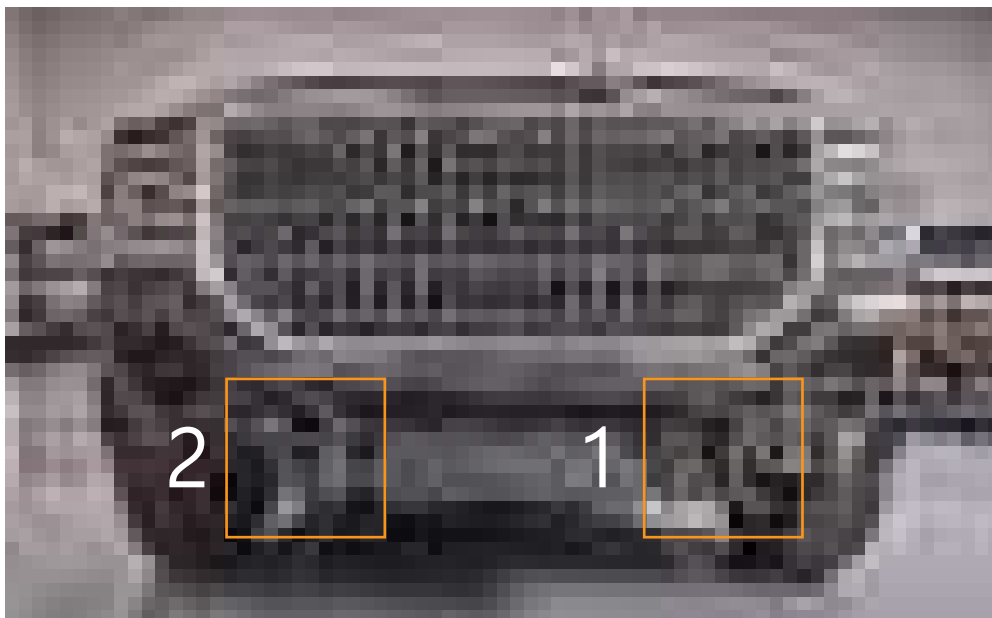


Step 2

Remove the factory sensors from the factory bumper. Install it to the bumper using the (8) M4x20mm button bolts.




Step 3

Install the left wing to the main body using (3) M12x30mm hex bolts, (3) D12 lock washers, (3) M12x30x1.5mm flat washers, (3) M12 hex nuts. Repeat this step for the opposite of the bumper. Tighten up all bolts.

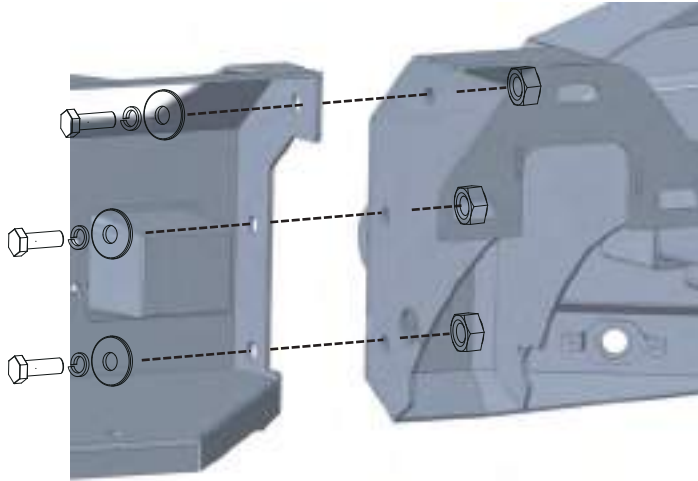

Step 4


Install the bull bar to the main body using the (4) M8x20mm hex bolts, (4) D8 lock washers, (4) M8x20x2mm flat washers, (2) M8 flange lock nuts. Tighten up all bolts.

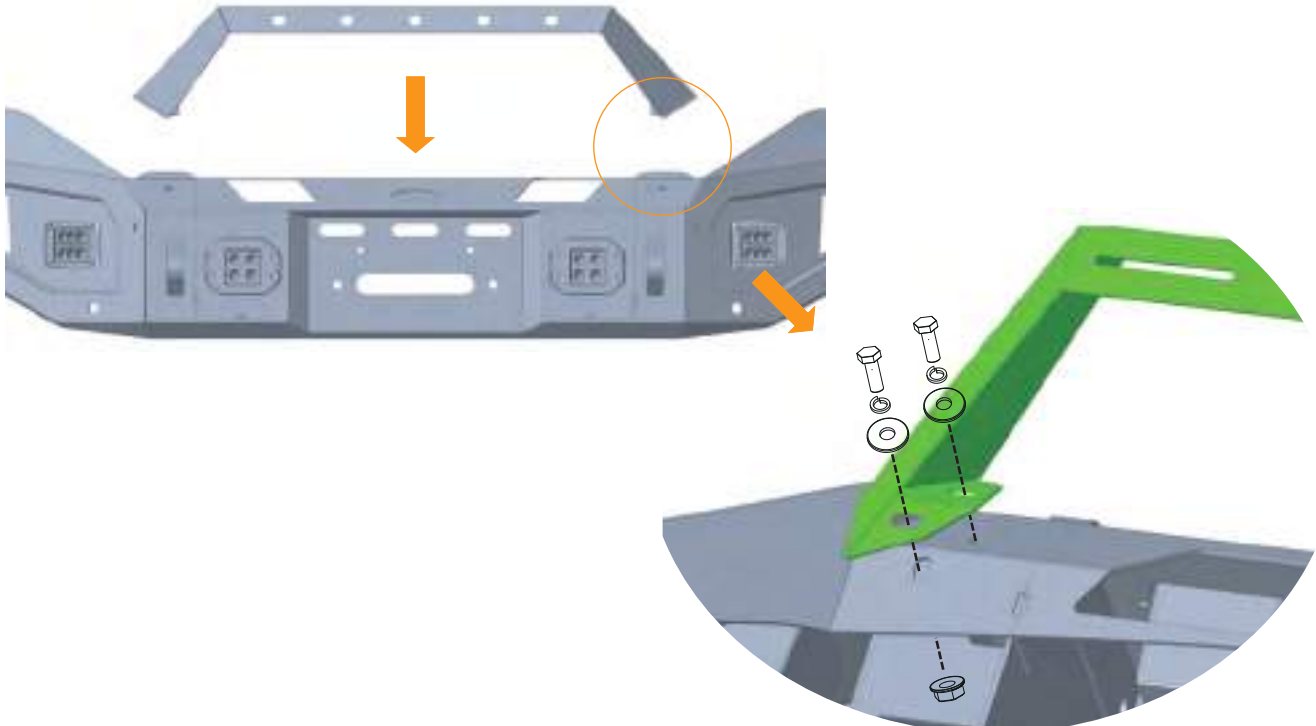


Step 5

Assemble the license plate brackets using the (2) M6x16mm button bolts, (2) M6x12x1mm flat washers, (2) M6x12x1.3mm nylon round spacer, (2) M6 nylon lock nuts.

Install the assembled license plate bracket to the bumper using the (2) M6x16mm button bolts, (2) M6x12x1mm flat washers, (2) M6 nylon lock nuts. Tighten up all bolts.

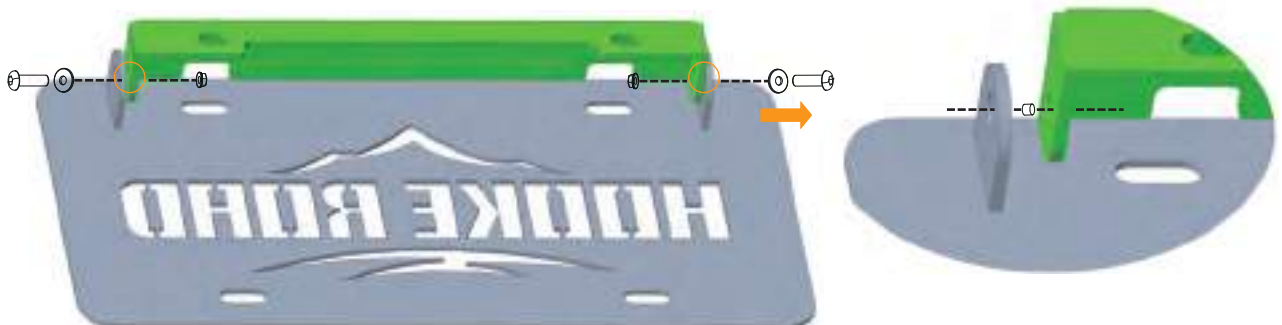


Step 5

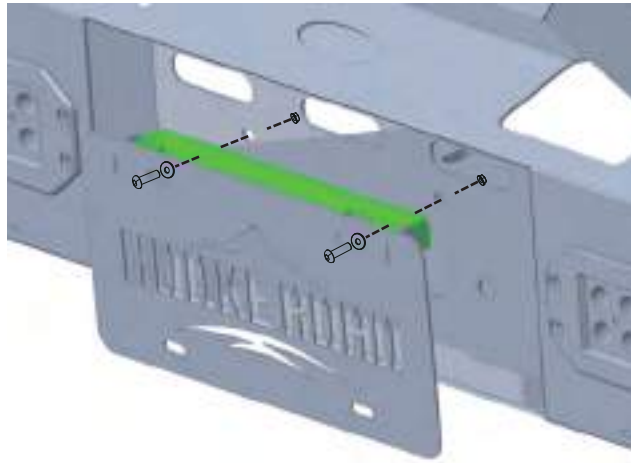

Step 6

Install the bumper to the vehicle using the factory nuts. Repeat this step for the opposite of the bumper. Adjust the bumper to the desired location. Tighten up all bolts.

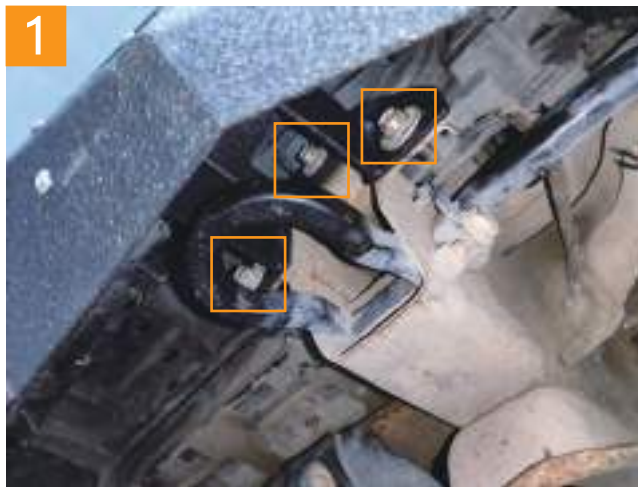

Step 7

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!

