


MILA BED FRAME

(KING)

SLATWDBFWKA

COMPONENTS

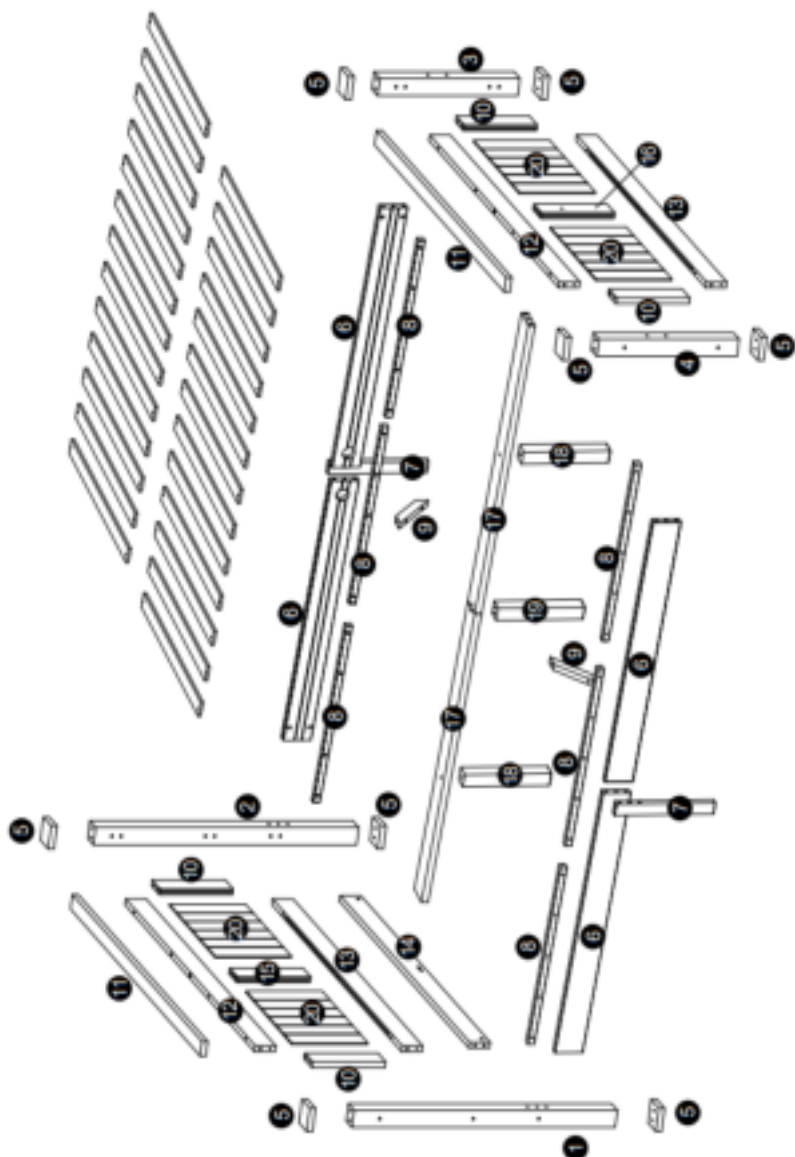

Hardware



A M2x100mm (x14)



B (x16)



C M6x100mm
(x4)



D Ø8x30mm
(x42)



E M6x70mm (x2)



F Threaded Stud
(x2)



G Nut (x4)



H Curved
Washer (x4)



J Wood Glue (x2)




K Spanner (x2)



L Allen Key



M Ø4x30mm
Screw (x34)



N Ø4x30mm Screw
(x60)



O Ø7x70mm
Hex Bolt (x4)




P Cam Screw
(x8)




Q Cam
Connector (x8)

ASSEMBLY


Step 1:

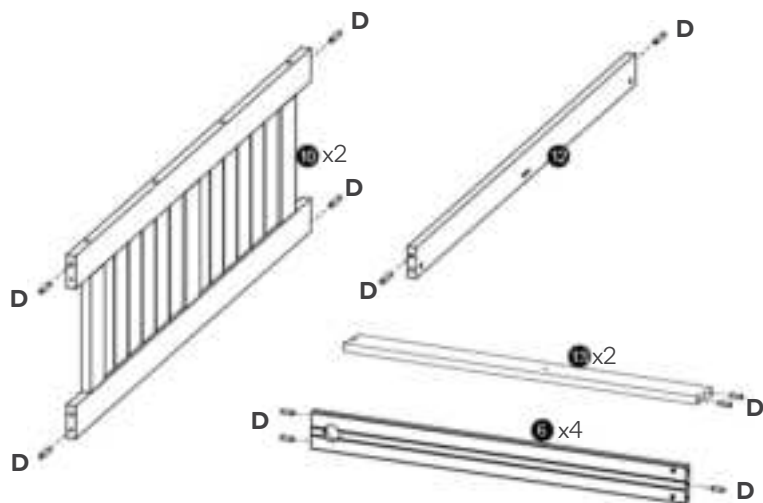


Step 2:

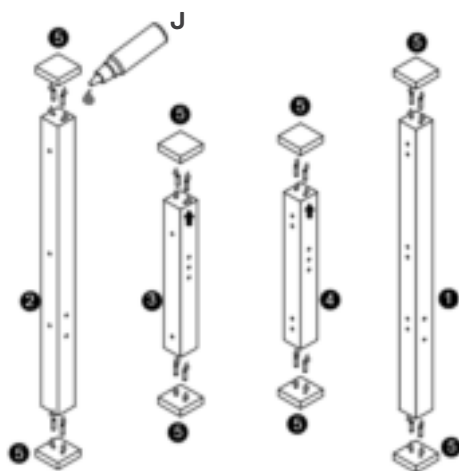


Step 3: Repeat this step twice.

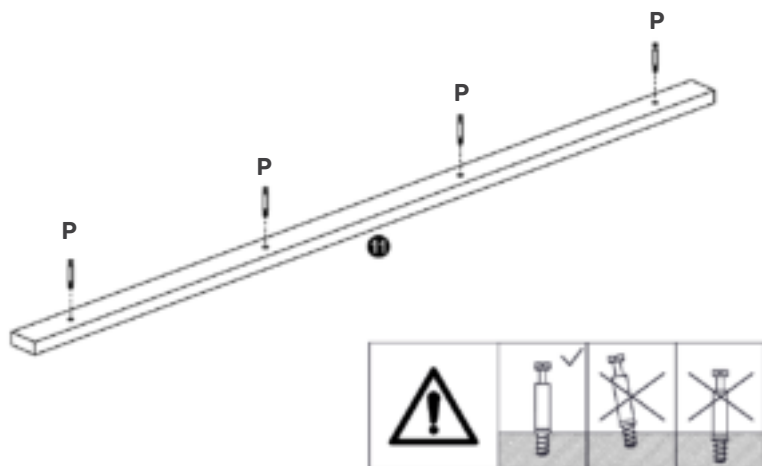

Step 4: Repeat this step twice.

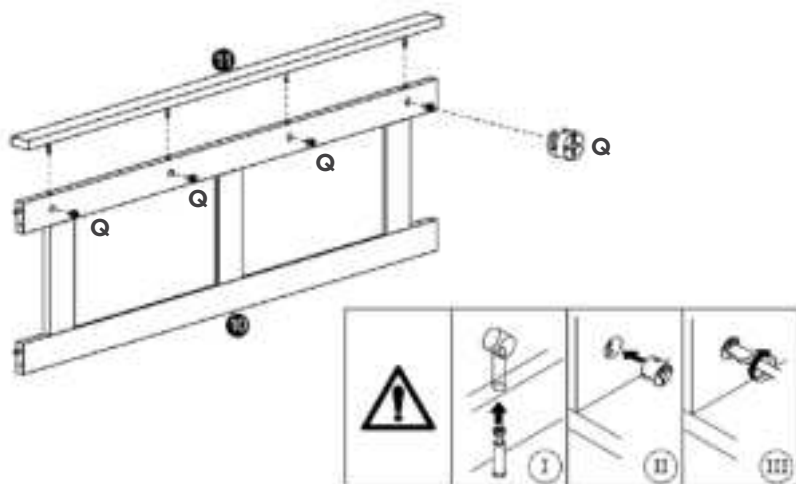


Step 5:

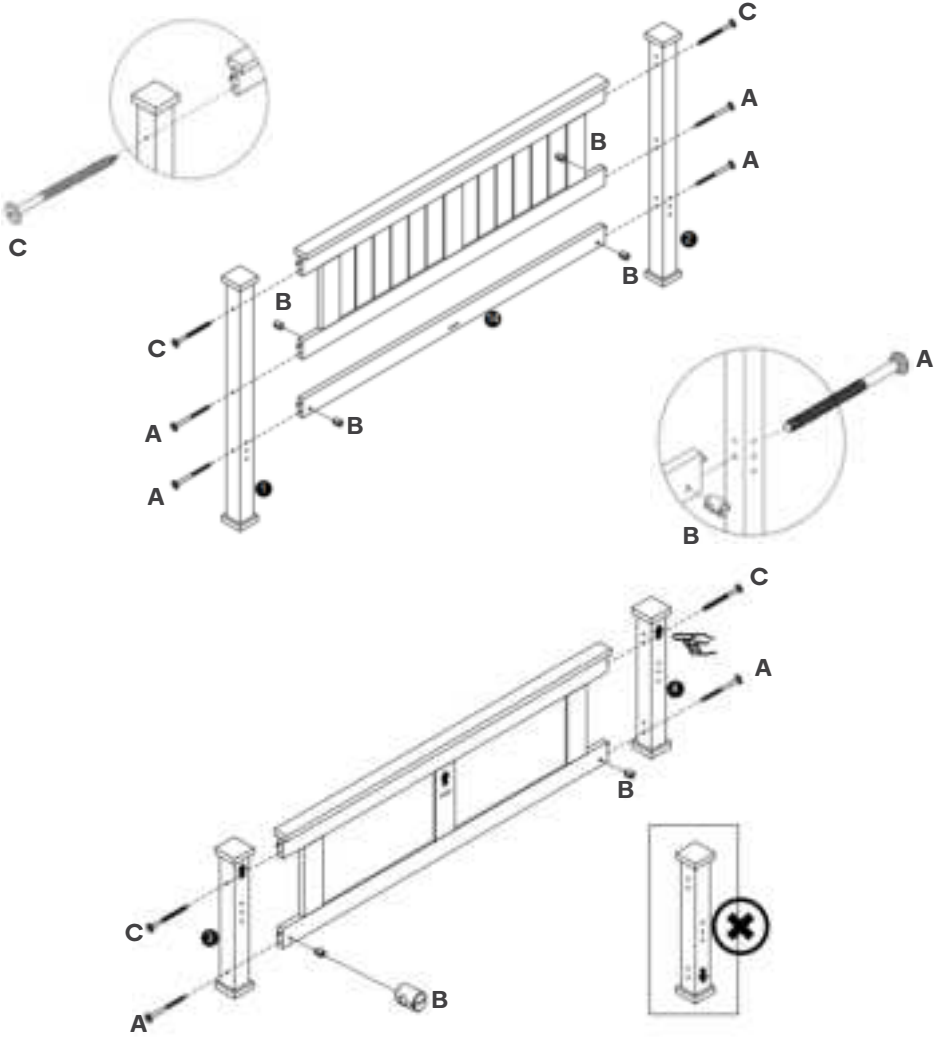


Notes:

- Ensure the arrows on **3** and **4** are facing upward.
- Ensure the hole on **B** is facing **3/4**.


Step 6: Repeat this step twice.

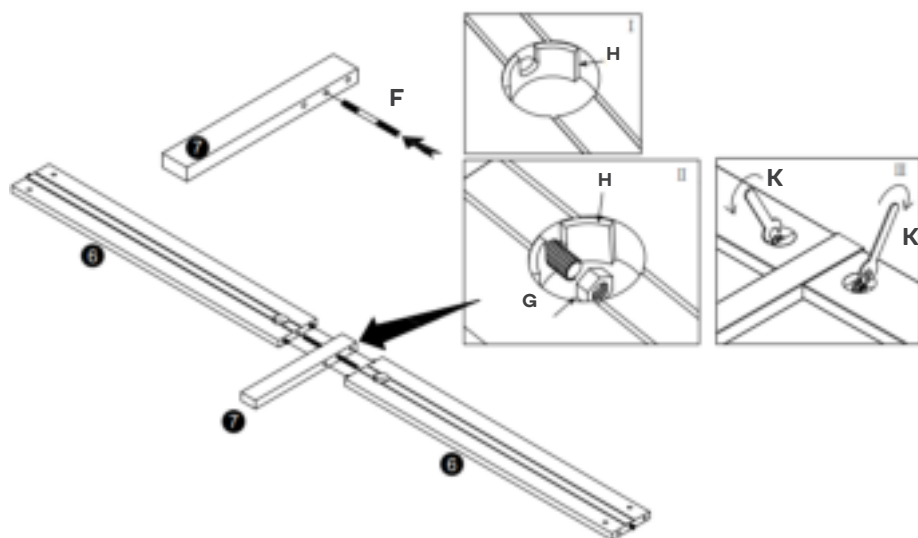


Step 7: Repeat this step twice.

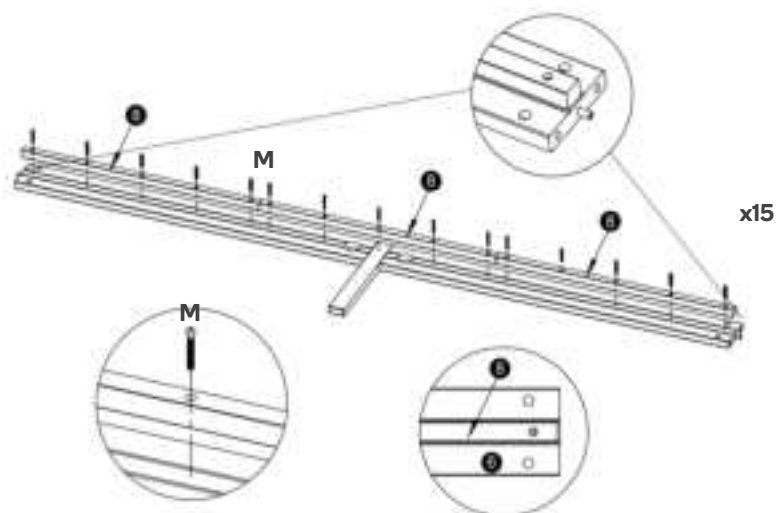


Step 8:

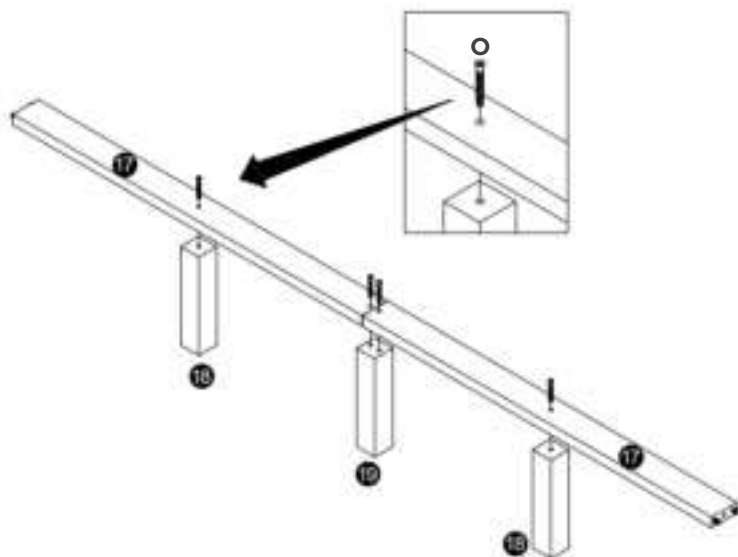


Step 9:

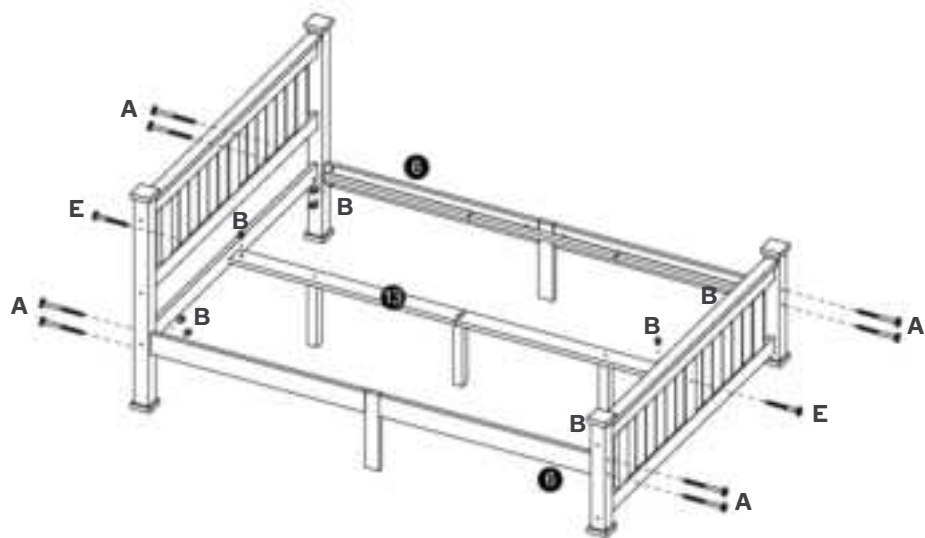

Step 10:

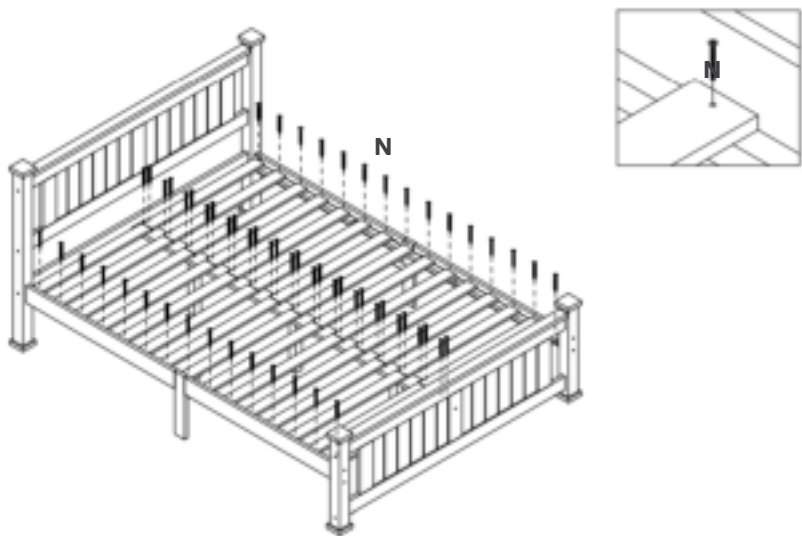

Step 11:

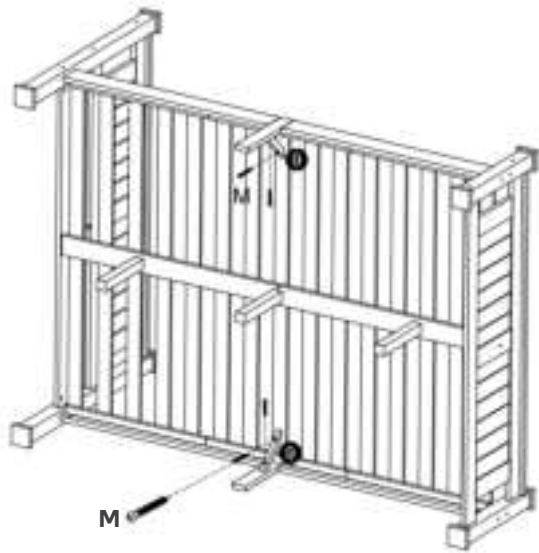

Note:

For your safety, we recommend 2 people for this step.

NOTES

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com