


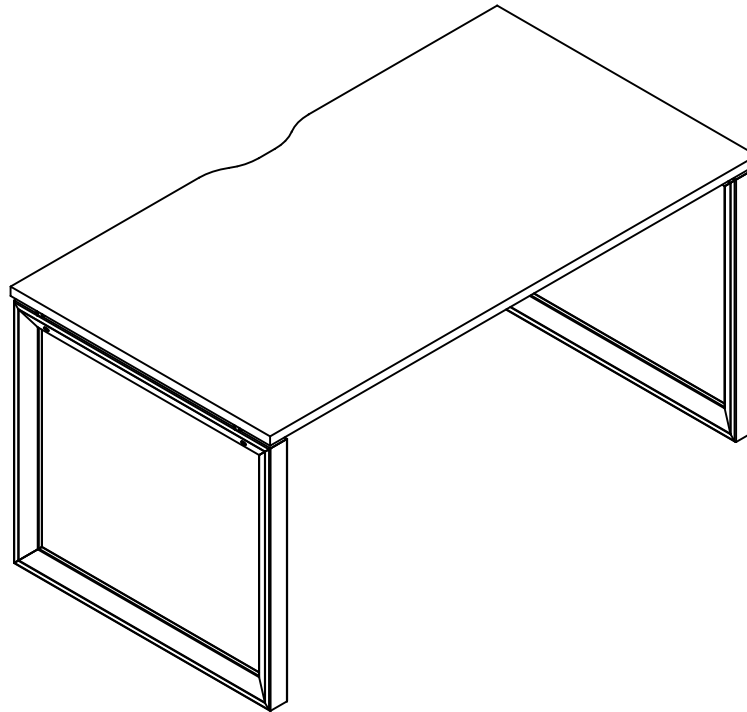


ASSEMBLY INSTRUCTIONS

Description: STILFORD DESKTOP 1200x750 / 1500x750 / 1800x750mm WHITE, WHITE / BLACK, WHITE / OAK, OAK, WALNUT

Description: S2V1 DESK FRAME 1200-1800x750mm WHITE, WHITE / BLACK, WHITE / OAK, OAK, WALNUT



Tools Required




Assemble Item On a Clean Flat Surface






Need Two Or More People To Complete




- Please check you have all hardware before assembling
- If you think you are missing any hardware please contact the store of purchase
- Please ensure you have the name of the item and hardware part required and quantity.
- Please retain your receipt for proof of purchase to validate warranty. Enjoy your new purchase


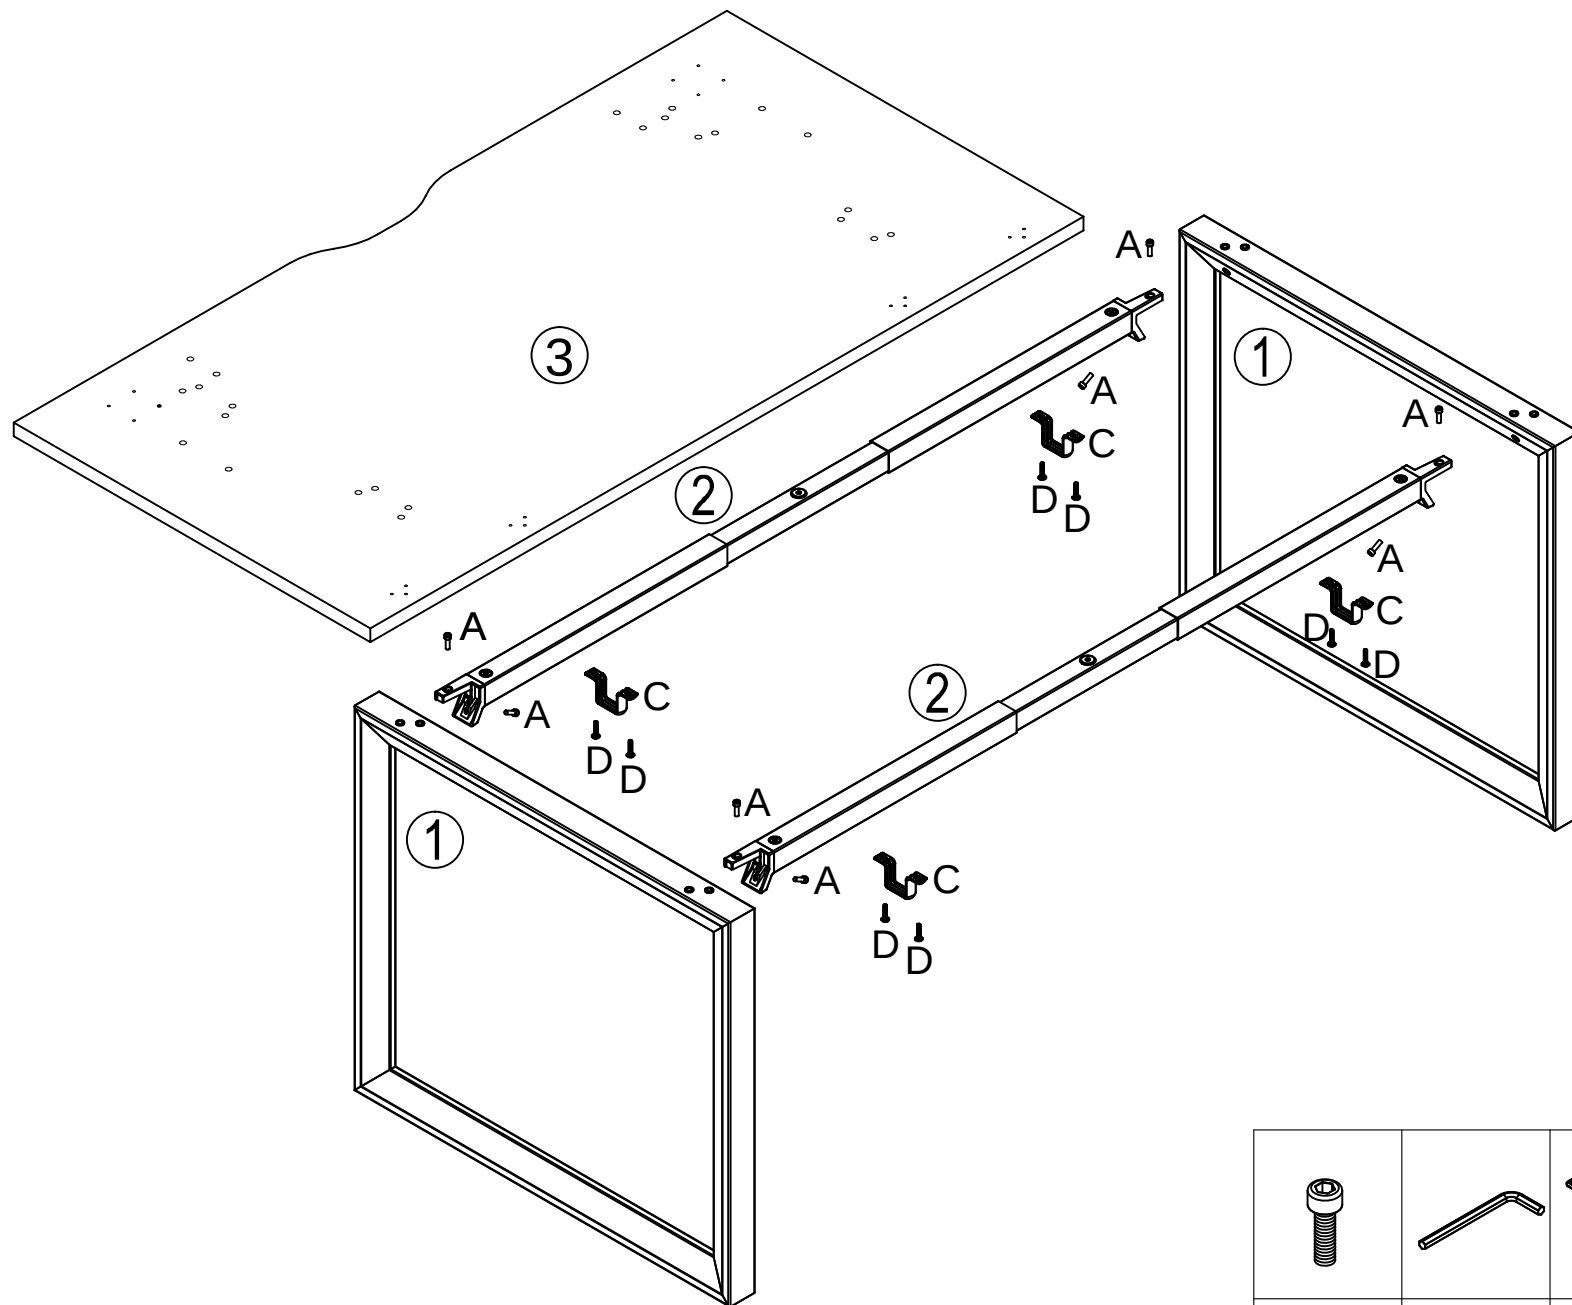


			
A x8	B x1	C x4	D x8

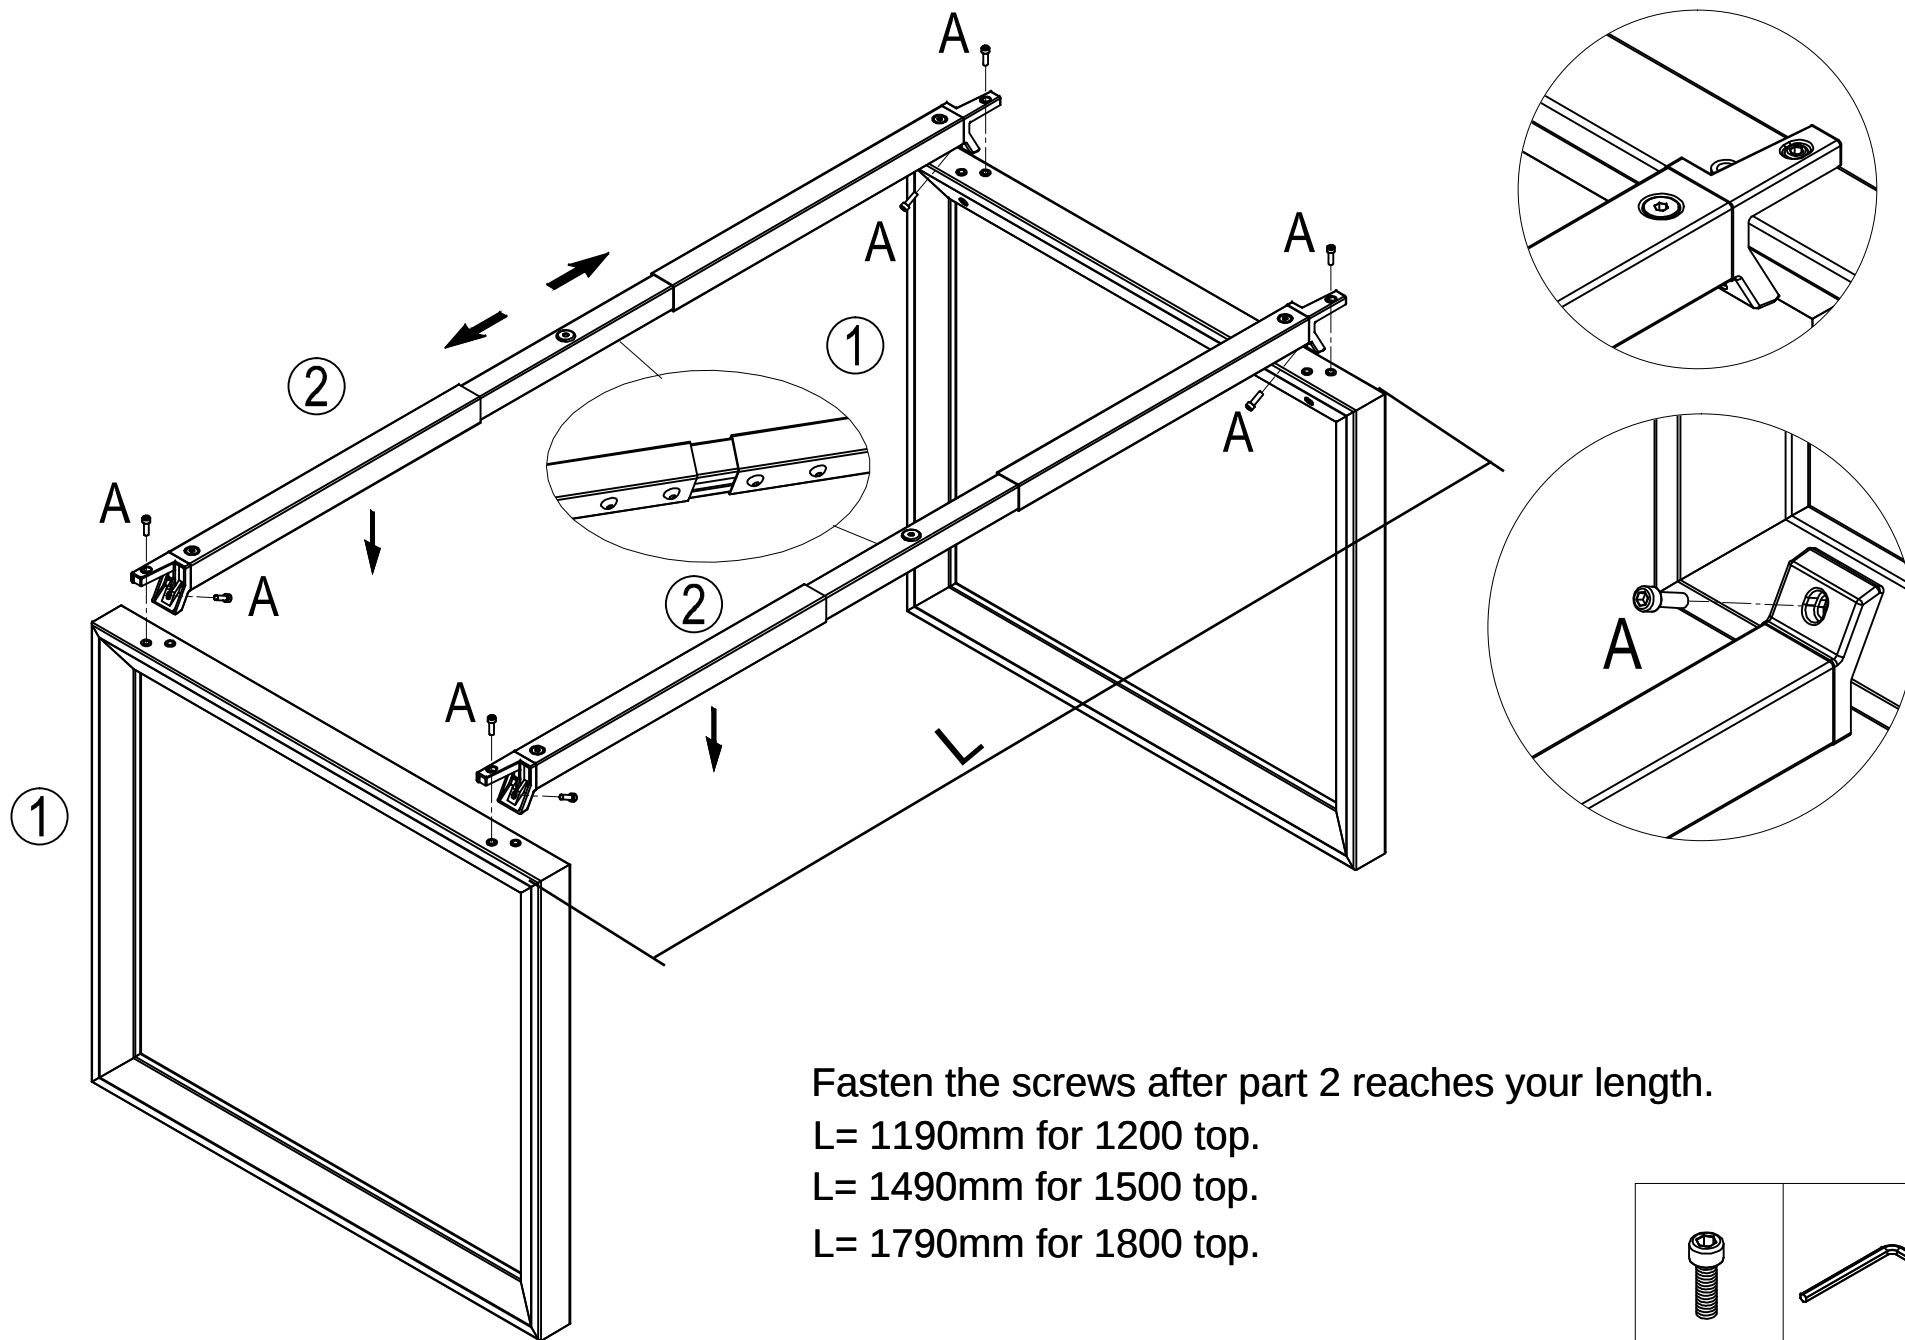

	
A x8	B x1

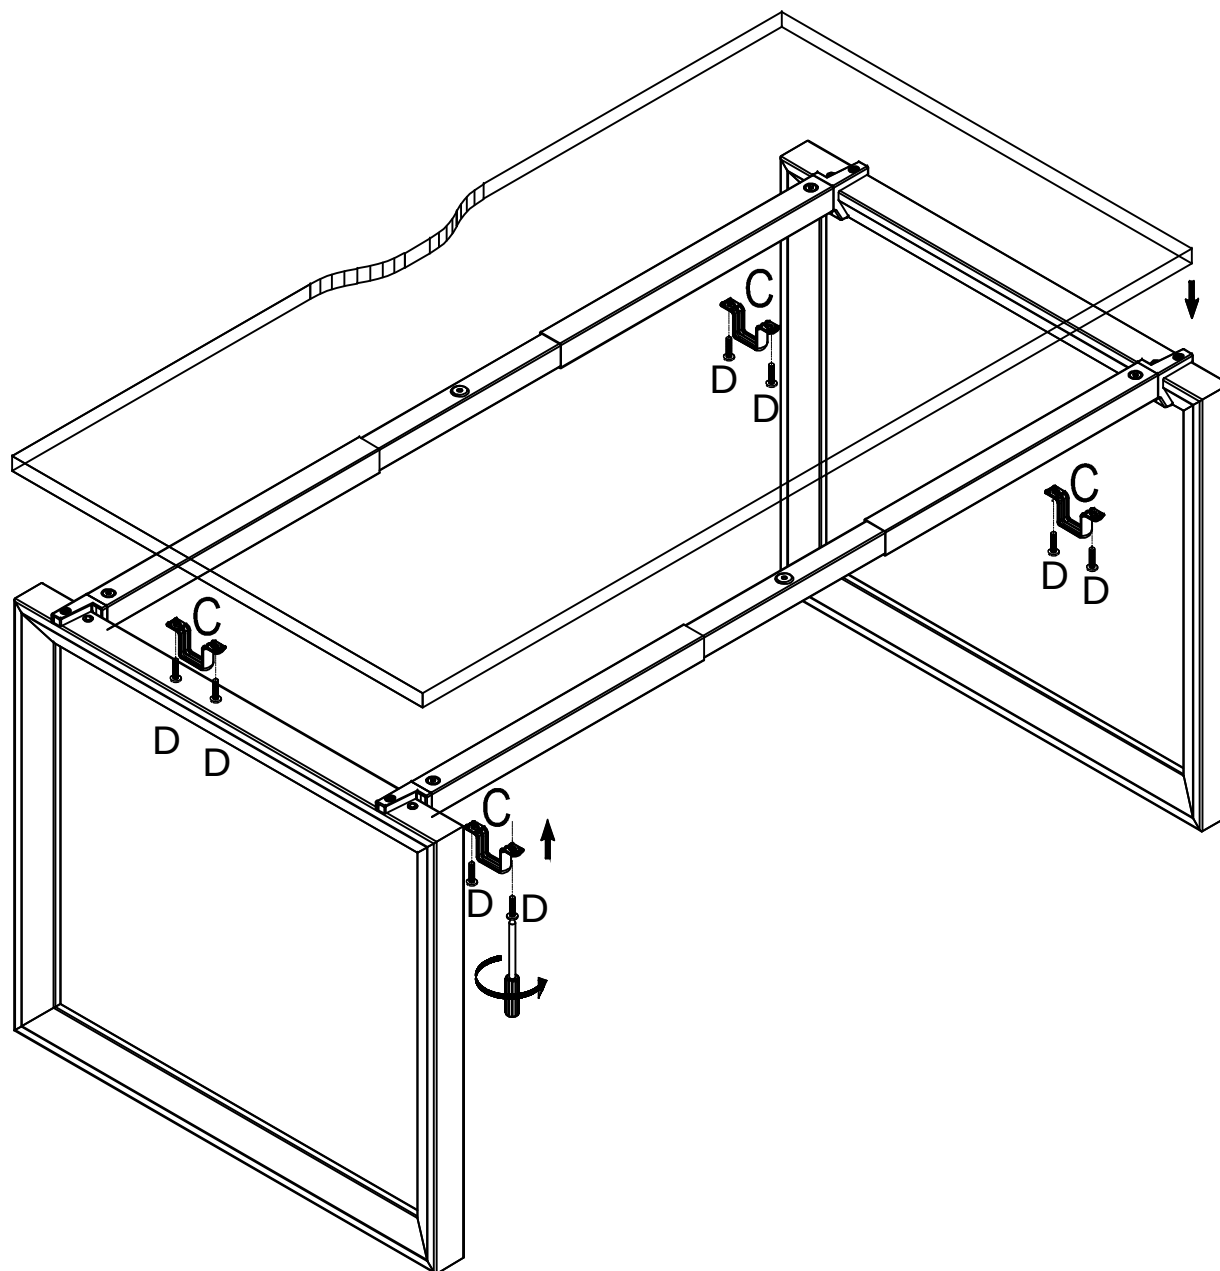

	
Cx4	Dx8