



# Concealed fixing hook

## INSTRUCTIONS


### INCLUDED

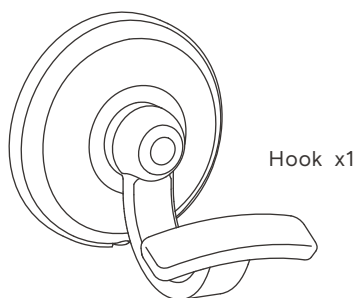

Hook x1

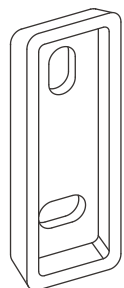


Wall bracket x1

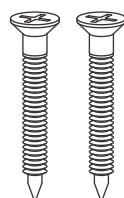

Wall screw x2



Grub screw x1

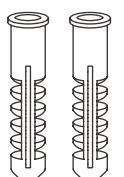


Plastic wall fitting (solid wall) x2



Hex key x1


### TOOLS YOU'LL NEED

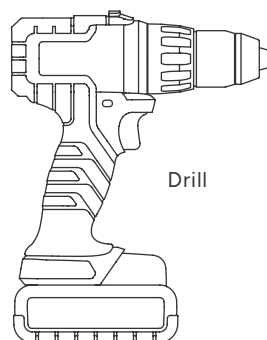

Drill



8mm drill bit



Crosshead screwdriver (PH2)


### FITTING

Concealed fixing hooks are installed onto a wall bracket. Plastic wall fixings are supplied to attach the wall bracket, which are suitable for solid brick or concrete walls. If you have another type of wall, use specialist fixings.


### CARE INSTRUCTIONS

Use a damp cloth to maintain the hooks, avoiding chemical cleaners. Touching the hardware with another metal or hard object is likely to scratch and/or damage it.


## Concealed fixing hook instructions

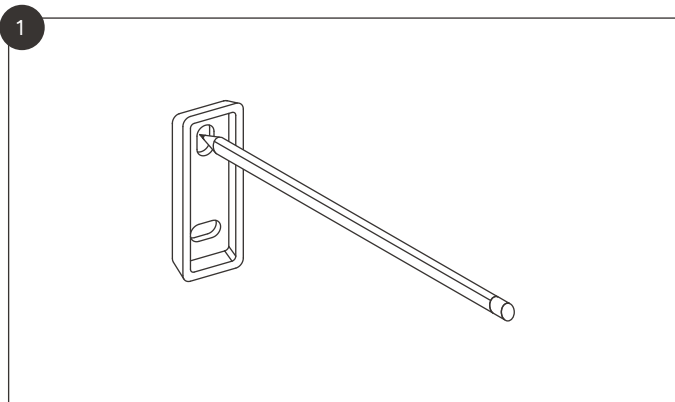


Use the bracket as a template to mark the positions of the holes.

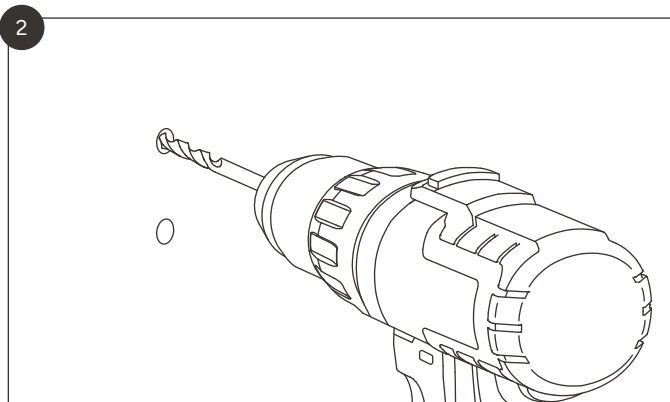


Drill two 8mm holes in the positions marked.

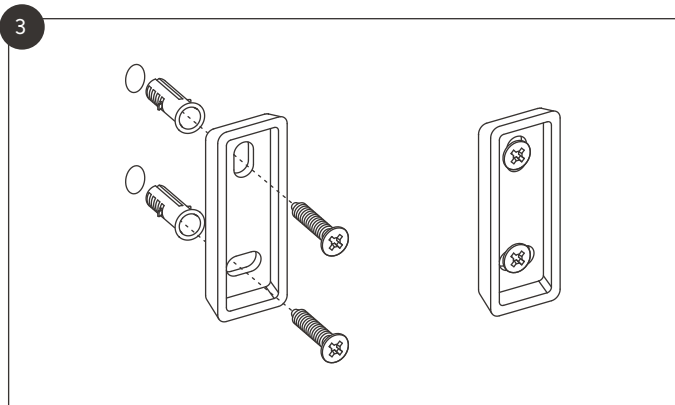


Attach the bracket to the wall using the correct wall fixings and screws.

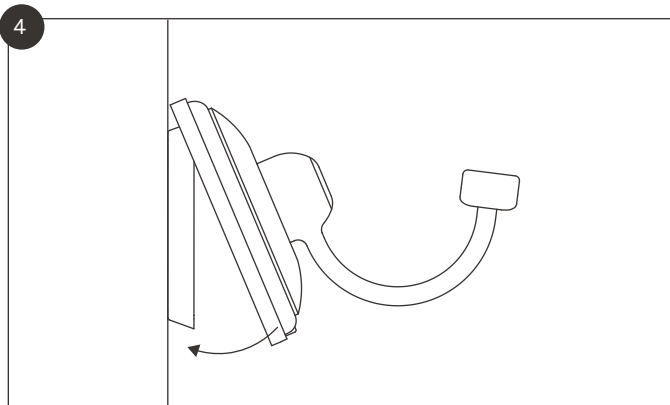

Fit the hook onto the bracket. When fitting the hook onto the bracket, make sure the top edge of the bracket connects with the ridge of the hook.

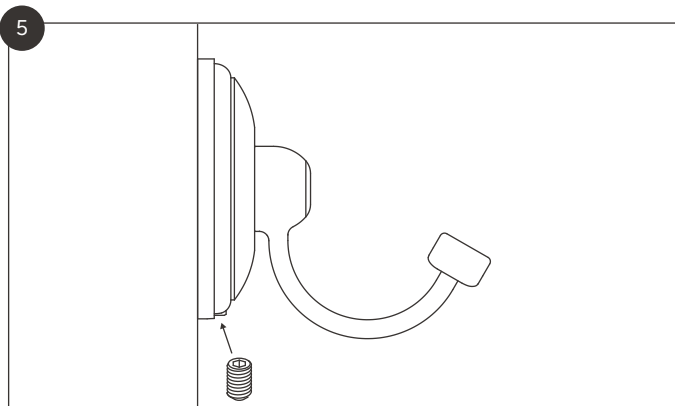

Tighten the grub screw on the bottom edge of the hook with a hex key. Be careful not to over-tighten the screw.

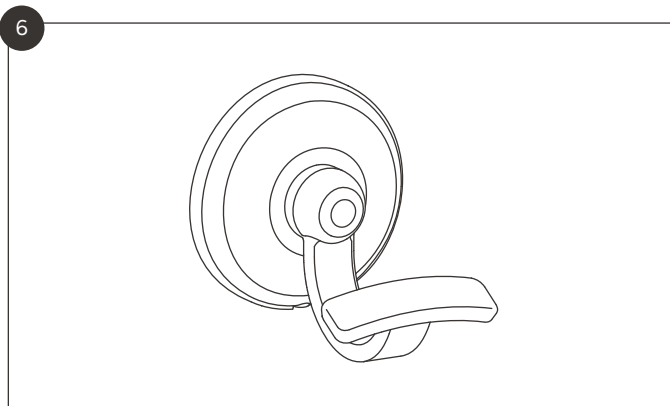

Check the hook is secure.