VERA DREAM BED ASSEMBLY INSTRUCTION



Vendor Information

Vendor Name: LSMX1

Vendor Code: V-005852

Living Space Information

Vendor Collection: VERA DREAM NON STORAGE


| ITEM | DESCRIPTION | QUANTITY |
|------|------------------------|----------|
| 1 | VERA DREAM HEADBOARD | 1 |
| 2 | VERA DREAM RAILS/SLATS | 1 |
| 3 | VERA DREAM FOOTBOARD | 1 |

| | | A A T H |
|---|-------------|----------|
| 1 | HEADBOARD | X1 |
| 2 | RAILS/SLATS | X2 X1 |
| 3 | FOOTBOARD | X1 |


Hardware bag included in side rails and slat box with red ribbon to located.

| ٨ | 5/16-18X1" SCREW | | |
|---|----------------------|-------------|---|
| Α | BUTTON HEAD CAP | XX | 3 |
| В | WASHER 5/16 PLAIN | 0 XX | 3 |
| С | 3/16 SHORT ARM | | • |
| C | HEX KEY | 1 X2 | 2 |
| D | 5/16-18X1 1/2" SCREW | REPLACEMENT | |
| ט | BUTTON HEAD CAP | _ X2 | 2 |


VERA DREAM BED NON STORAGE

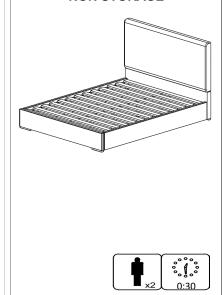

STEP 1: Attach side rails to headboard using Wrench(C), 4 Screws (A) and Washers (C).

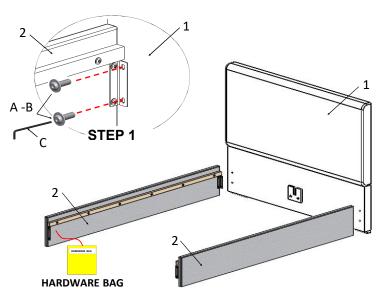

STEP 2: Attach Footboard to side rails using Wrench(C), 4 Screws (A) and Washer (C).

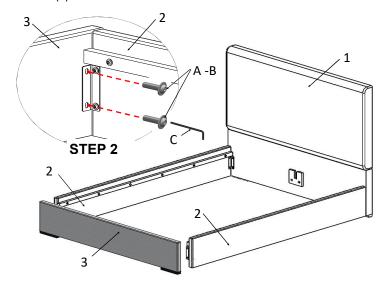

VERA DREAM BED ASSEMBLY INSTRUCTION



Vendor Information


Vendor Name: LSMX1

Vendor Code: V-005852

Living Space Information
Vendor Collection: VERA DREAM NON STORAGE


STEP 3: Attach the support legs with leveler to the center slat. Adjust the levers on bottom of support legs when necessary.

STEP 4: Place the piece from top to bottom into the U-shaped slot.

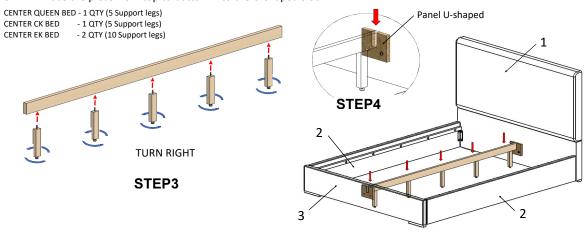



STEP 5: Unroll the slats onto the center slat staring at the footboard and ending at the headboard.



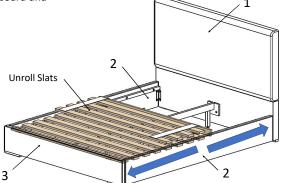

STEP 6: Verify the slats are installed properly the legs are perpendicular to the floor for full support.

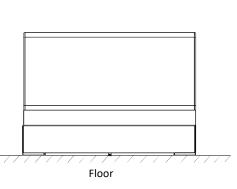

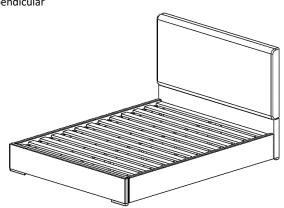

VERA DREAM WINGS ASSEMBLY INSTRUCTION



Vendor InformationVendor Name:LSMX1Vendor Code:V-005852

Living Space Information

Vendor Collection: VERA DREAM


| ITEM | DESCRIPTION | QUANTITY |
|------|------------------|----------|
| 1 | VERA DREAM WINGS | 2 |
| | | |
| | | |

| | | E F T H |
|---|-------|---------|
| 1 | WINGS | |


Hardware bag included below with red ribbon to located.

| Α | SLOT BRACKET | X4 |
|---|----------------------|------------------------|
| В | CORNER BRACKET | S _{X2} |
| С | 5/16-18X1-1/4" SCREW | |
| | BUTTON HEAD CAP | X10 |
| D | WASHER 5/16 PLAIN | 0 x10 |
| Е | 3/16 SHORT ARM | |
| - | HEX KEY | X2 |


VERA DREAM BED WITH WINGS

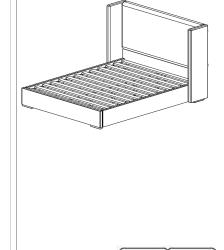

STEP 1: Attach brackets (A & B) facing left side to wing, to the end of the slot, using wrench(E), screw (C), and flat washers (D).

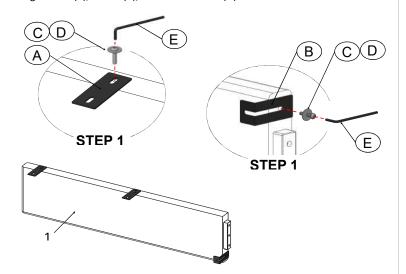

STEP 2: Attach brackets (A & B) facing right side to wing, to the end of the slot, using wrench(E), screw (C), and flat washers (D).

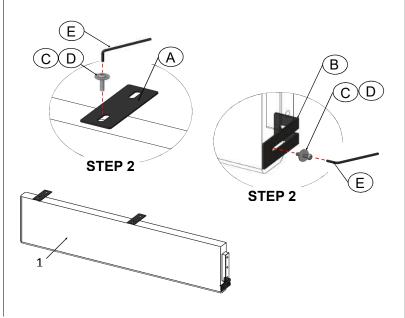


VERA DREAM WINGS ASSEMBLY INSTRUCTION





Vendor Information
Vendor Name: LSMX1
Vendor Code: V-005852


Living Space Information
Vendor Collection: VERA DREAM

STEP 3: Raise bed to put inside the side riel of wing bracket.

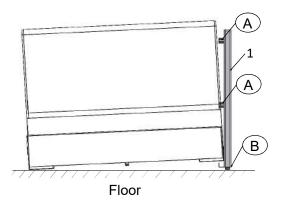

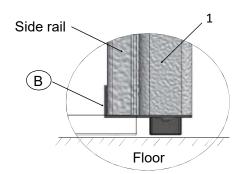

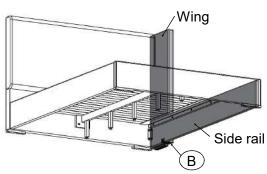

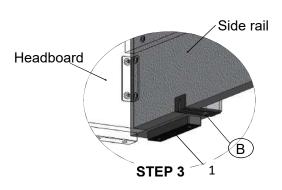

STEP 4: Attach bracket (A) to headboard, using wrench(E), 4 screws (C), and flat washers (D).

