VERA DREAM BED ASSEMBLY INSTRUCTION



Vendor Information

Vendor Name: LSMX1

Vendor Code: V-005852

Living Space Information
Vendor Collection: VERA DREAM NON STORAGE


ITEM	DESCRIPTION	QUANTITY
1	VERA DREAM HEADBOARD	1
2	VERA DREAM RAILS/SLATS	1
3	VERA DREAM FOOTBOARD	1

	LIV	NG SPACES
1	HEADBOARD	X1
2	RAILS/SLATS	X2 X1
3	FOOTBOARD	X1


Hardware bag included in side rails and slat box with red ribbon to located.

۸	5/16-18X1" SCREW	
Α	BUTTON HEAD CAP	X8
В	WASHER 5/16 PLAIN	0 x8
С	3/16 SHORT ARM	
C	HEX KEY	X2
D	5/16-18X1 1/2" SCREW	REPLACEMENT
ט	BUTTON HEAD CAP	X2


VERA DREAM BED NON STORAGE

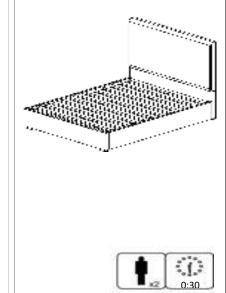

STEP 1: Attach side rails to headboard using Wrench(C), 4 Screws (A) and Washers (C).

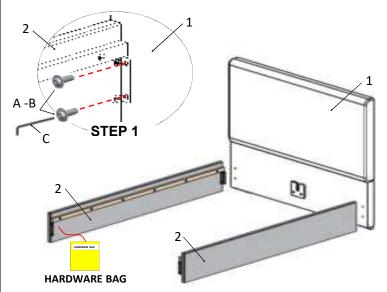

STEP 2: Attach Footboard to side rails using Wrench(C), 4 Screws (A) and Washer (C).

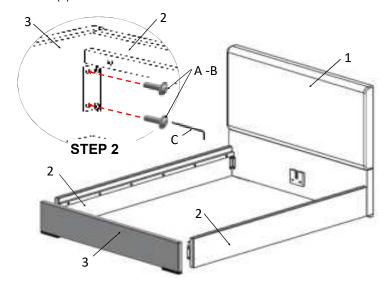

VERA DREAM BED ASSEMBLY INSTRUCTION



Vendor Information

Vendor Name: LSMX1


Vendor Code: V-005852


Living Space Information

Vendor Collection: VERA DREAM NON STORAGE

STEP 3: Attach the support legs with leveler to the center slat. Adjust the levers on bottom of support legs when necessary.


STEP 4: Place the piece from top to bottom into the U-shaped slot.

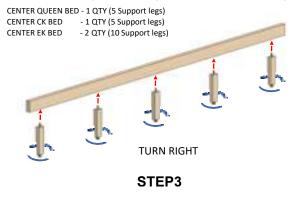

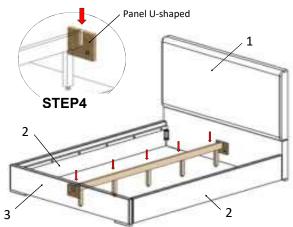



STEP 5: Unroll the slats onto the center slat staring at the footboard and ending at the headboard.



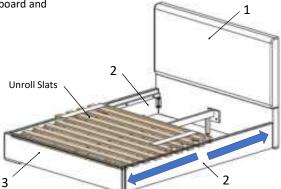

STEP 6: Verify the slats are installed properly the legs are perpendicular to the floor for full support.

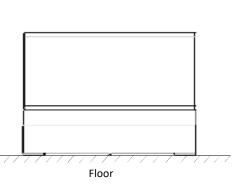

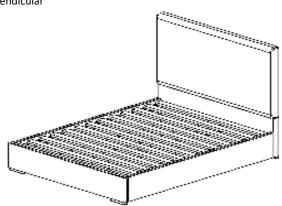

VERA DREAM WINGS ASSEMBLY INSTRUCTION



Vendor Information

Vendor Name: LSMX1

Vendor Code: V-005852

Living Space Information

Vendor Collection: VERA DREAM


ITEM	DESCRIPTION	QUANTITY
1	VERA DREAM WINGS	2




Hardware bag included below with red ribbon to located.

1		
Α	SLOT BRACKET	 X4
В	CORNER BRACKET	3 X2
С	5/16-18X1-1/4" SCREW	
	BUTTON HEAD CAP	X10
D	WASHER 5/16 PLAIN	0 X10
E	3/16 SHORT ARM	
-	HEX KEY	X2


VERA DREAM BED WITH WINGS

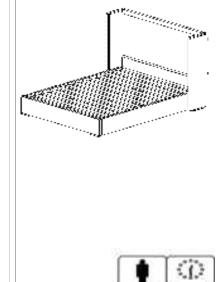

STEP 1: Attach brackets (A & B) facing left side to wing, to the end of the slot, using wrench(E), screw (C), and flat washers (D).

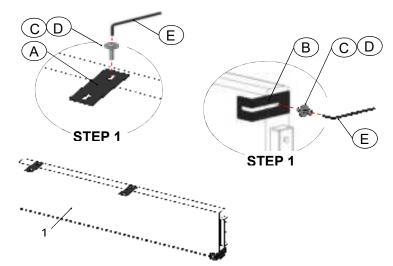

STEP 2: Attach brackets (A & B) facing right side to wing, to the end of the slot, using wrench(E), screw (C), and flat washers (D).

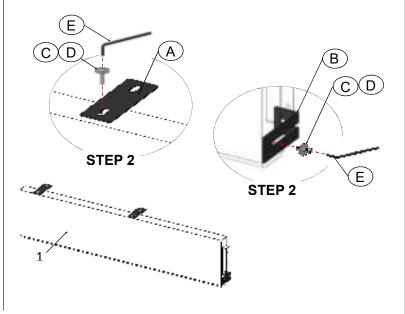


VERA DREAM WINGS ASSEMBLY INSTRUCTION





Vendor Information
Vendor Name: LSMX1
Vendor Code: V-005852


Living Space Information Vendor Collection: VERA DREAM

STEP 3: Raise bed to put inside the side riel of wing bracket.

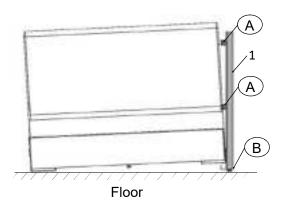

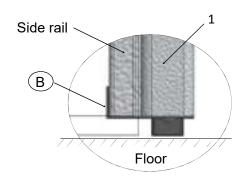

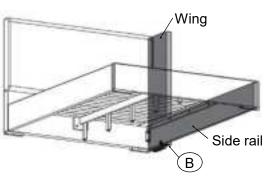

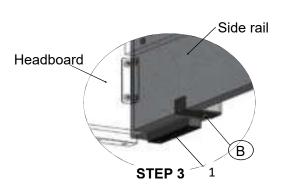

STEP 4: Attach bracket (A) to headboard, using wrench(E), 4 screws (C), and flat washers (D).

