





















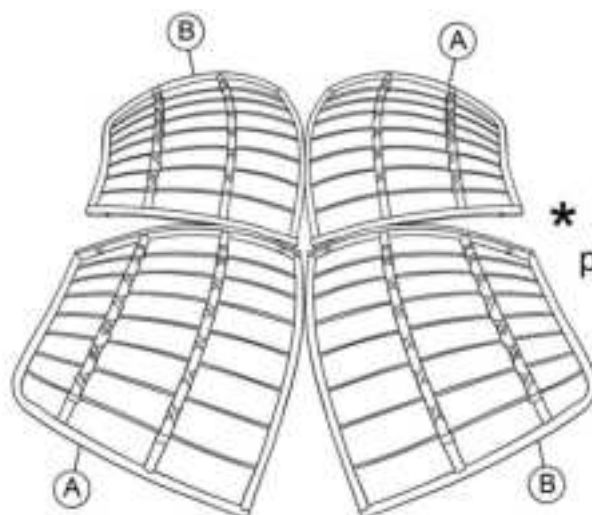
**EASY
ASSEMBLY**
Assemble in
20 minutes
or less

ZERO-GRAVITY ROCKING CHAIR



Accessories List


Accessories								
	A	2	B	2	C	2	D	1
								
	E	1	F	2	G	2	H	1
								
	I	1	J	1	K	1	L	1
Tool kit								
	M6,55mm	12	M6,40mm	16	M6,16mm	6	M6,30mm	2
	 M-6		 M-6		 M-6		 M-6	
	Q	1	R	1	S	1	T	1



★ Before installing, be sure to place the bases in alphabetical.


Step1:

Assembling the seat section
Using 8 screws - M6,55mm

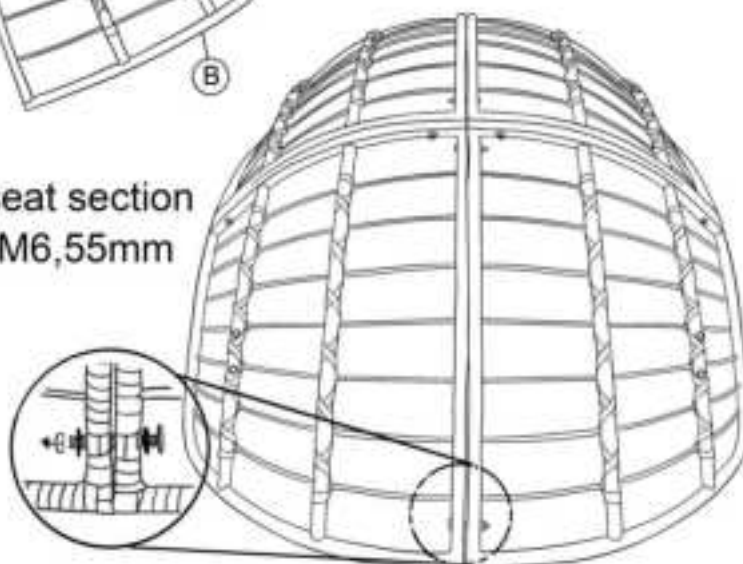

Notice:

- 1-Please don't tighten all screws completely at beginning!
- 2-Fully tighten after completing the seat frame!

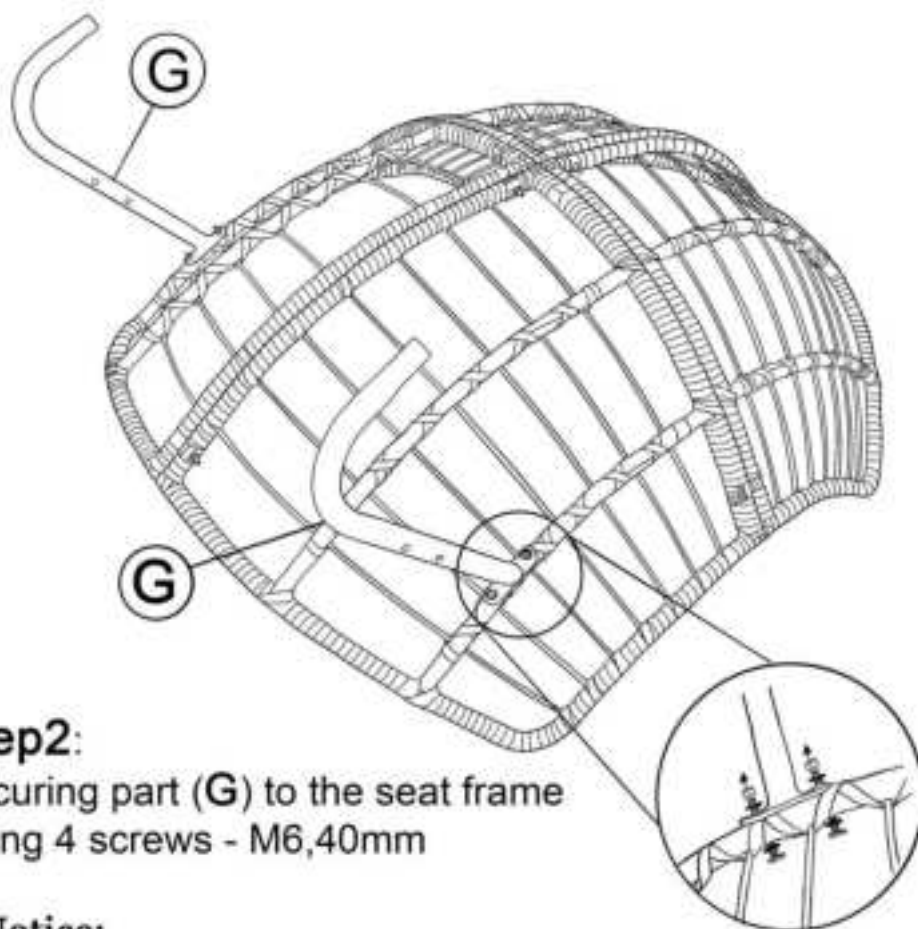


Step2:

Securing part (G) to the seat frame
Using 4 screws - M6,40mm

Notice:


- 1-Please don't tighten all screws completely at beginning!
- 2-Fully tighten after completing the chair!

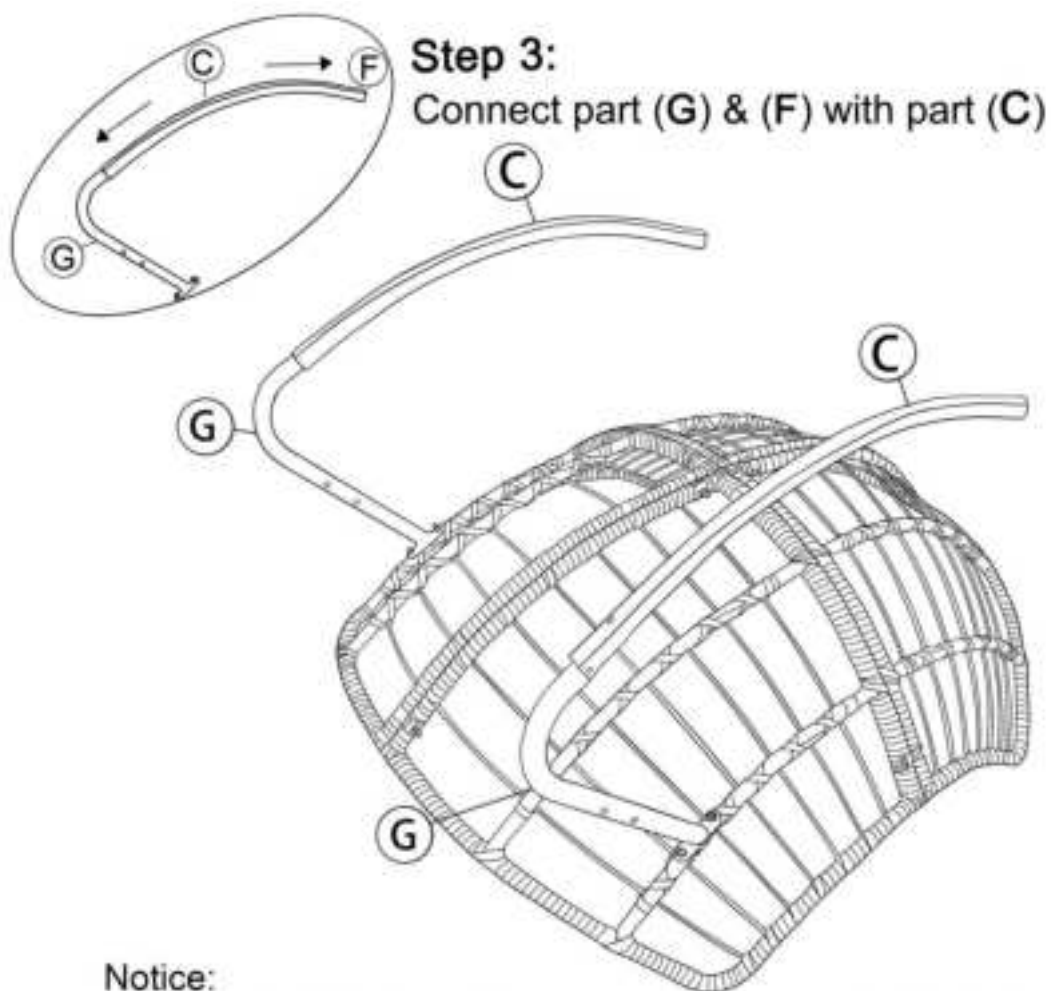

Notice:

- 1-Please don't tighten all screws completely at beginning!
- 2-Fully tighten after completing the chair!

Step4: Securing part (F) to the seat frame
Using 4 screws - M6,40mm

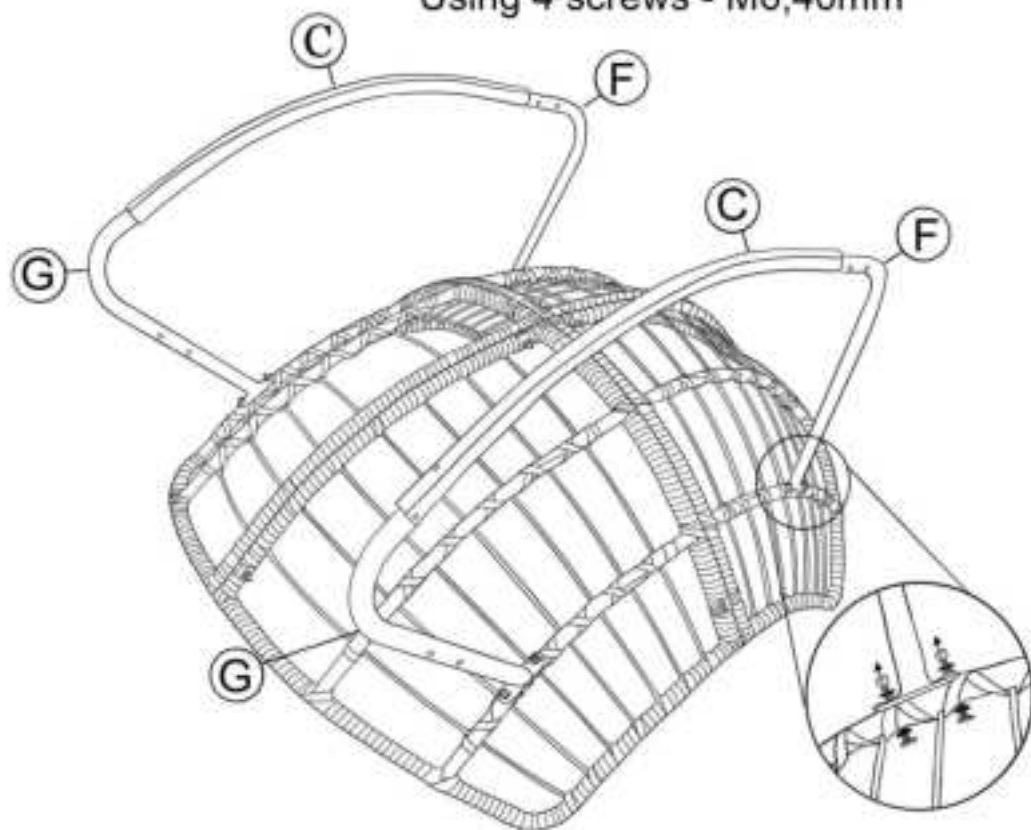

Notice:


- 1-Please don't tighten all screws completely at beginning!
- 2-Fully tighten after completing the chair!


Step5:

Connecting part (D)&(F)
Using 4 screws - M6,40mm

Step6:


Connecting part (E)&(C)
Using 4 screws - M6,16mm

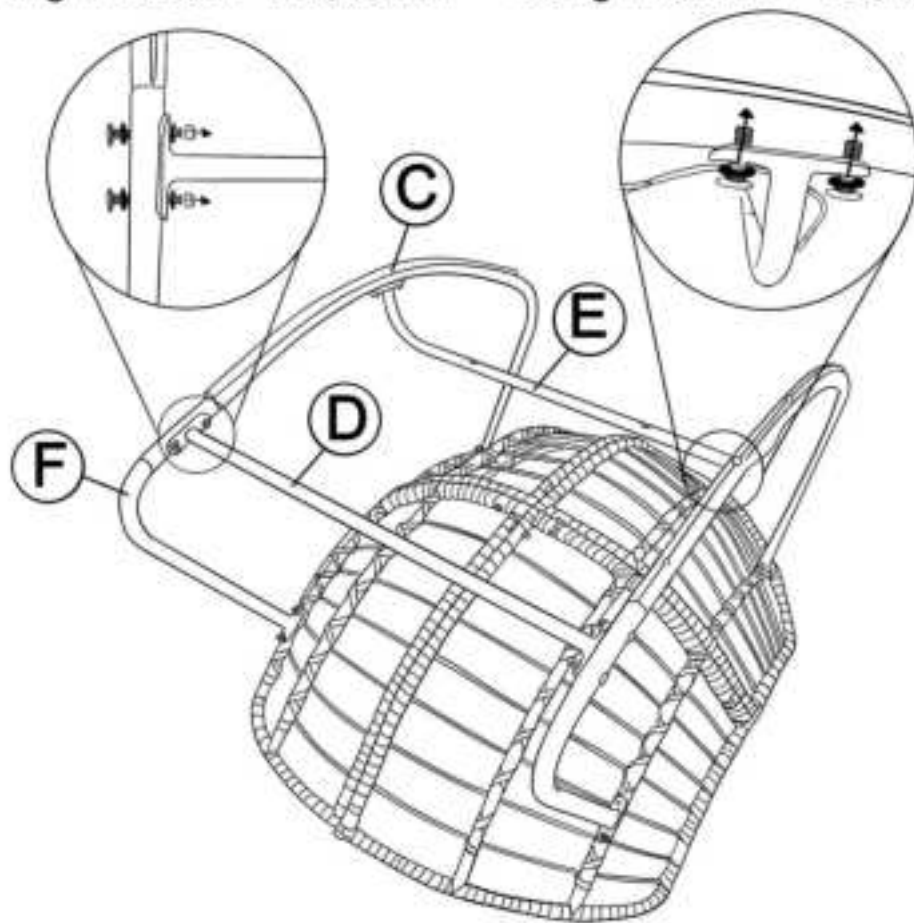

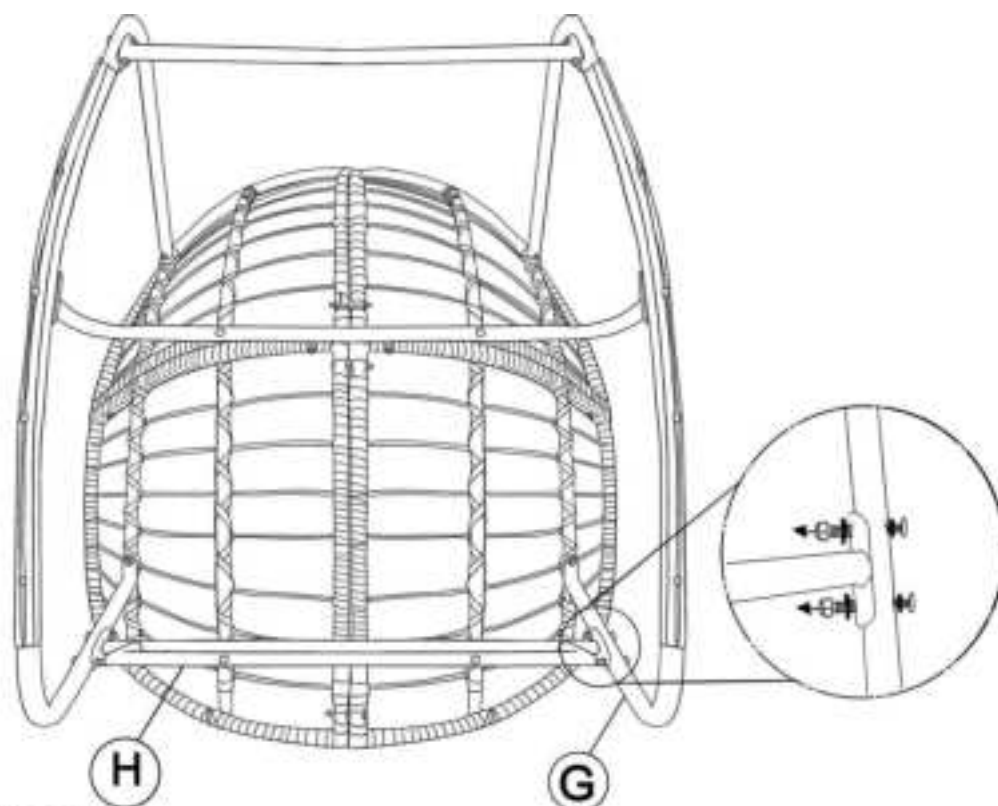


Step7:

Connecting part (H) and (G)
Using 4 screws - M6,40mm

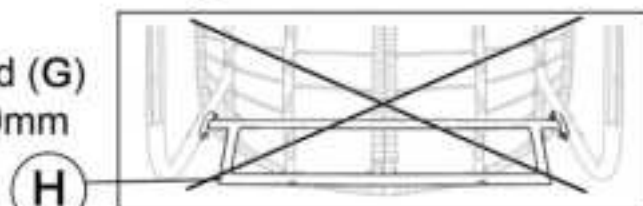

Incorrect Installation Case

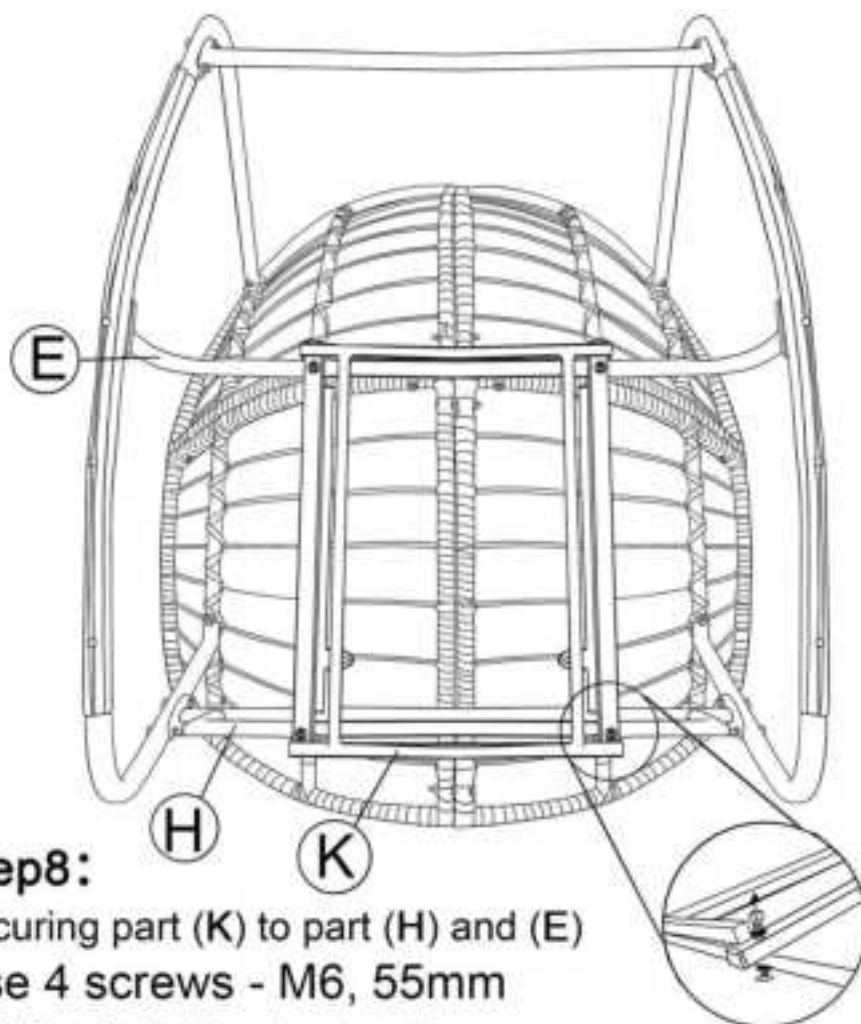


Step8:

Securing part (K) to part (H) and (E)

Use 4 screws - M6, 55mm


- * Before installing, be sure to place the bases in alphabetical.

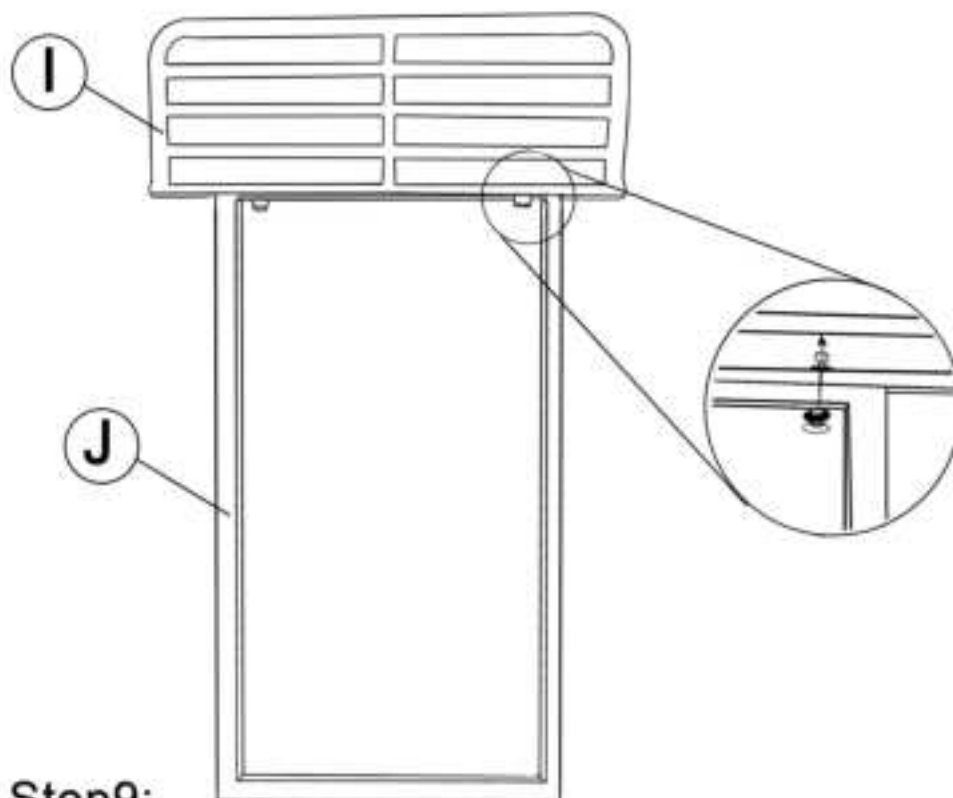

Step9:

Installing the footrest by connecting part (I) and (J).

Using 2 screws - M6,30mm

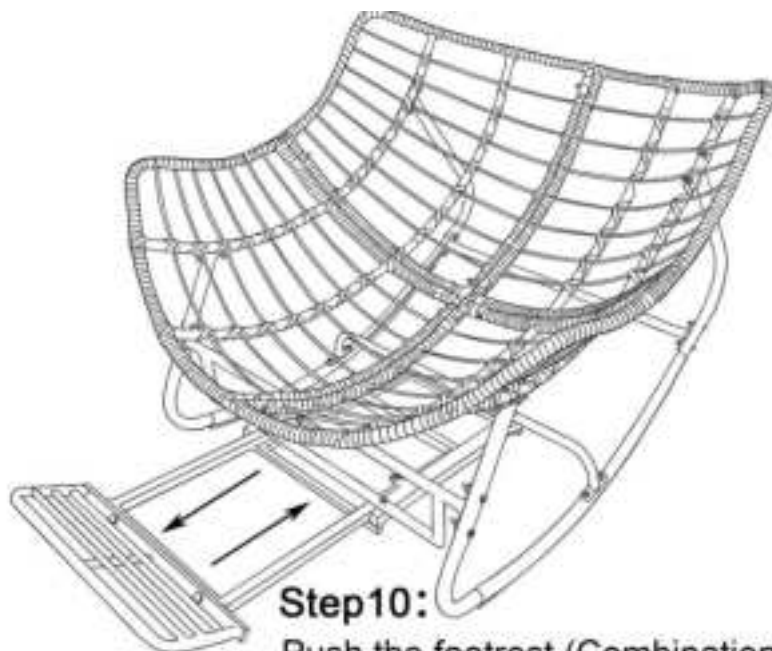


Step10:

Push the footrest (Combination of part (I) & (J)) into the track of part (K)

Step11:

Securing the footrest's trajectory-Using 2 screws - M6,16mm

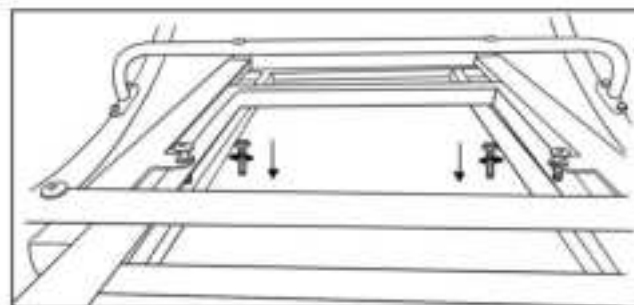

ROCKING CHAIR ZERO-GRAVITY



ONLINE SUPPORT

Please read the installation guide carefully before installation
If you have any questions during the installation process
you can contact us and we will provide you a detailed guidance