




Bottom Bracket Installation - PF30

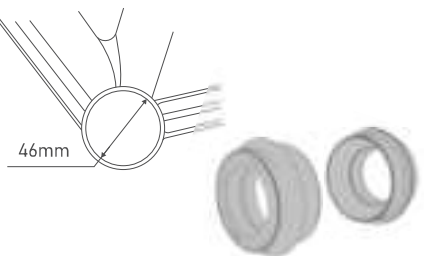

Determine the type of your BB shell	BB shell frame width	Fully assembled width	Non-drive side outer spacer	Non-drive side spacer	Drive side spacer	Drive side outer spacer	Use the following crankset
	73mm	96mm	✗	✗	1 x 2.5mm	✗	FC-M9050 FC-M8050
	83mm	111mm	✗	1 x 2.5mm	1 x 2.5mm	1 x 2.5mm	FC-M8070