



# MAKE A DIFFERENCE




## Front Bumper

**BXG.8008**

(INSTALLATION INSTRUCTION)

**ATTENTION** • Please verify all parts are present and read instructions carefully before starting installation.  
Please feel free to contact your distributor if you have any kind of question about your purchase.

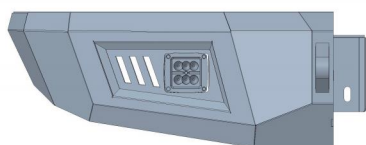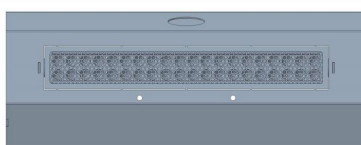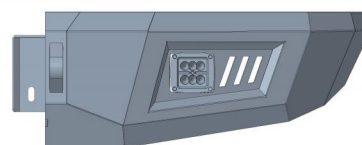



### 1 CONTENTS

**B1****A****B2****C**

A: Main Body

B1&amp;B2: Wings

C: License Plate Bracket

Qty	Part Name	Size(mm)	Picture	Qty	Part Name	Size(mm)	Picture
4	Hex Bolt	M12×35		2	Flat Washer	M6×12×1	
6	Hex Bolt	M12×30		10	Hex Nut	M12	
2	Button Bolt	M6×16		2	Nylon Lock Nut	M6	
10	Split Lock Washer	D12		2	EVA		
14	Flat Washer	M12×30×2					

### 2 TOOLS REQUIRED

◆ Drive Ratchet Handle

◆ 10mm, 19mm Wrench

◆ 4mm Hex Bit Socket

◆ 19mm Shallow Socket


To view online instruction, please  
scan the QR code.




## 3 INSTALLATION INSTRUCTION

### Step 1

Place the vehicle in park, remove the factory bumper from the frame.

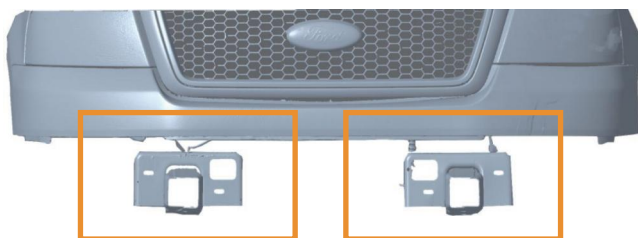

### Step 3

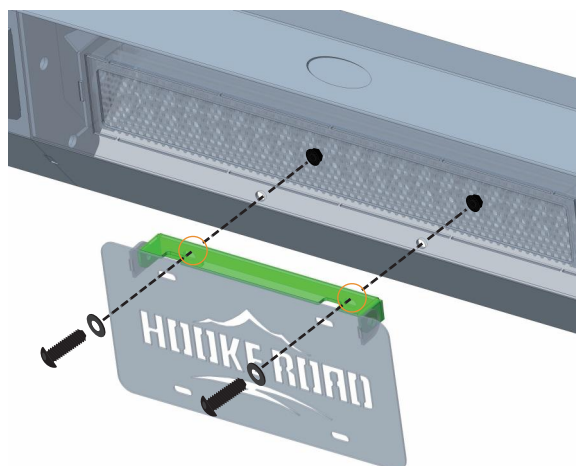


### Step 4

Secure the bumper to the vehicle frame. Adjust the bumper to the desired position. Repeat this step on the other side of the vehicle.

**Finally, tighten all bolts.**

- (4) M12×35 Hex Bolt
- (8) M12×30×2 Flat Washer
- (4) D12 Split Lock Washer
- (4) M12 Hex Nut

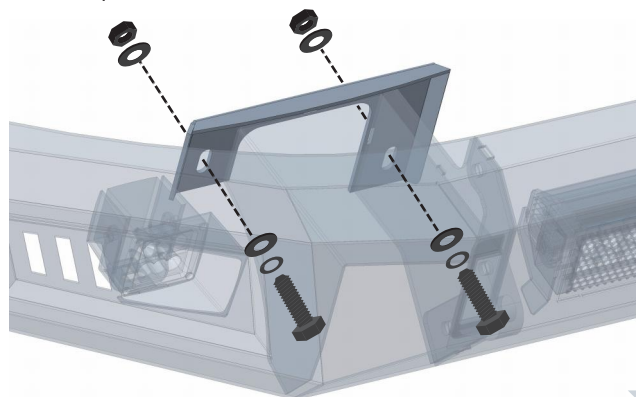


### Step 2

First, stick the EVA to the main body. Assemble your Hooke Road bumper. Align the outer profile with the inner profile and tighten the hardware.

Repeat this step on the other side of the bumper.

- (2) EVA
- (6) M12×30 Hex Bolt
- (6) M12×30×2 Flat Washer
- (6) D12 Split Lock Washer
- (6) M12 Hex Nut

EVA

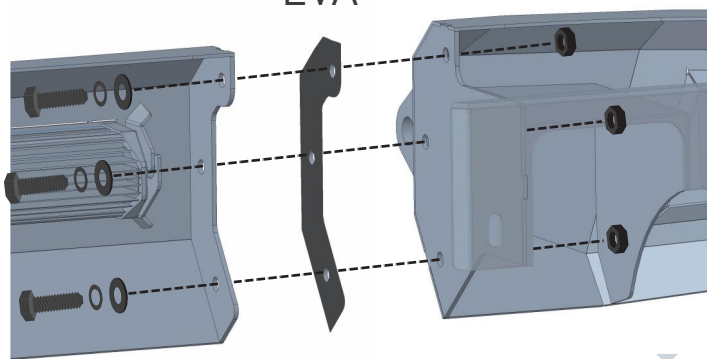

### Step 5

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



### Step 3

Secure the license plate bracket to the bumper and tighten the hardware.

- (2) M6×16 Bottom Bolt
- (2) M6×12×1 Flat Washer
- (2) M6 Nylon Lock Nut