




Product Installation Instructions

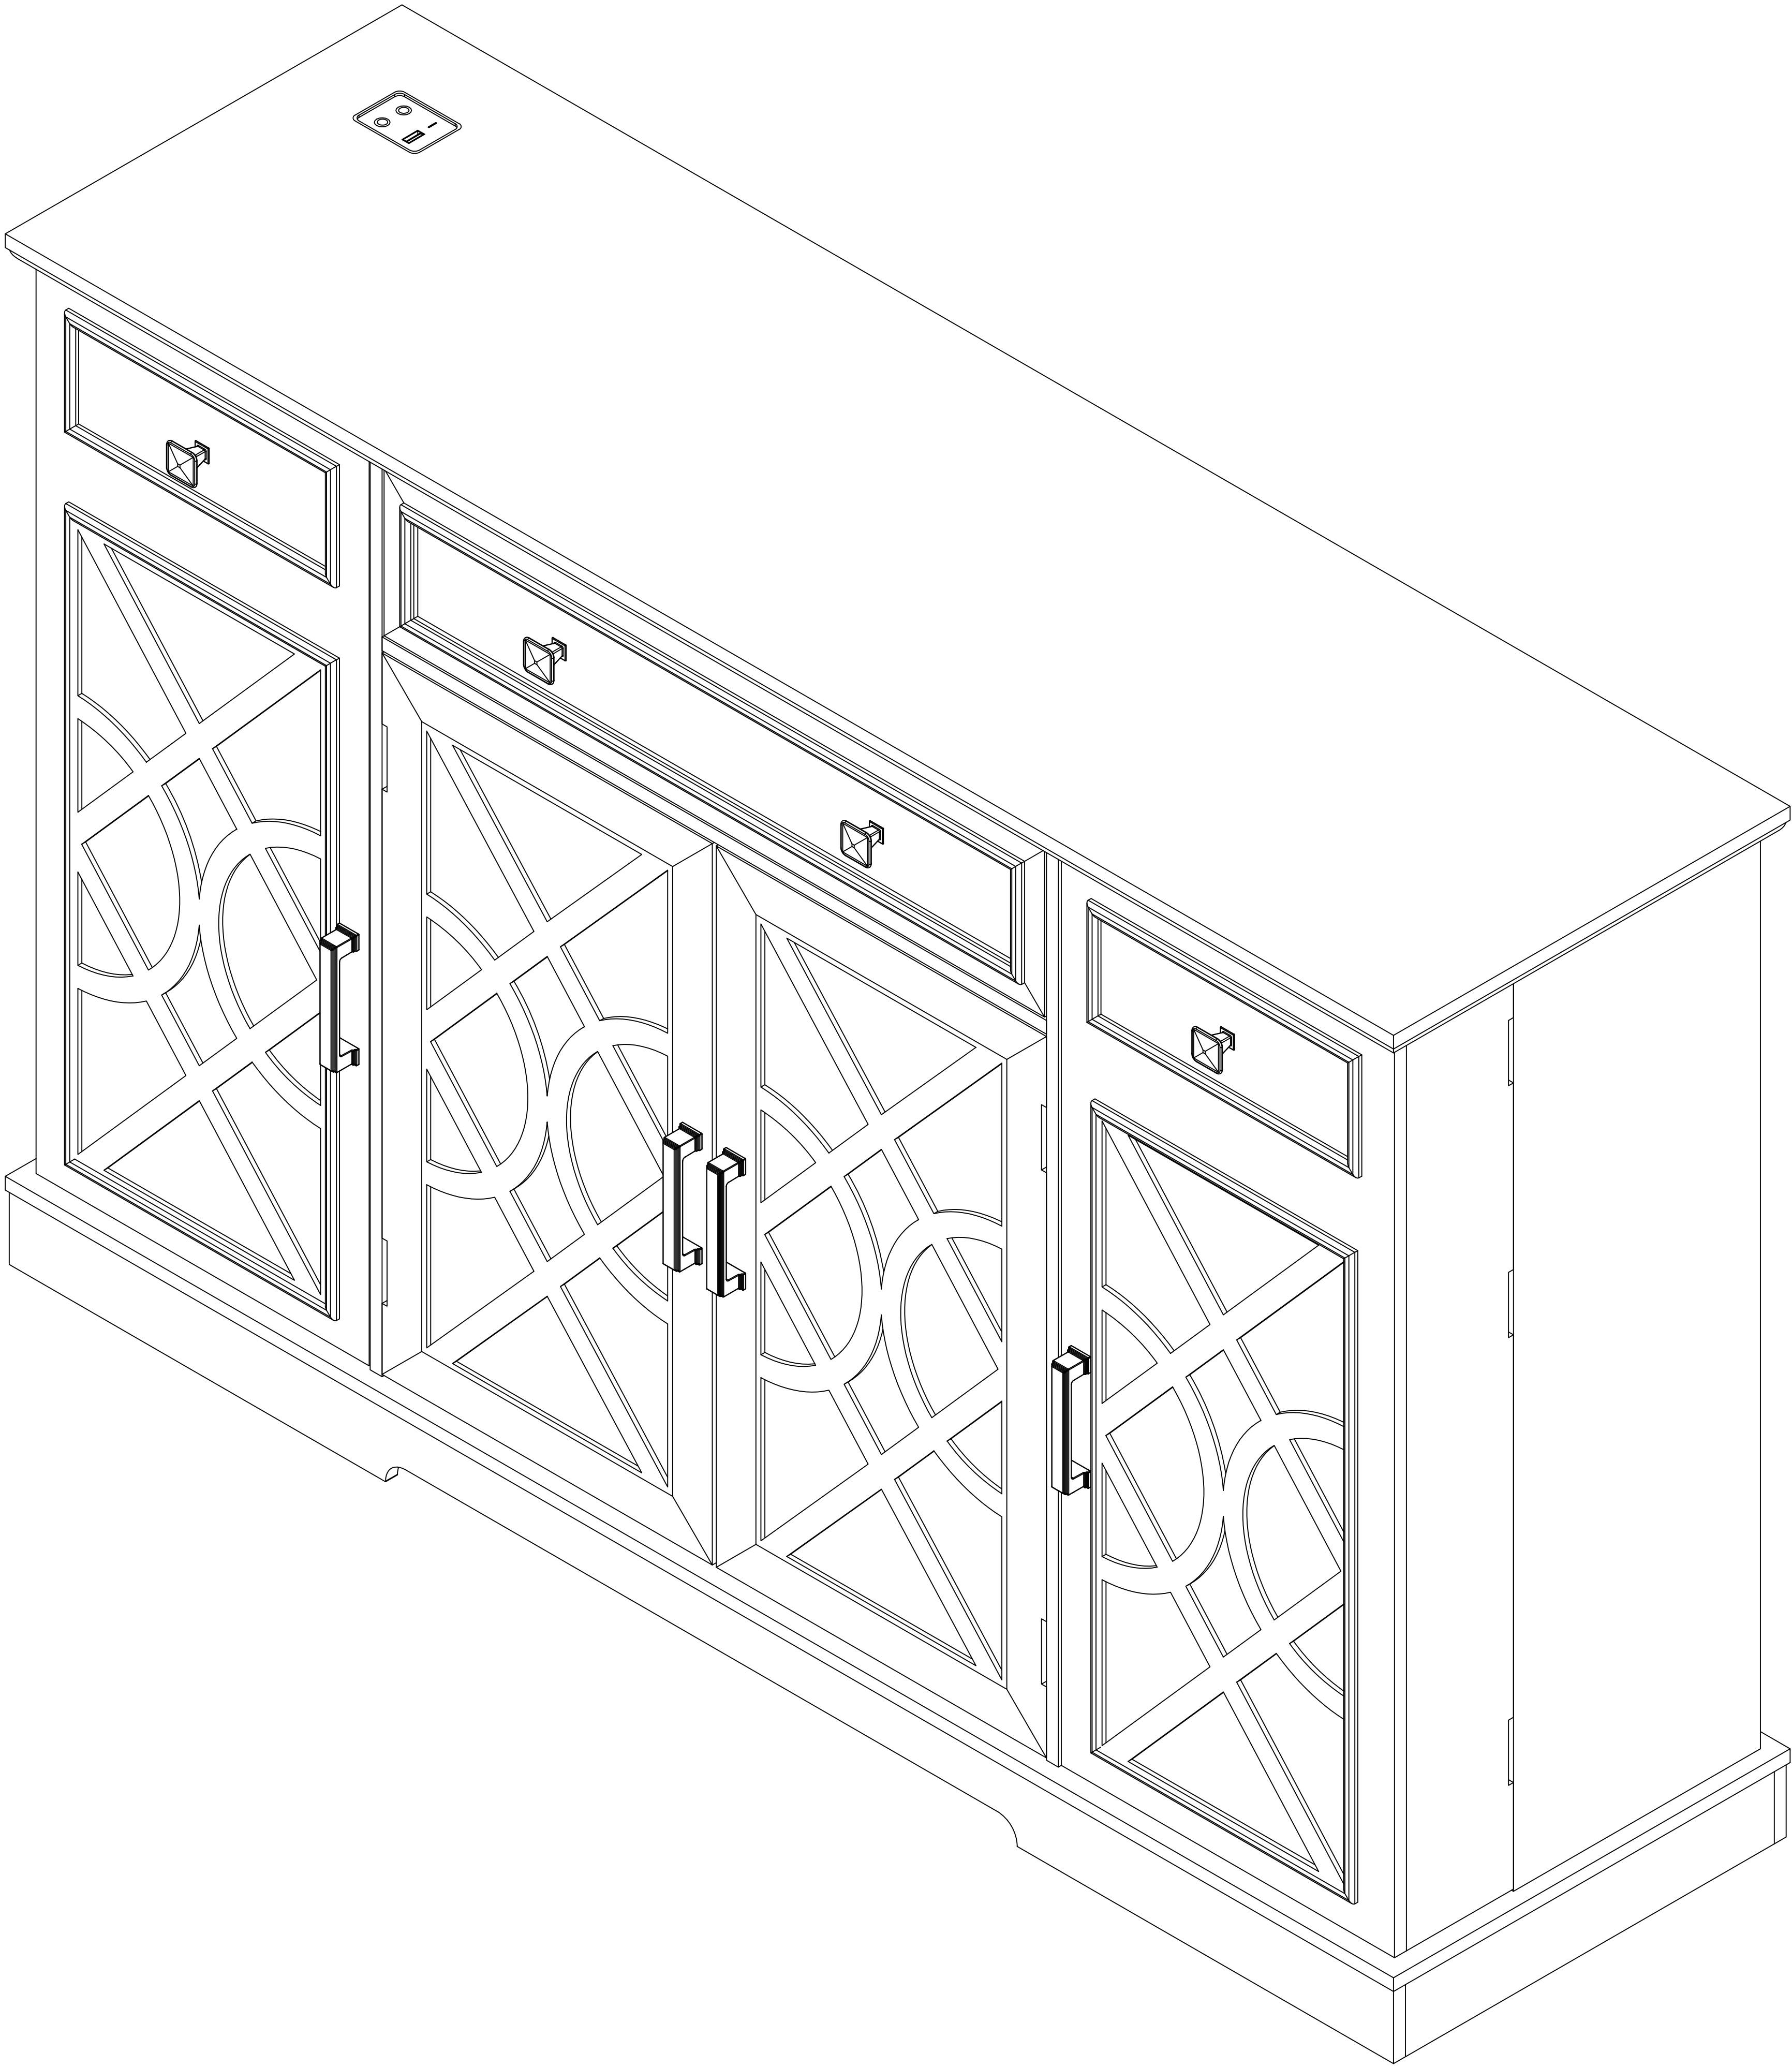


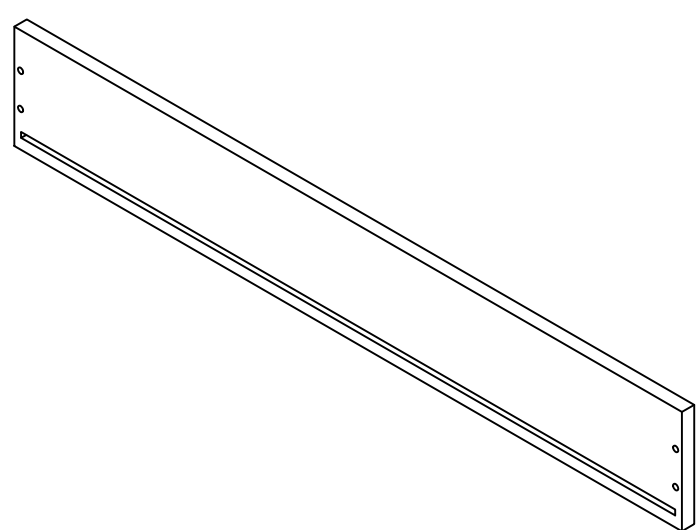


1x1

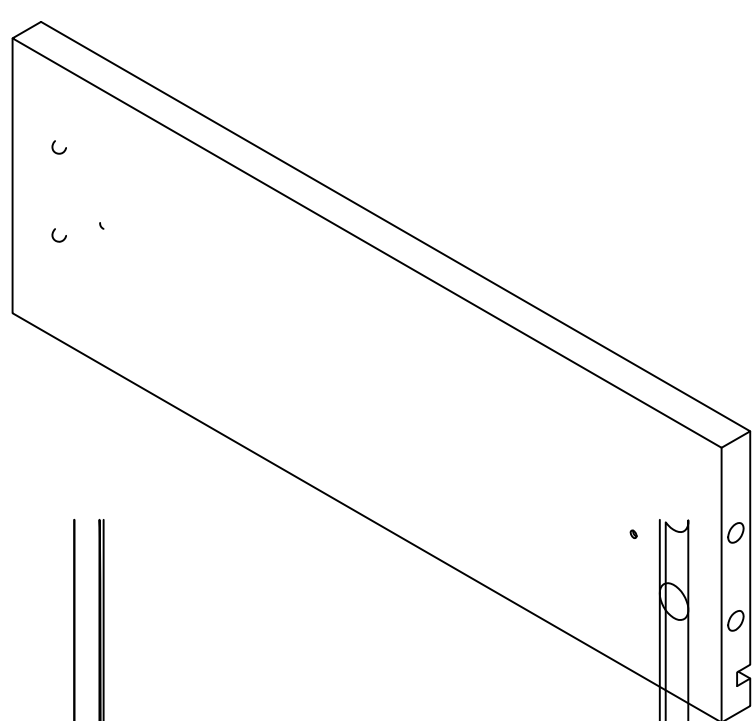


2x2

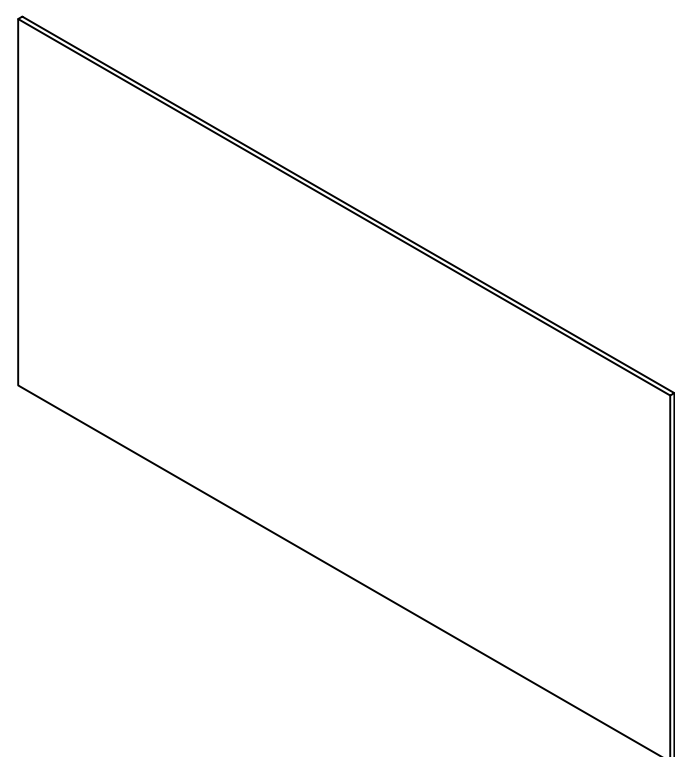


3x1

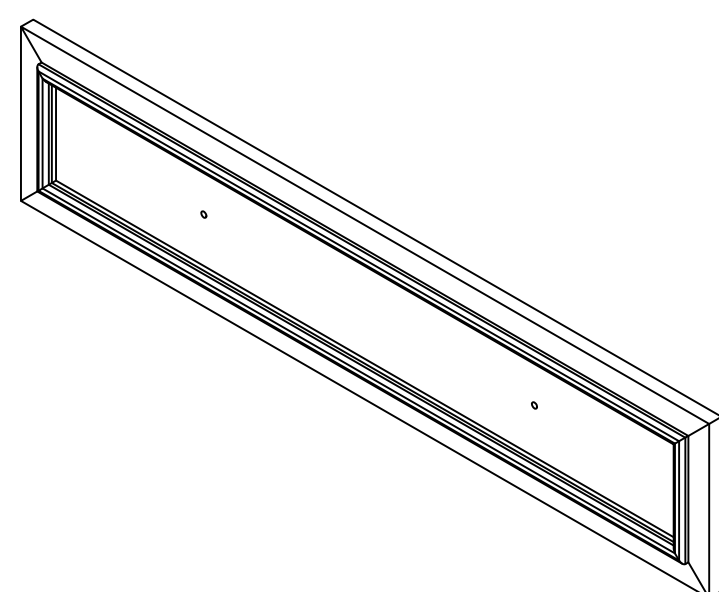


4x1

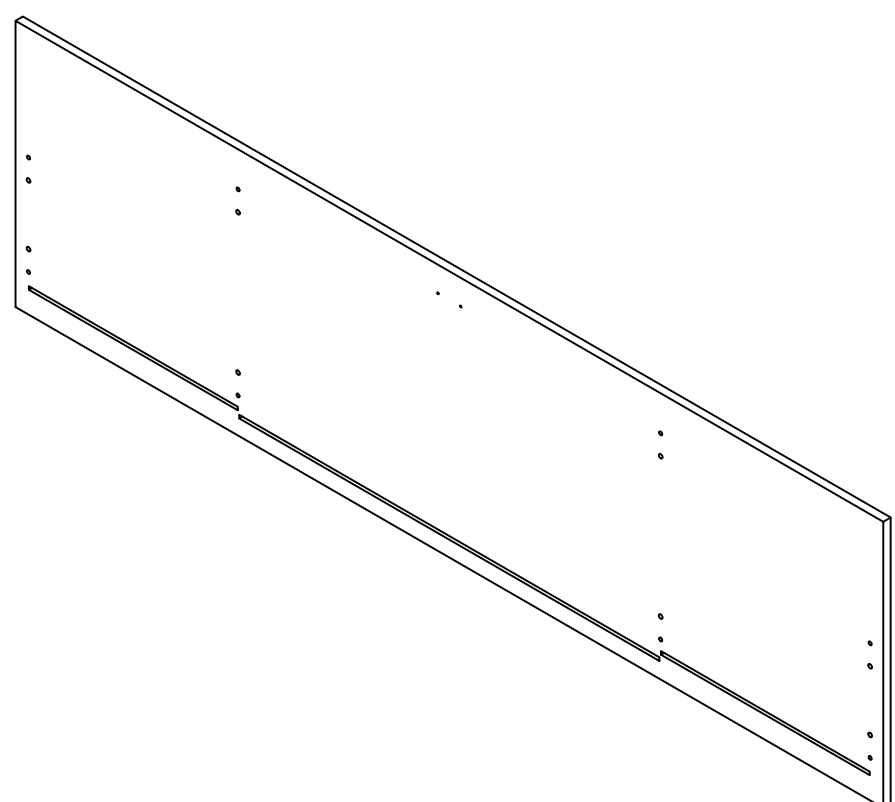


5x1

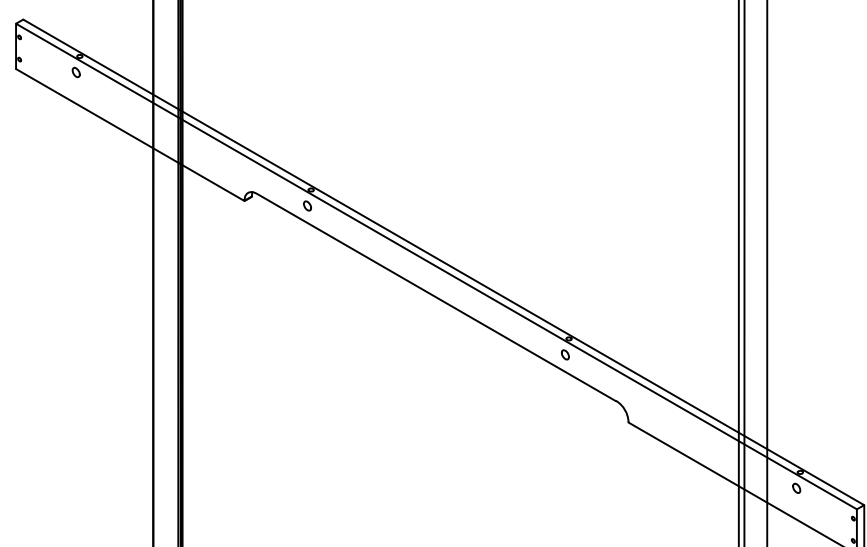


6x1

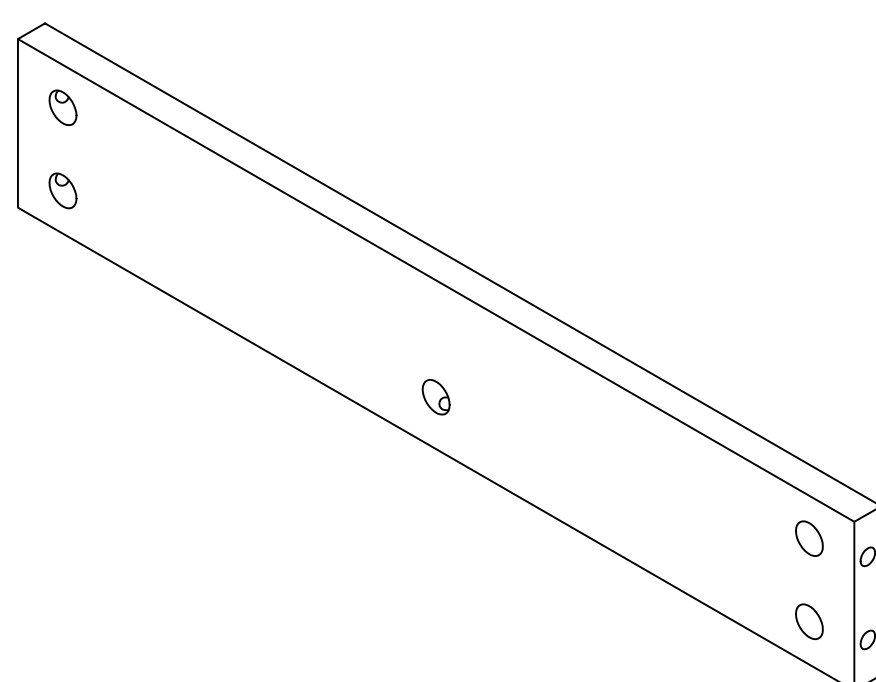


7x2

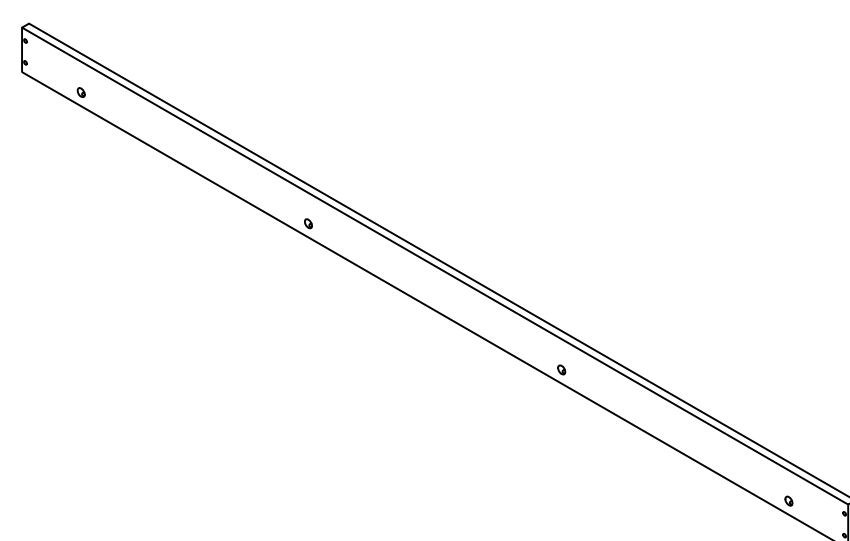


8x1

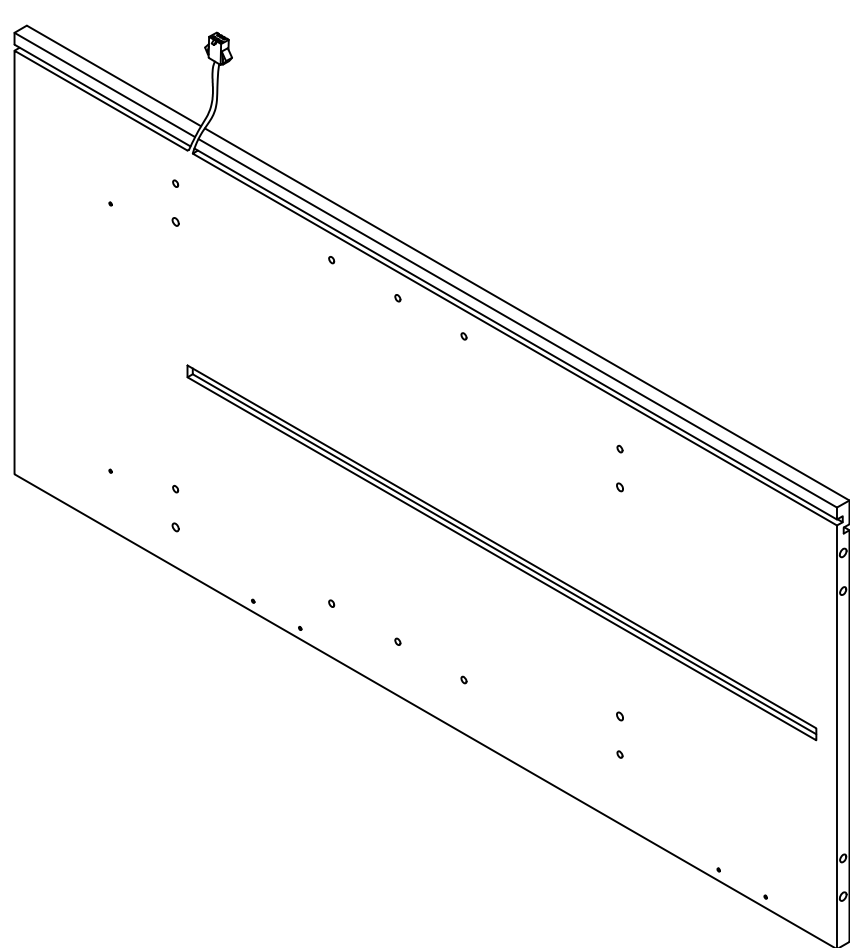


9x1

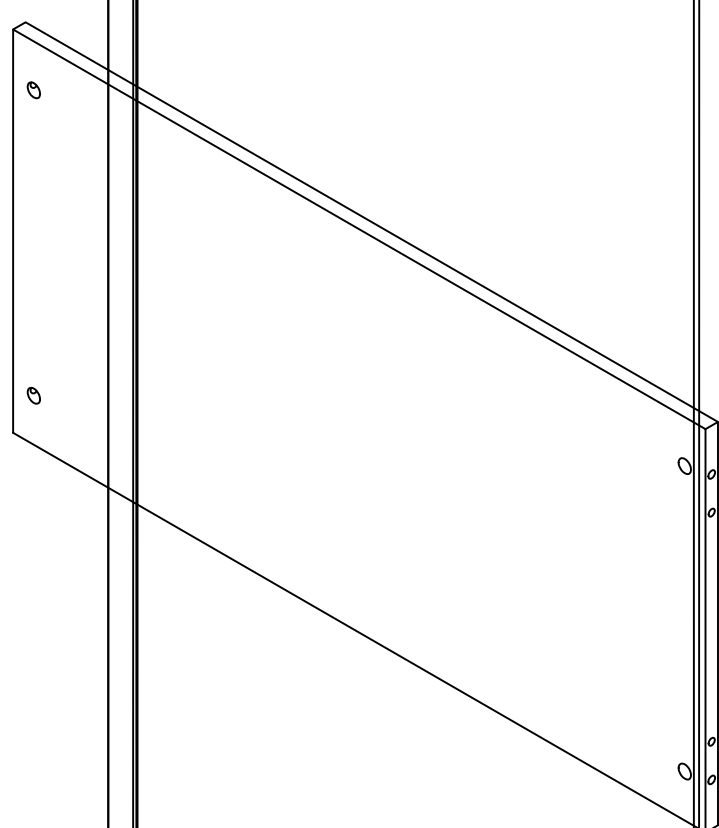


10x1

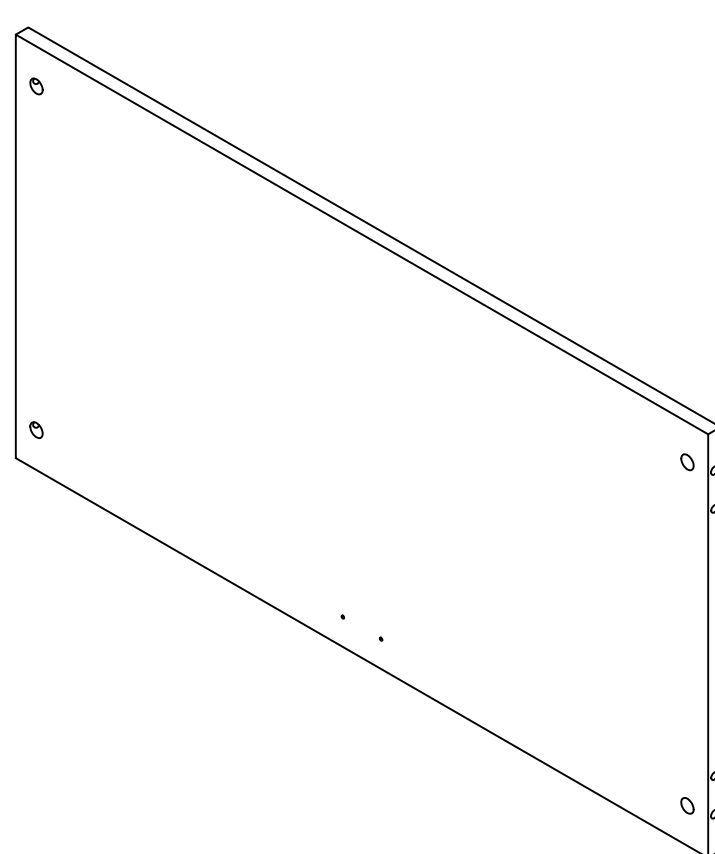


11x1

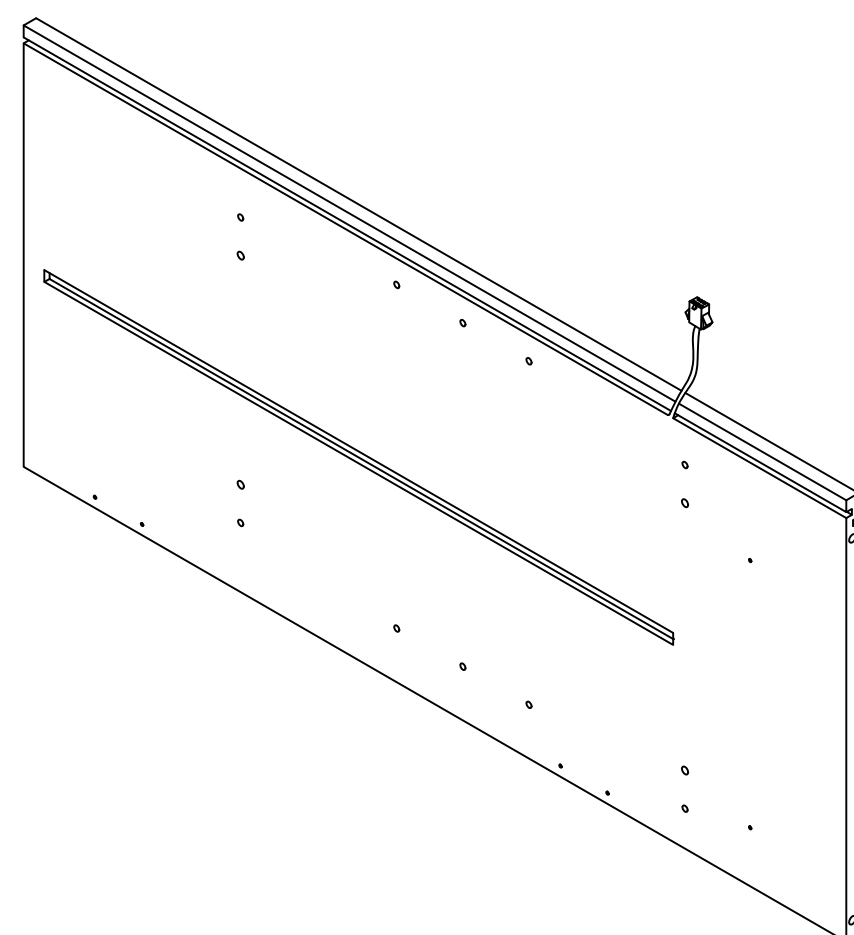


12x1

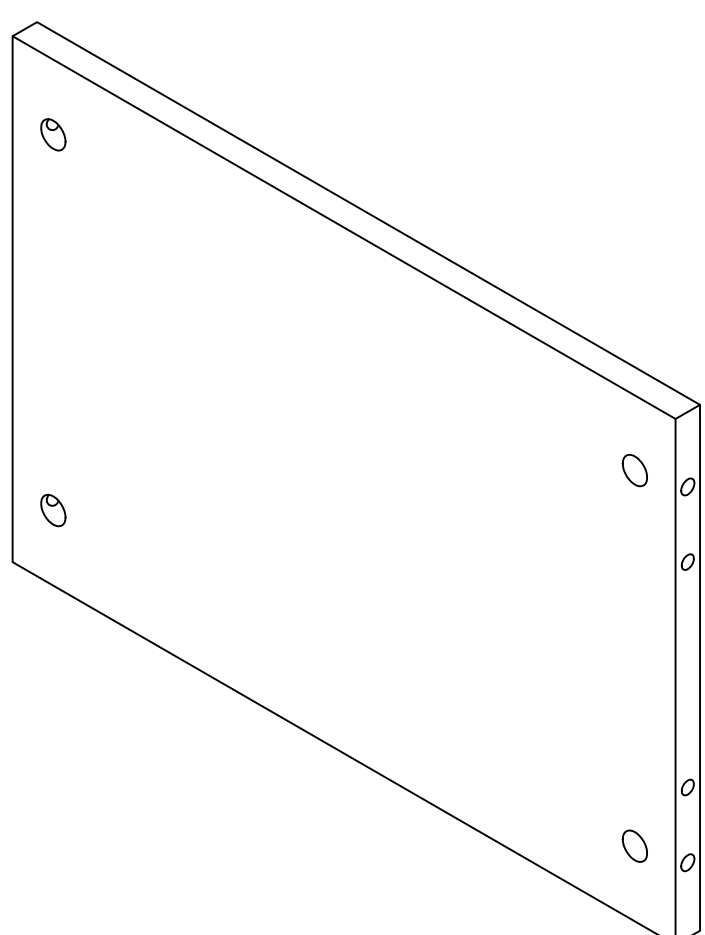


13x4

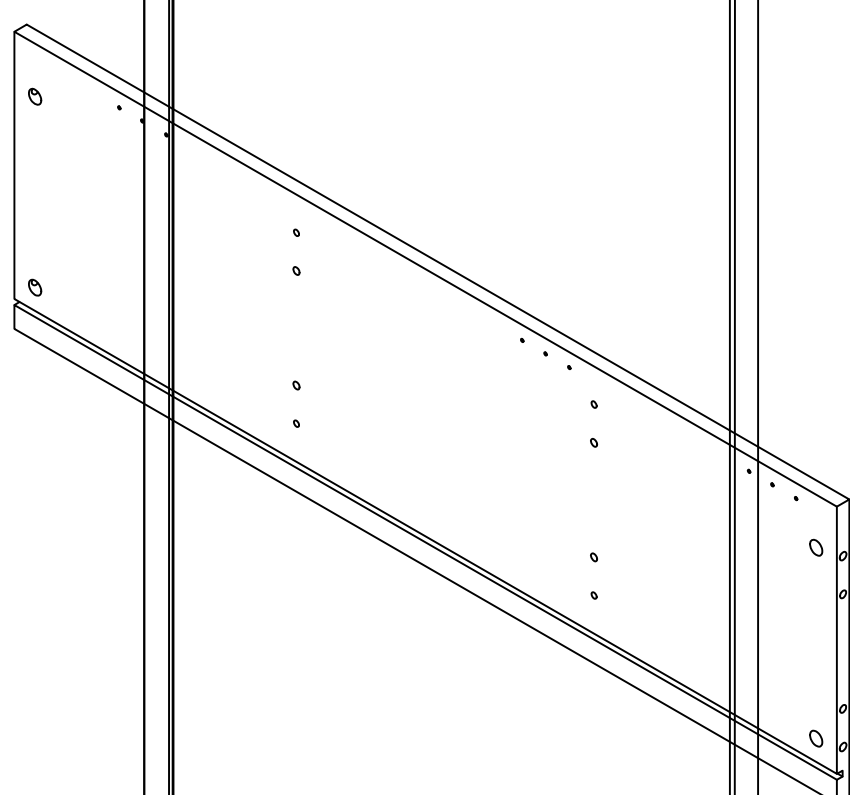


14x1

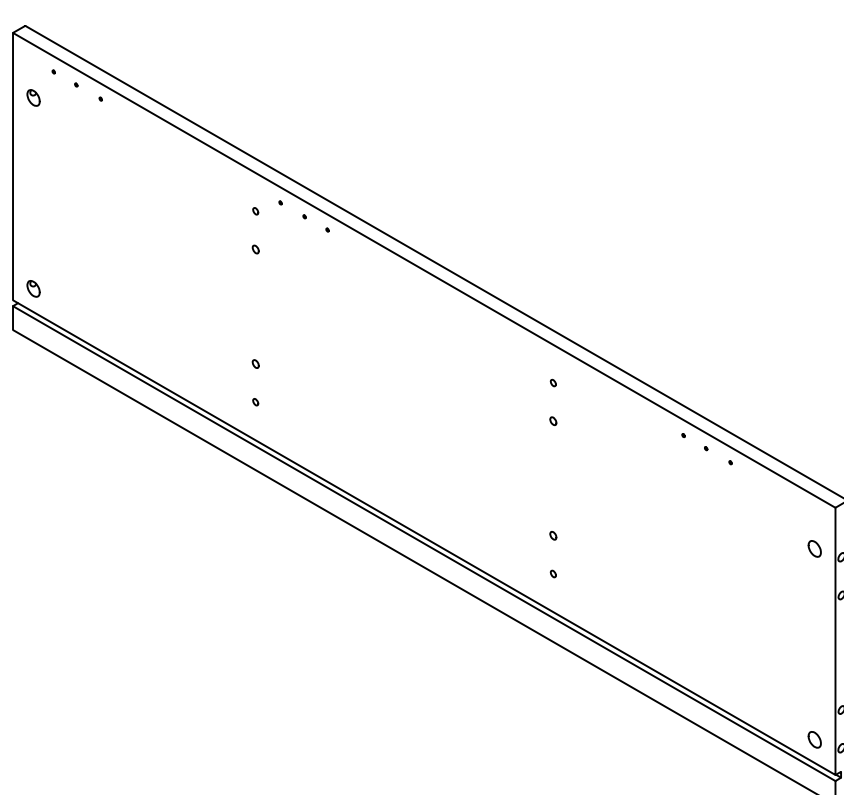


15x1

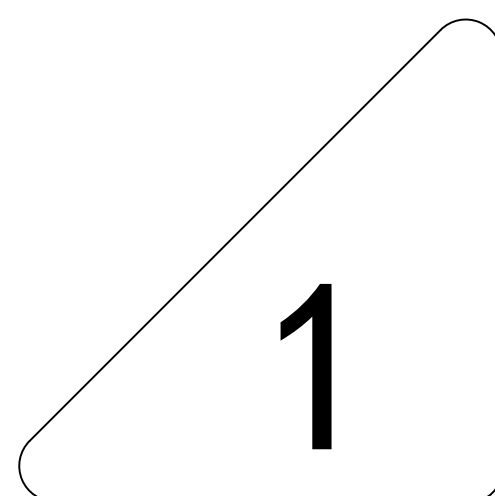


1

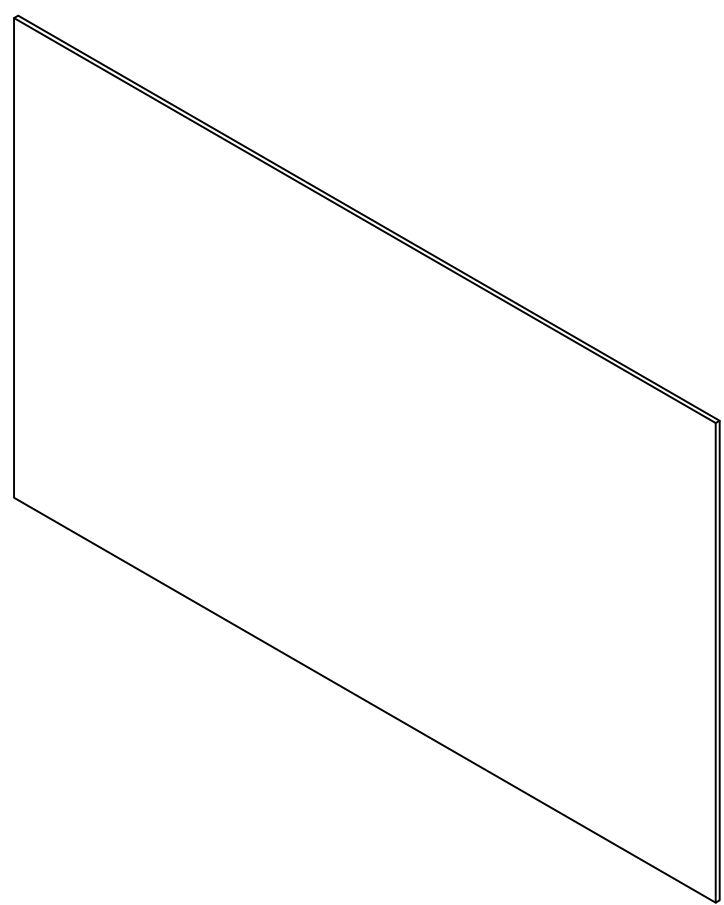


16x1

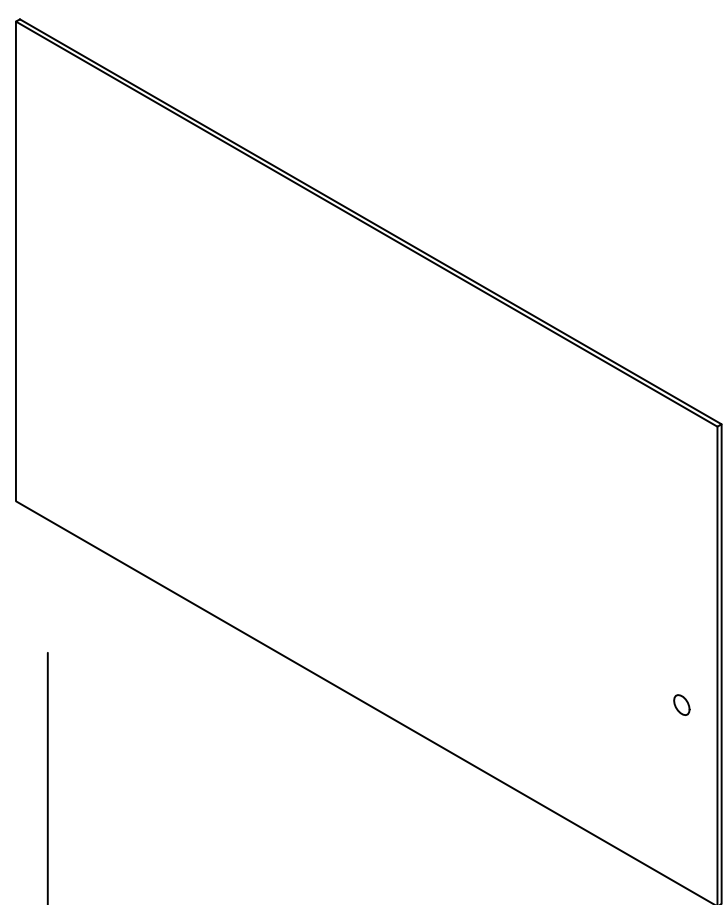


17x1

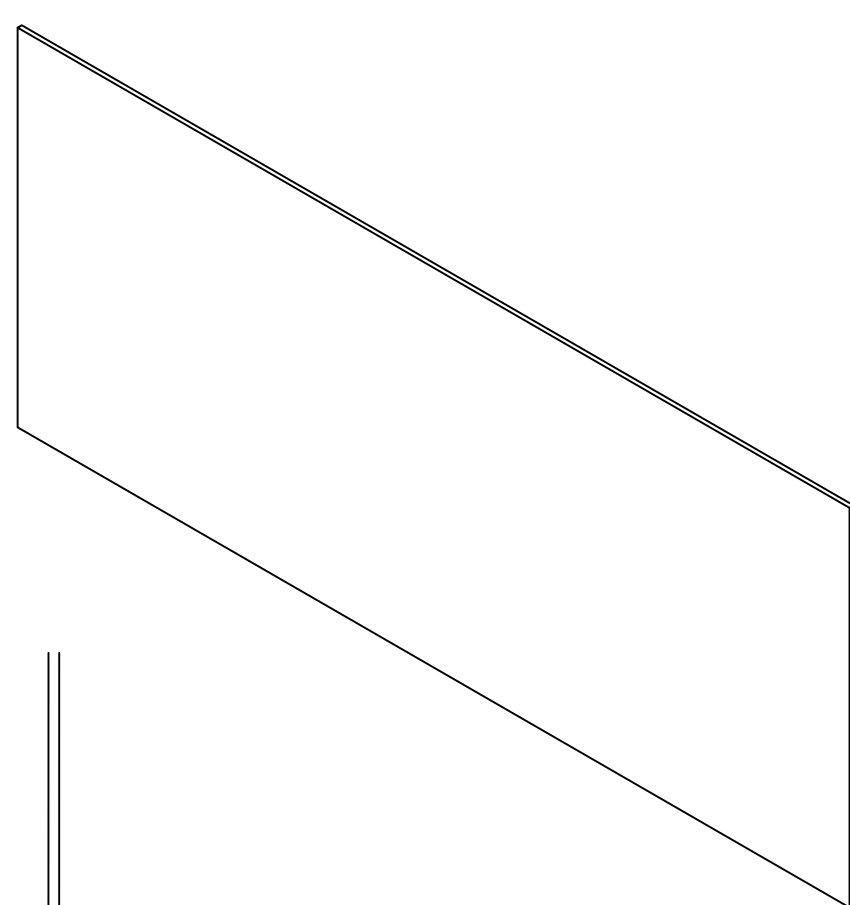


18x1

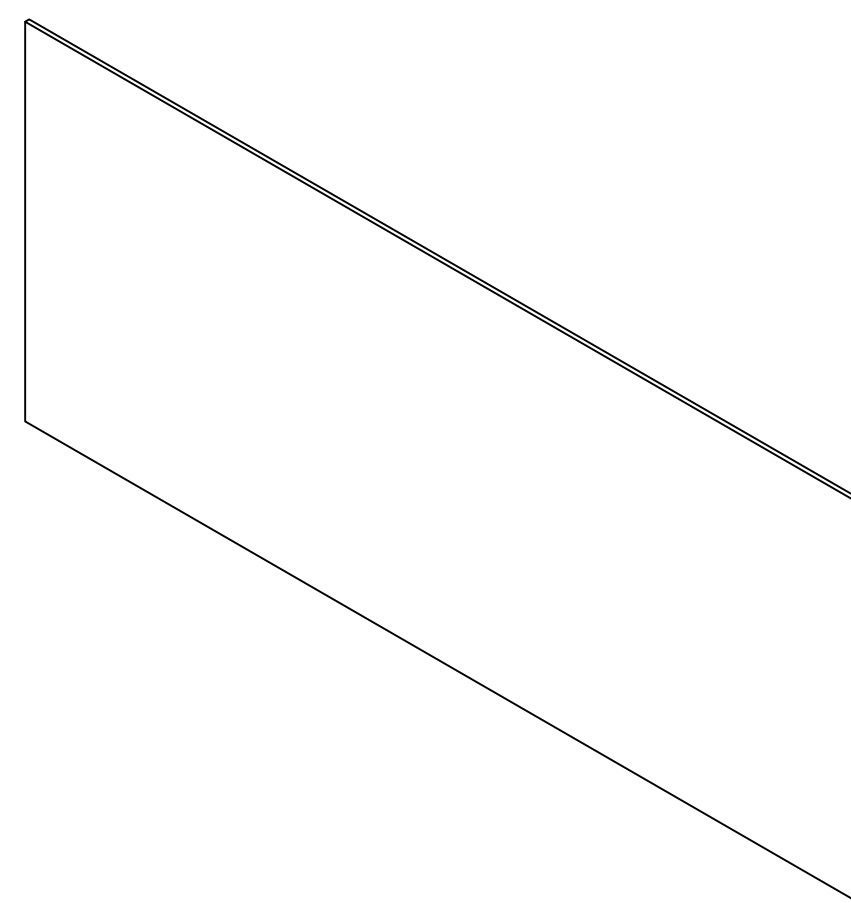


19x1

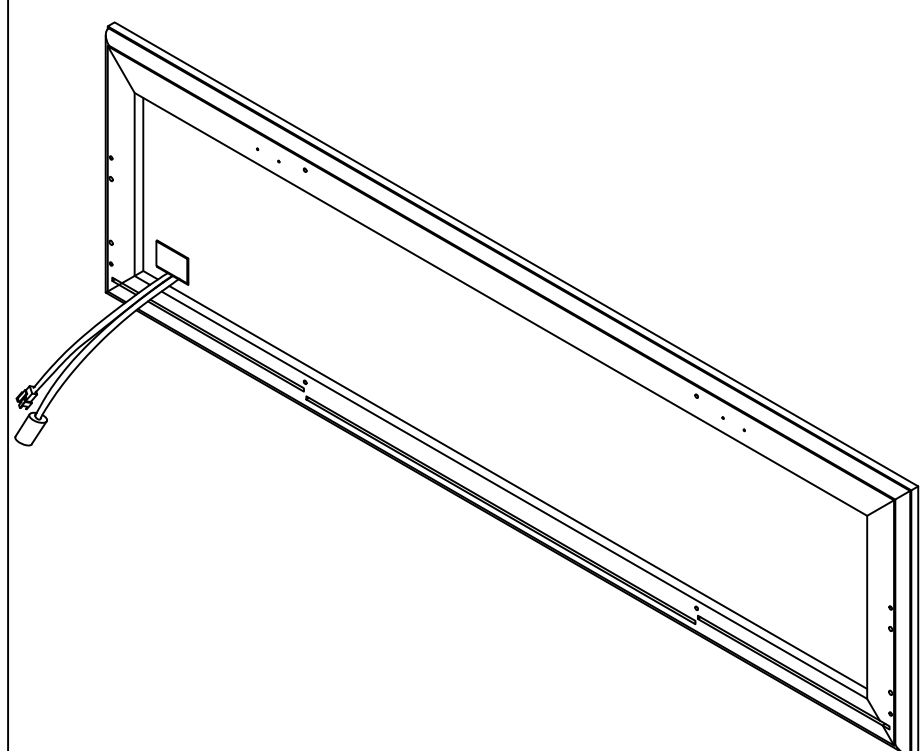


20x1

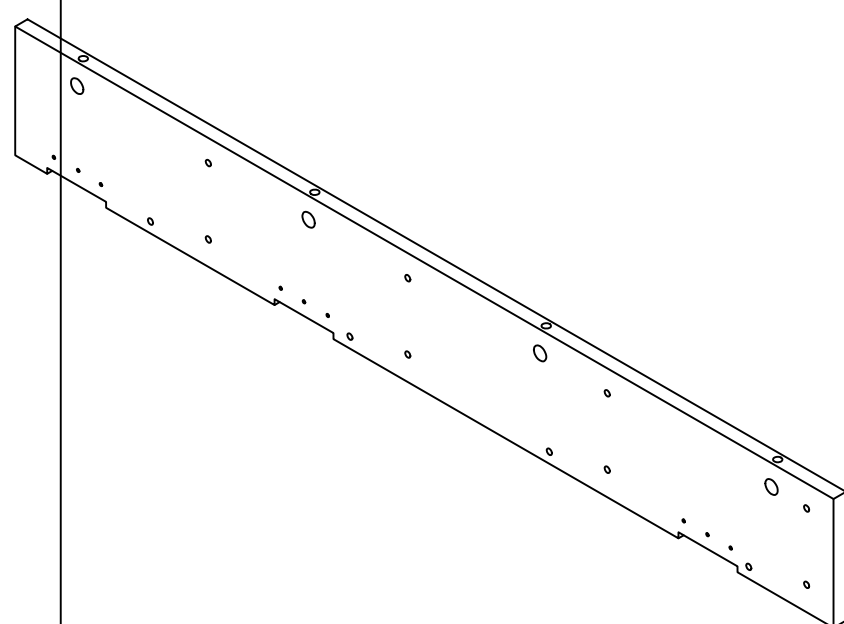


21x1

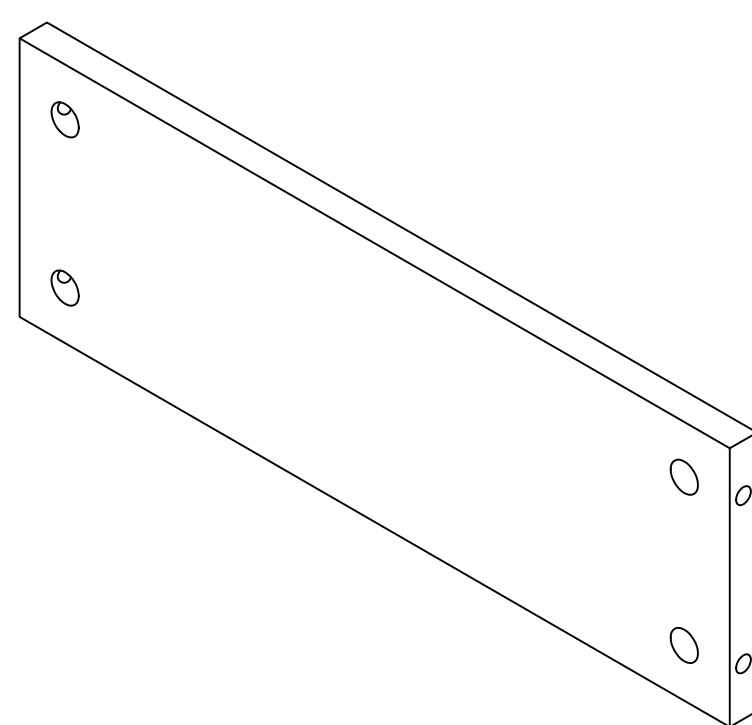


22x8

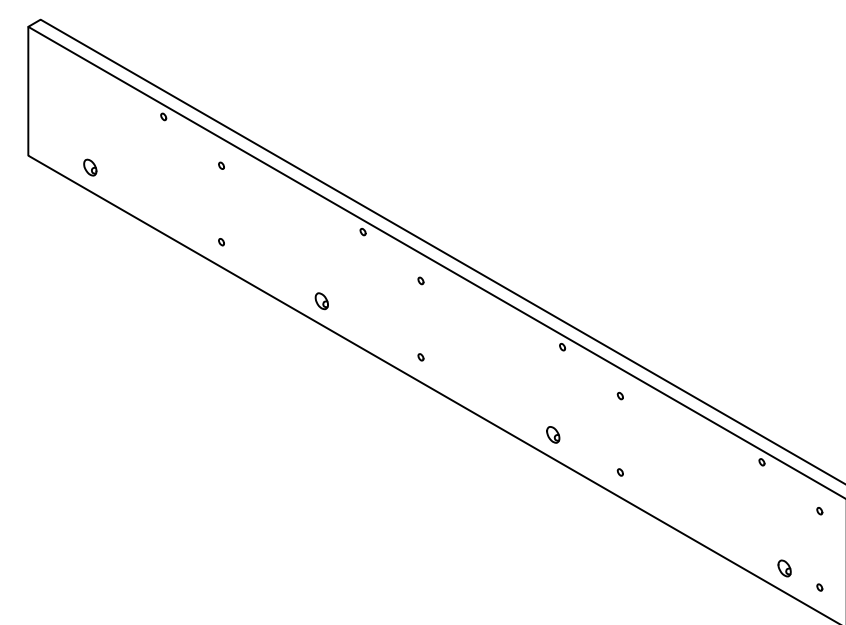


23x1

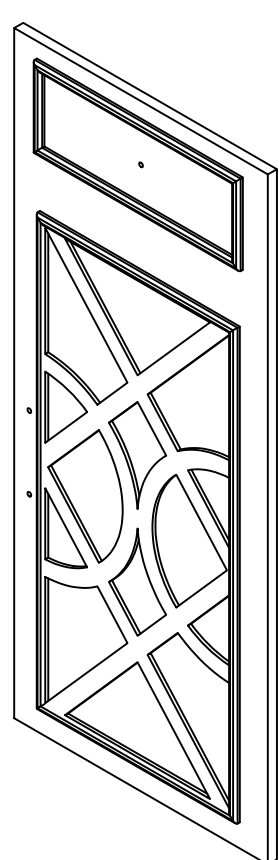


24x1

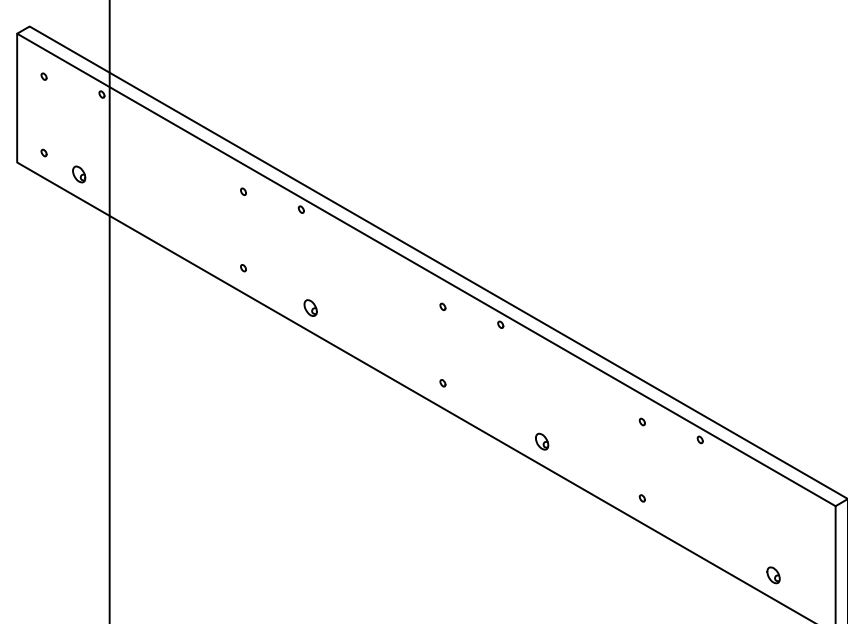


25x1

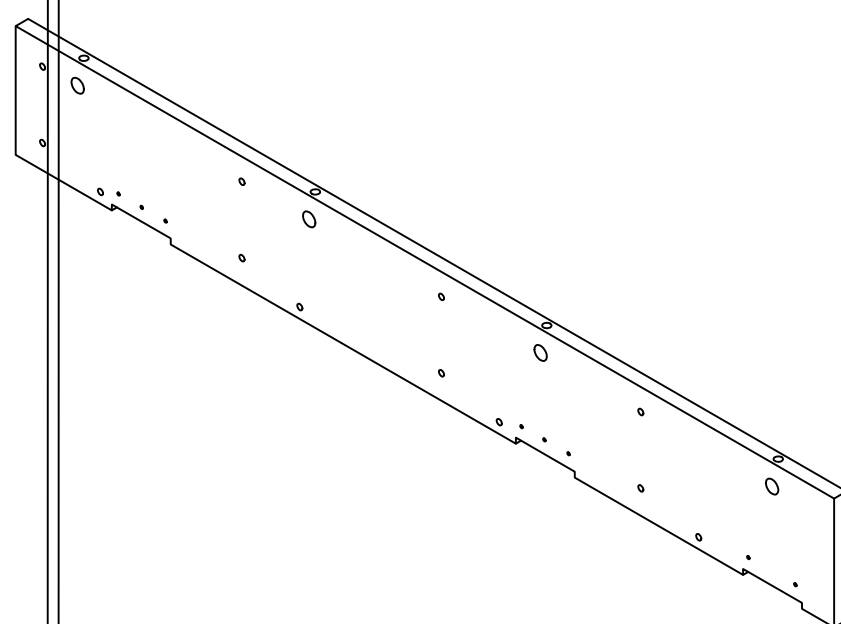


26x1

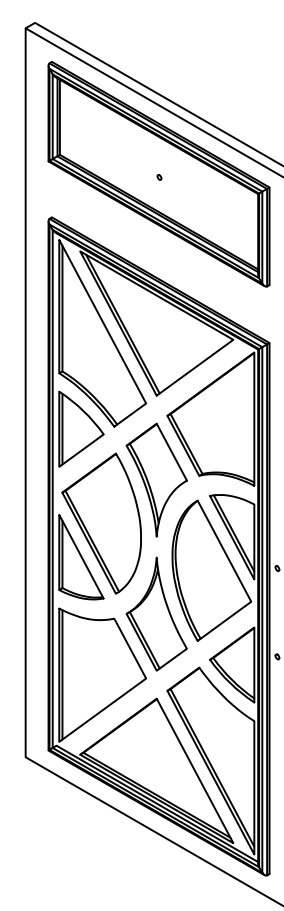


27x1

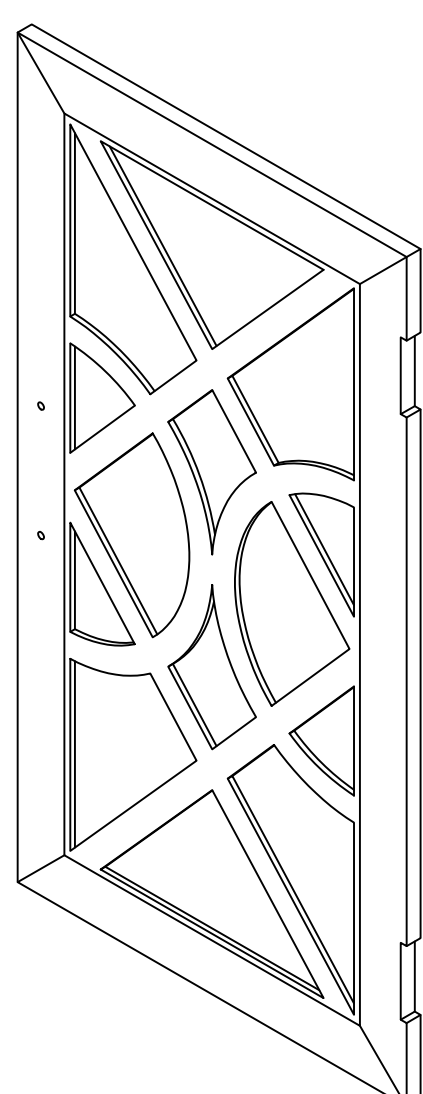

28x2

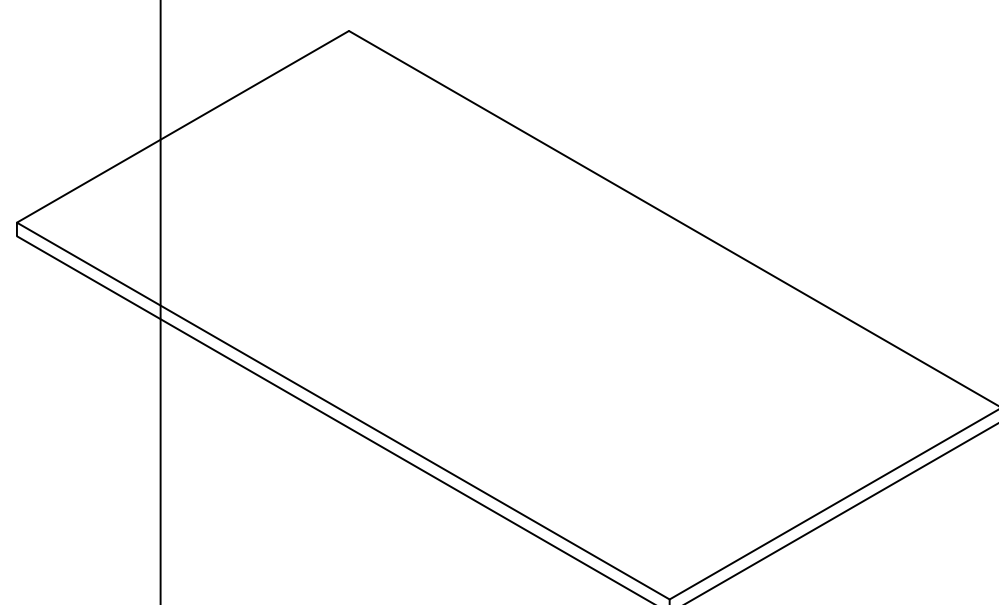


29x1




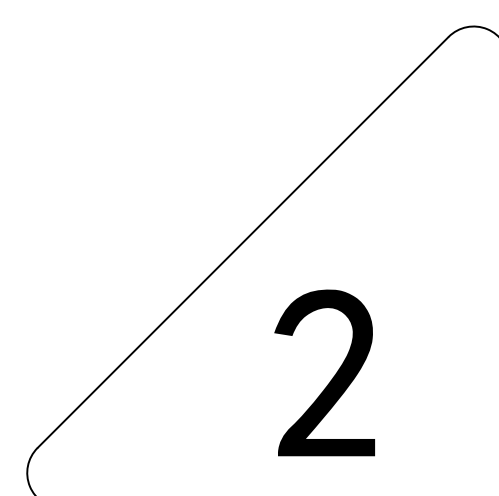



2

Accessories list			
A		Two In One Screw (6x28mm)	116pcs +4pcs
B		Two In One Nut (10x12mm)	116pcs +4pcs
C		Wood Chipping (6x30mm)	36pcs +2pcs
D		Screw & Guide(29cm) (3x12mm)	2pcs 10pcs +2pcs
E		Handle & Screw (4x16mm)	4pcs 4pcs +2pcs
F		Door Magnet & Screw (3x12mm)	4pcs 8pcs +2pcs
G		Laminate support nail	4pcs +1pcs
H		Hinge & Screw (B3.5x12mm)	6pcs 36pcs +4pcs
I		Iron pillar (4.5x324mm)	8pcs
J		Iron Sheet & Screw (3x10mm)	6pcs 12pcs +2pcs
K		Handle & Screw (4x16mm)	4pcs 8pcs +2pcs
L		Hinge & Screw (B3.5x12mm)	4pcs 24pcs +2pcs
M		Power cord extension cord	1pcs
N		Wire Clamp	3pcs +1pcs
O		Fixing clip & screw (3x16mm)	14pcs +2pcs
P		Non-slip pads	5pcs +1pcs
Q		Anti-tipping tape Screw (3.5x12mm) Gasket	1pcs
R		Countersunk head tapping Screw (4x45mm)	1pcs
		AC/DC Adapter(12V 2.0A)	1pcs
1pcs Double-head screwdriver, use as required 3			

97041 Product Explosion diagram

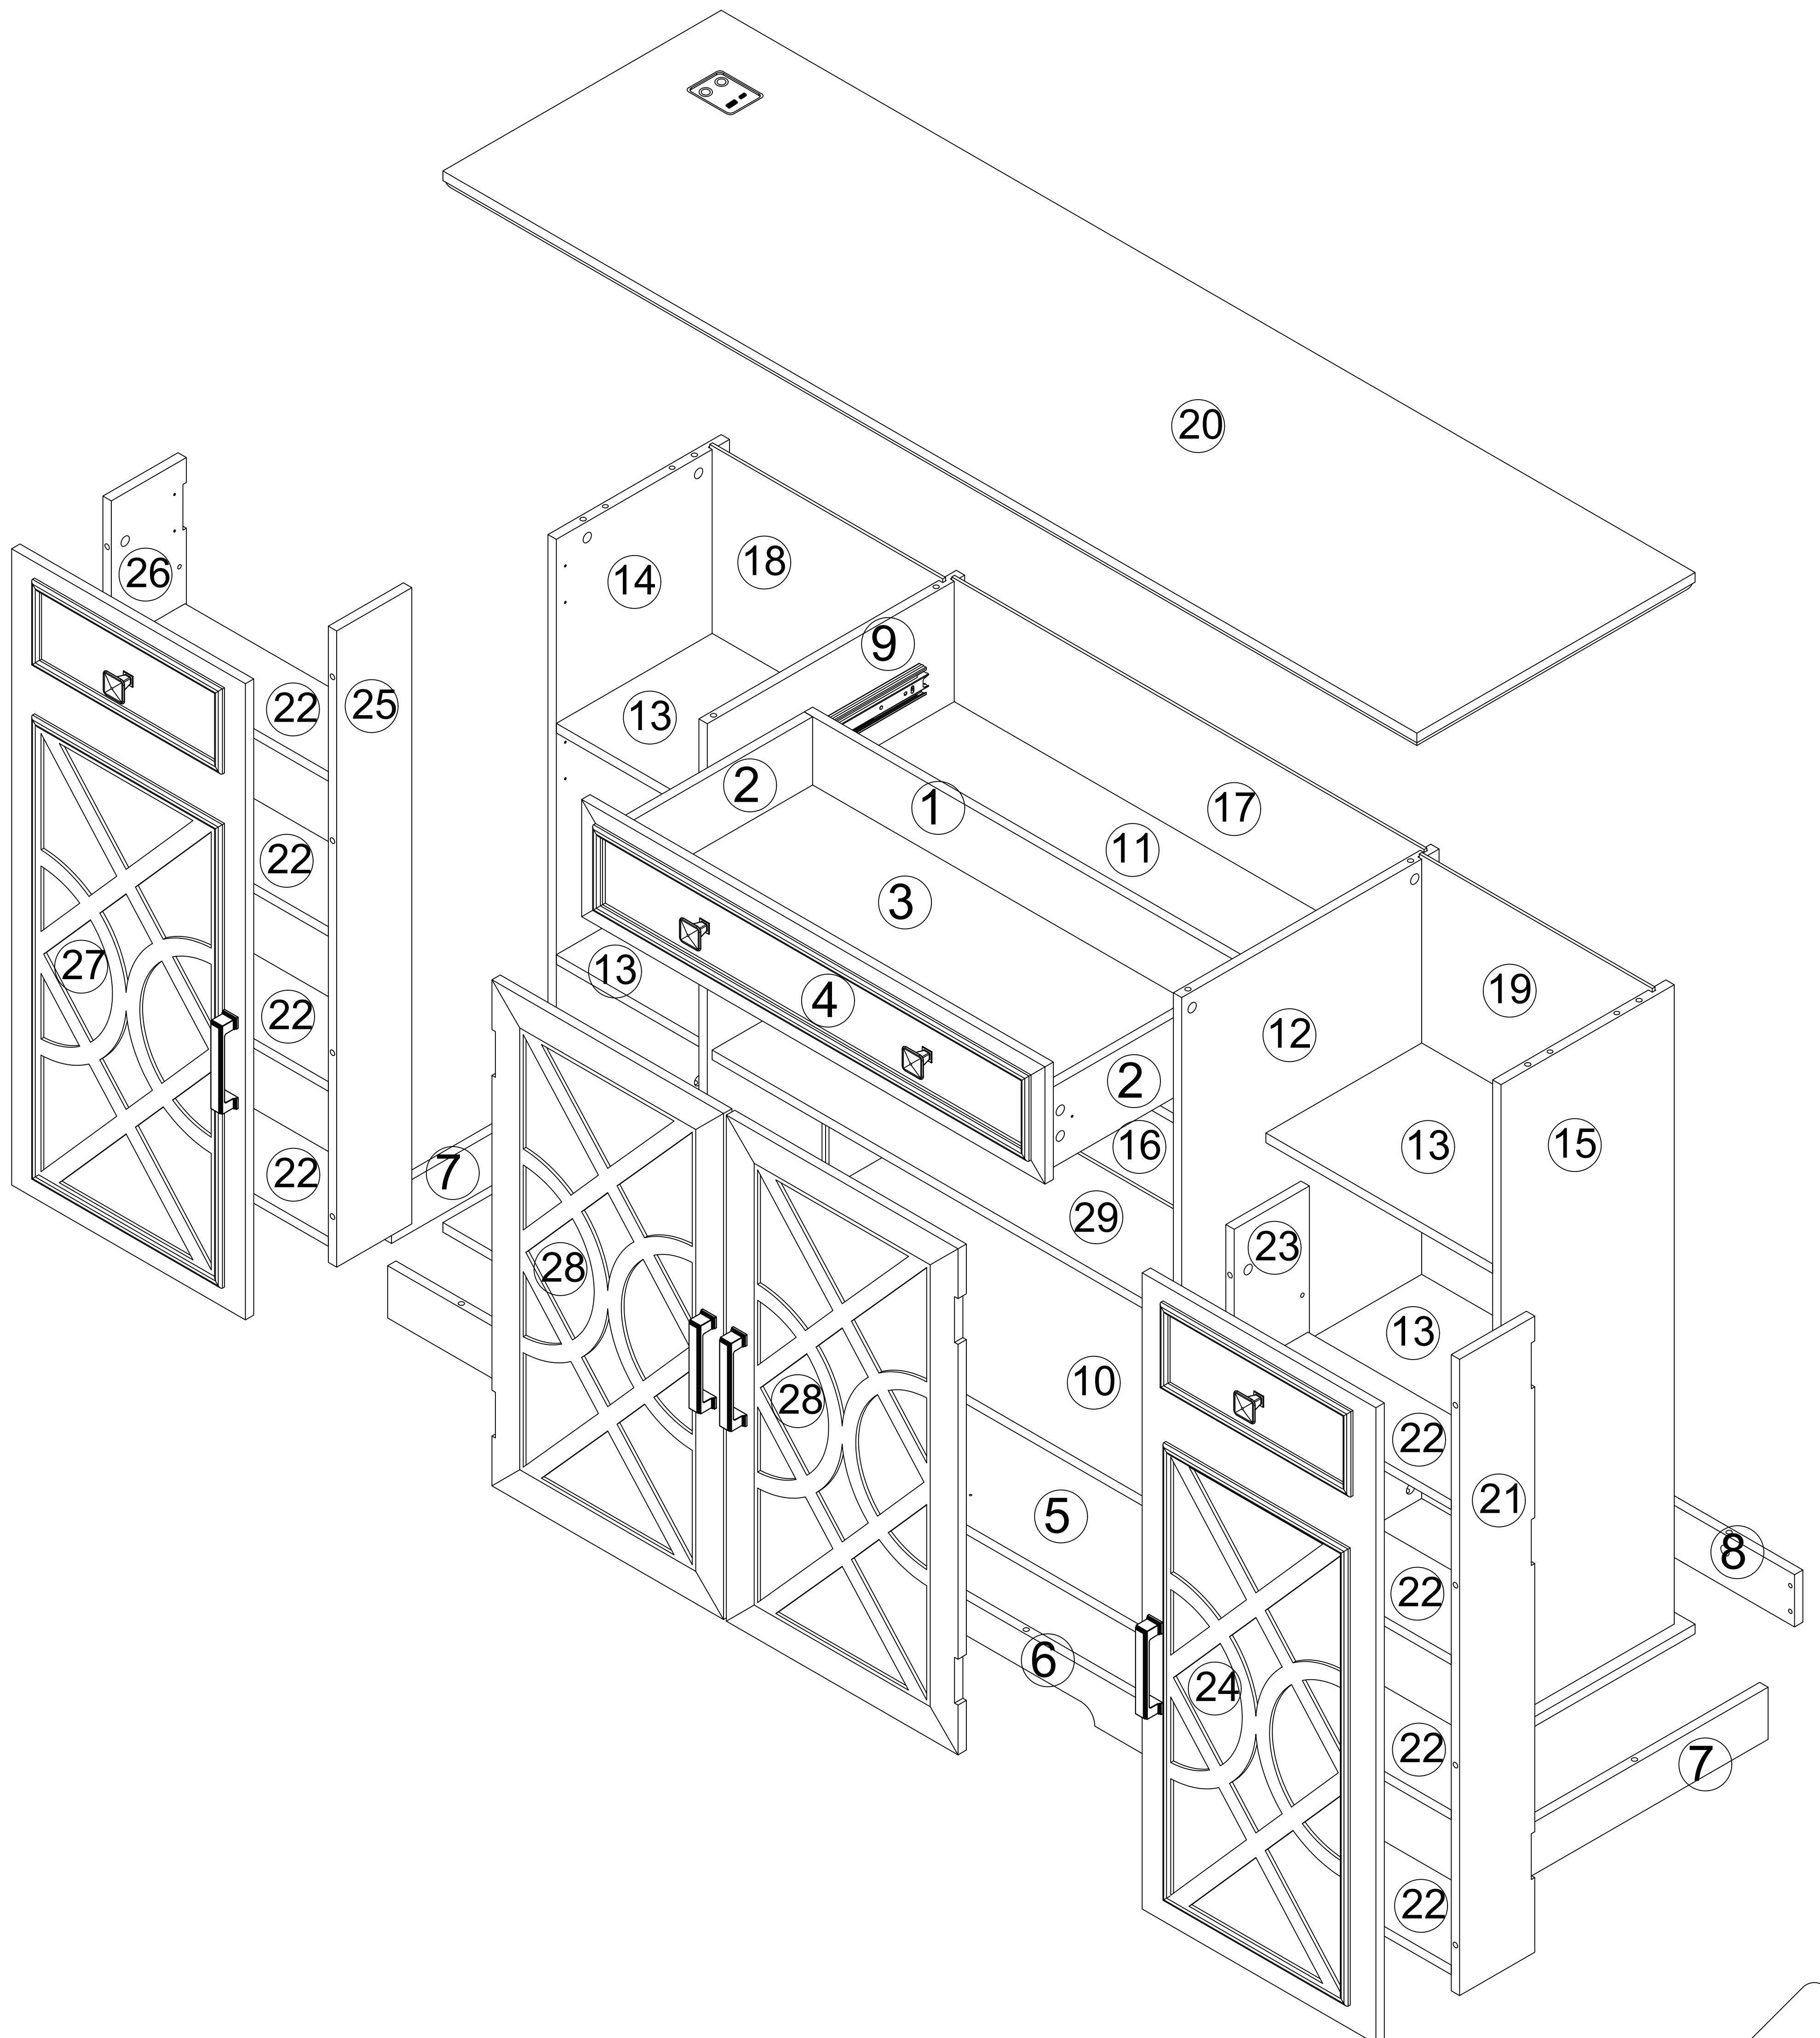


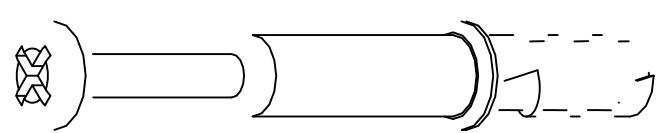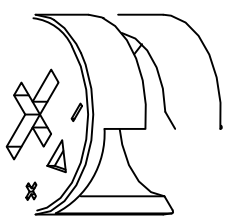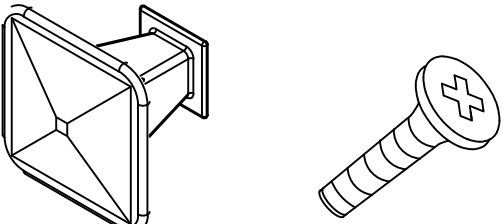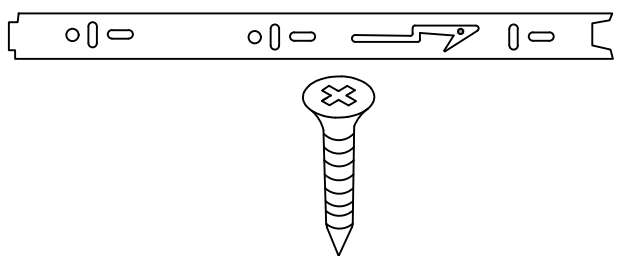A		8pcs	B		8pcs	E		2pcs 2pcs
D		2pcs 4pcs						

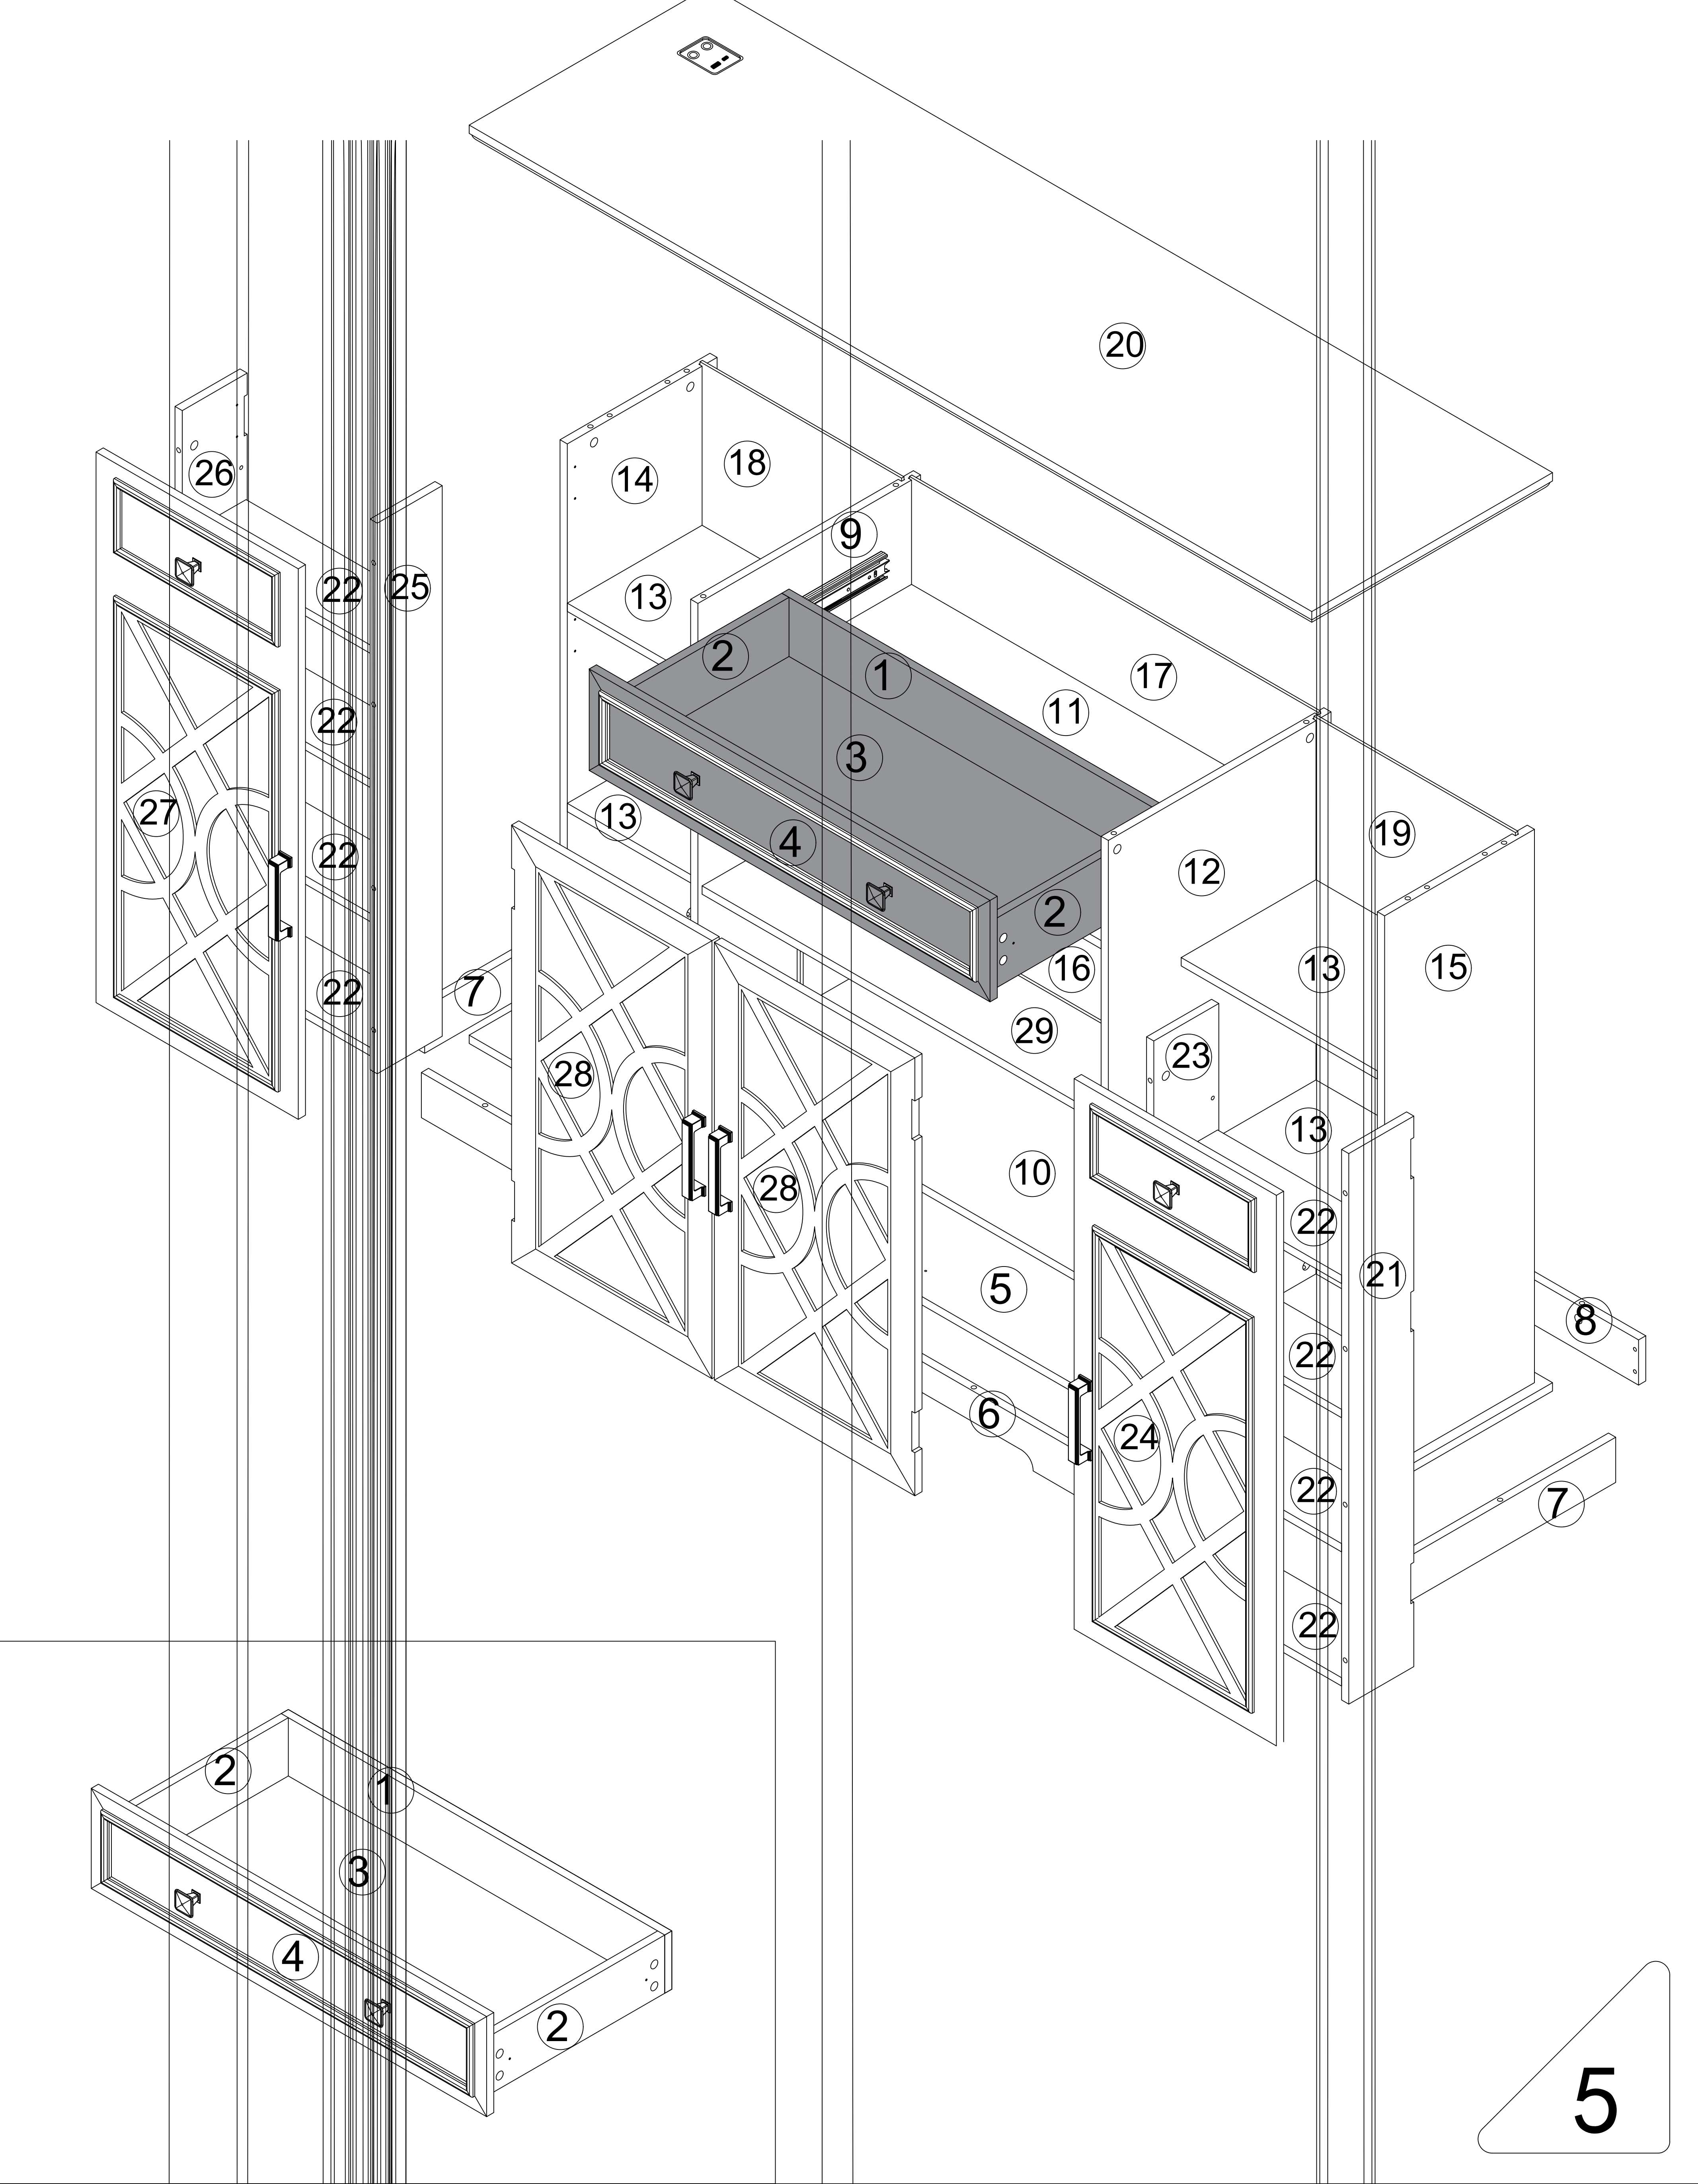


Use parts A and B


Step1

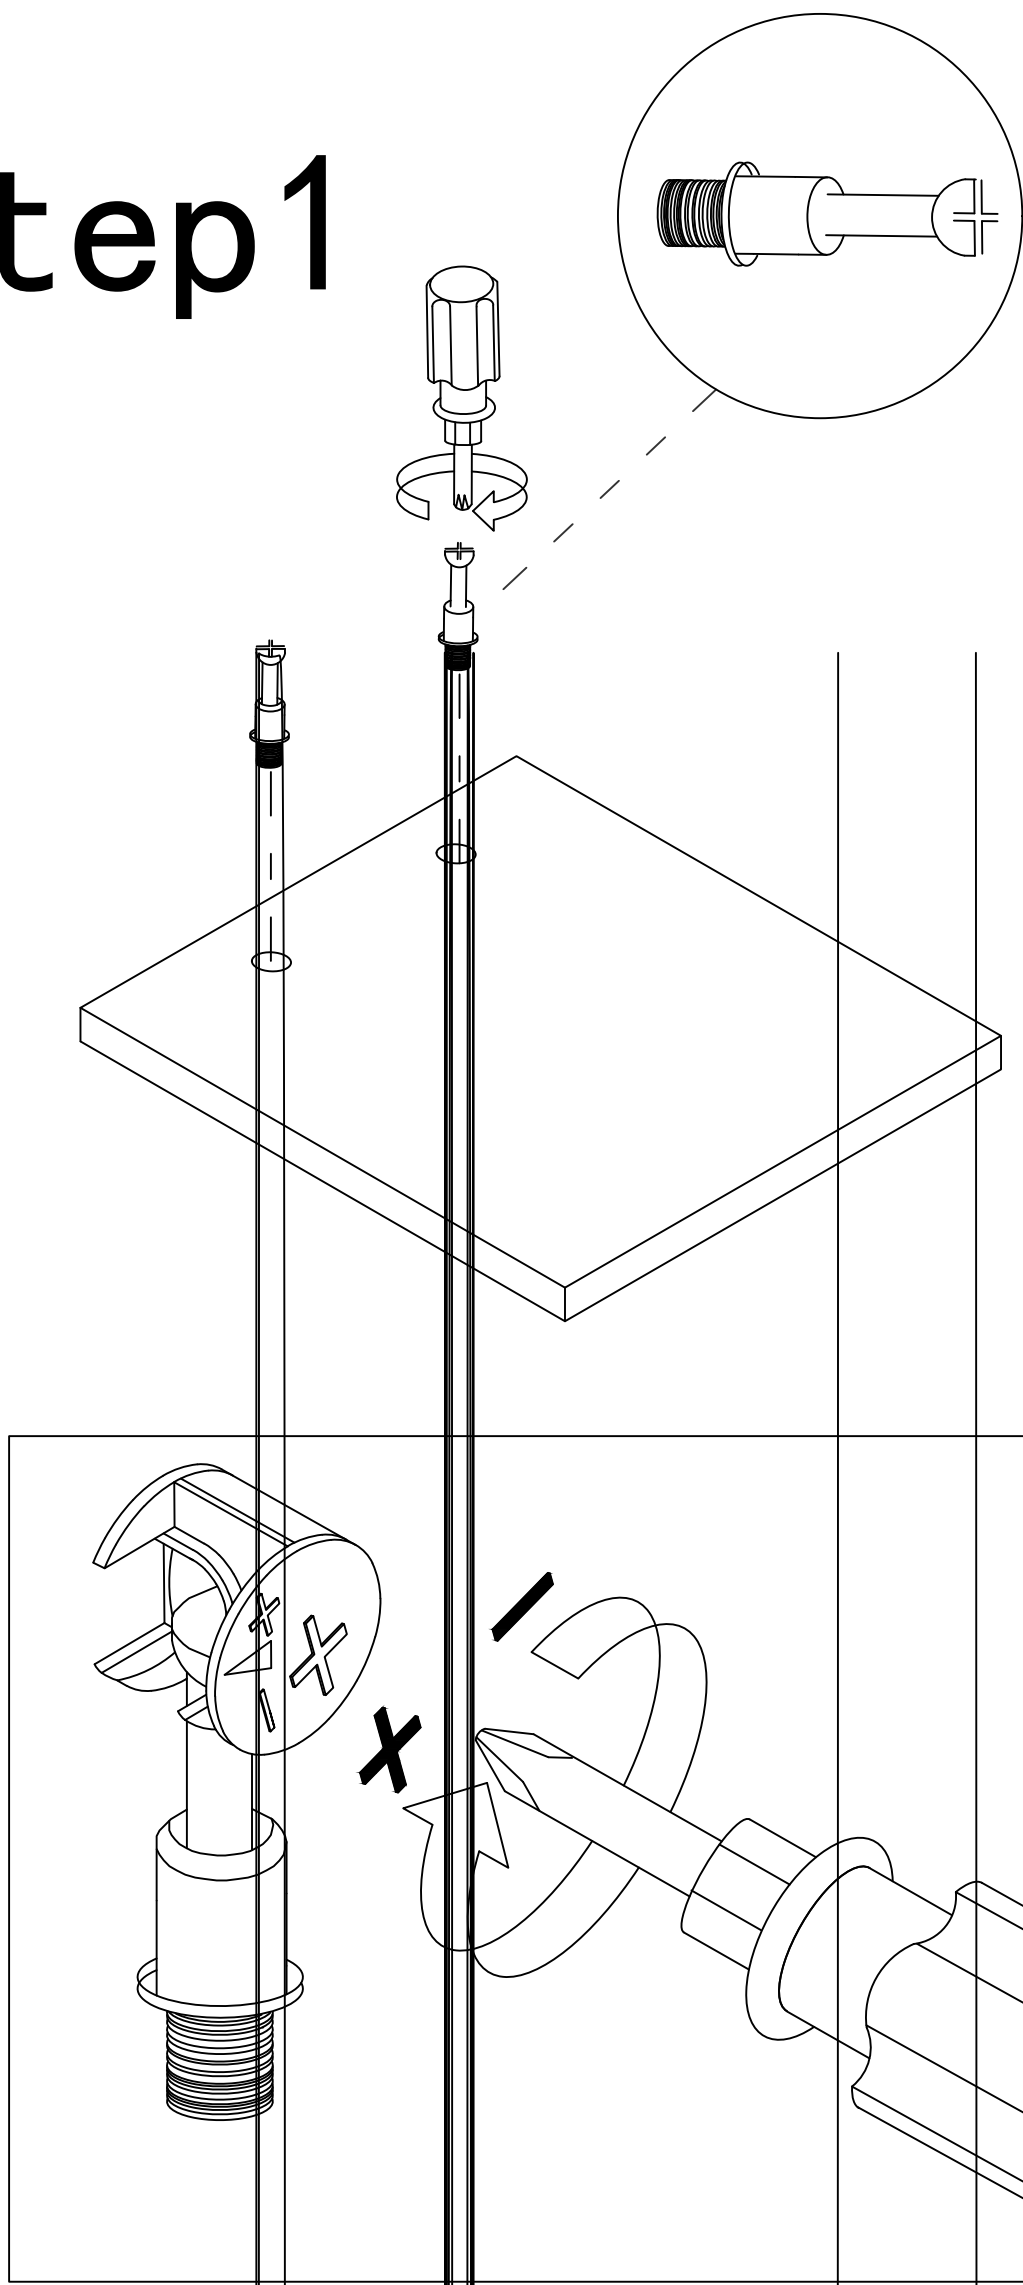

Step2


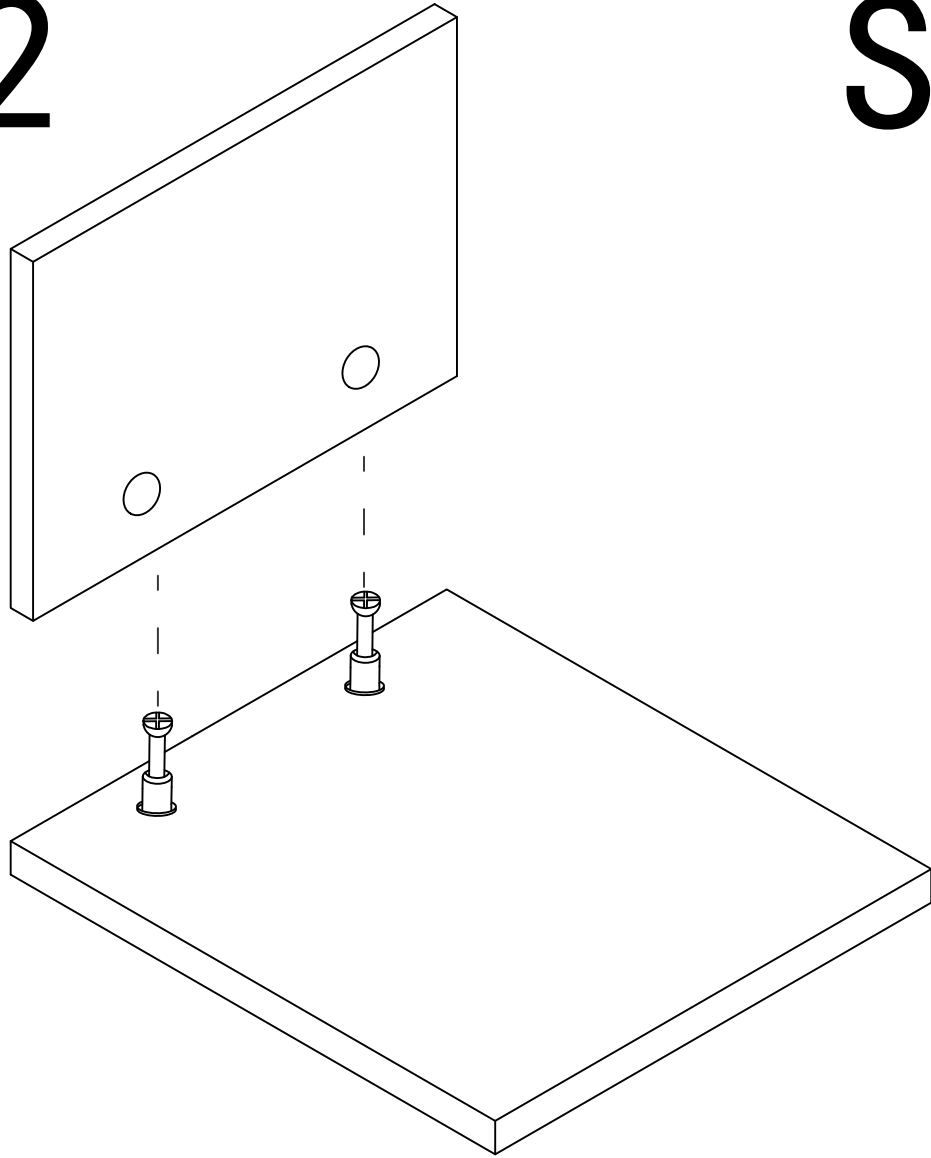


Step3

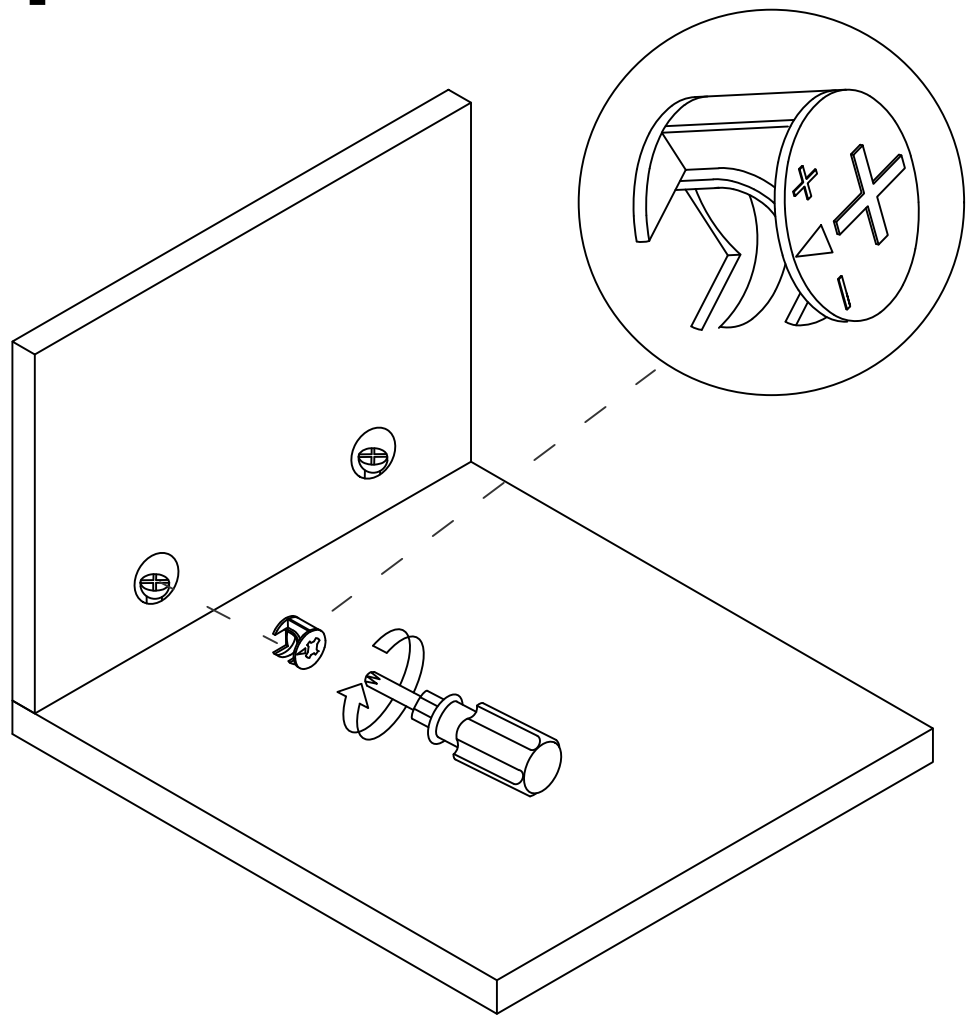

Use a screwdriver to lock in the direction of the "+" sign Disassemble along the direction of "-" sign

Step 1

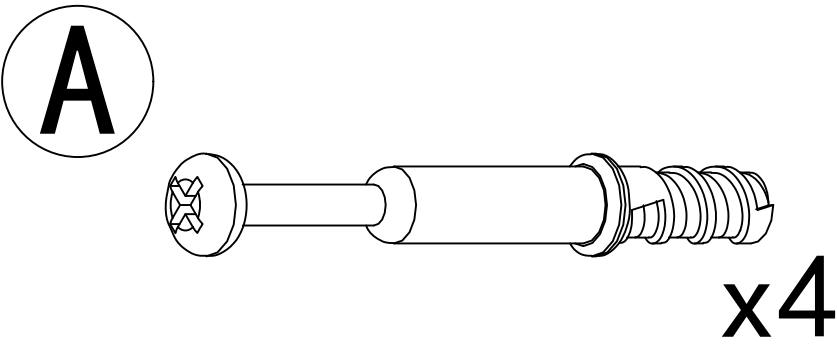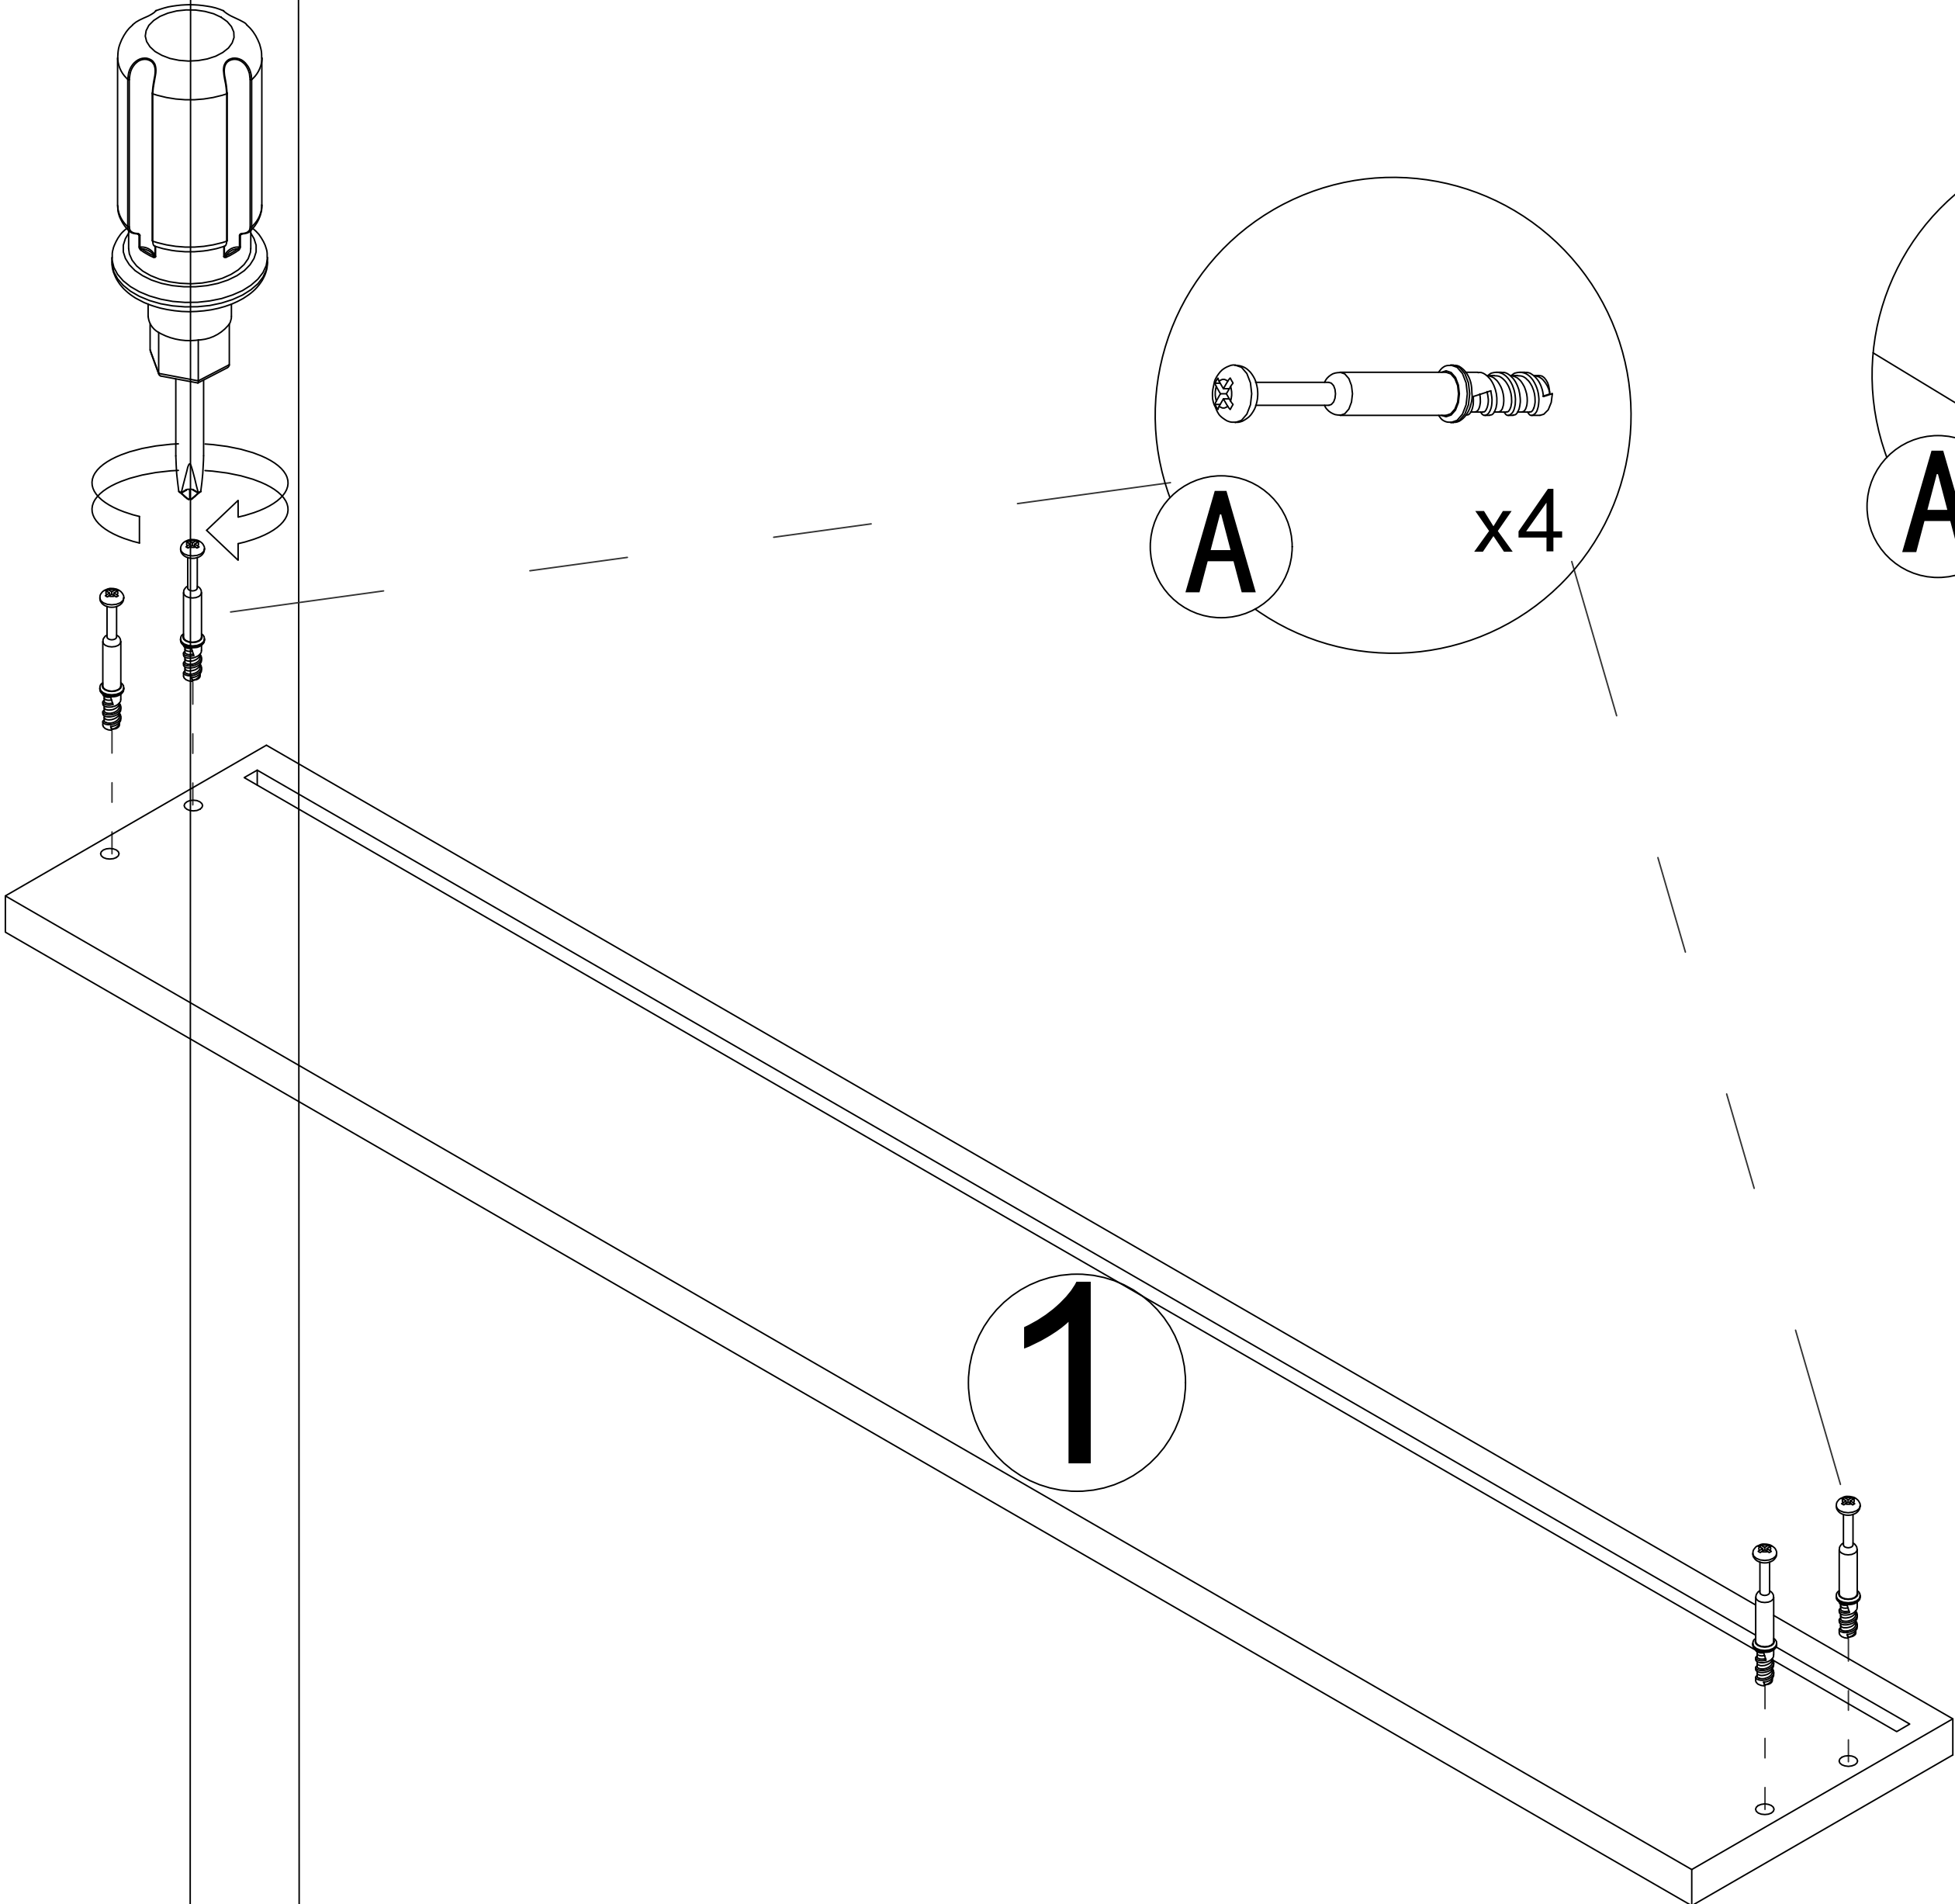

A x4


A

1


6

Step 2


B

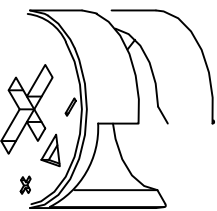

x4

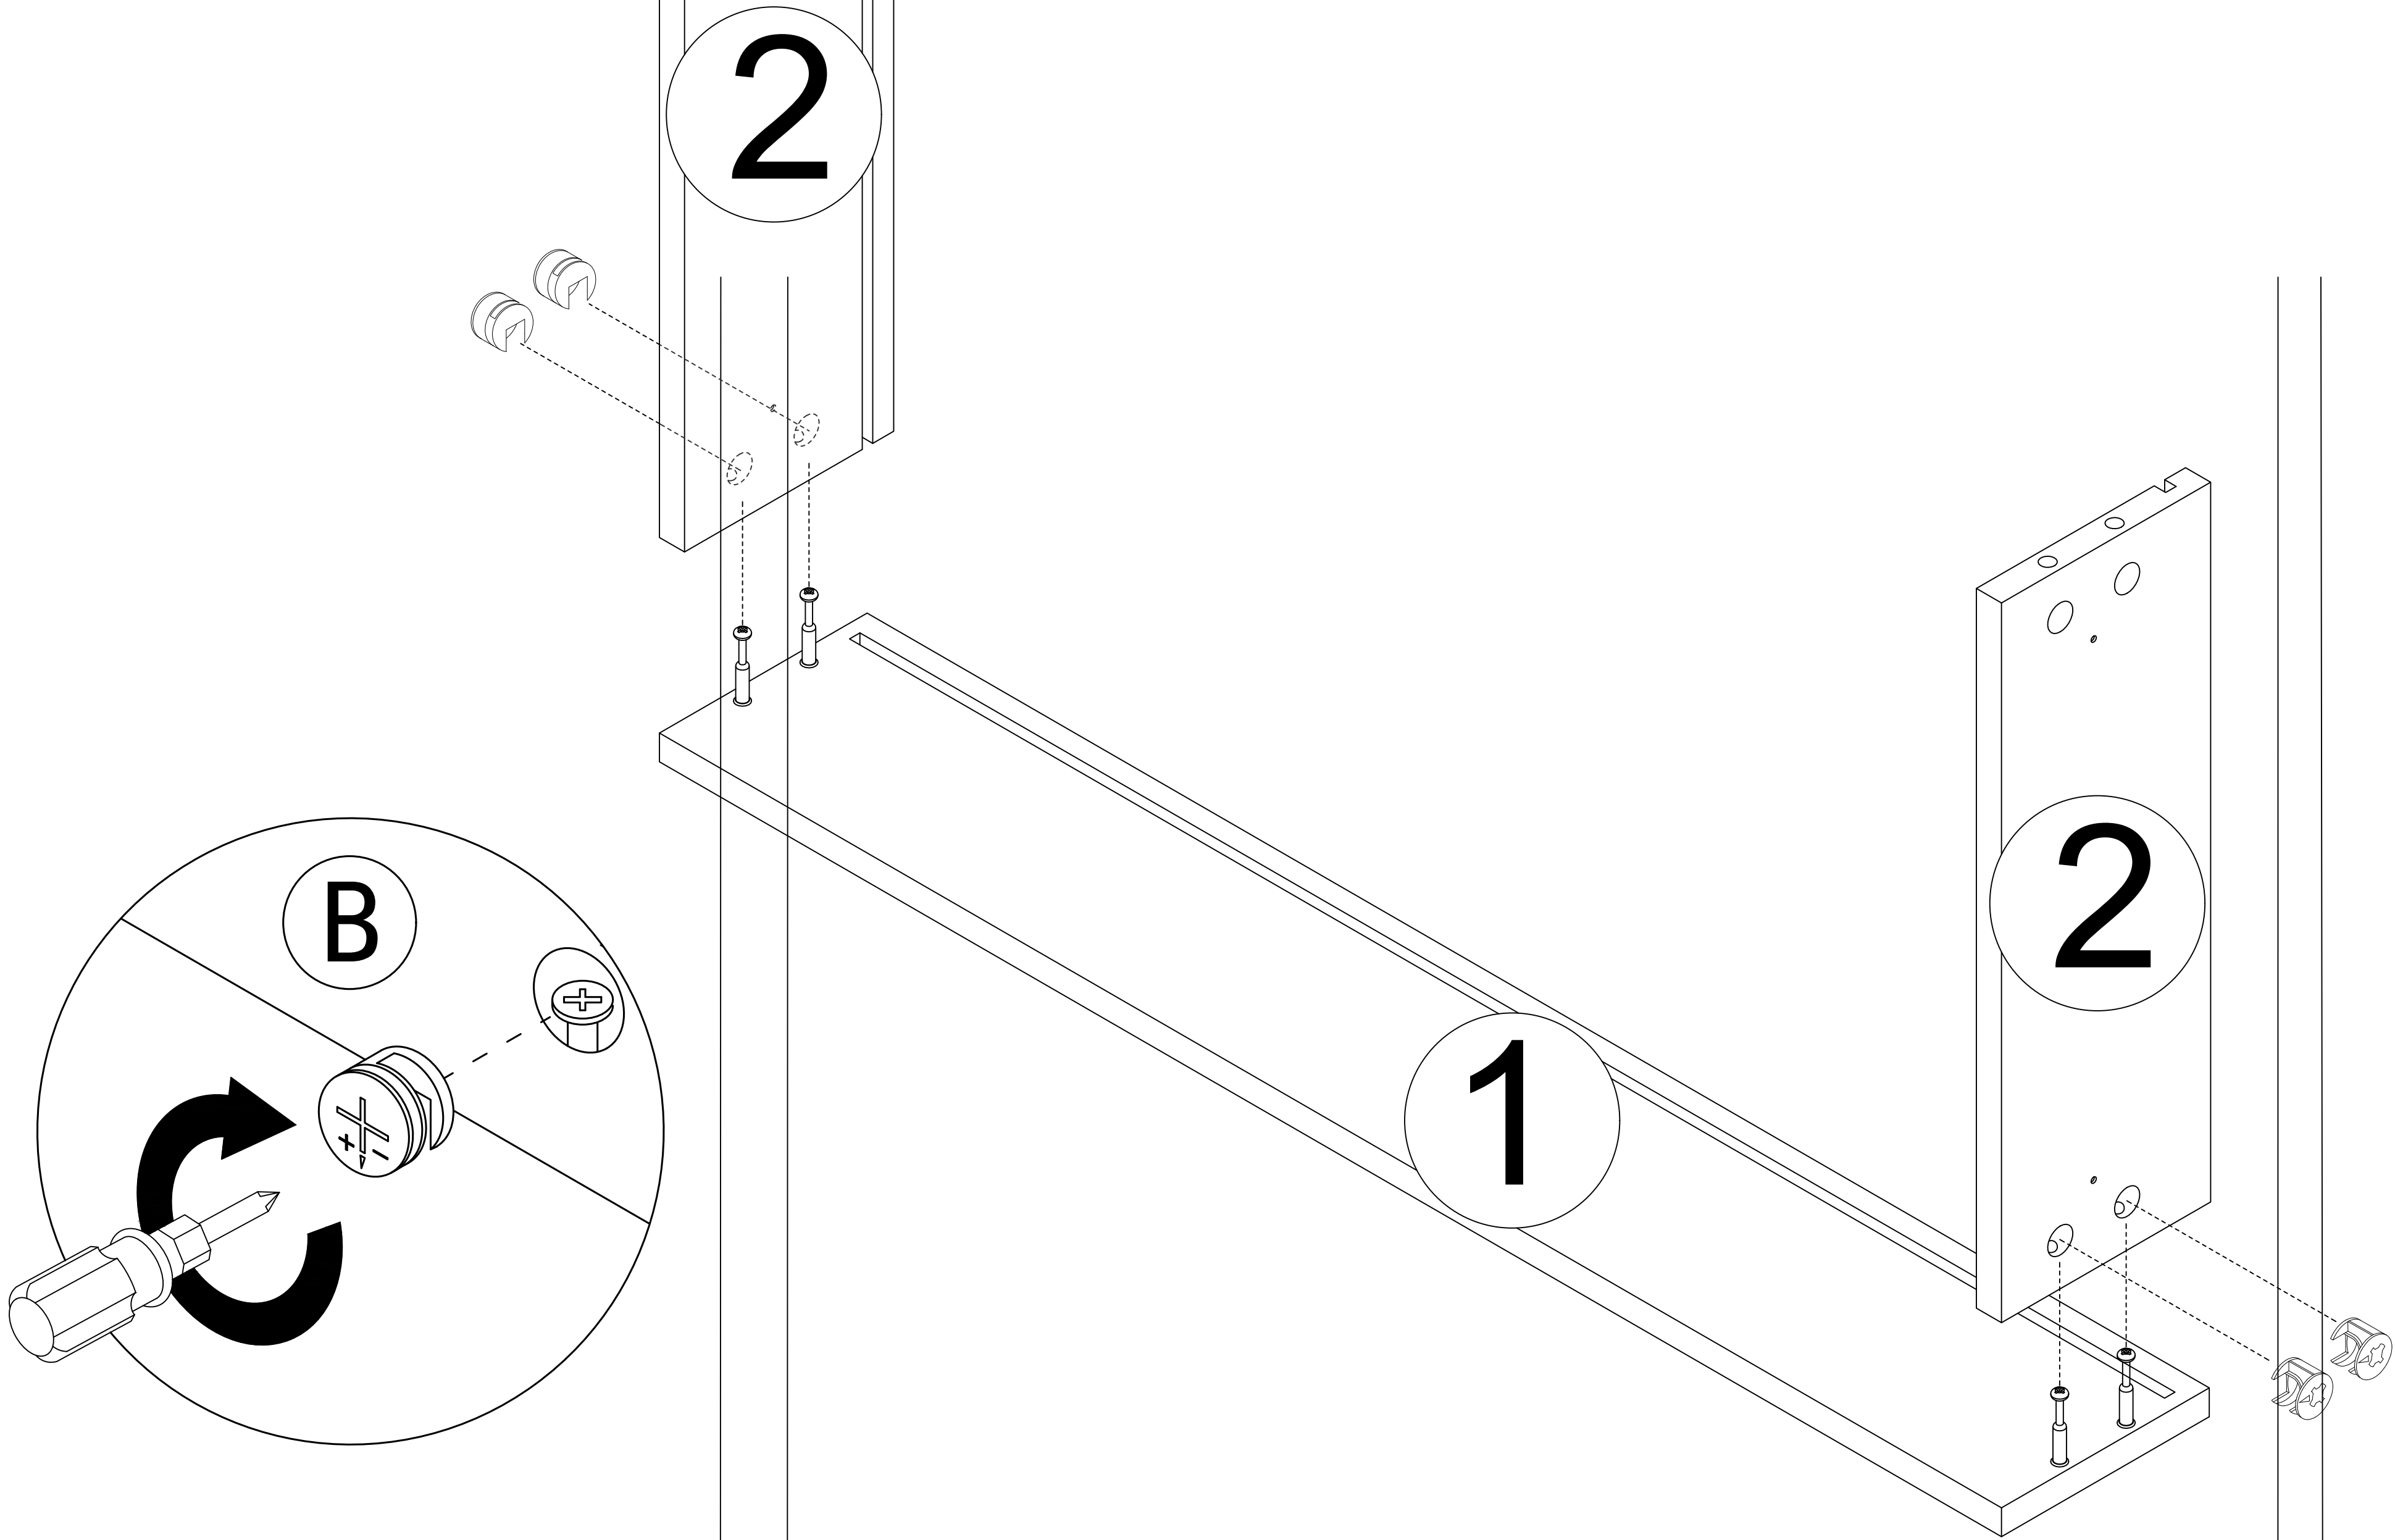


Step 3

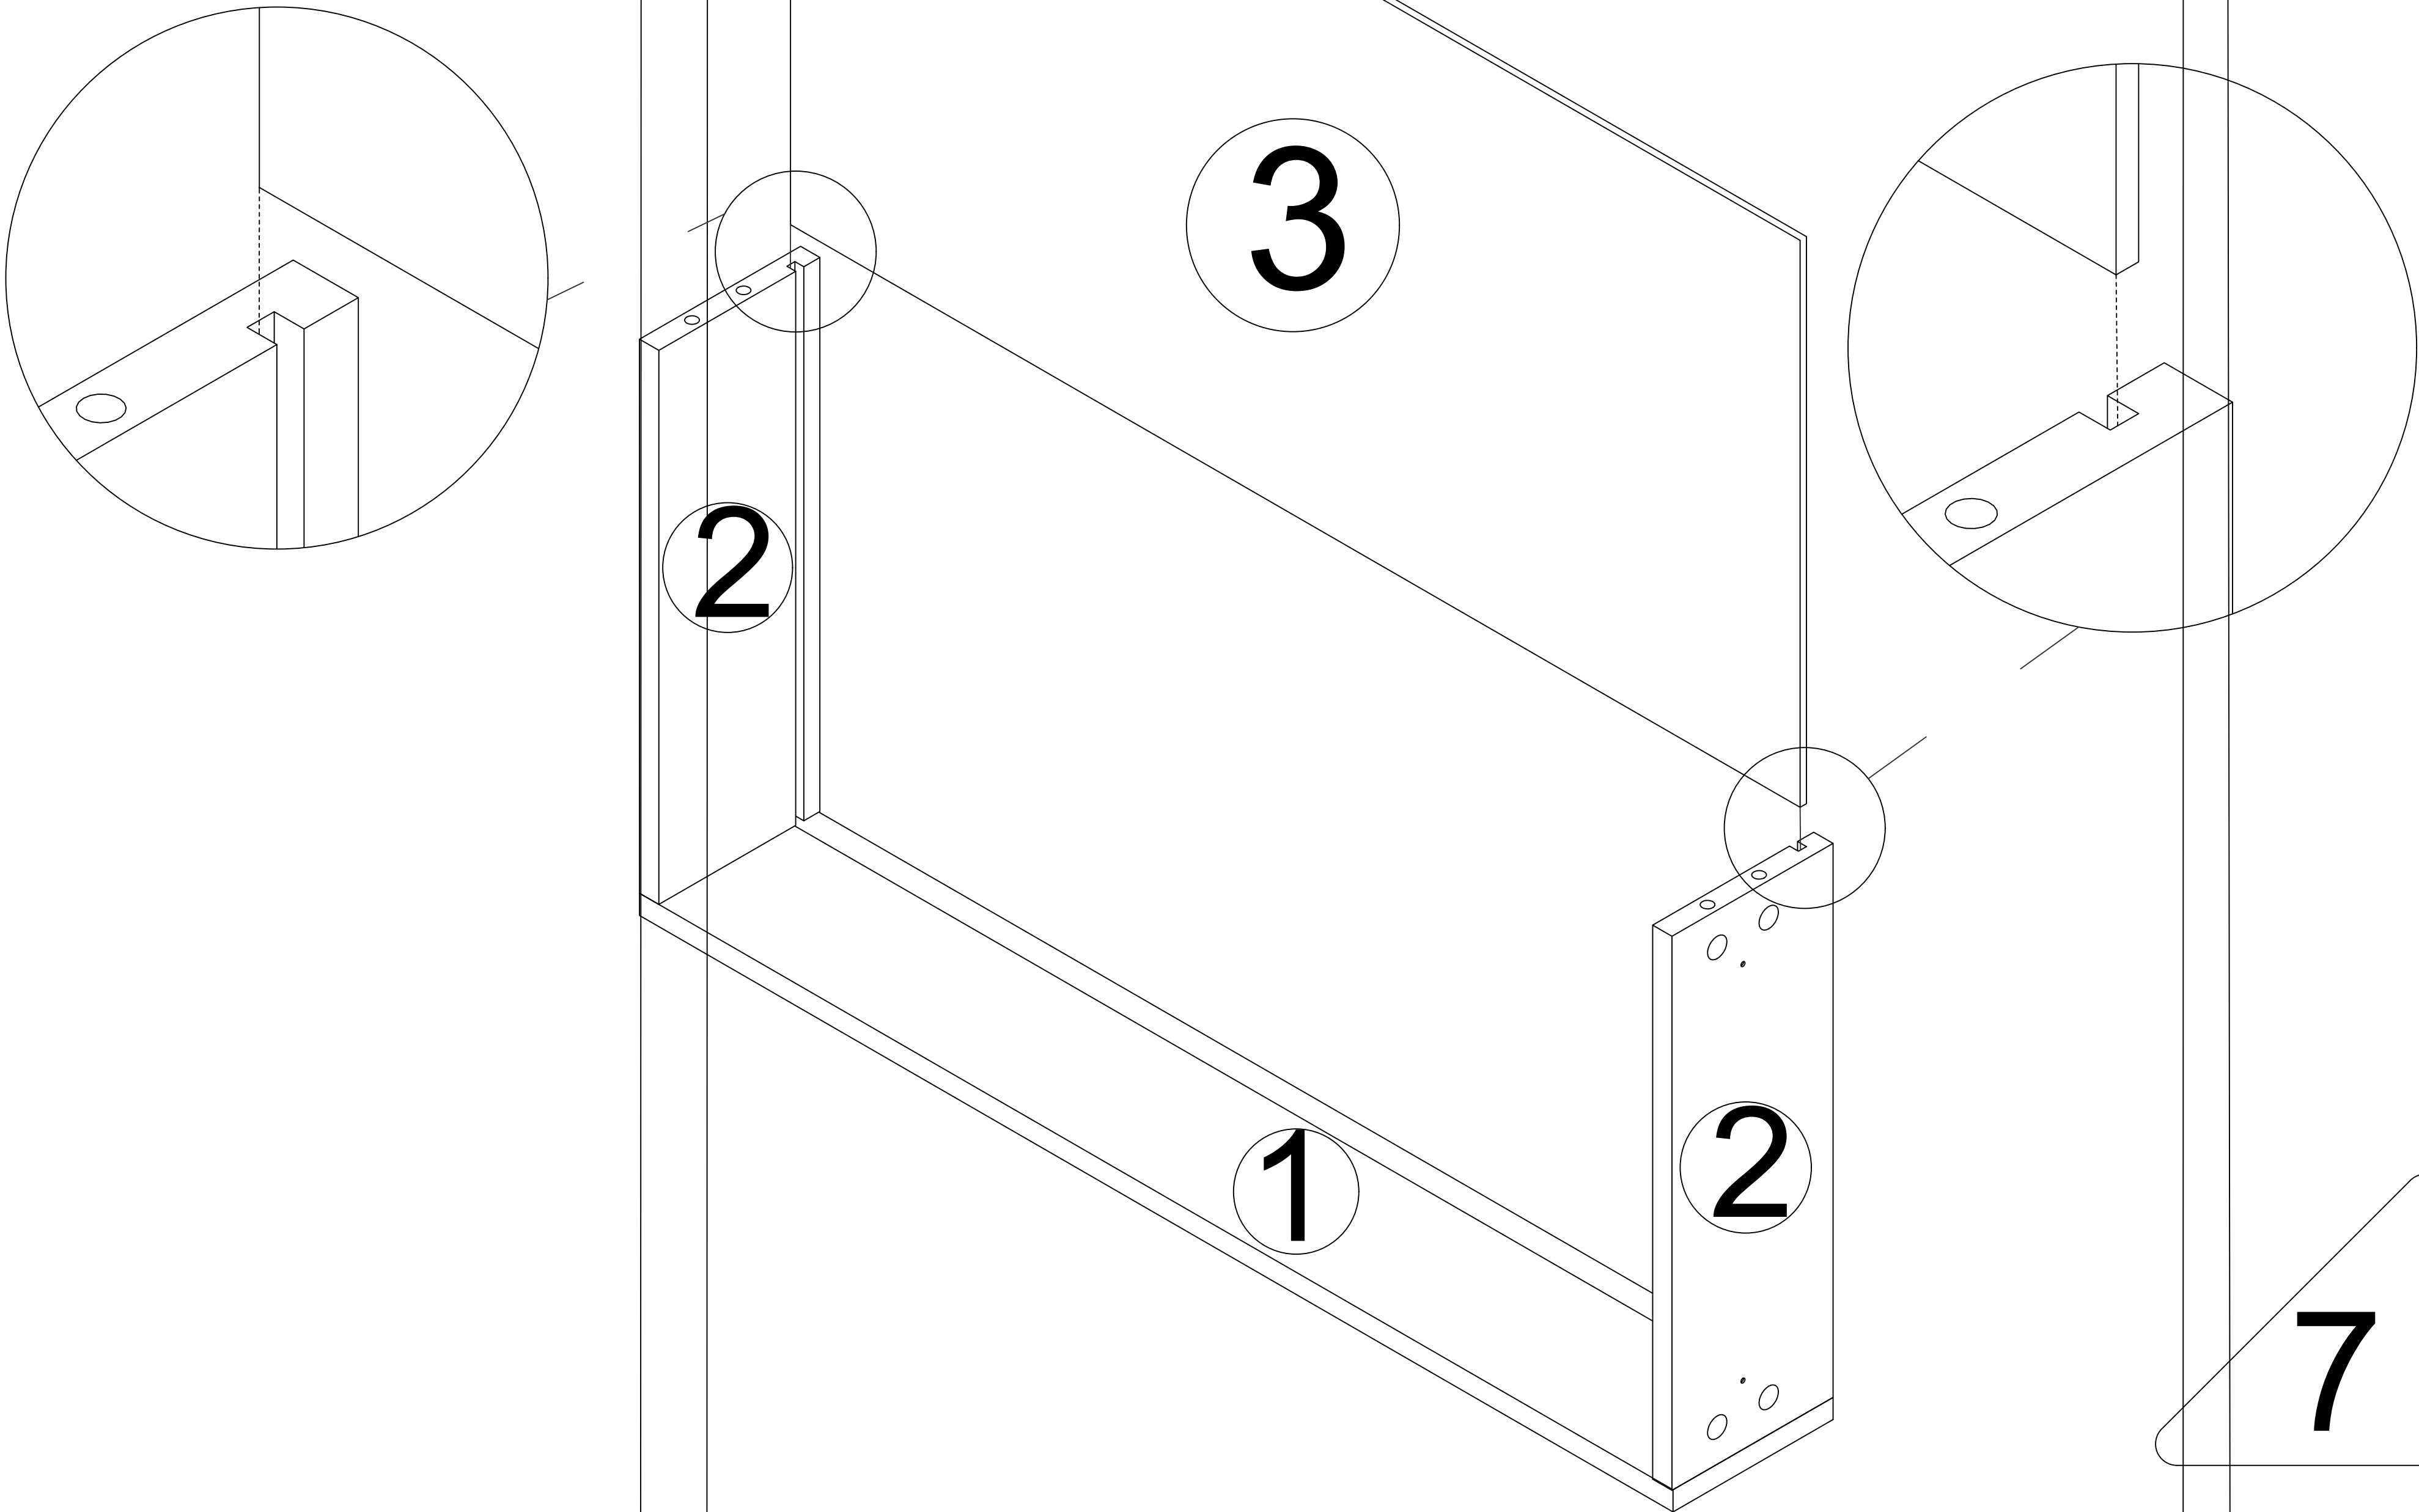

Step 4


- A

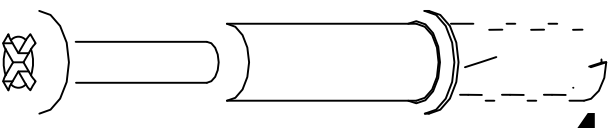

x4
- E




x2 x2


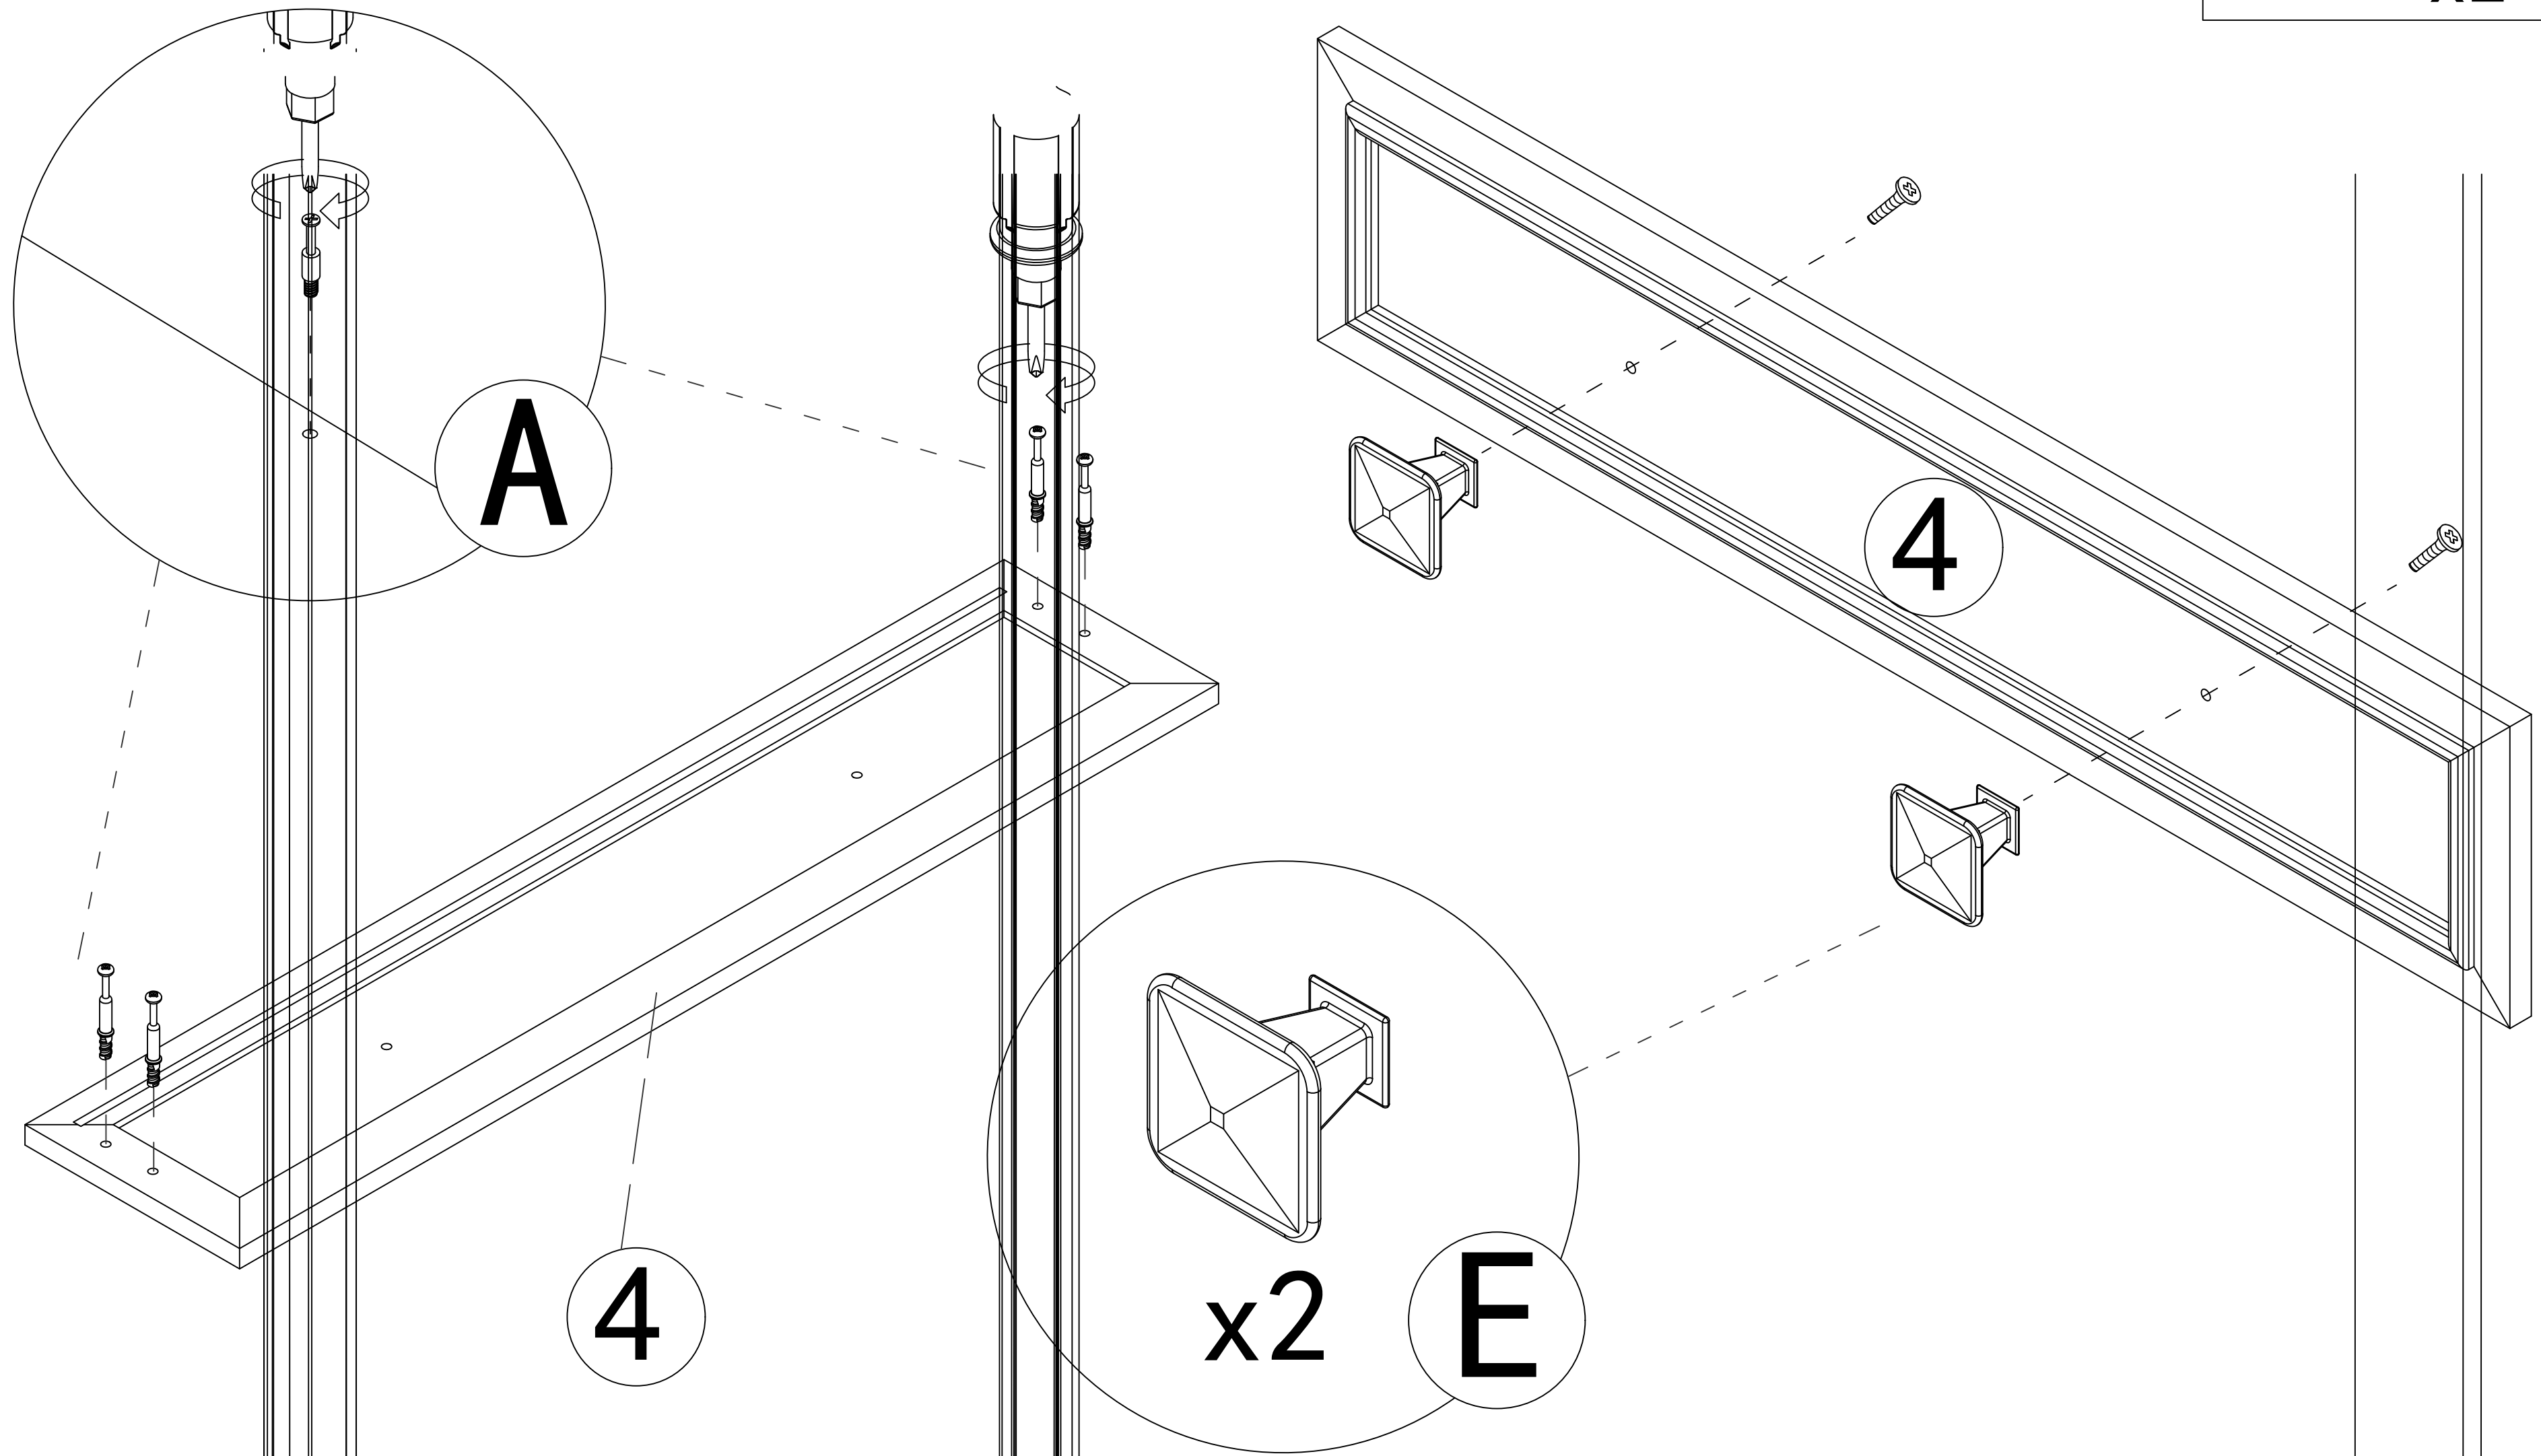


Step 5



- B

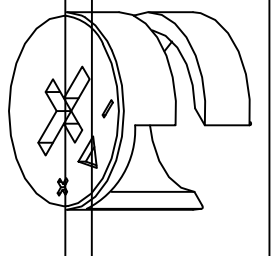

x4

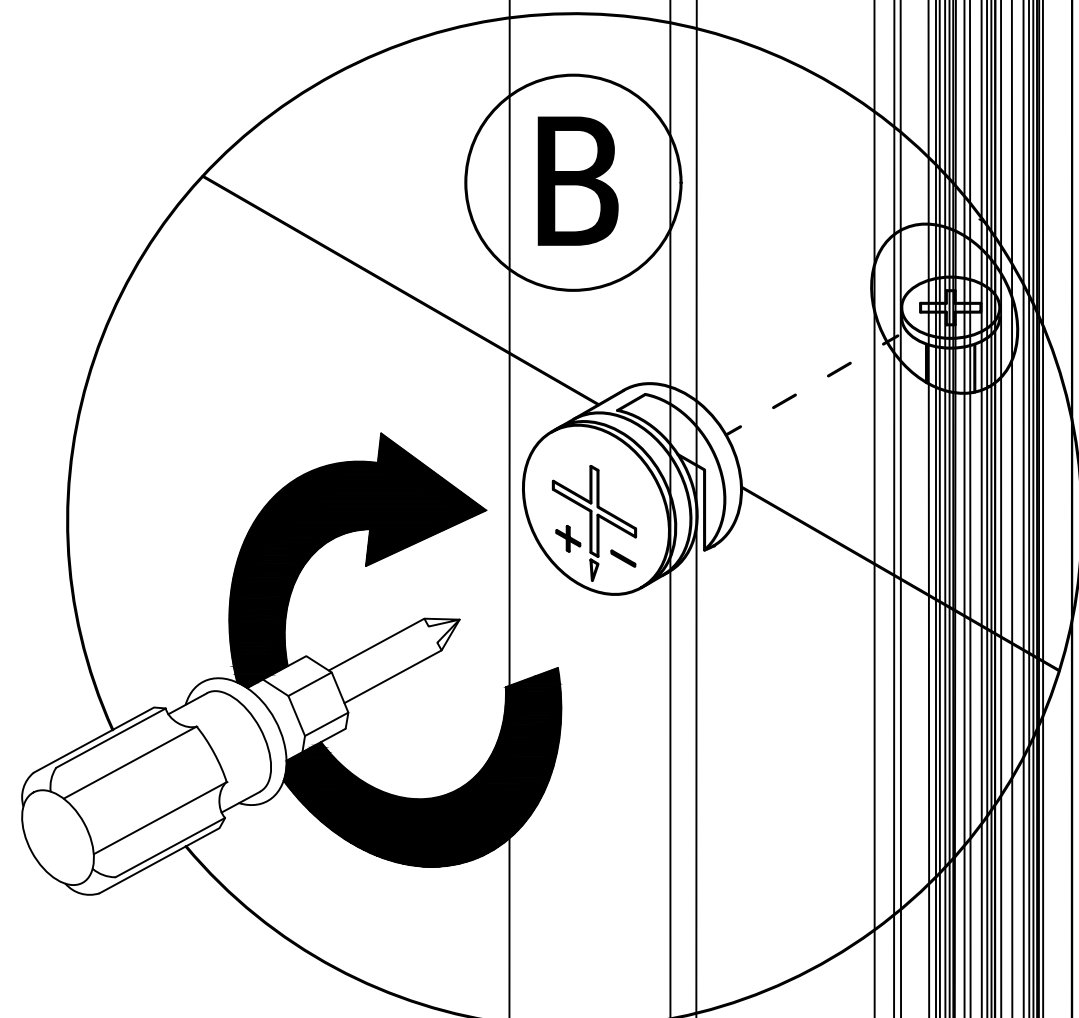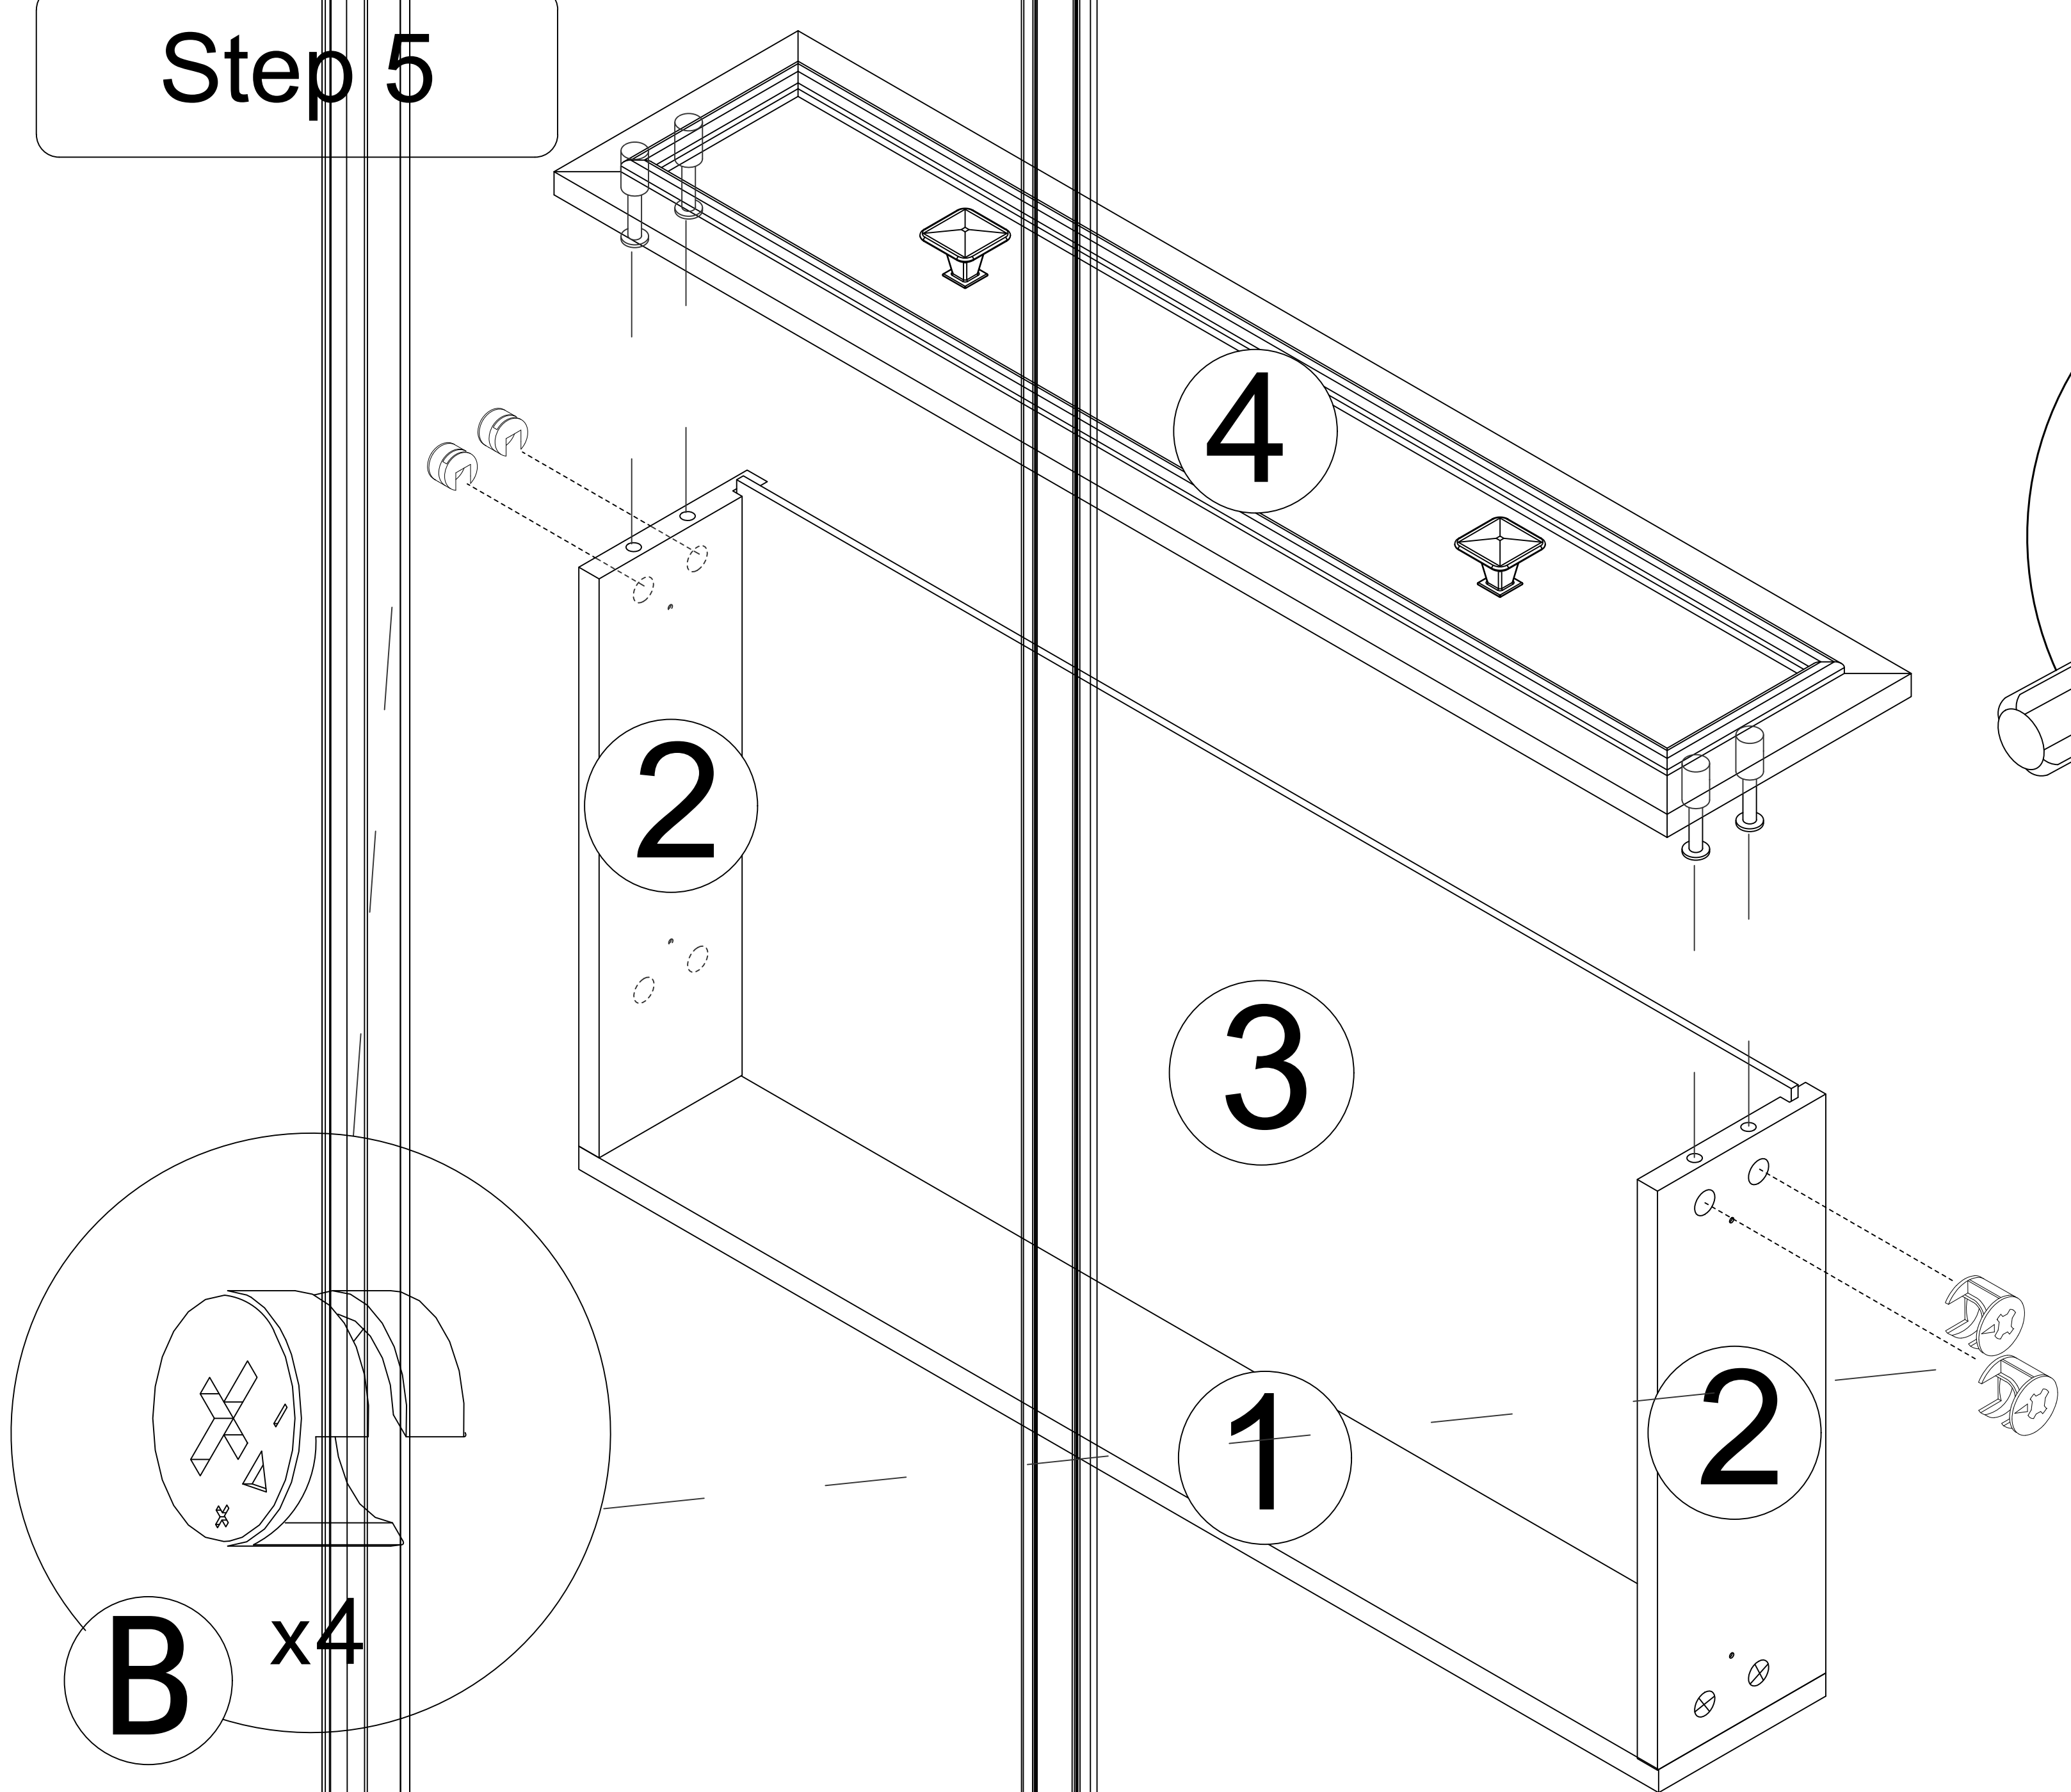


Drawer rail breakdown diagram


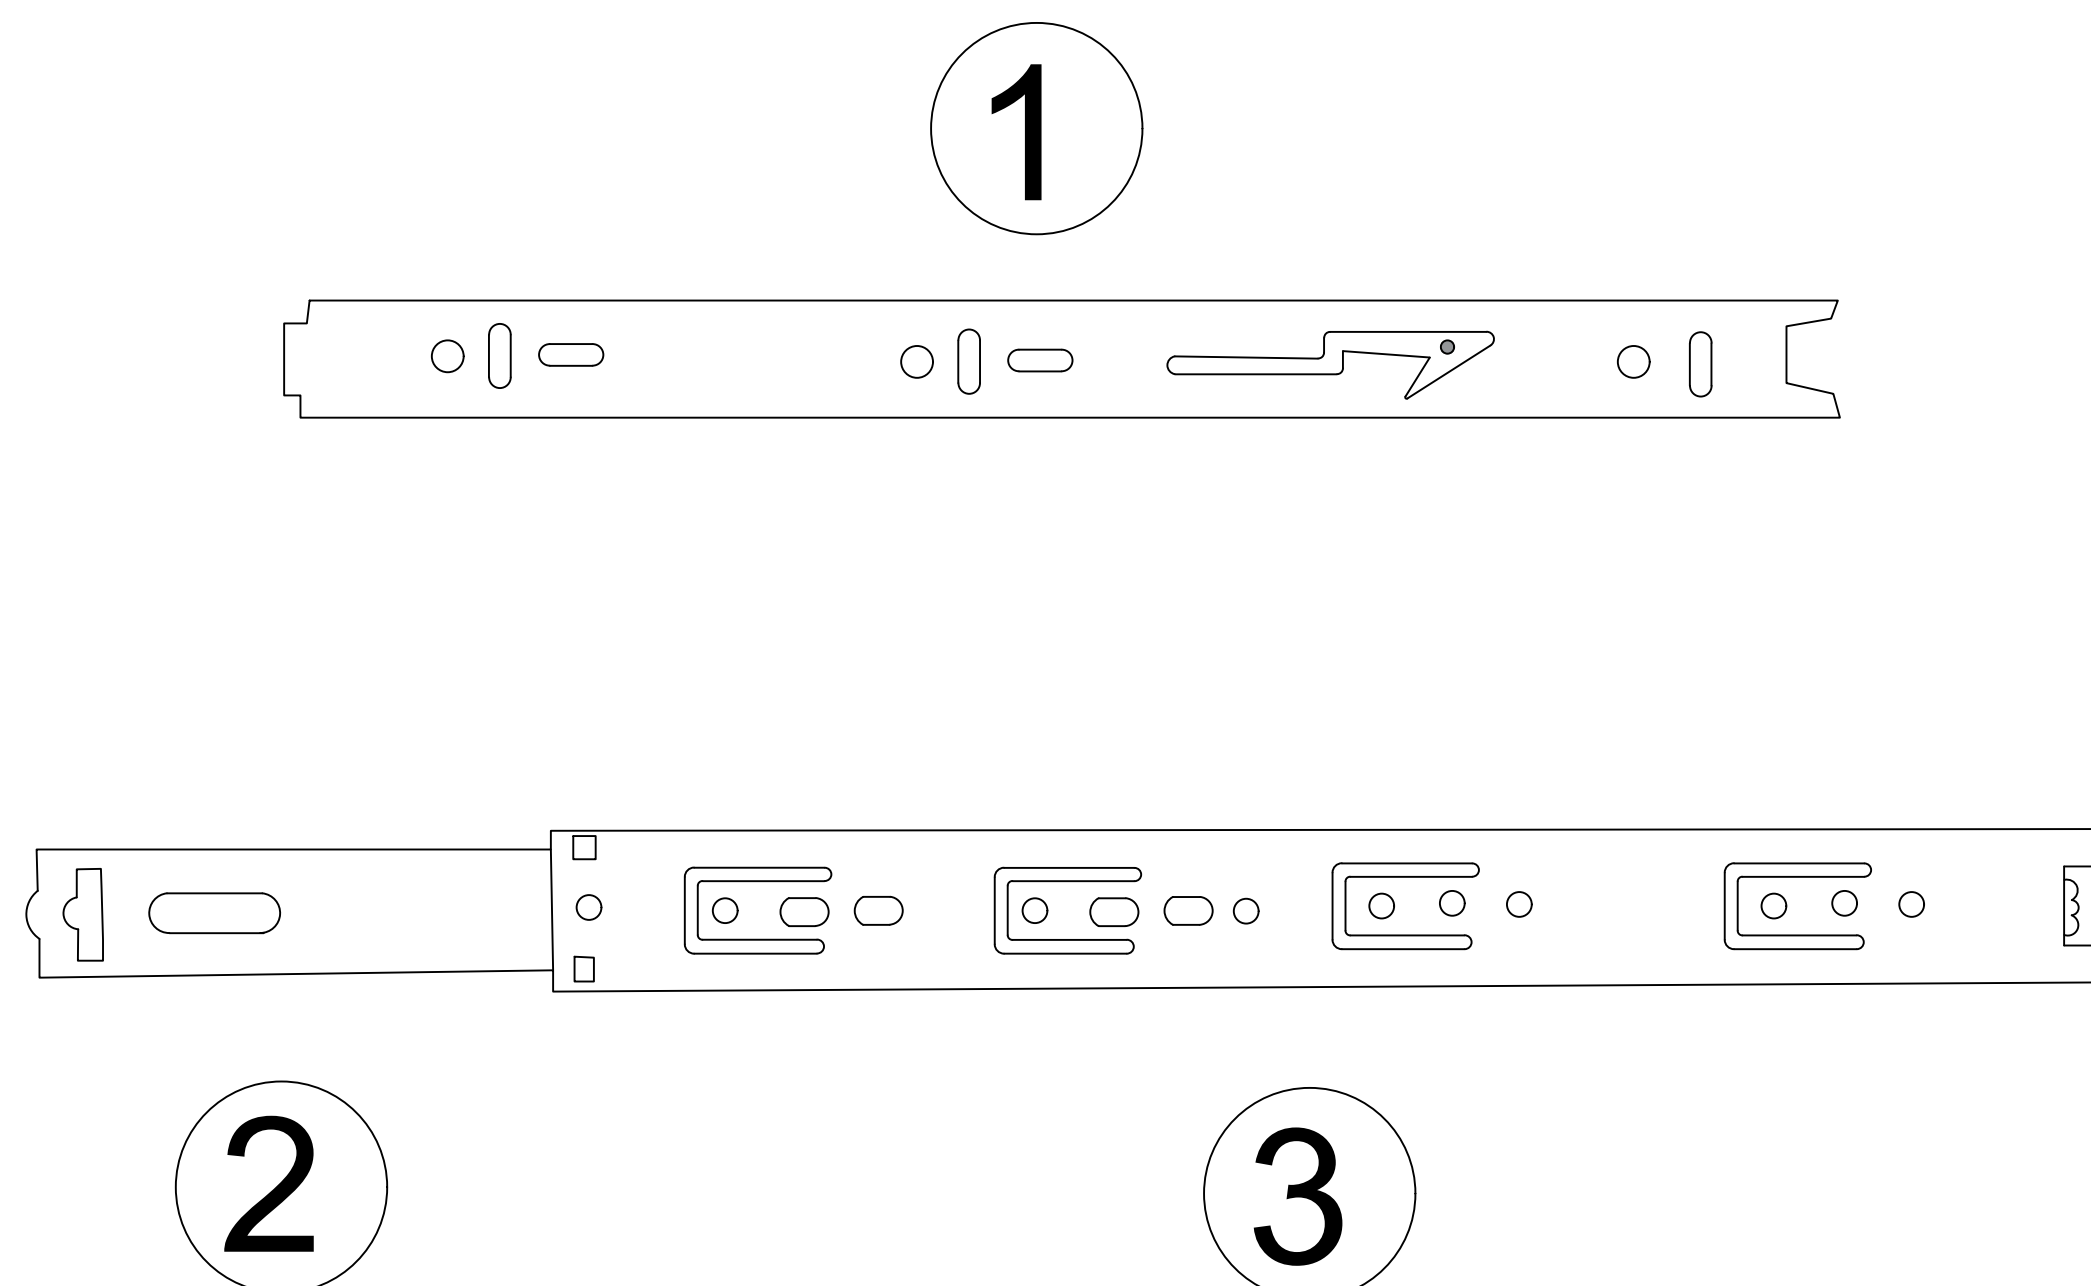
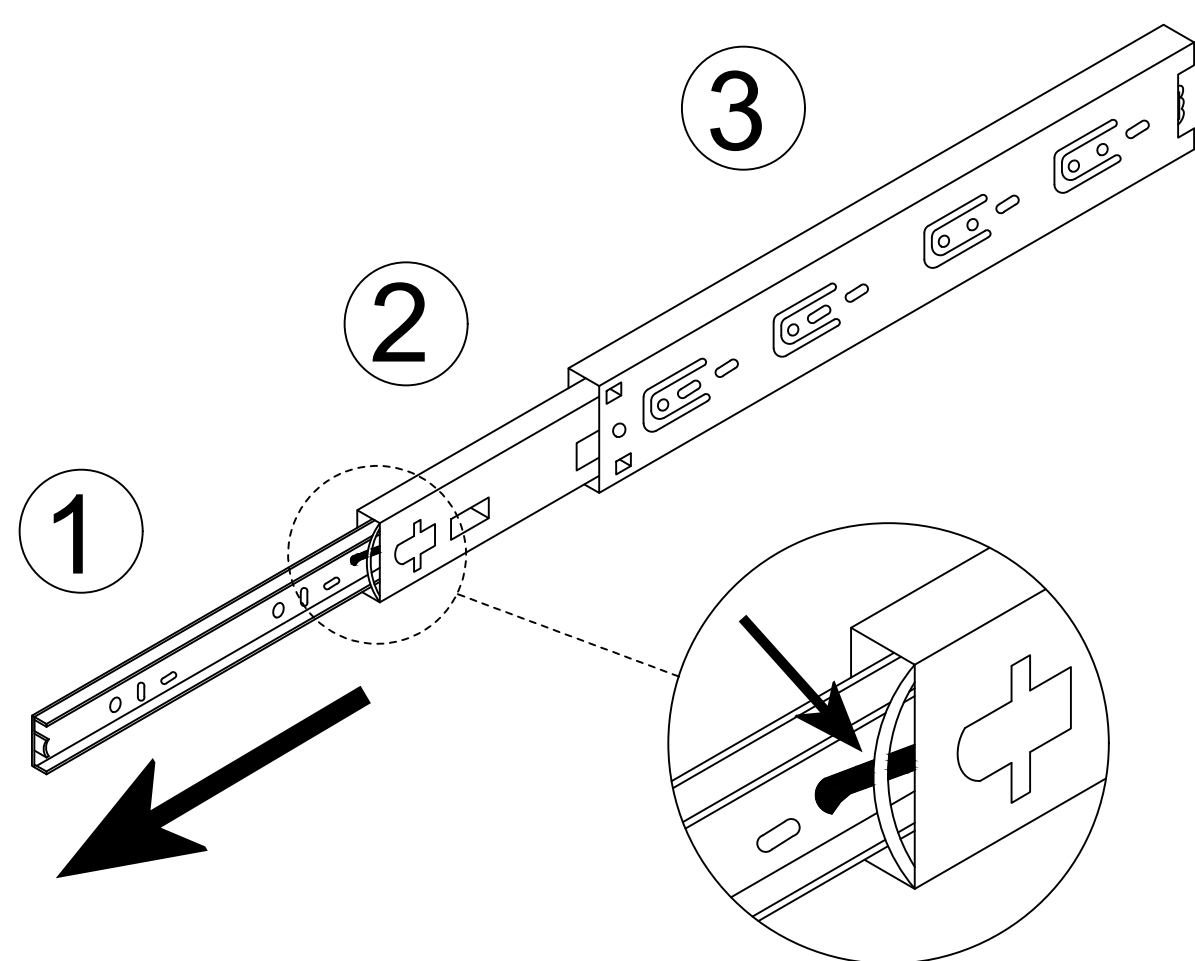


















Step A : Pull the rails apart


Step B : Push the nylon buckle
outward ①

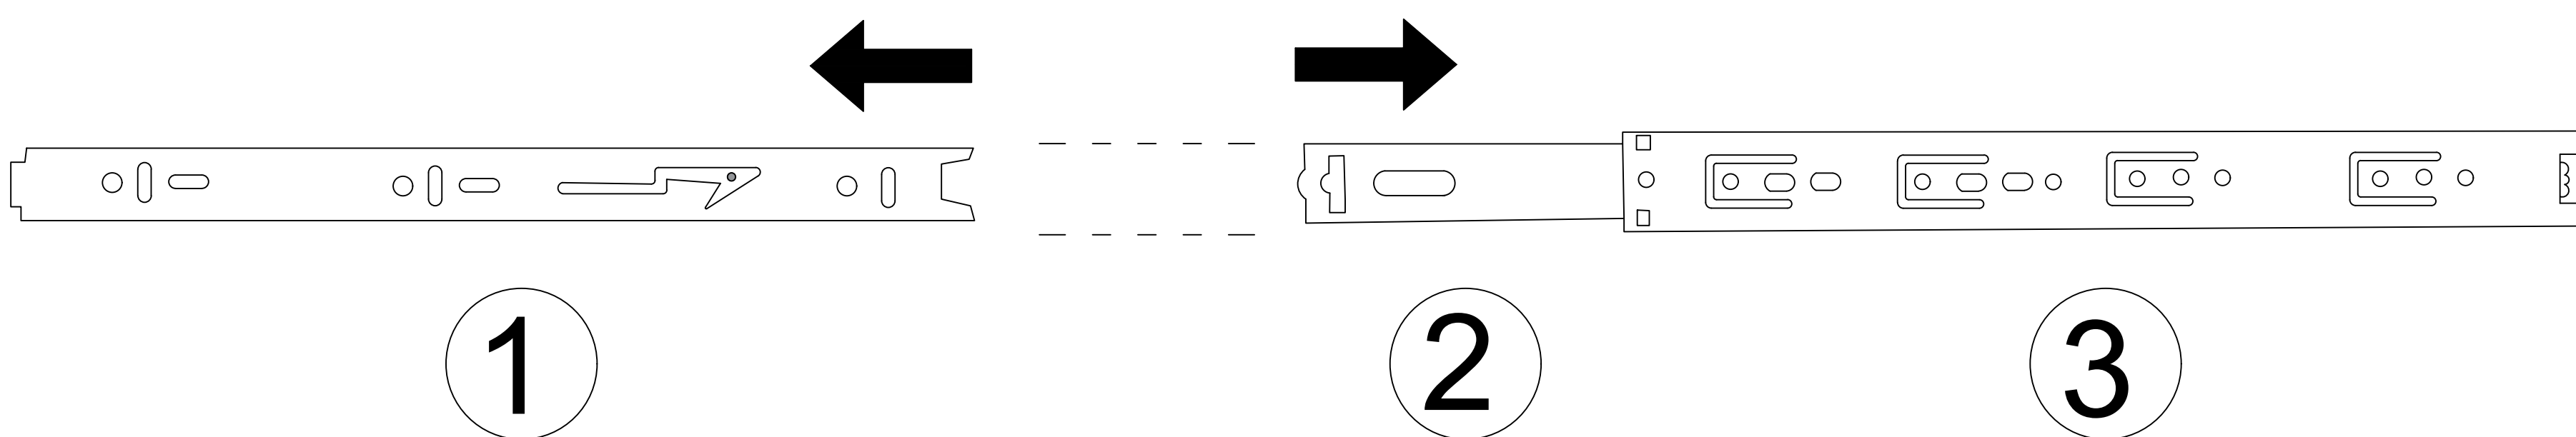



Step 6

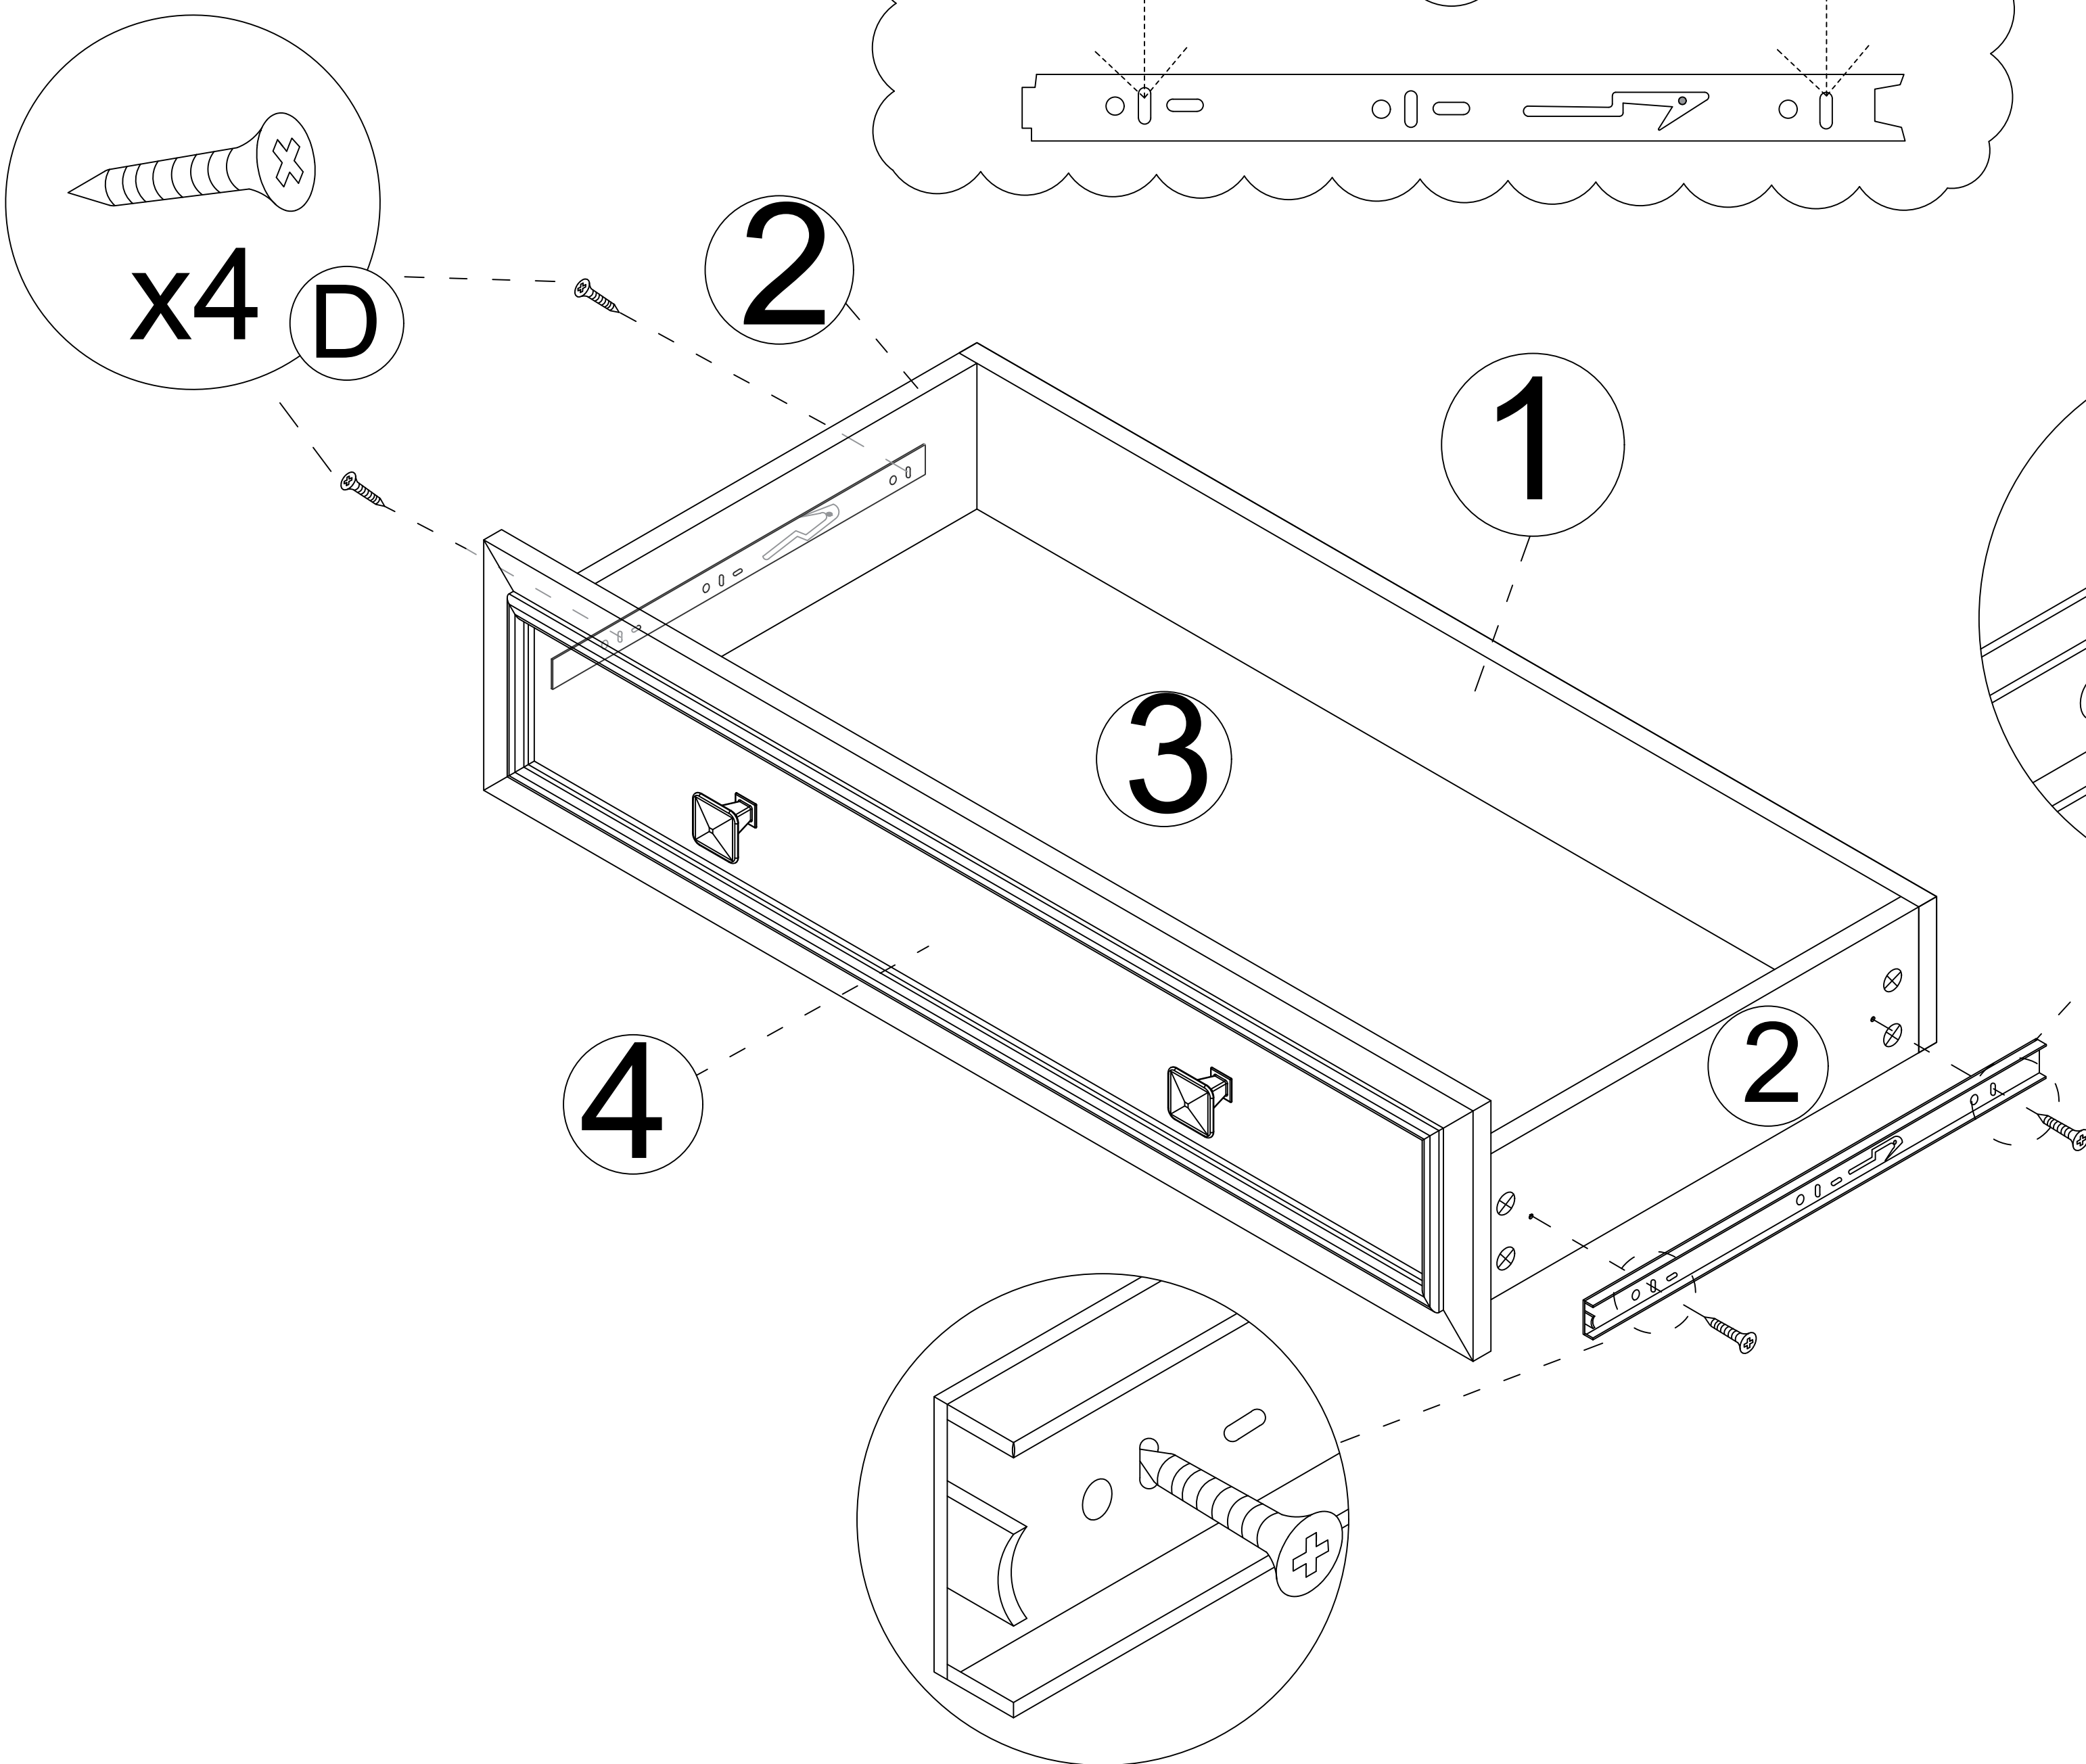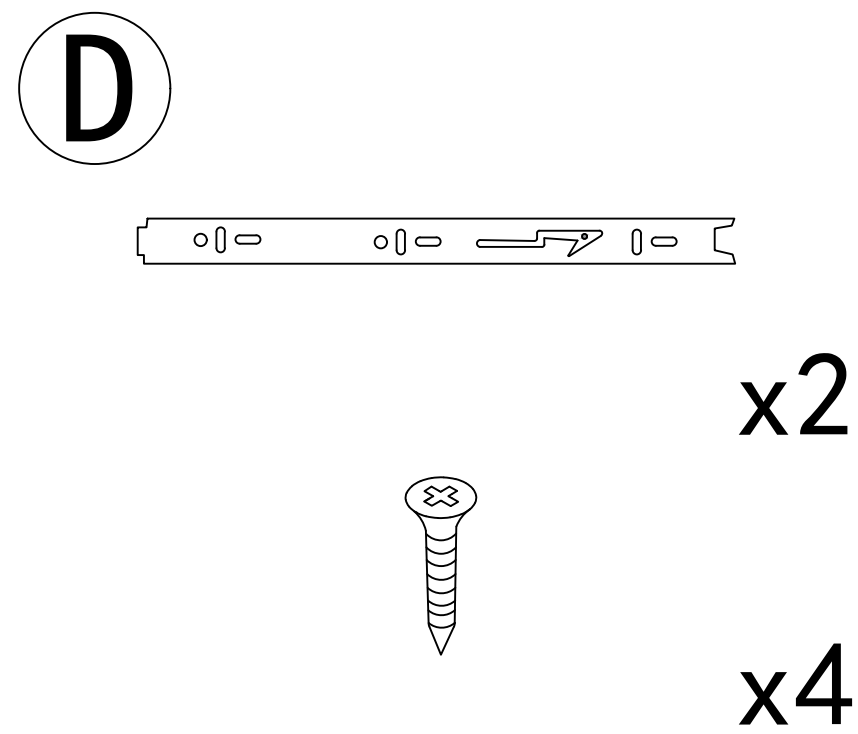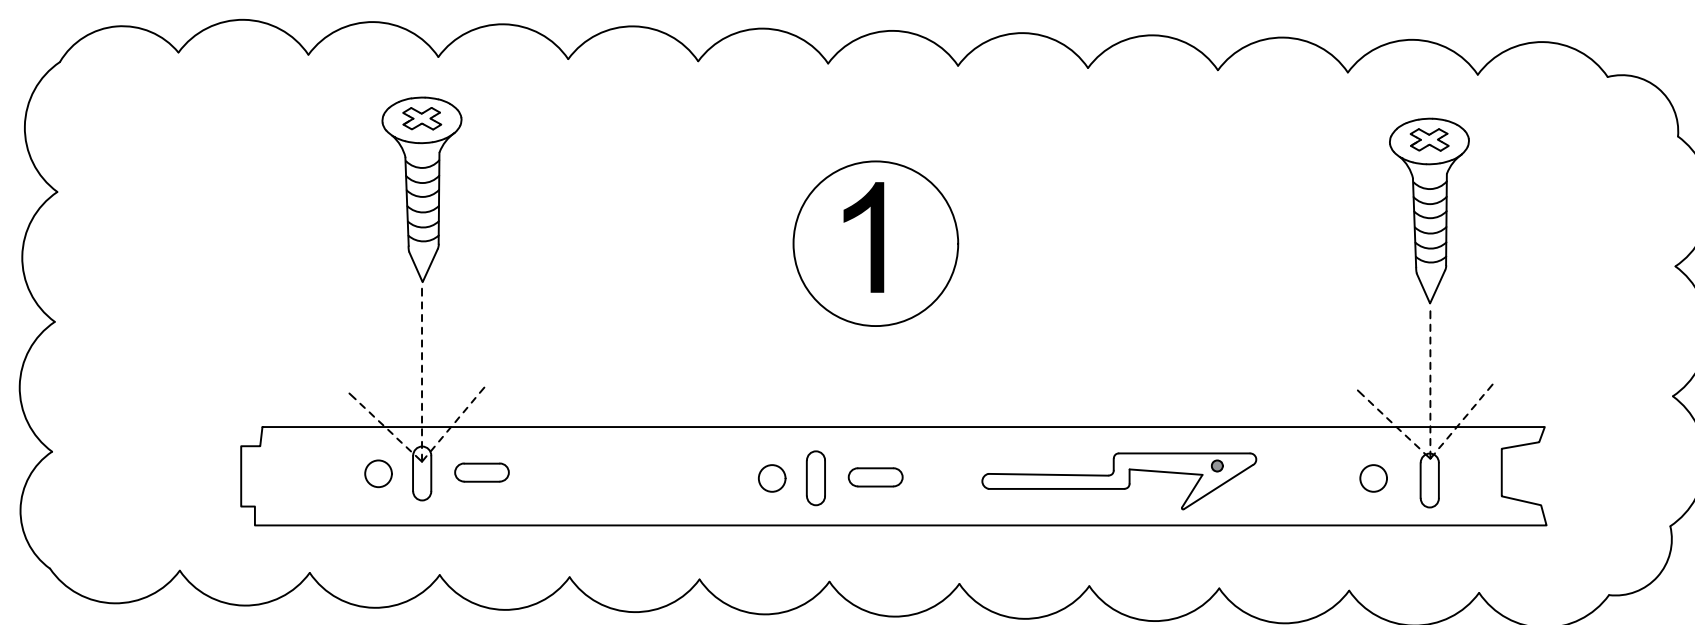

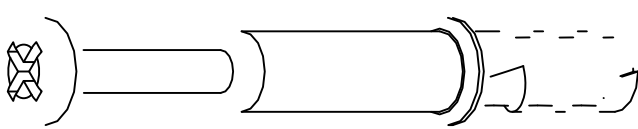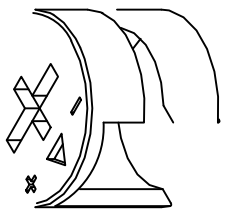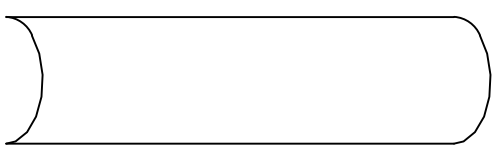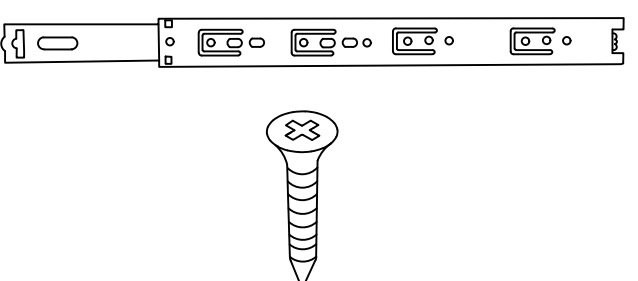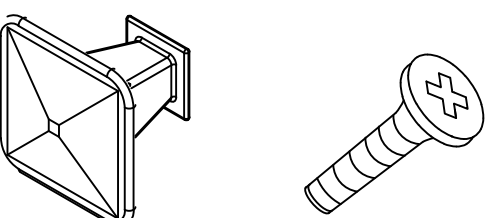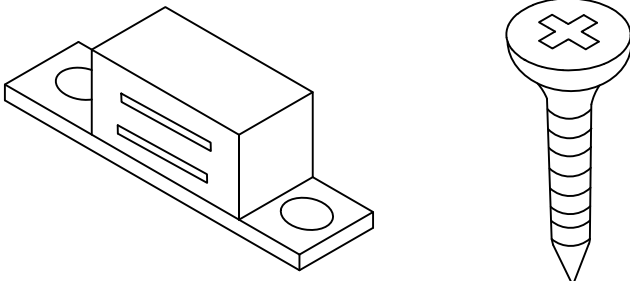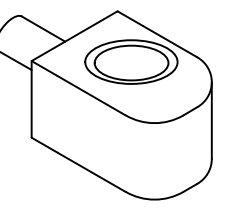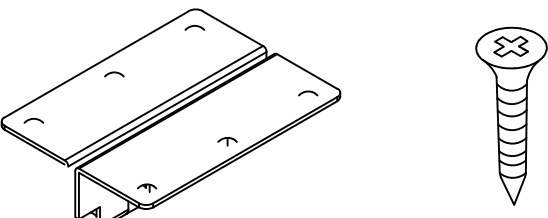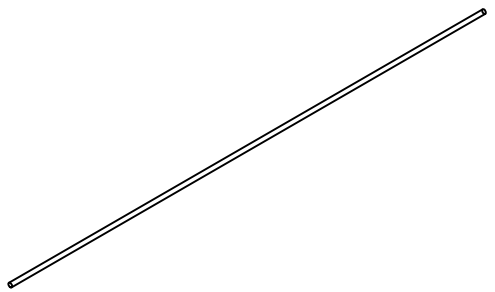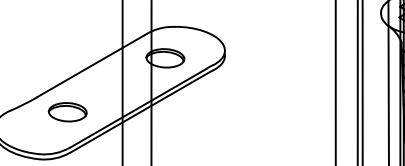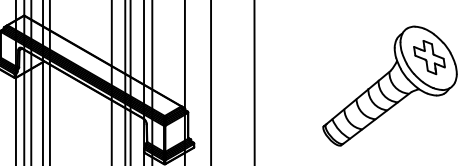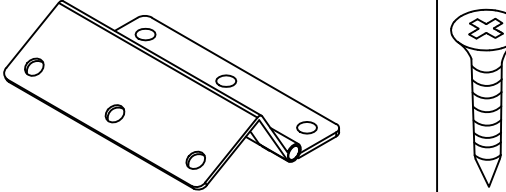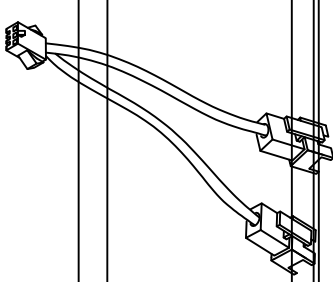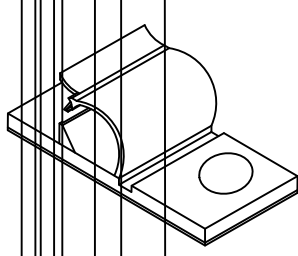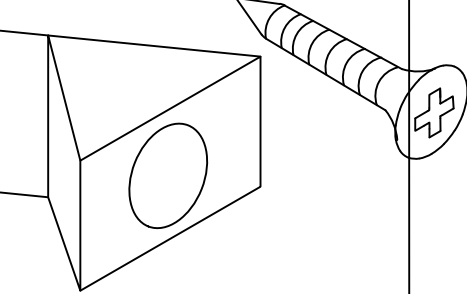
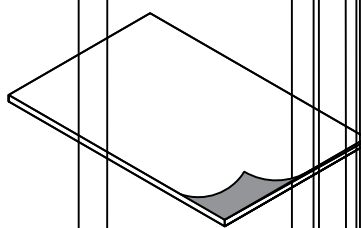
A		106pcs	B		106pcs	C		36pcs
D		2pcs 6pcs	E		2pcs 2pcs	F		4pcs 8pcs
G		4pcs	H		6pcs 36pcs	I		8pcs
J		6pcs 12pcs	K		4pcs 8pcs	L		4pcs 24pcs
M		1pcs	N		3pcs	O		14pcs
P		5pcs						

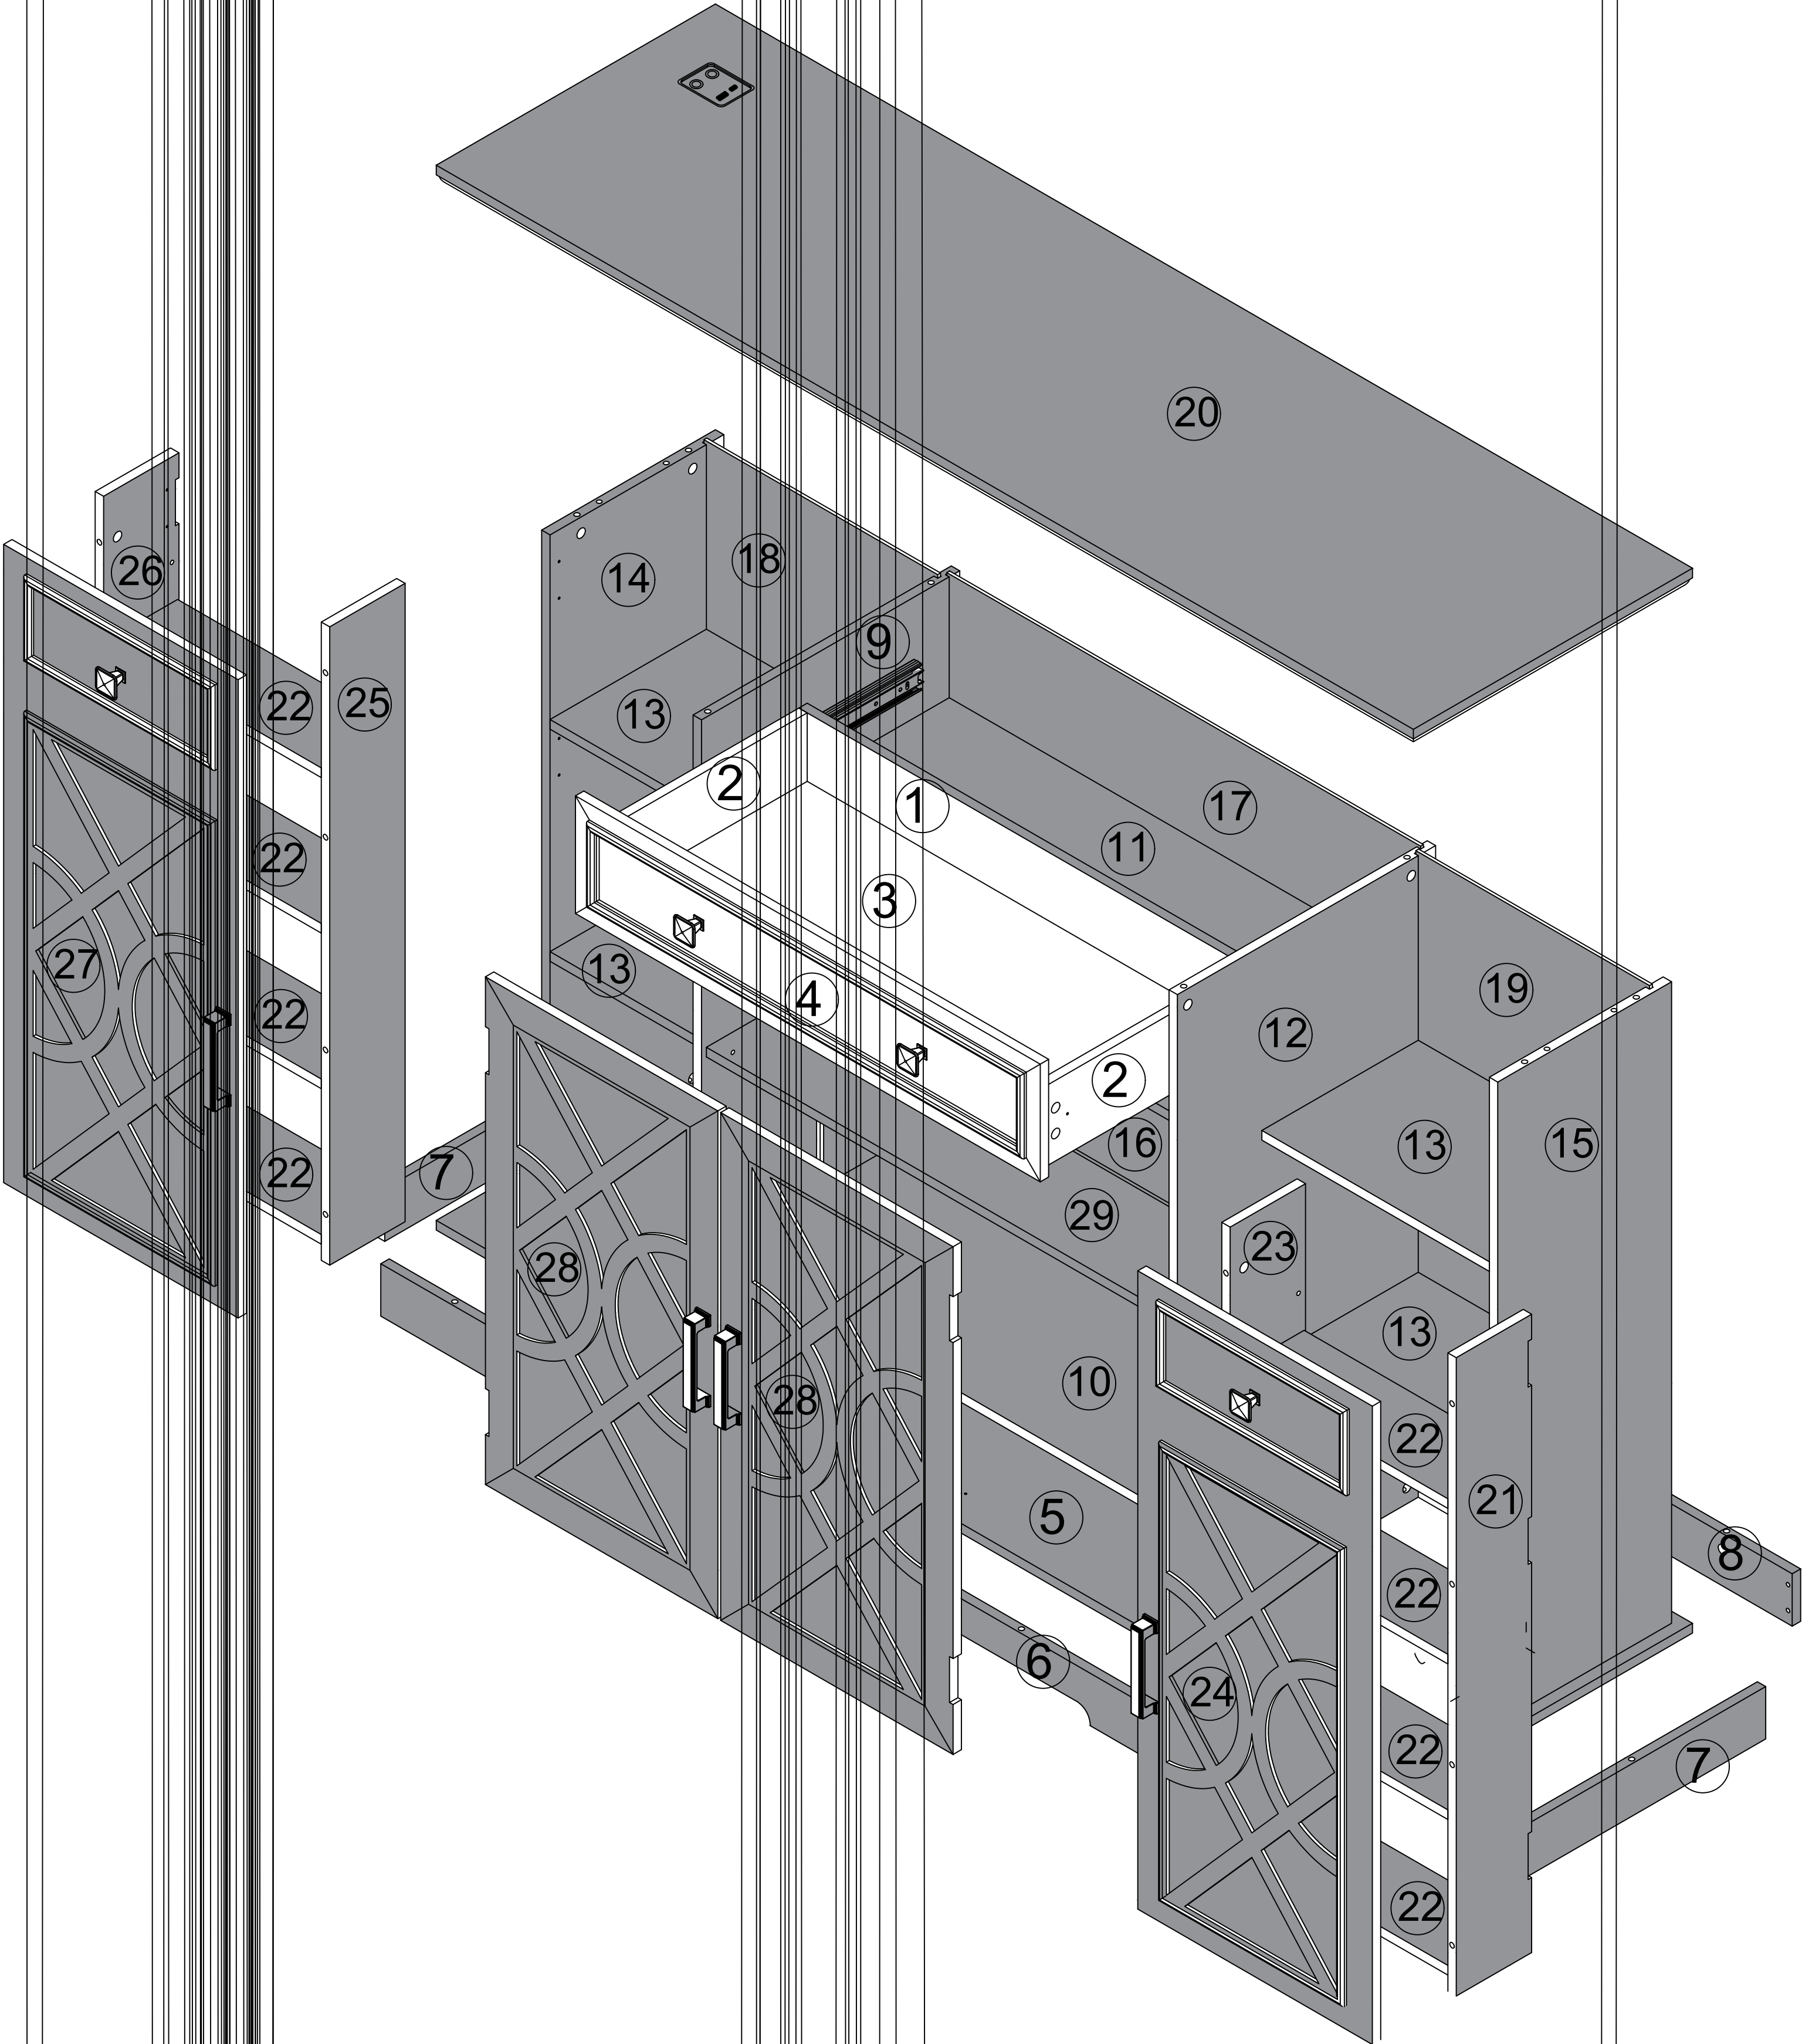

Step 7

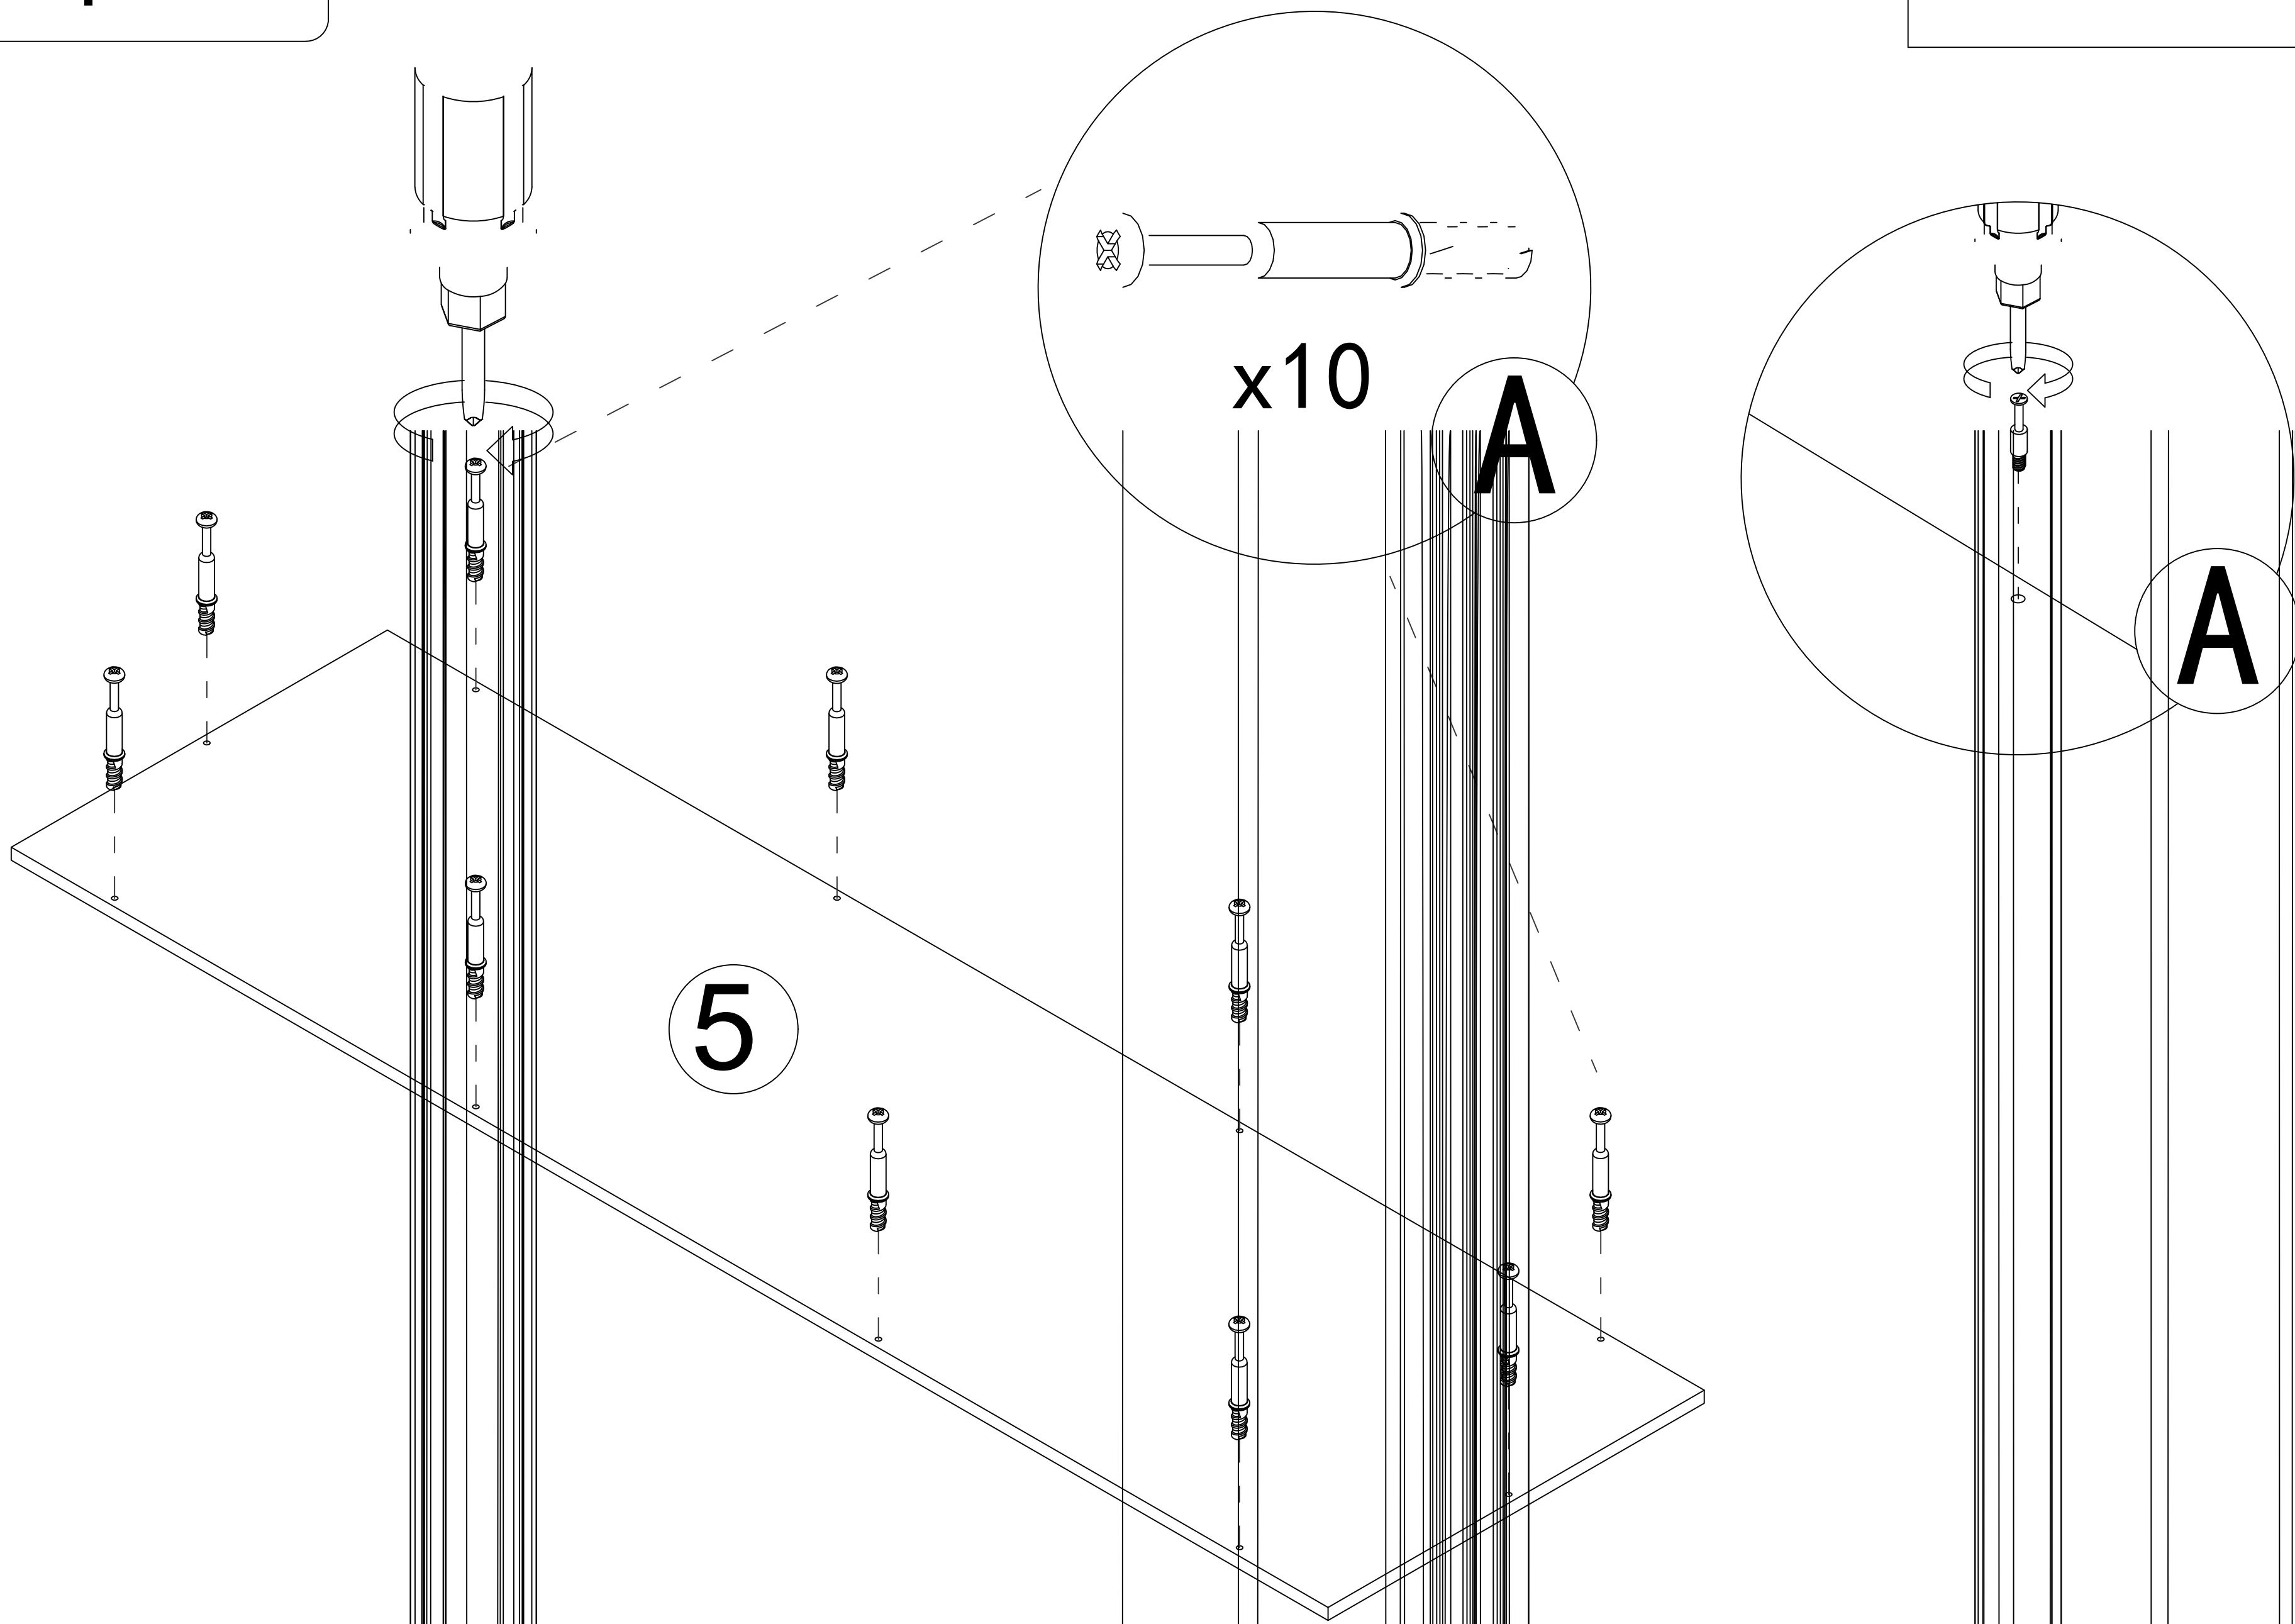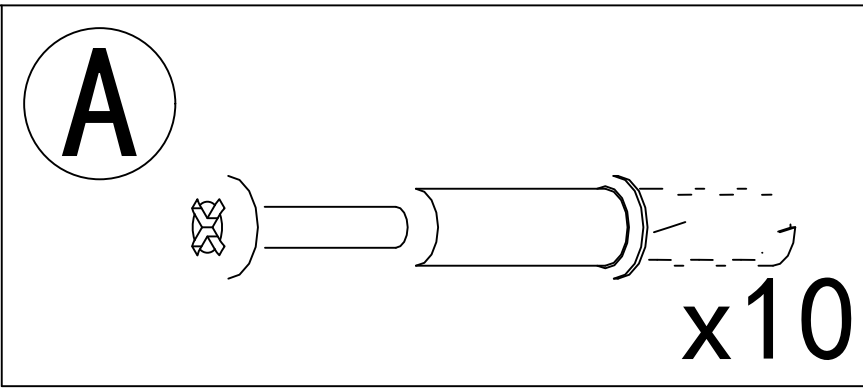


Step 8

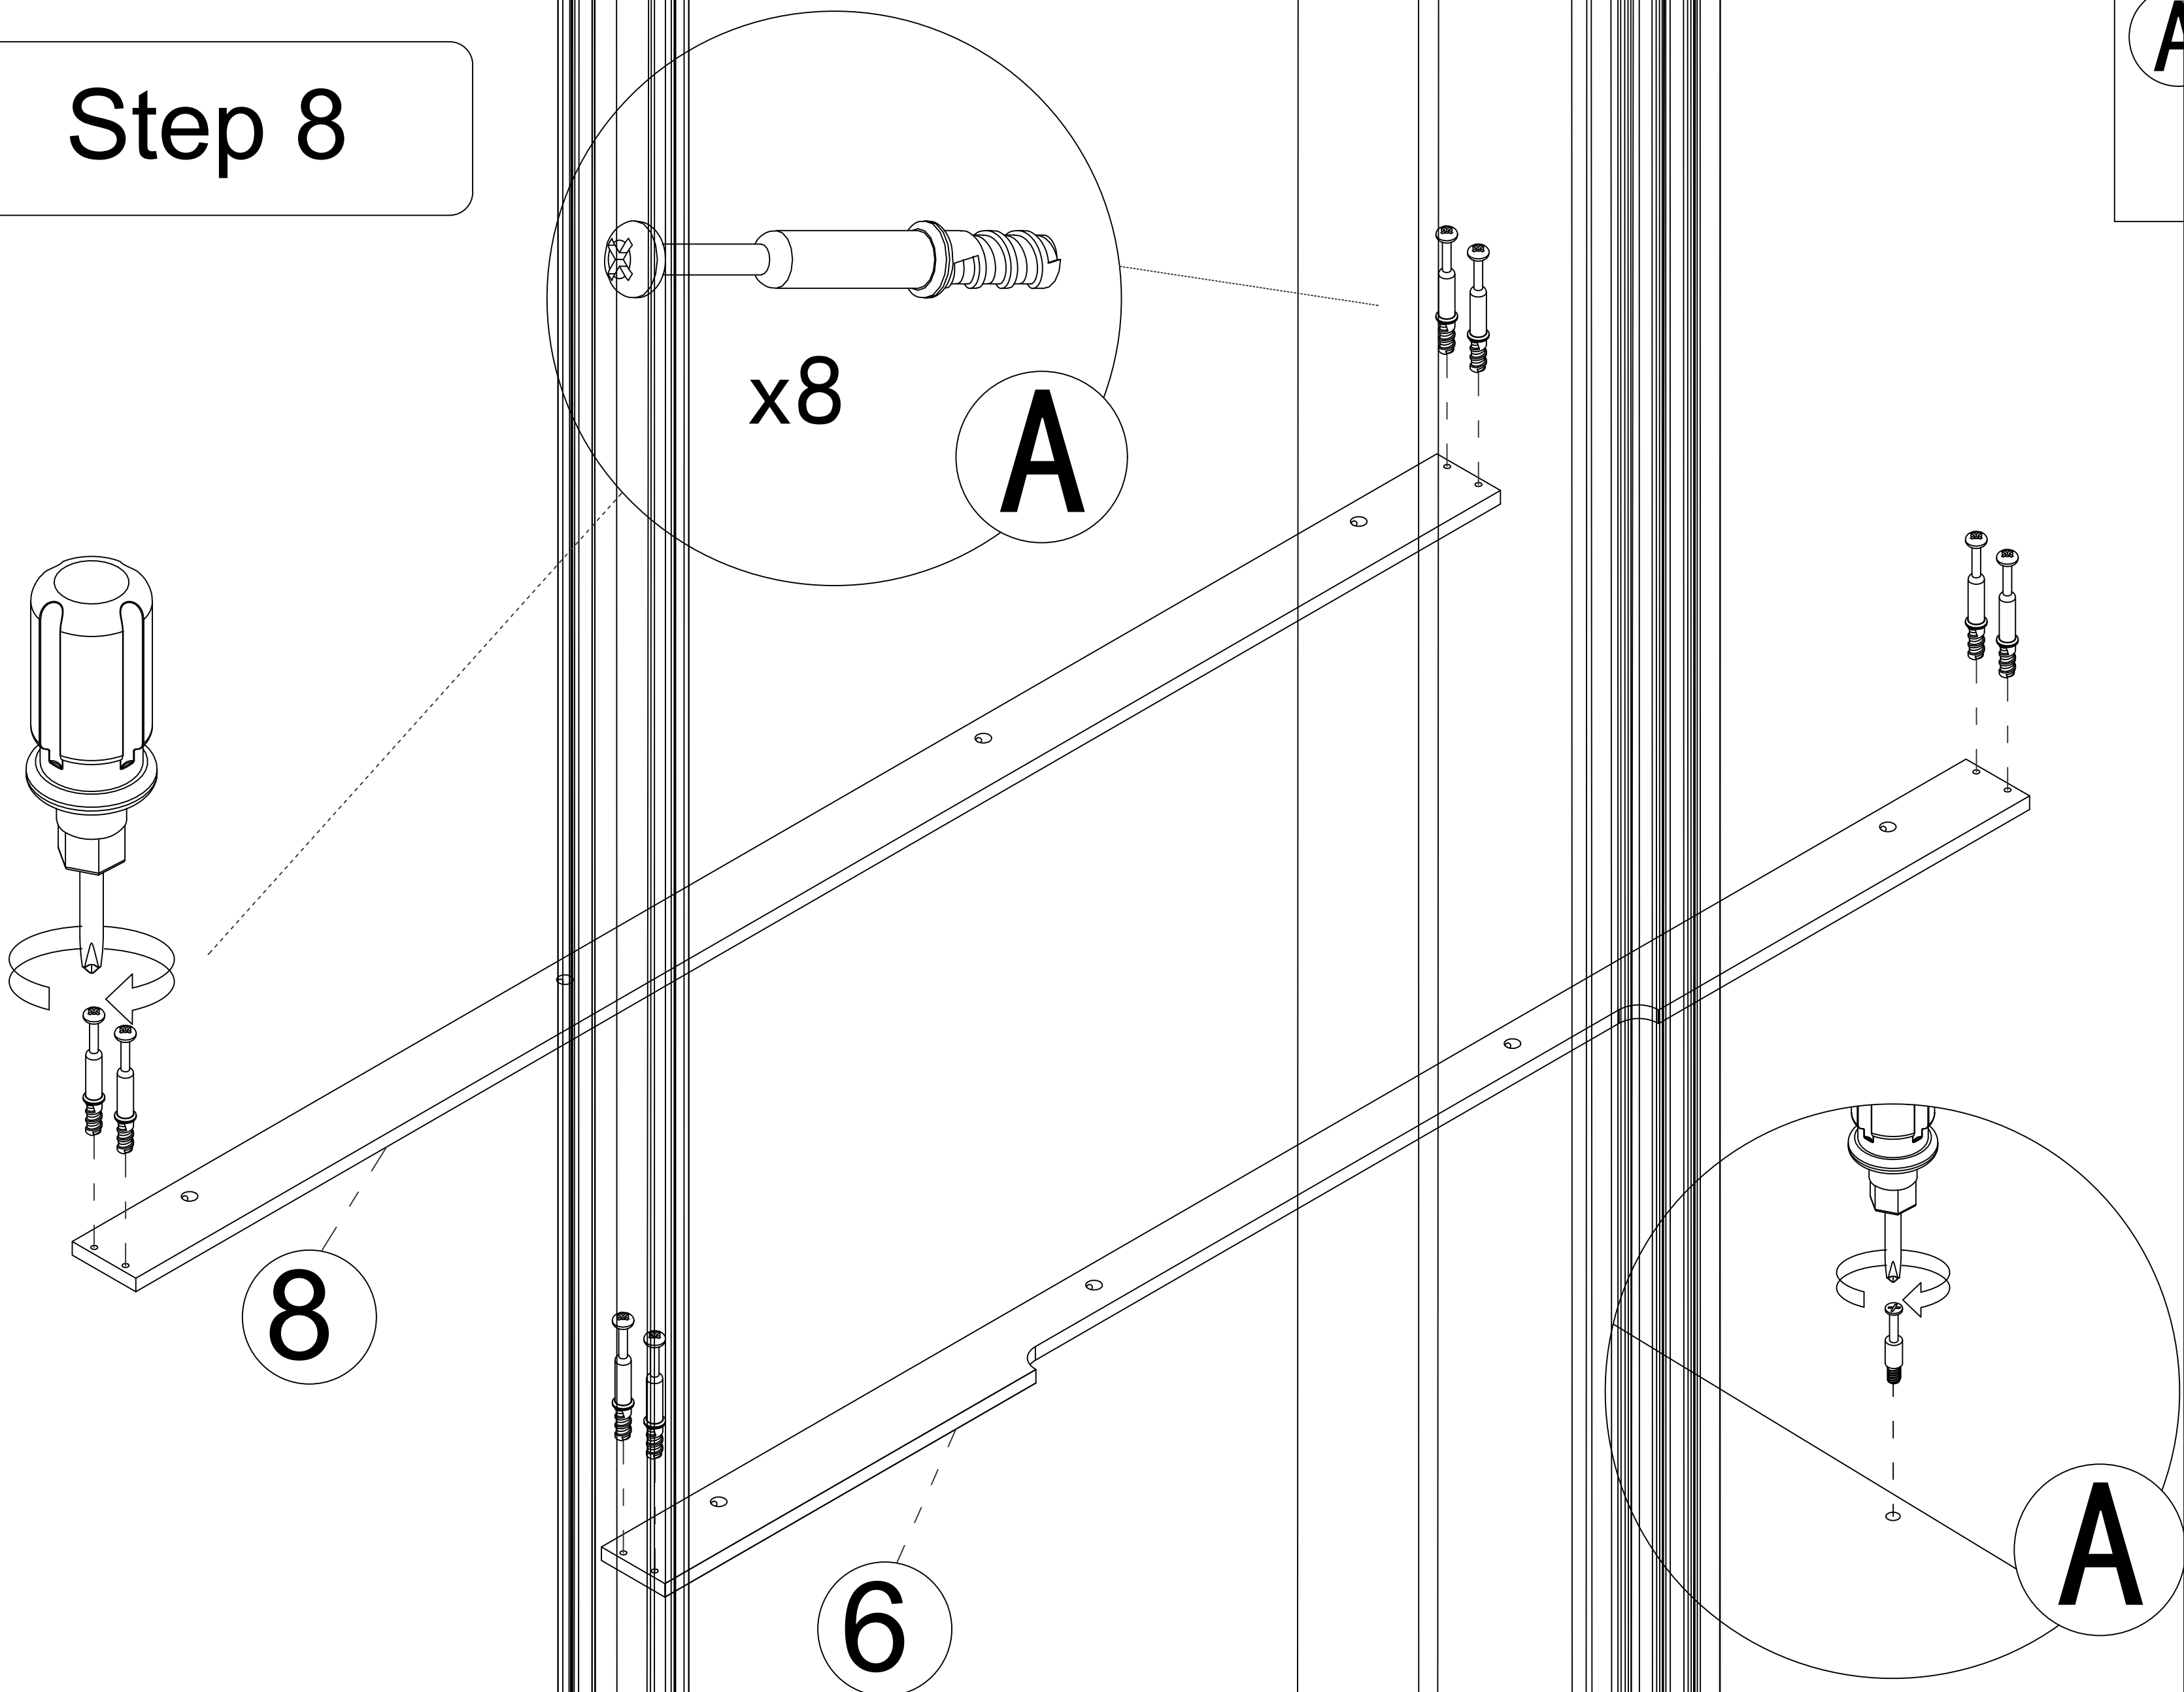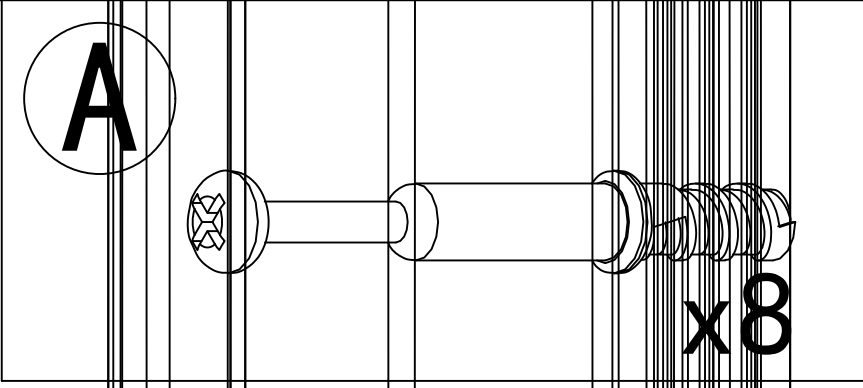


Step 9

B

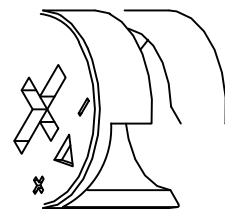


x8

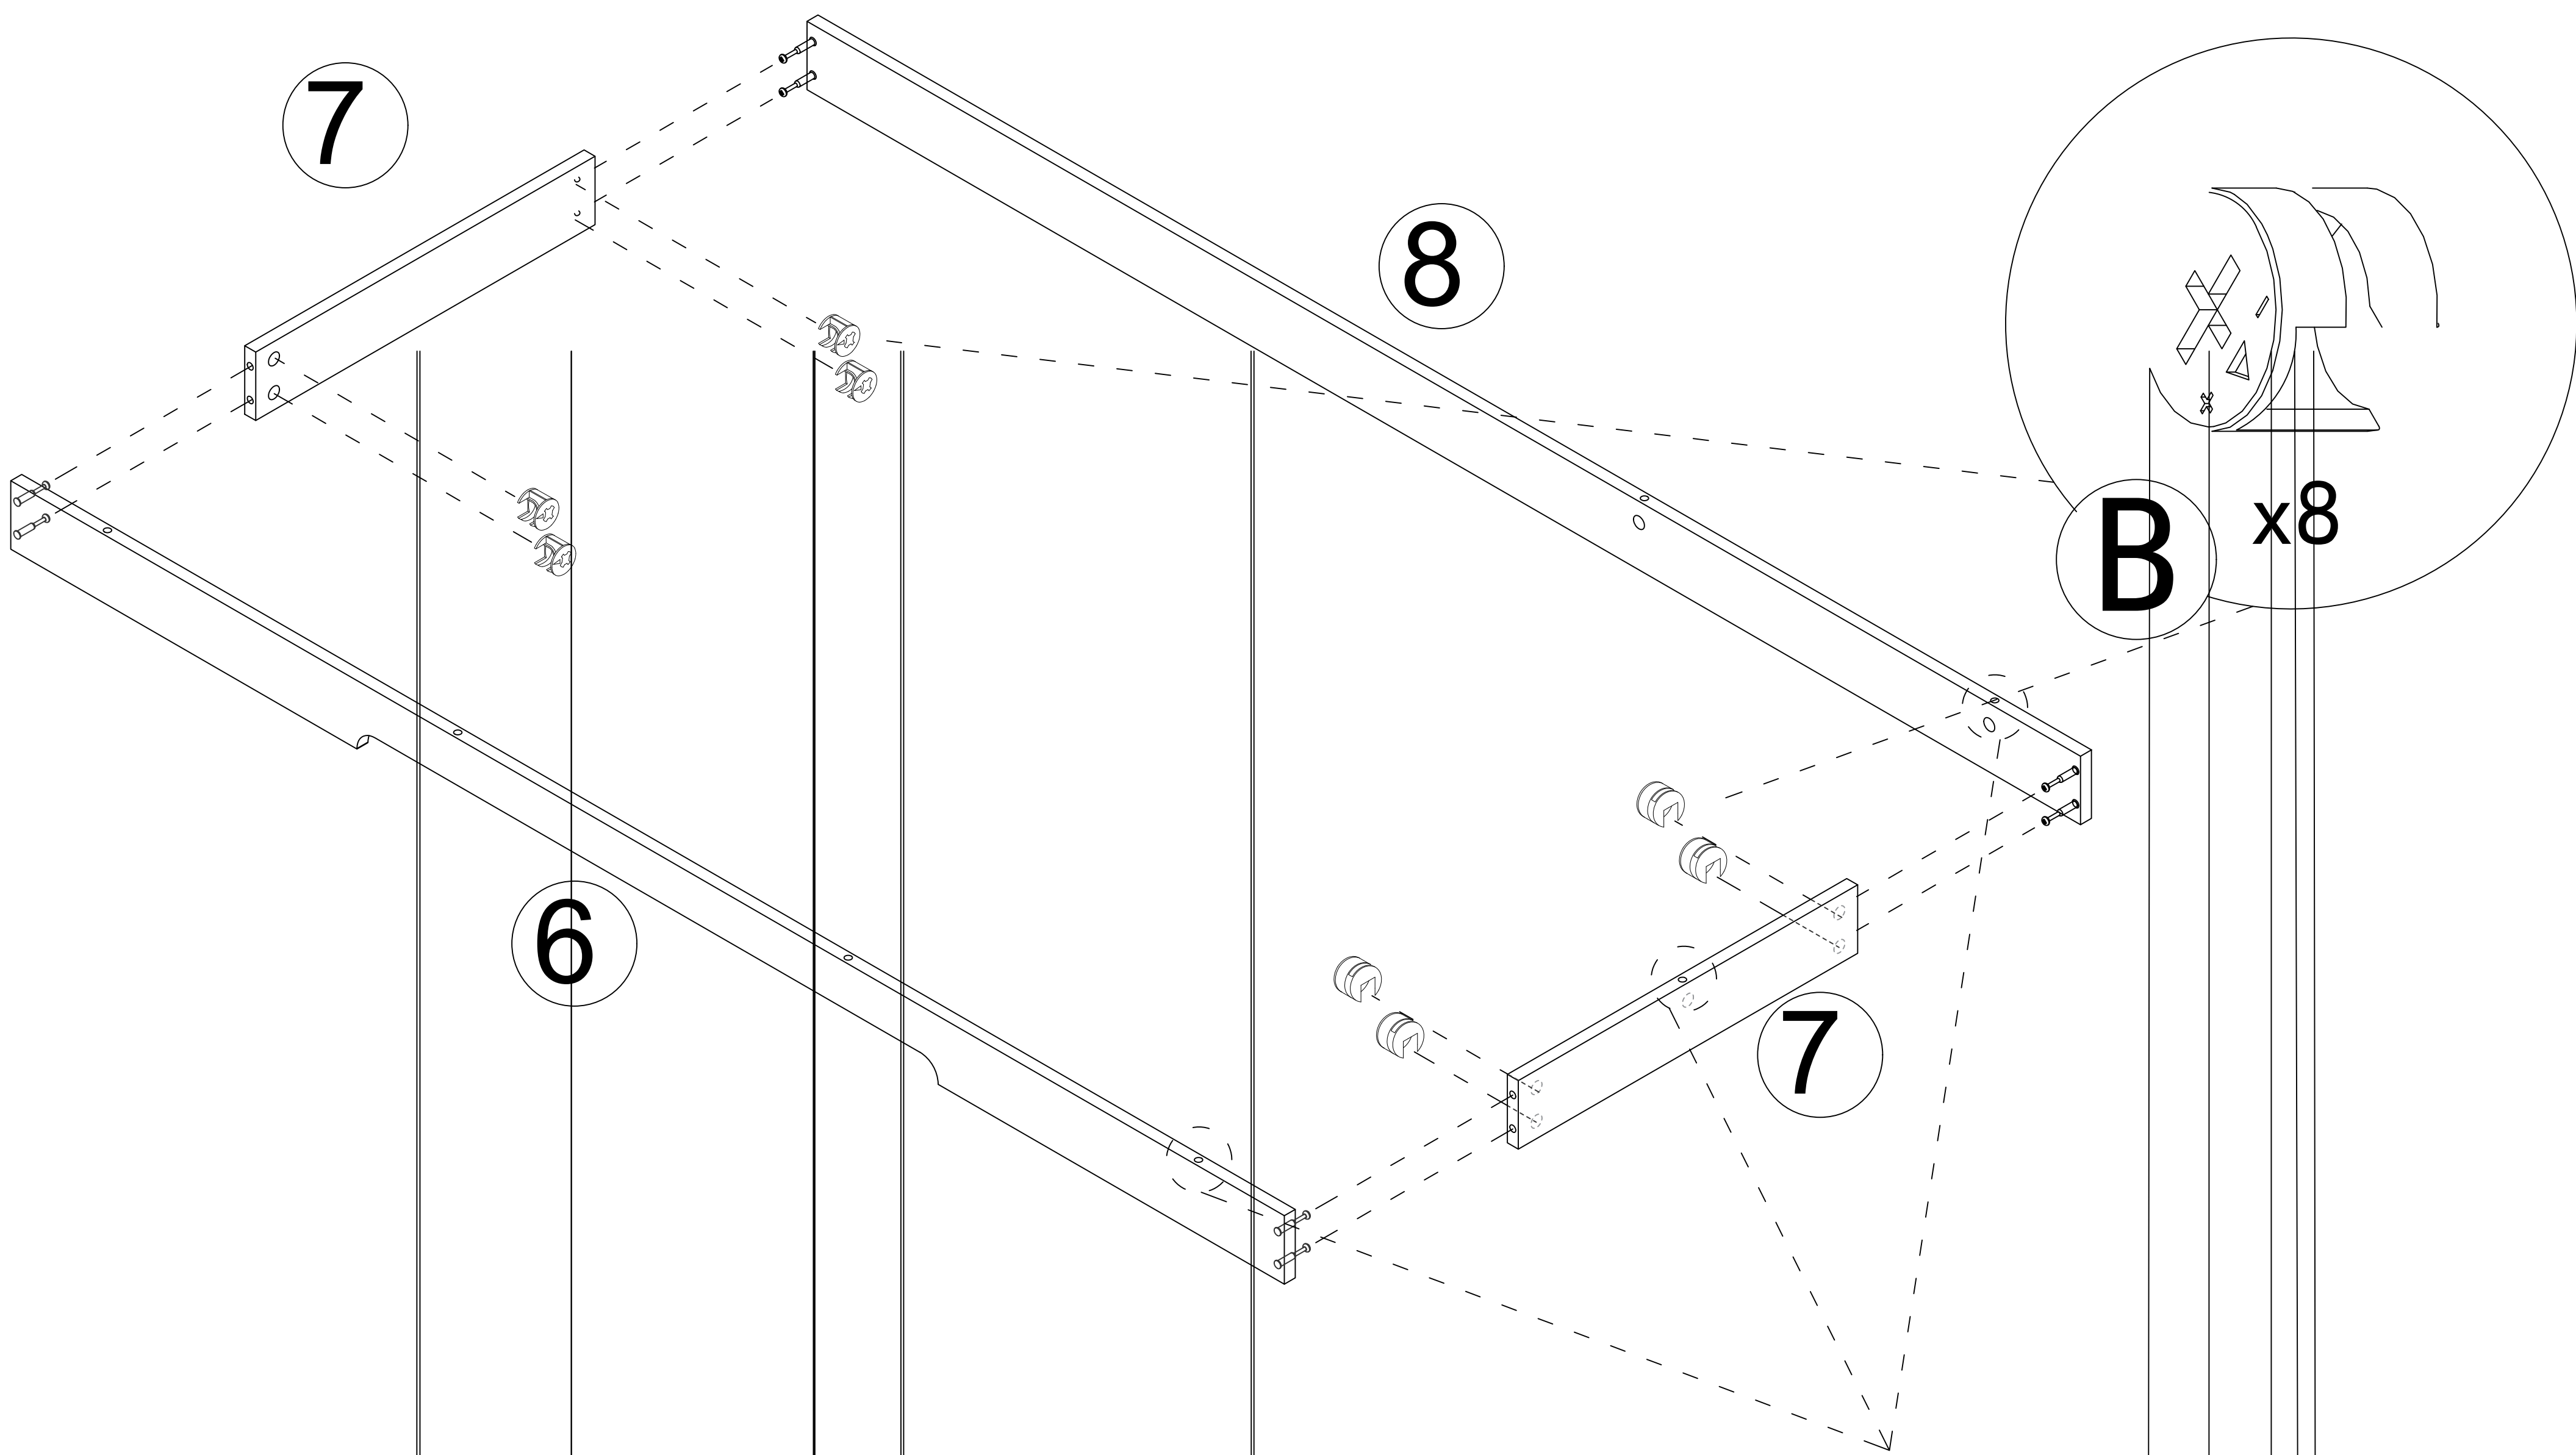

The side holes of the "6","7","8" plate are in the same direction.


Step 10

B

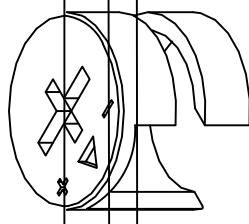


x10


P

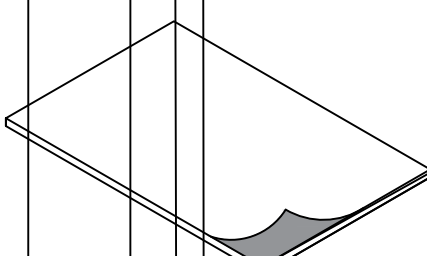

x5

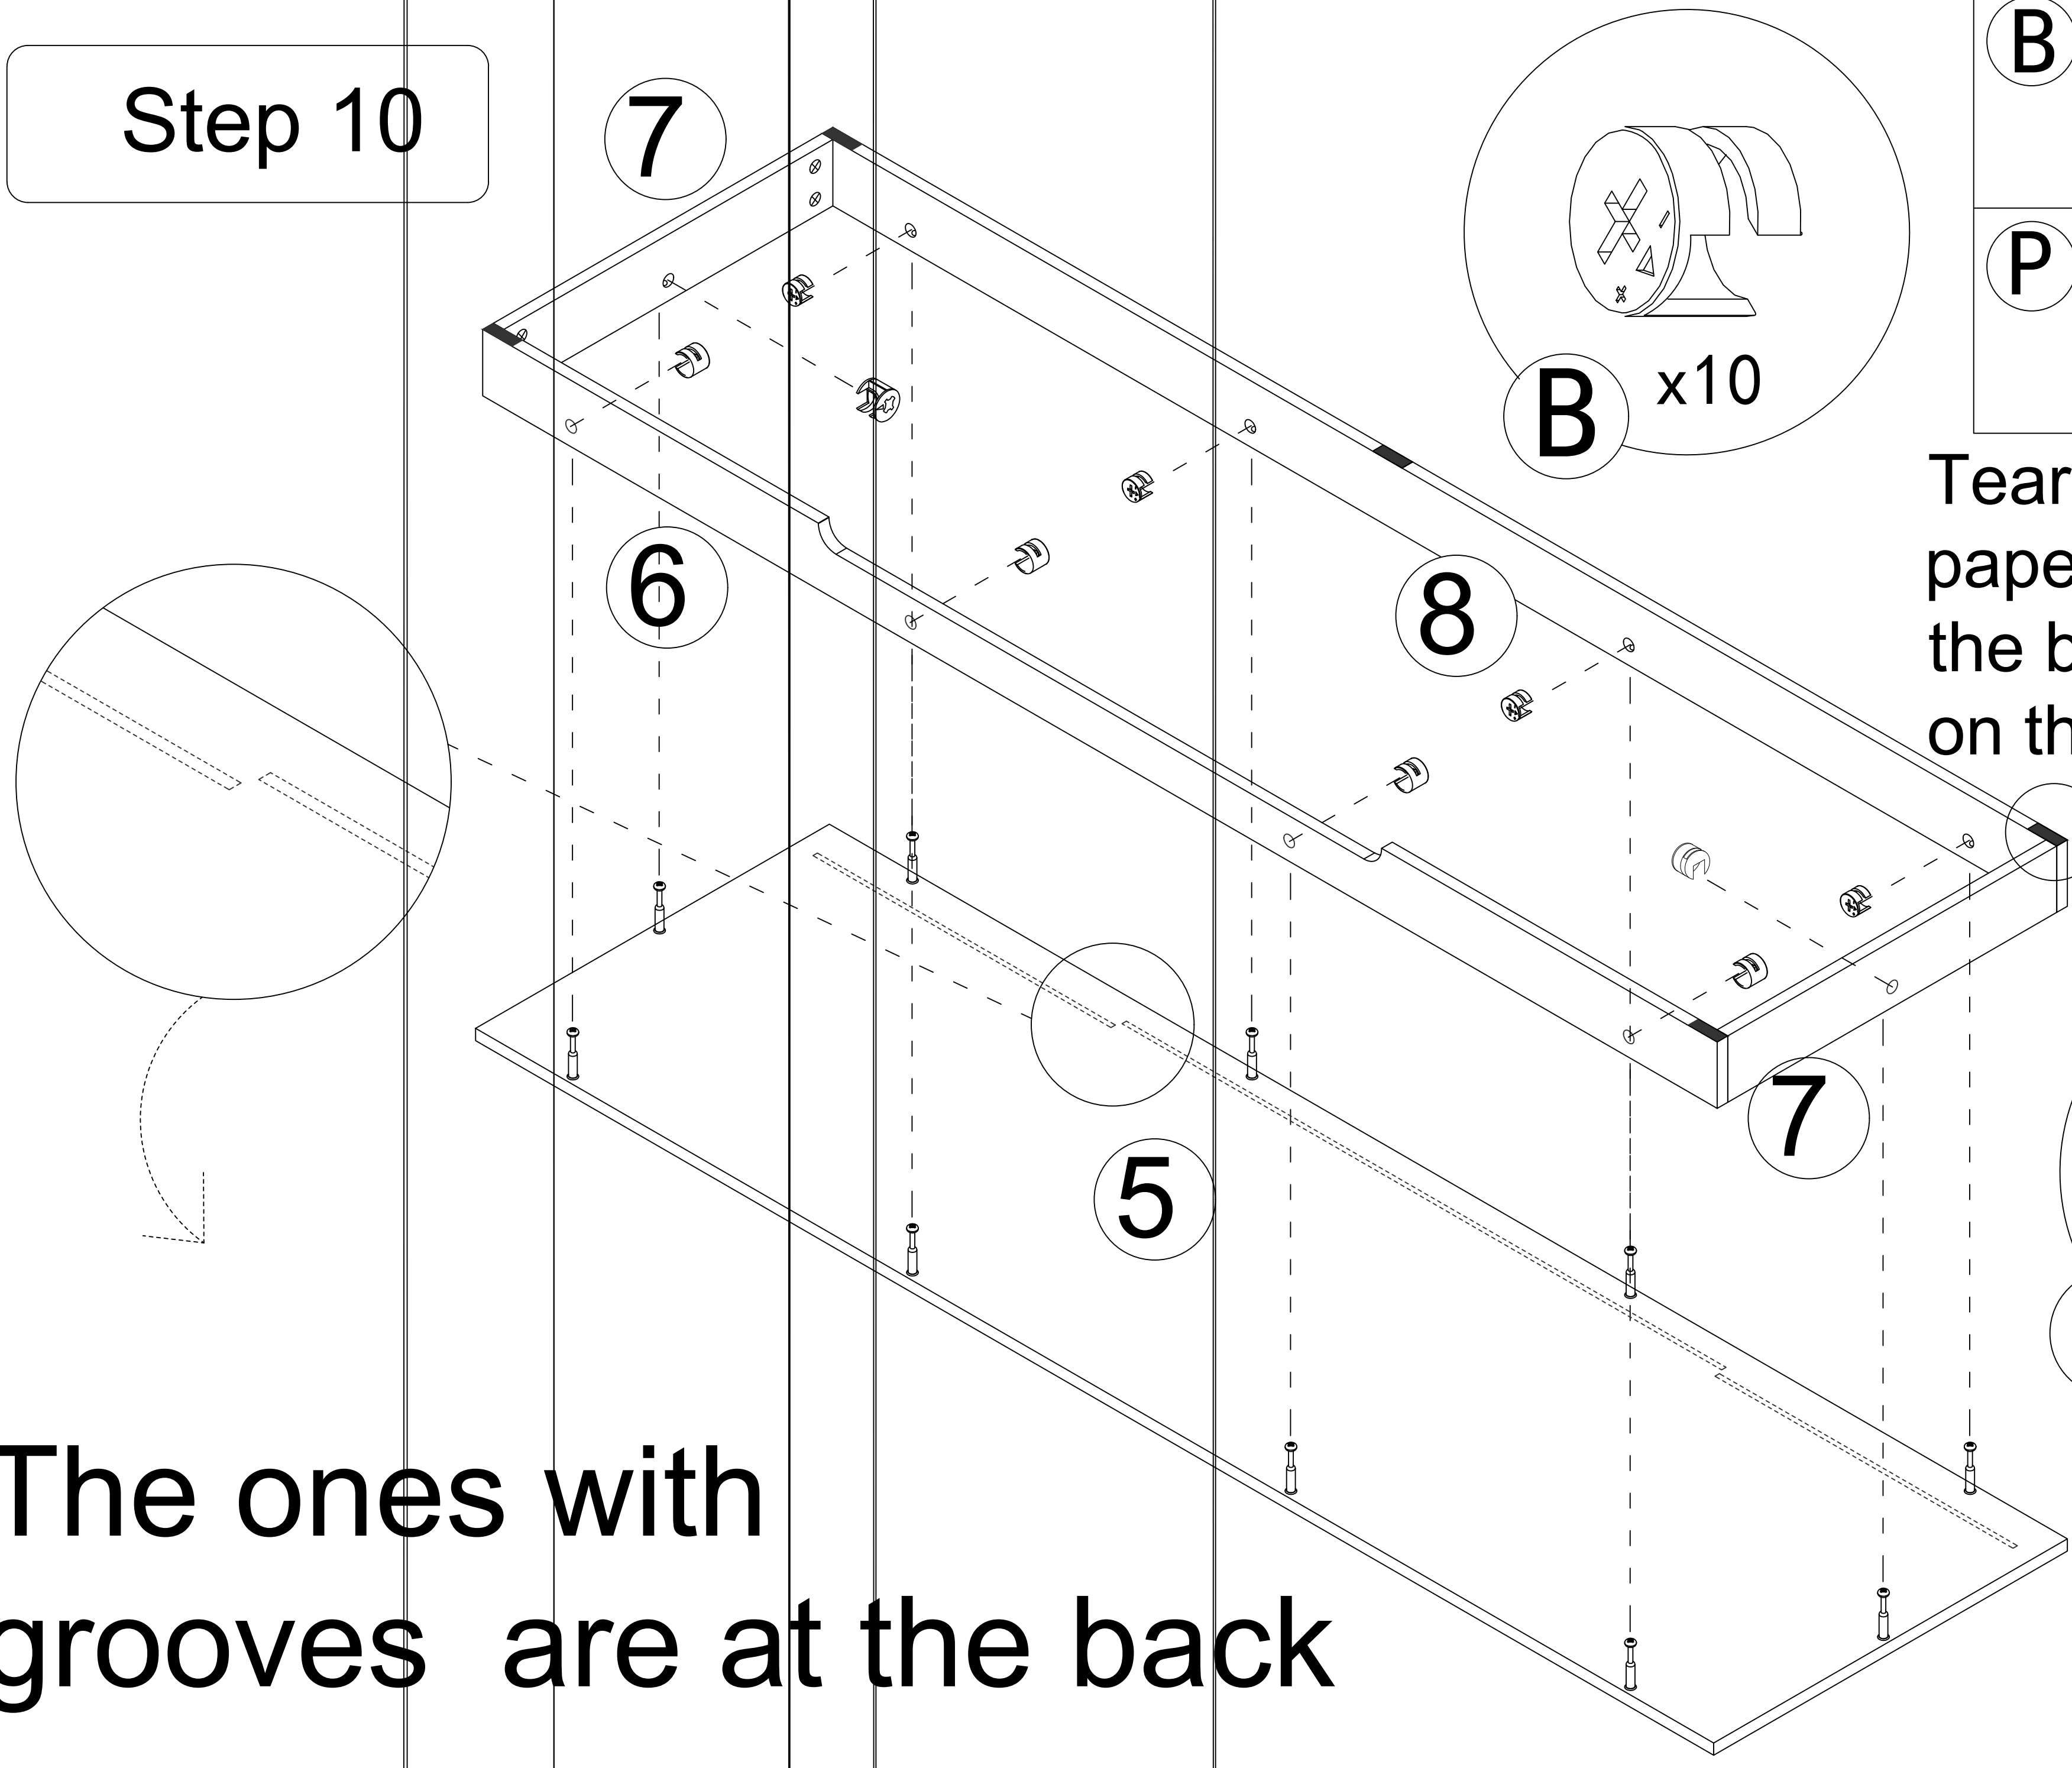


Tear off release paper and stick the black foot pad on the board

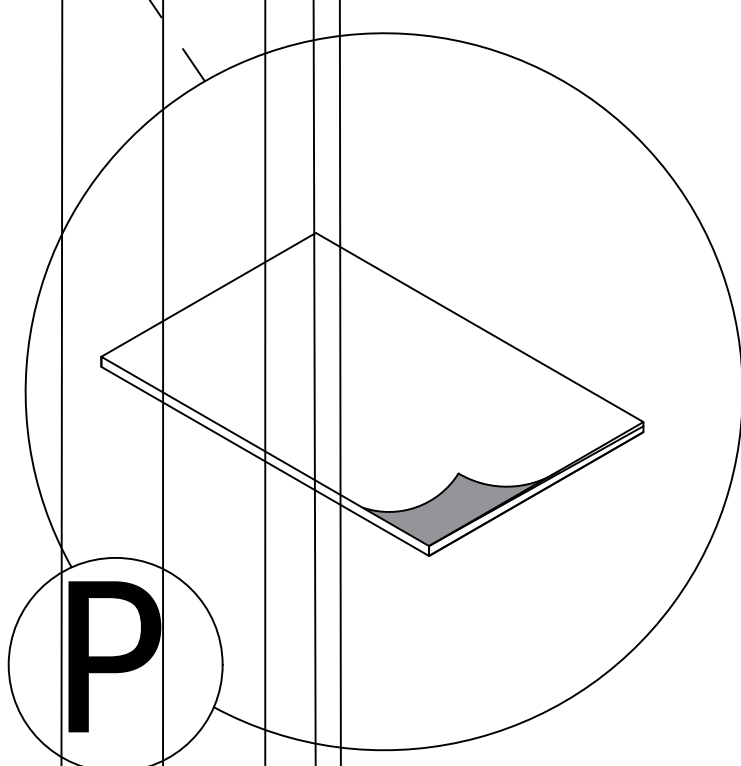


The ones with grooves are at the back


Step 11

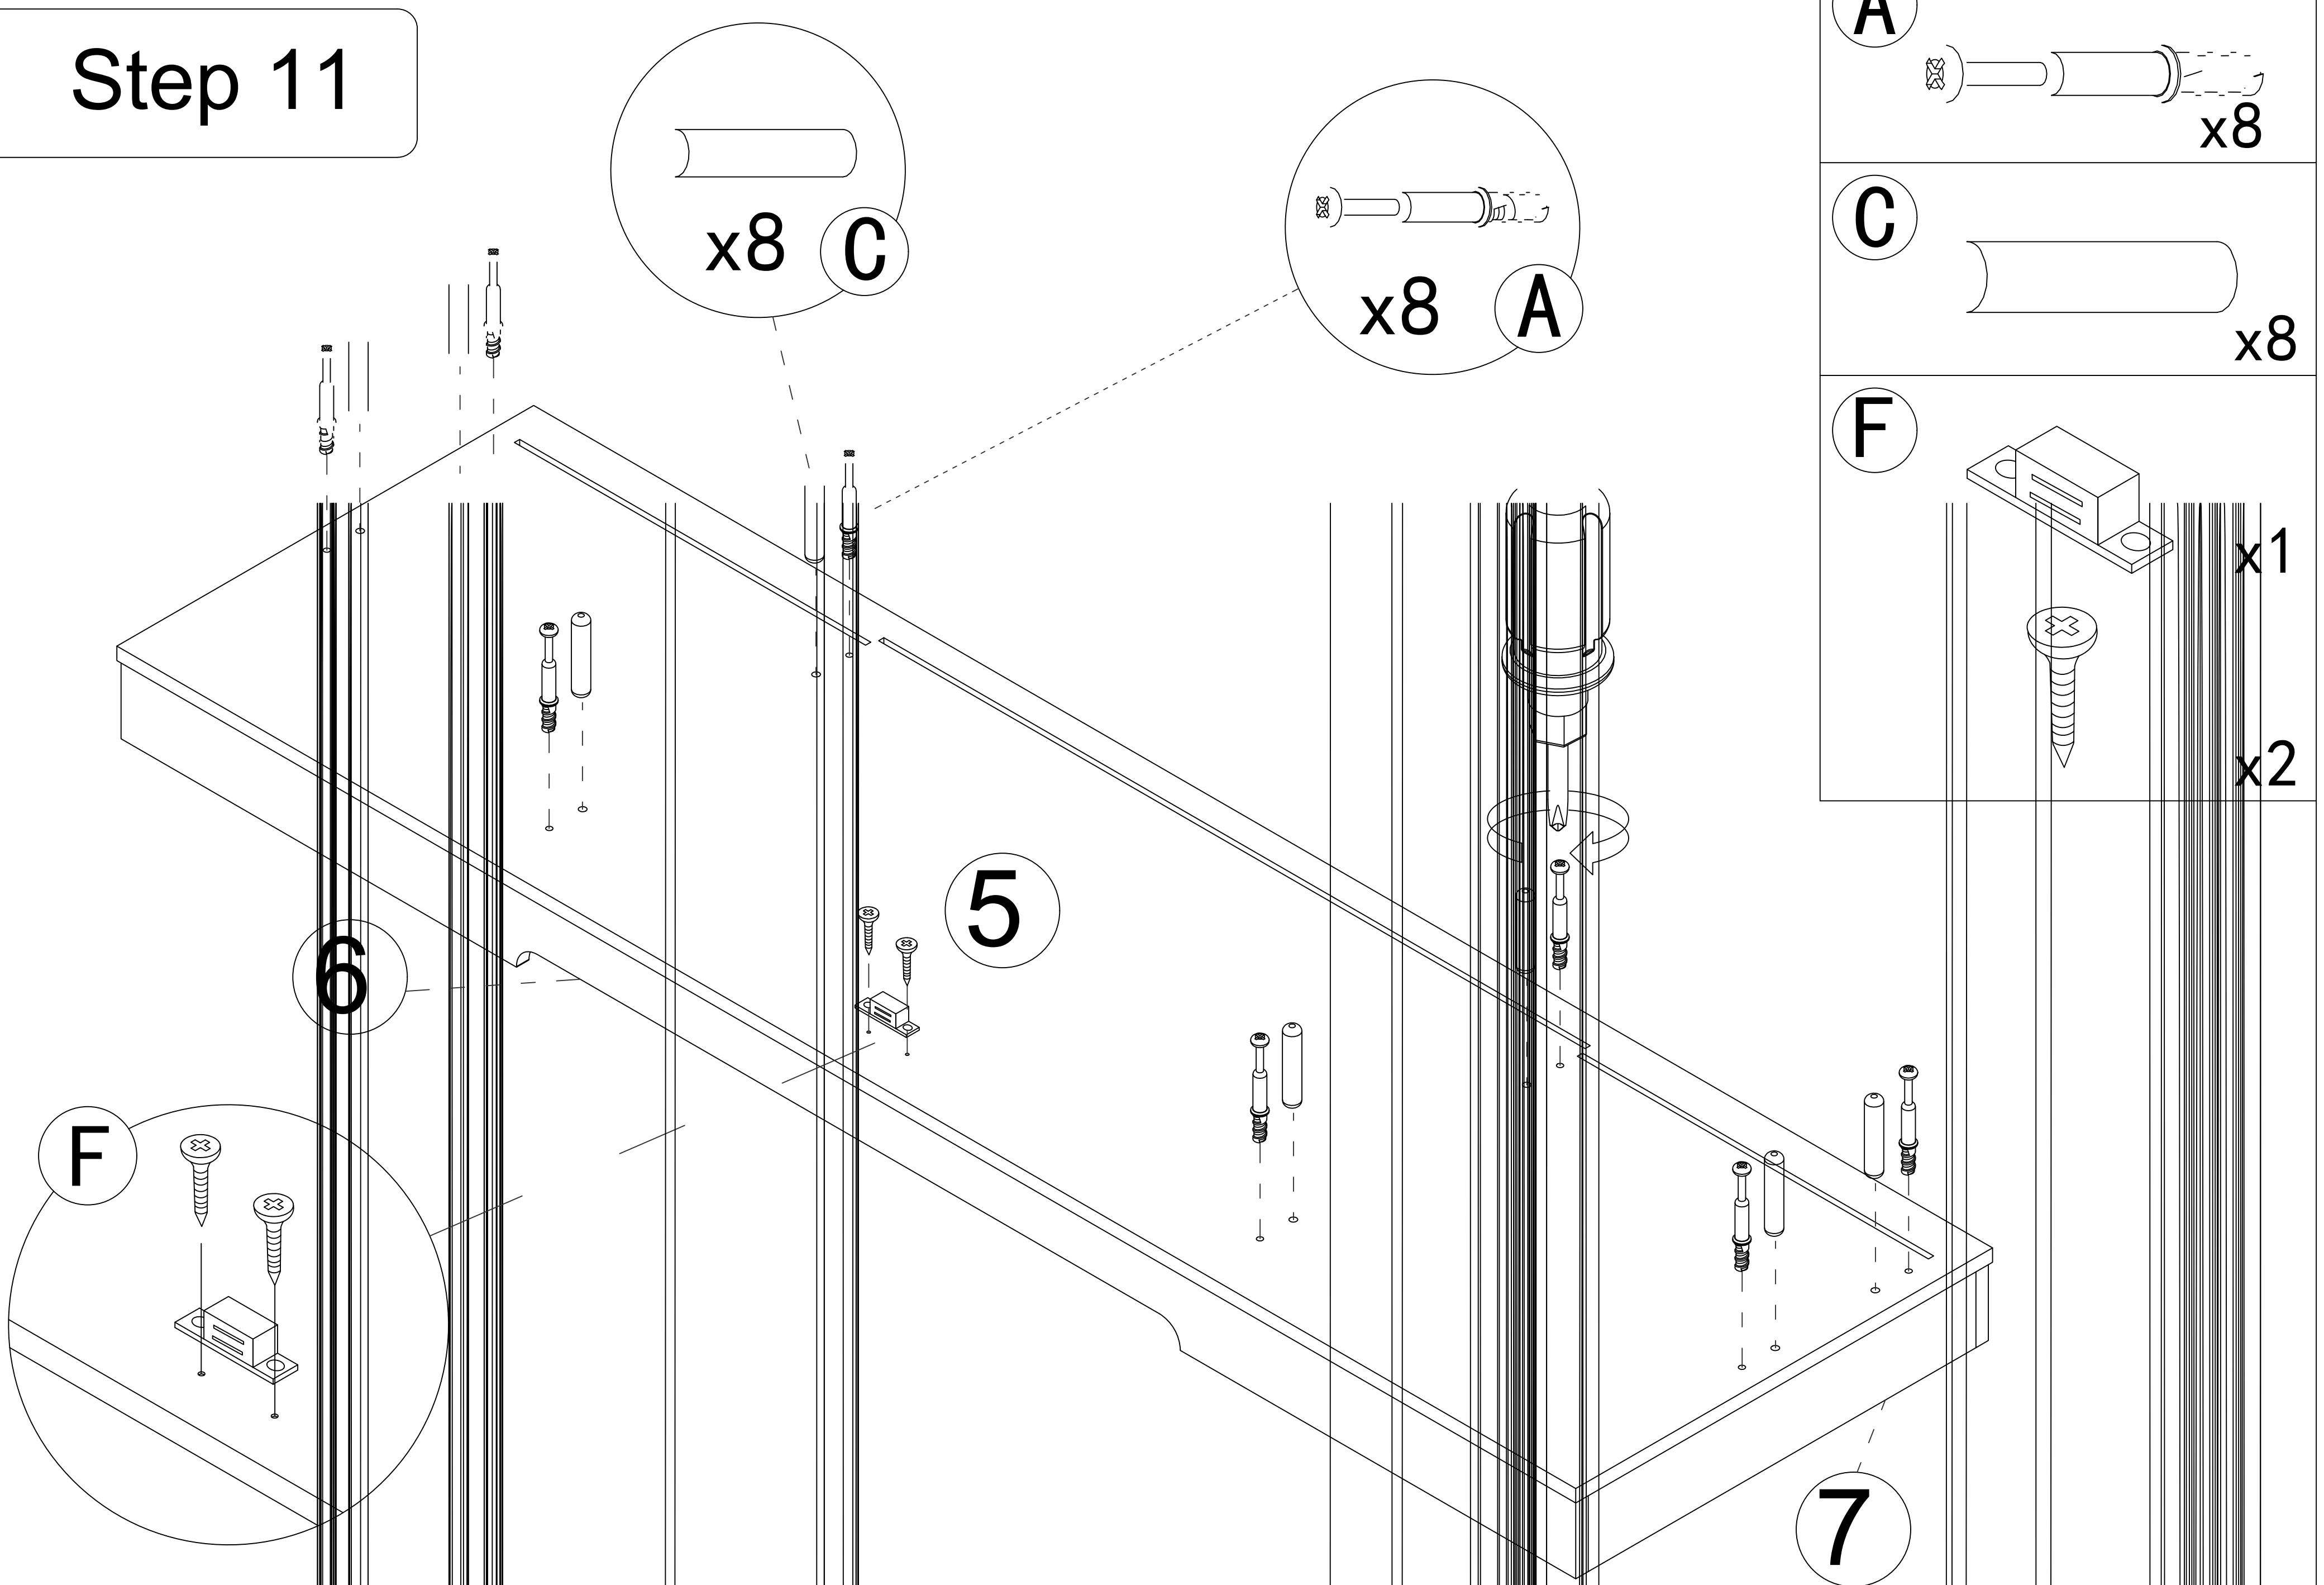



Step 12

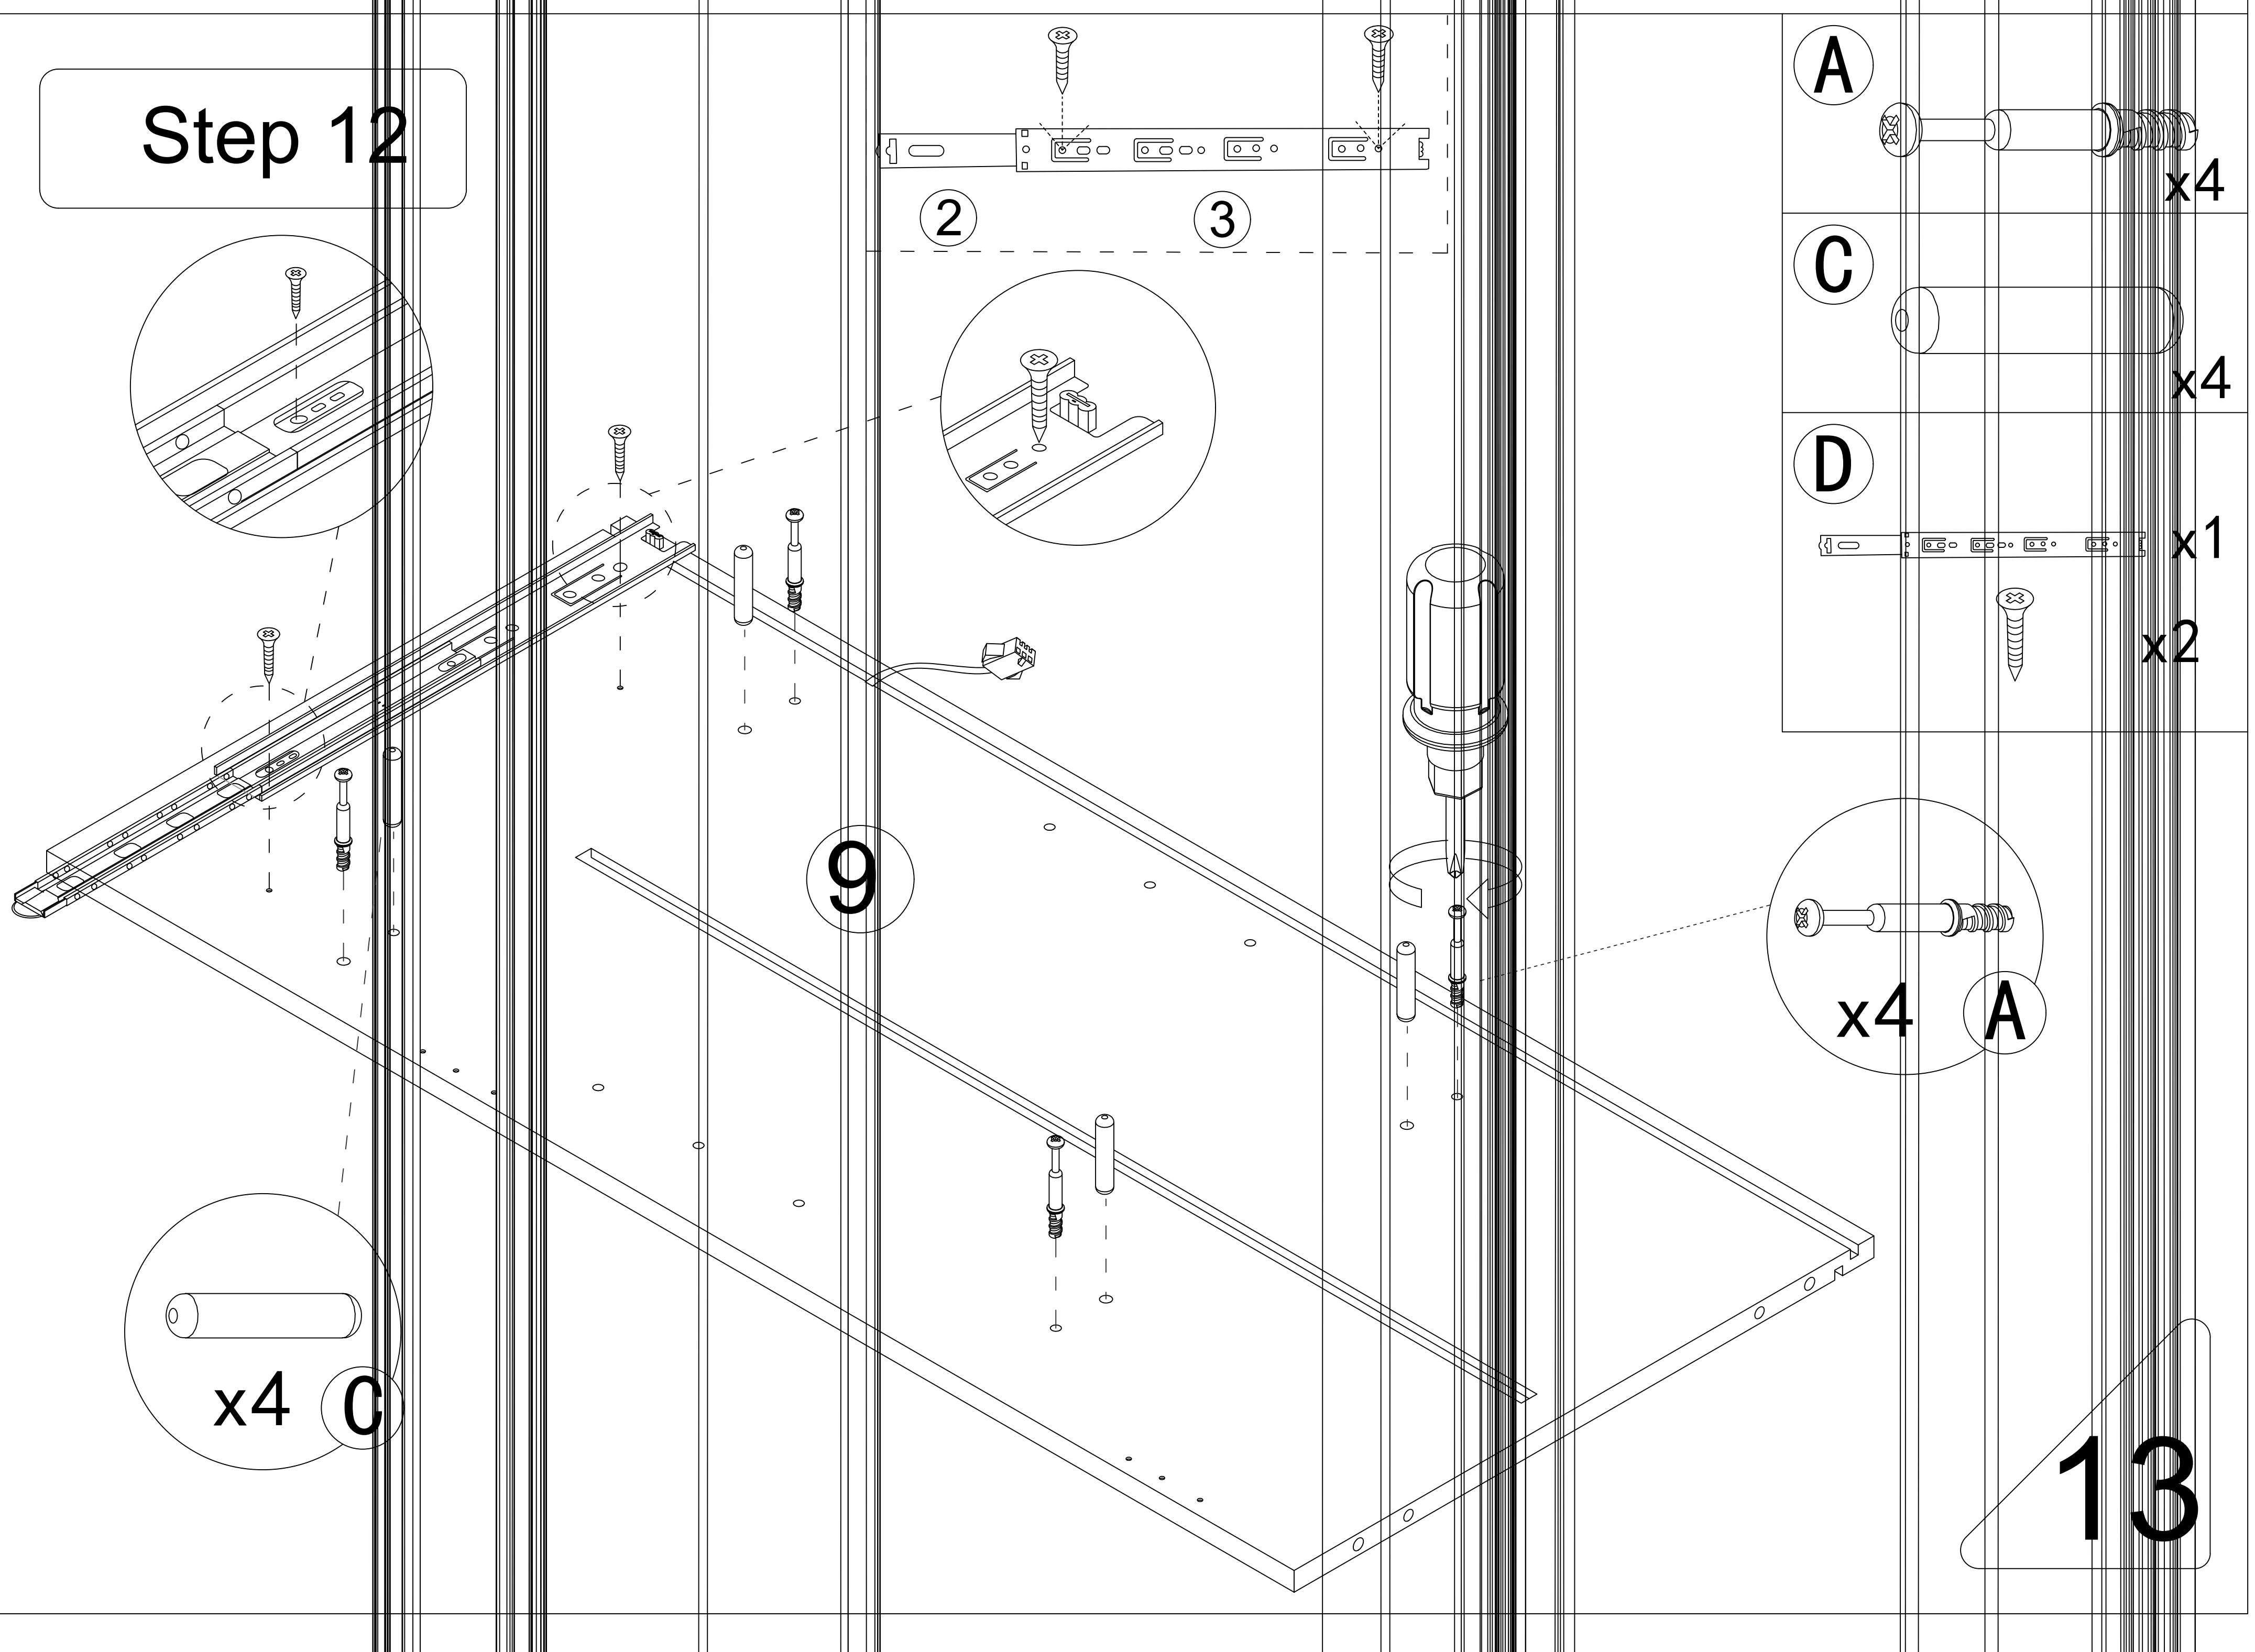

Step 13

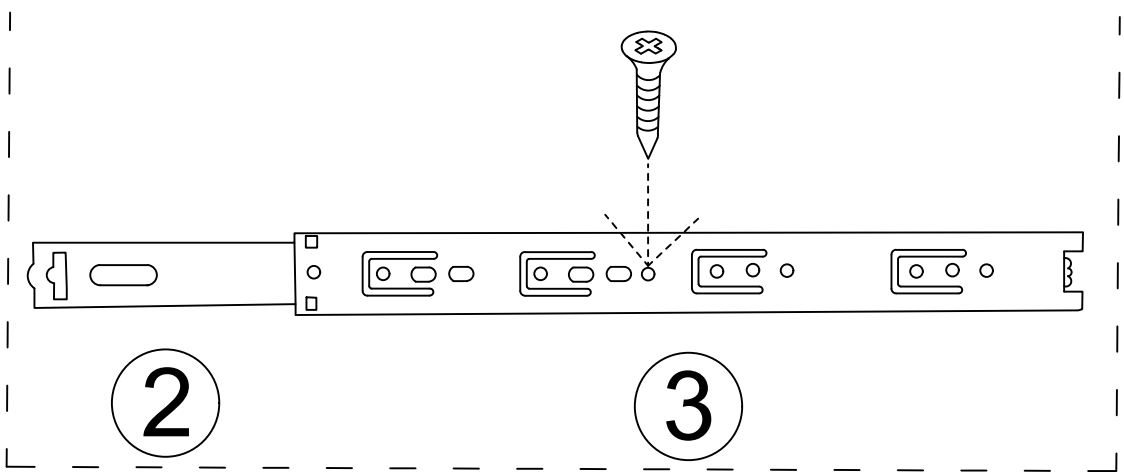




D  x1





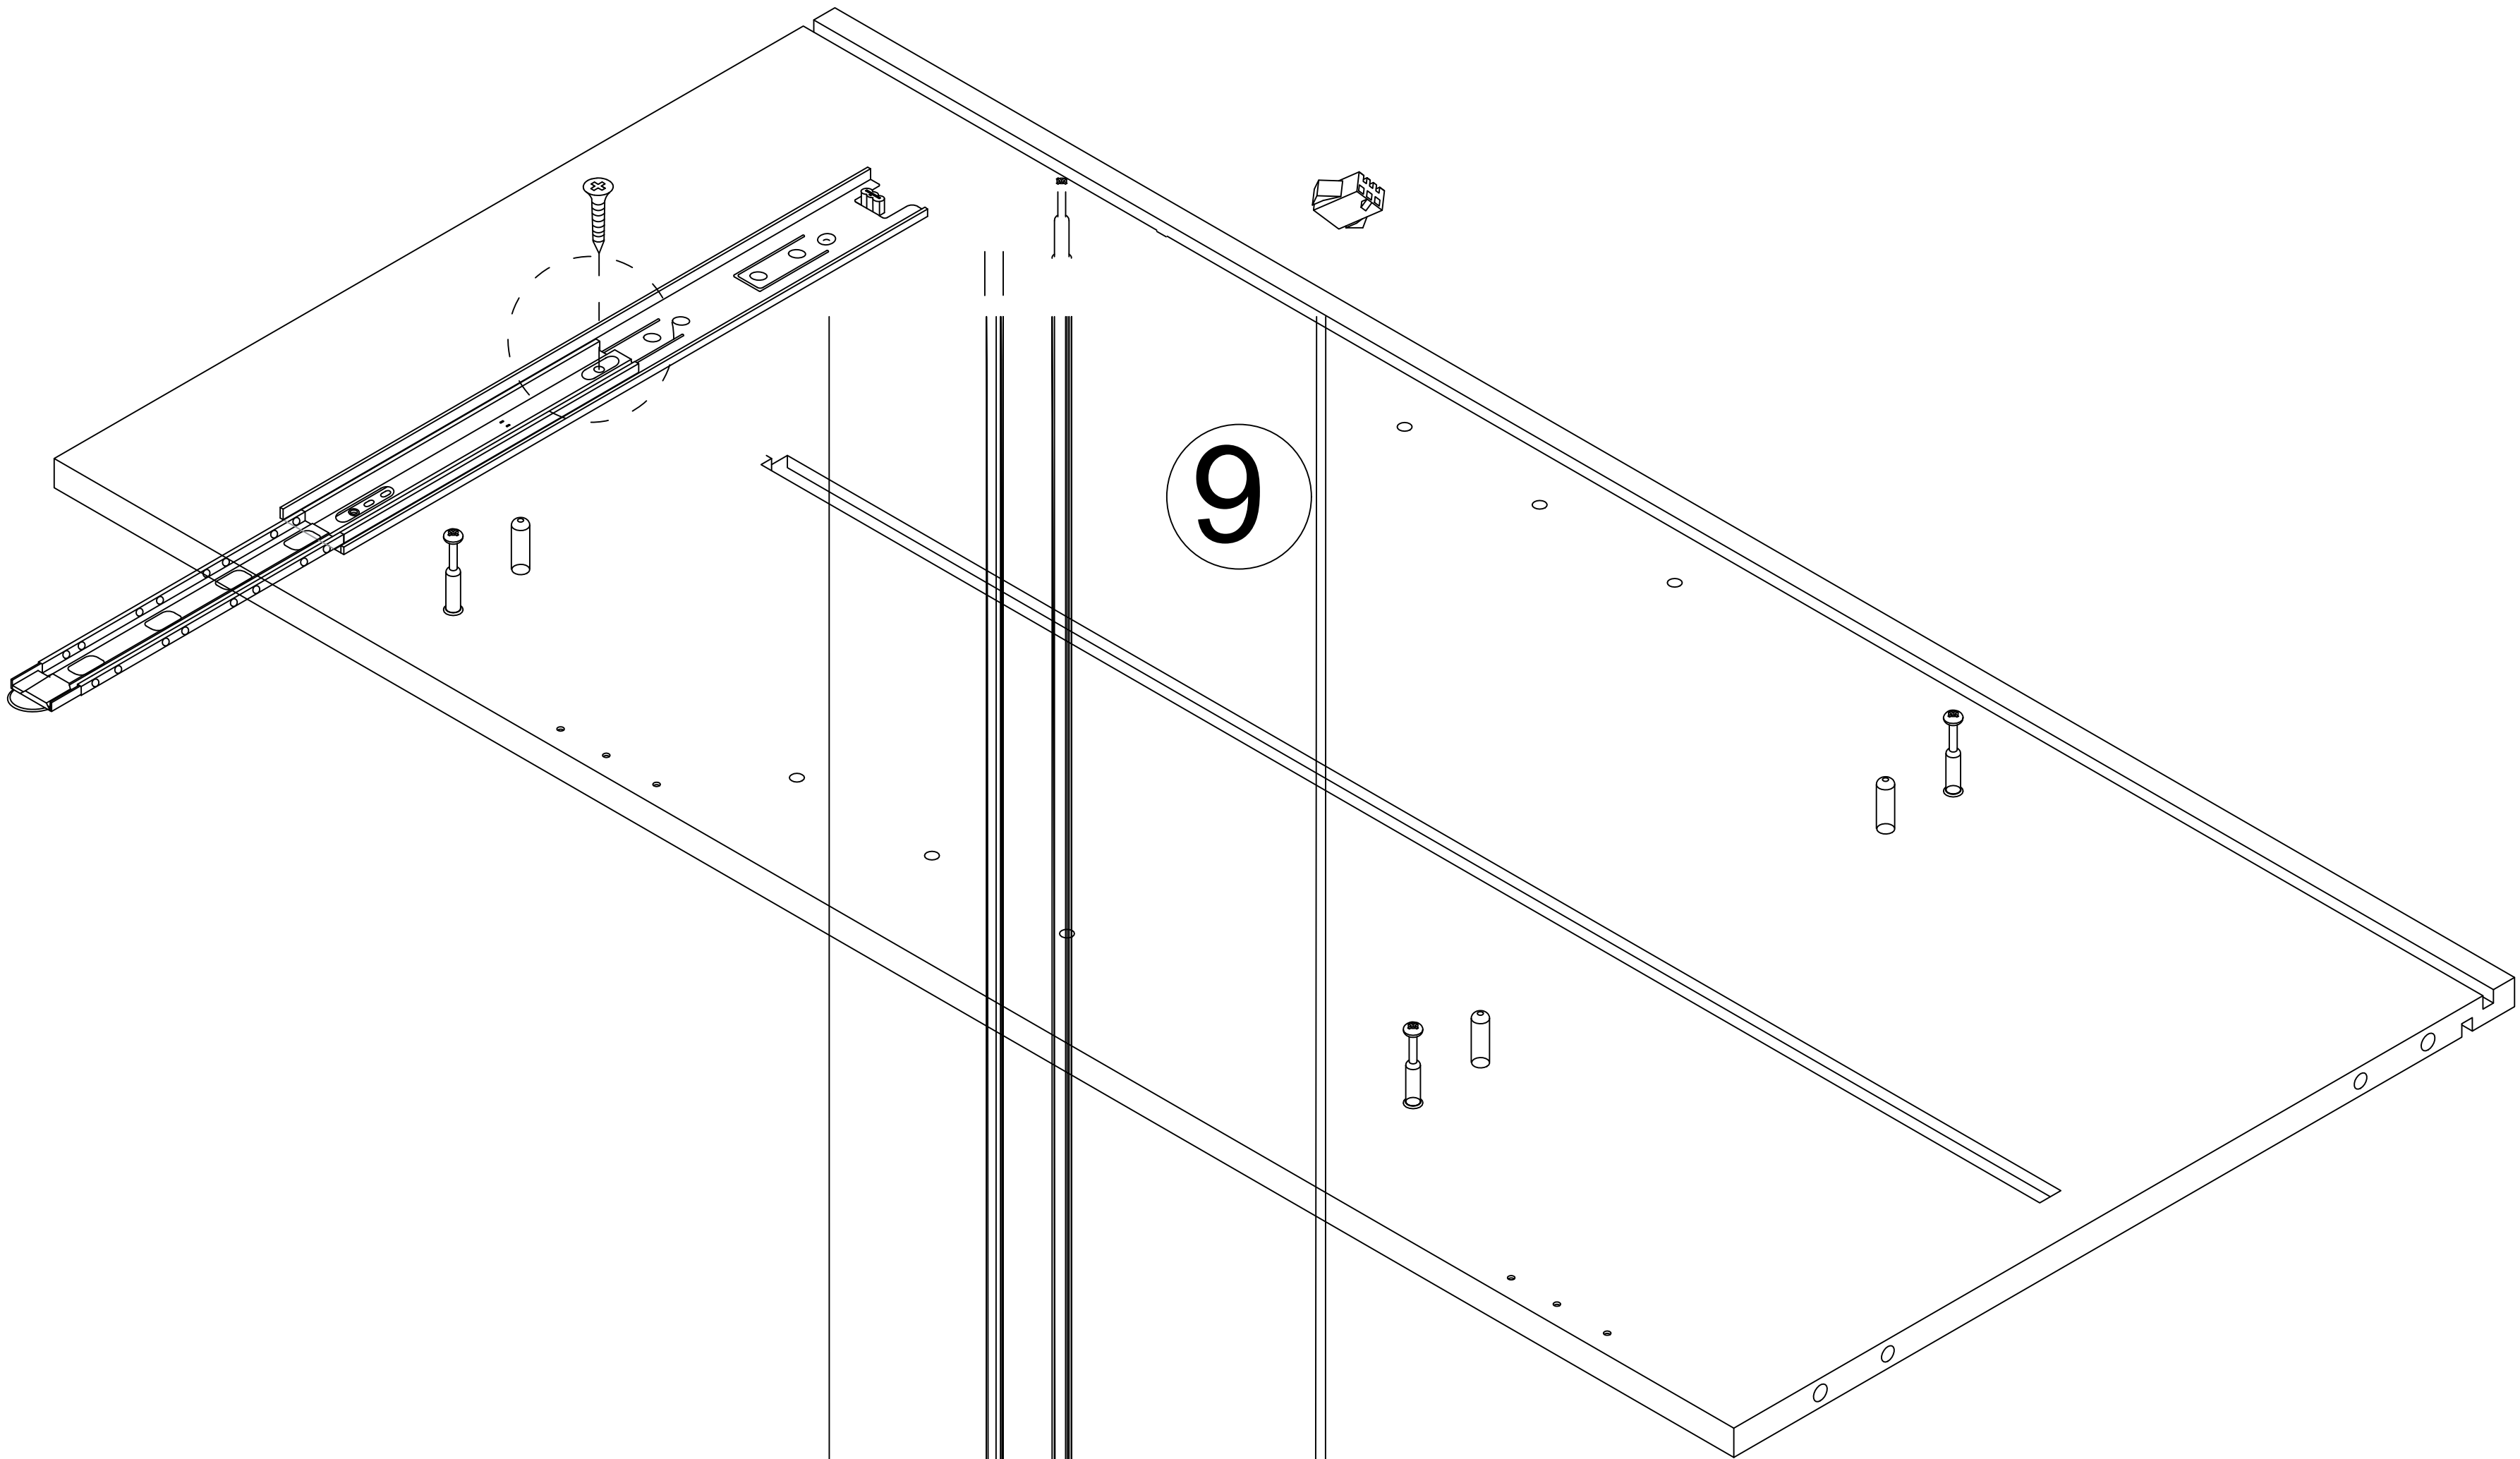


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 14

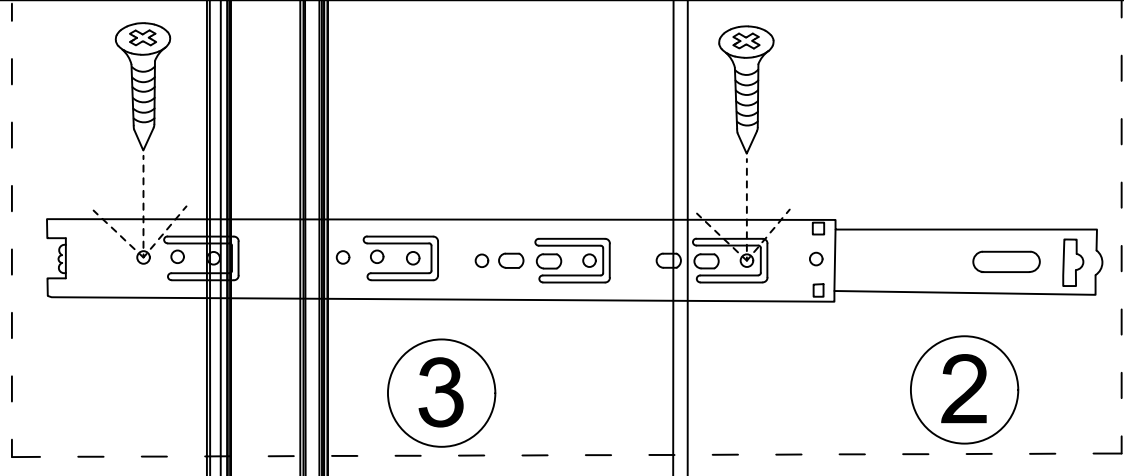


D  x1
 x2

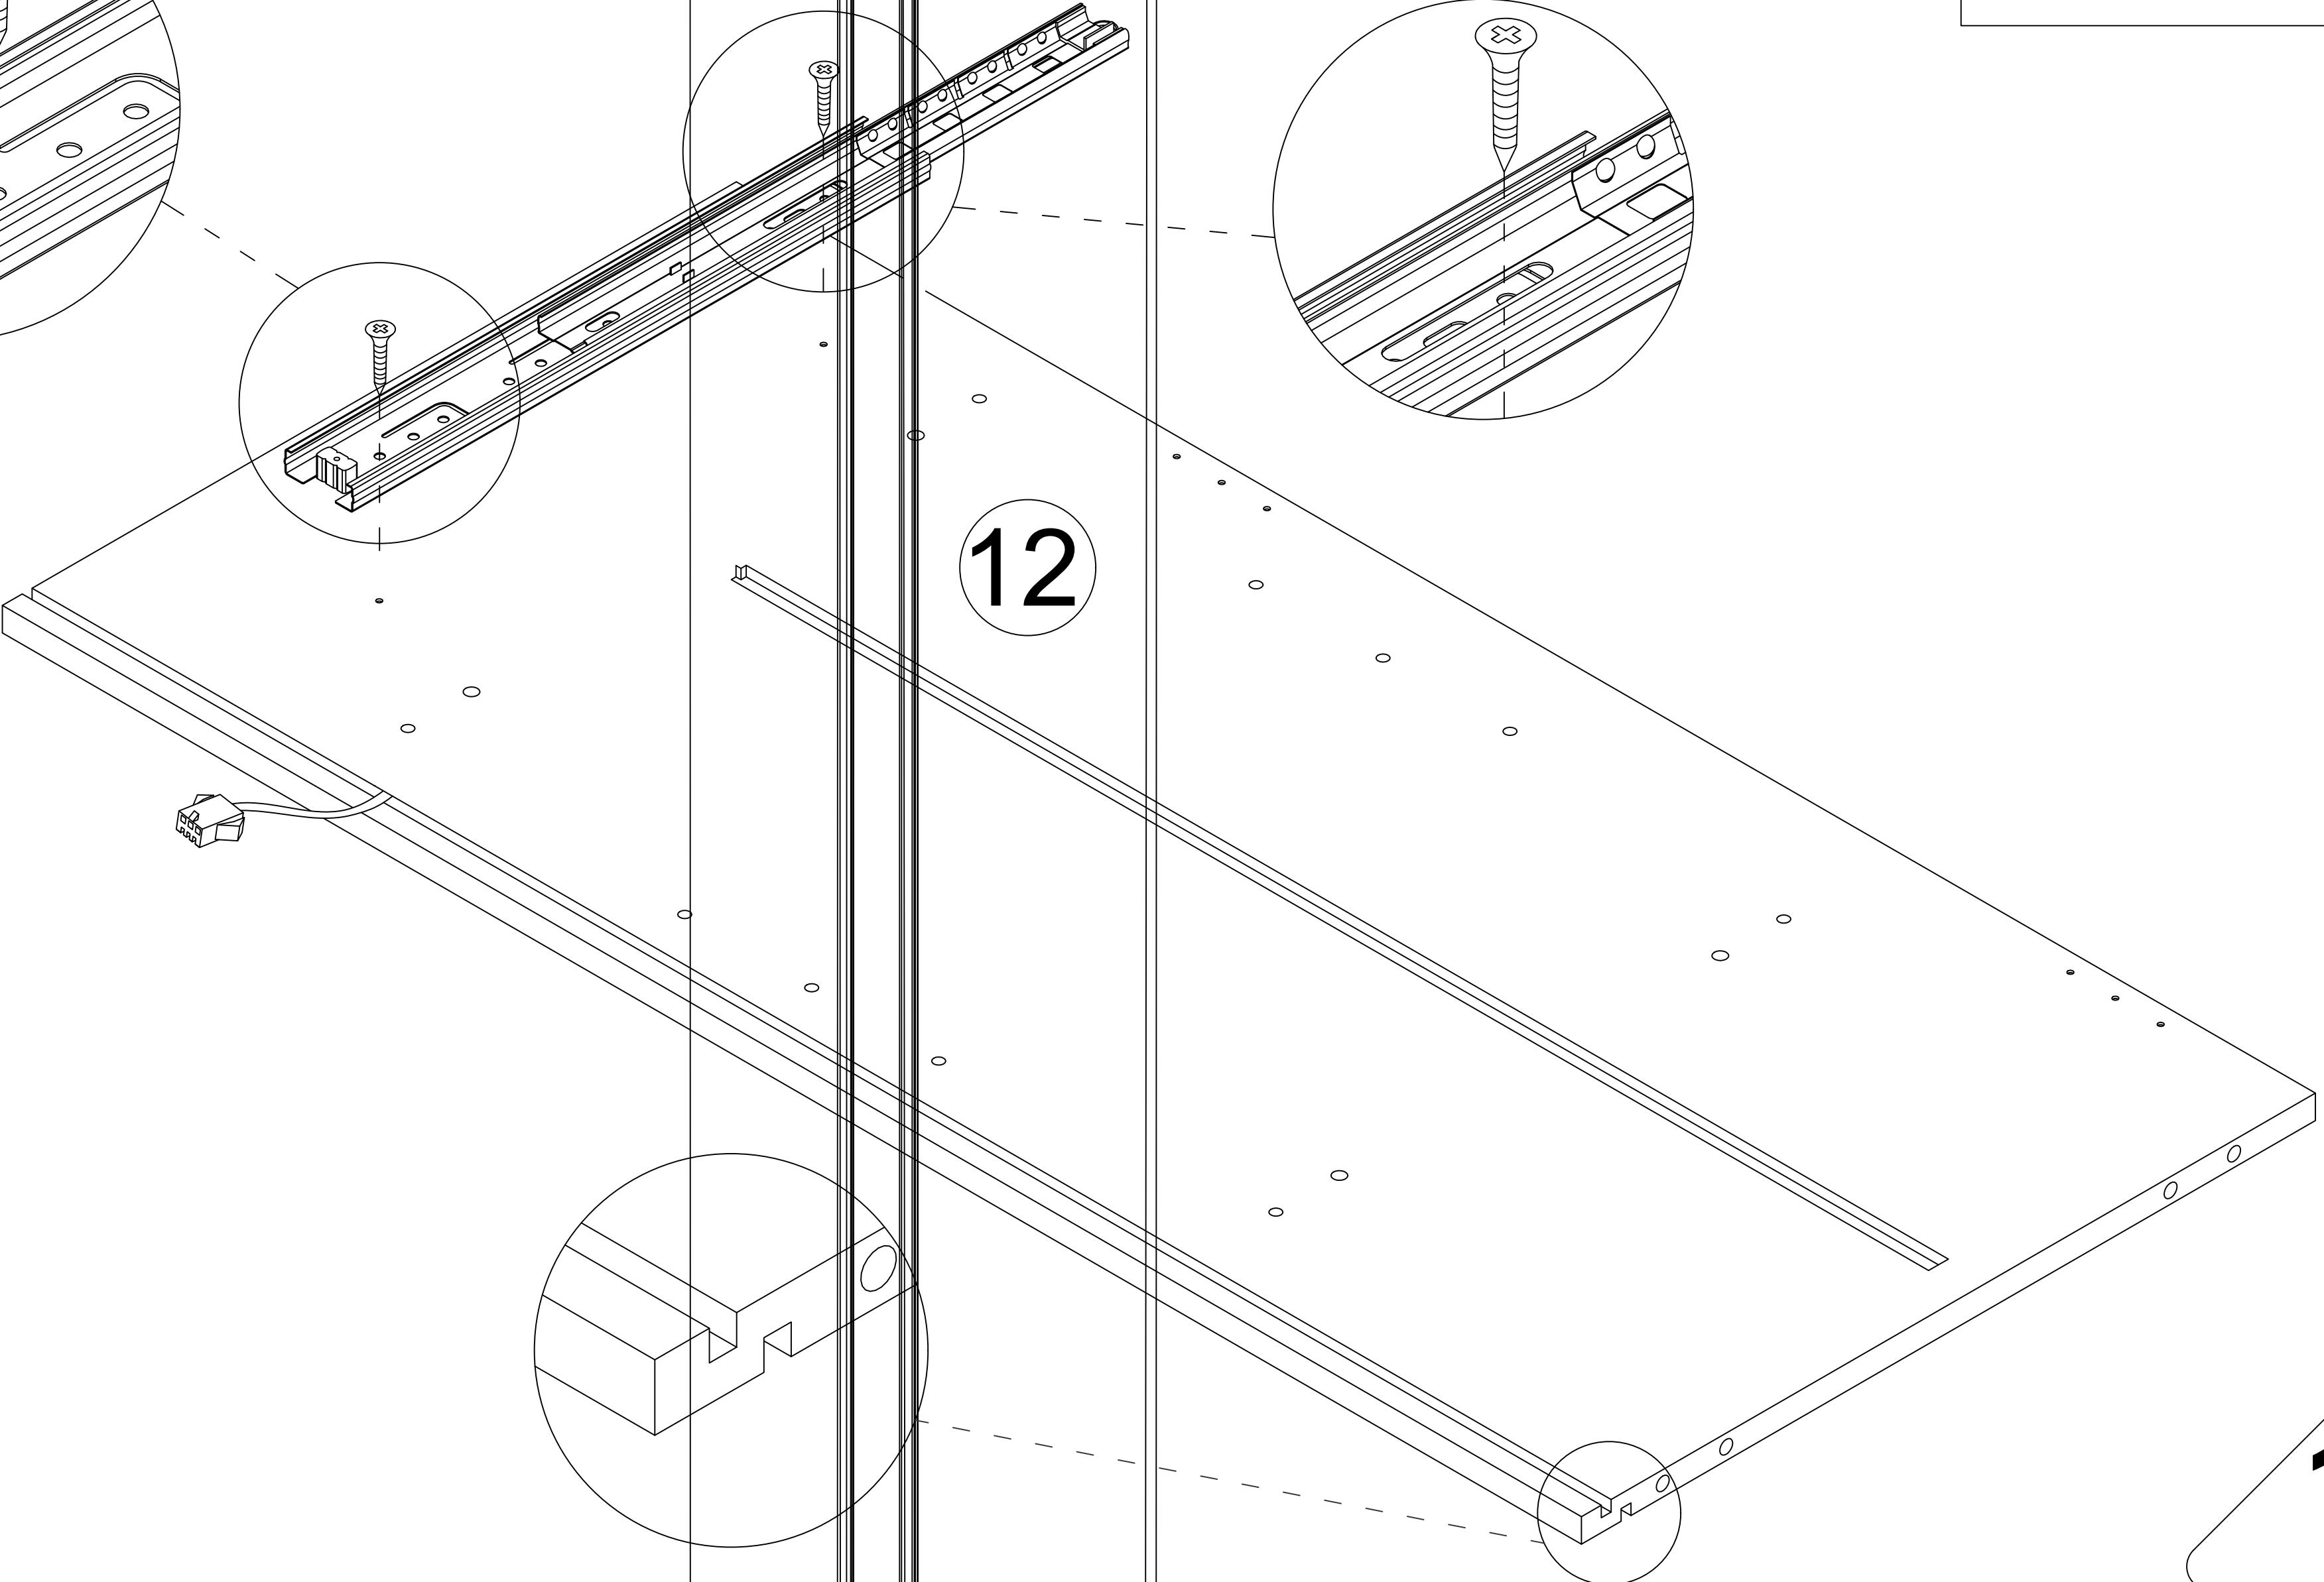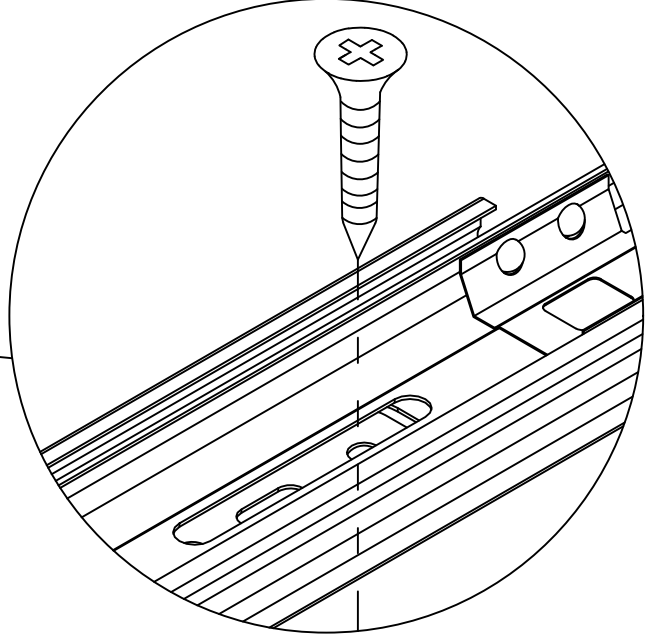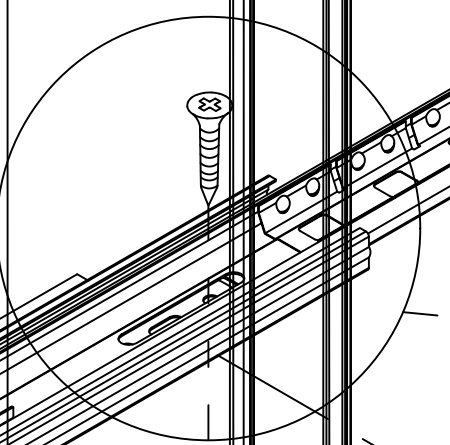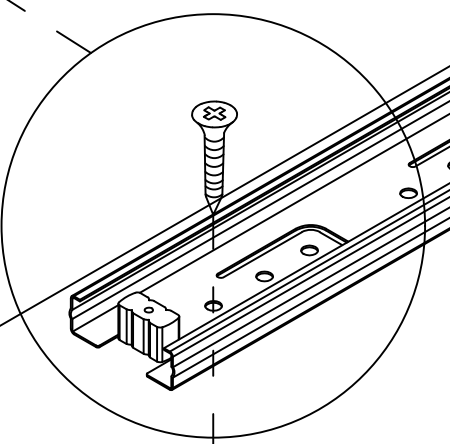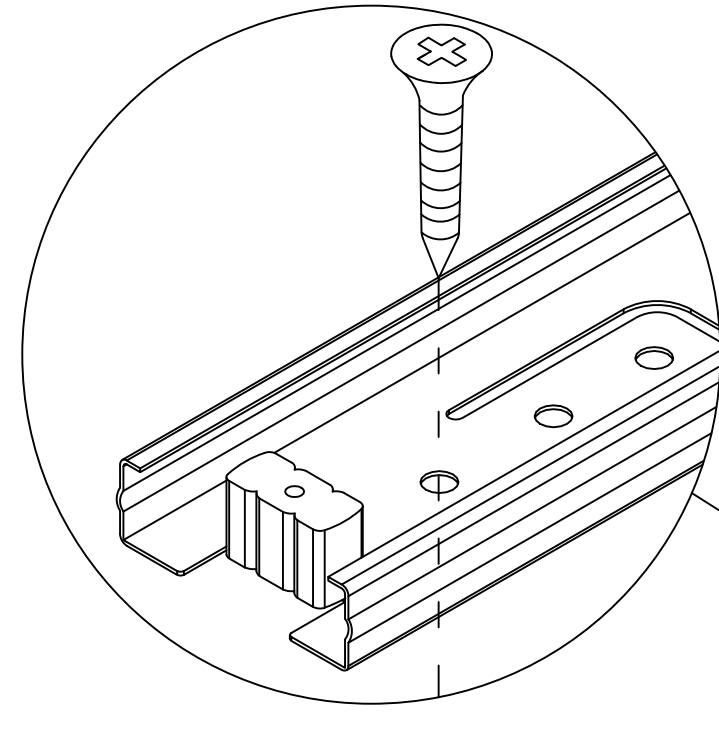

Step 15




- D



x1
- A




x4

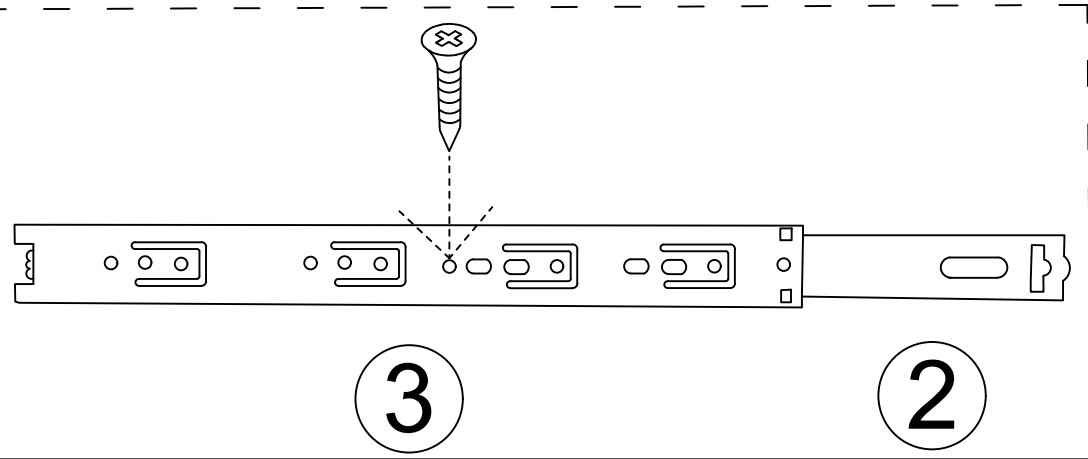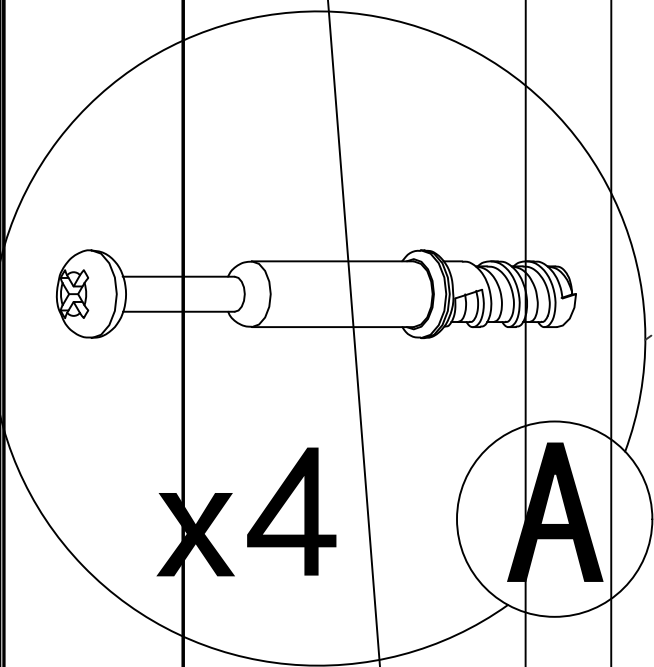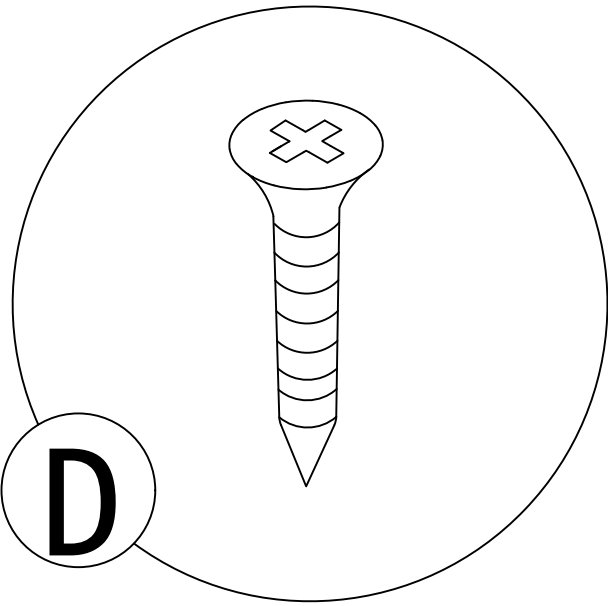


This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 16

- F

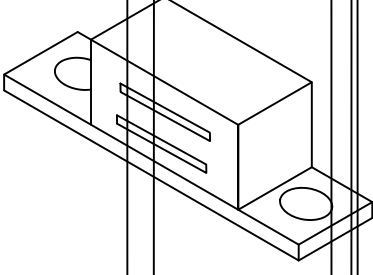

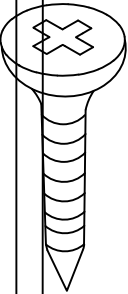
x1
- 

x2

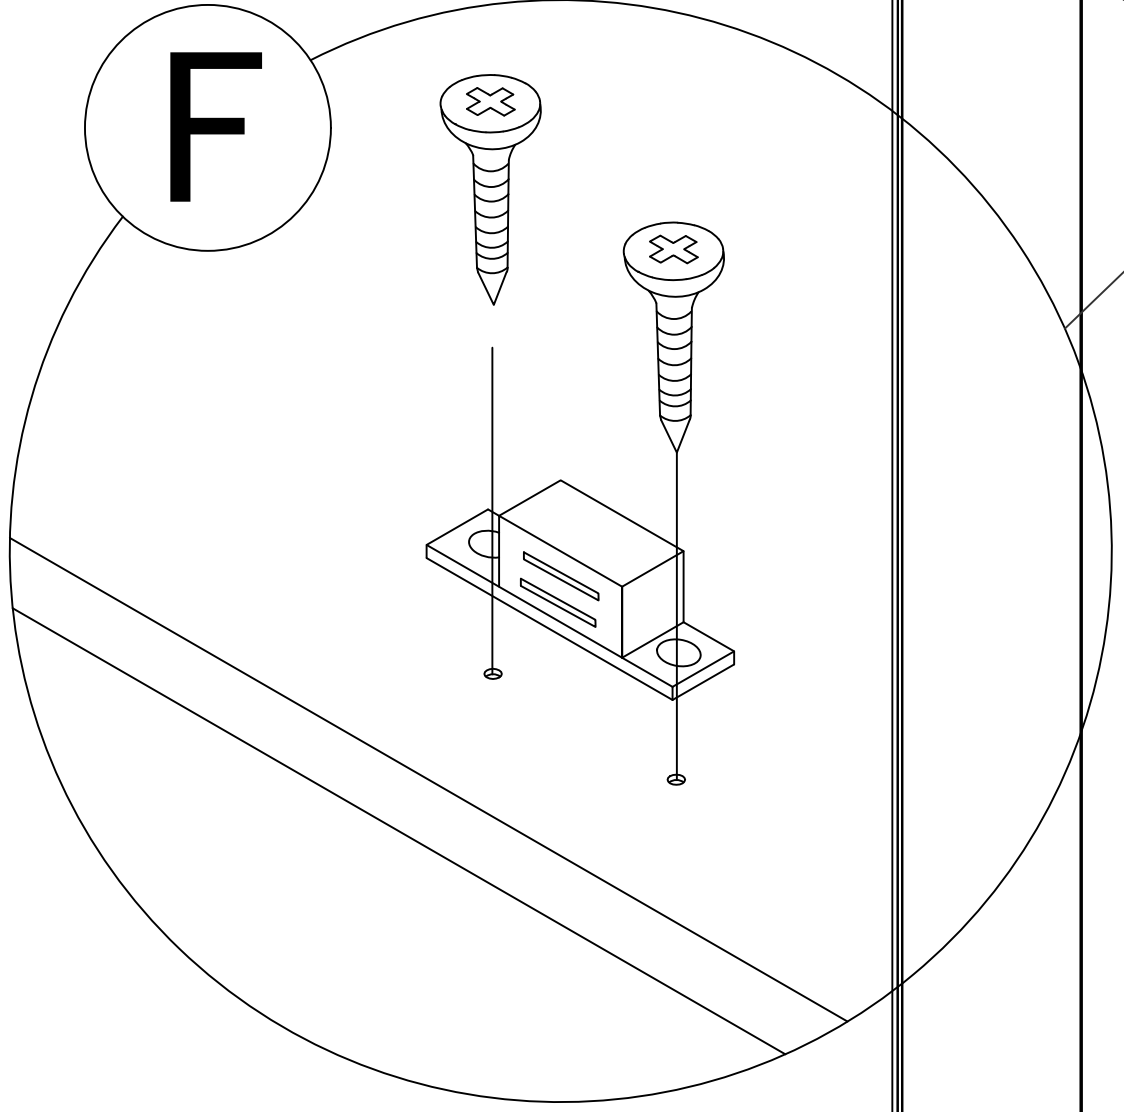

Step 17

B




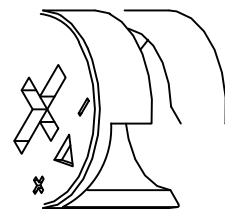


x8



C






x4

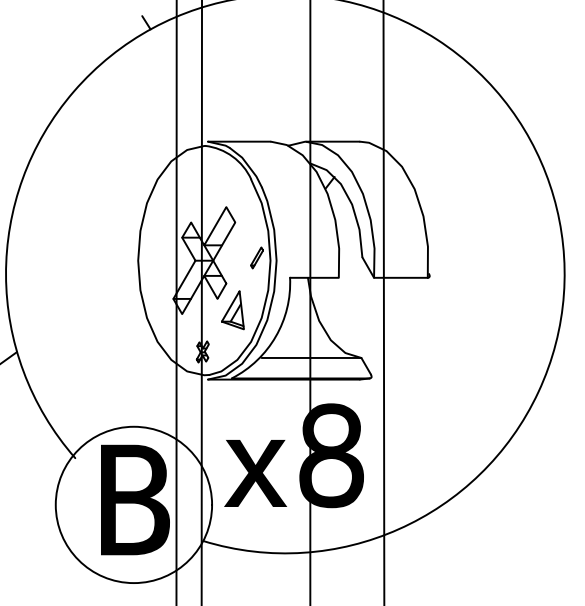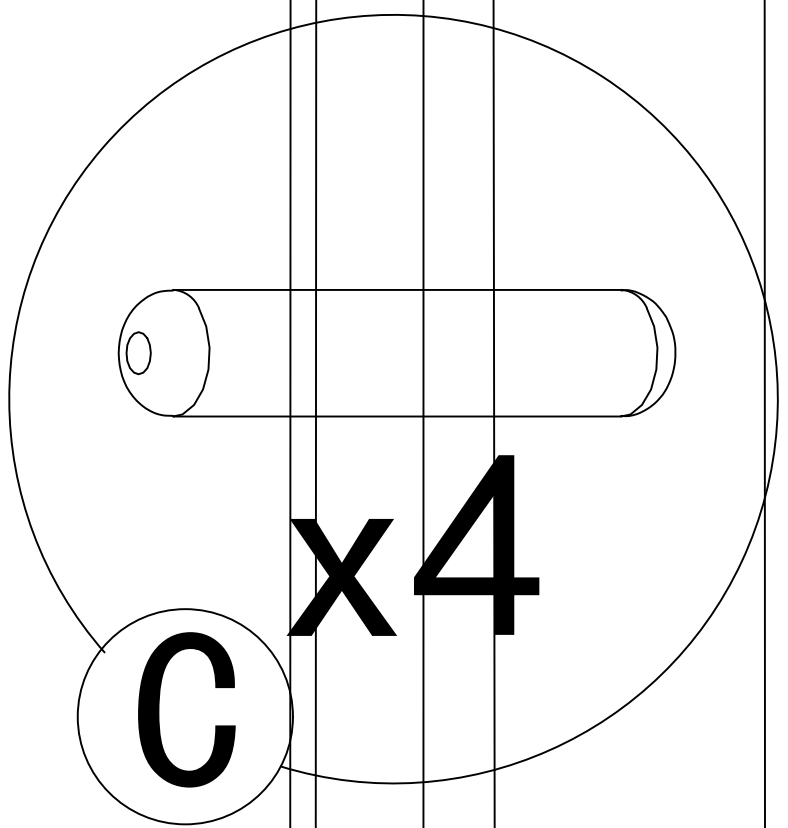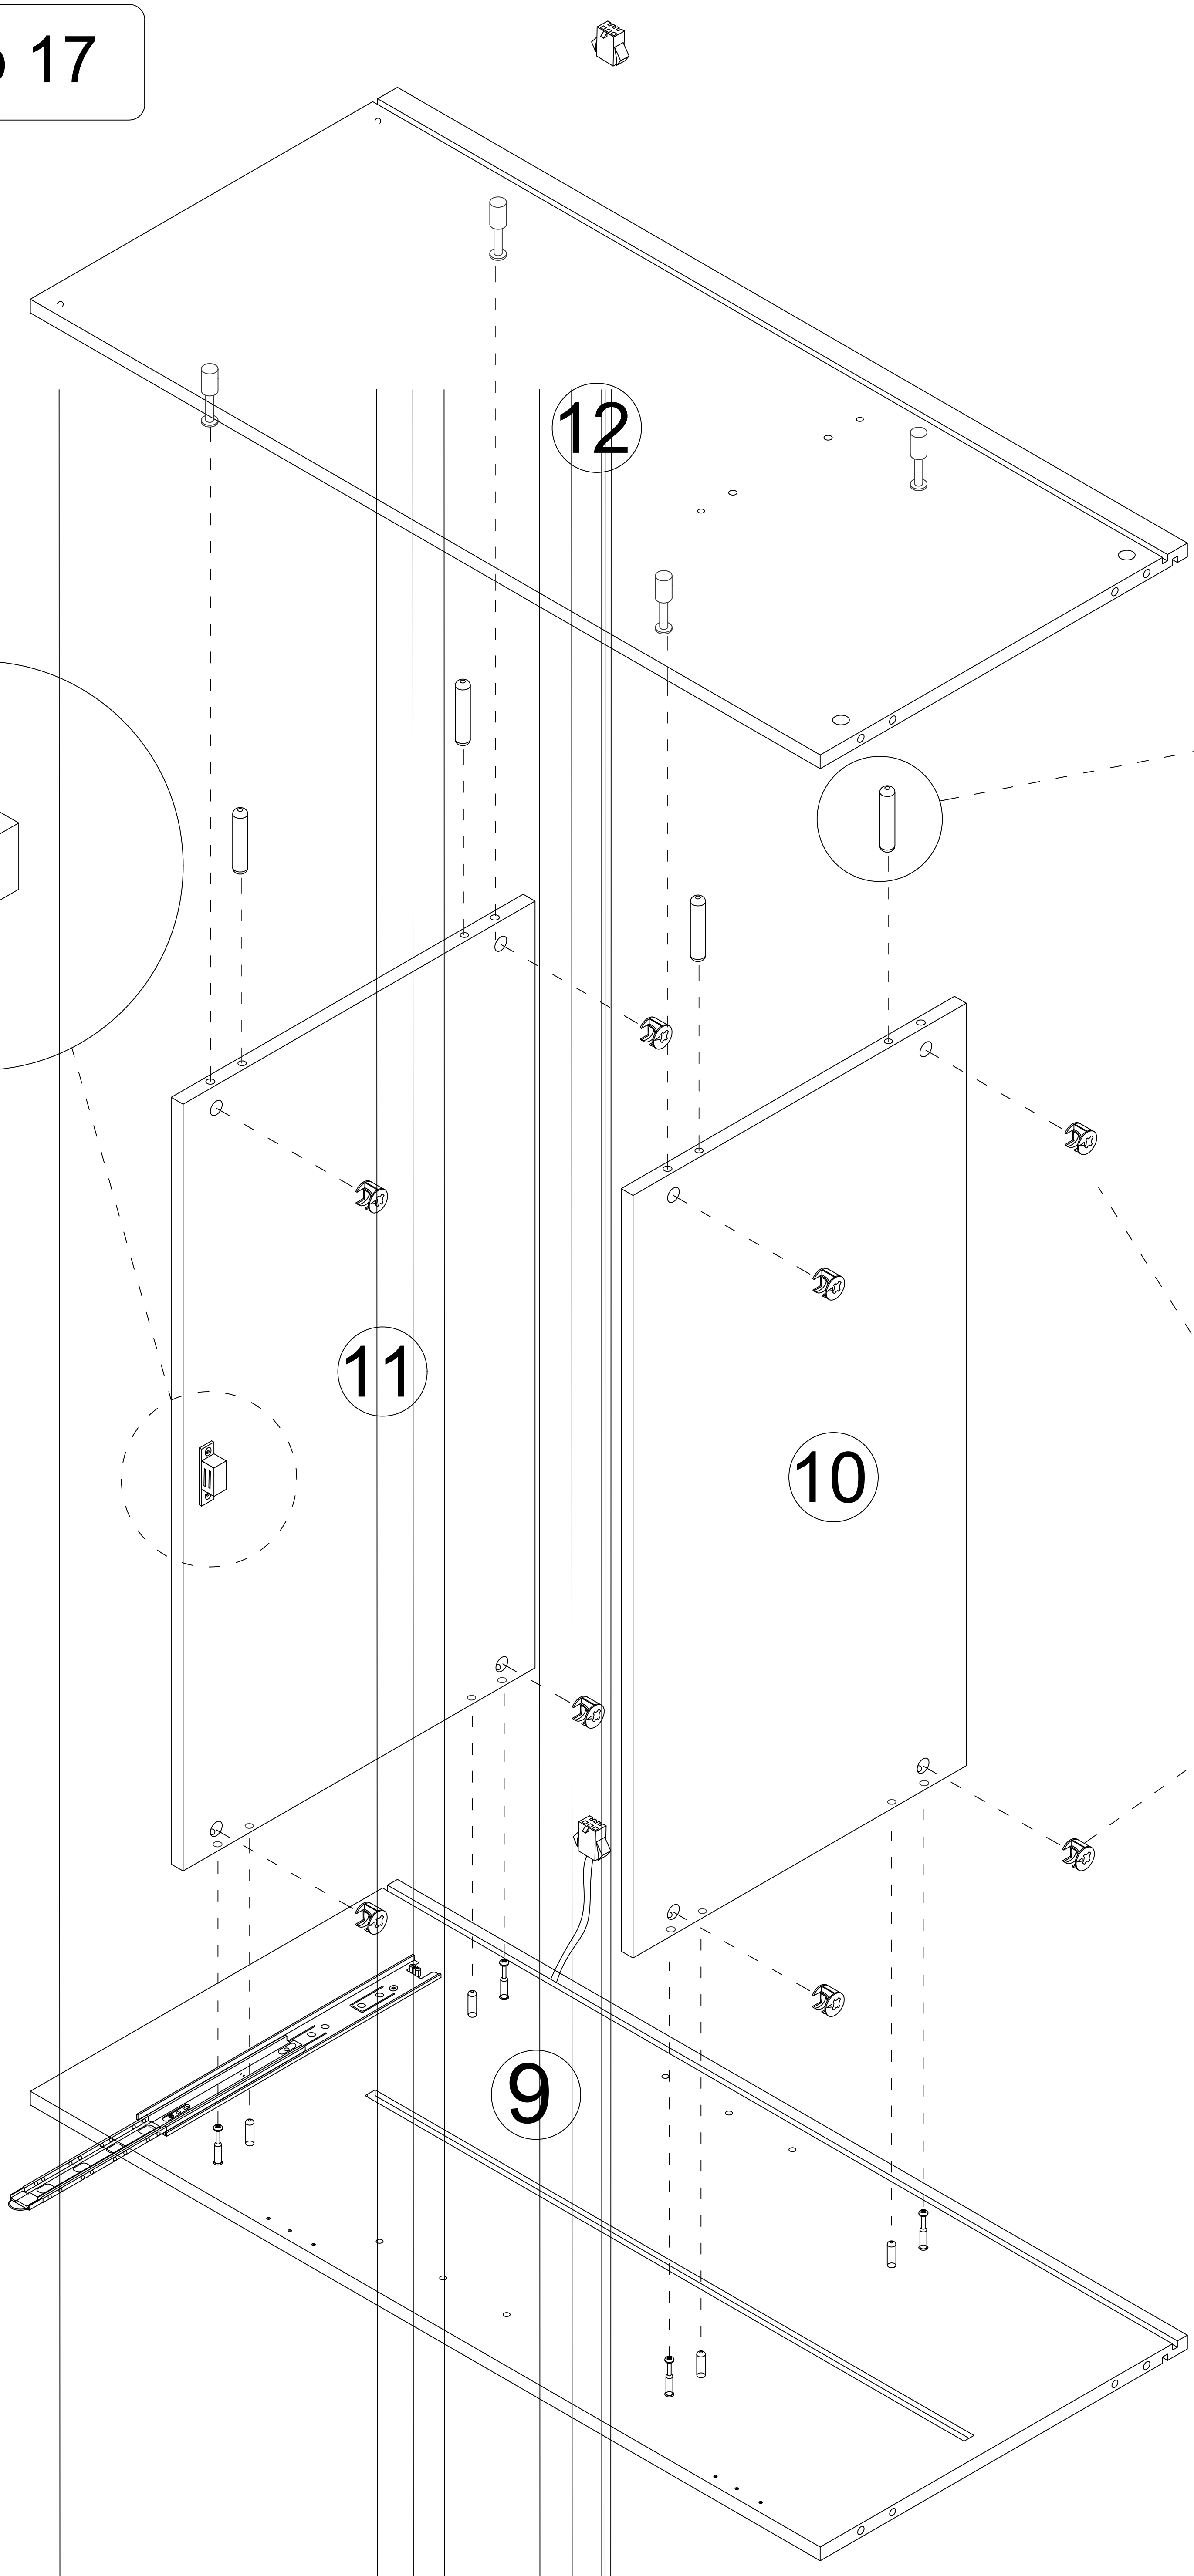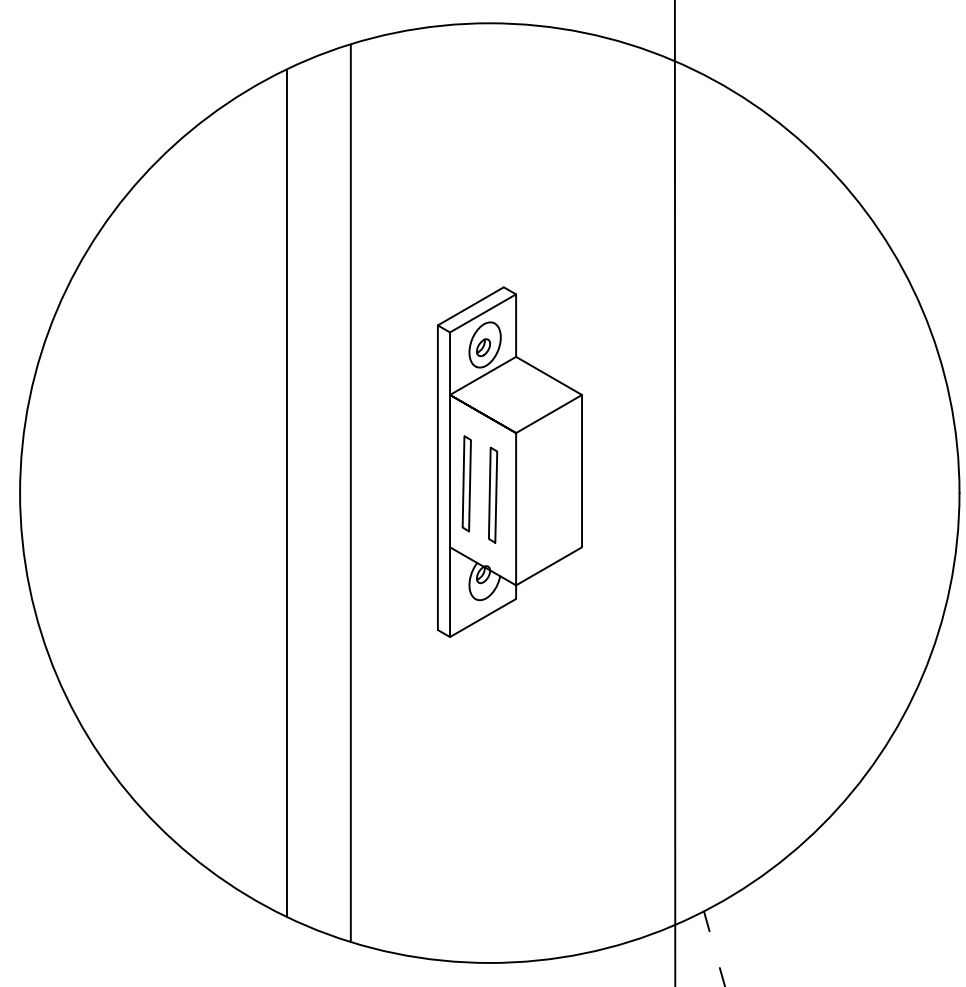

Step 18

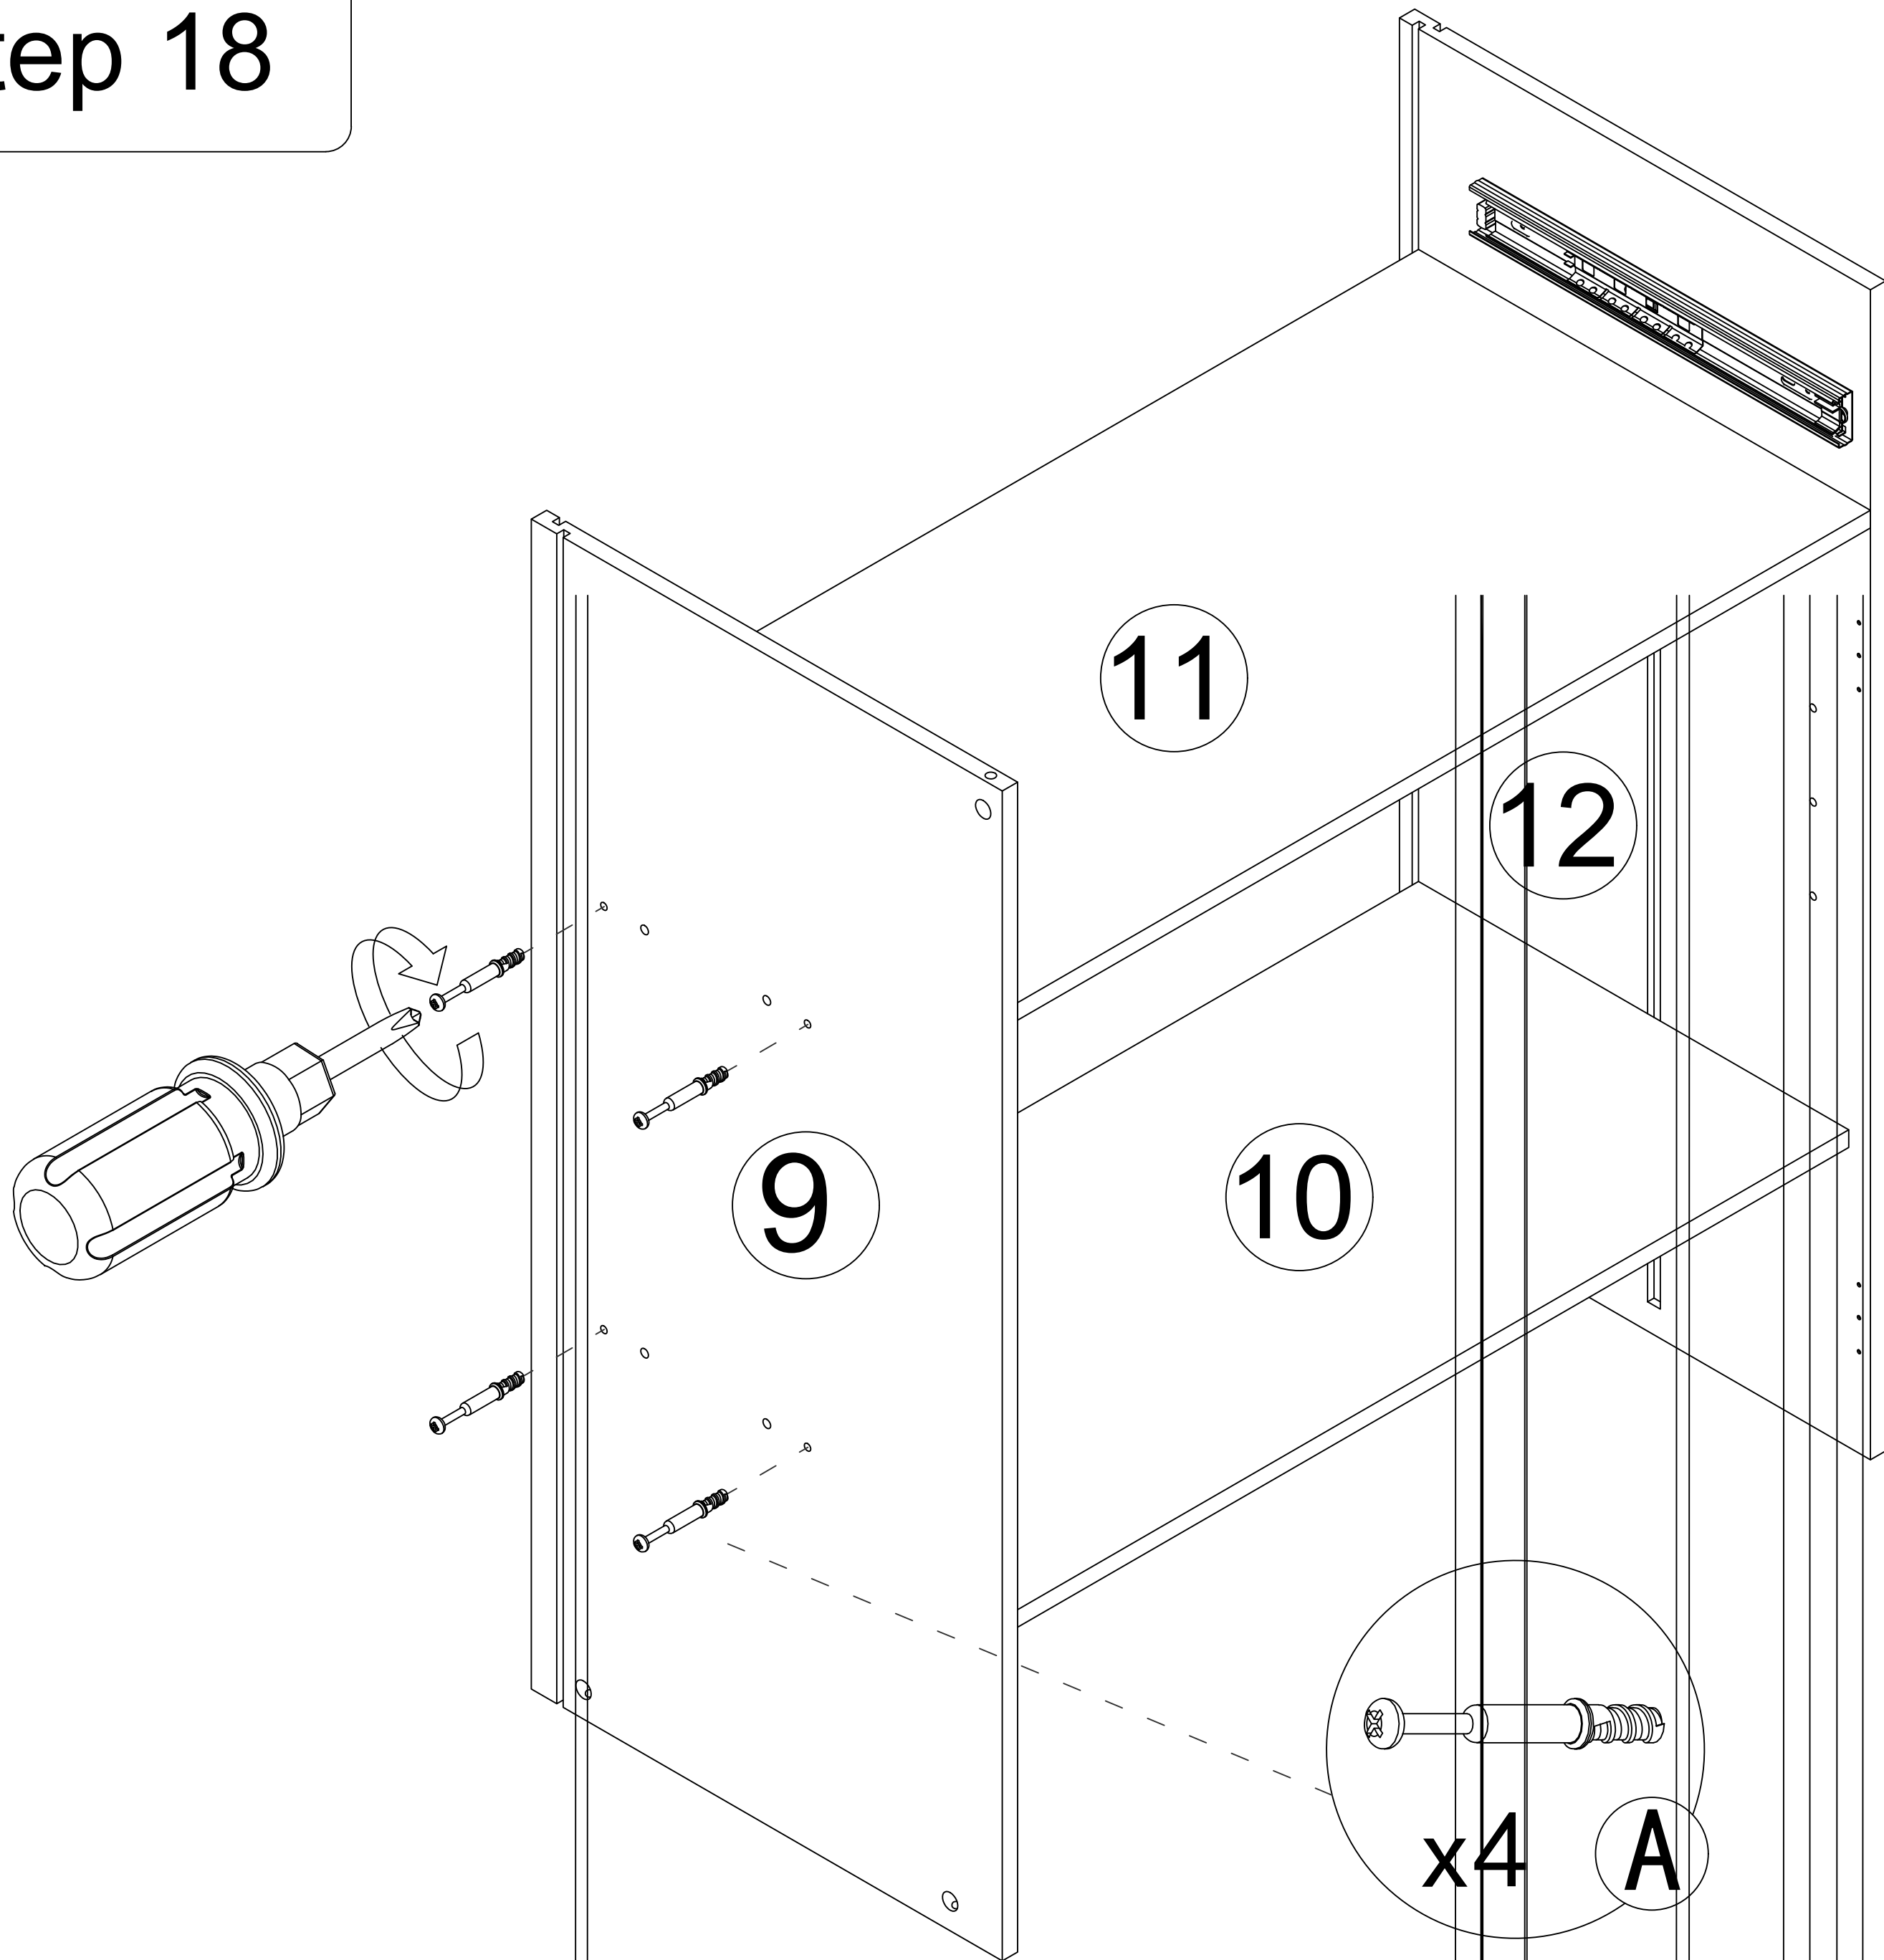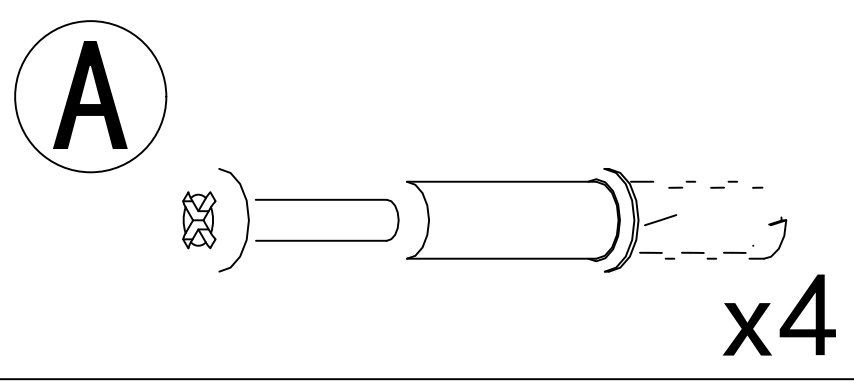


Note

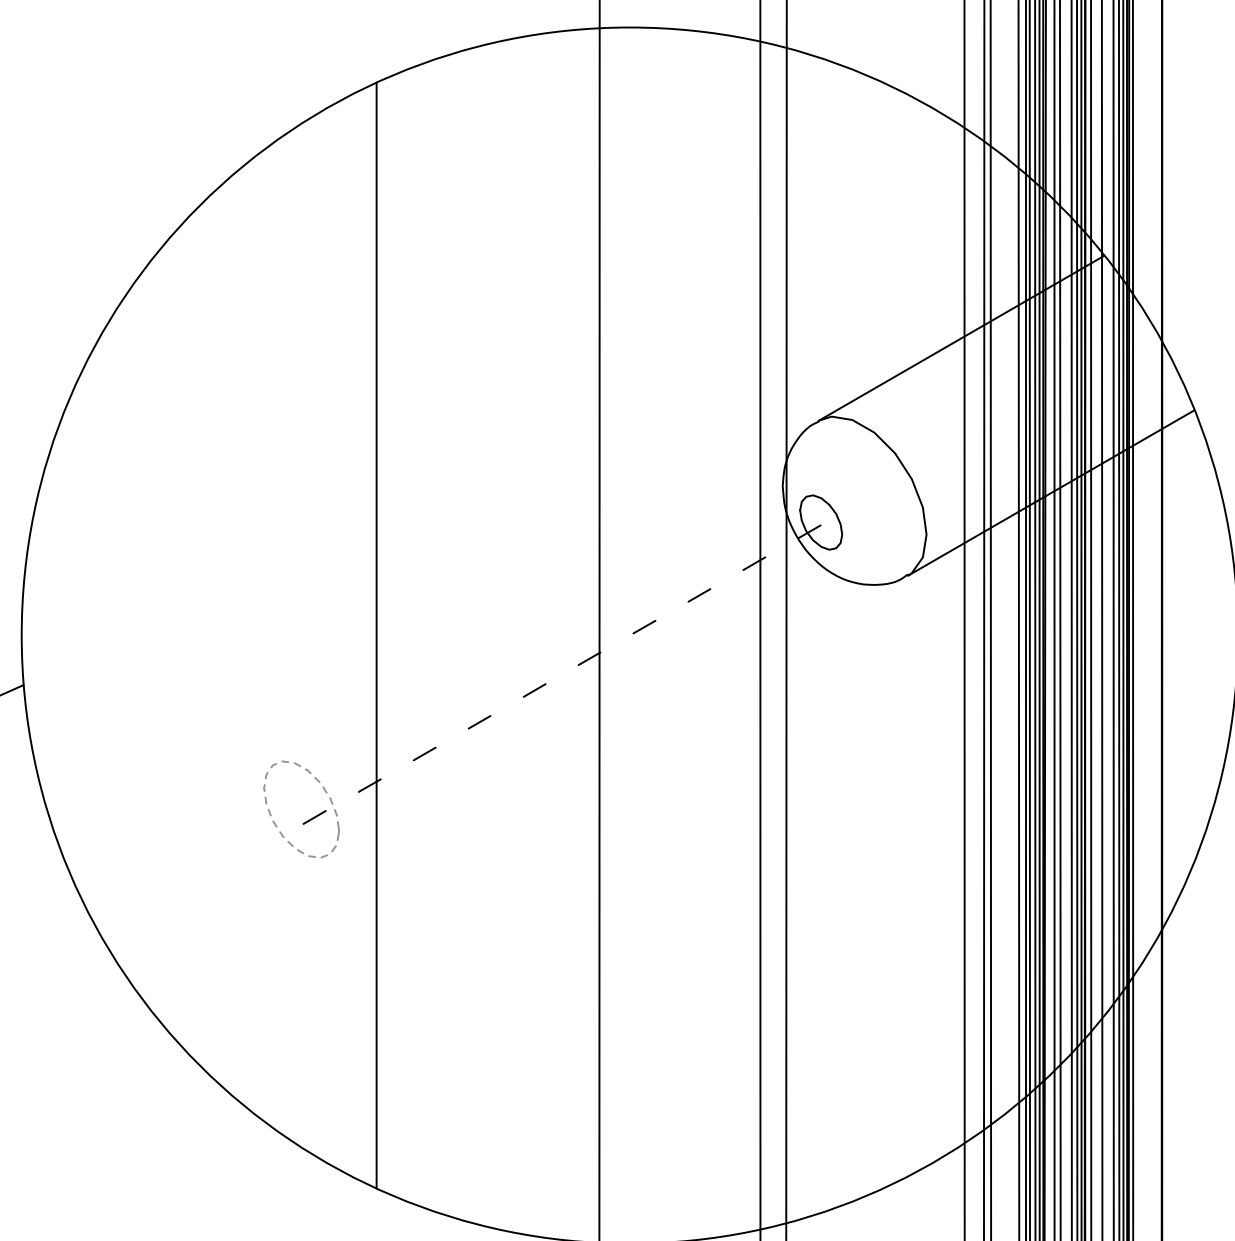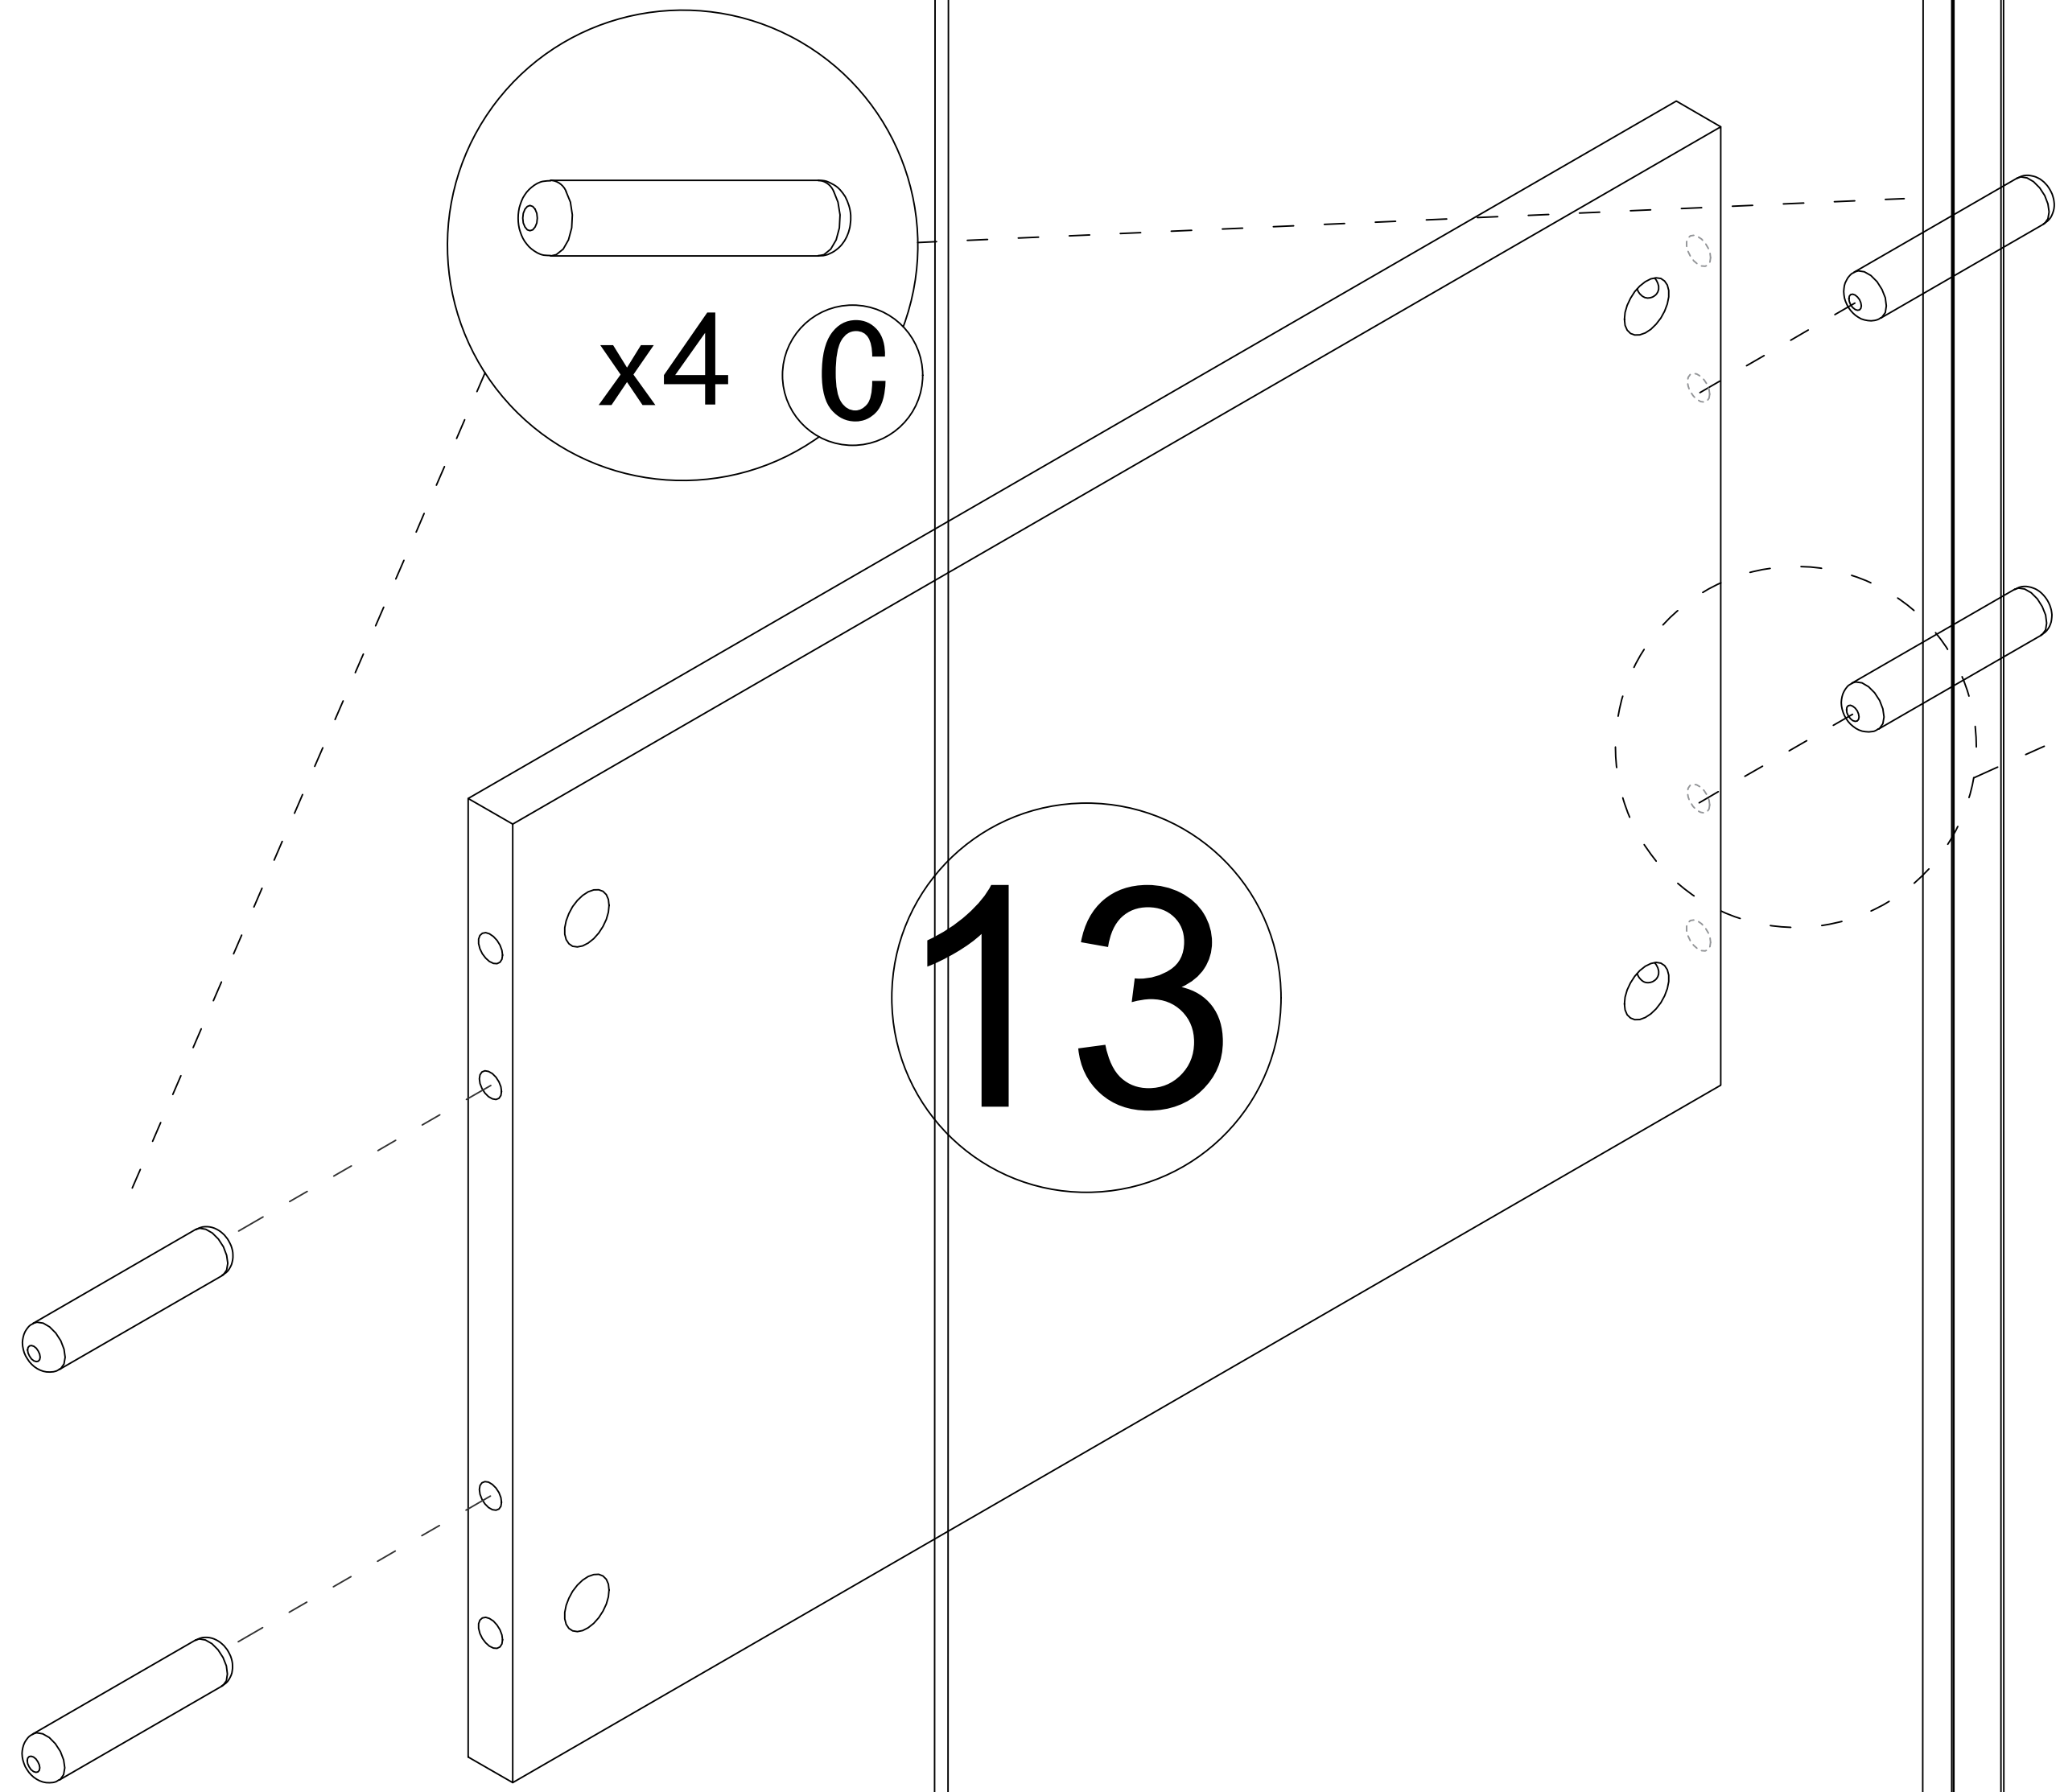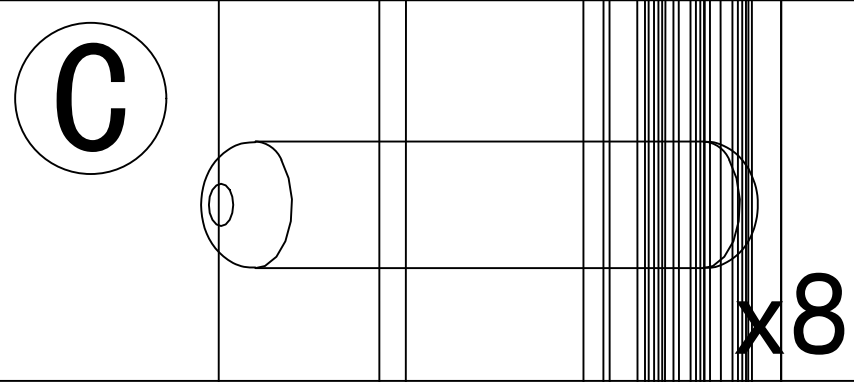


x2

Step 19

B

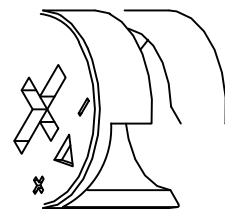


x4

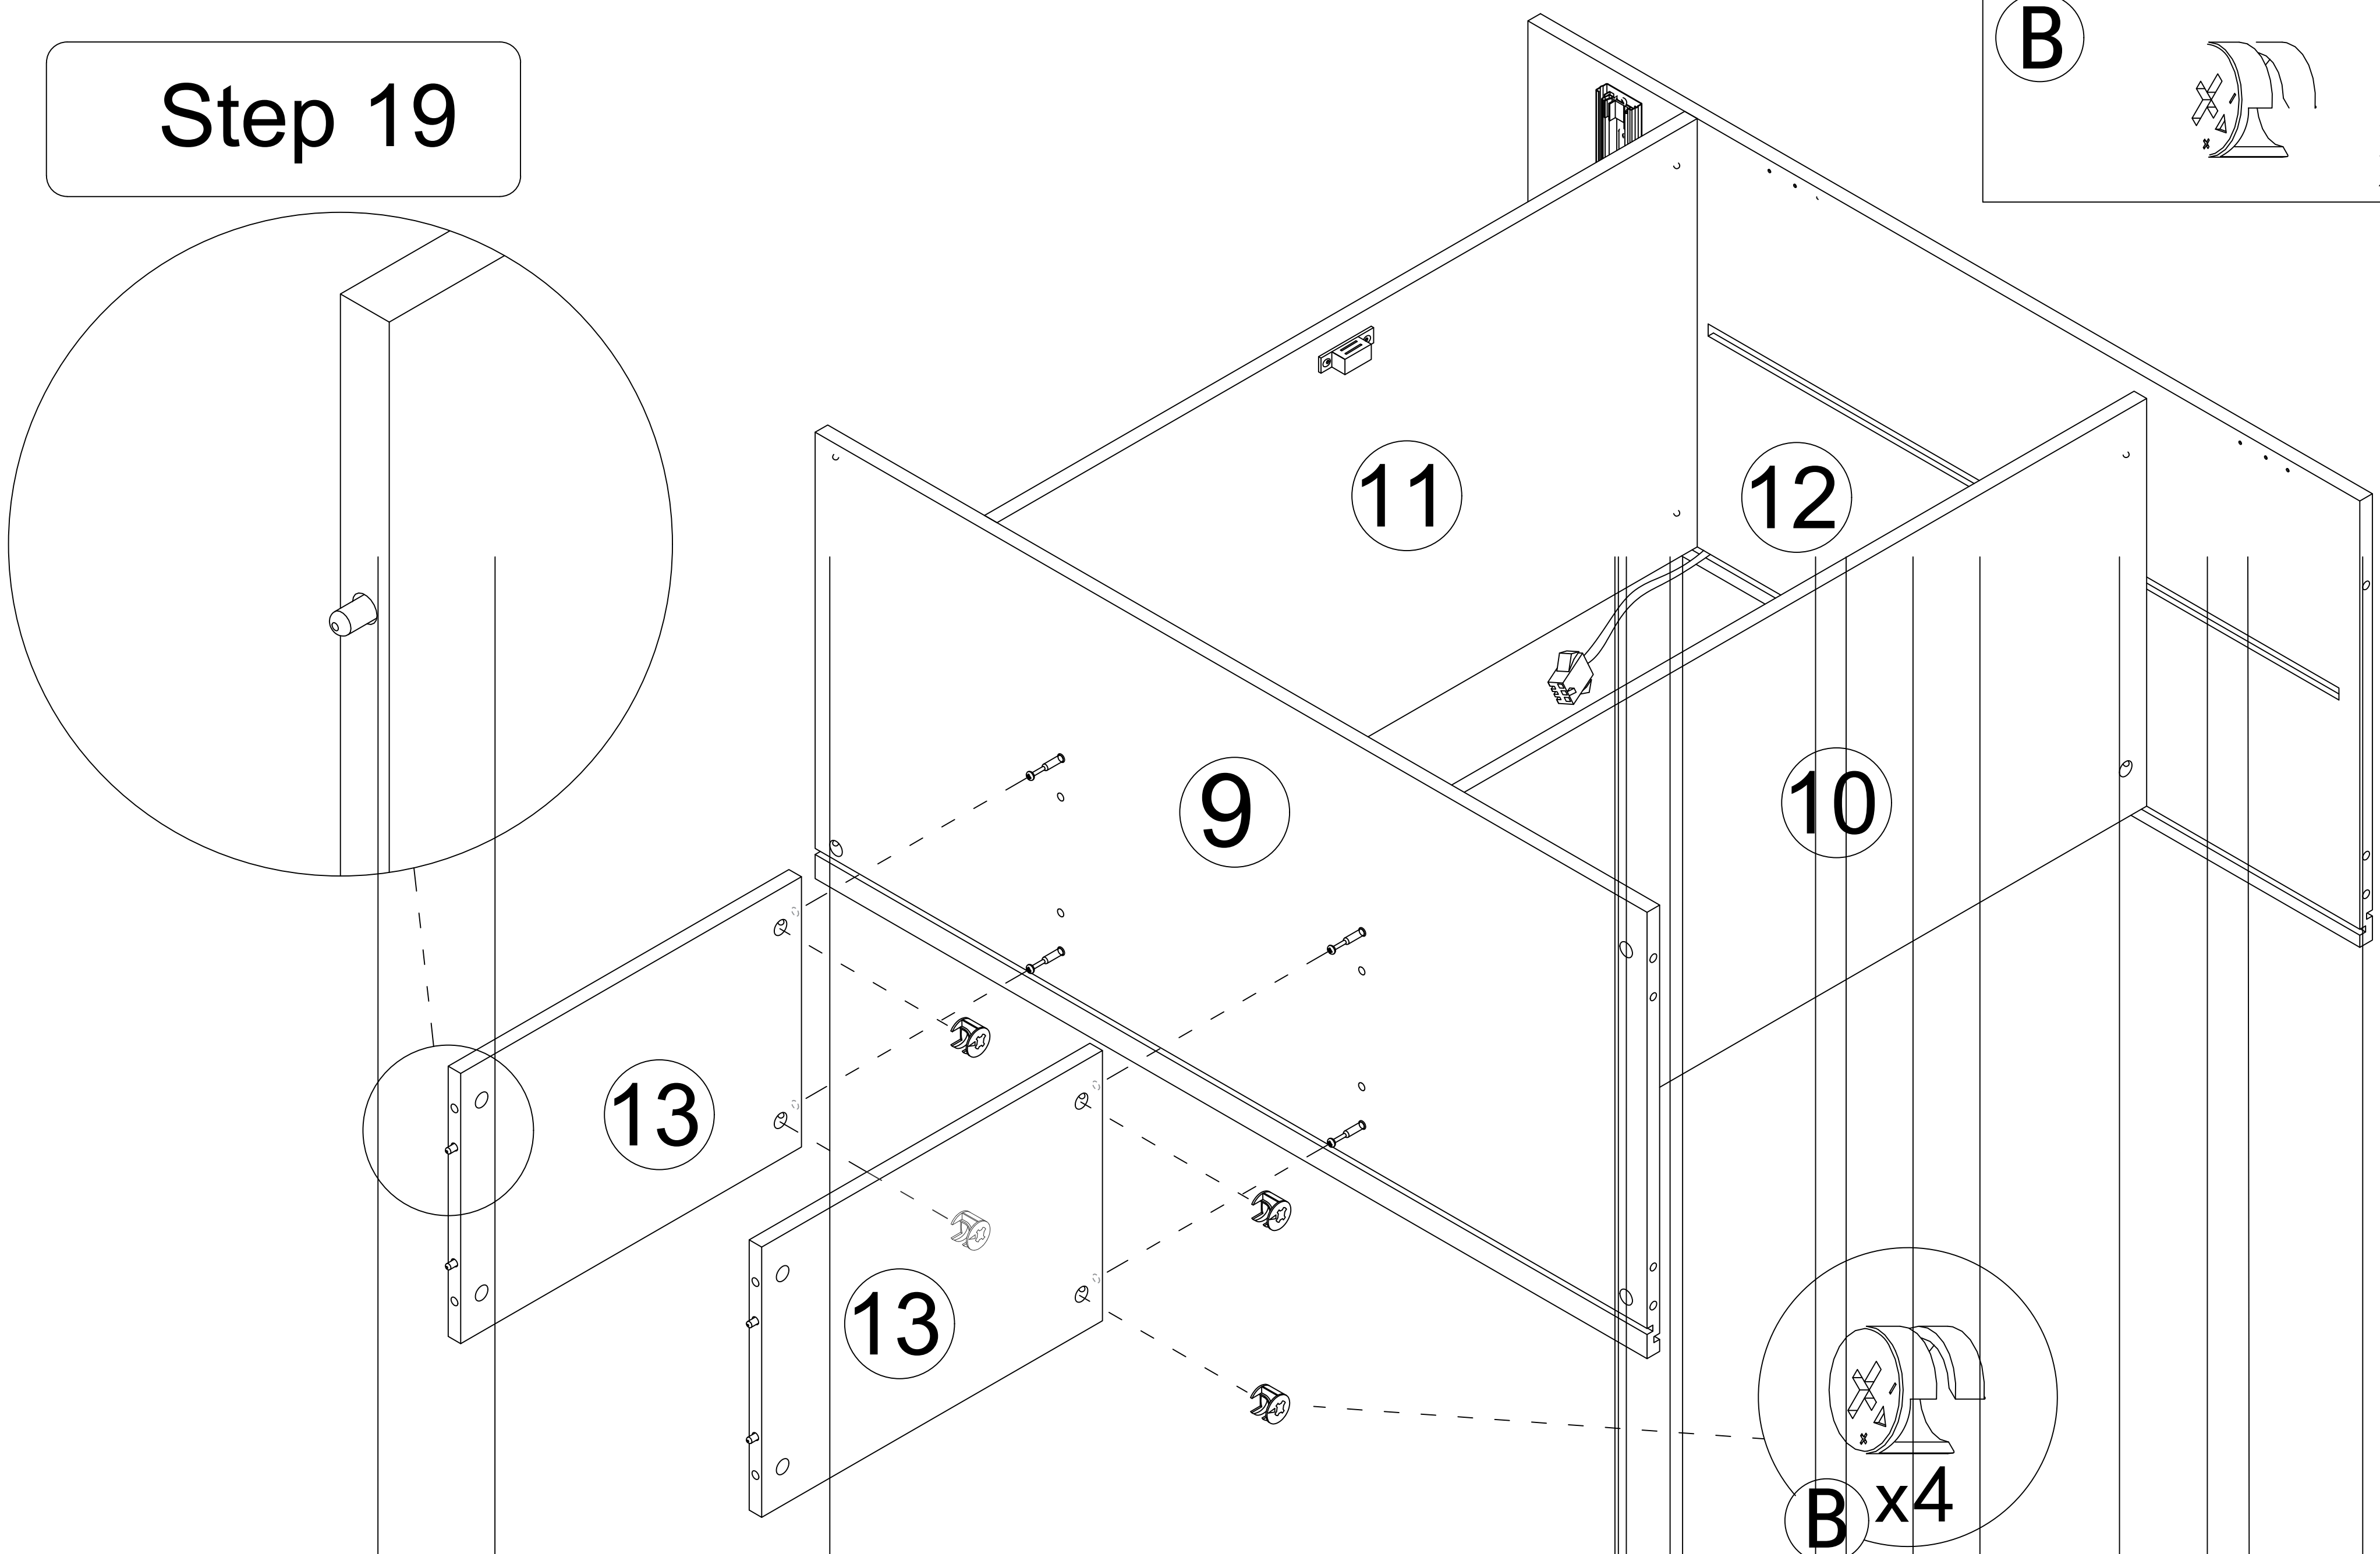


Step 20

A

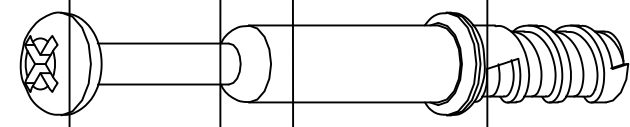


x4

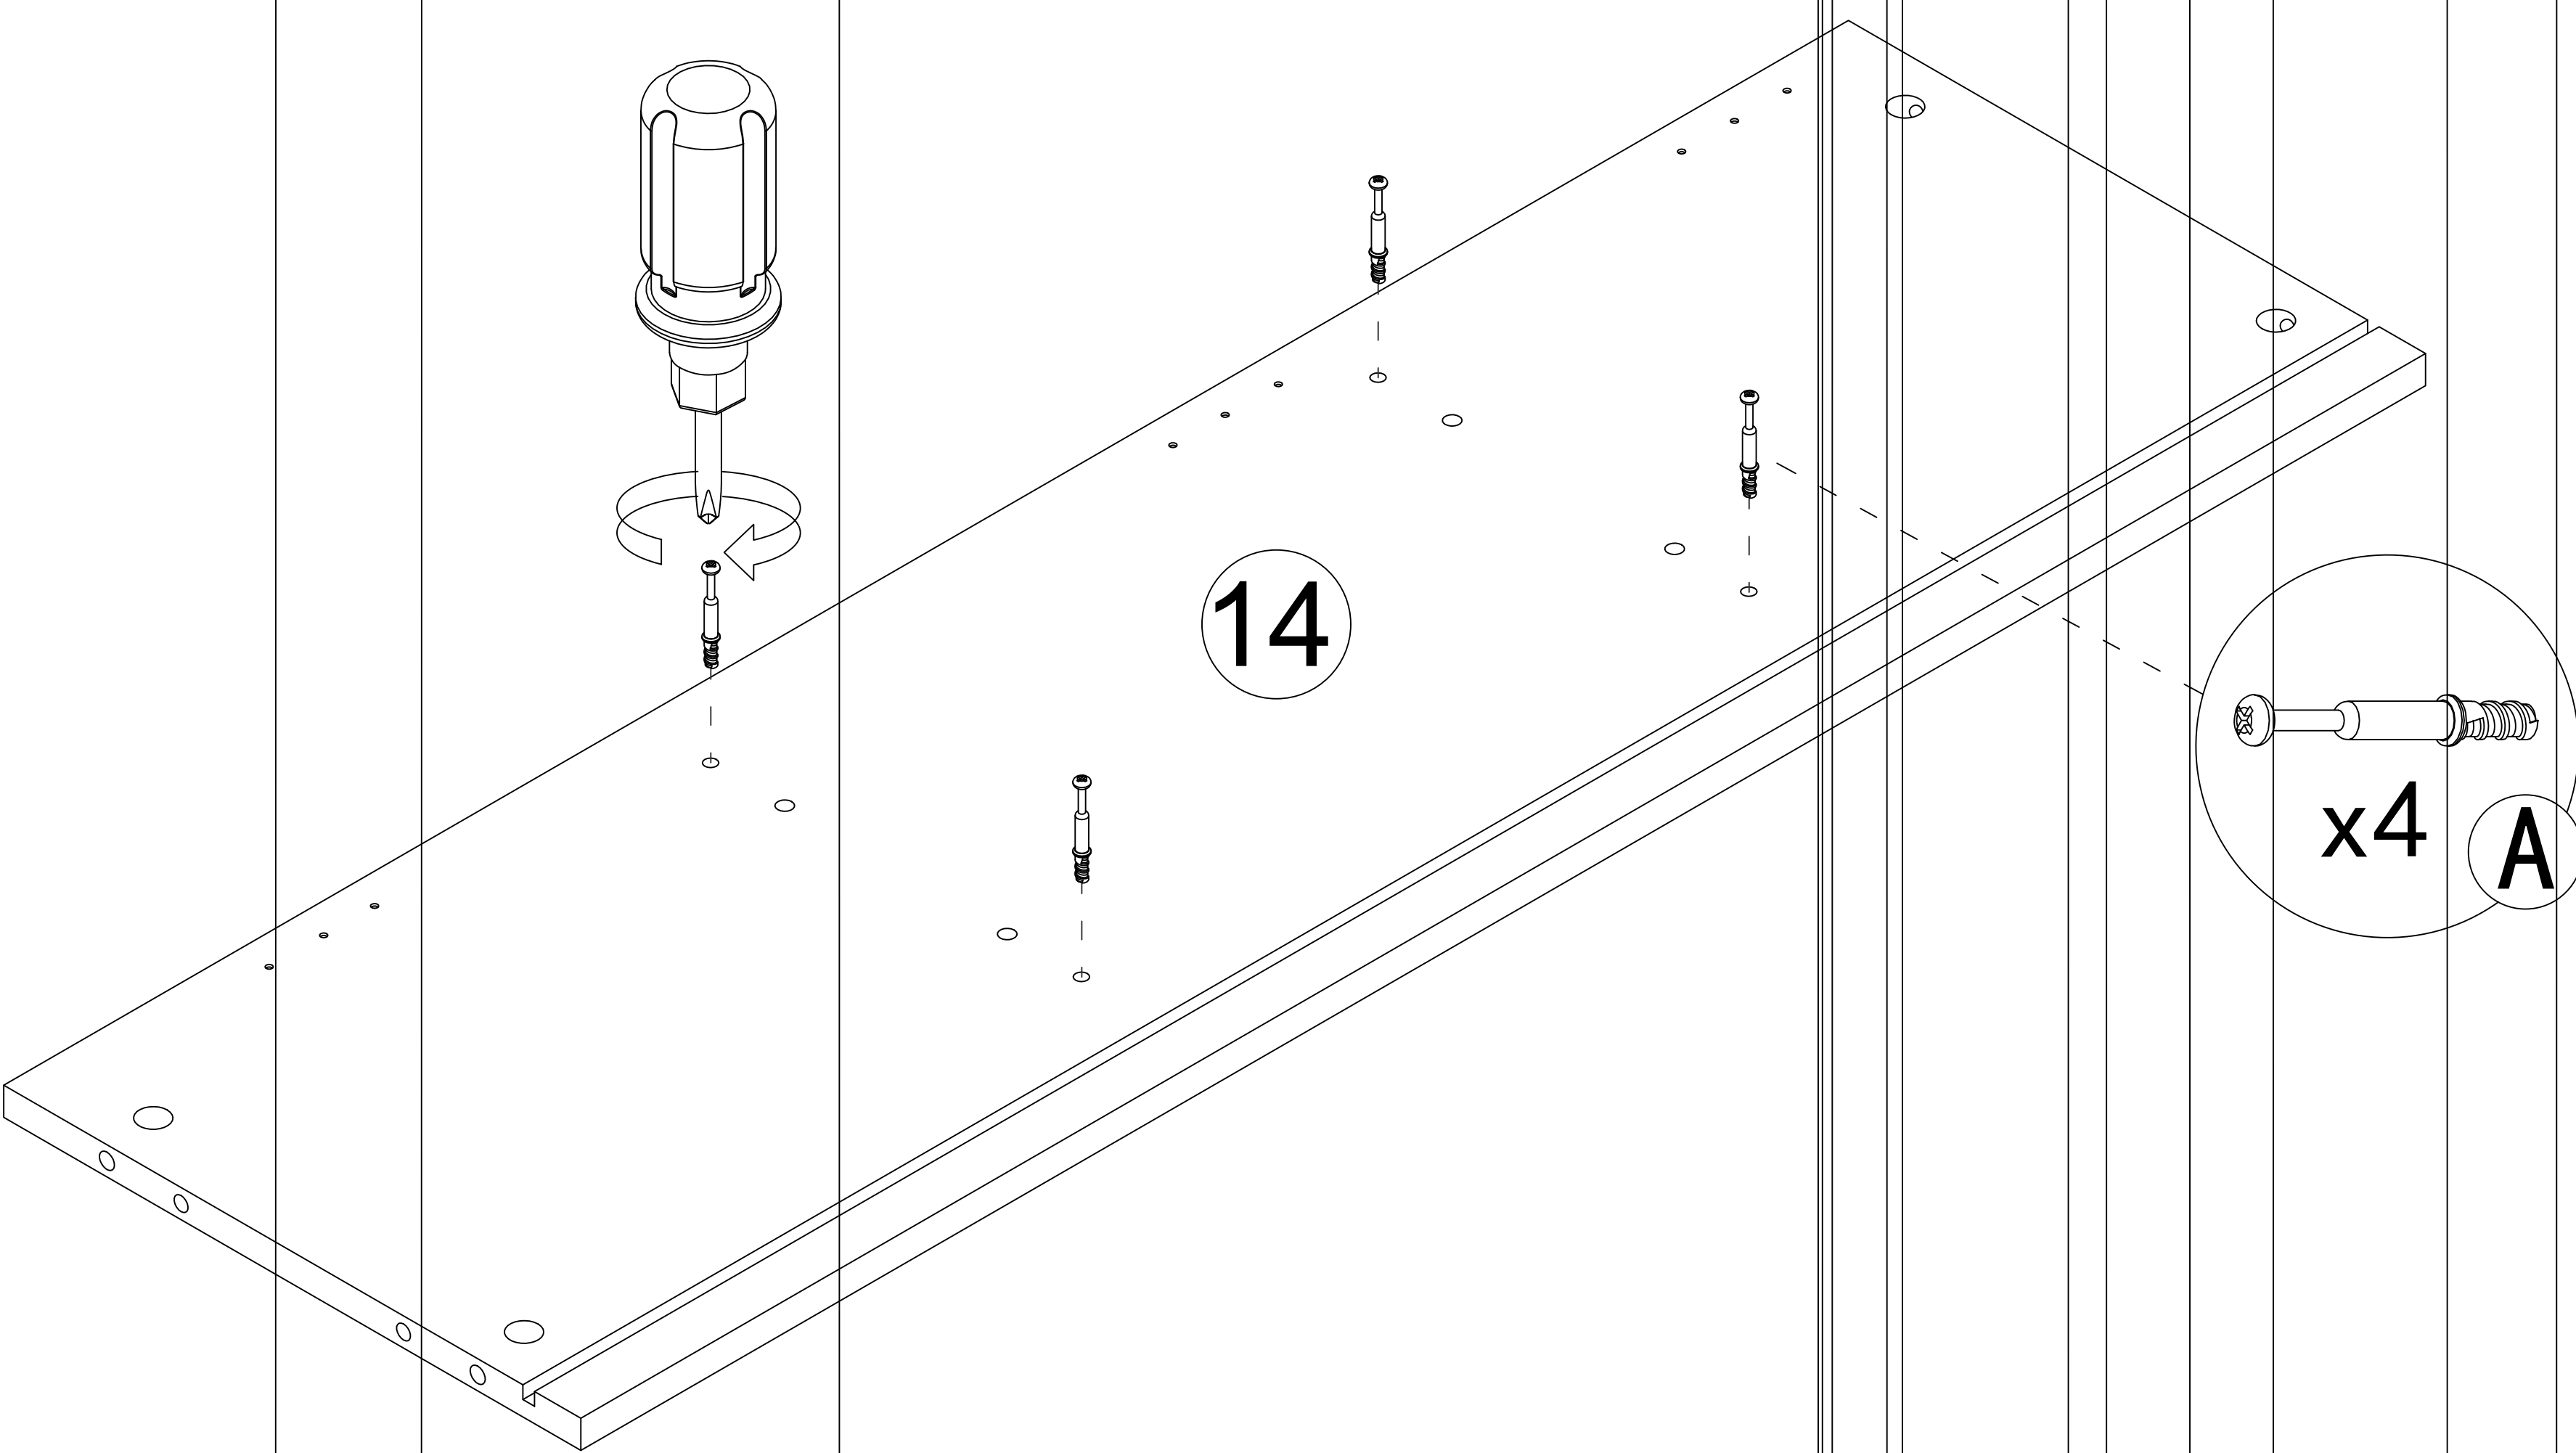


Step 21

B

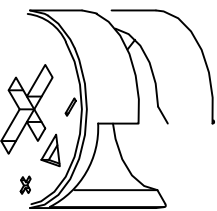


x4

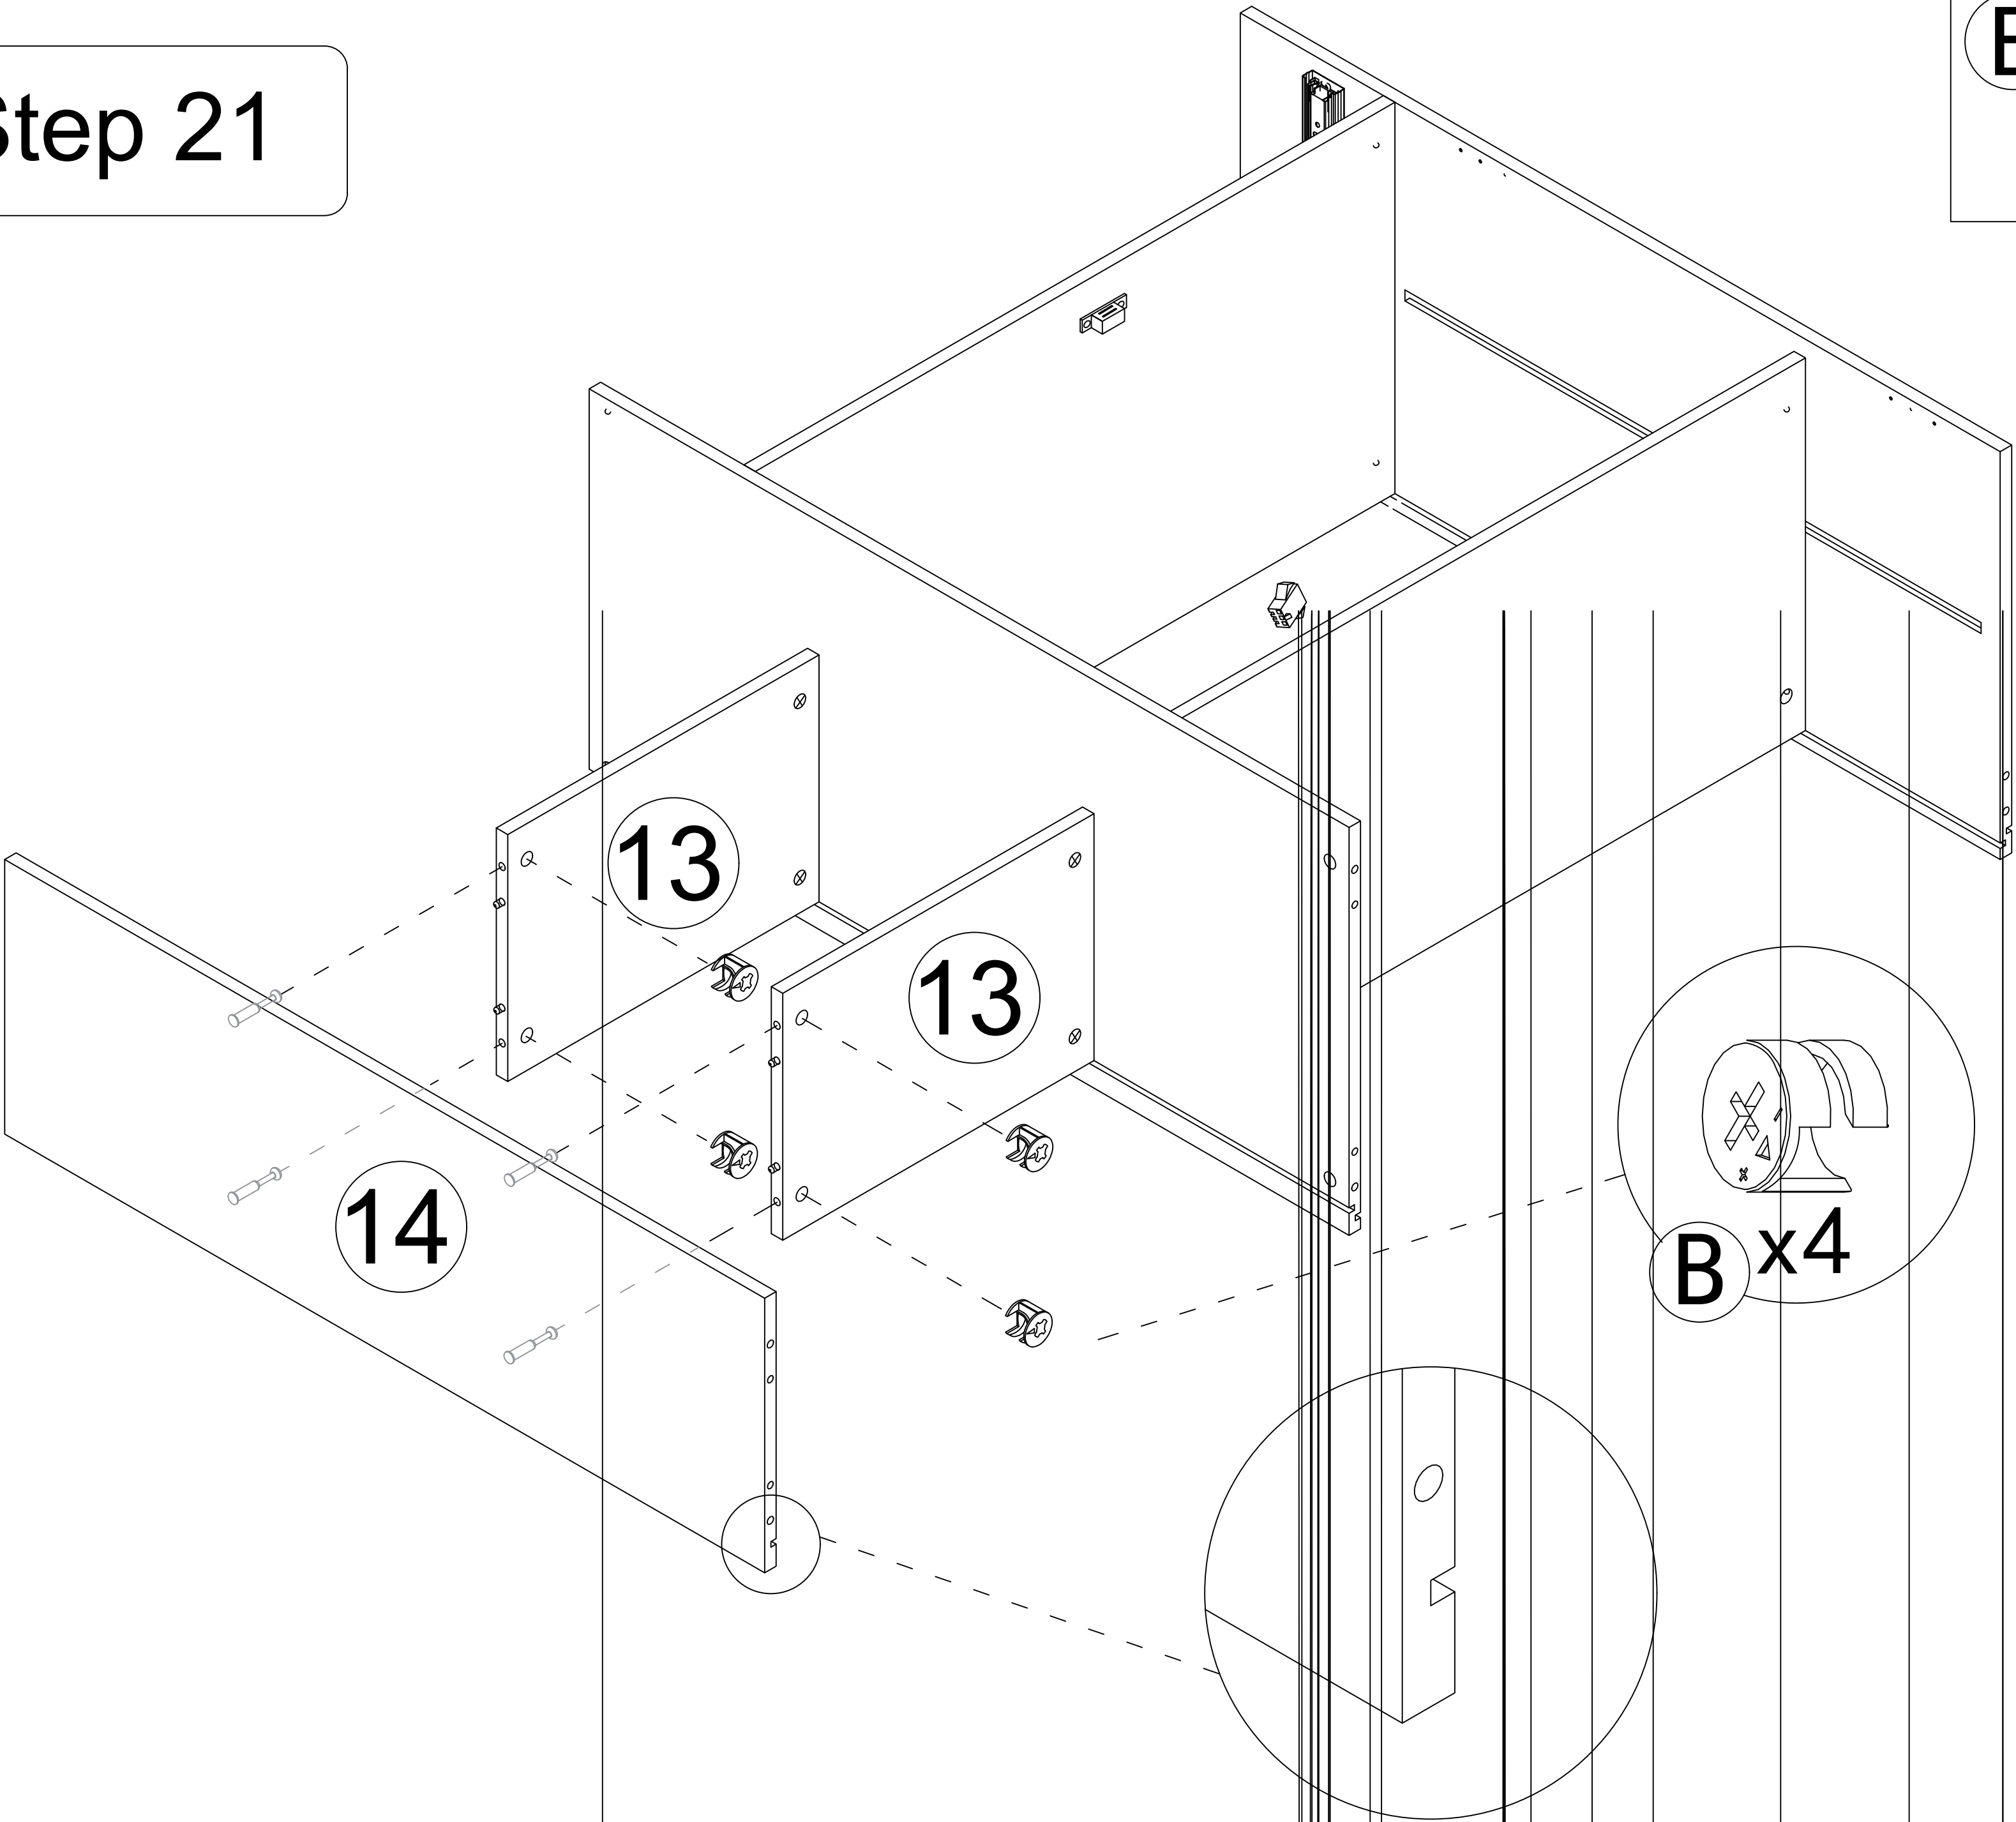


Step 22

A



x4

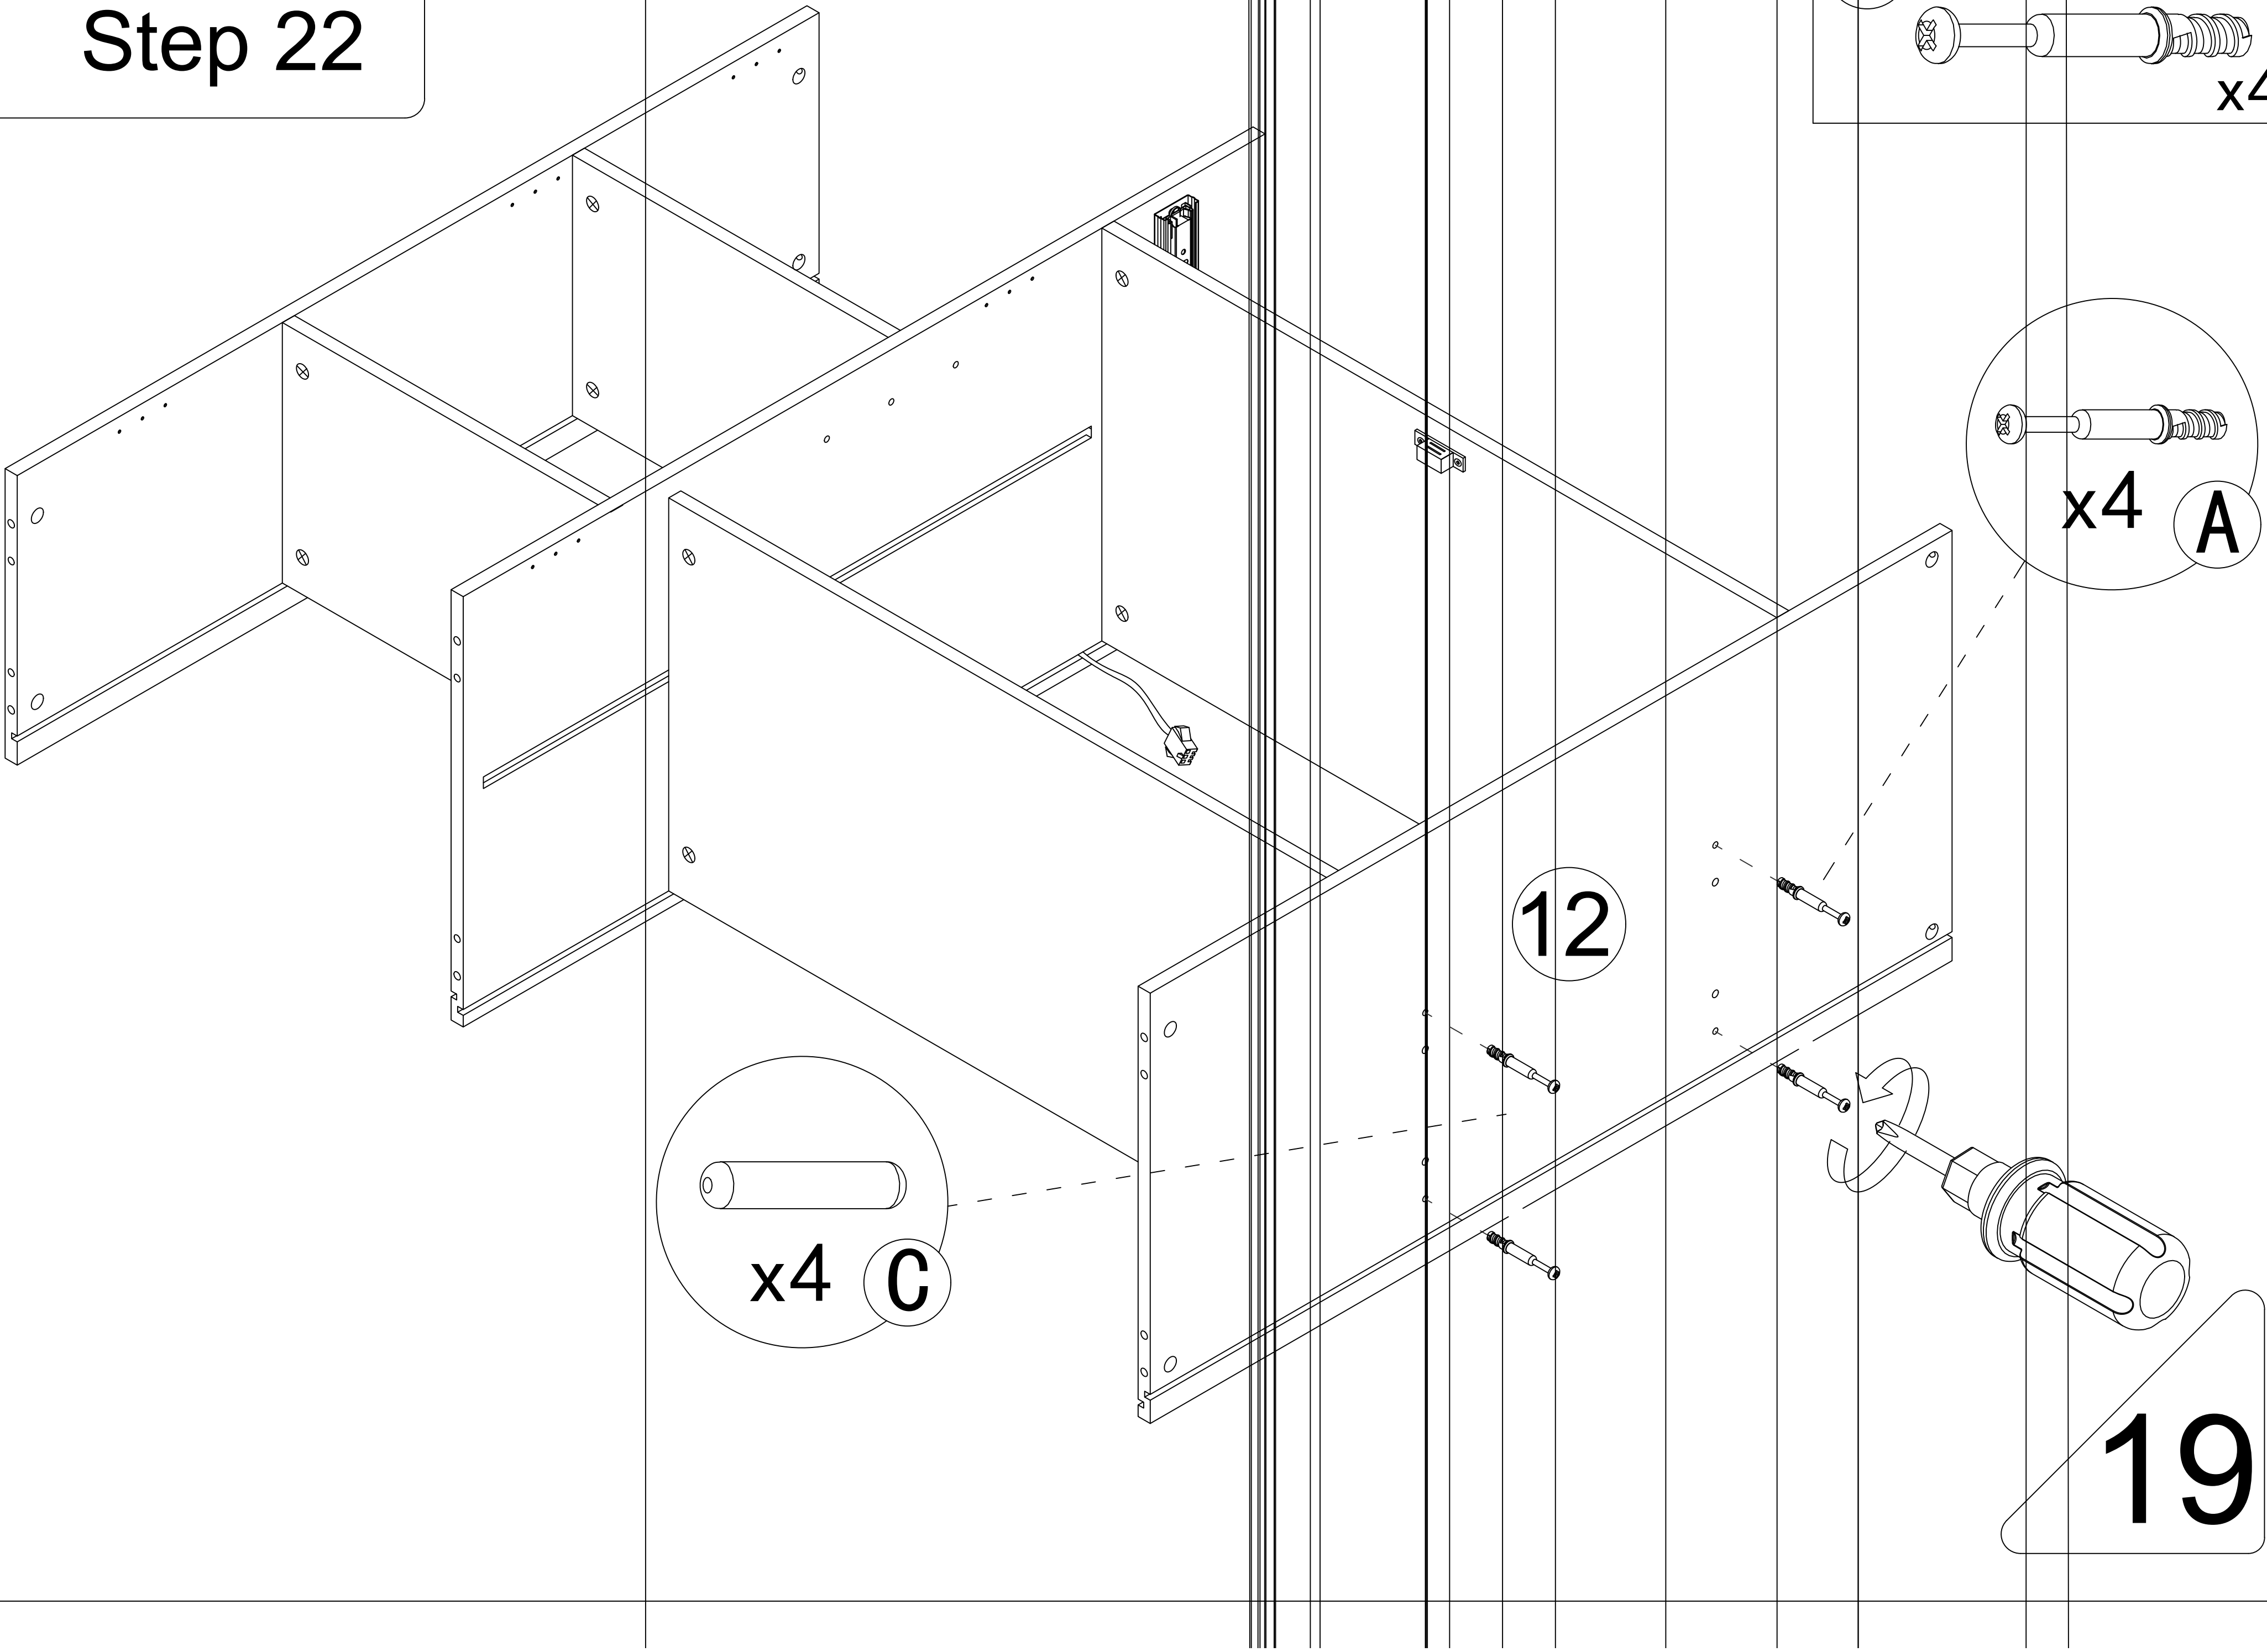

Note

C x8


C x4

13

x2

Step 23

B x4

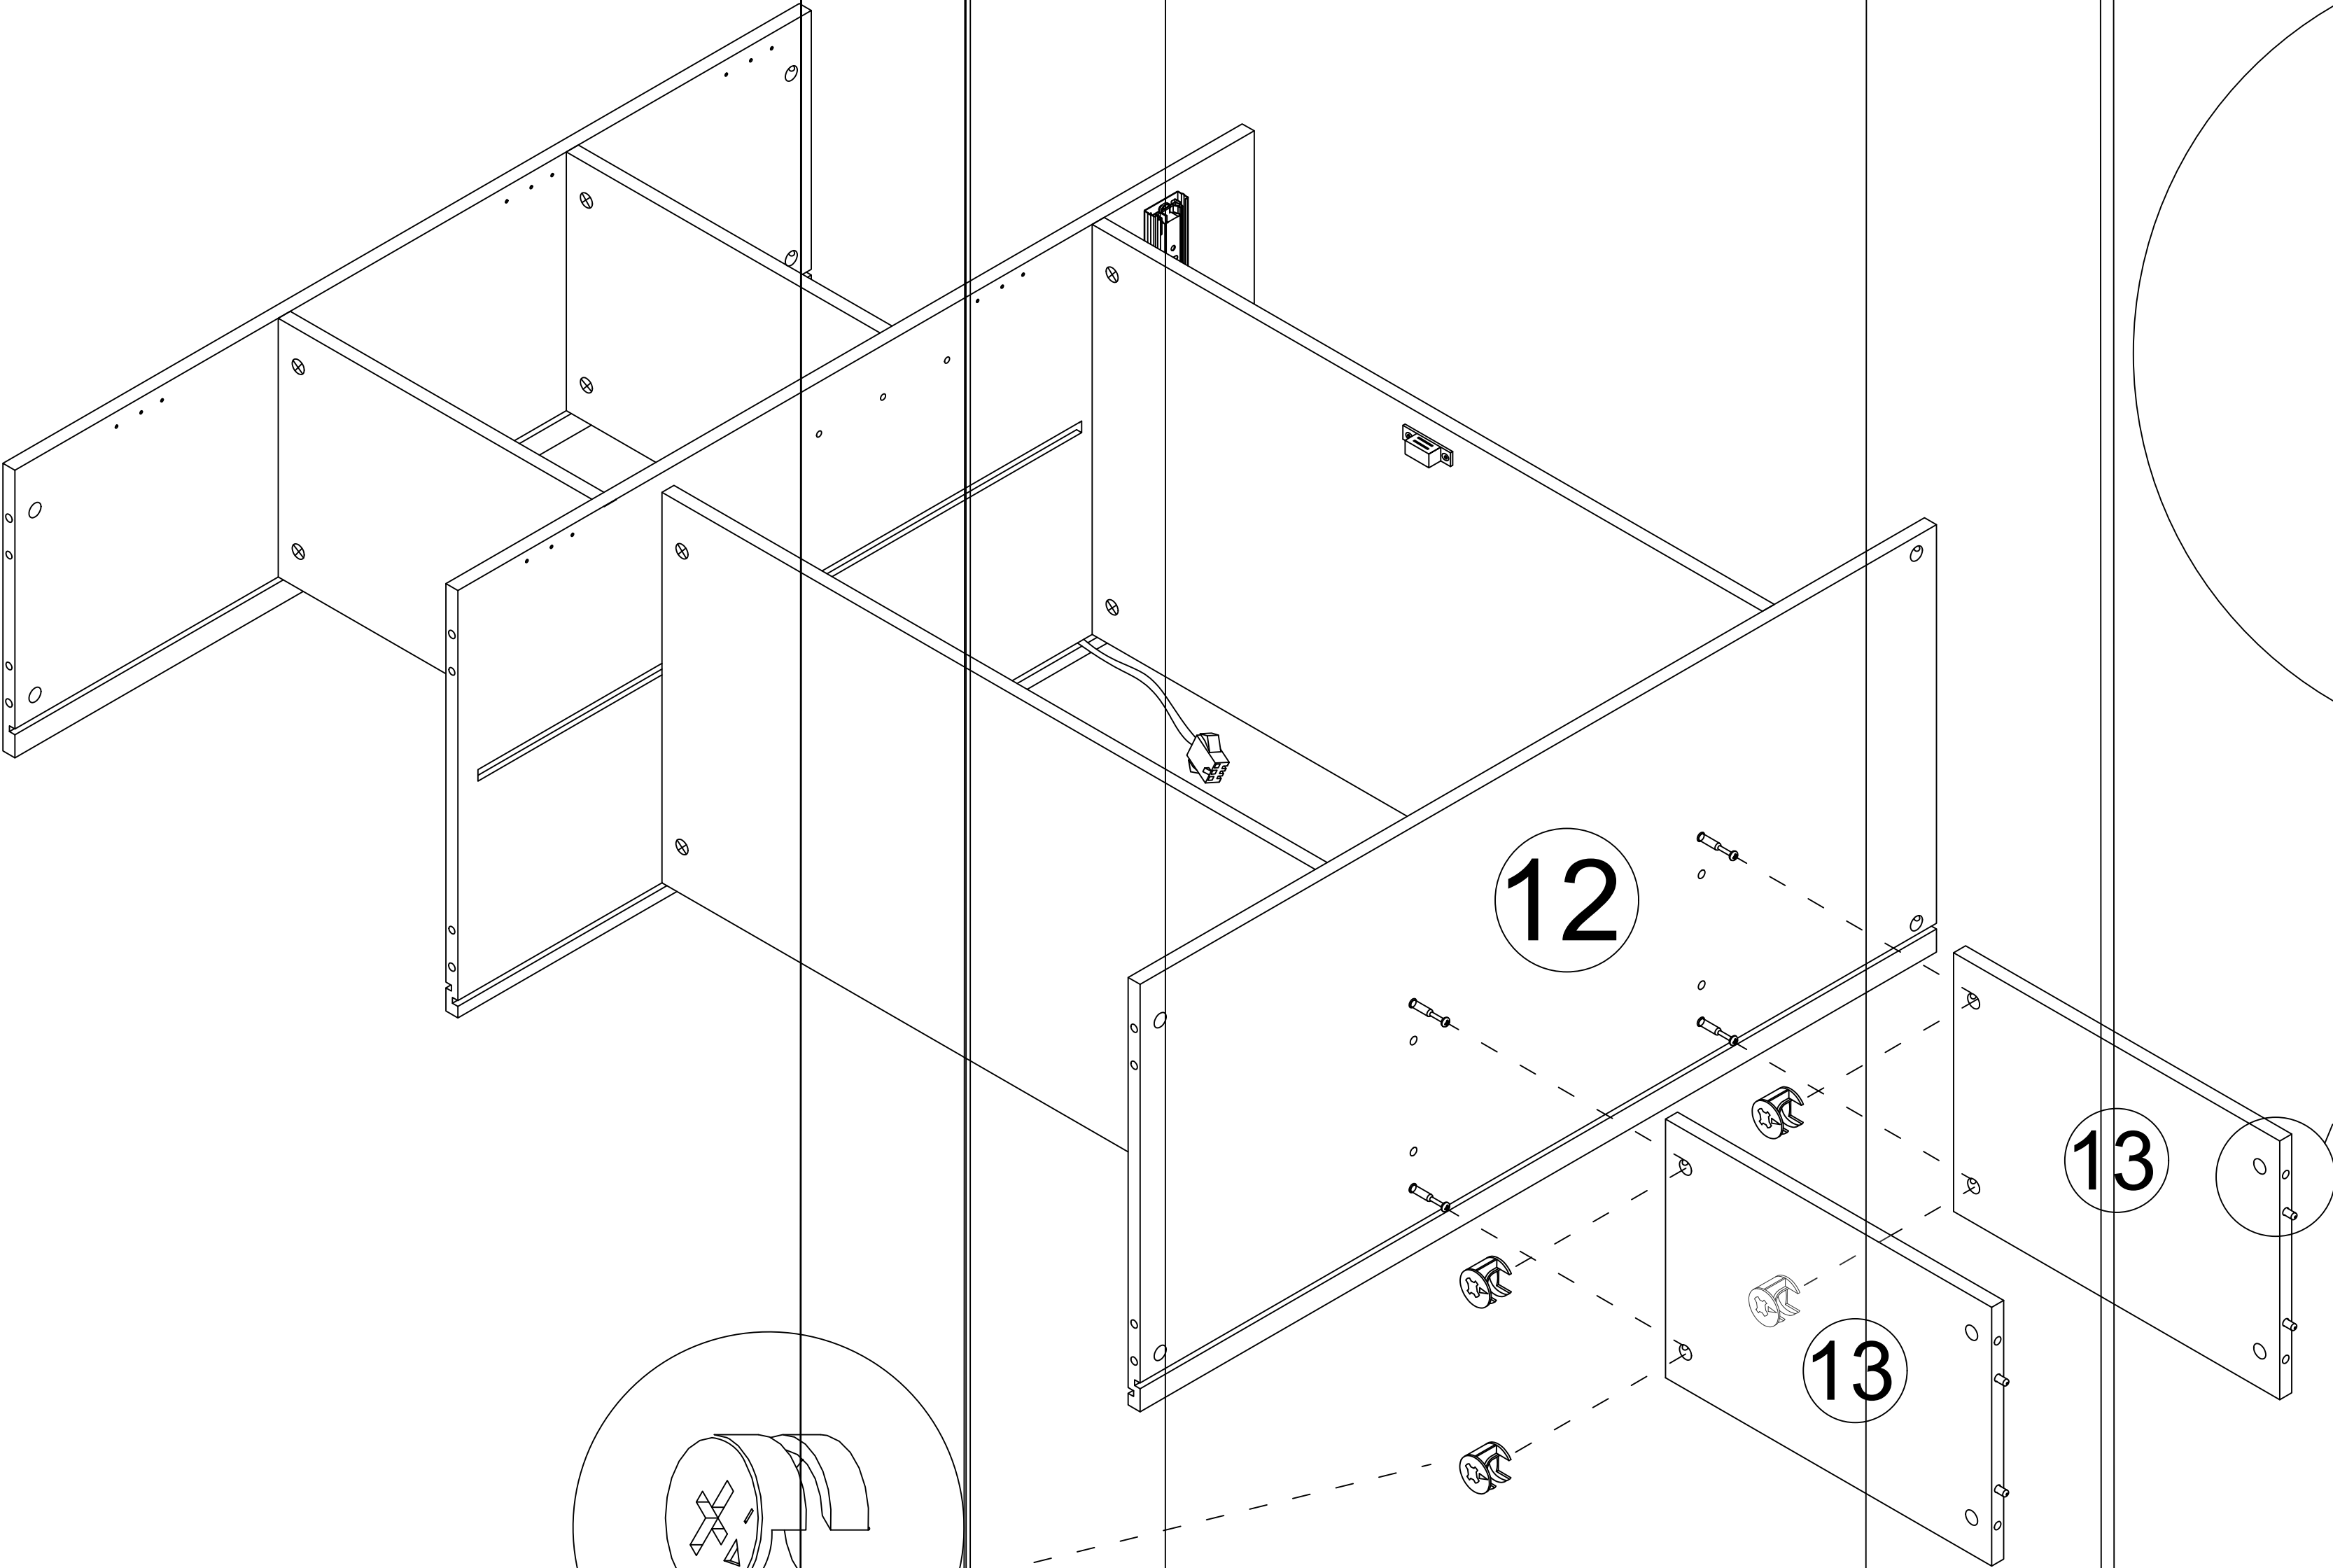


B x4

20

Step 24


x4

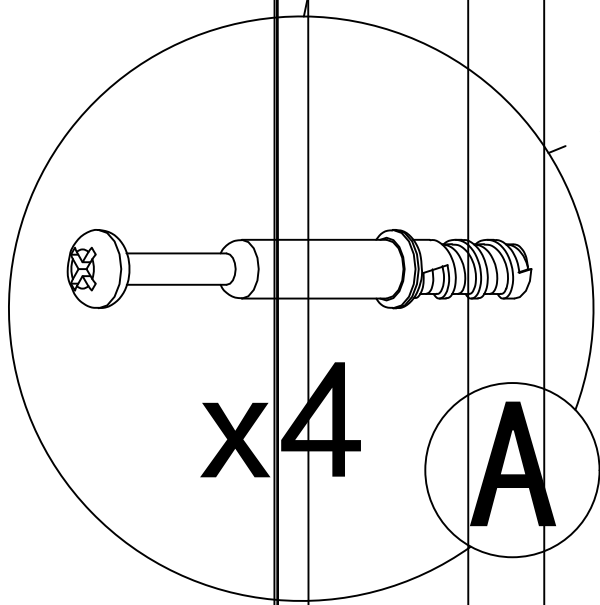

Step 25


A technical drawing of a mechanical part, possibly a pulley or a wheel, shown in a half-section view. A vertical centerline is drawn through the middle of the part. On the left side of the centerline, there is a break symbol consisting of two parallel diagonal lines forming a 'V' shape. The part has a circular face on the left and a curved, flange-like structure on the right.

x4

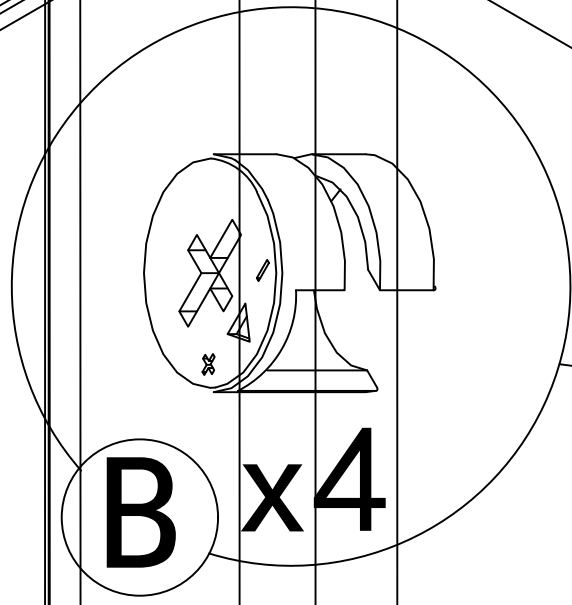


Step 26


B

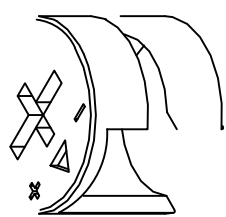


x8

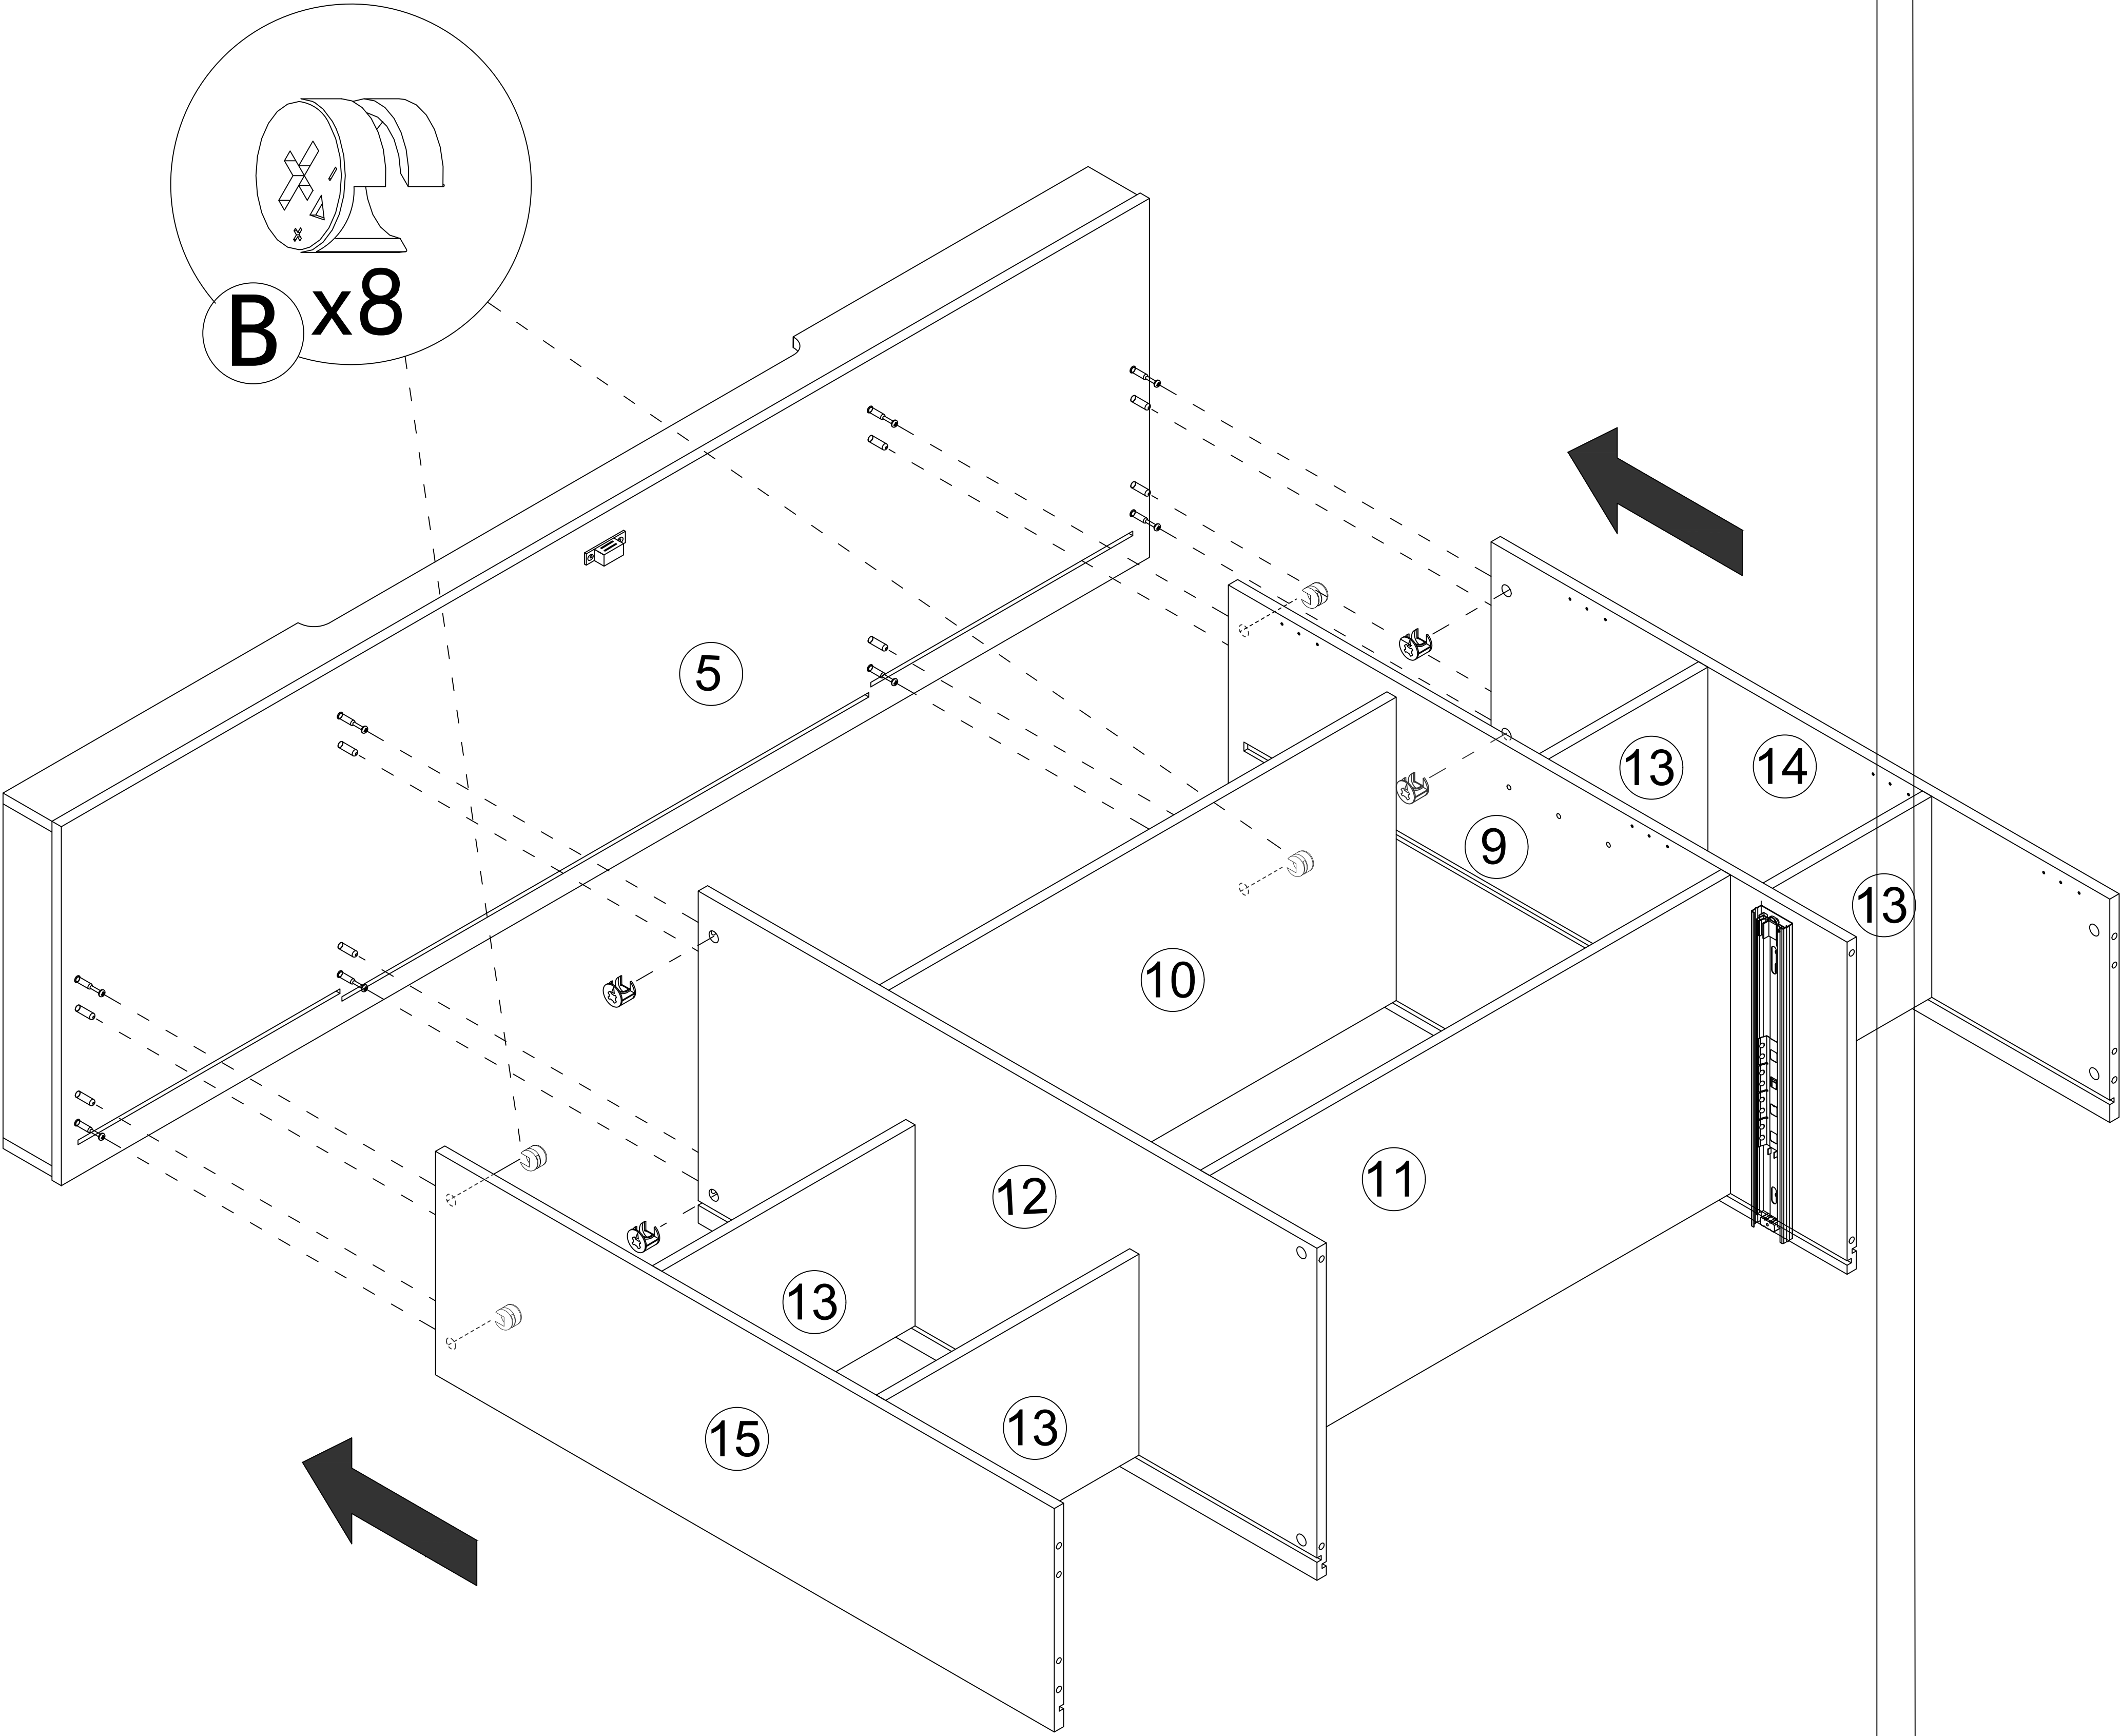

Step 27

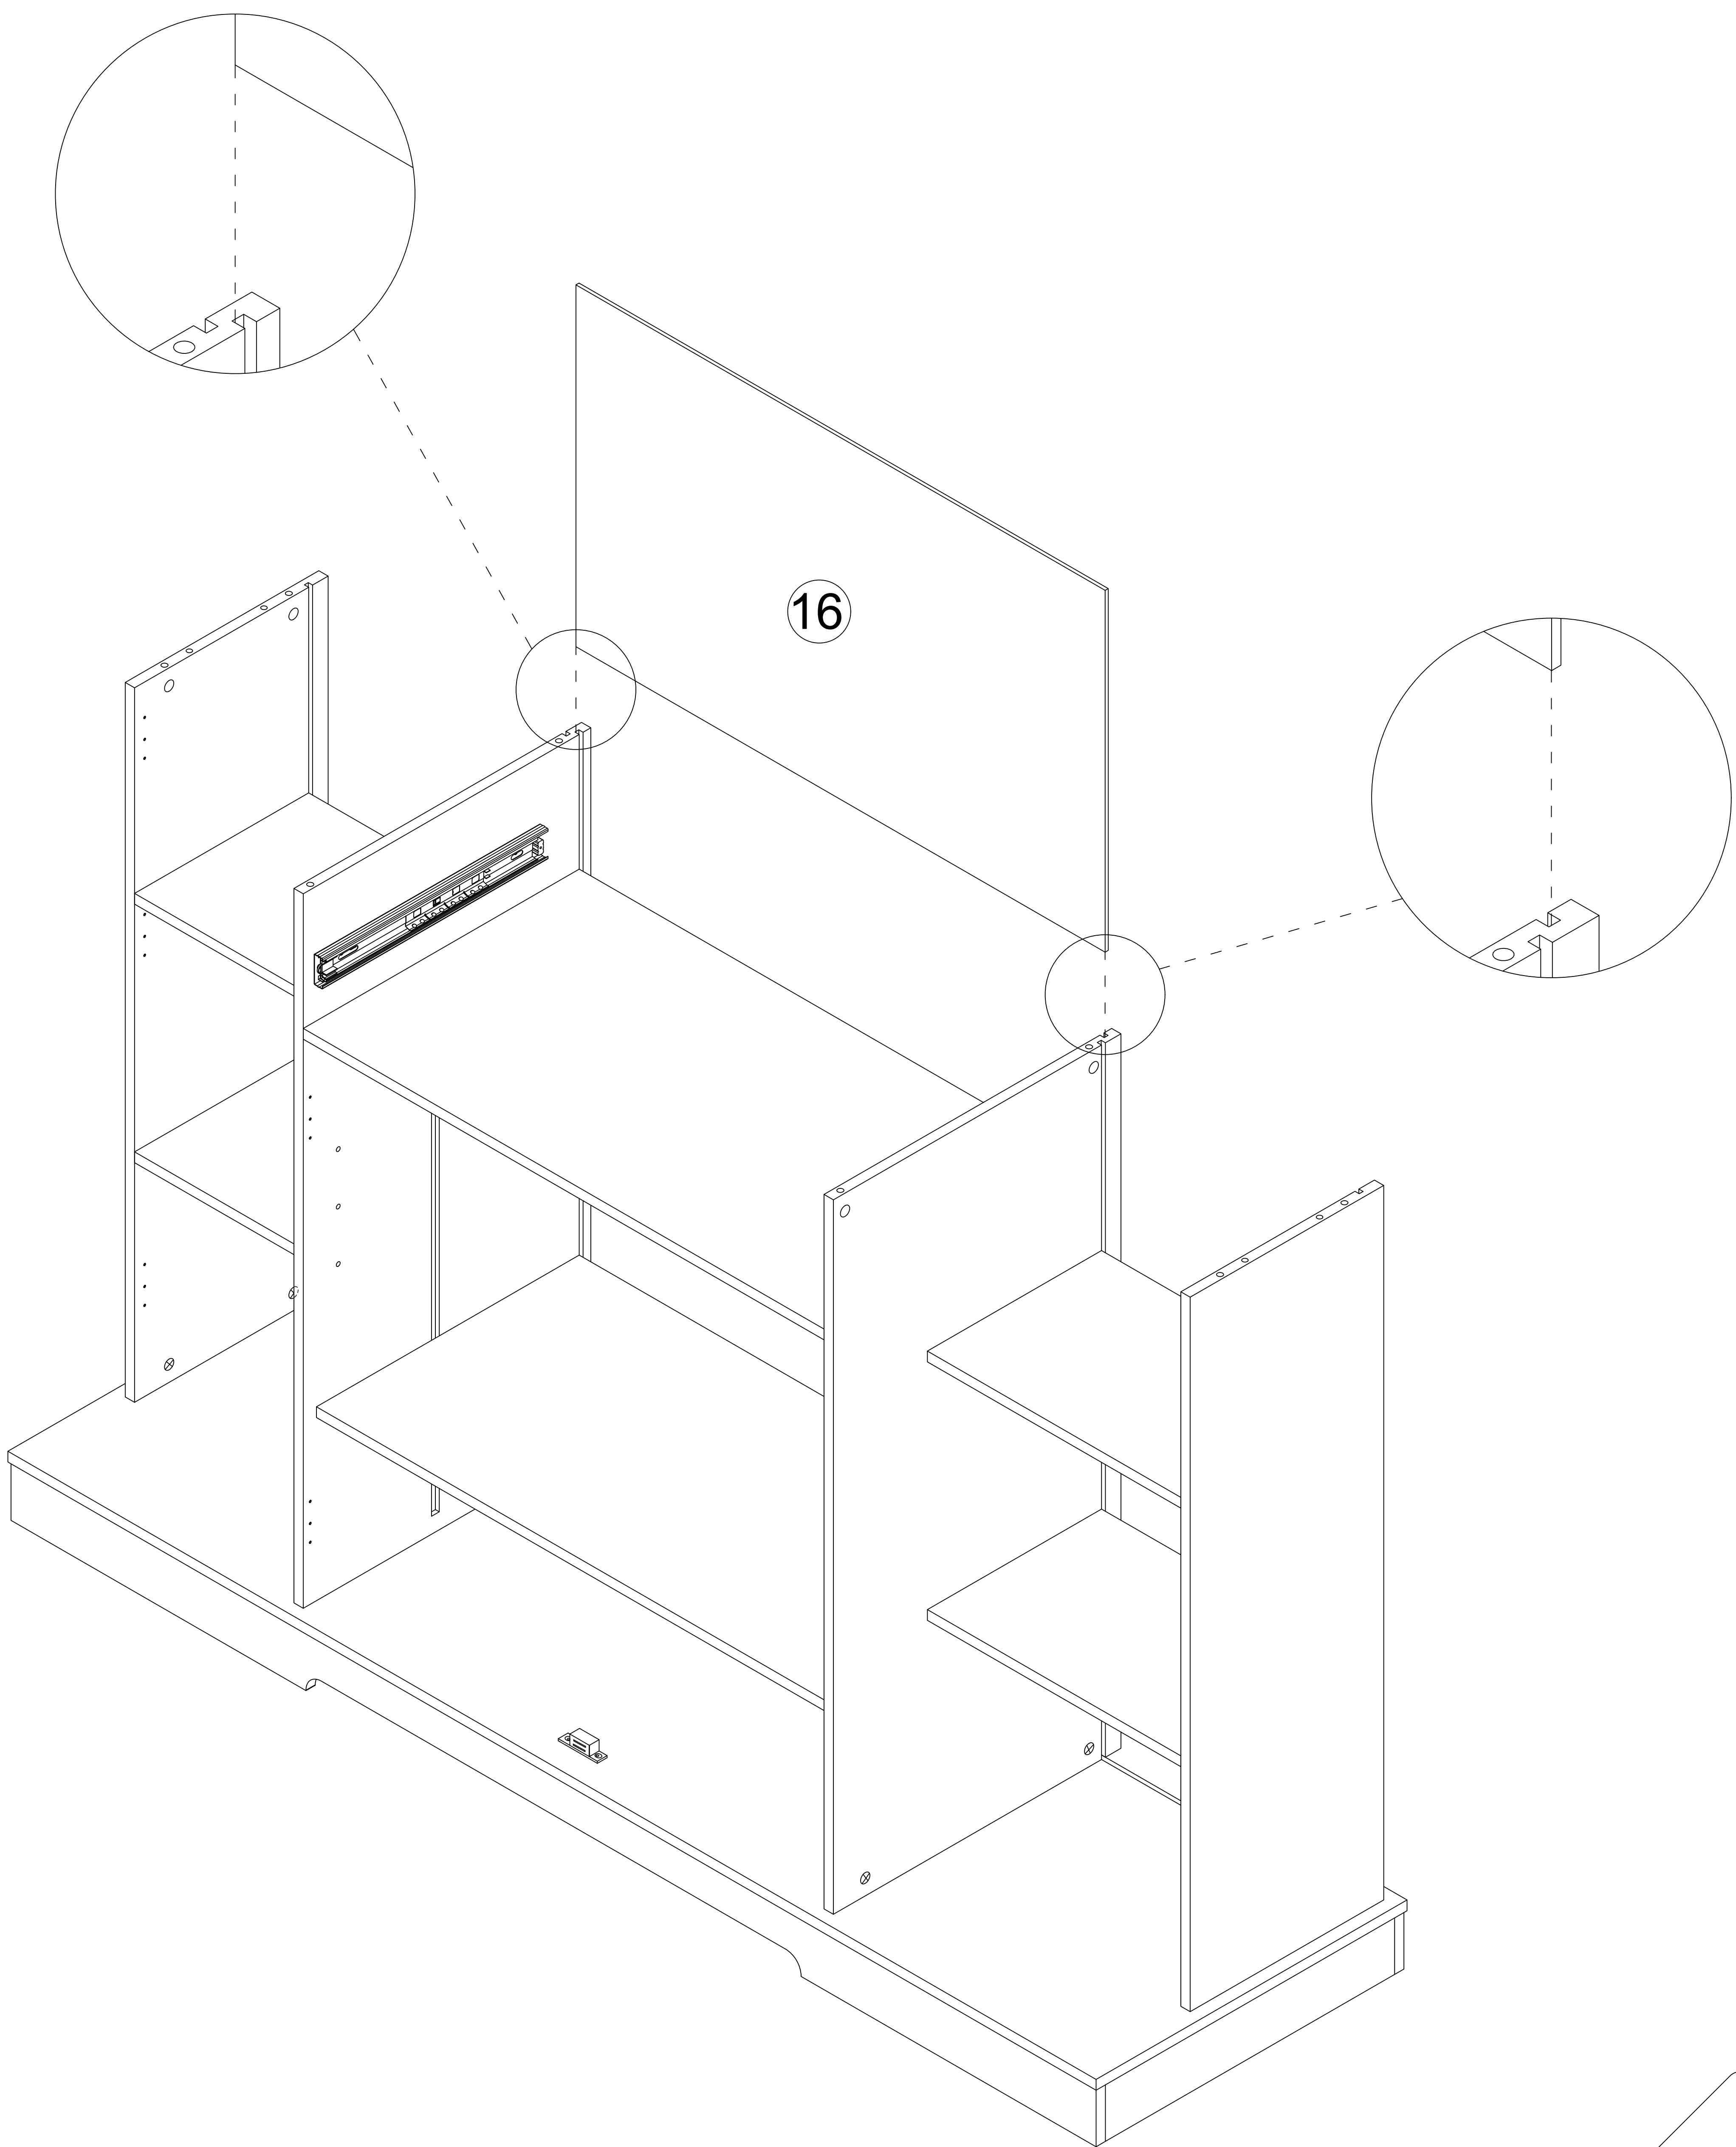


Step 28

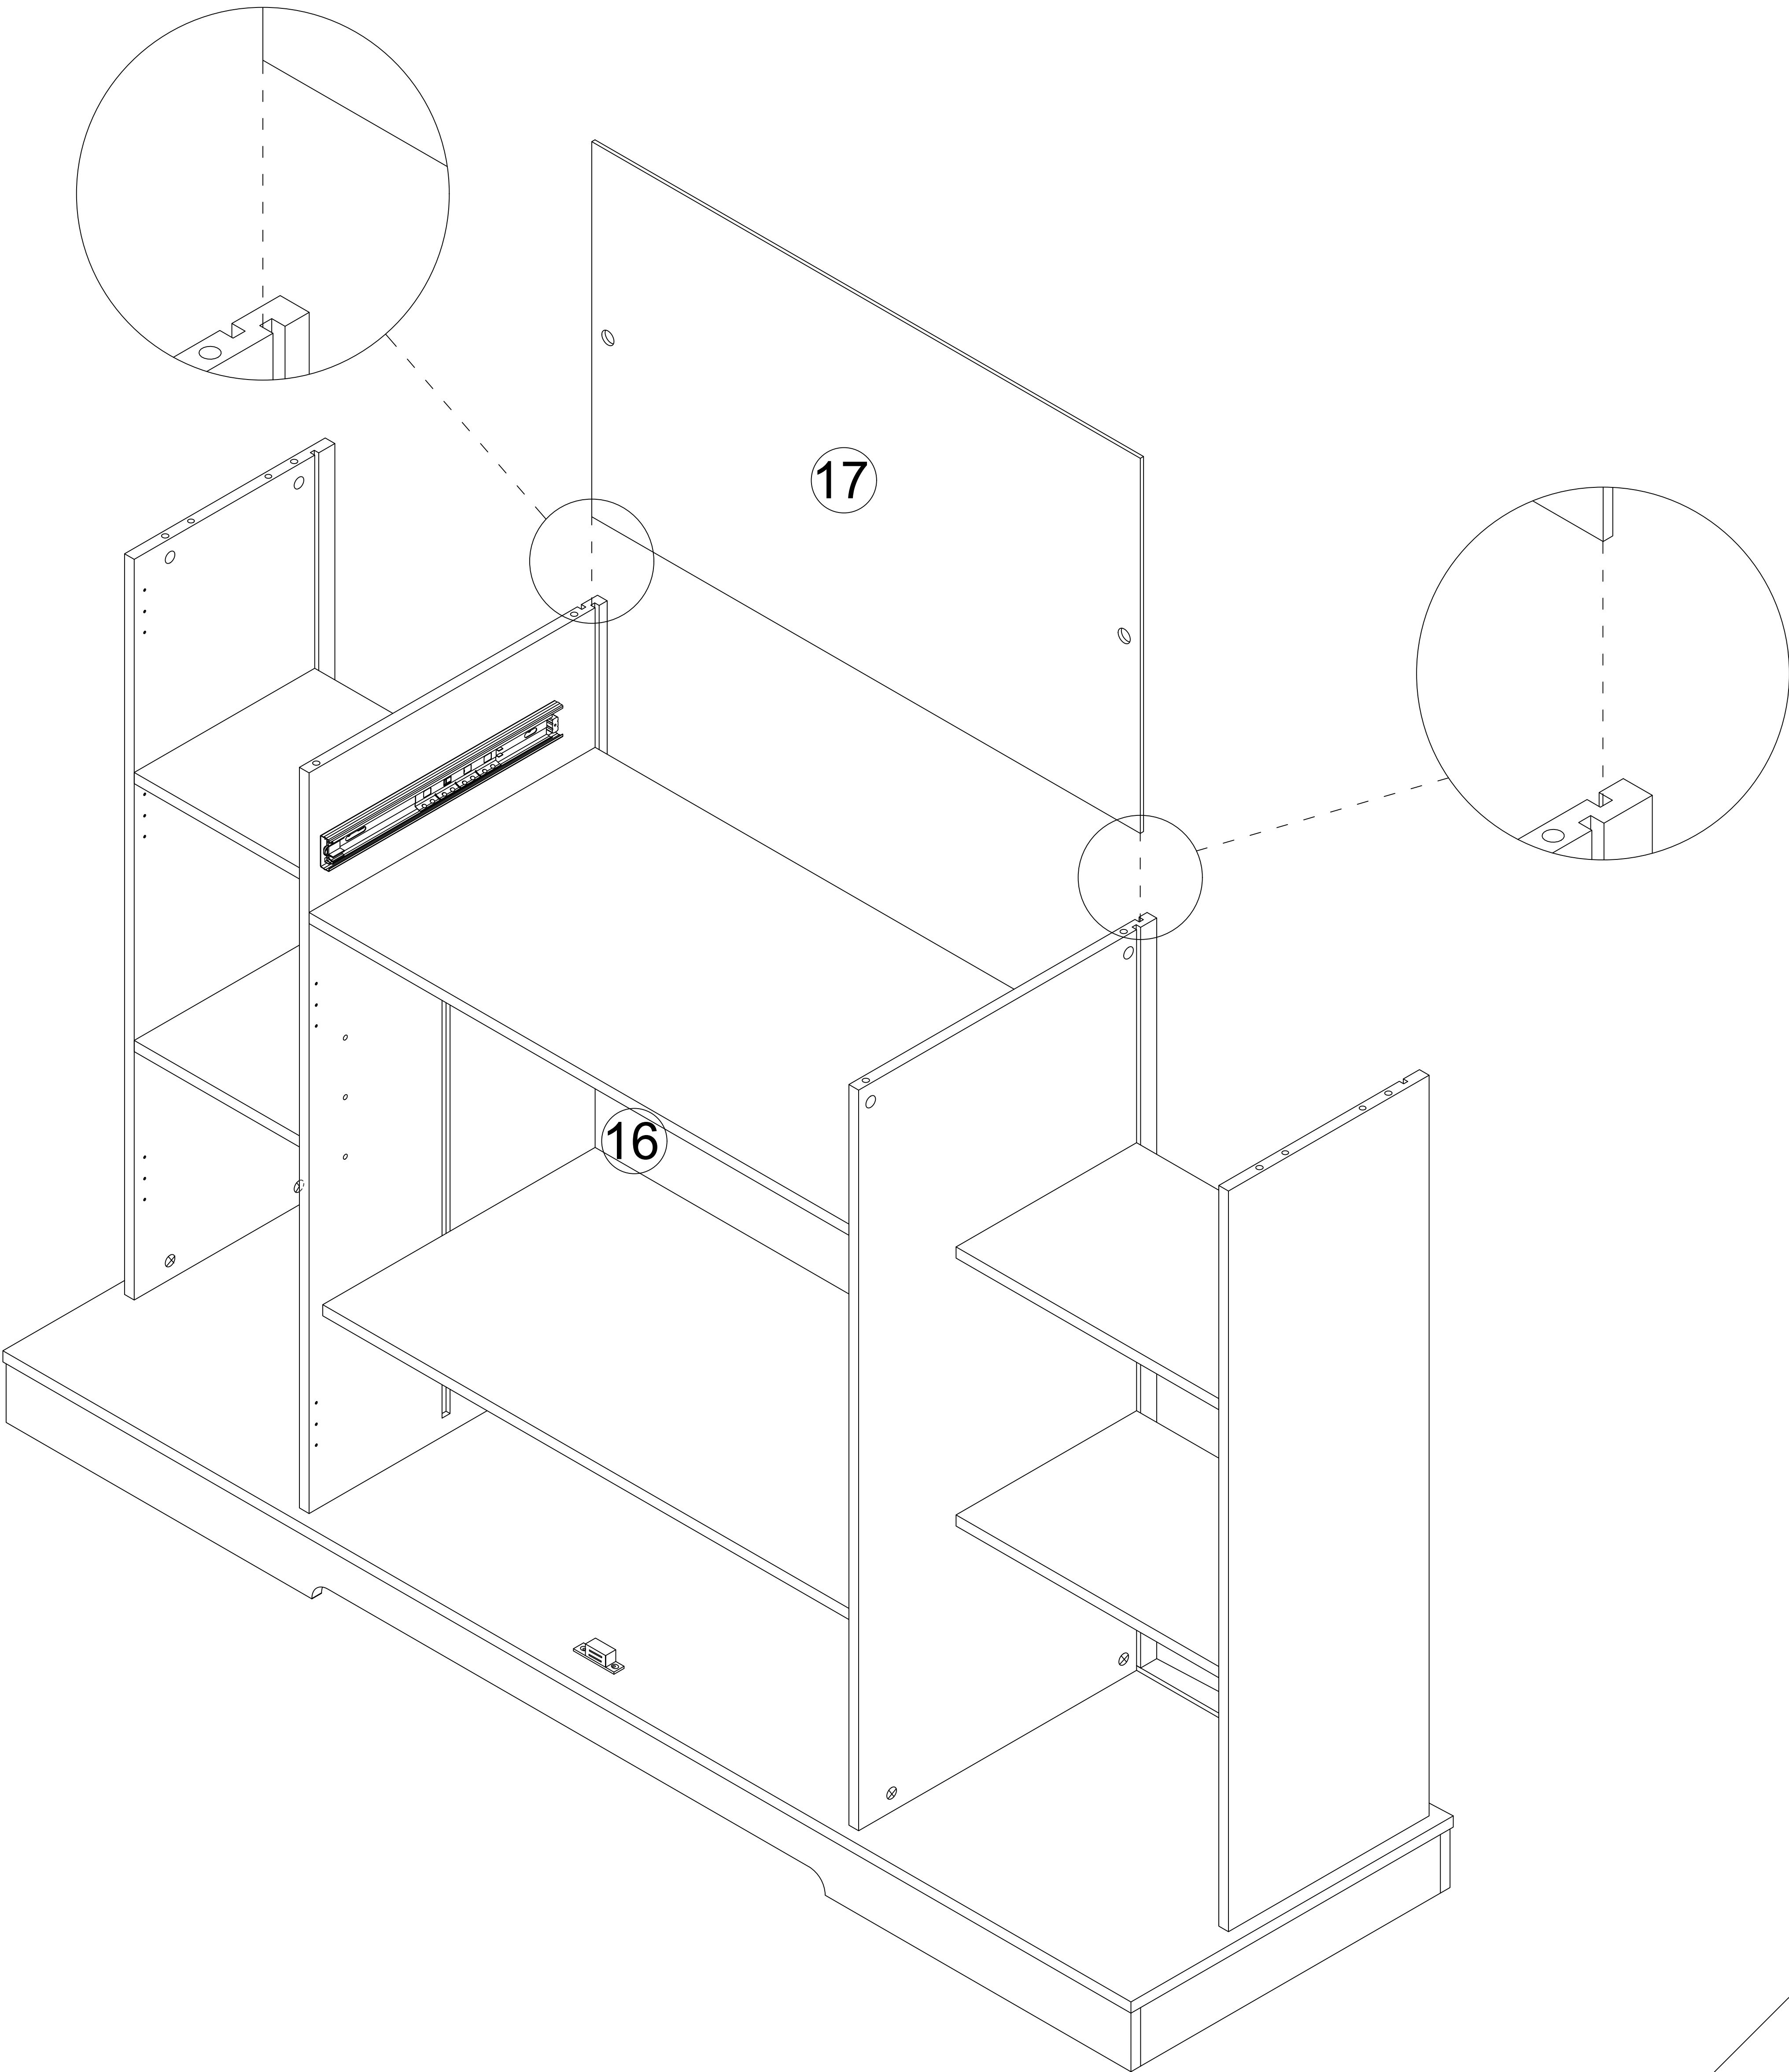


Step 29

The lamp power cord extends from the back panel hole

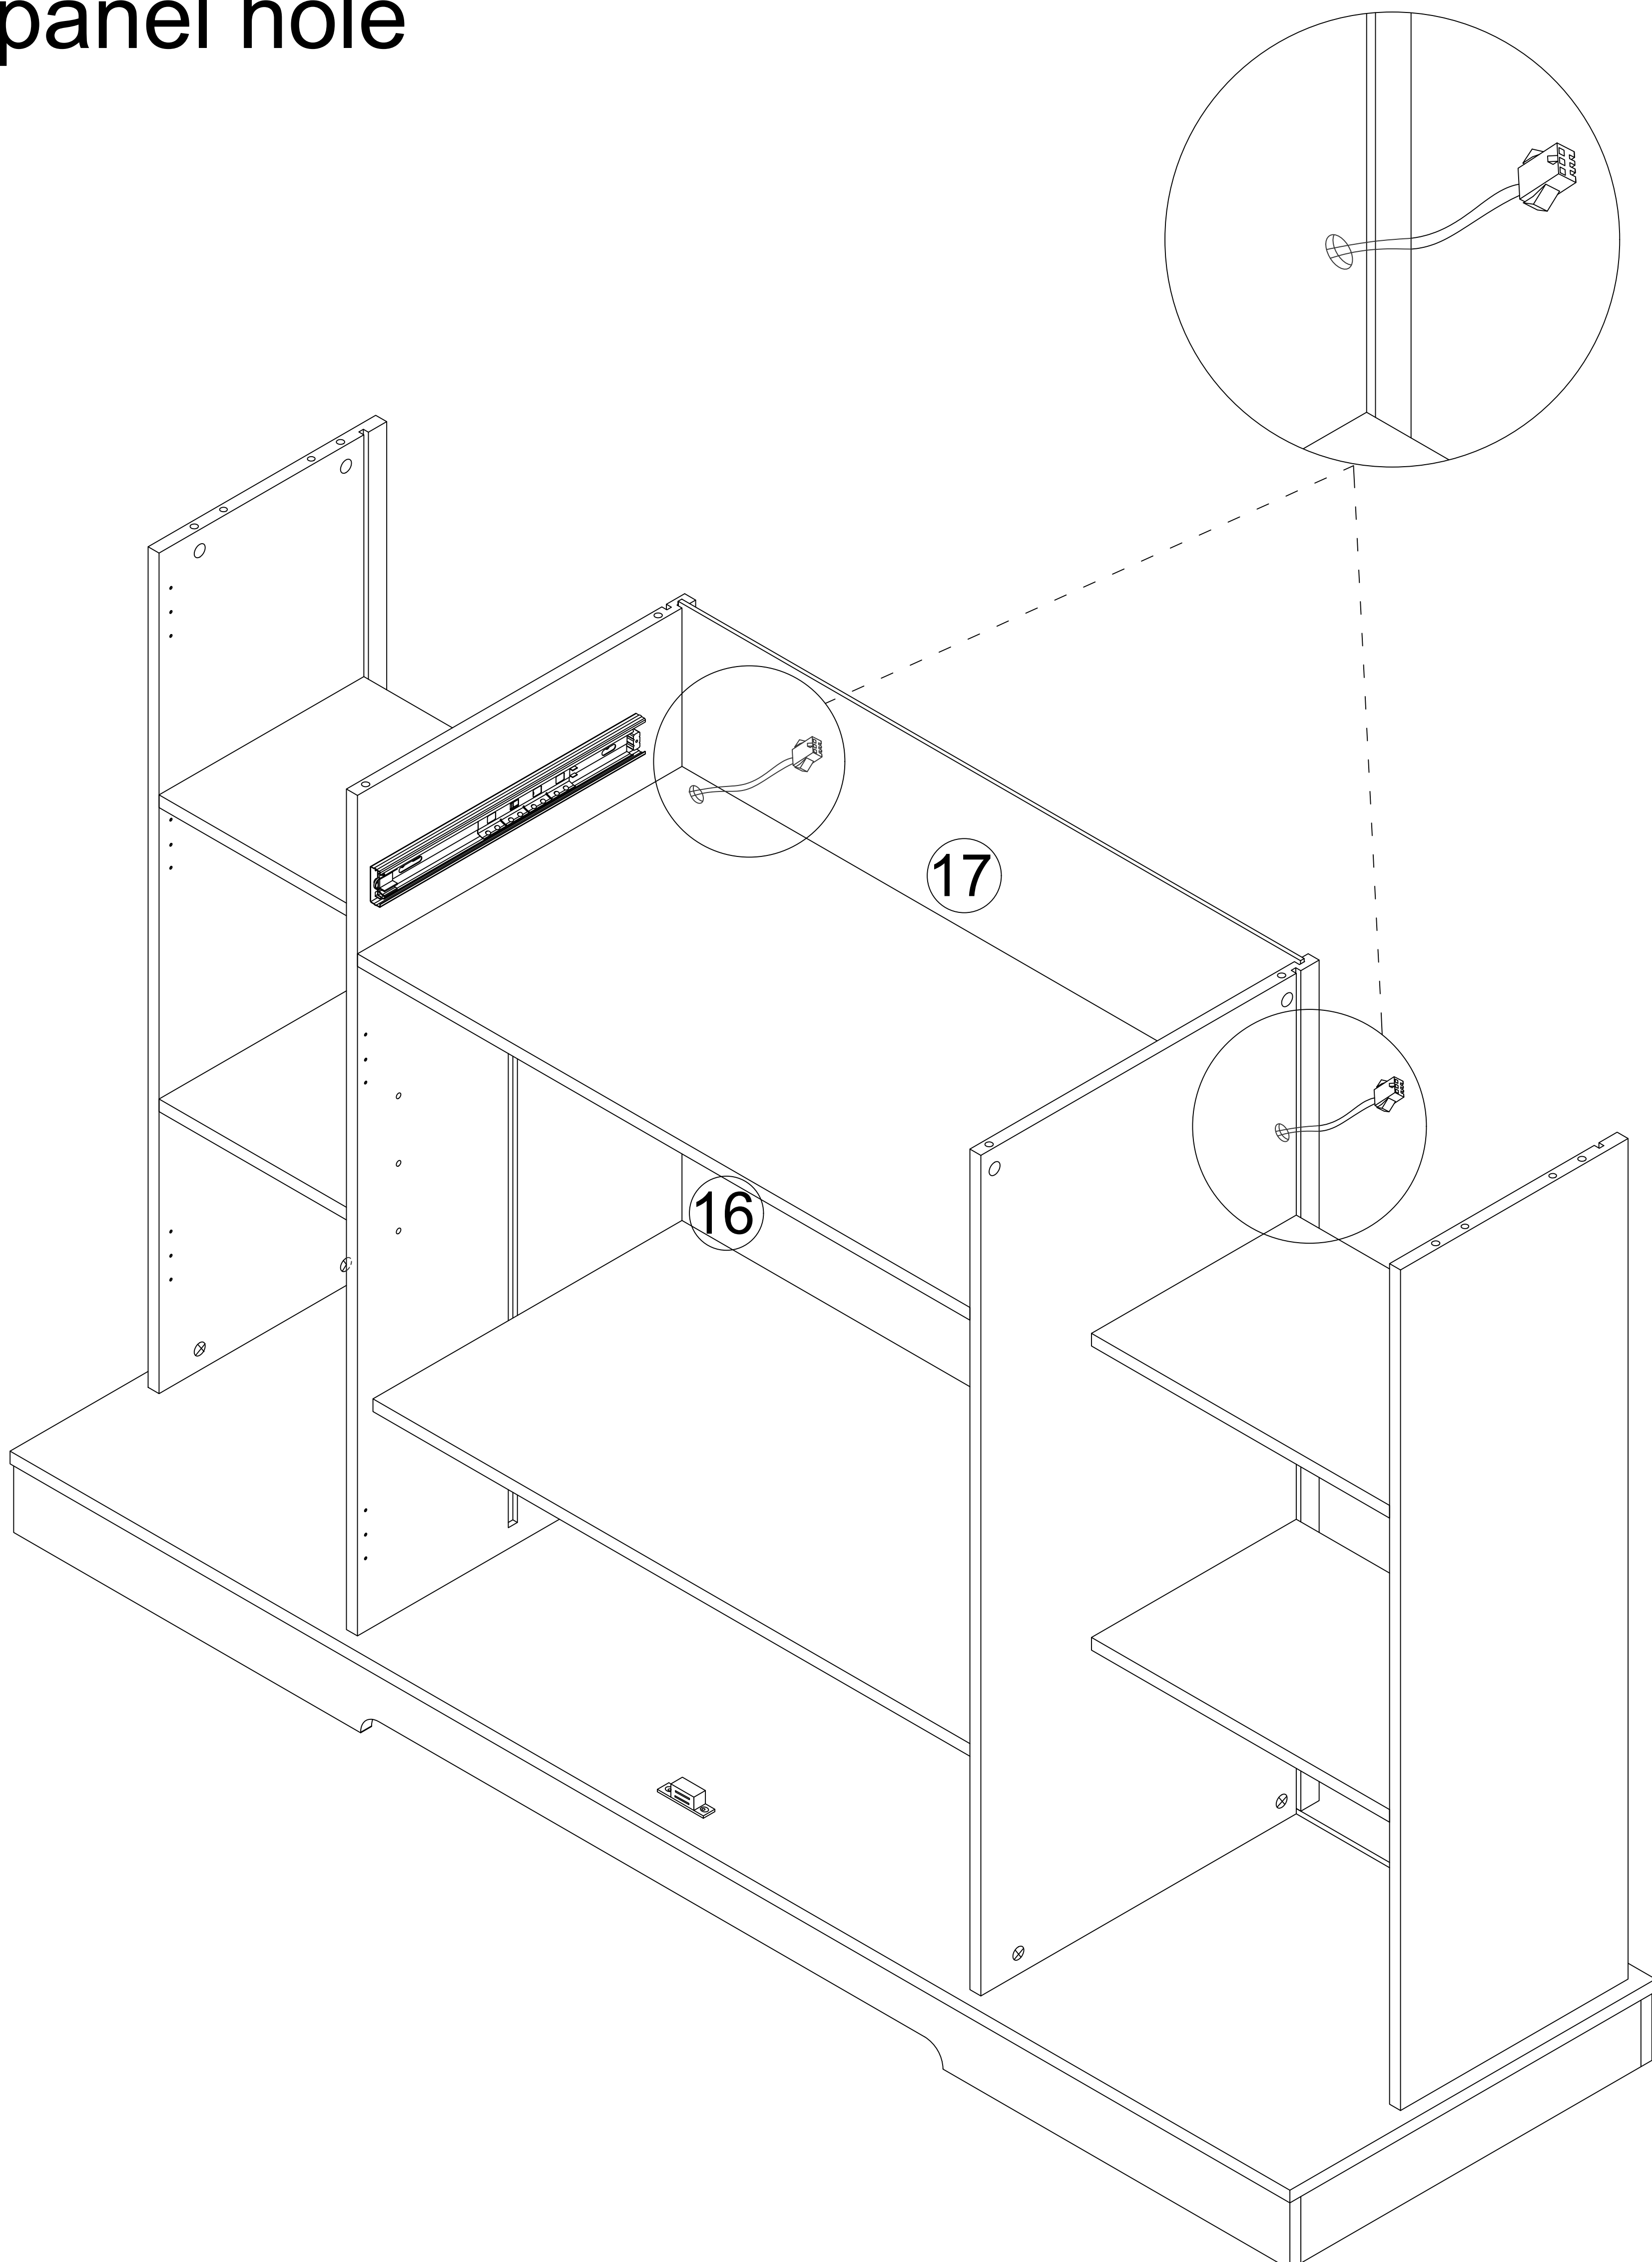

Step 30

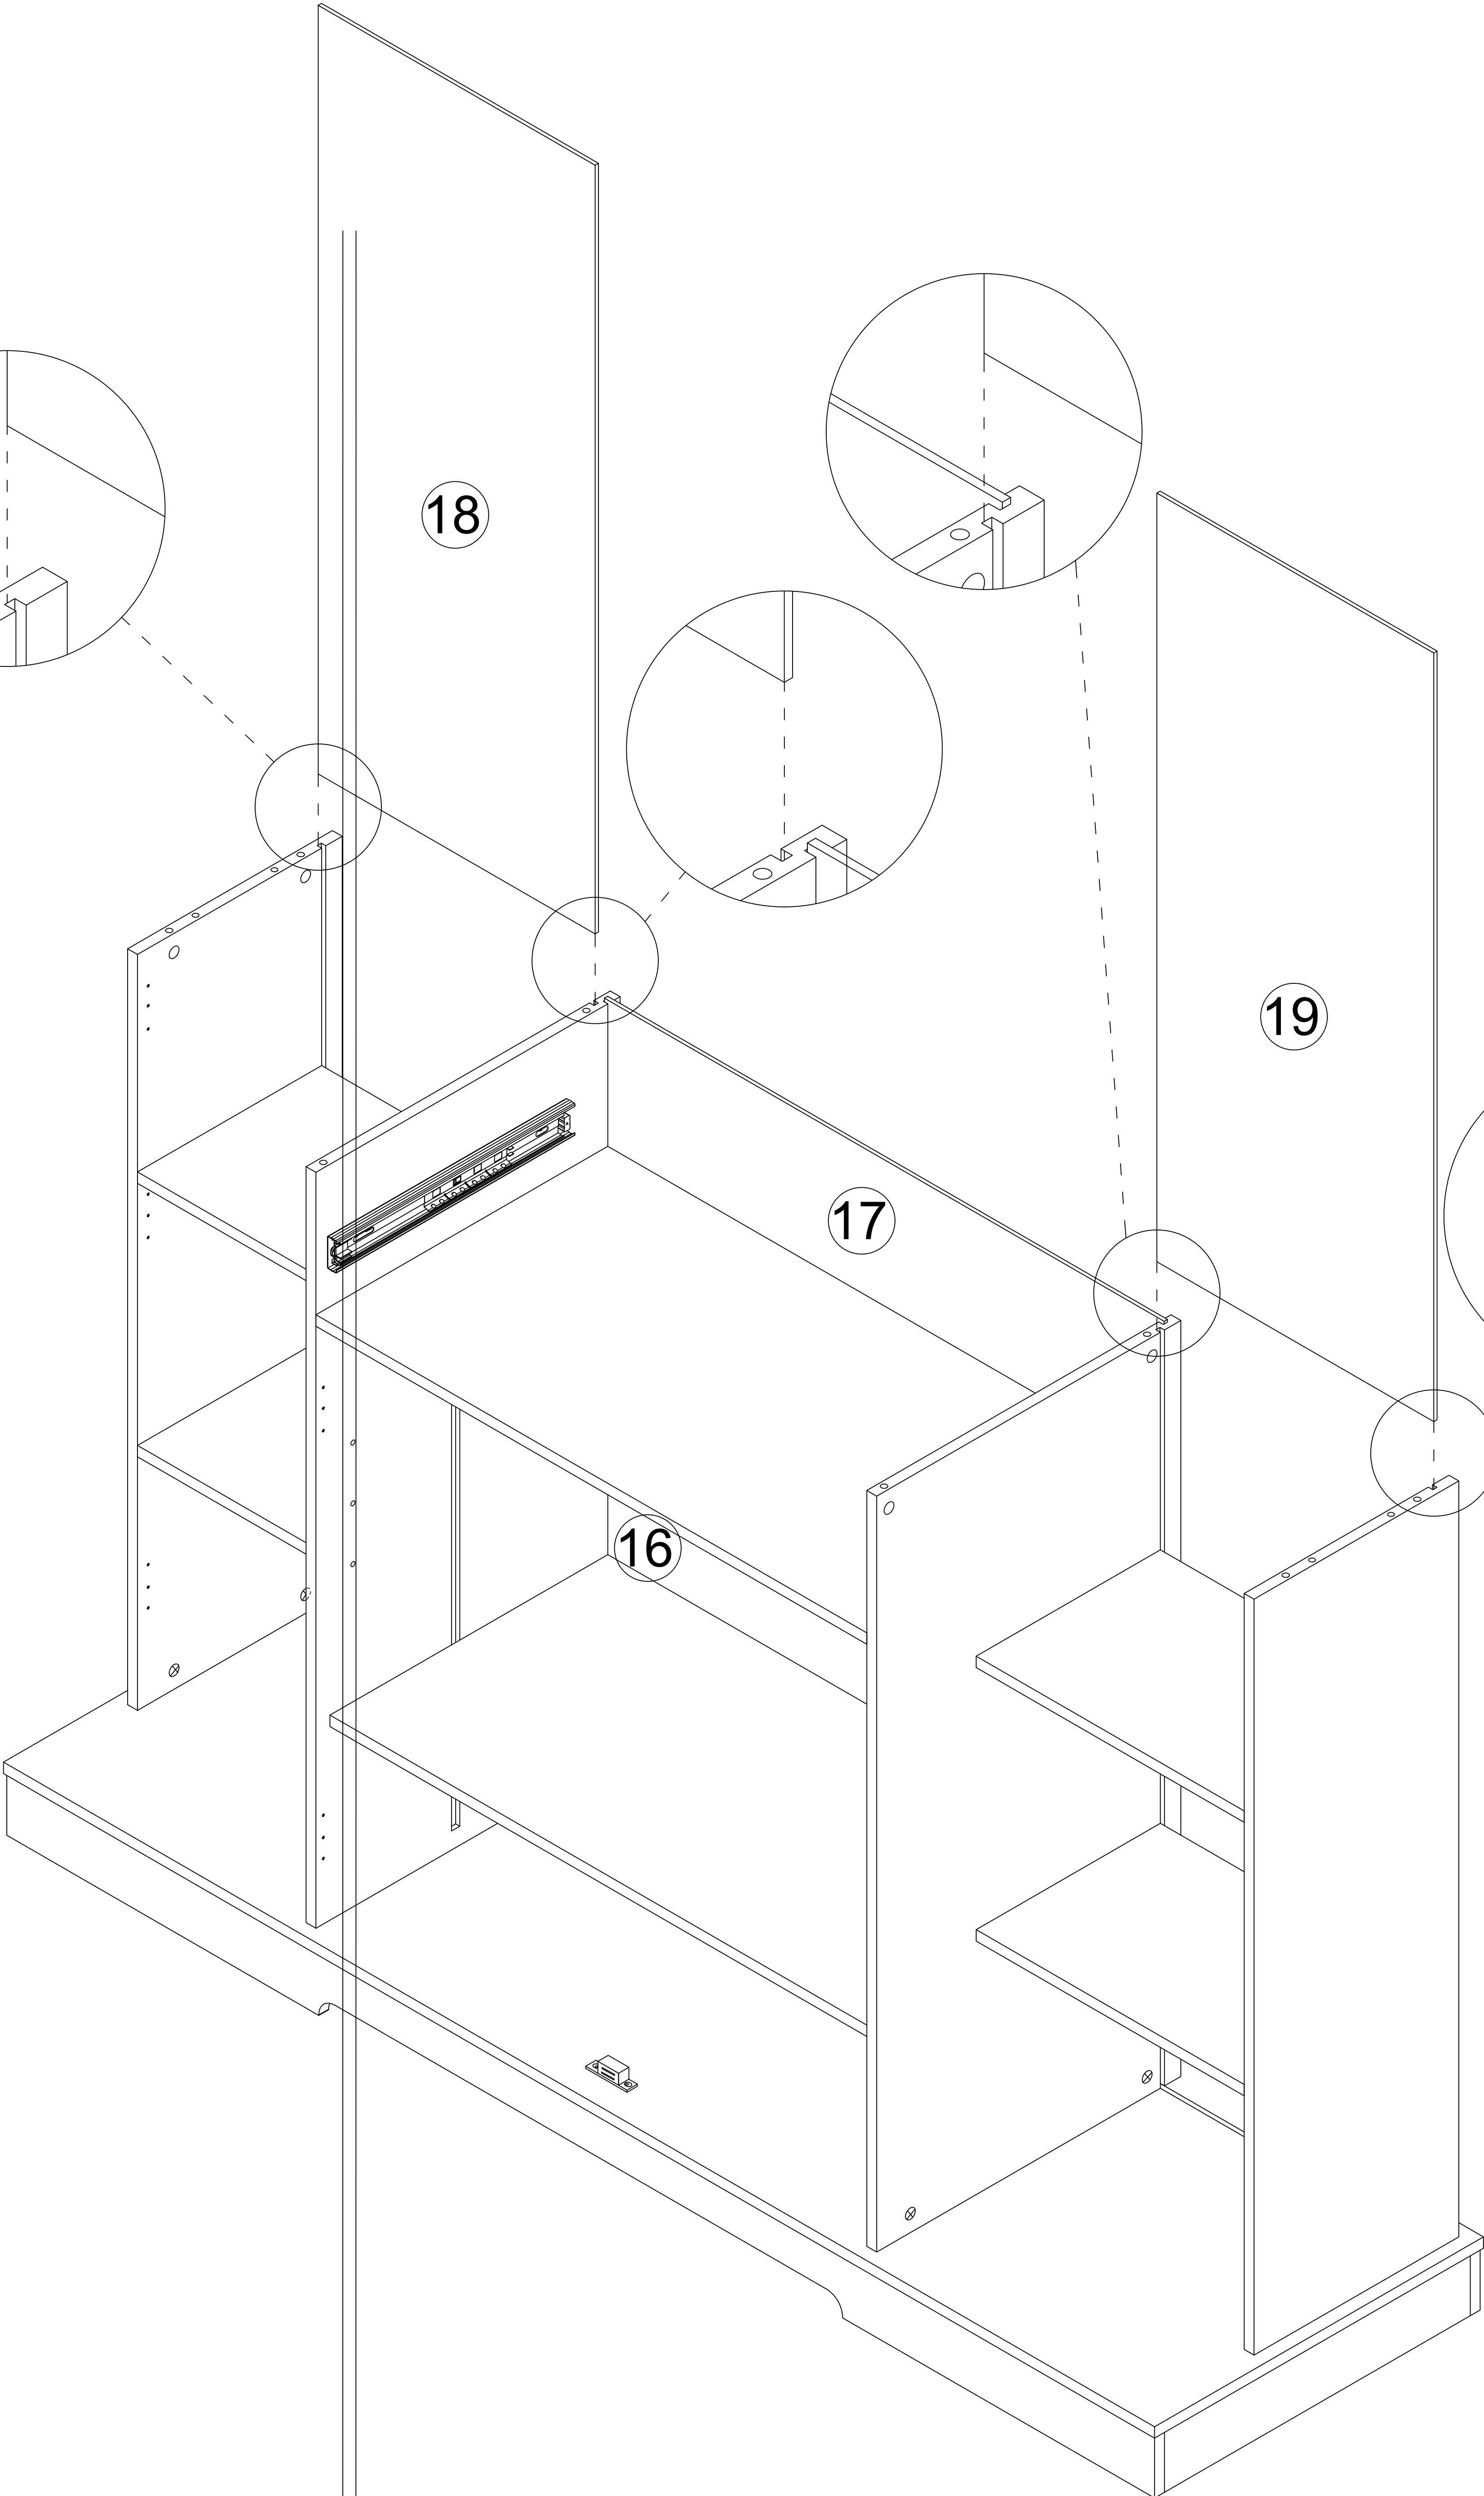


Step 31

C




x4

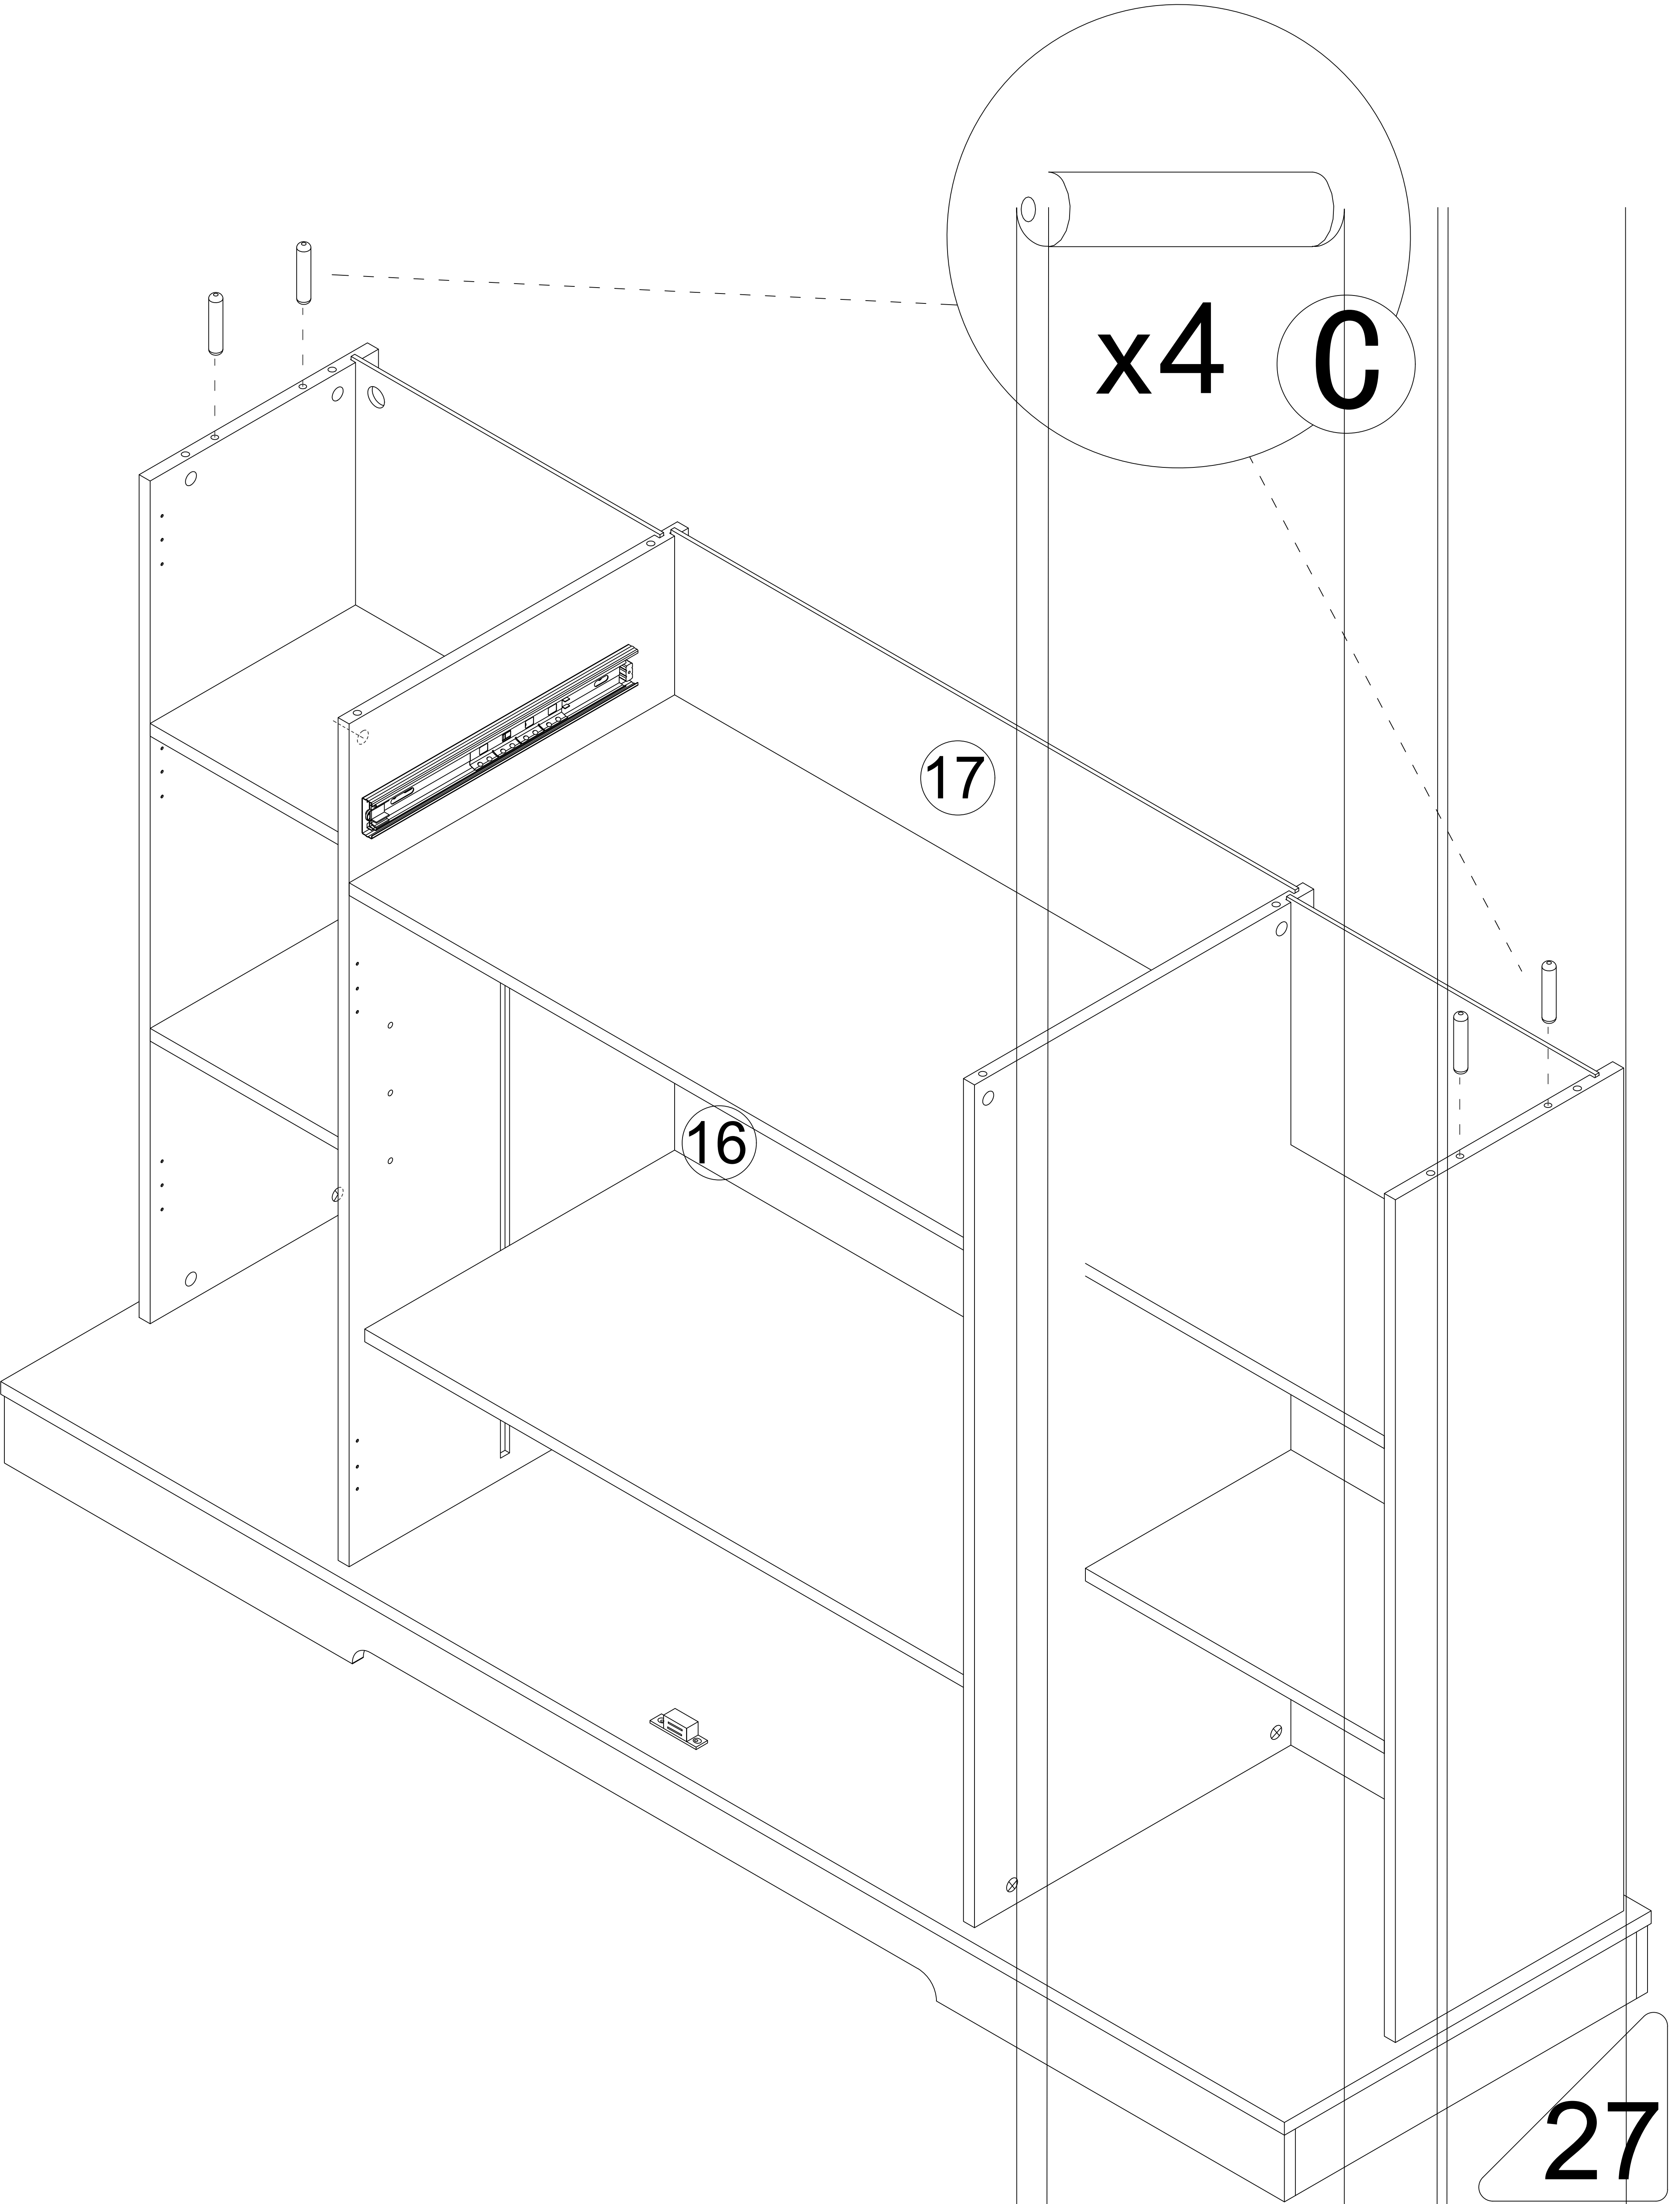


Step 32

A

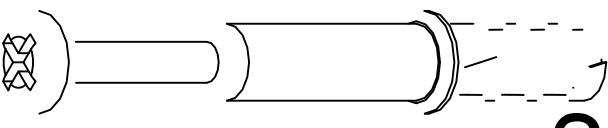


x8


F

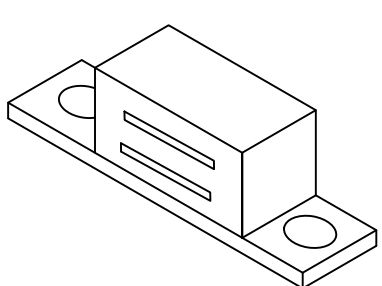


x2

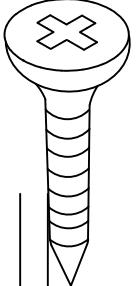

x4

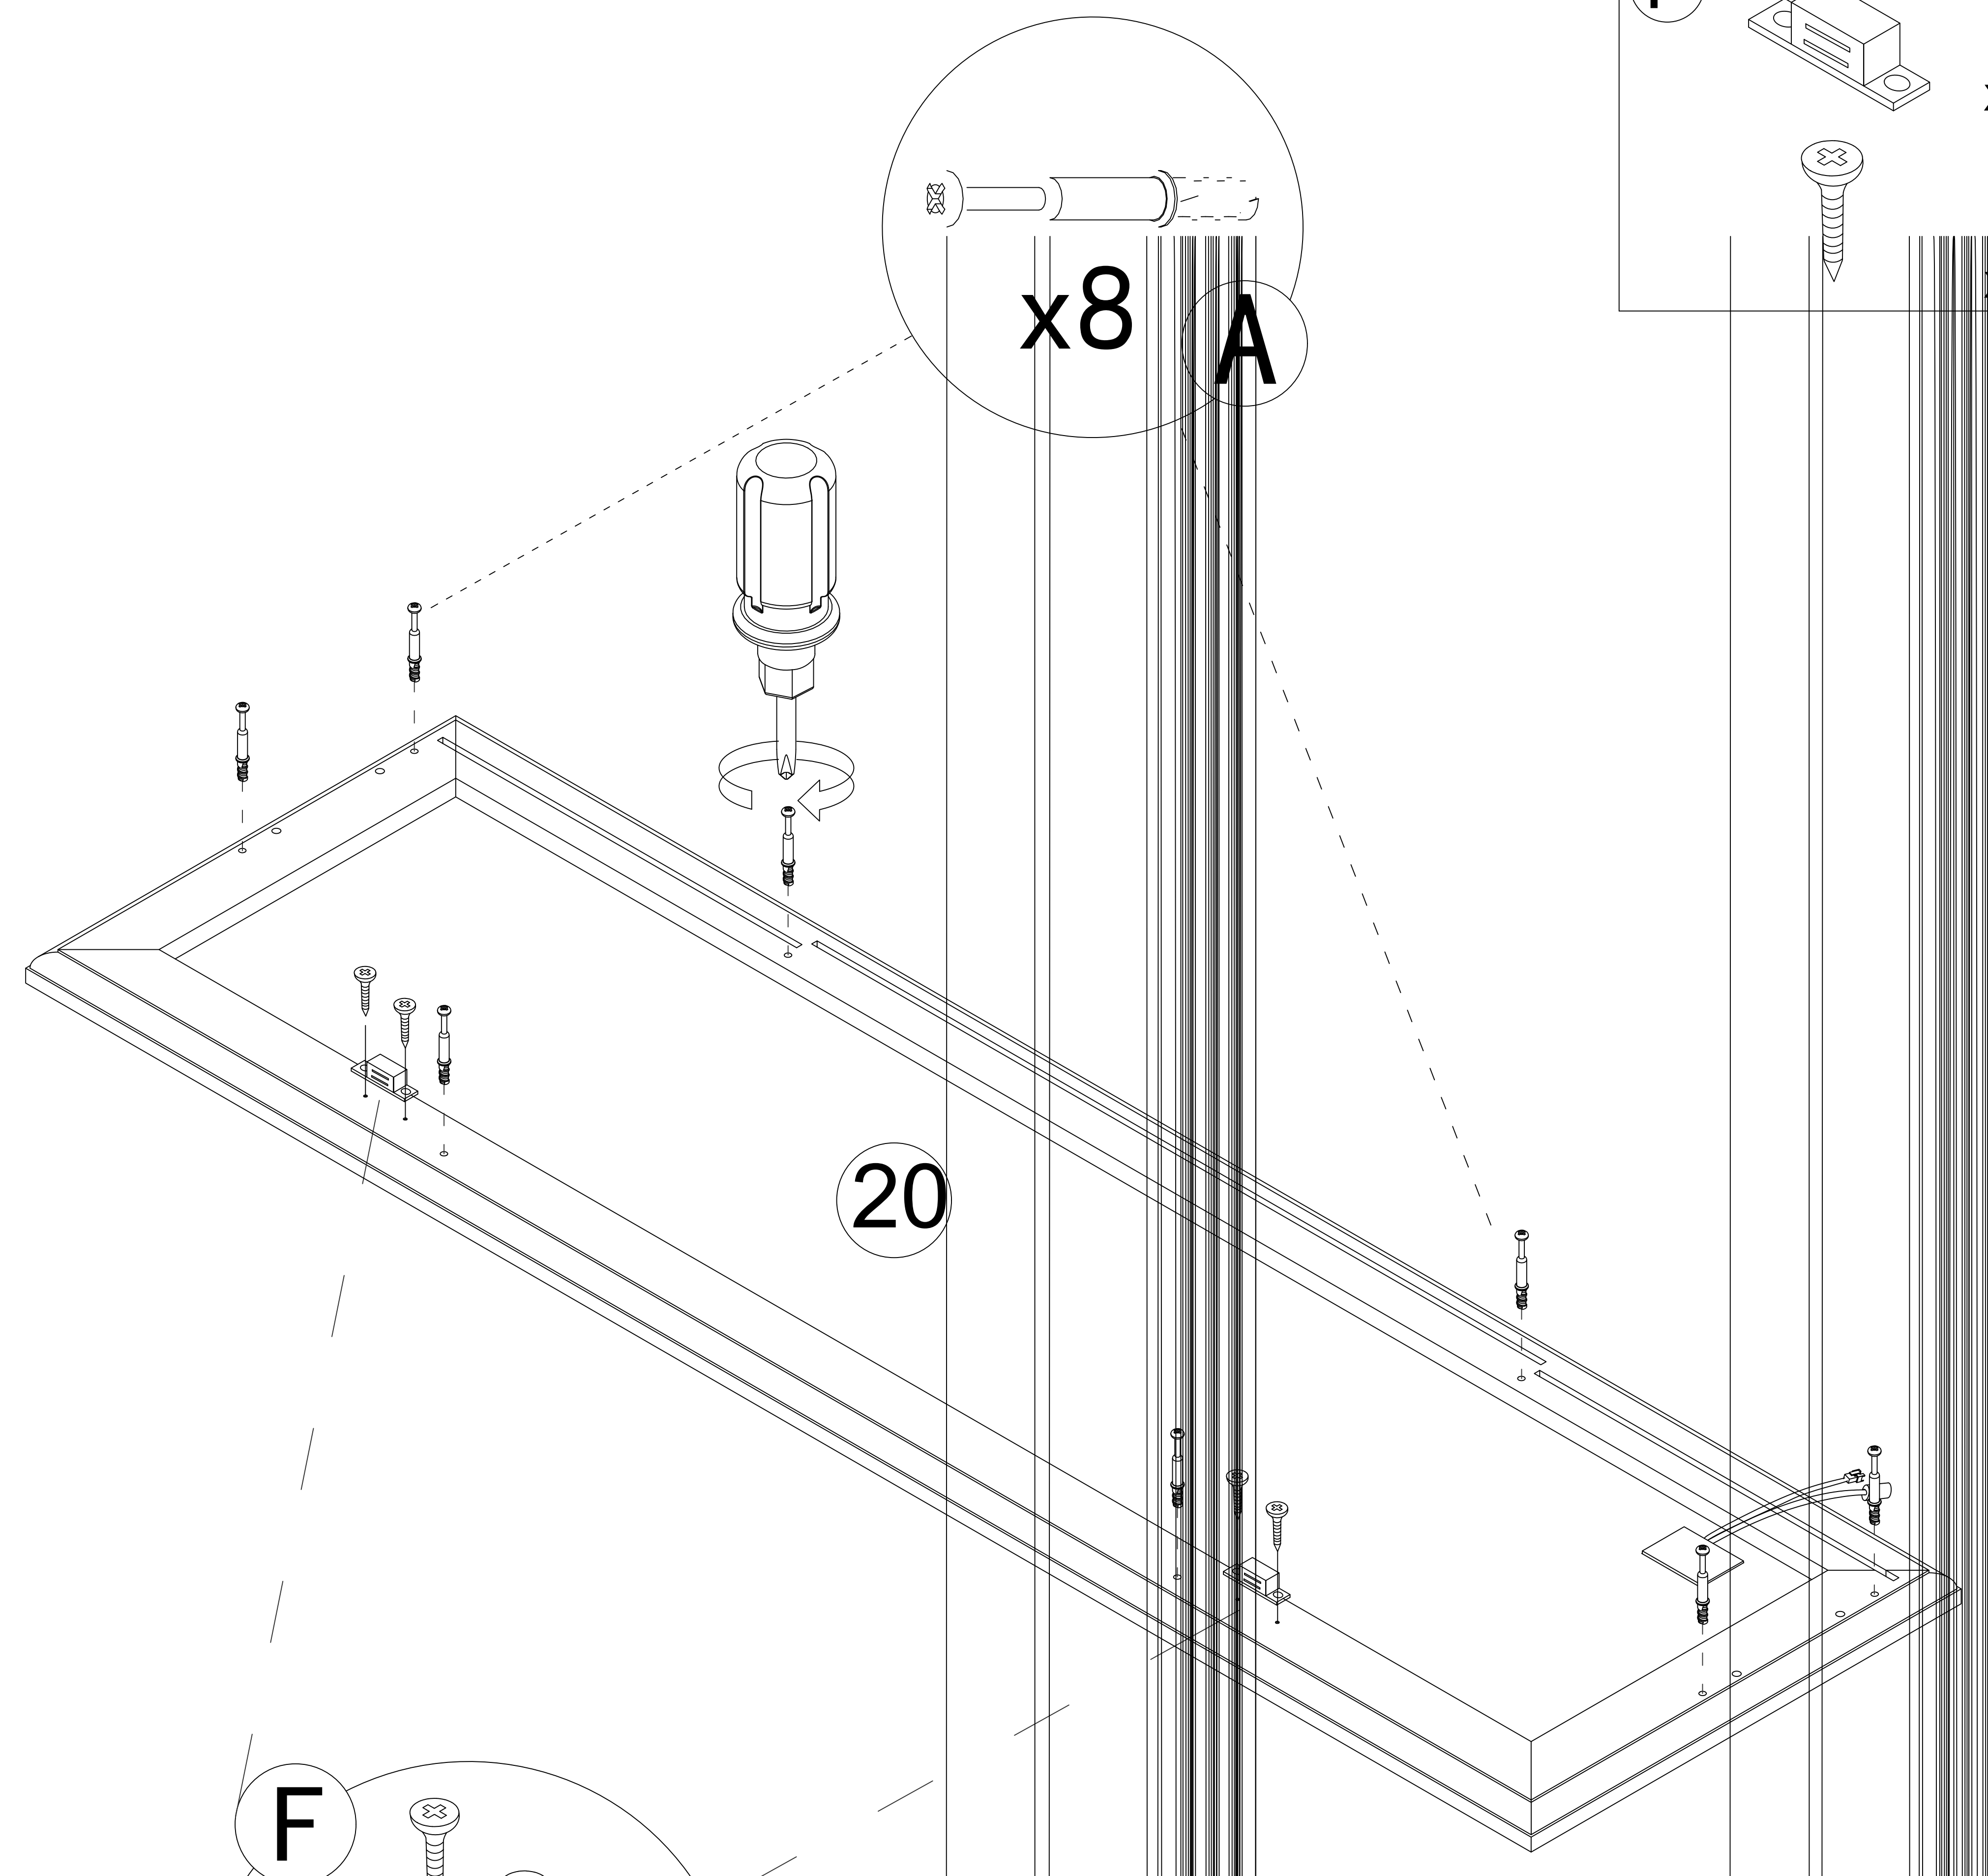


F

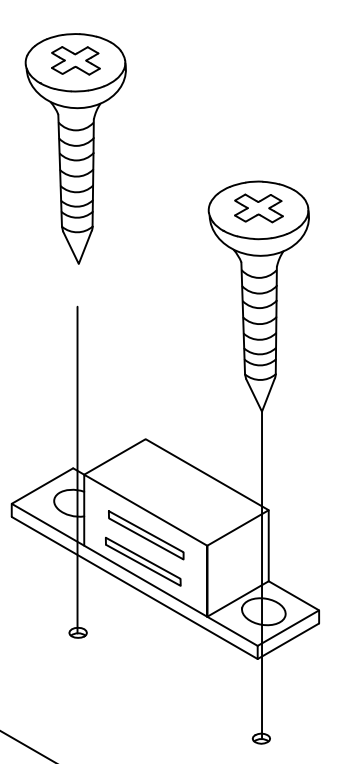


Step 33

B

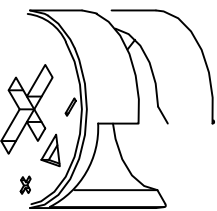


x8

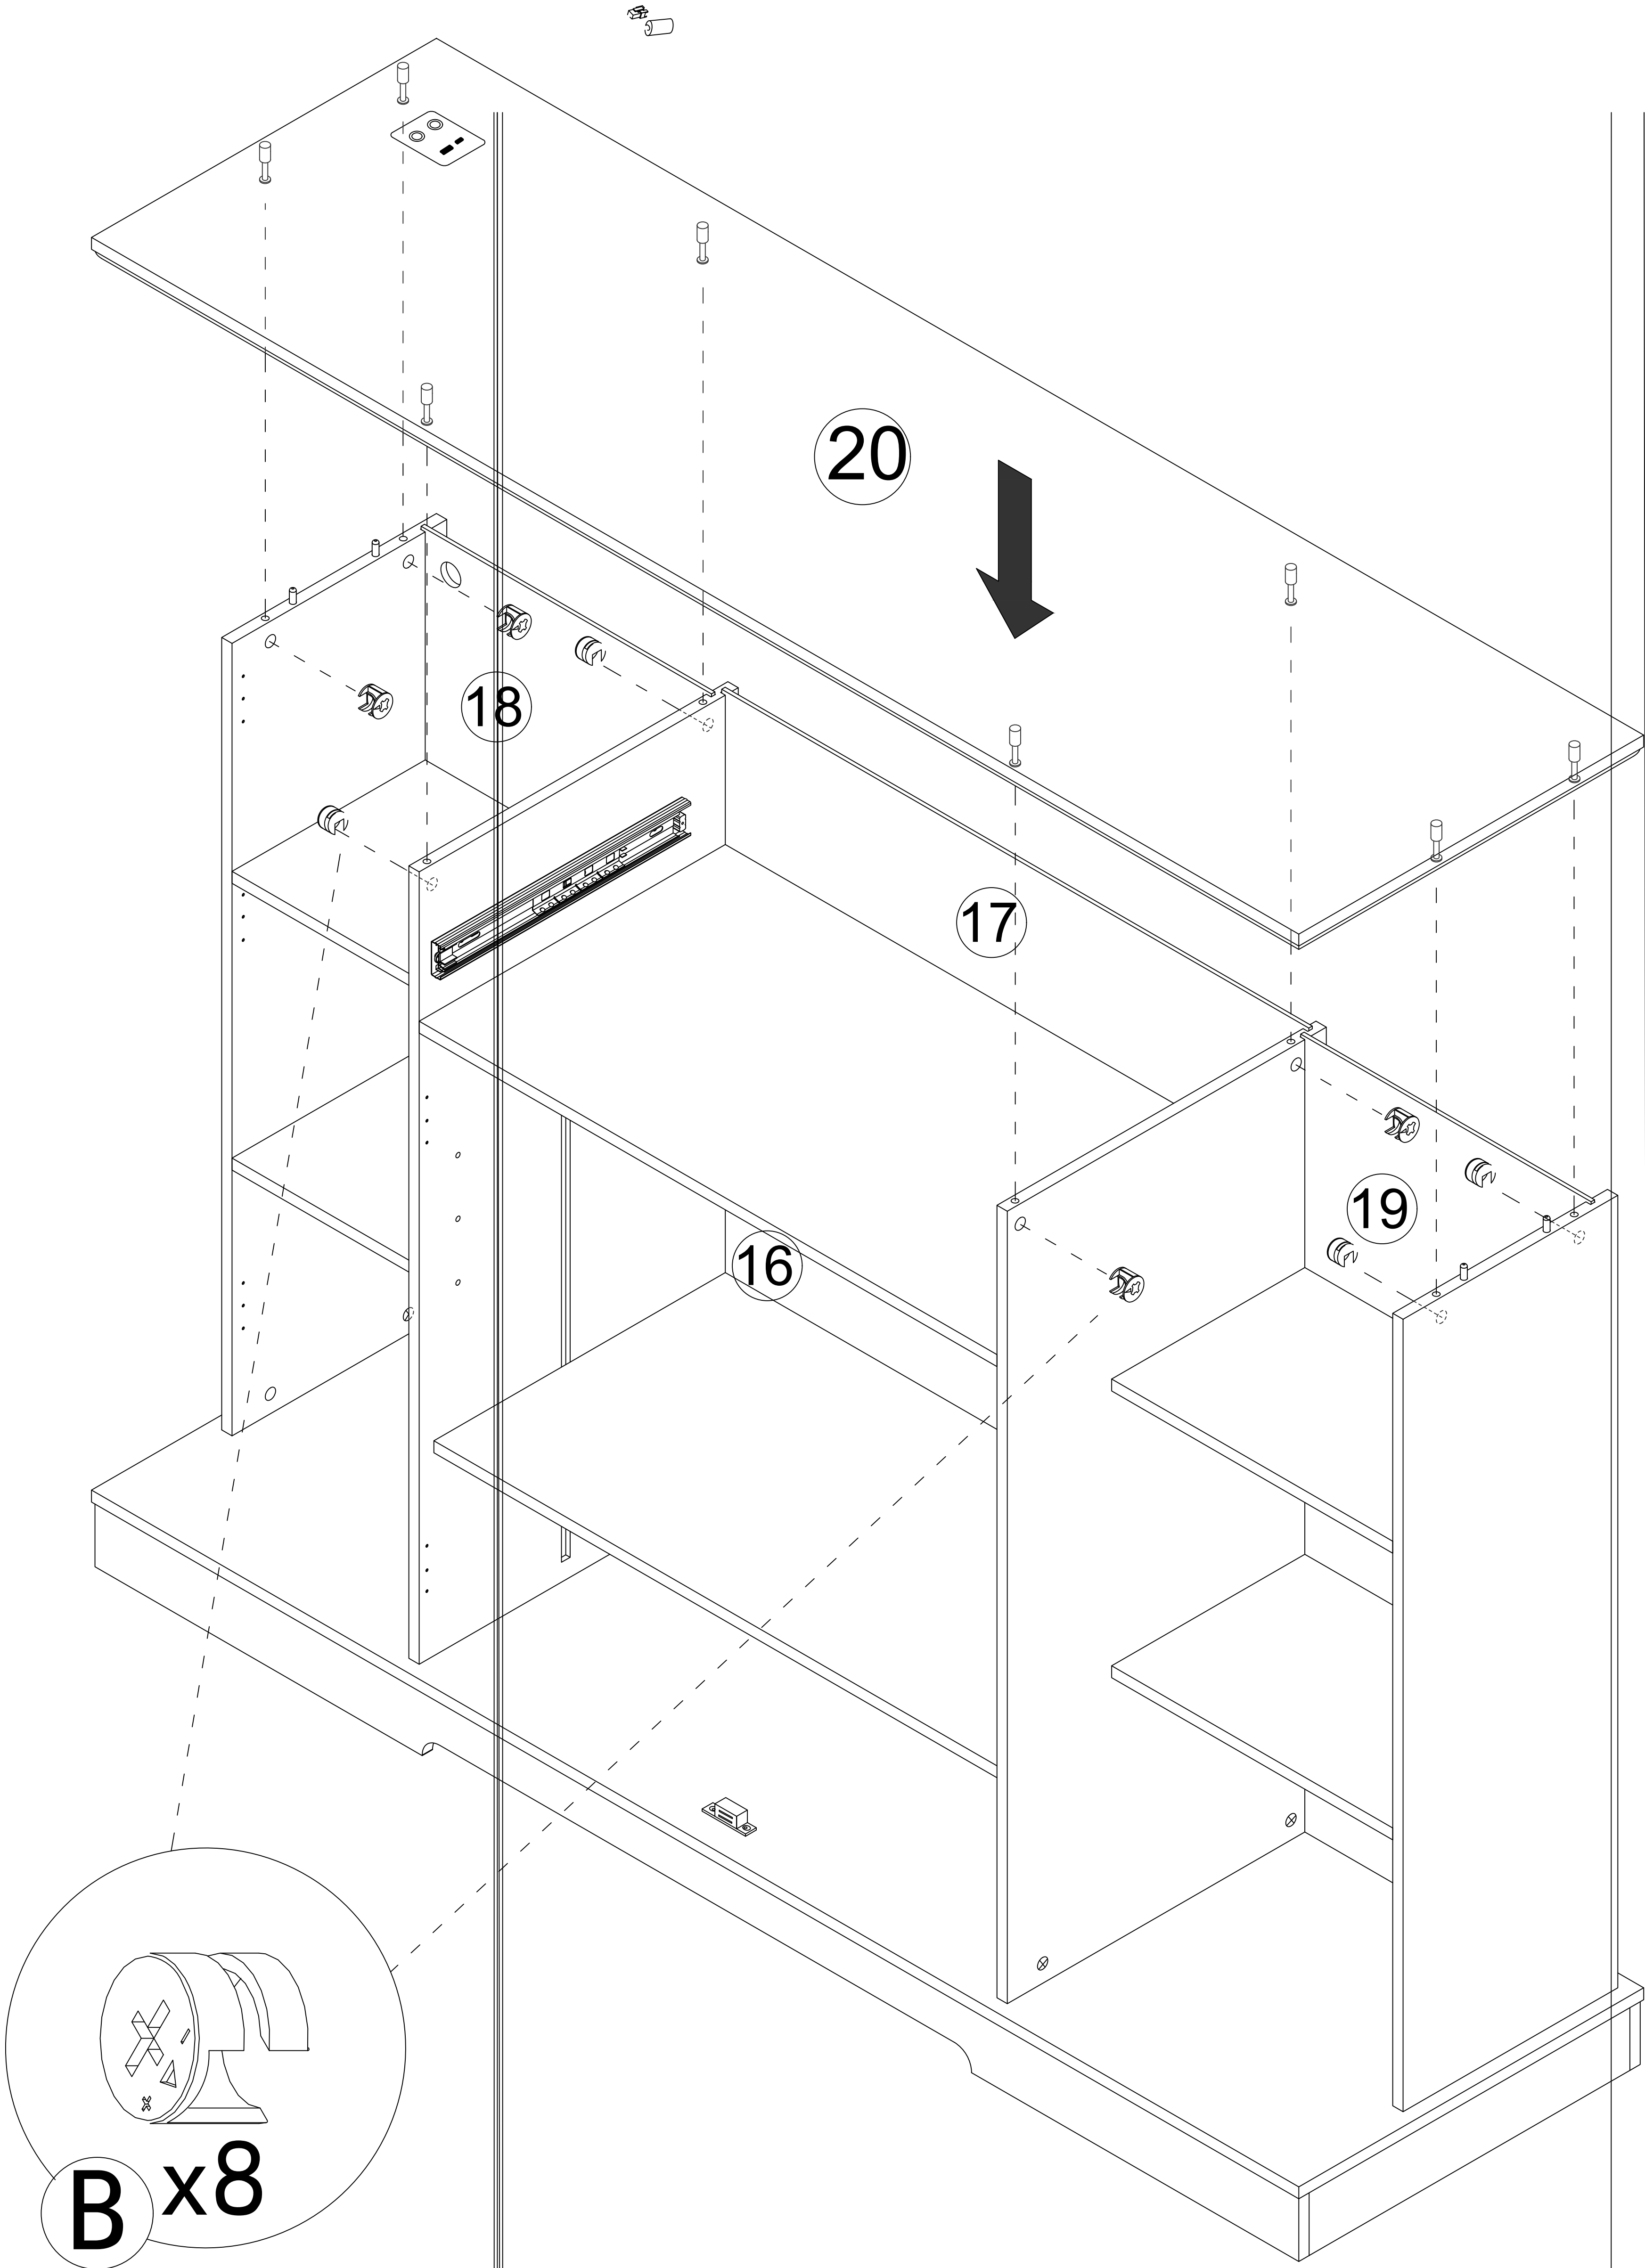


Step 34

G

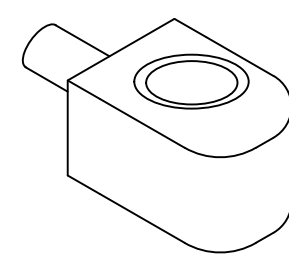


x4

Thread the power cord of the lamp
through the hole on board No.18

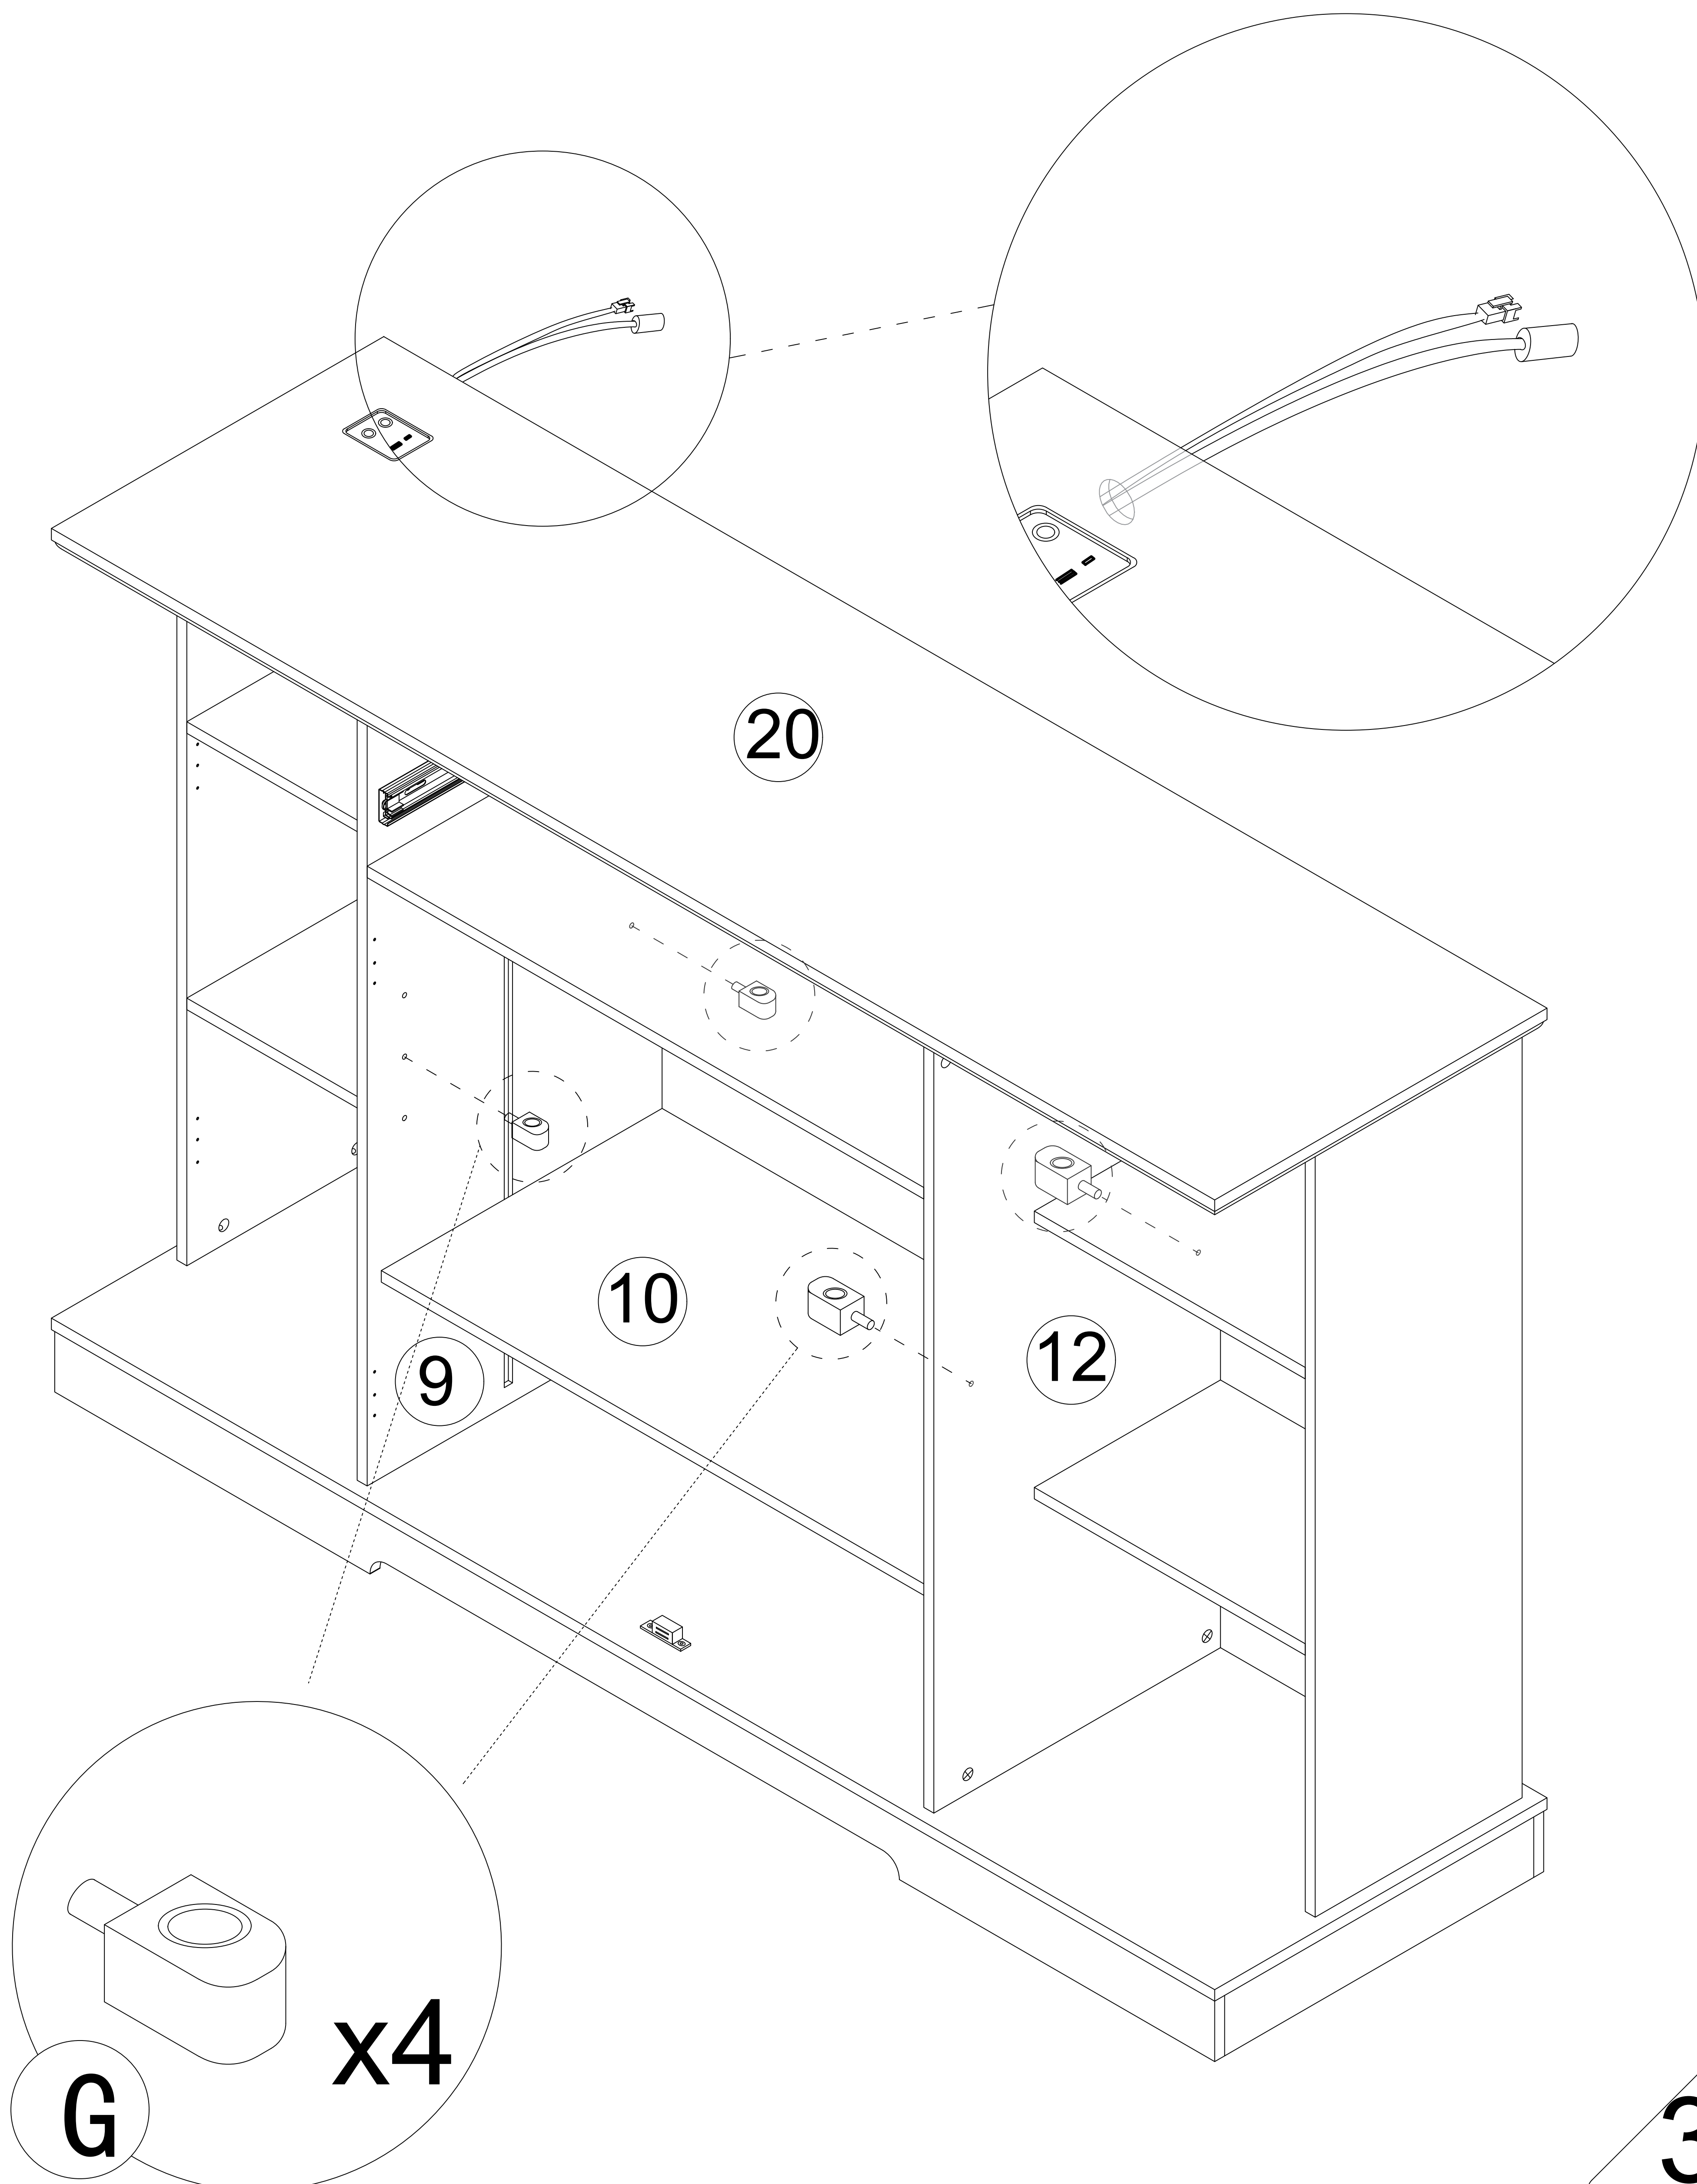


Step 35

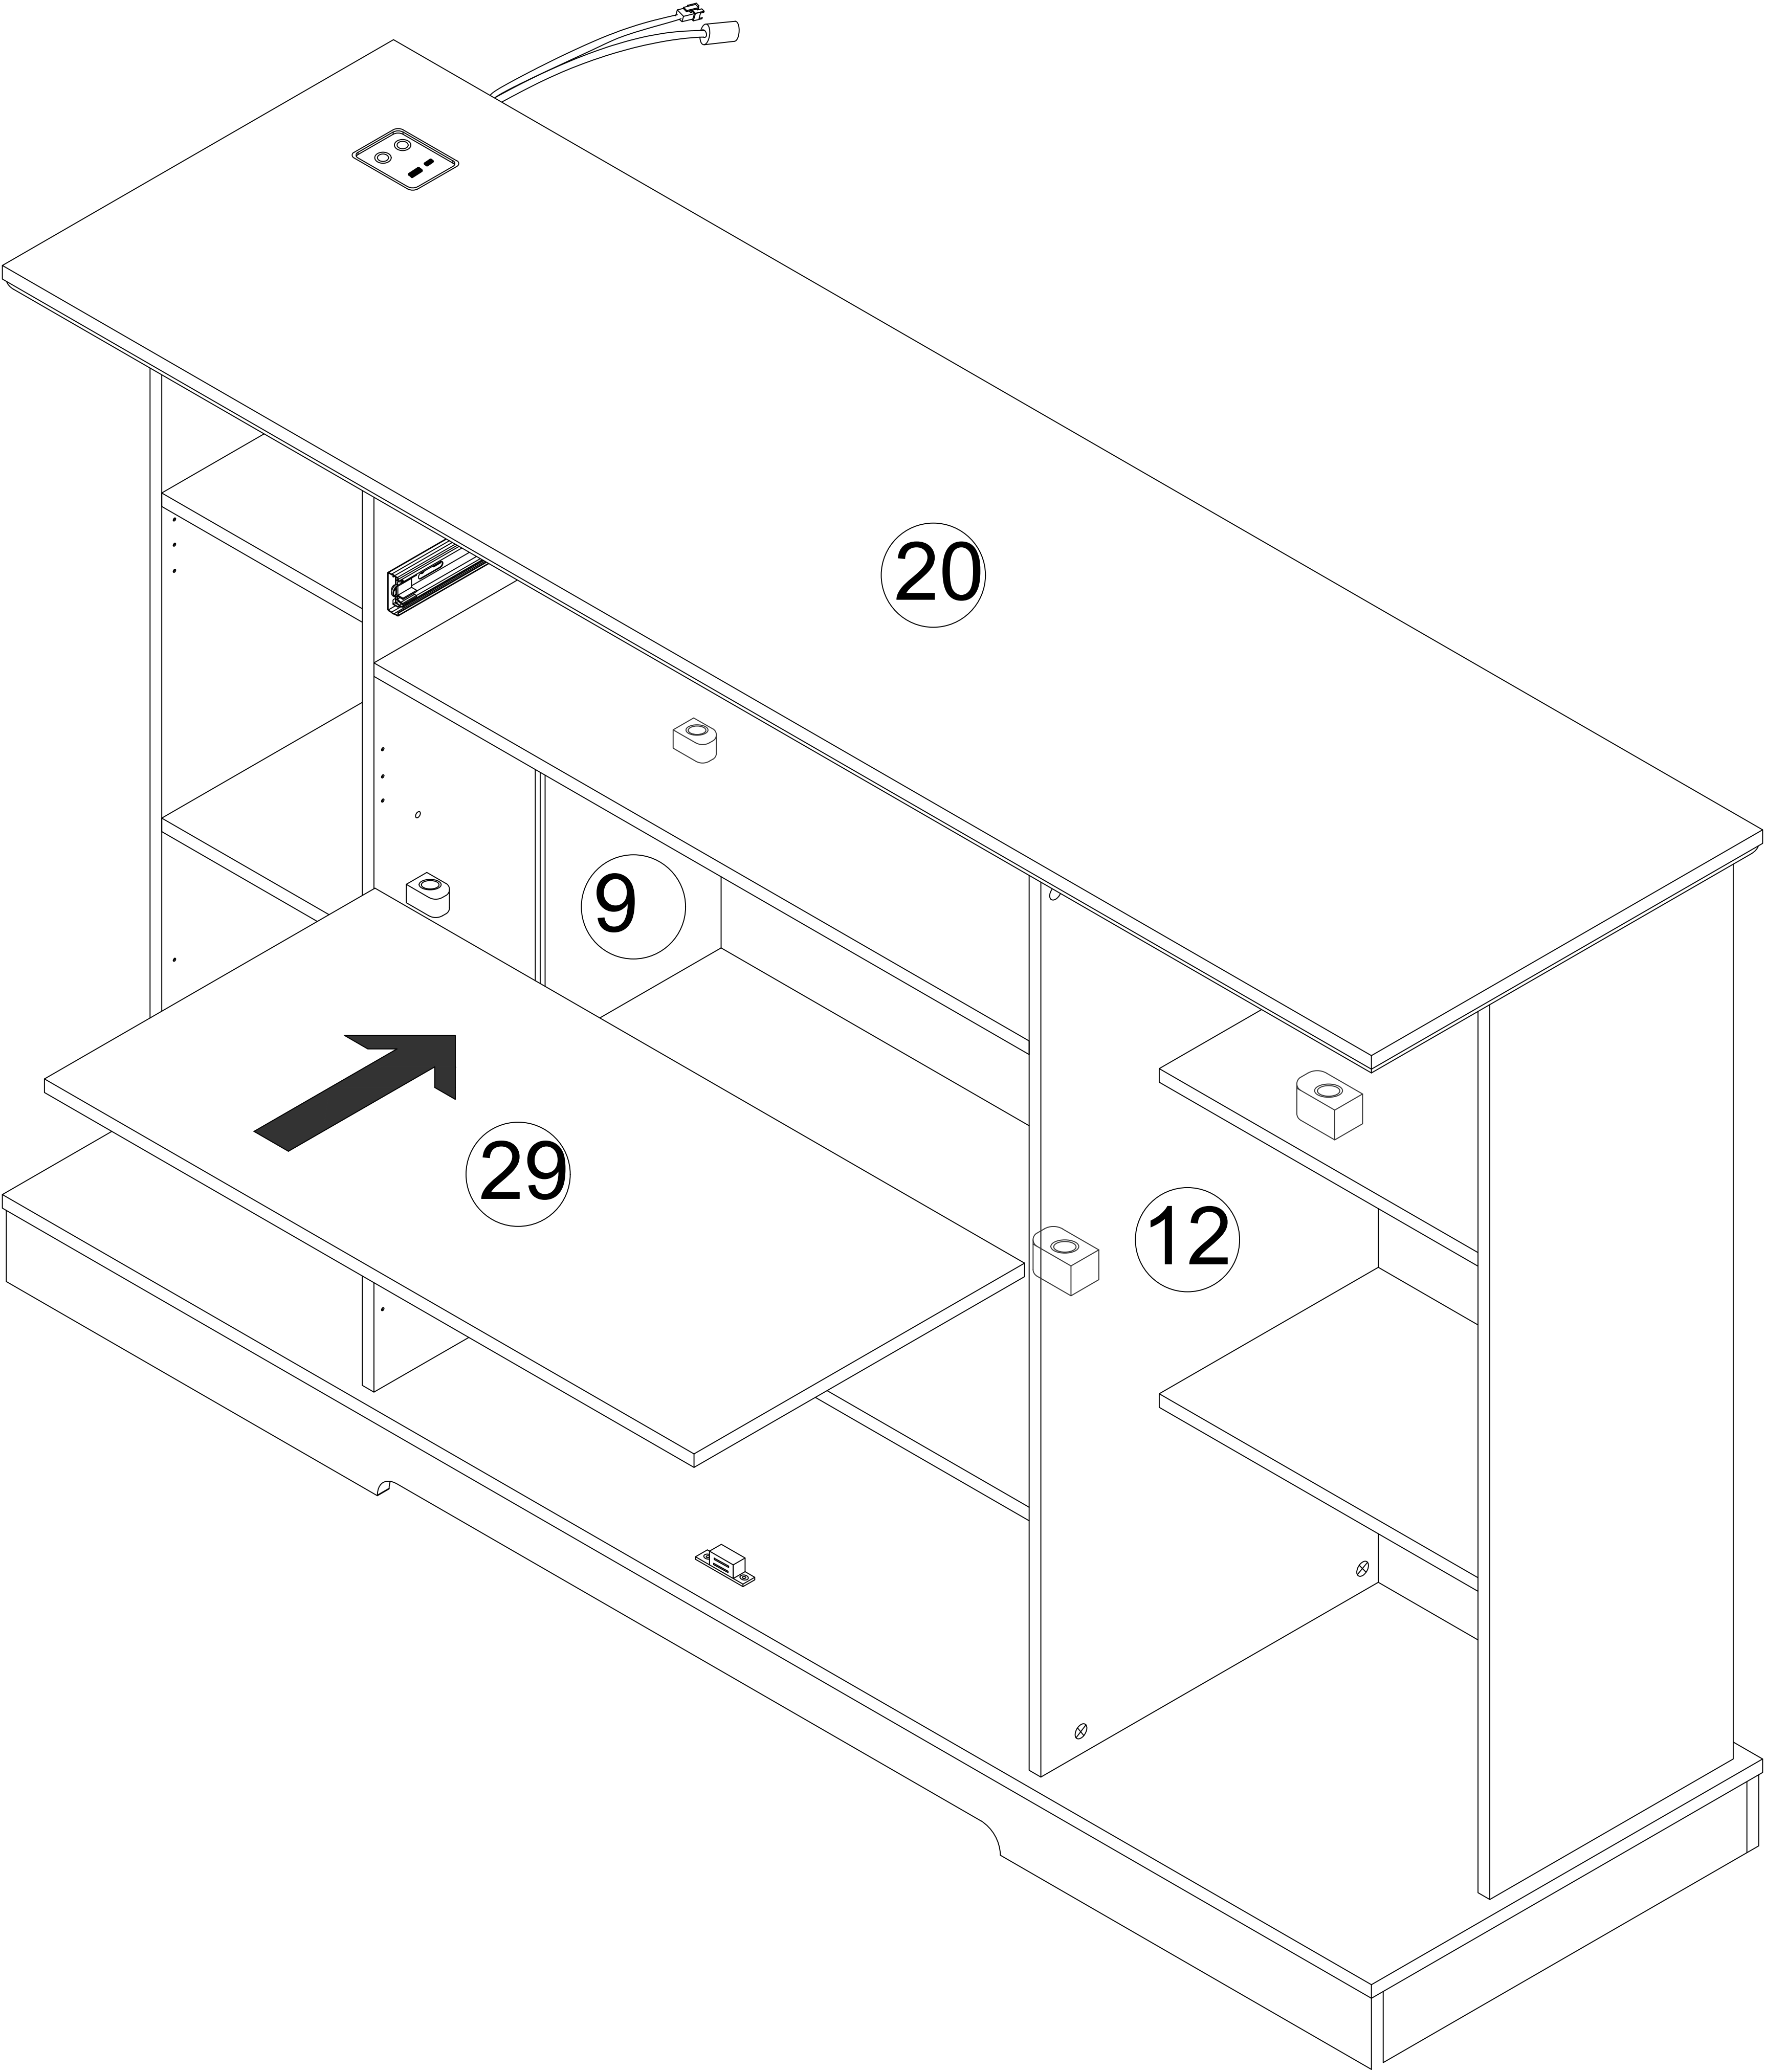


Step 43

A

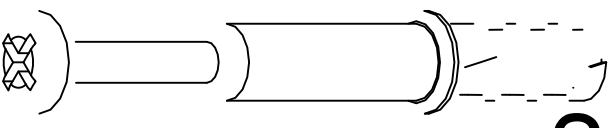


x8

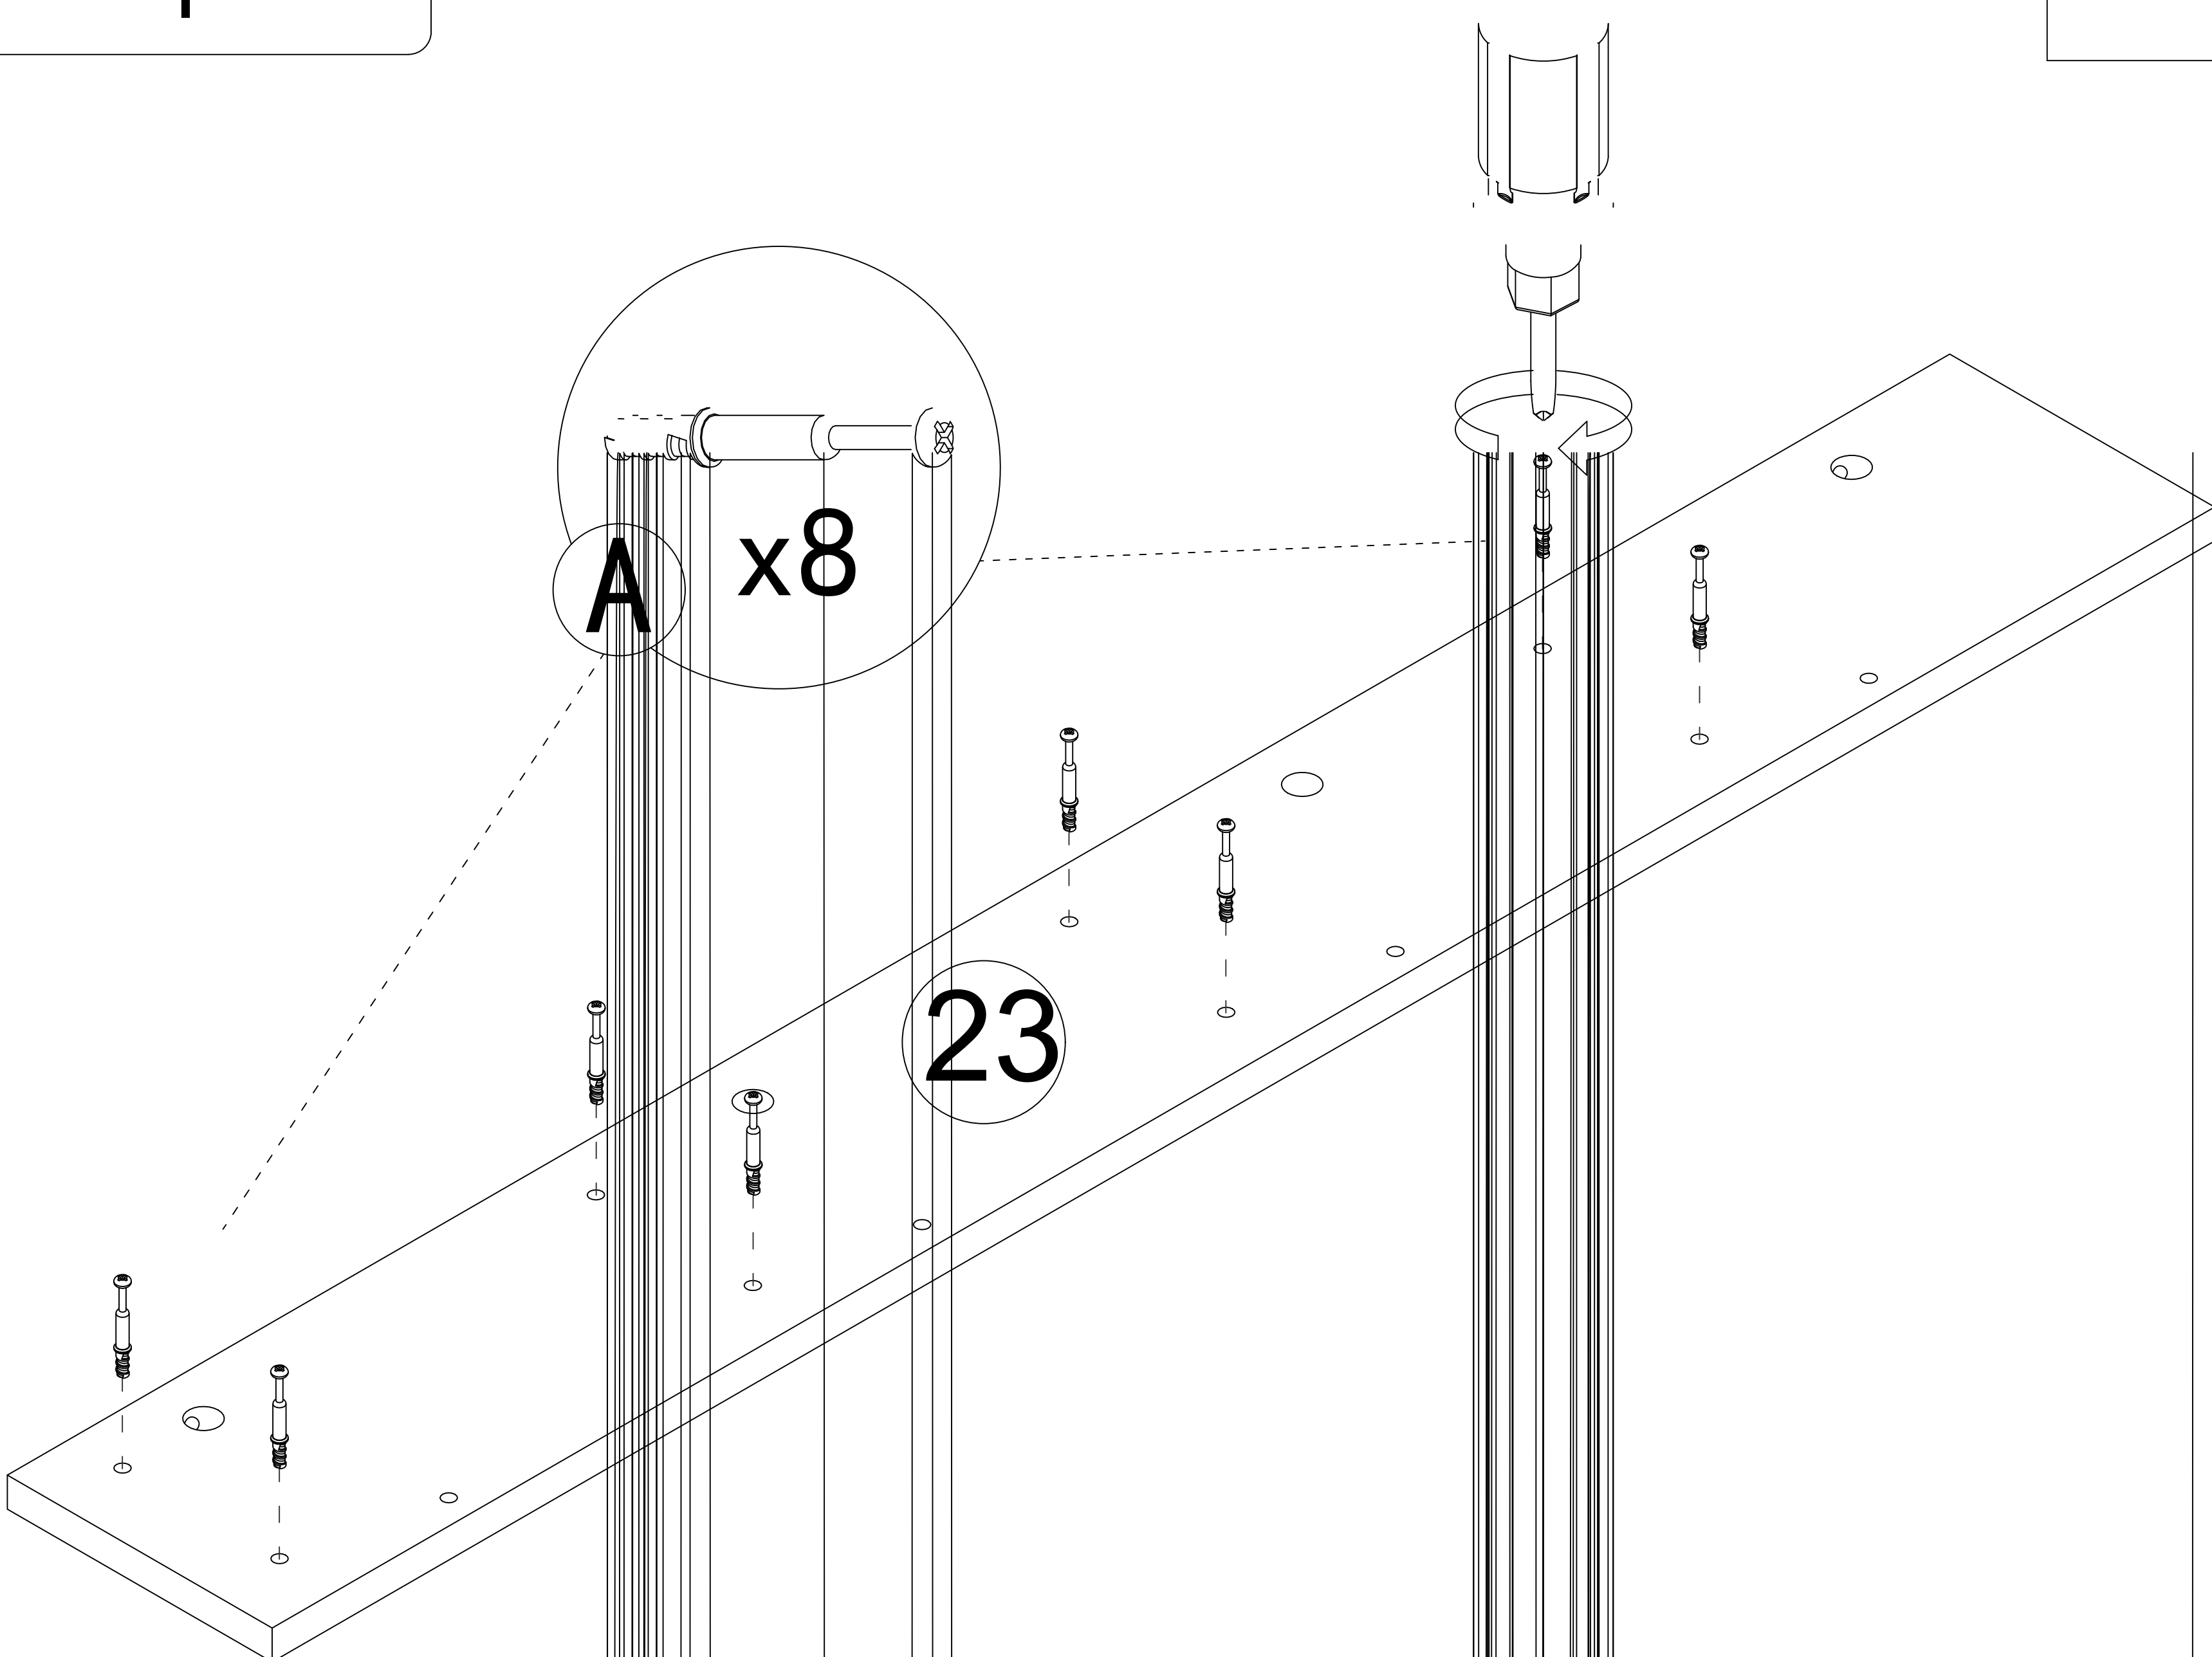


Step 44

B

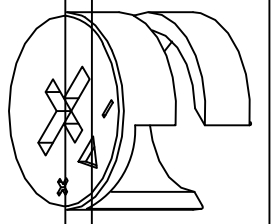



x8

I

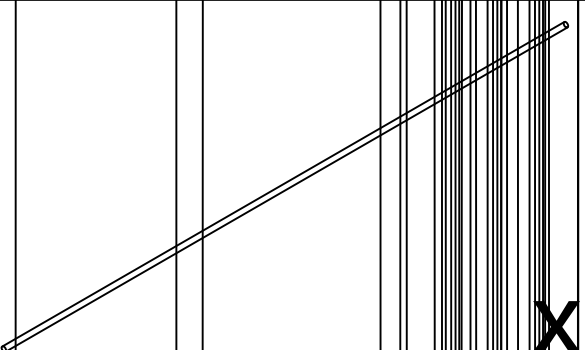

x4

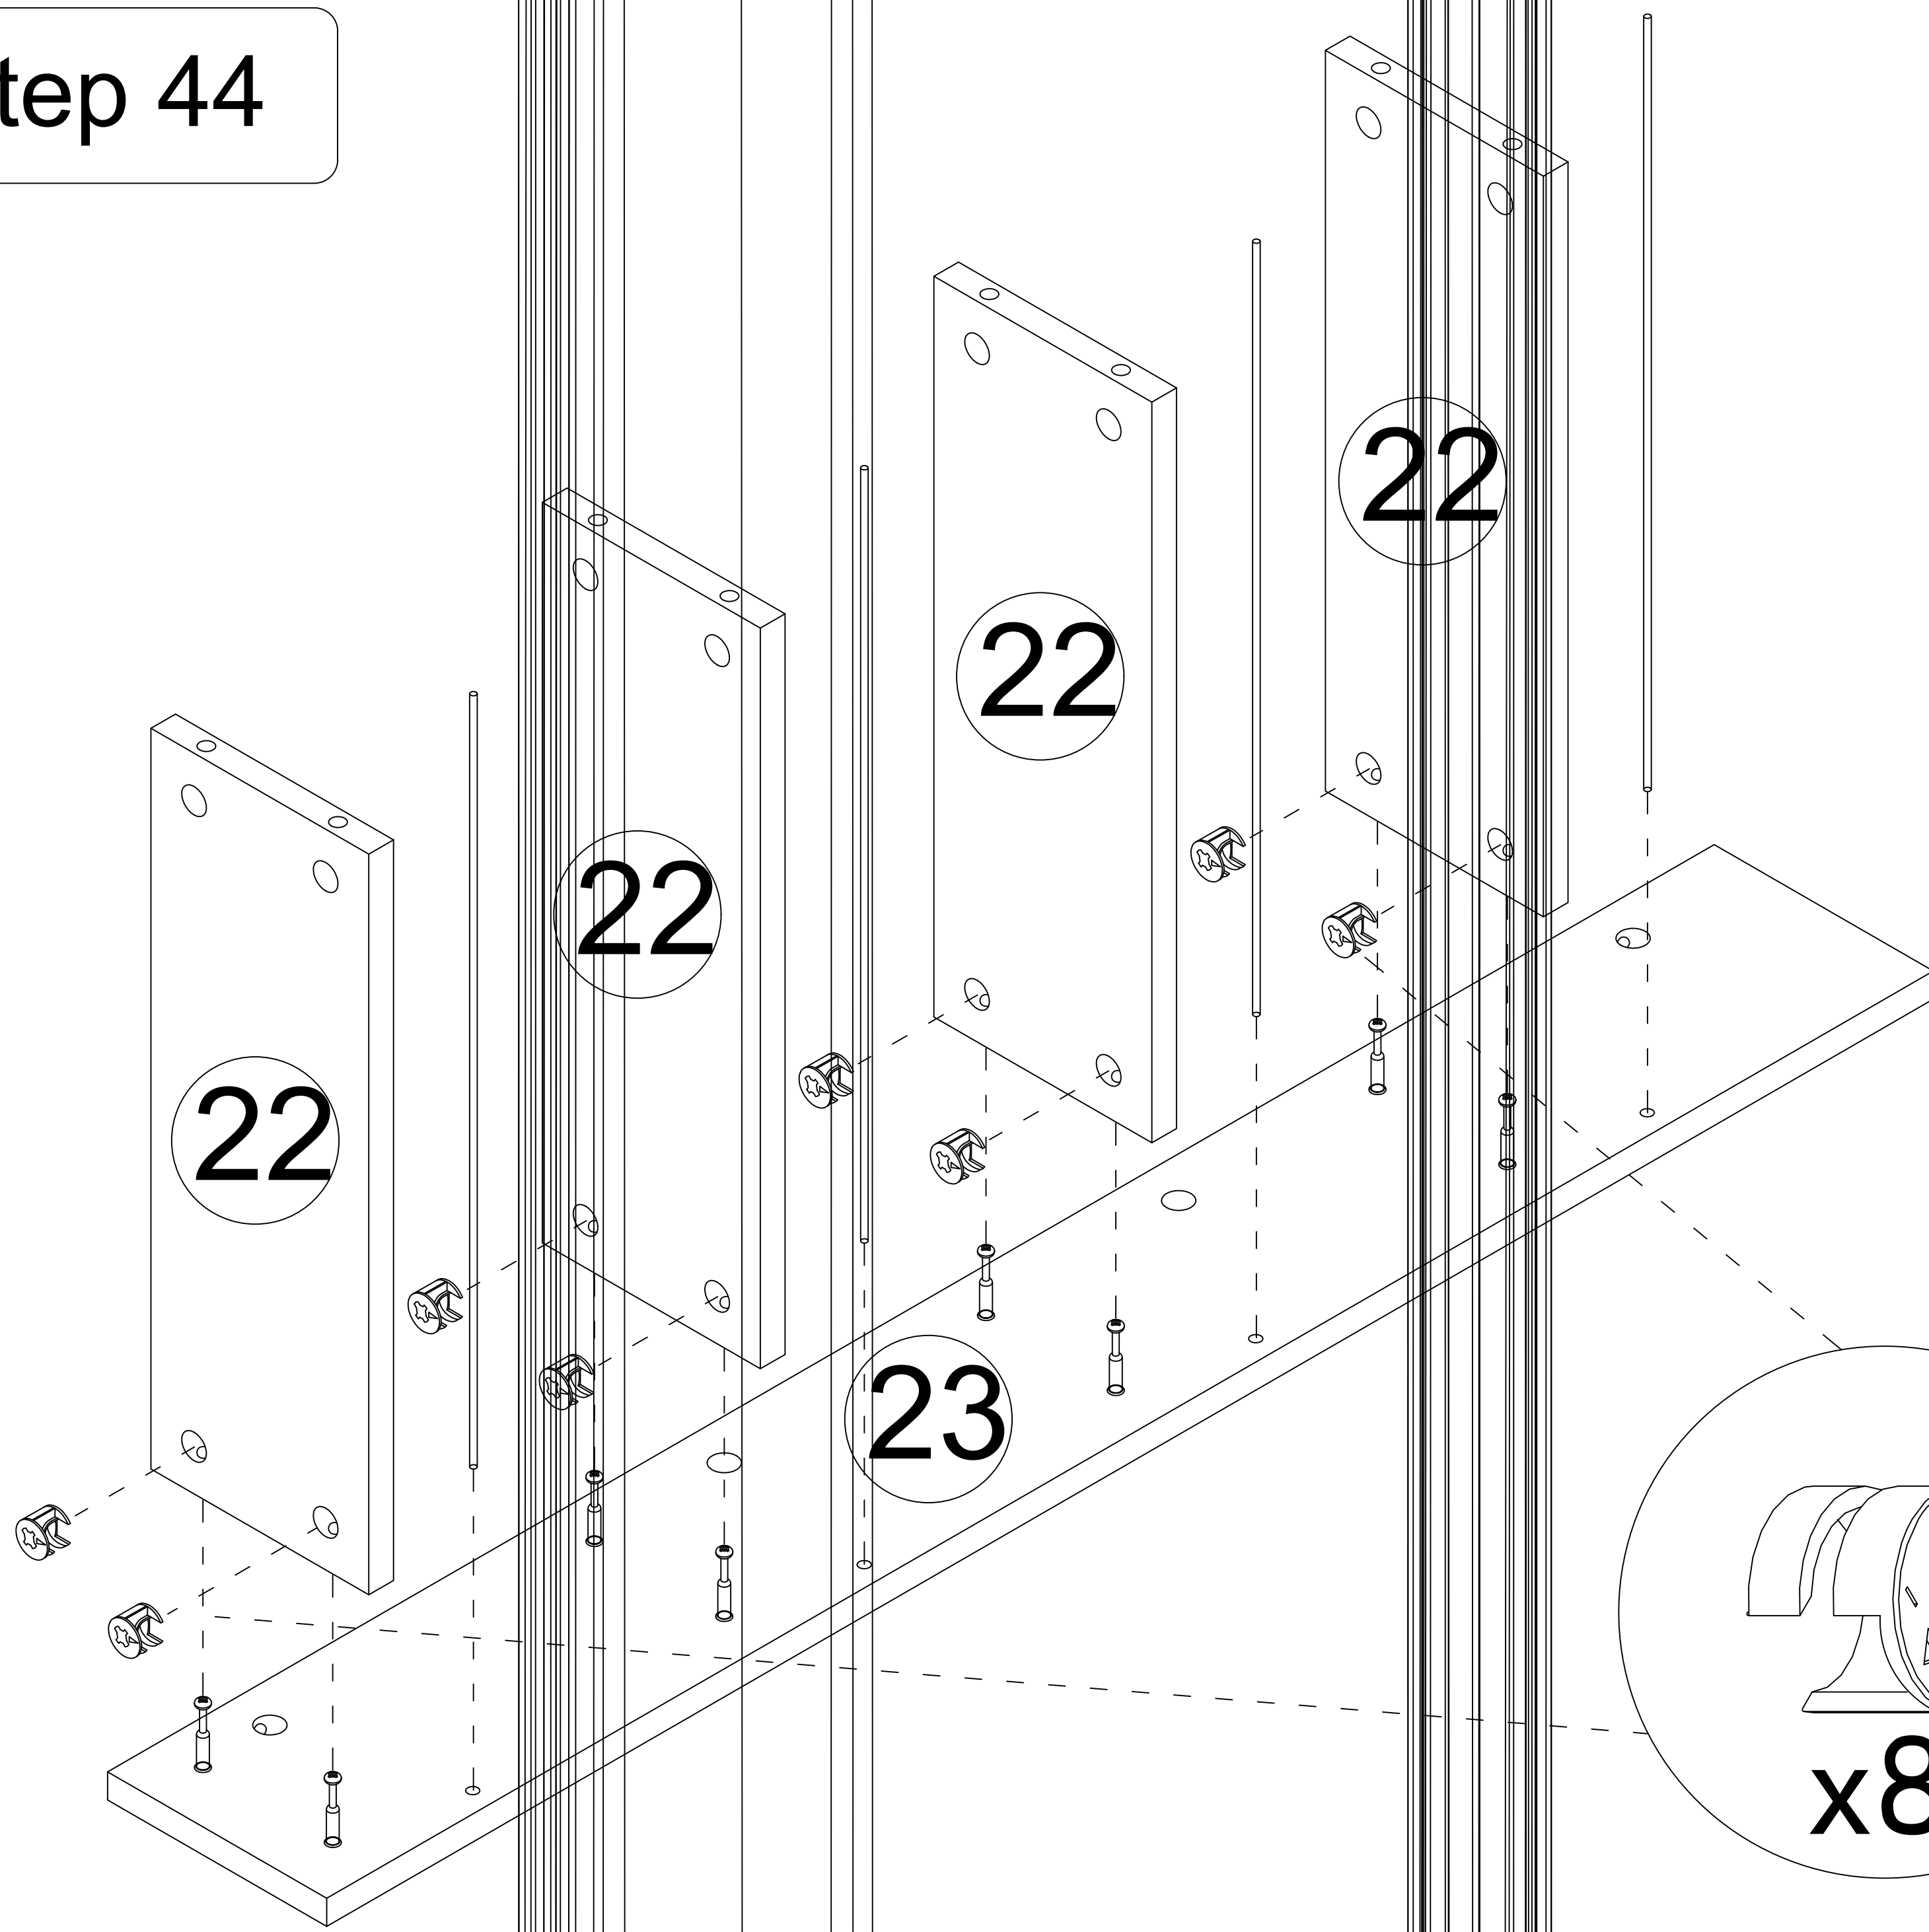

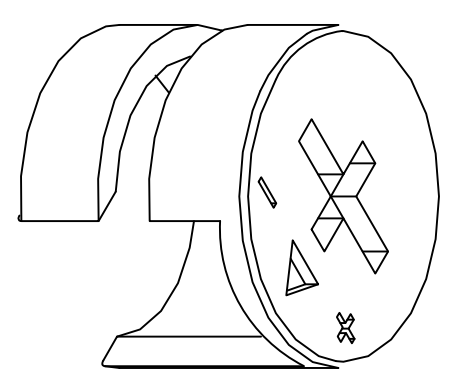


x8

B

32


Step 45

A

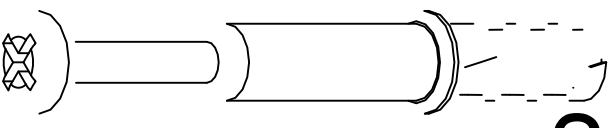


x8


H

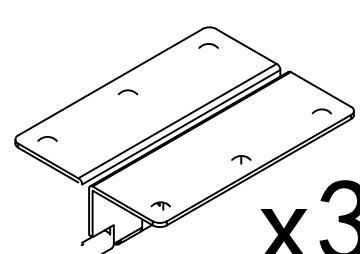

x3




x9

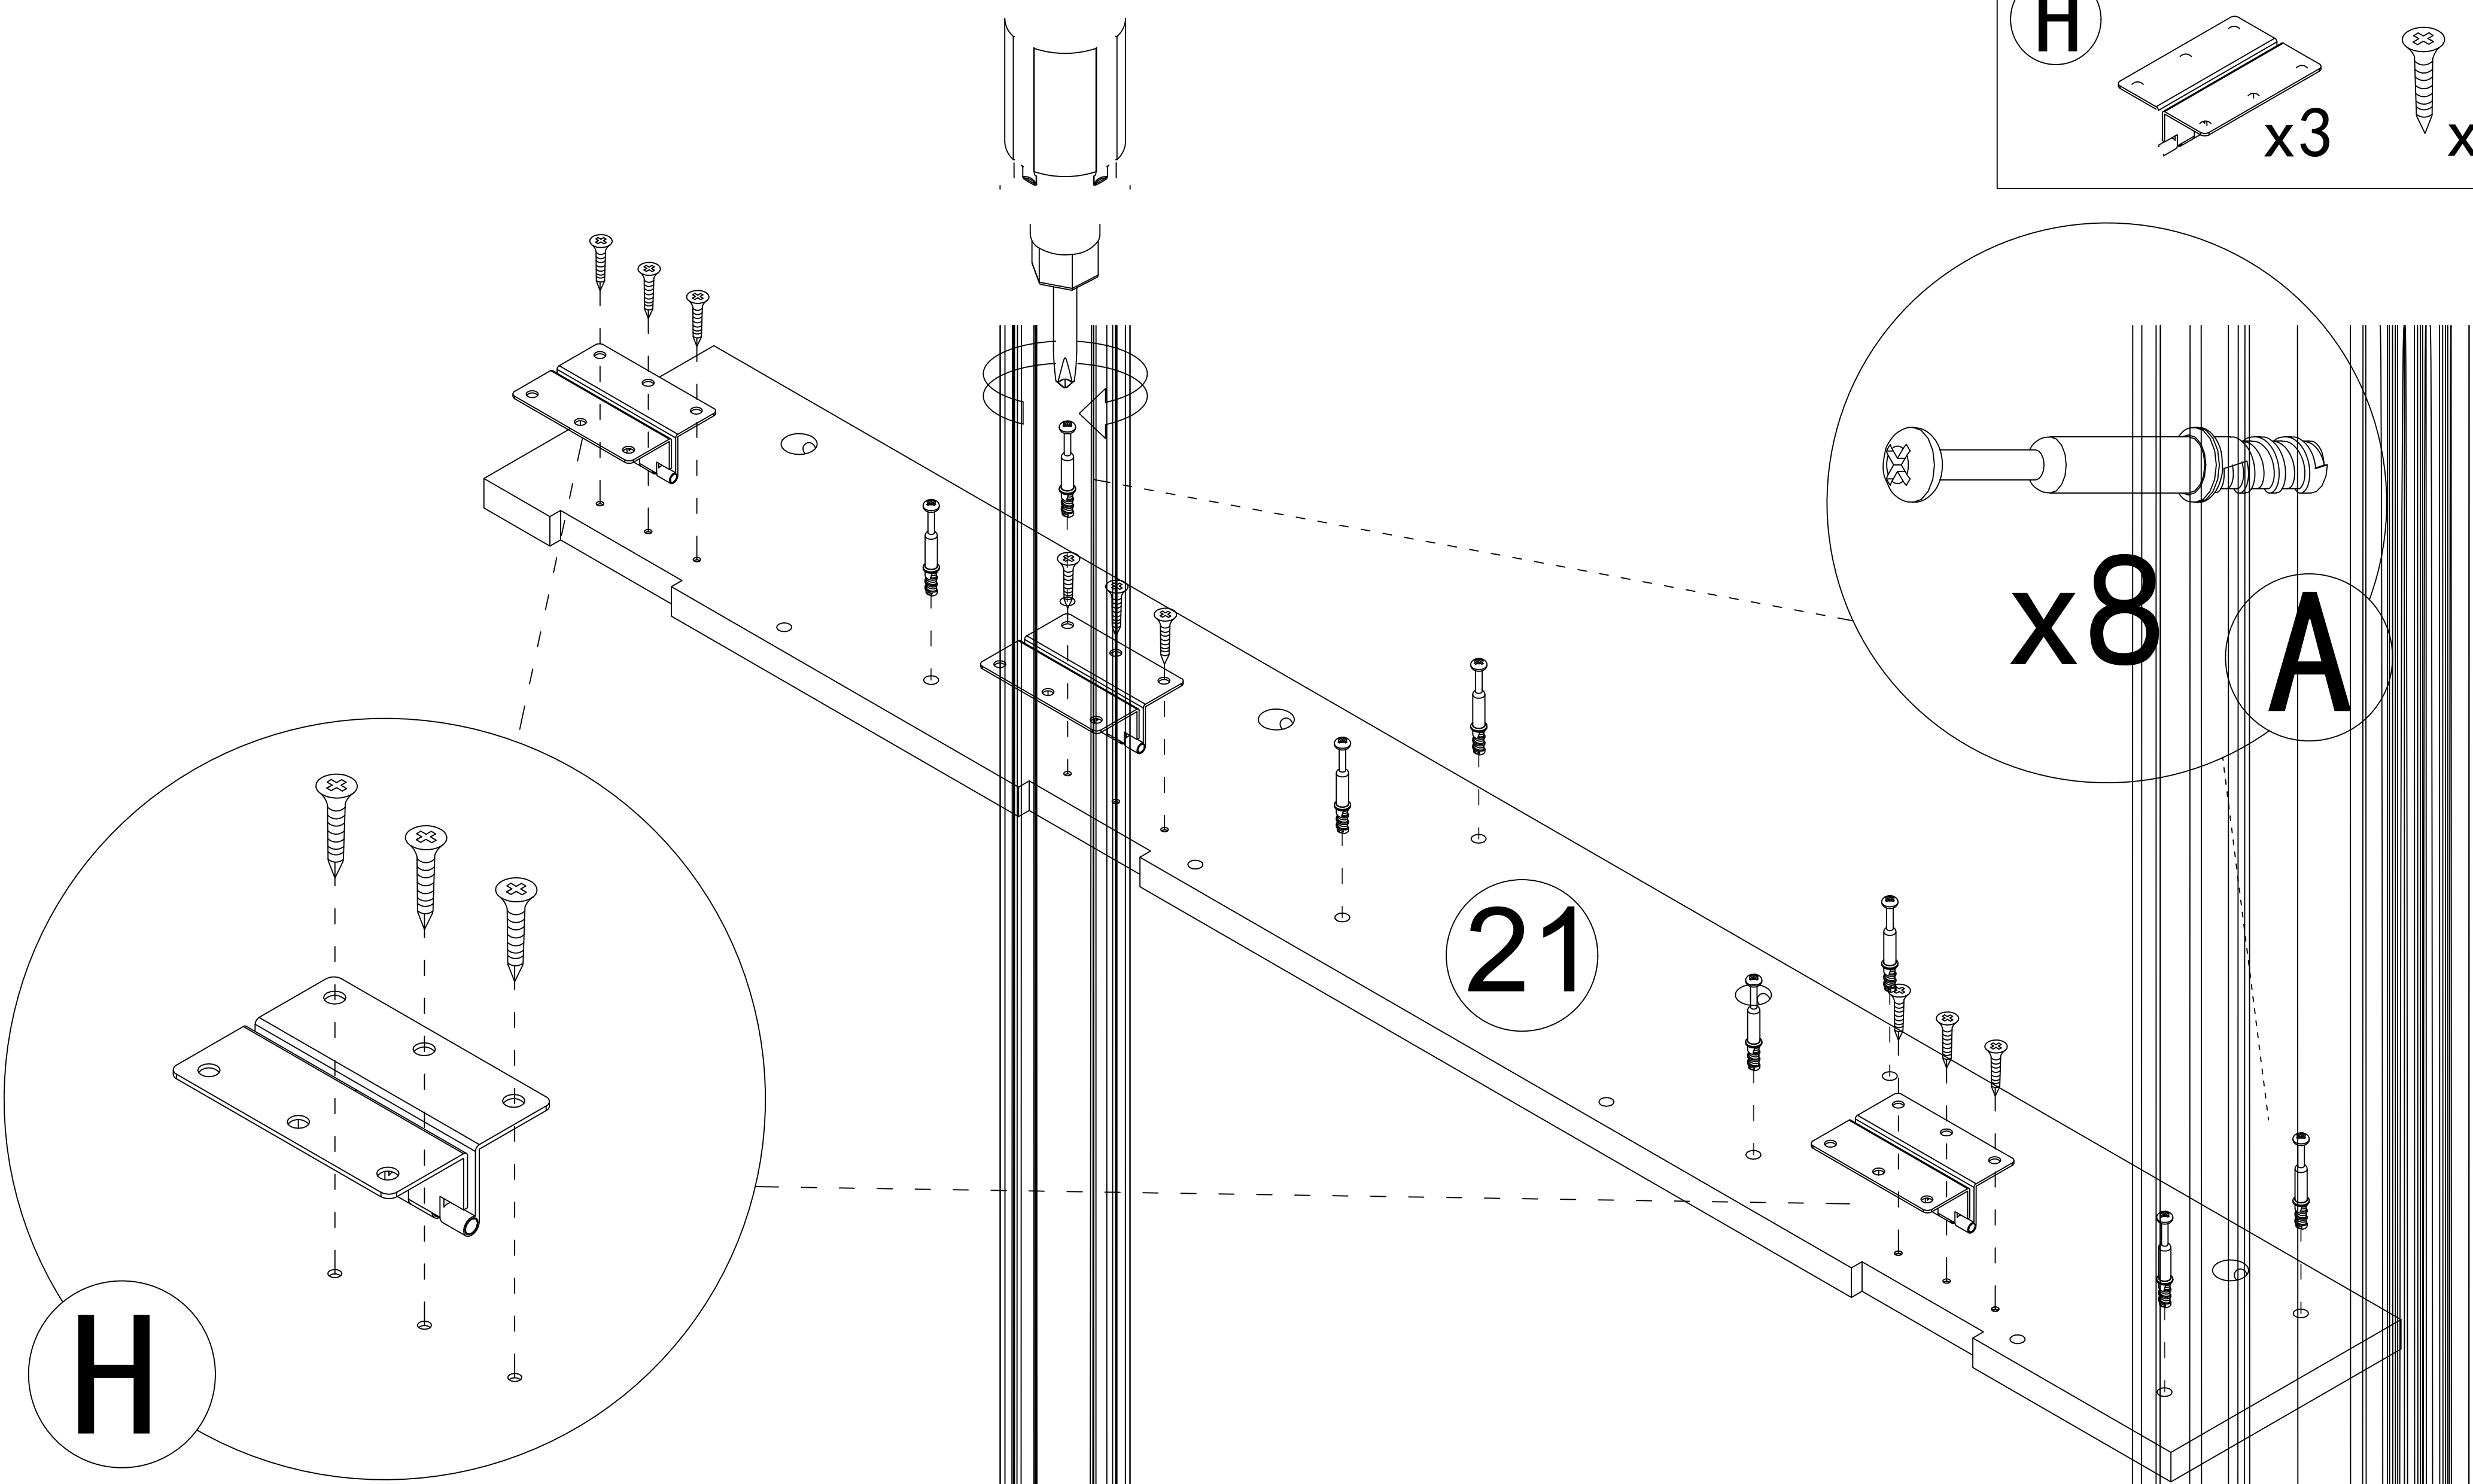


Step 46


B

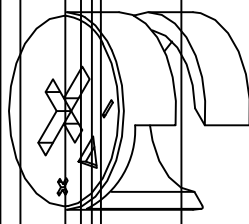

x8

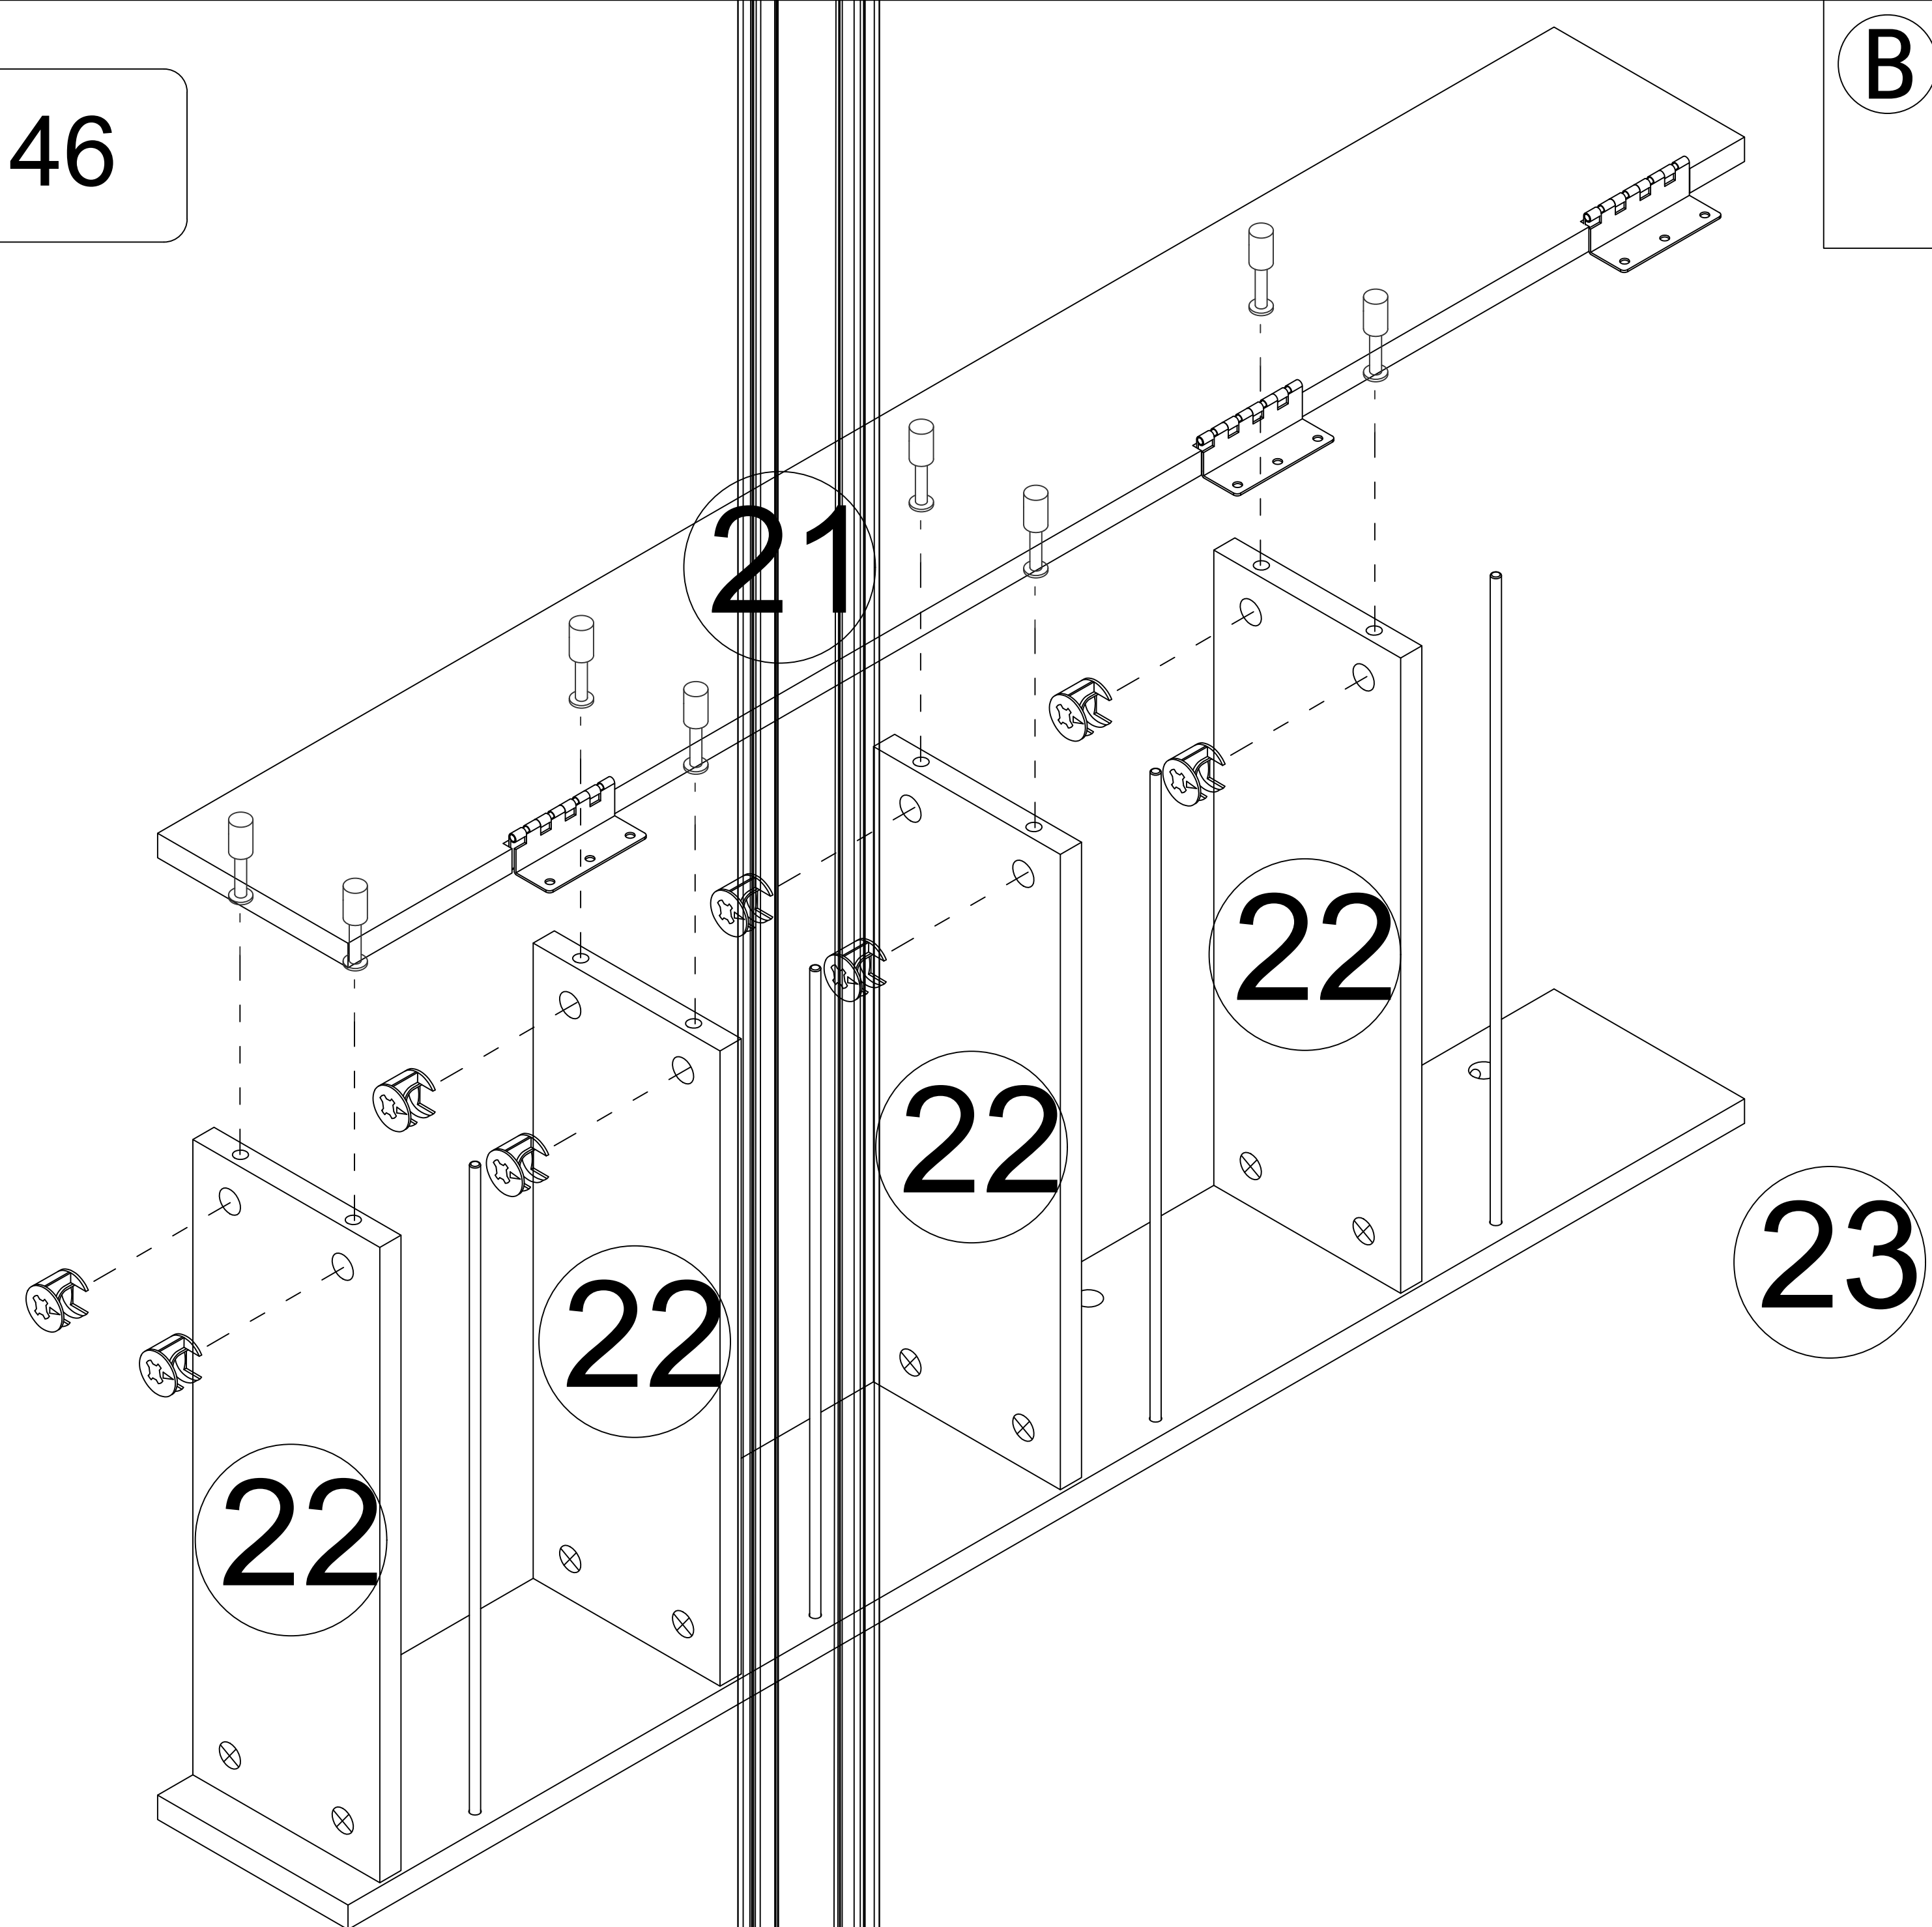



Step 40

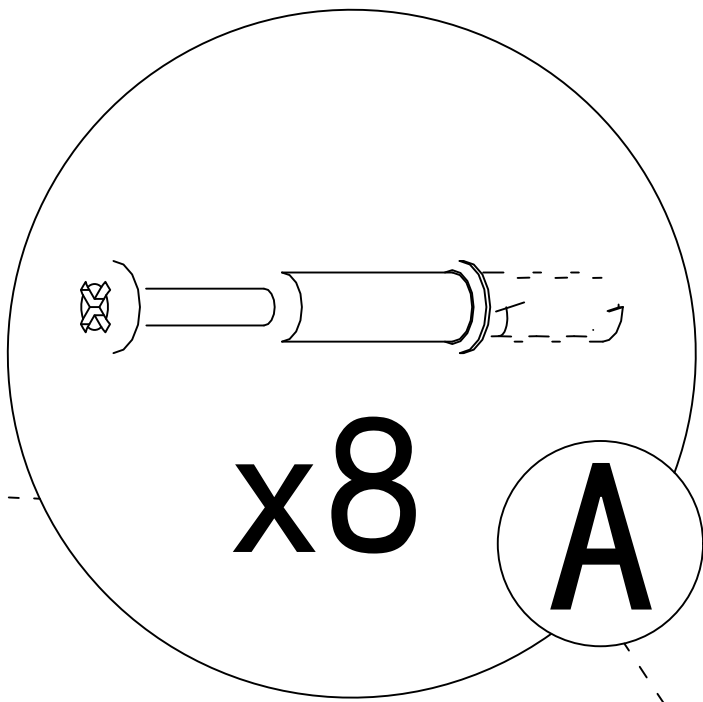

A

A diagram showing a bolt and nut assembly. The bolt is shown in profile, with a hexagonal head on the left and a threaded section on the right. A nut is shown on the right, with a dashed line indicating it is to be placed over the bolt. The label "x8" is written below the nut, indicating that there are 8 of these components.

24

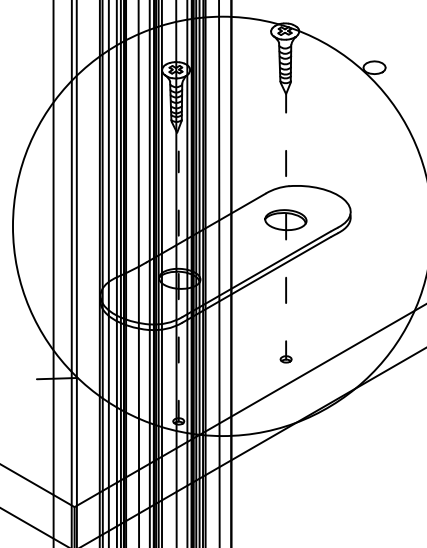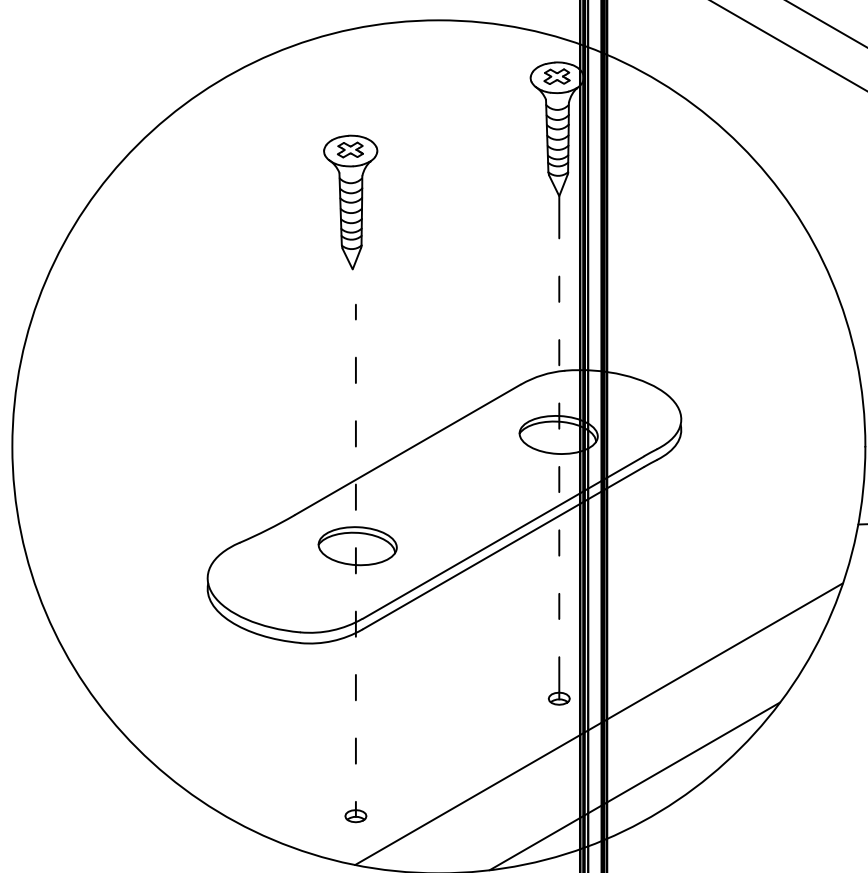


Step 41




34

Step 42


B

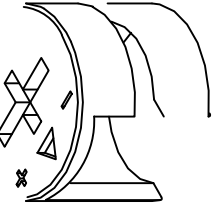

x8

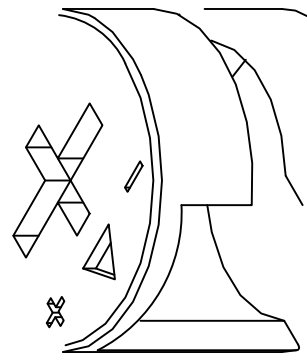


B x8

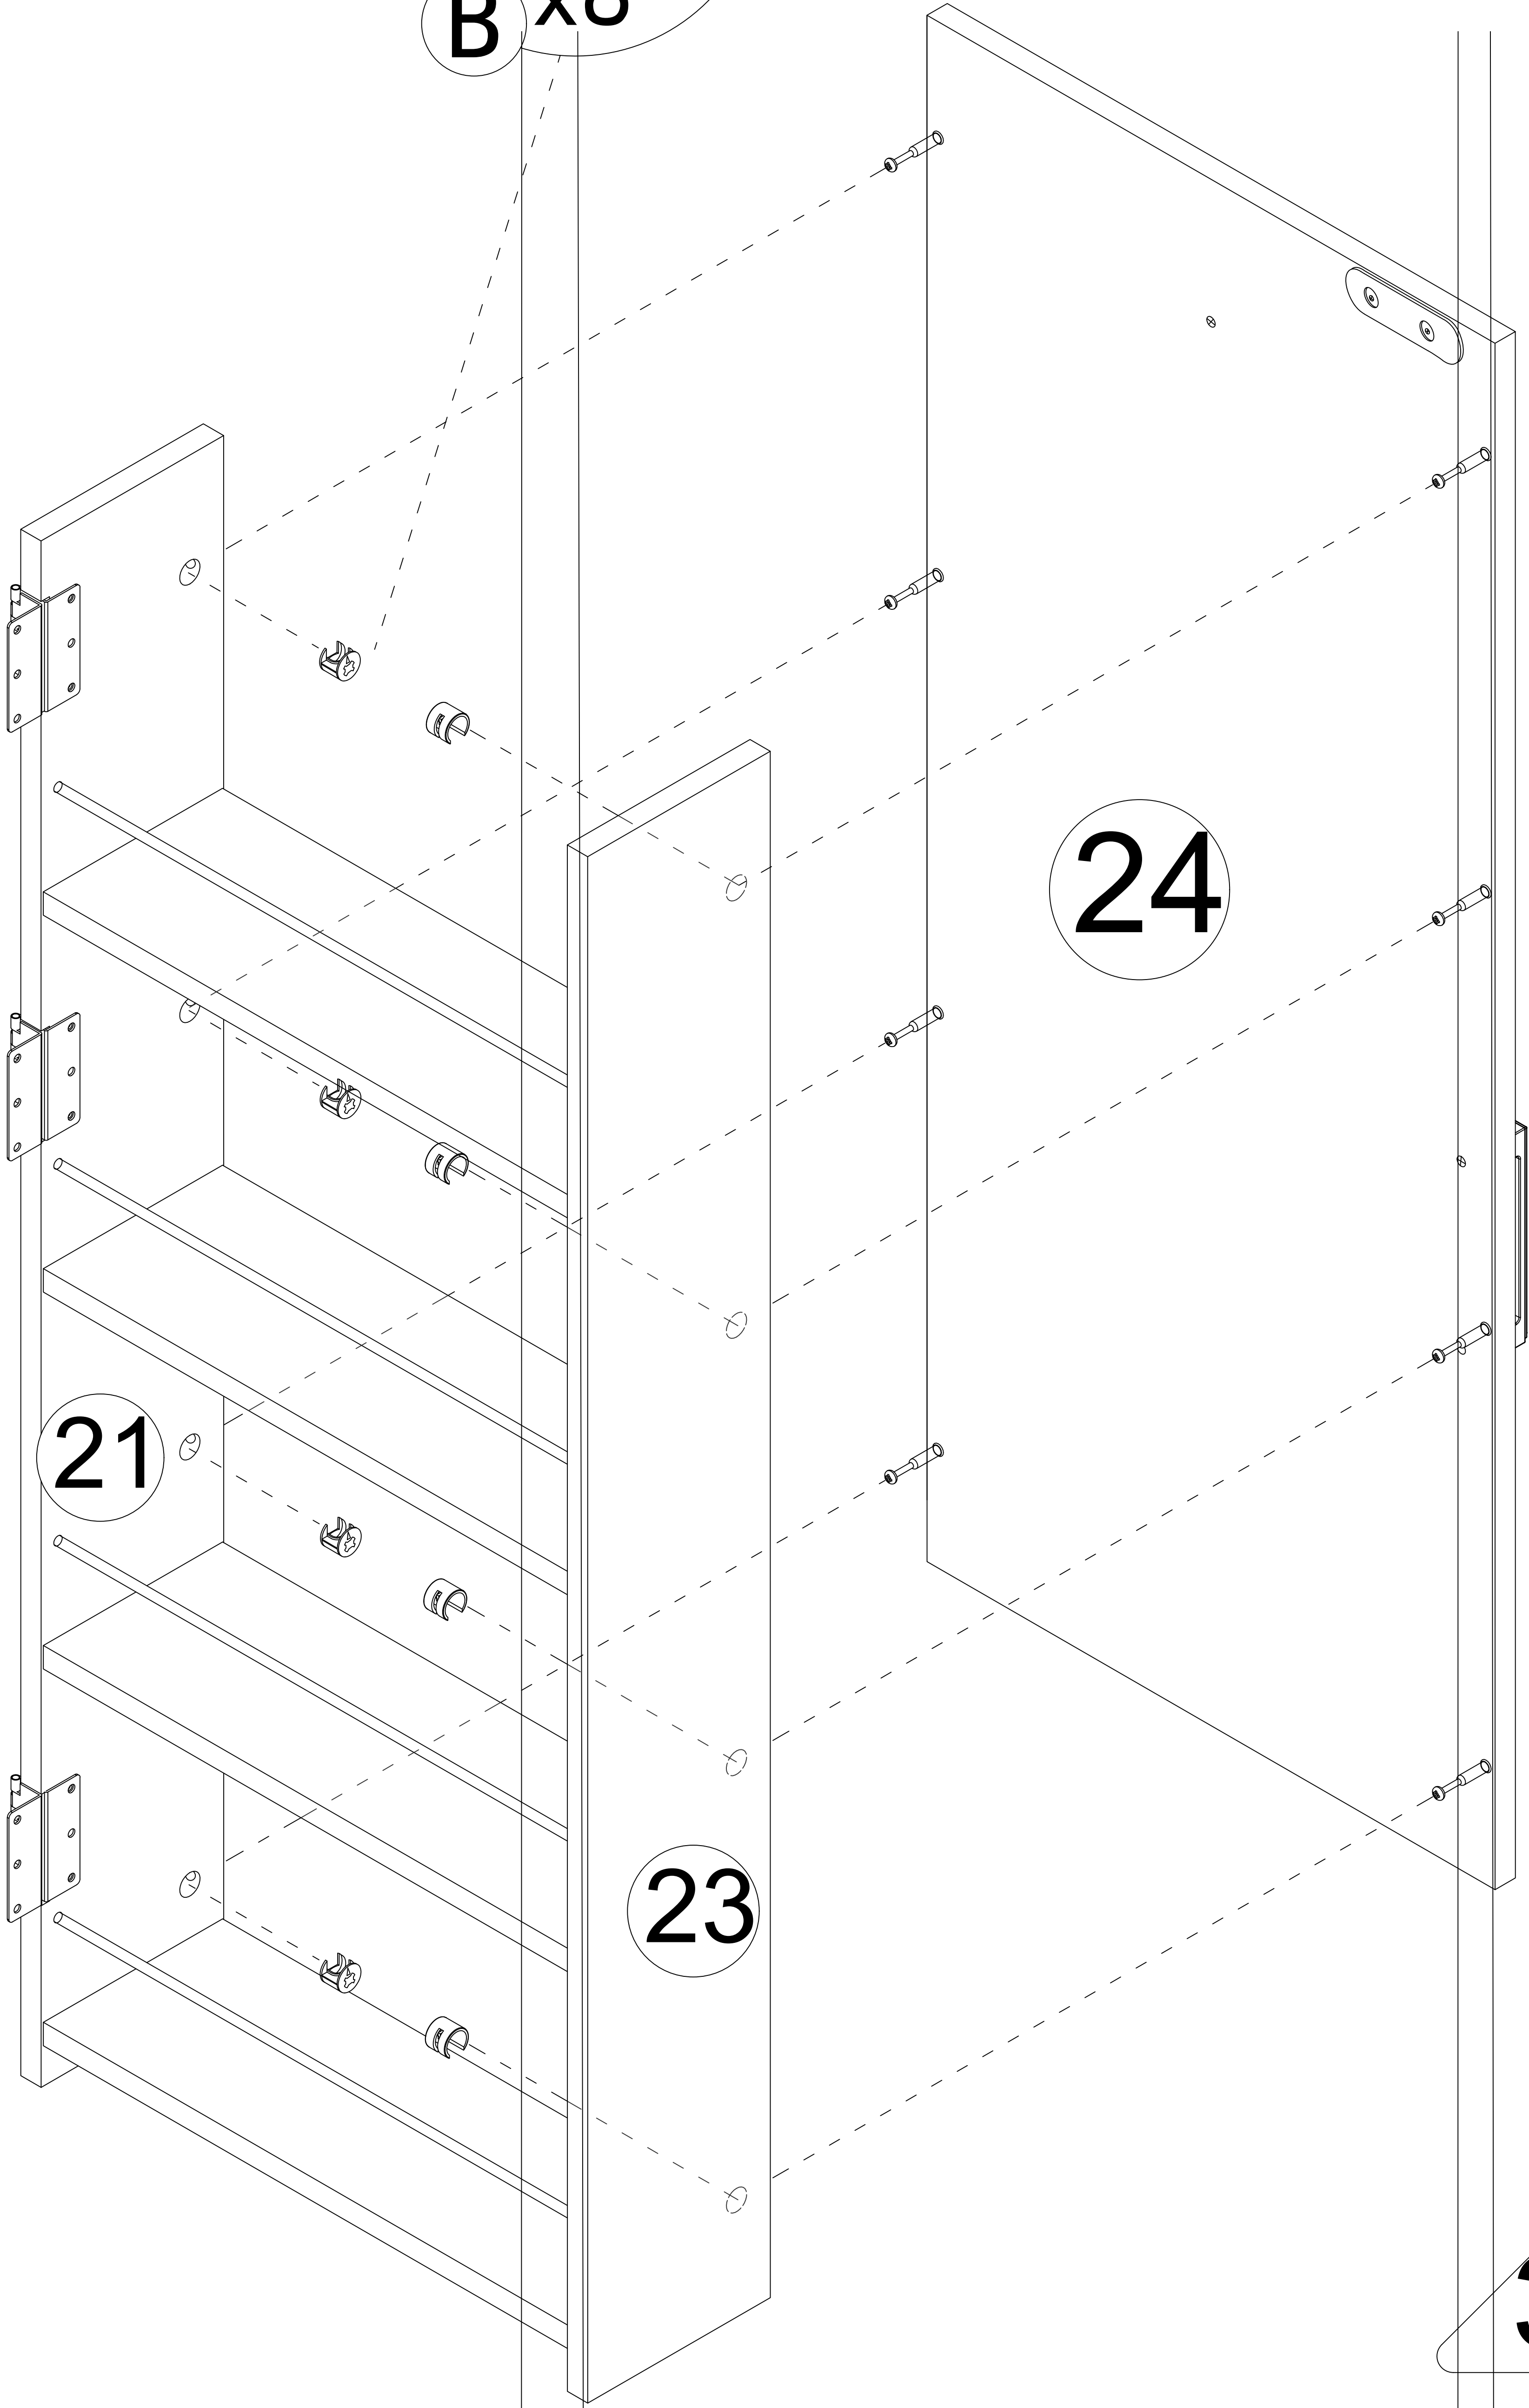


Step 43

A

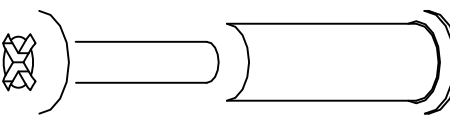


x8

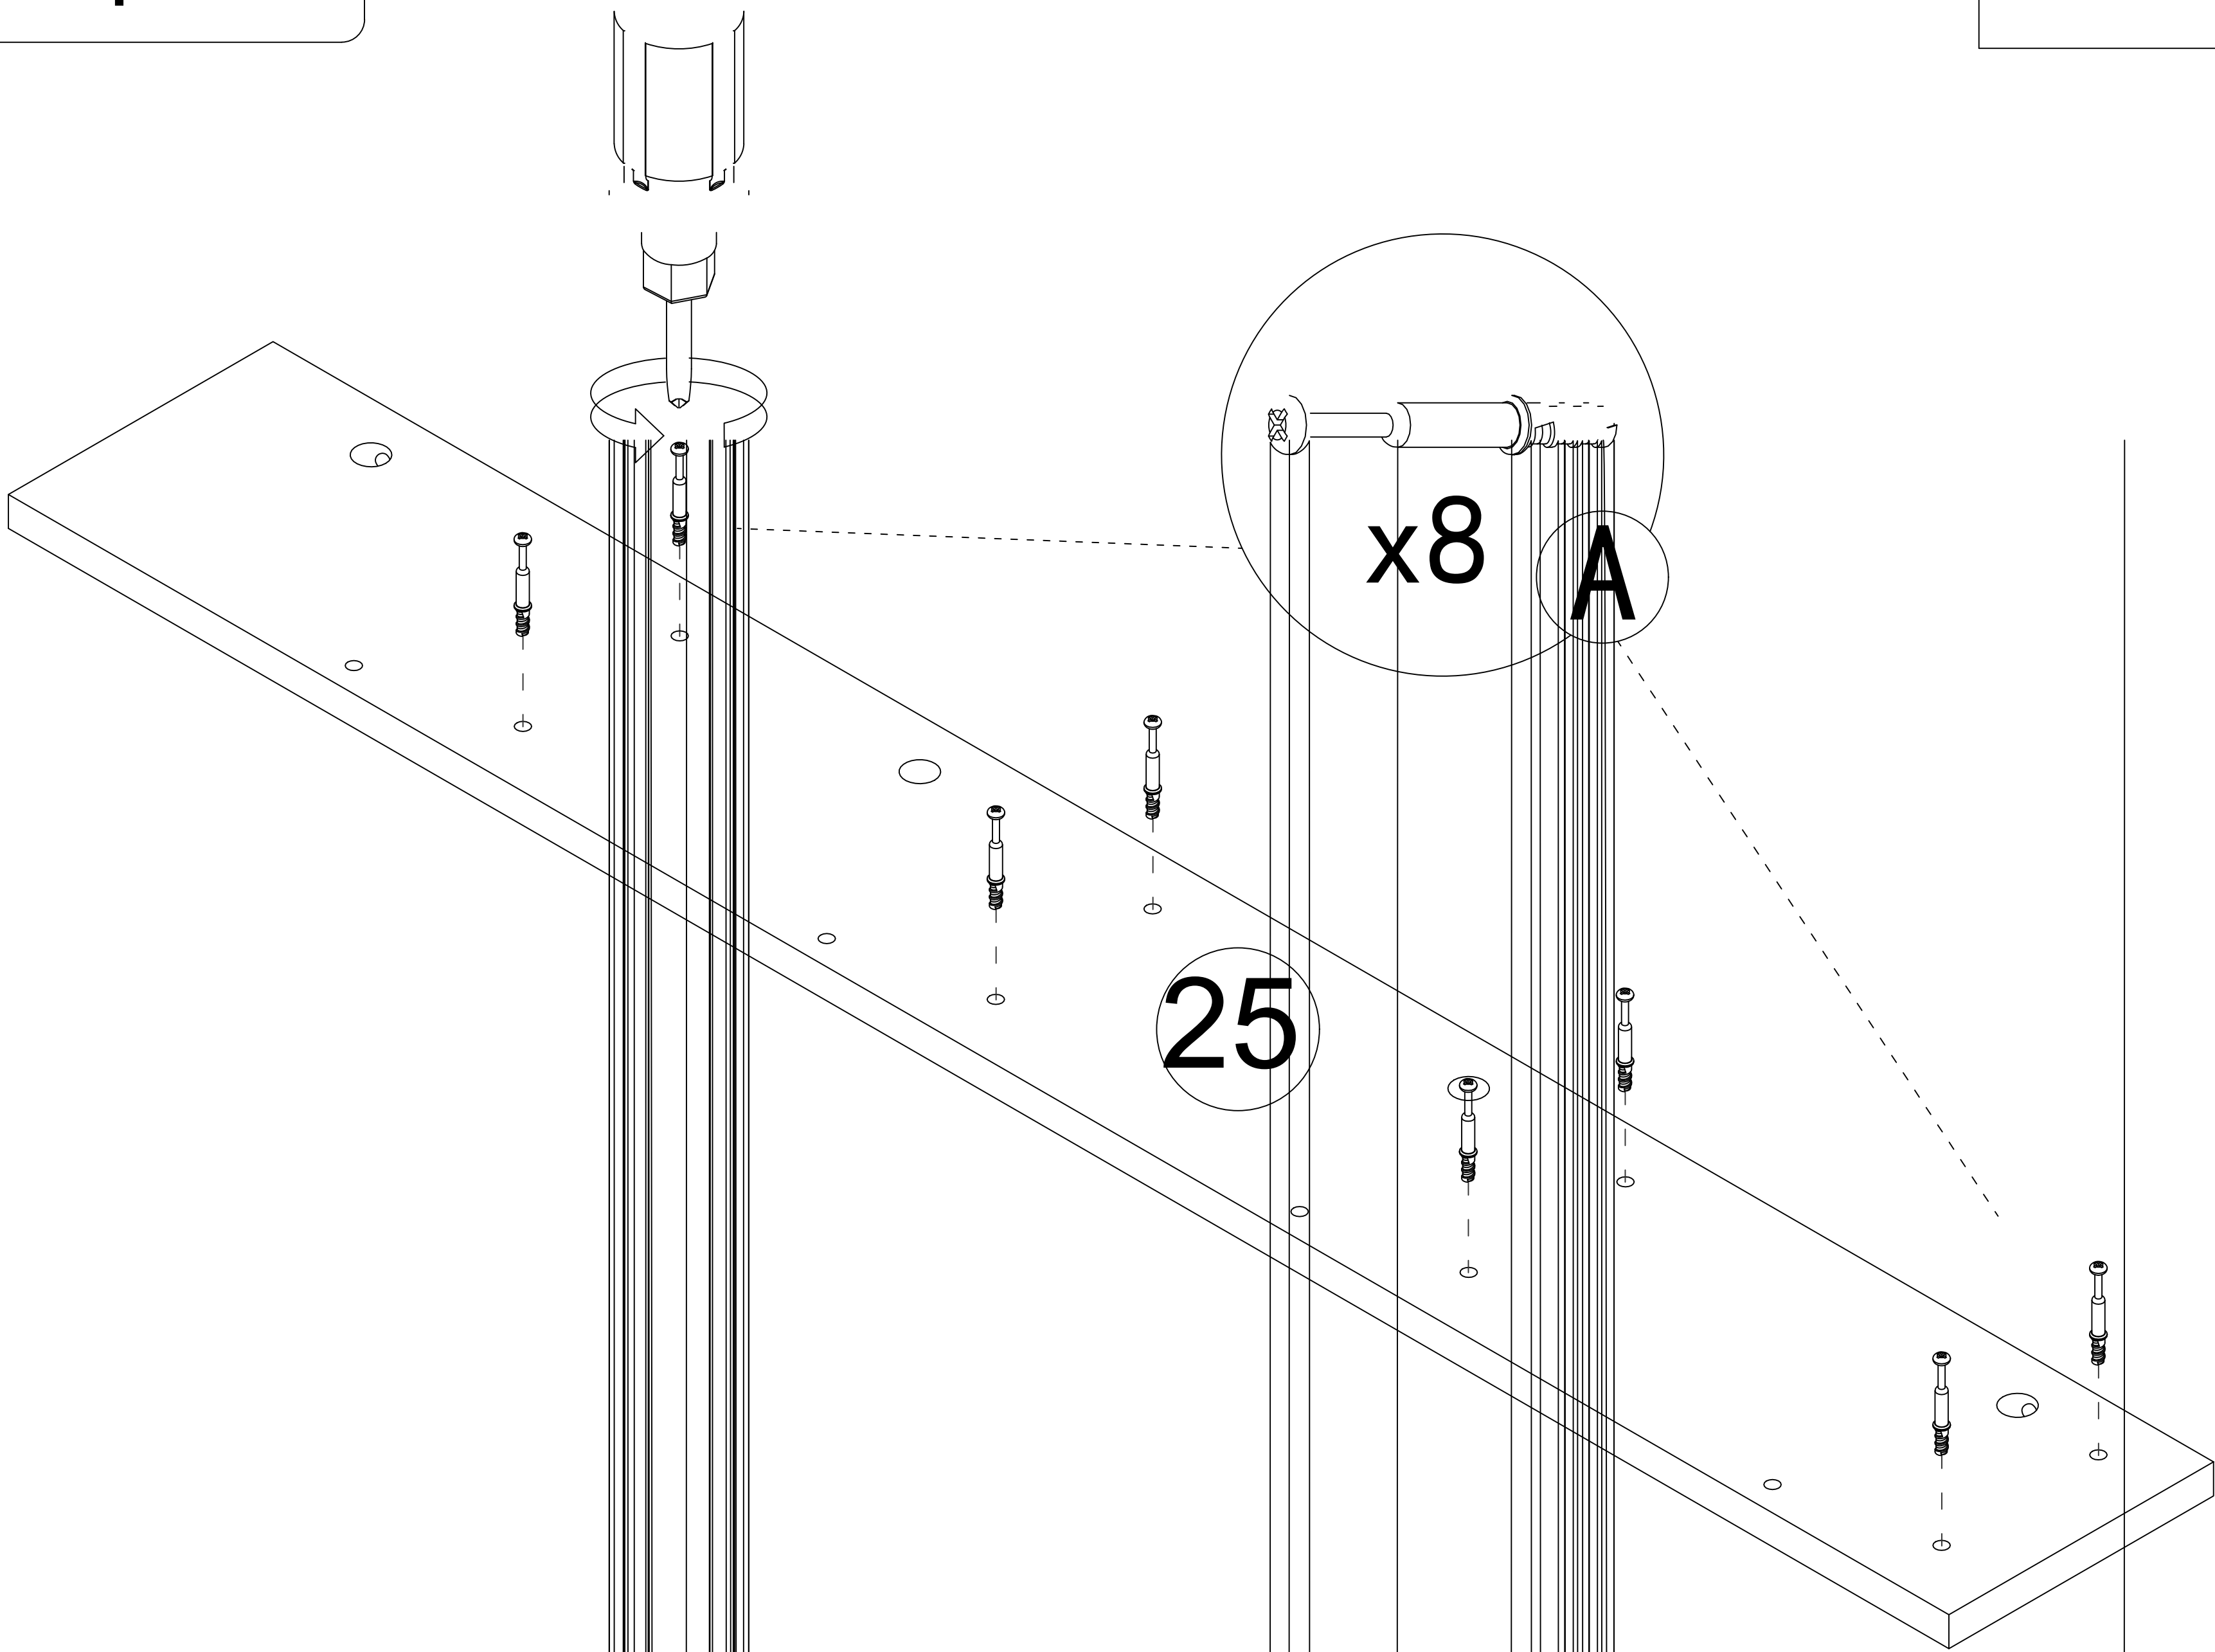


Step 44

B

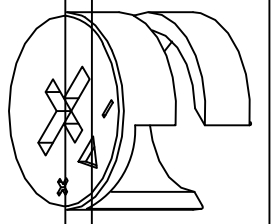


x8

I

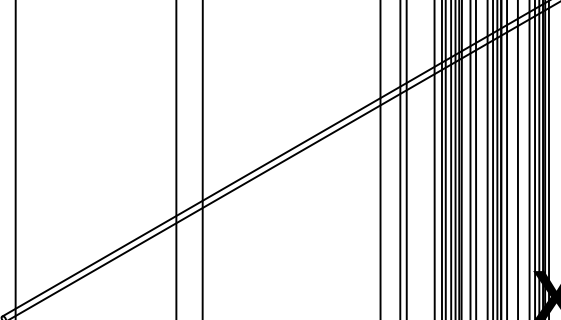


x4

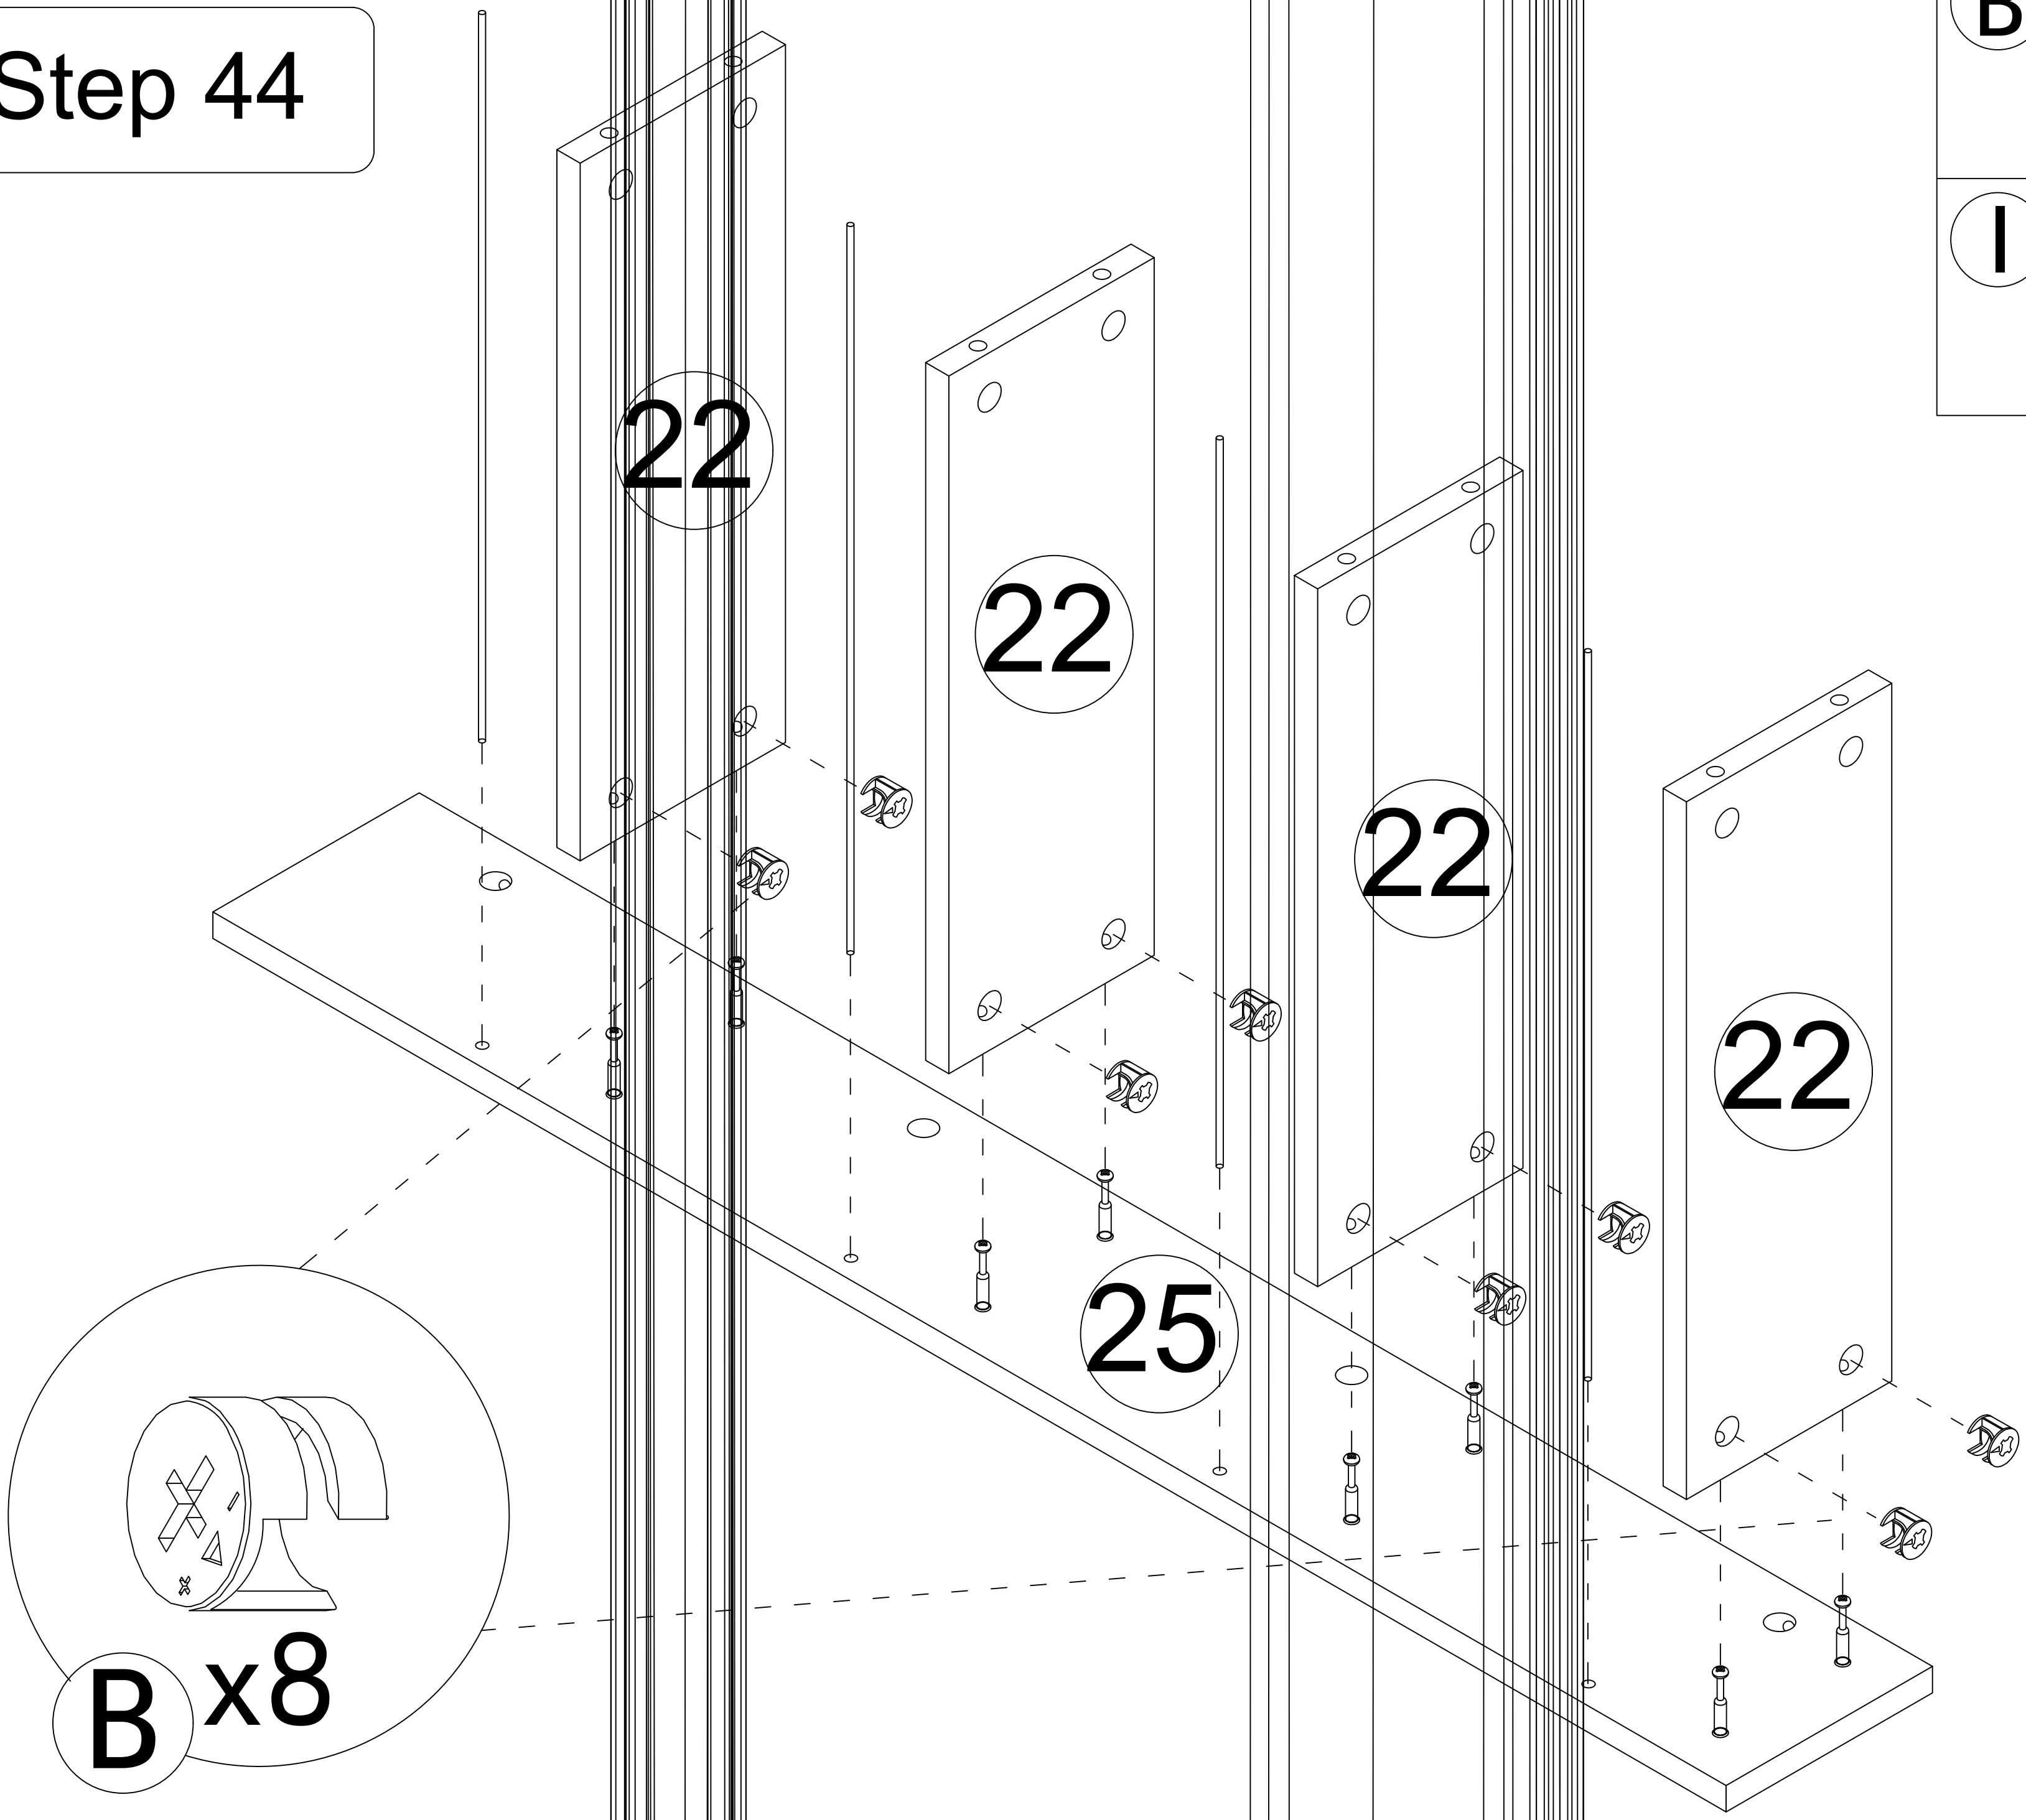


36

Step 45


- A

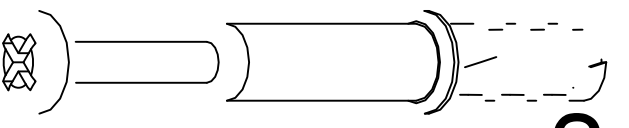


x8
- H

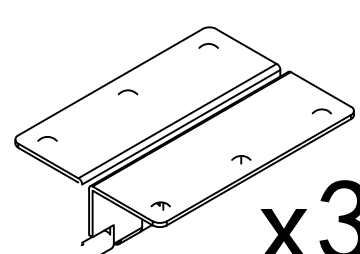

x3




x9

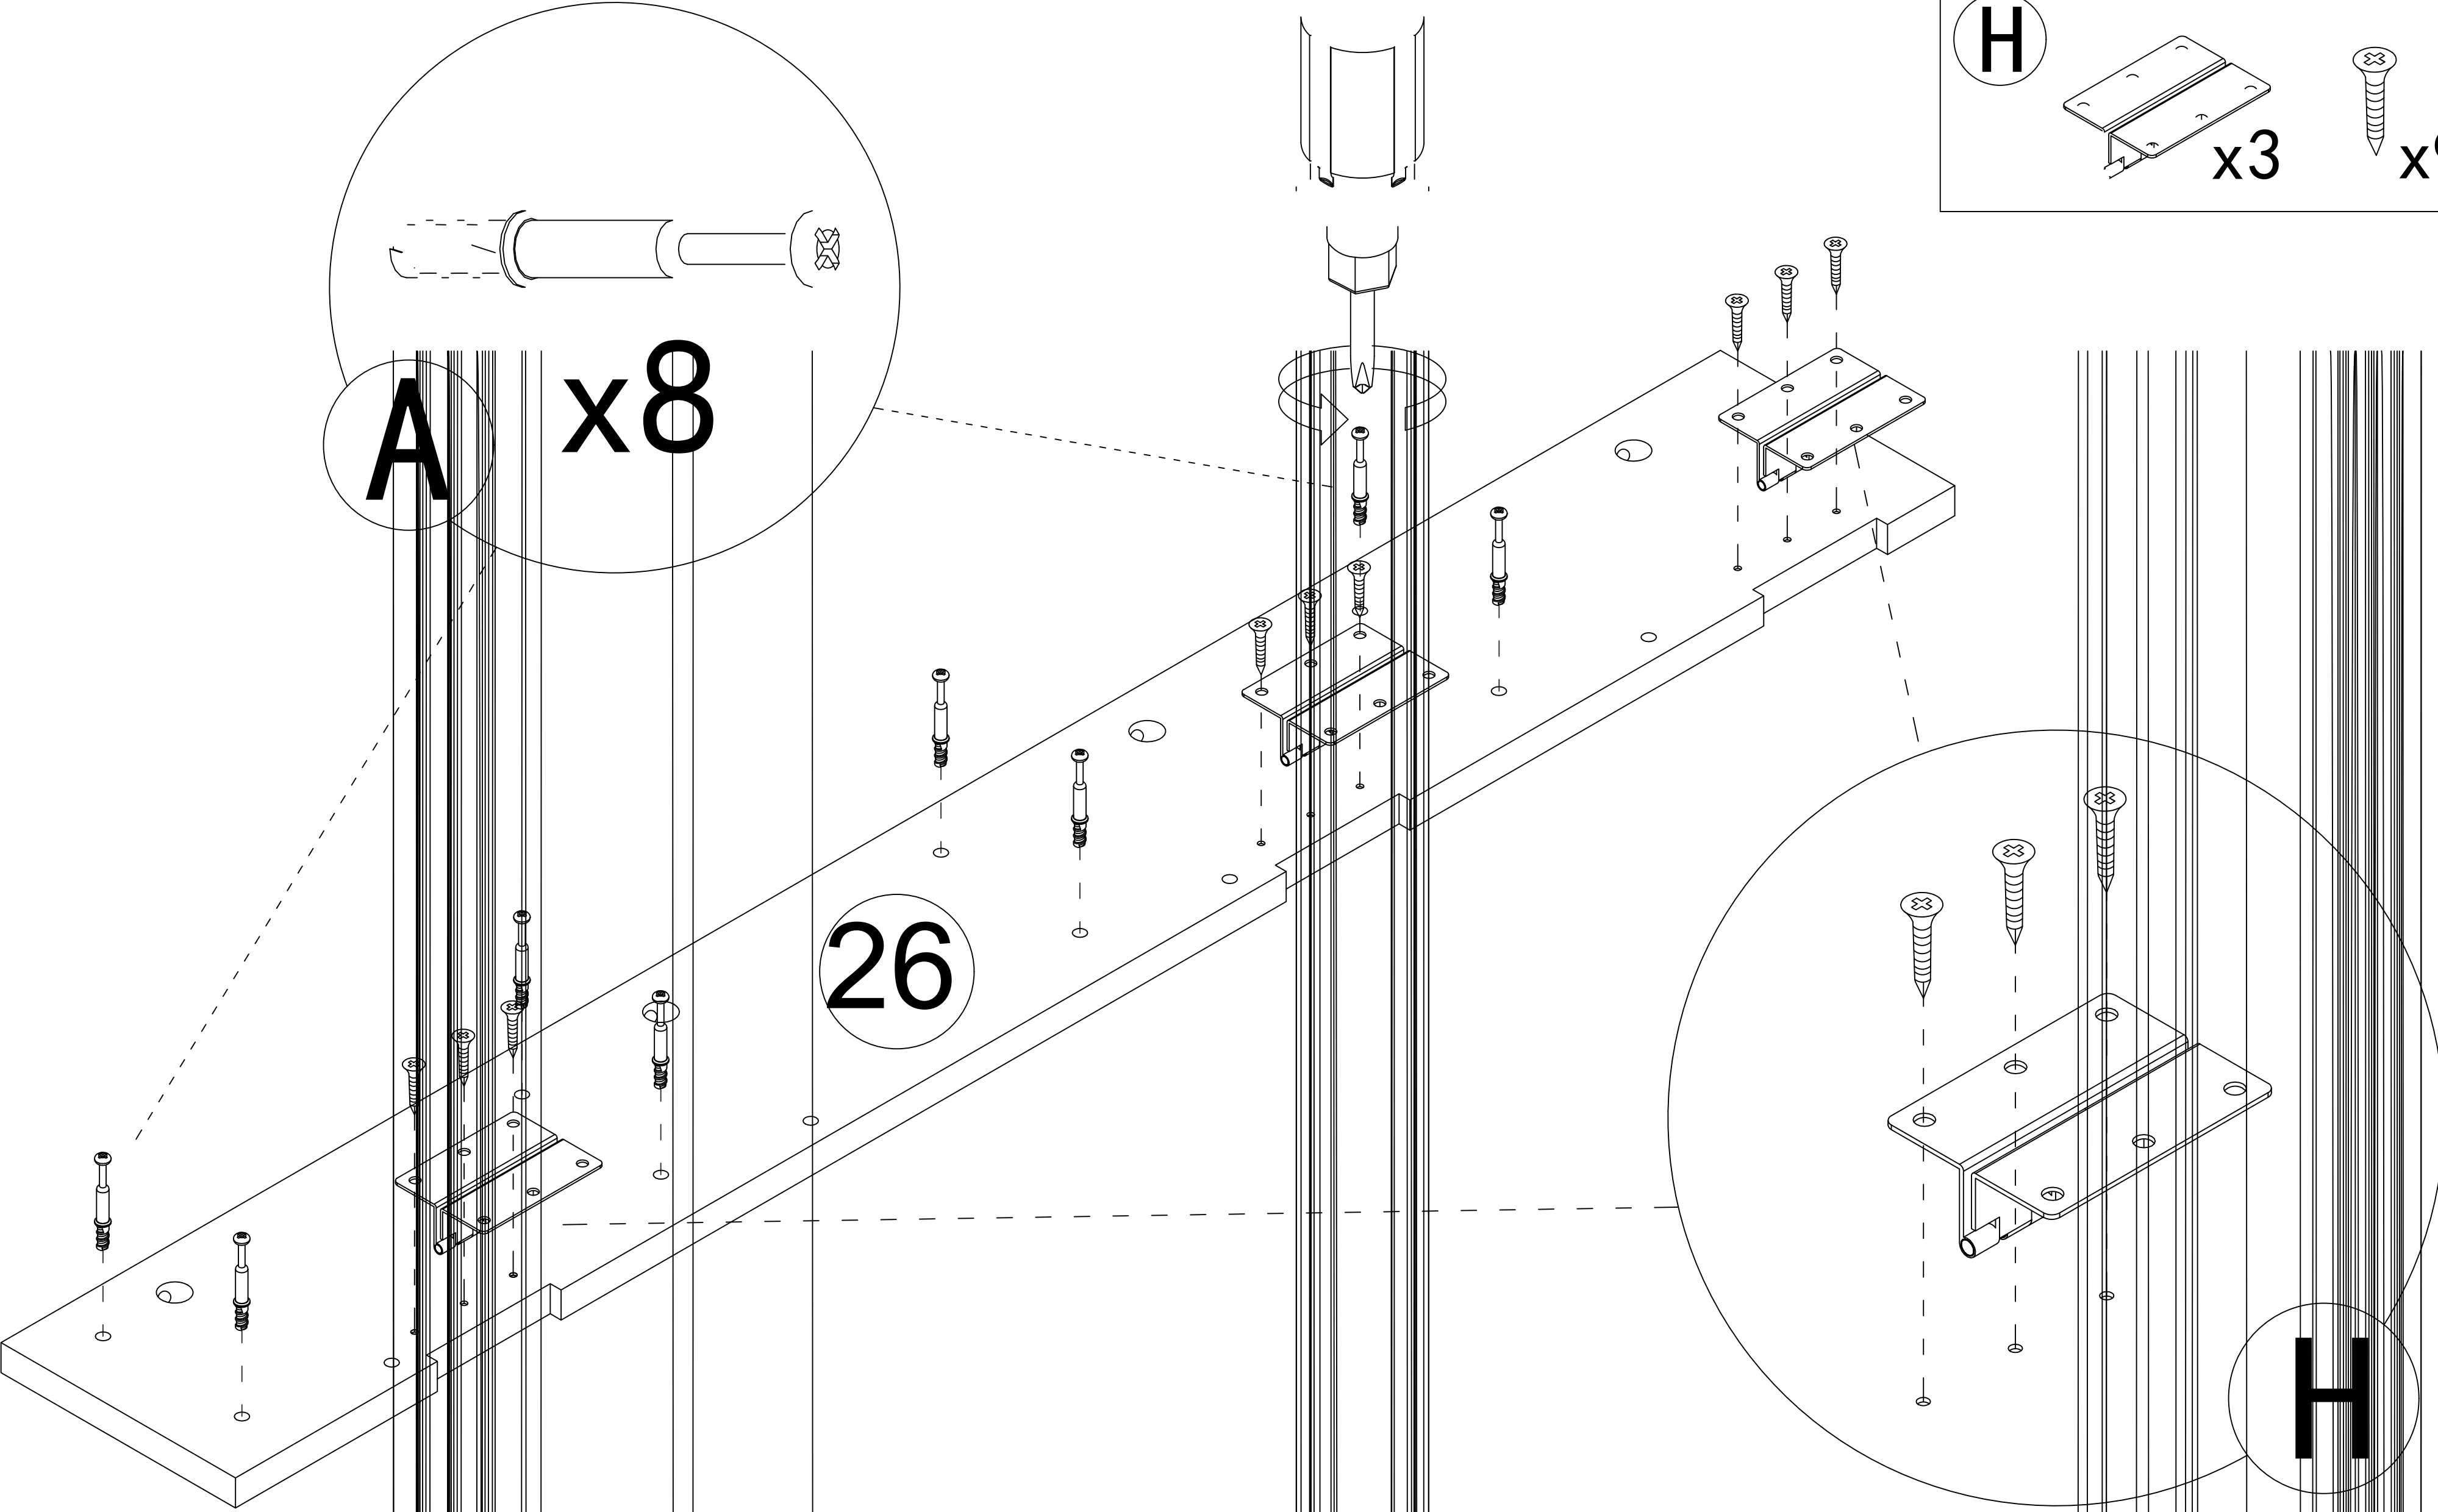


Step 46




- B

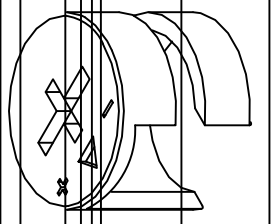

x8

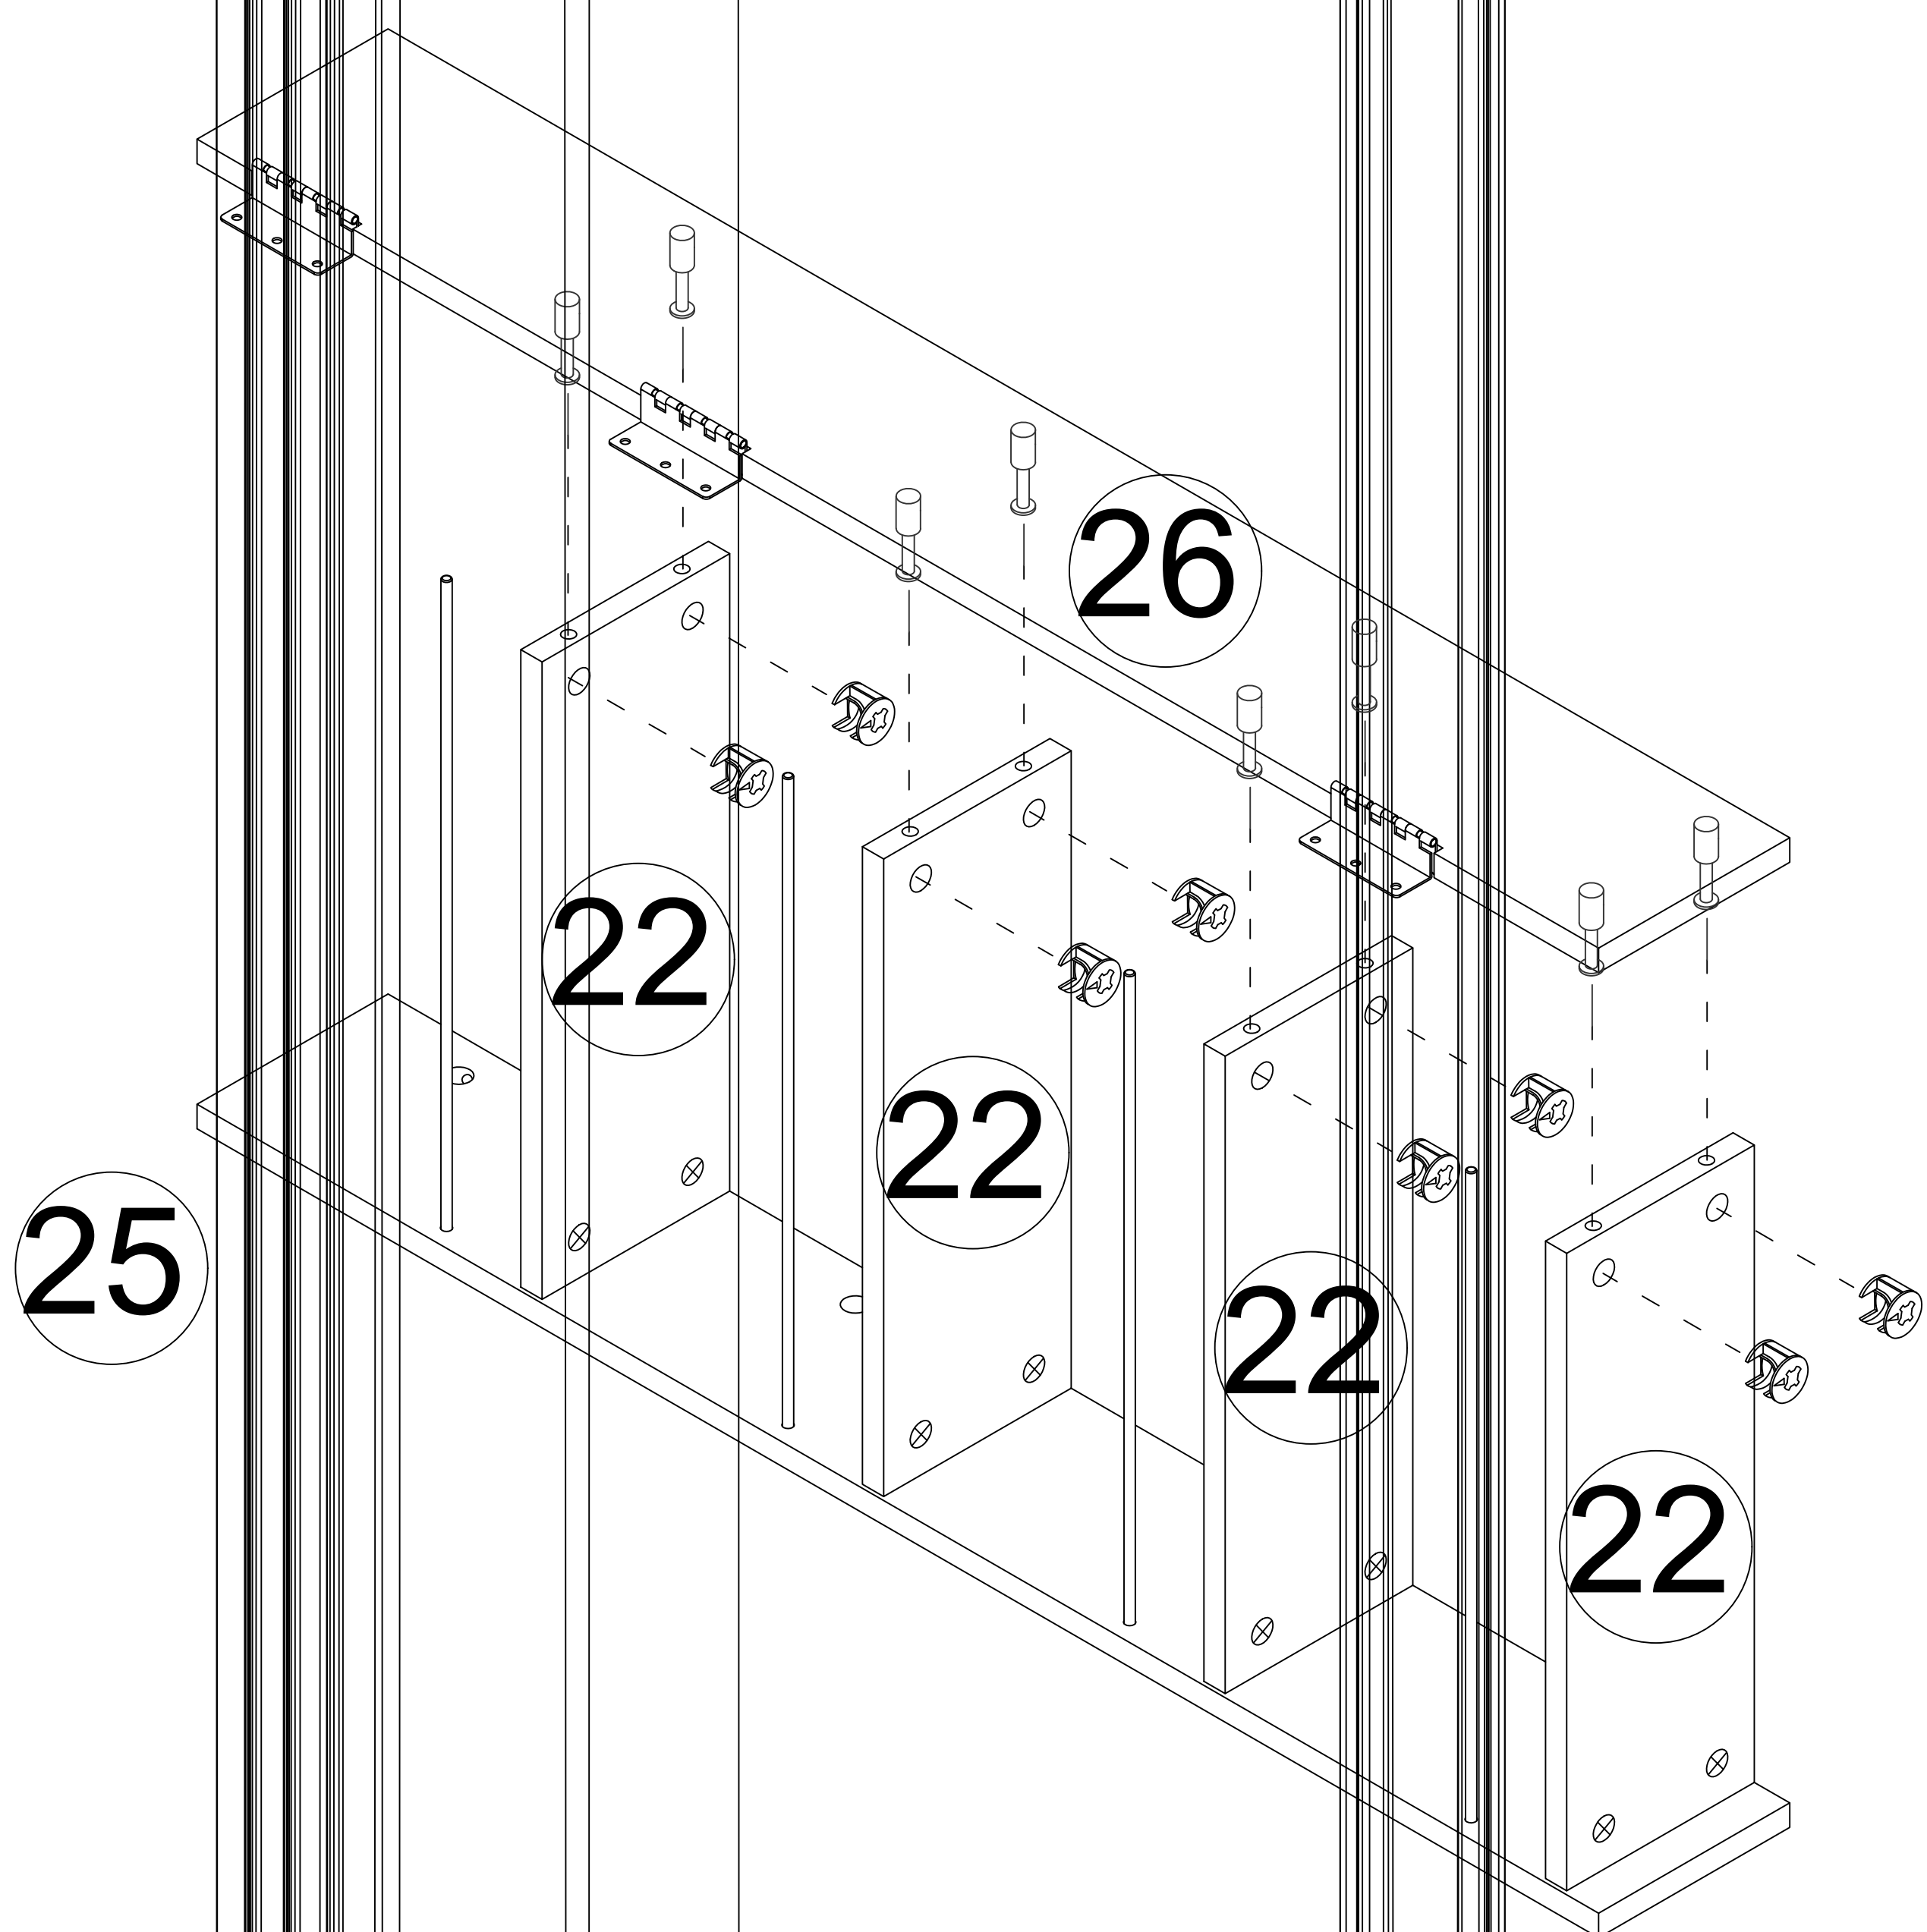


Step 47

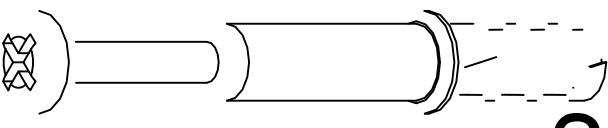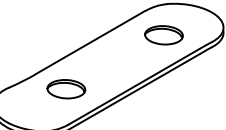A		x8
J		x1
		x2

27


Step 48

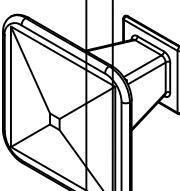K		x1
		x2
E		x1
		x1


27

Step 49


B

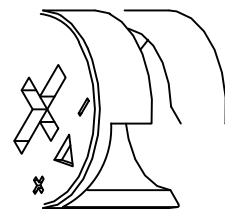


x8

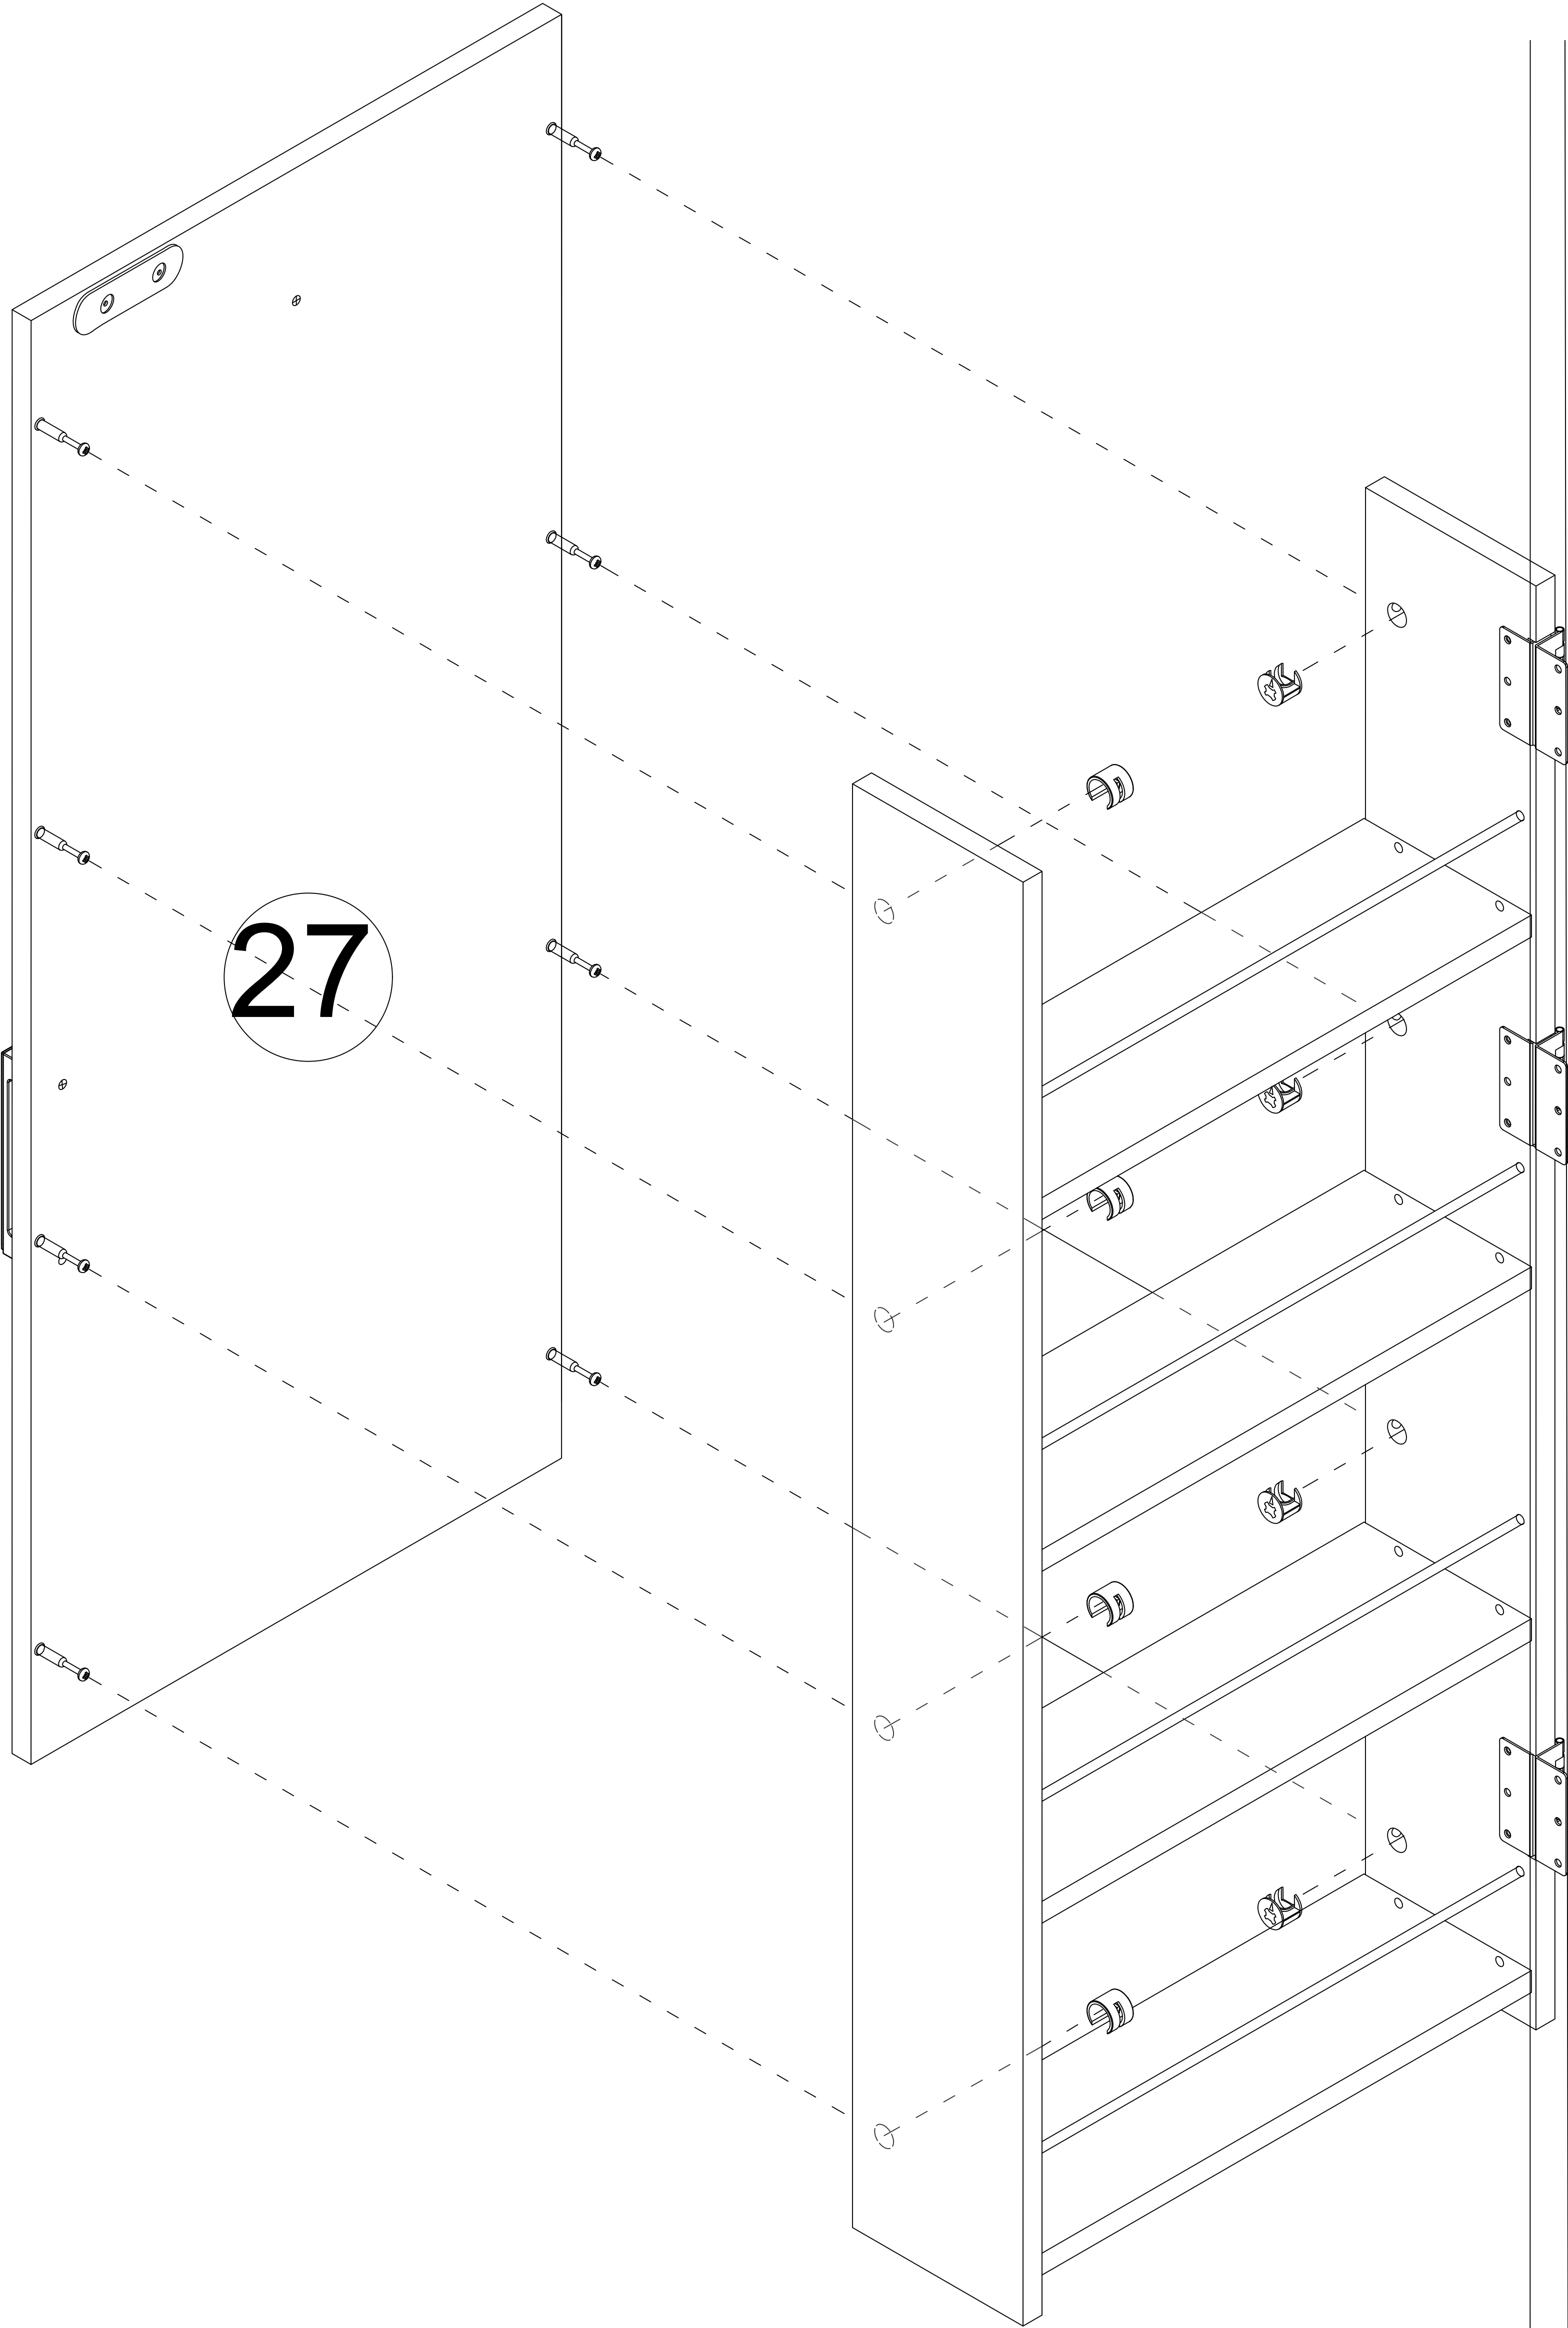


Step 50

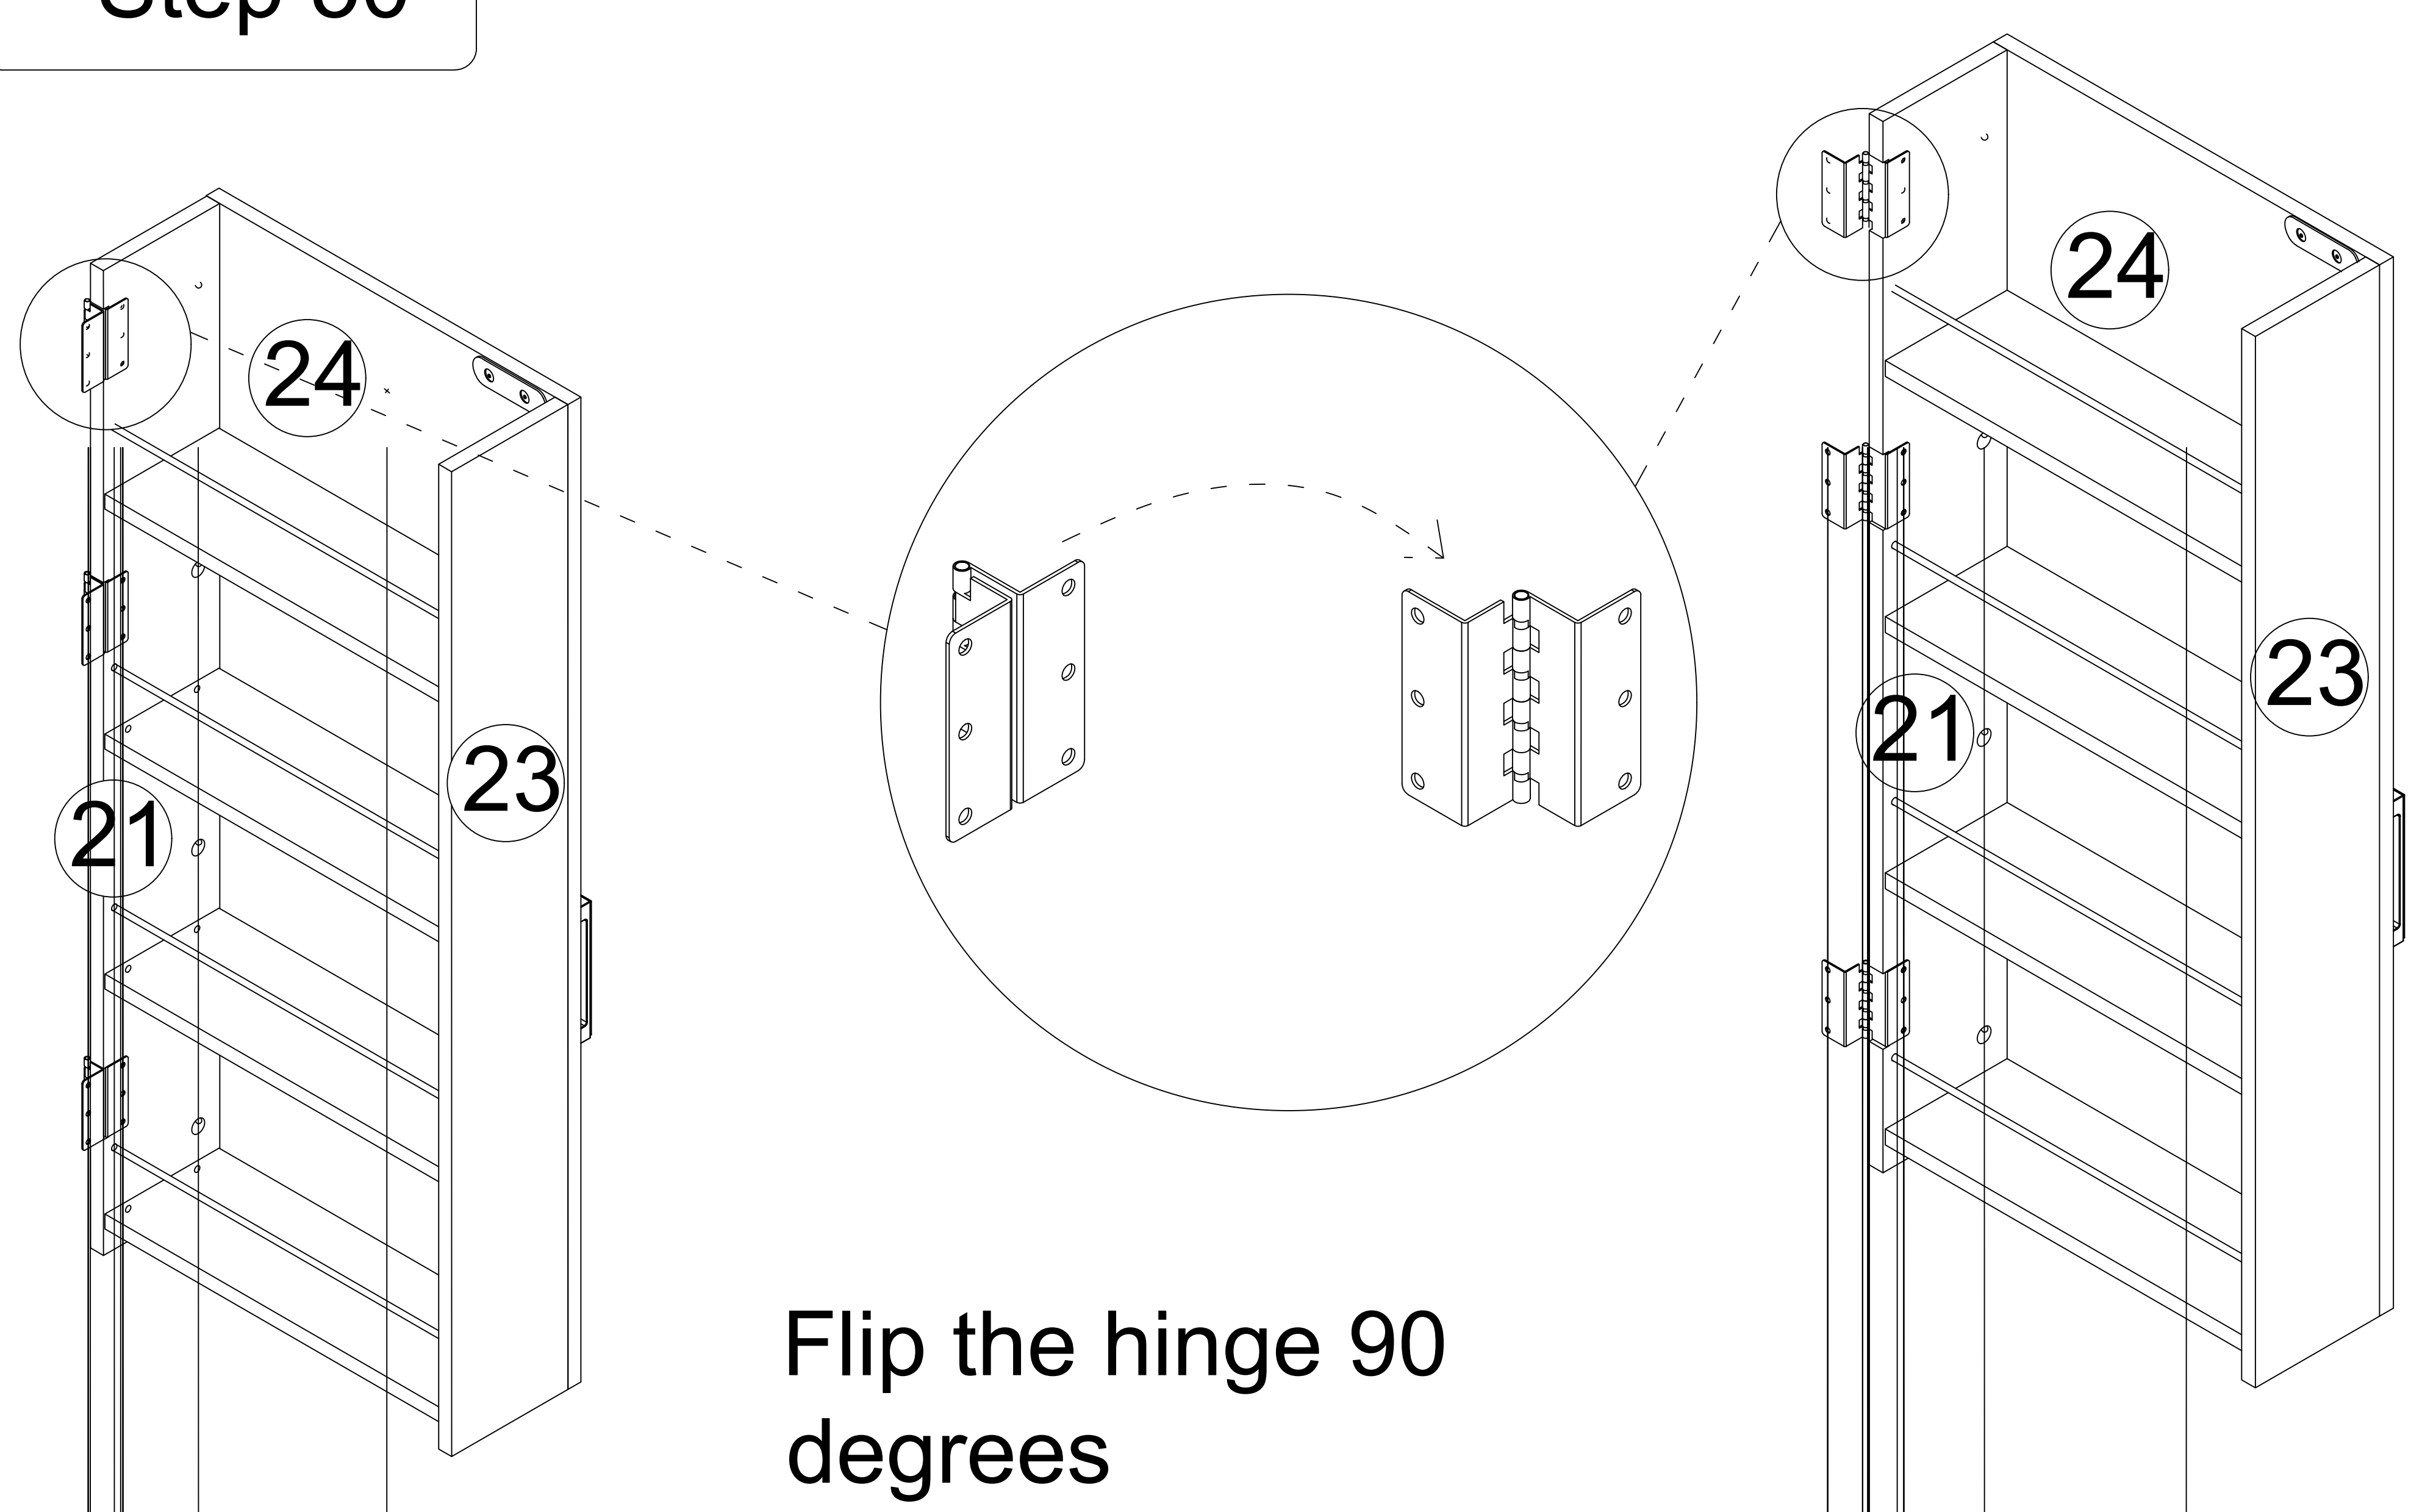


Step 51

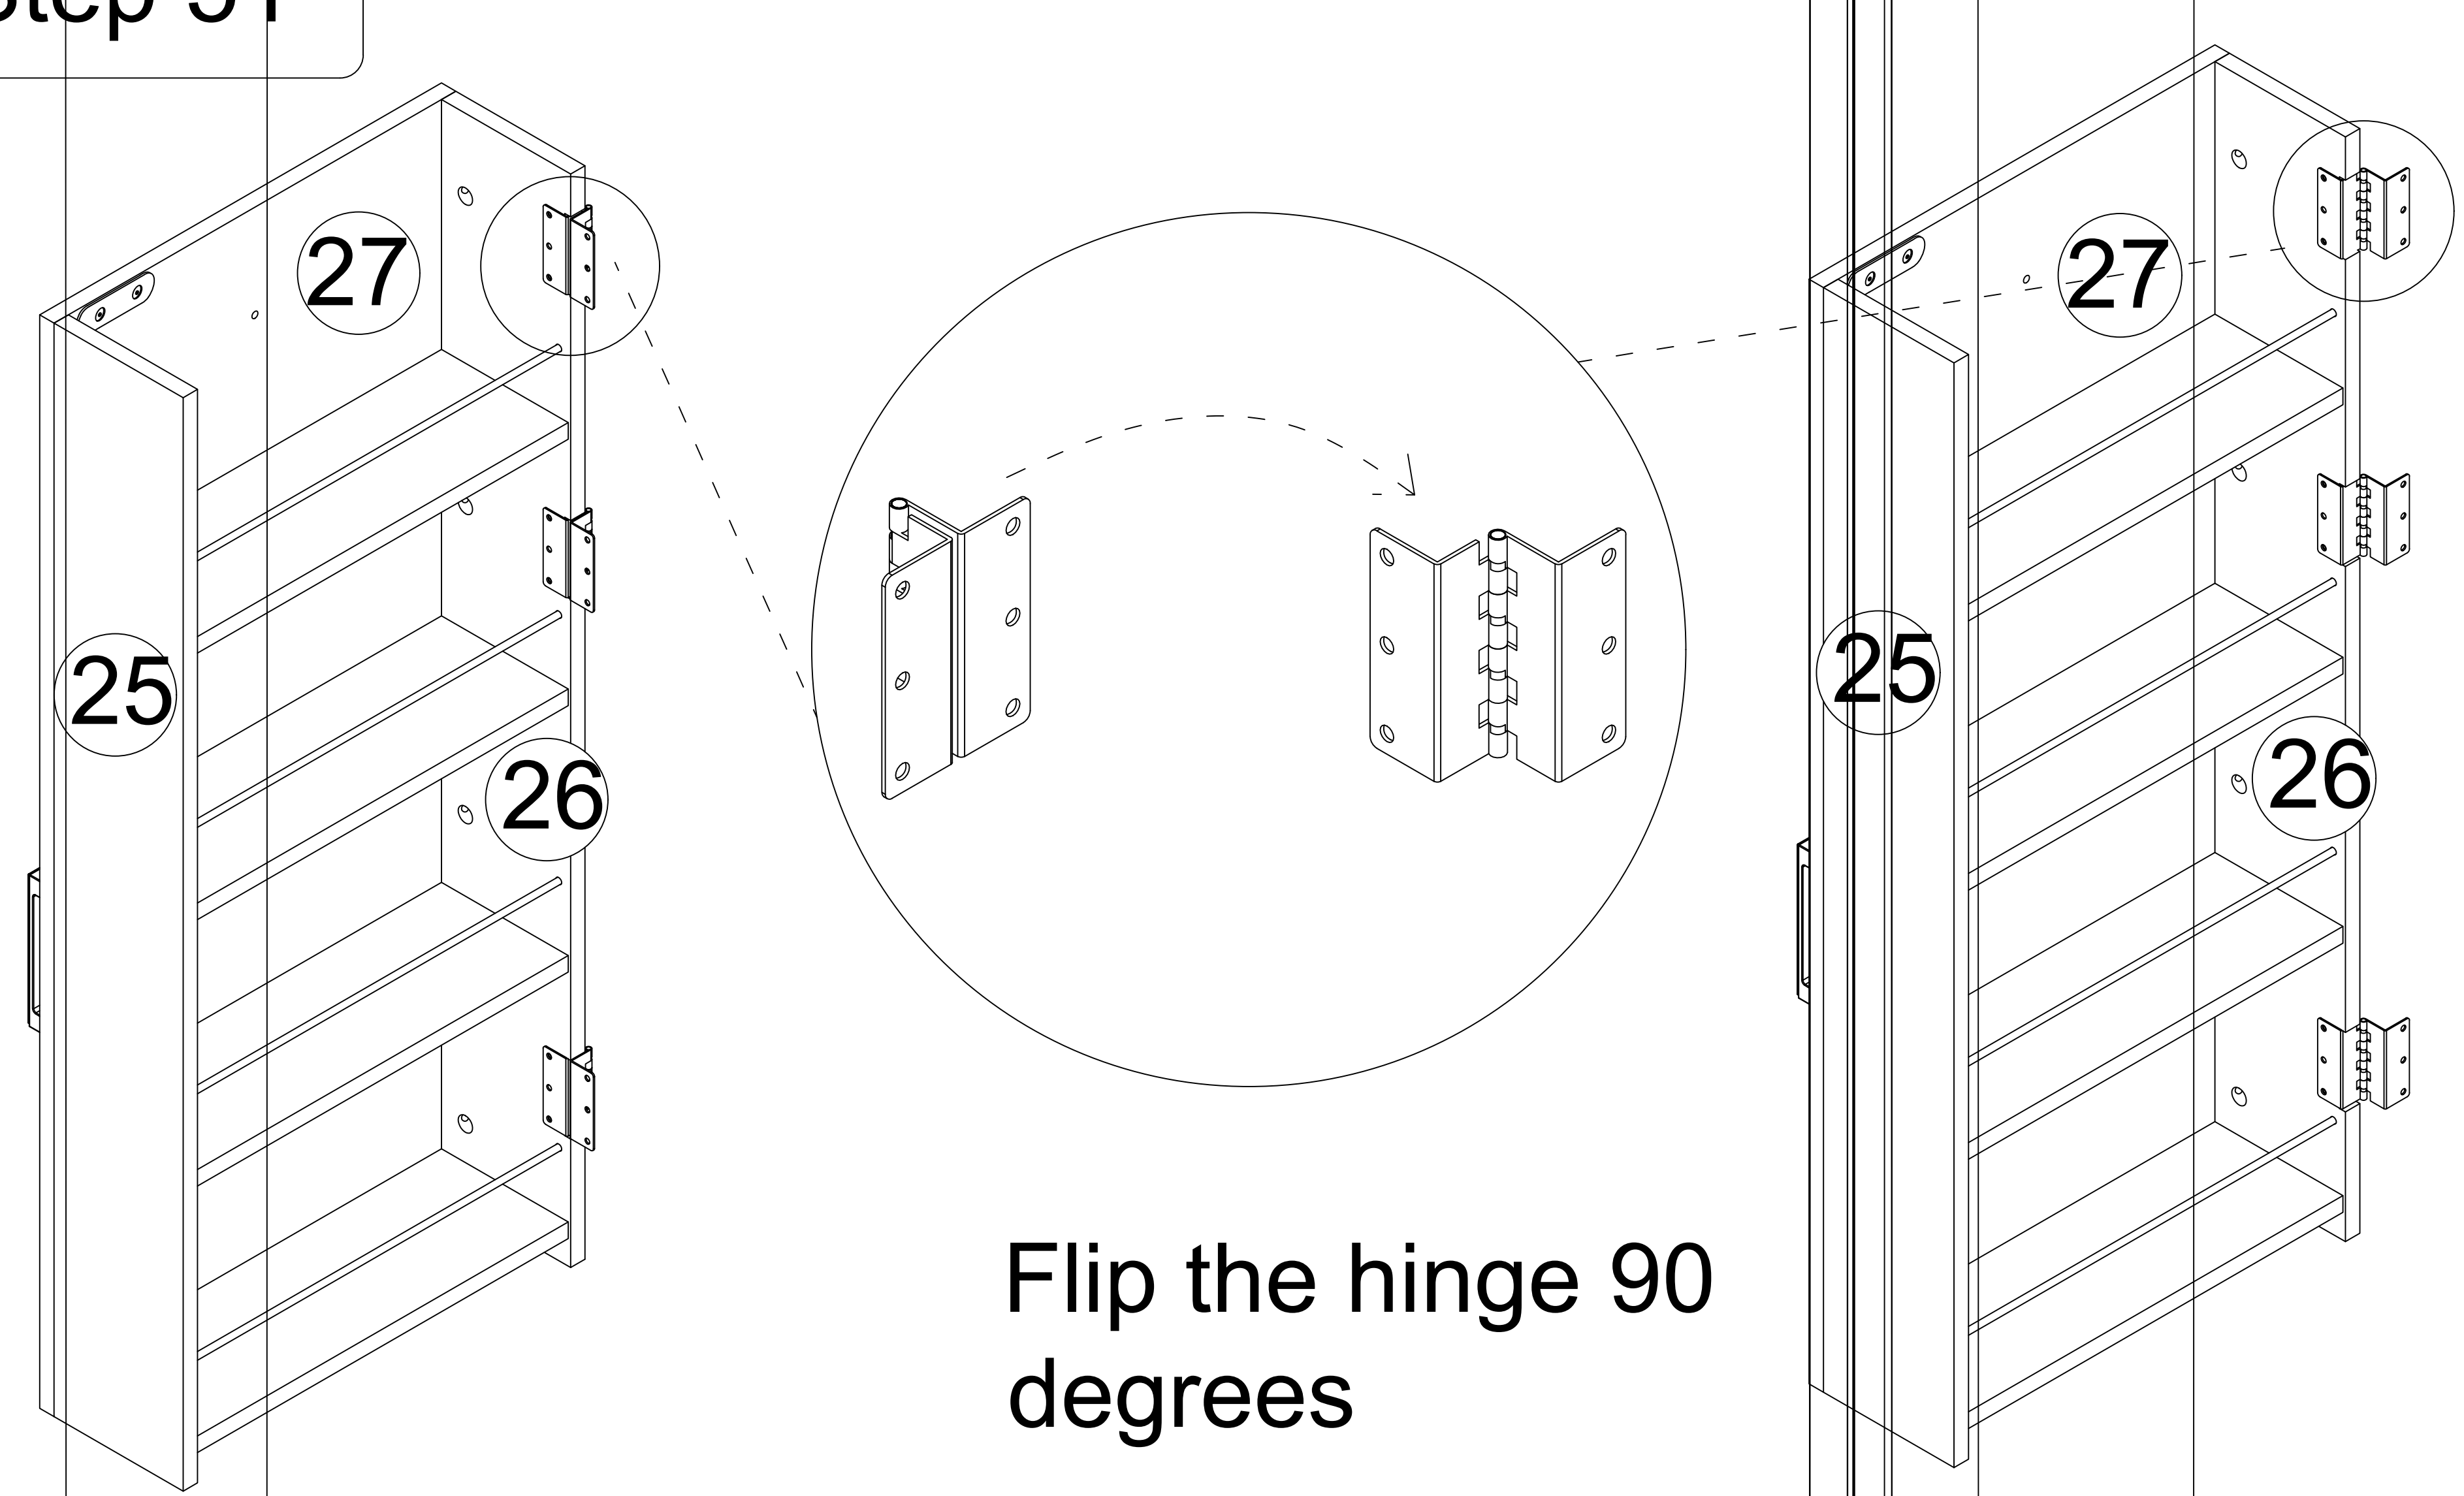


Step 52

H  x9

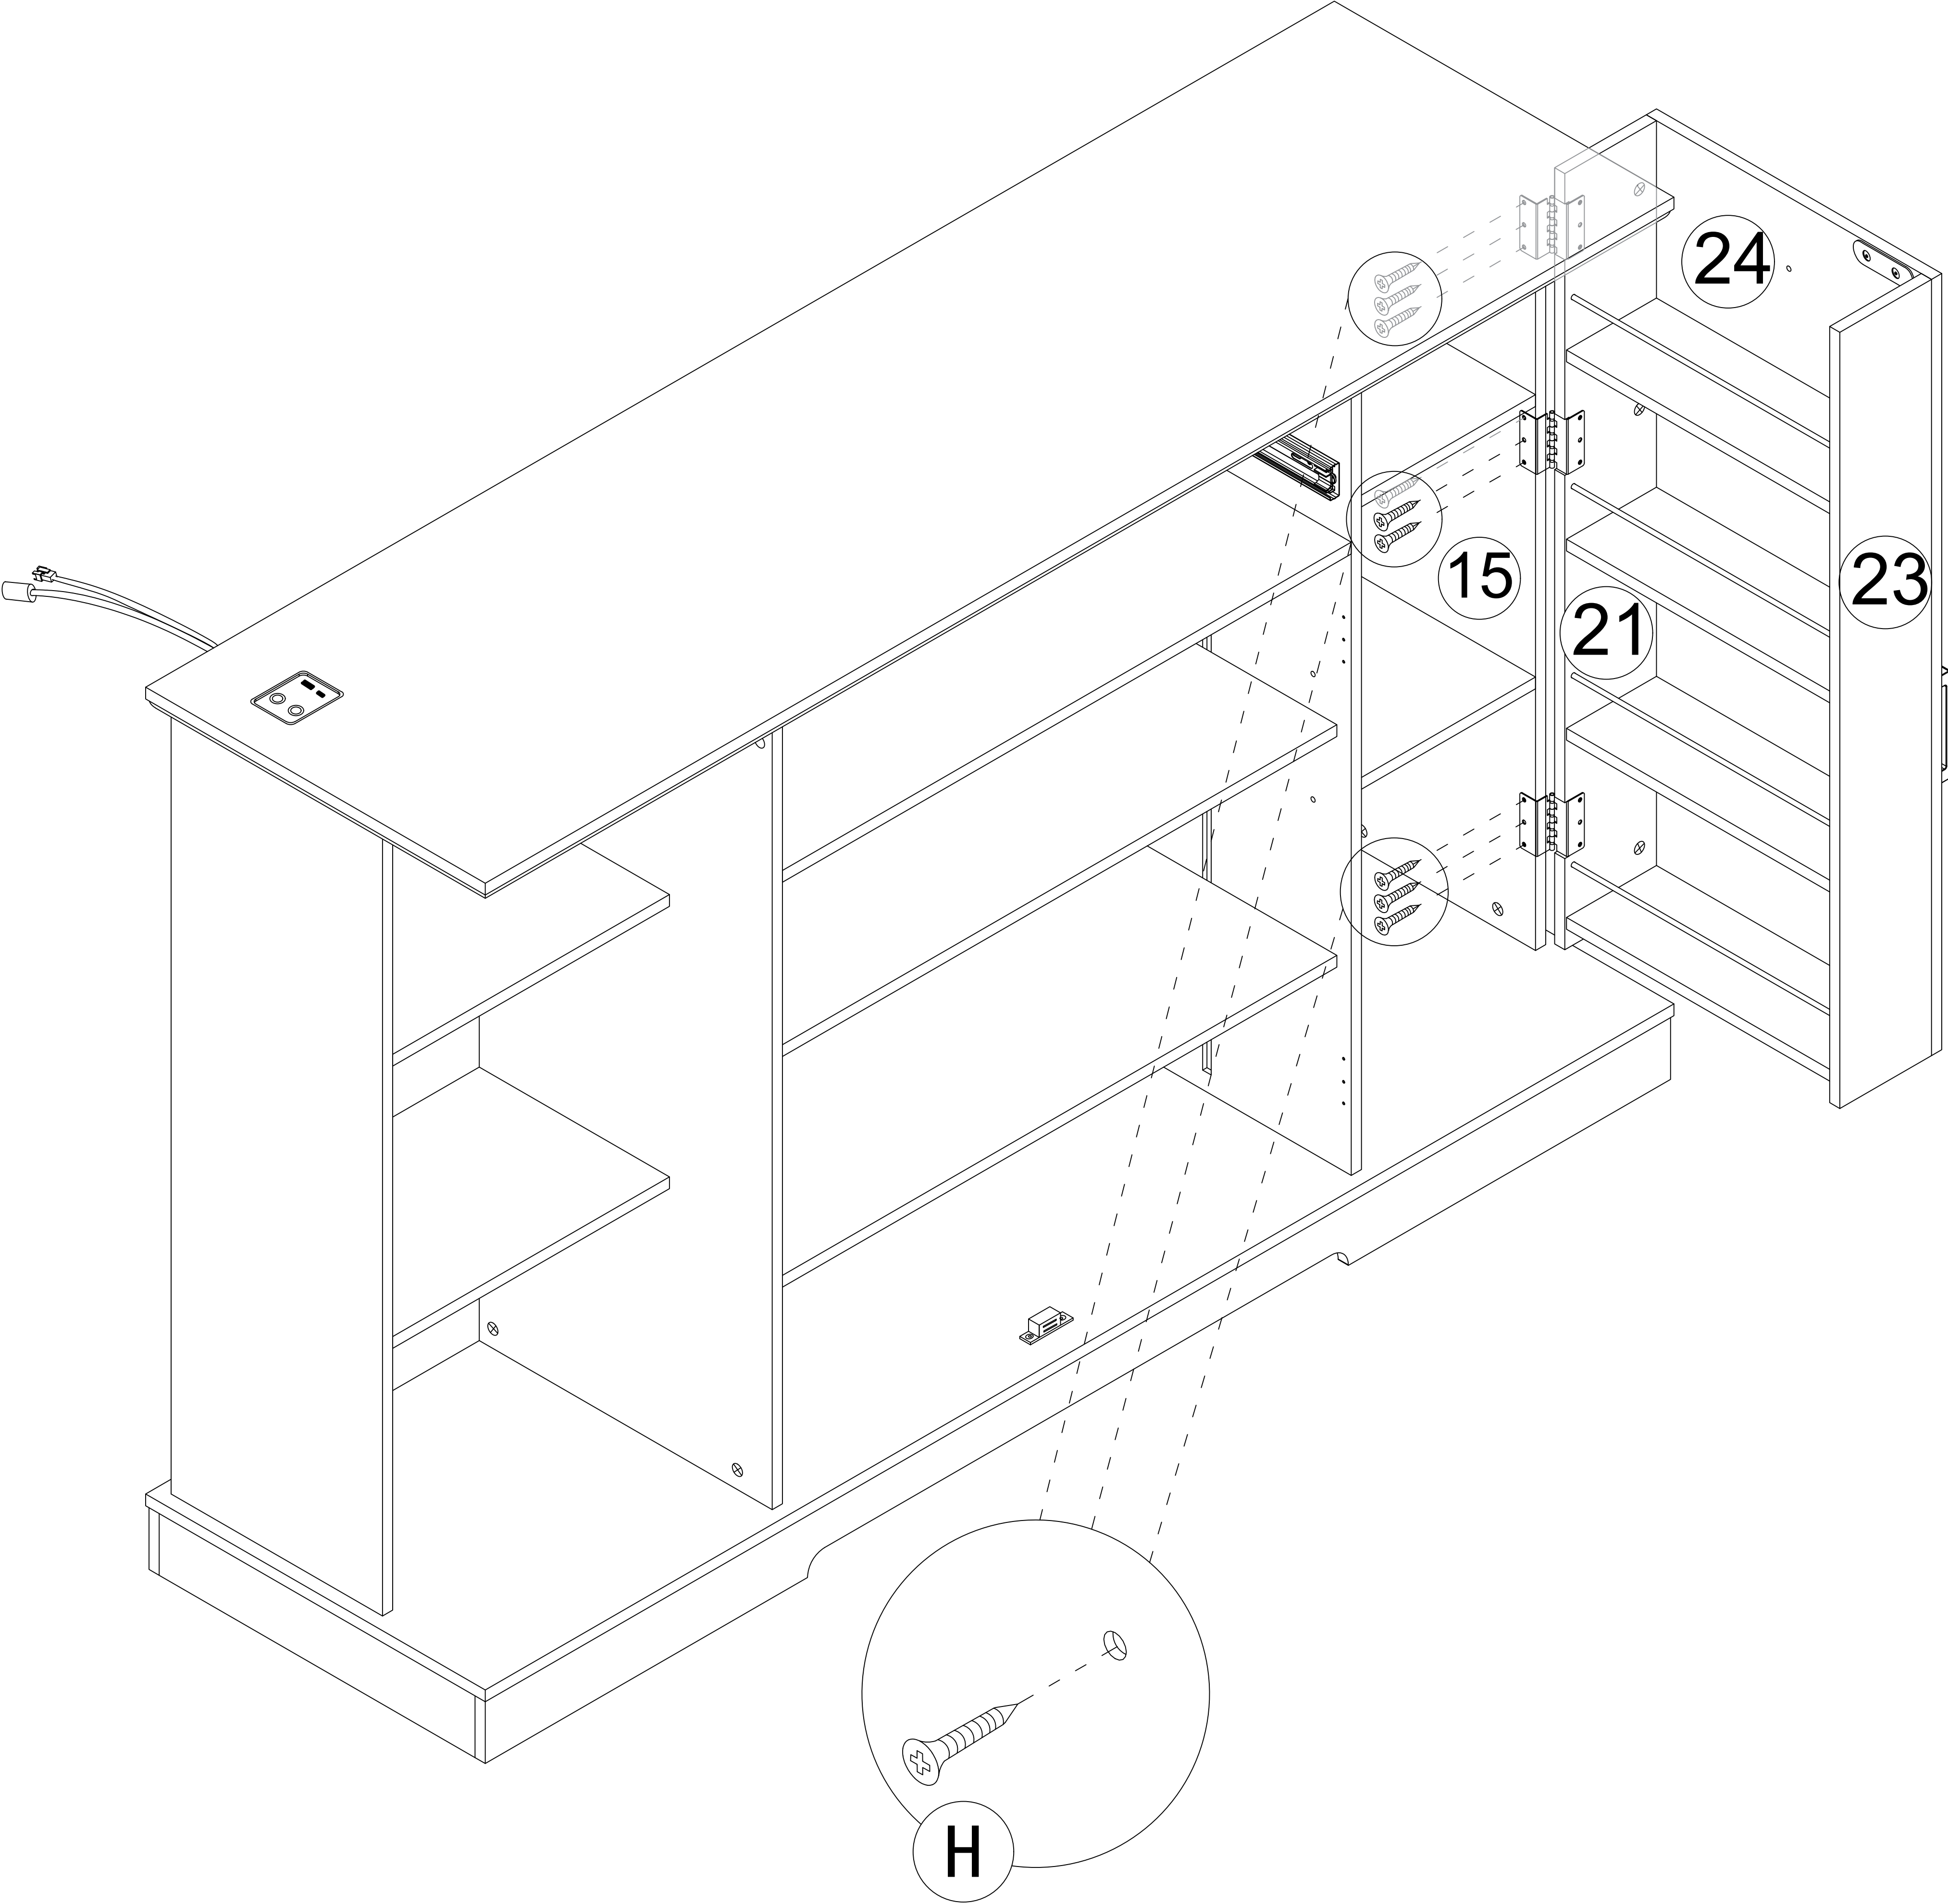


Step 53


H

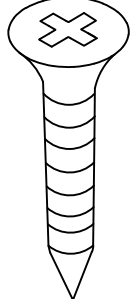

x9


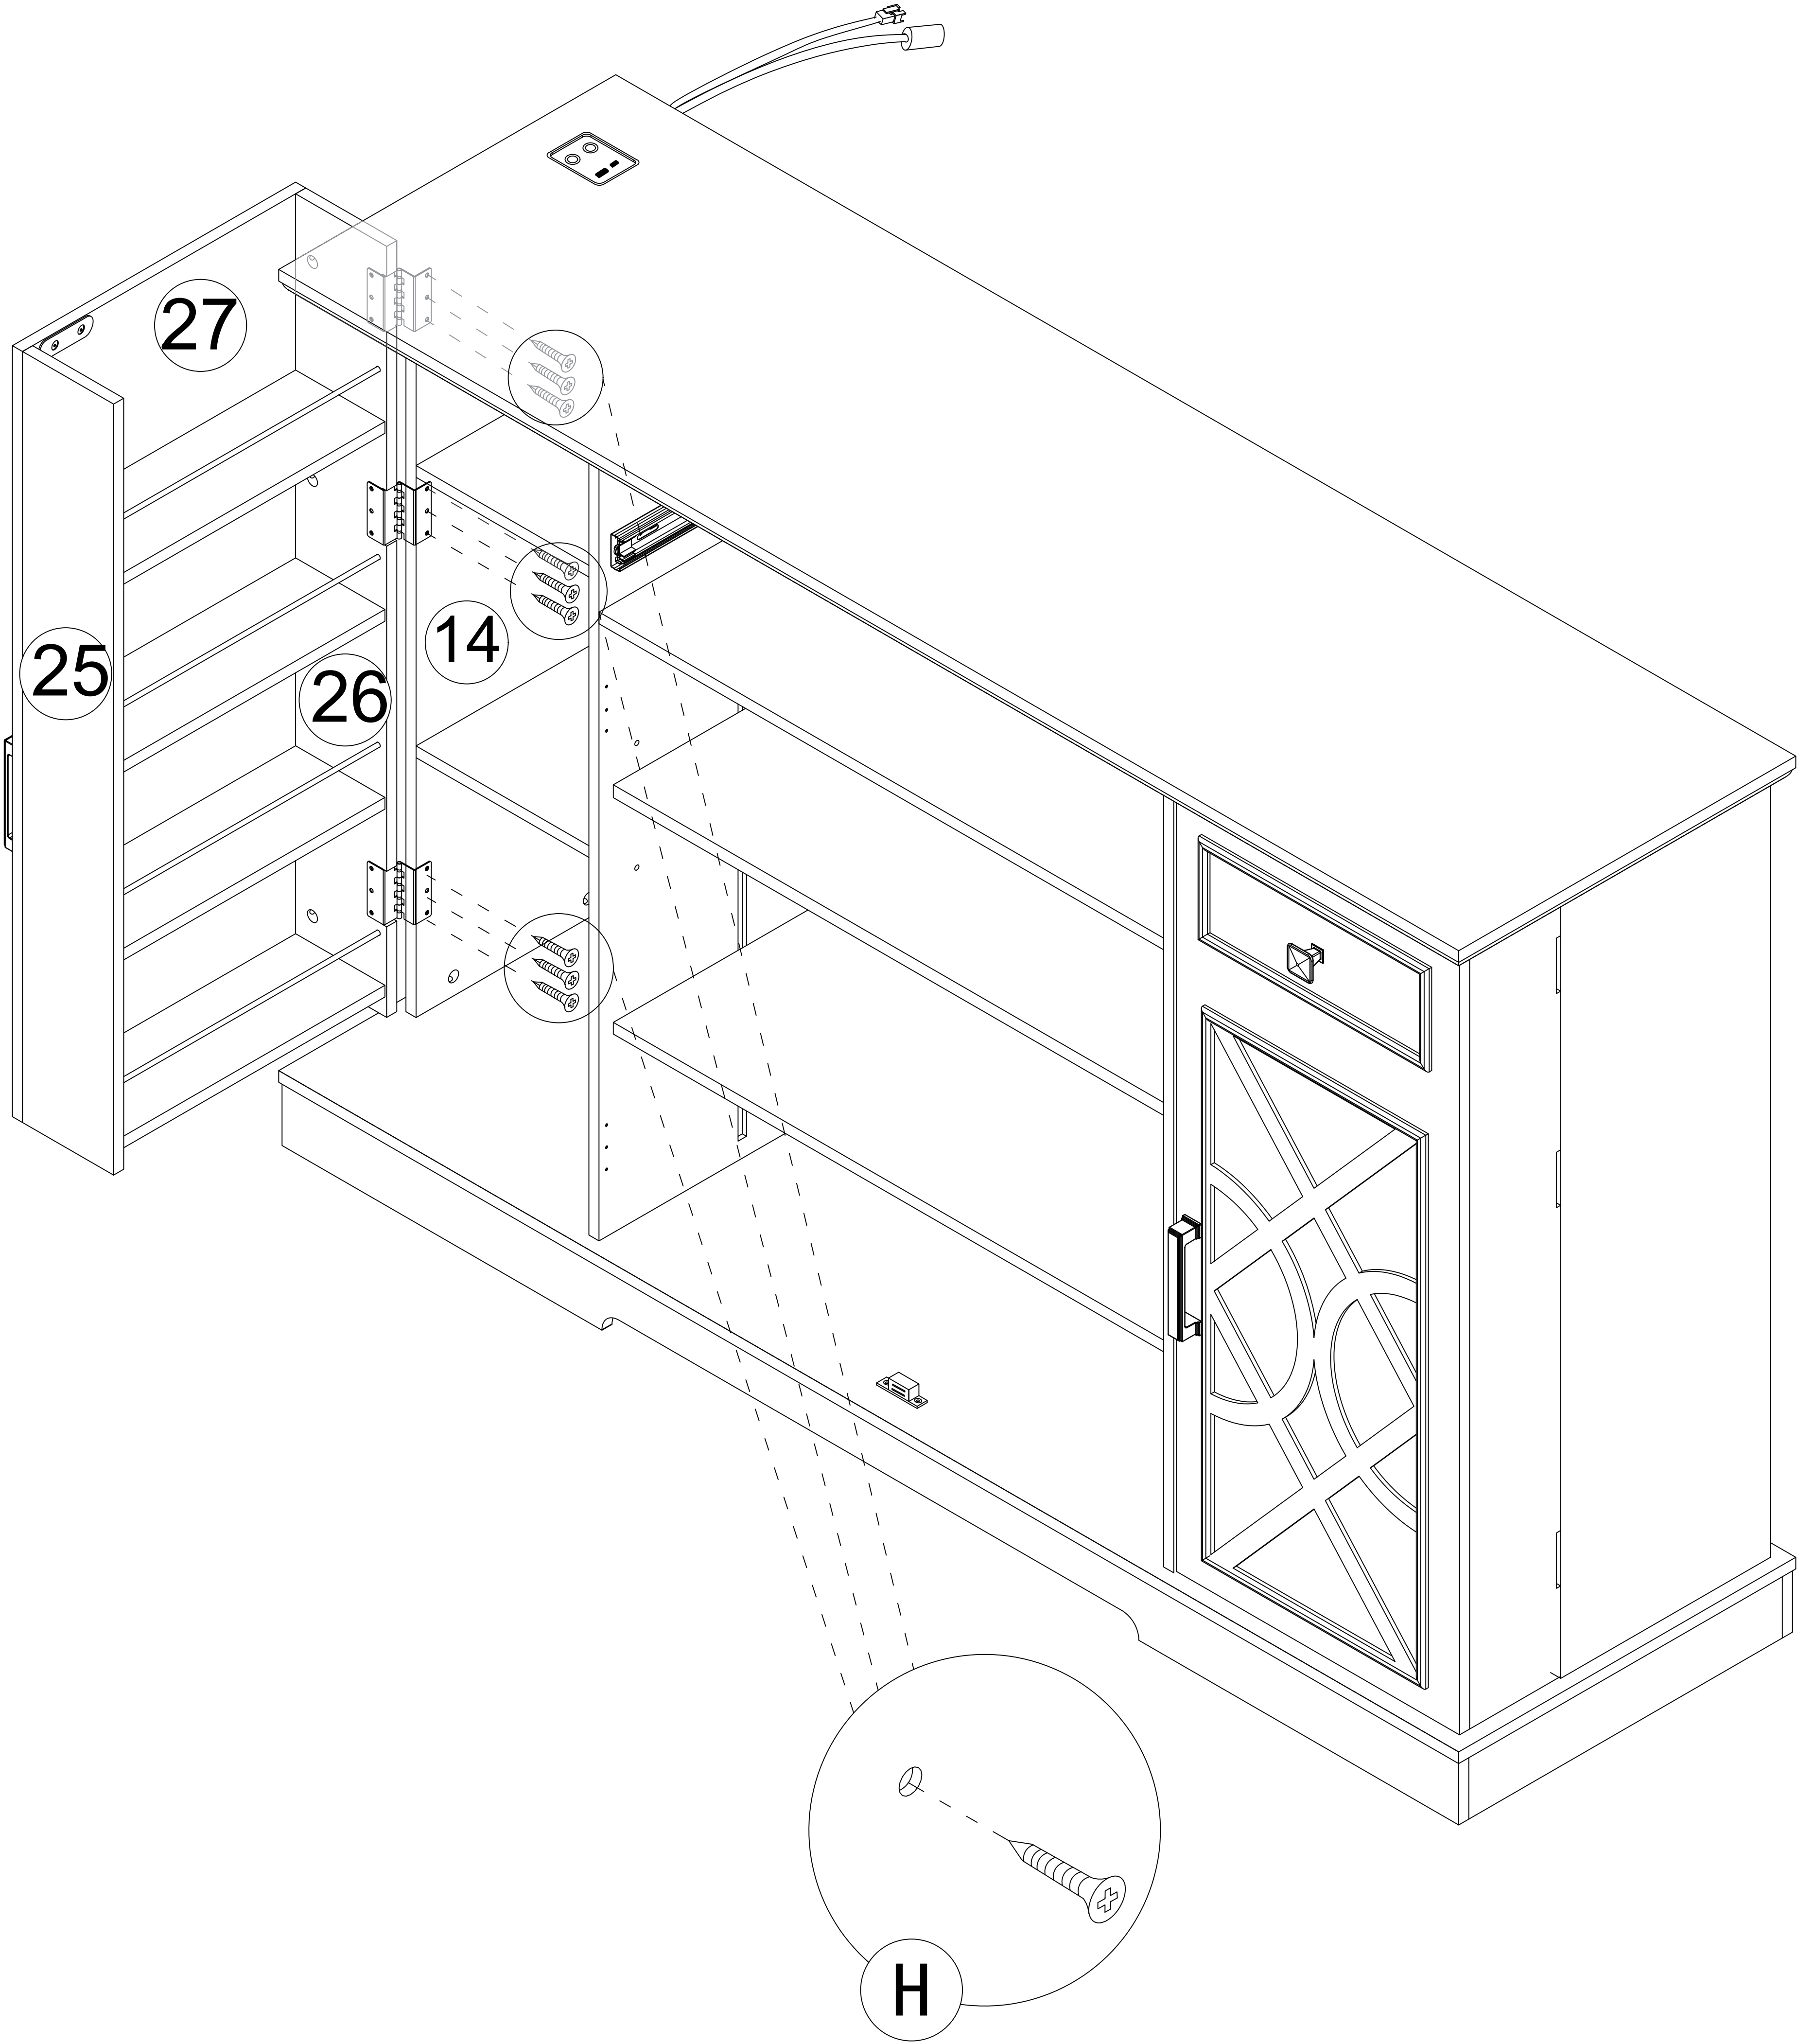


Step 54

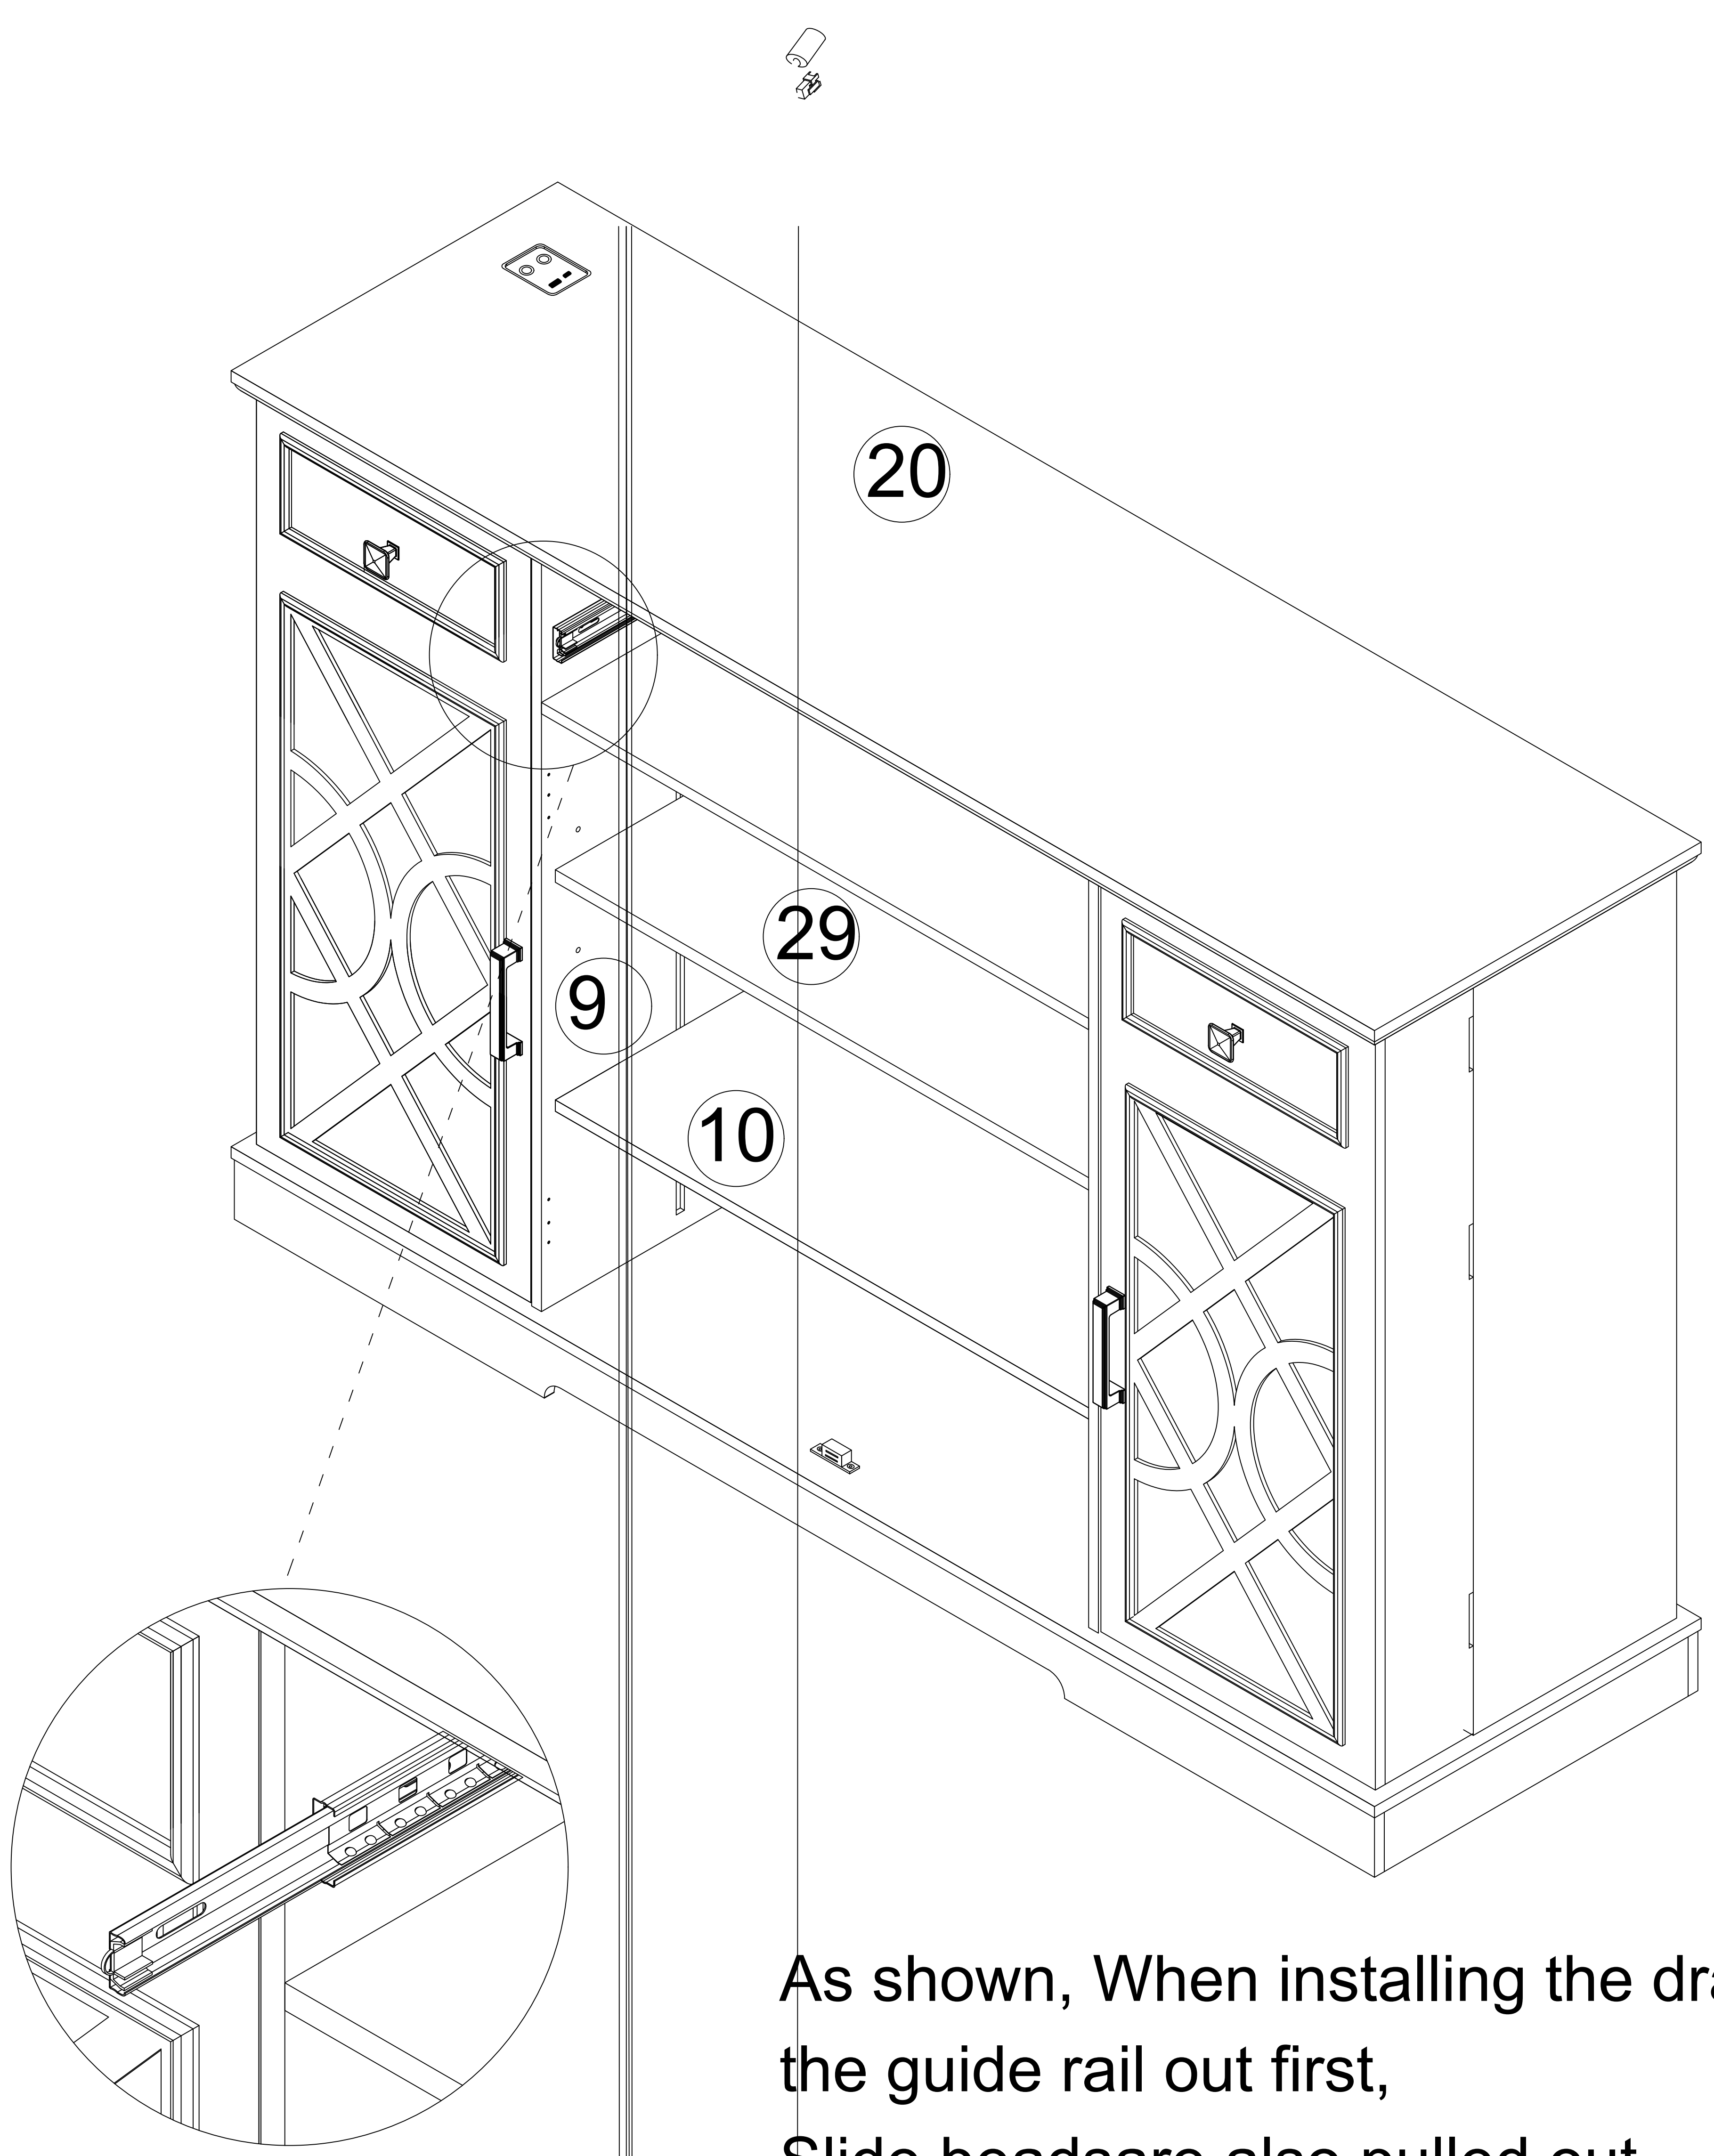


As shown, When installing the drawerpull
the guide rail out first,
Slide beadsare also pulled out.

Step 55

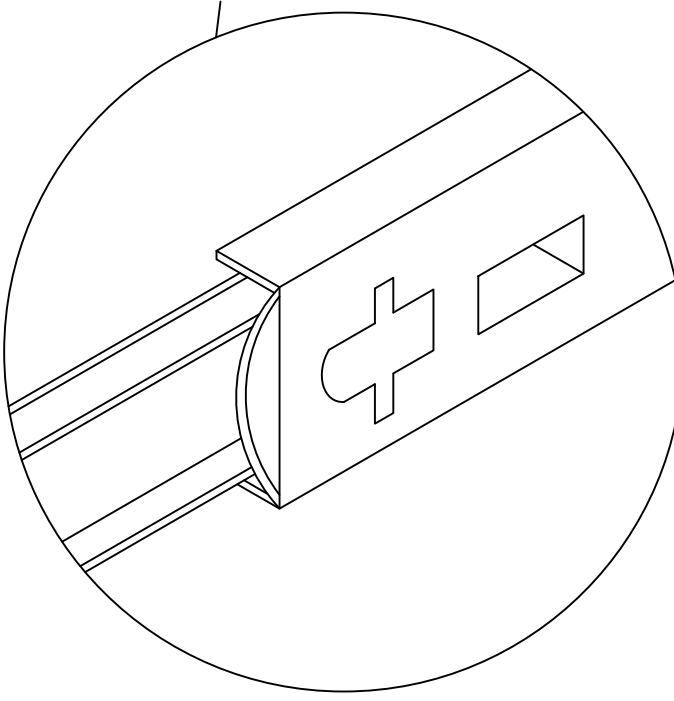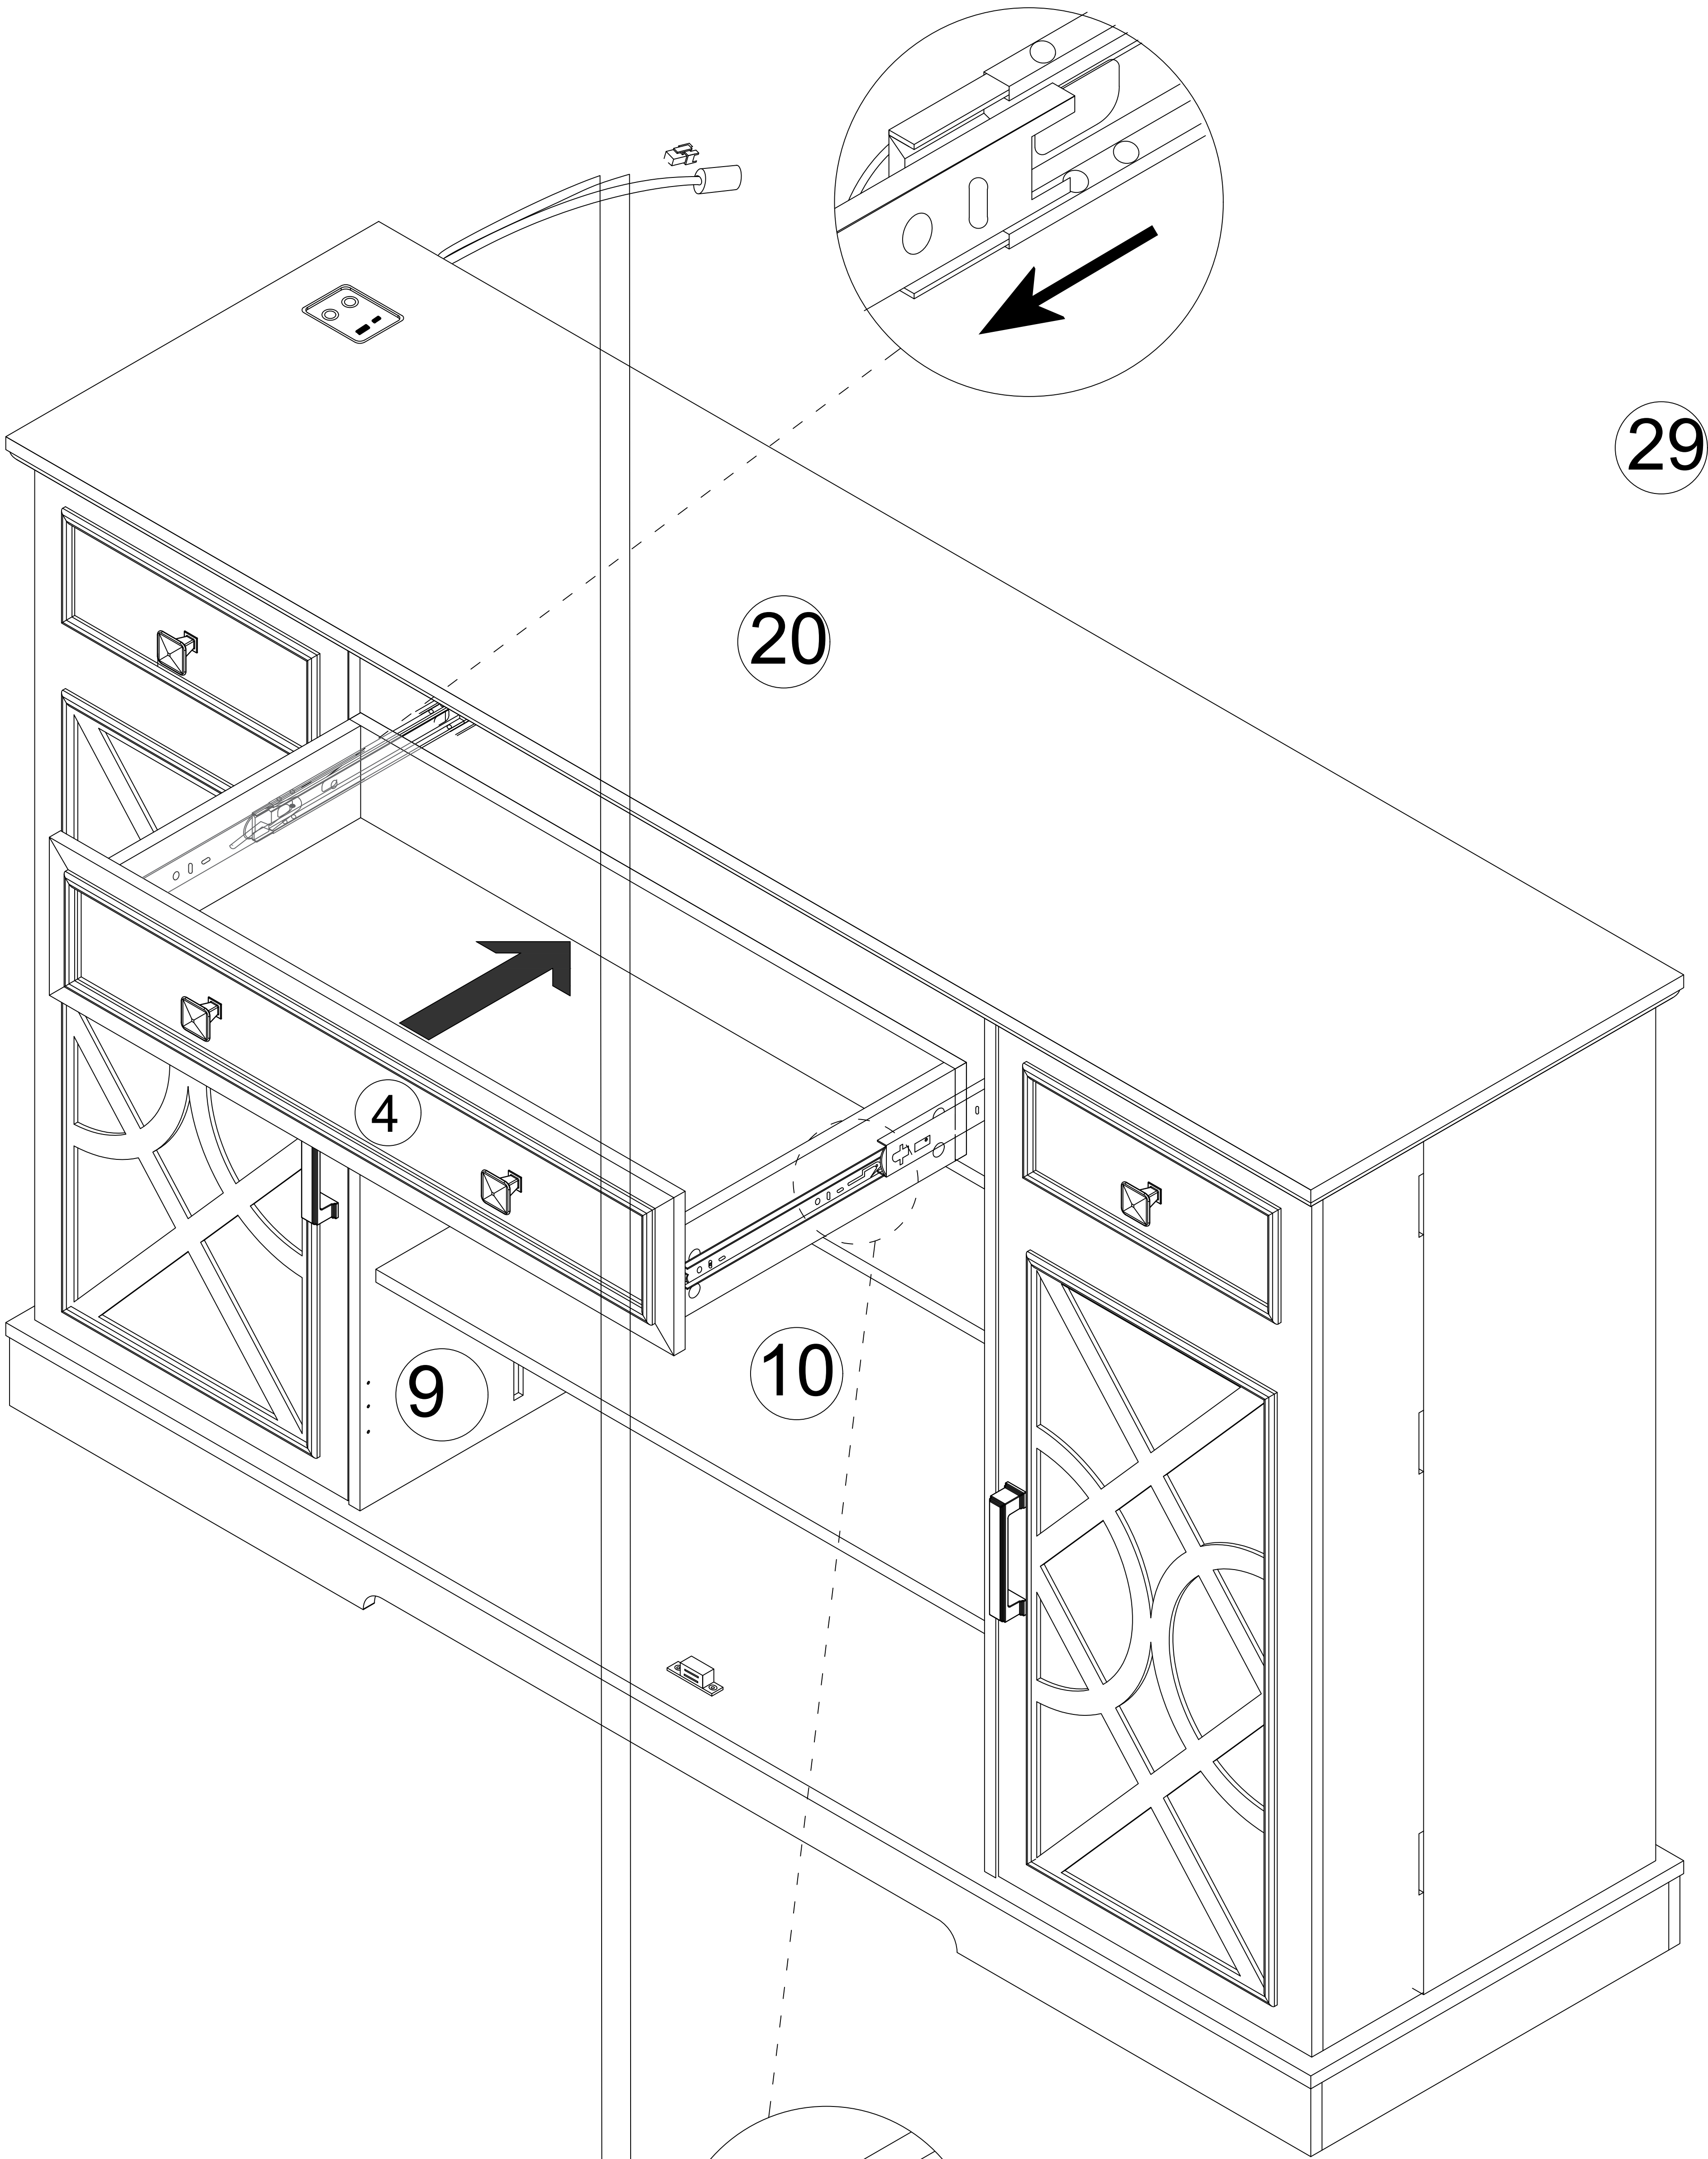


Step 56

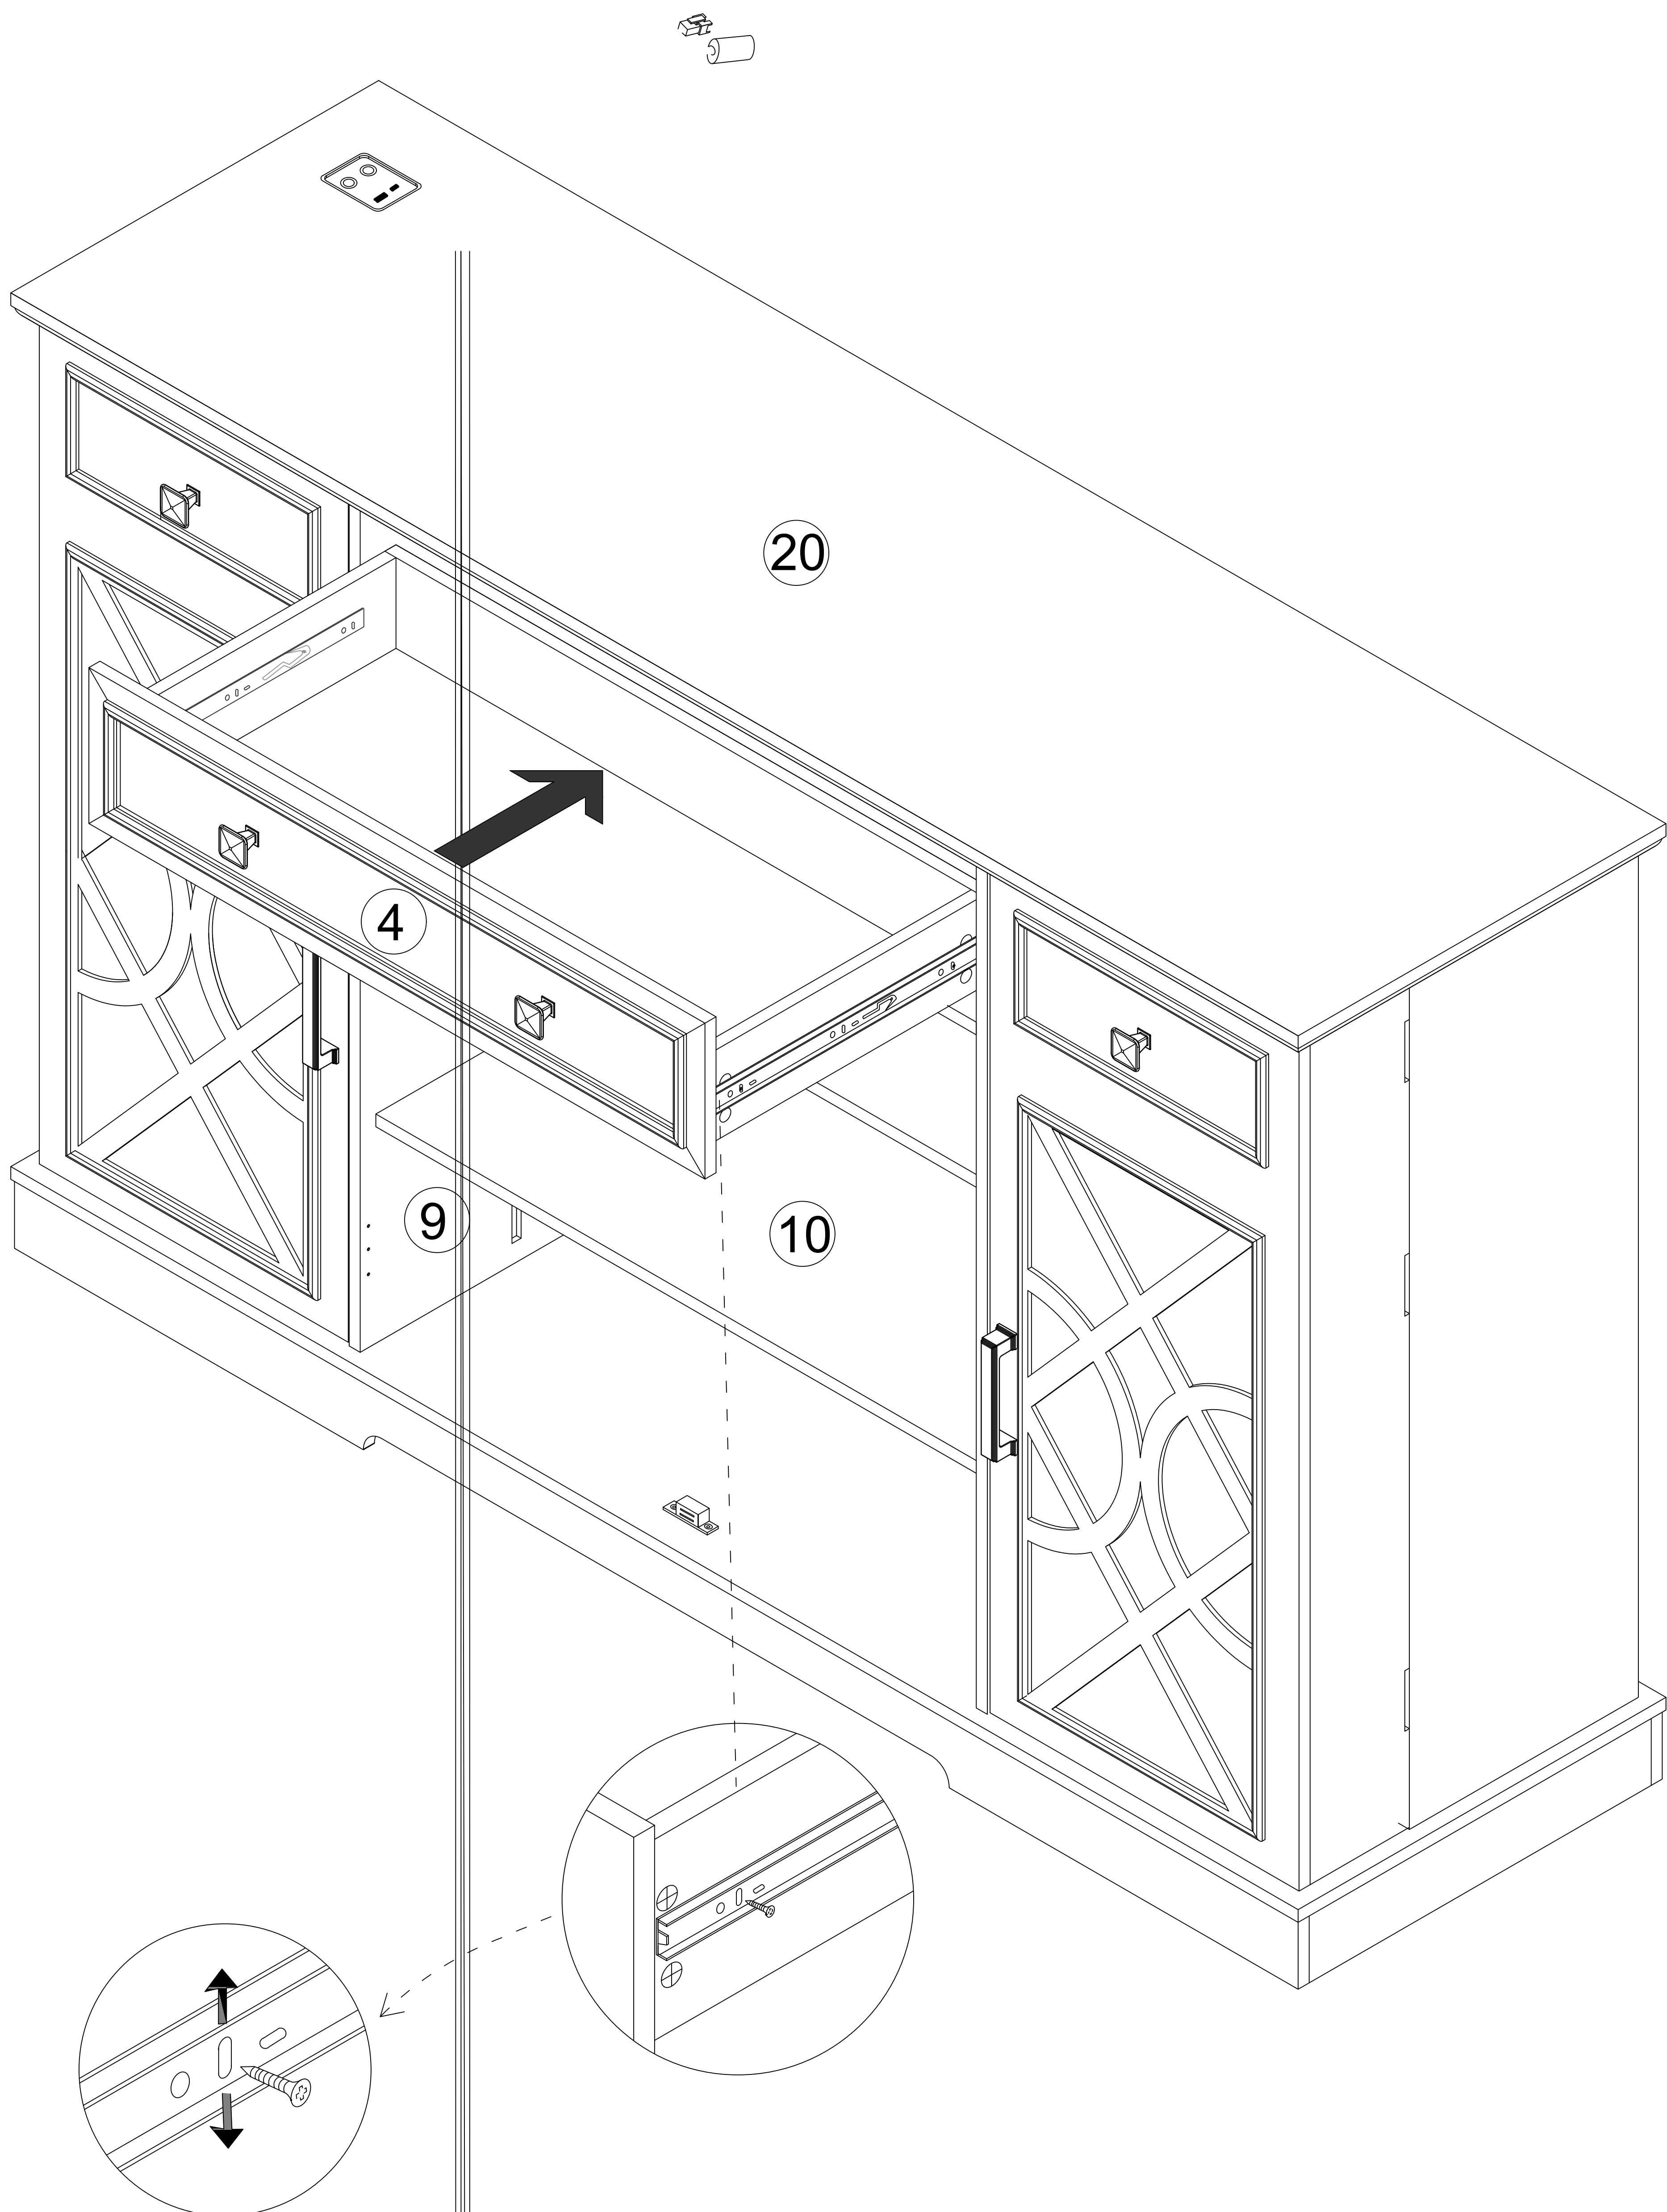


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap.

Step 57

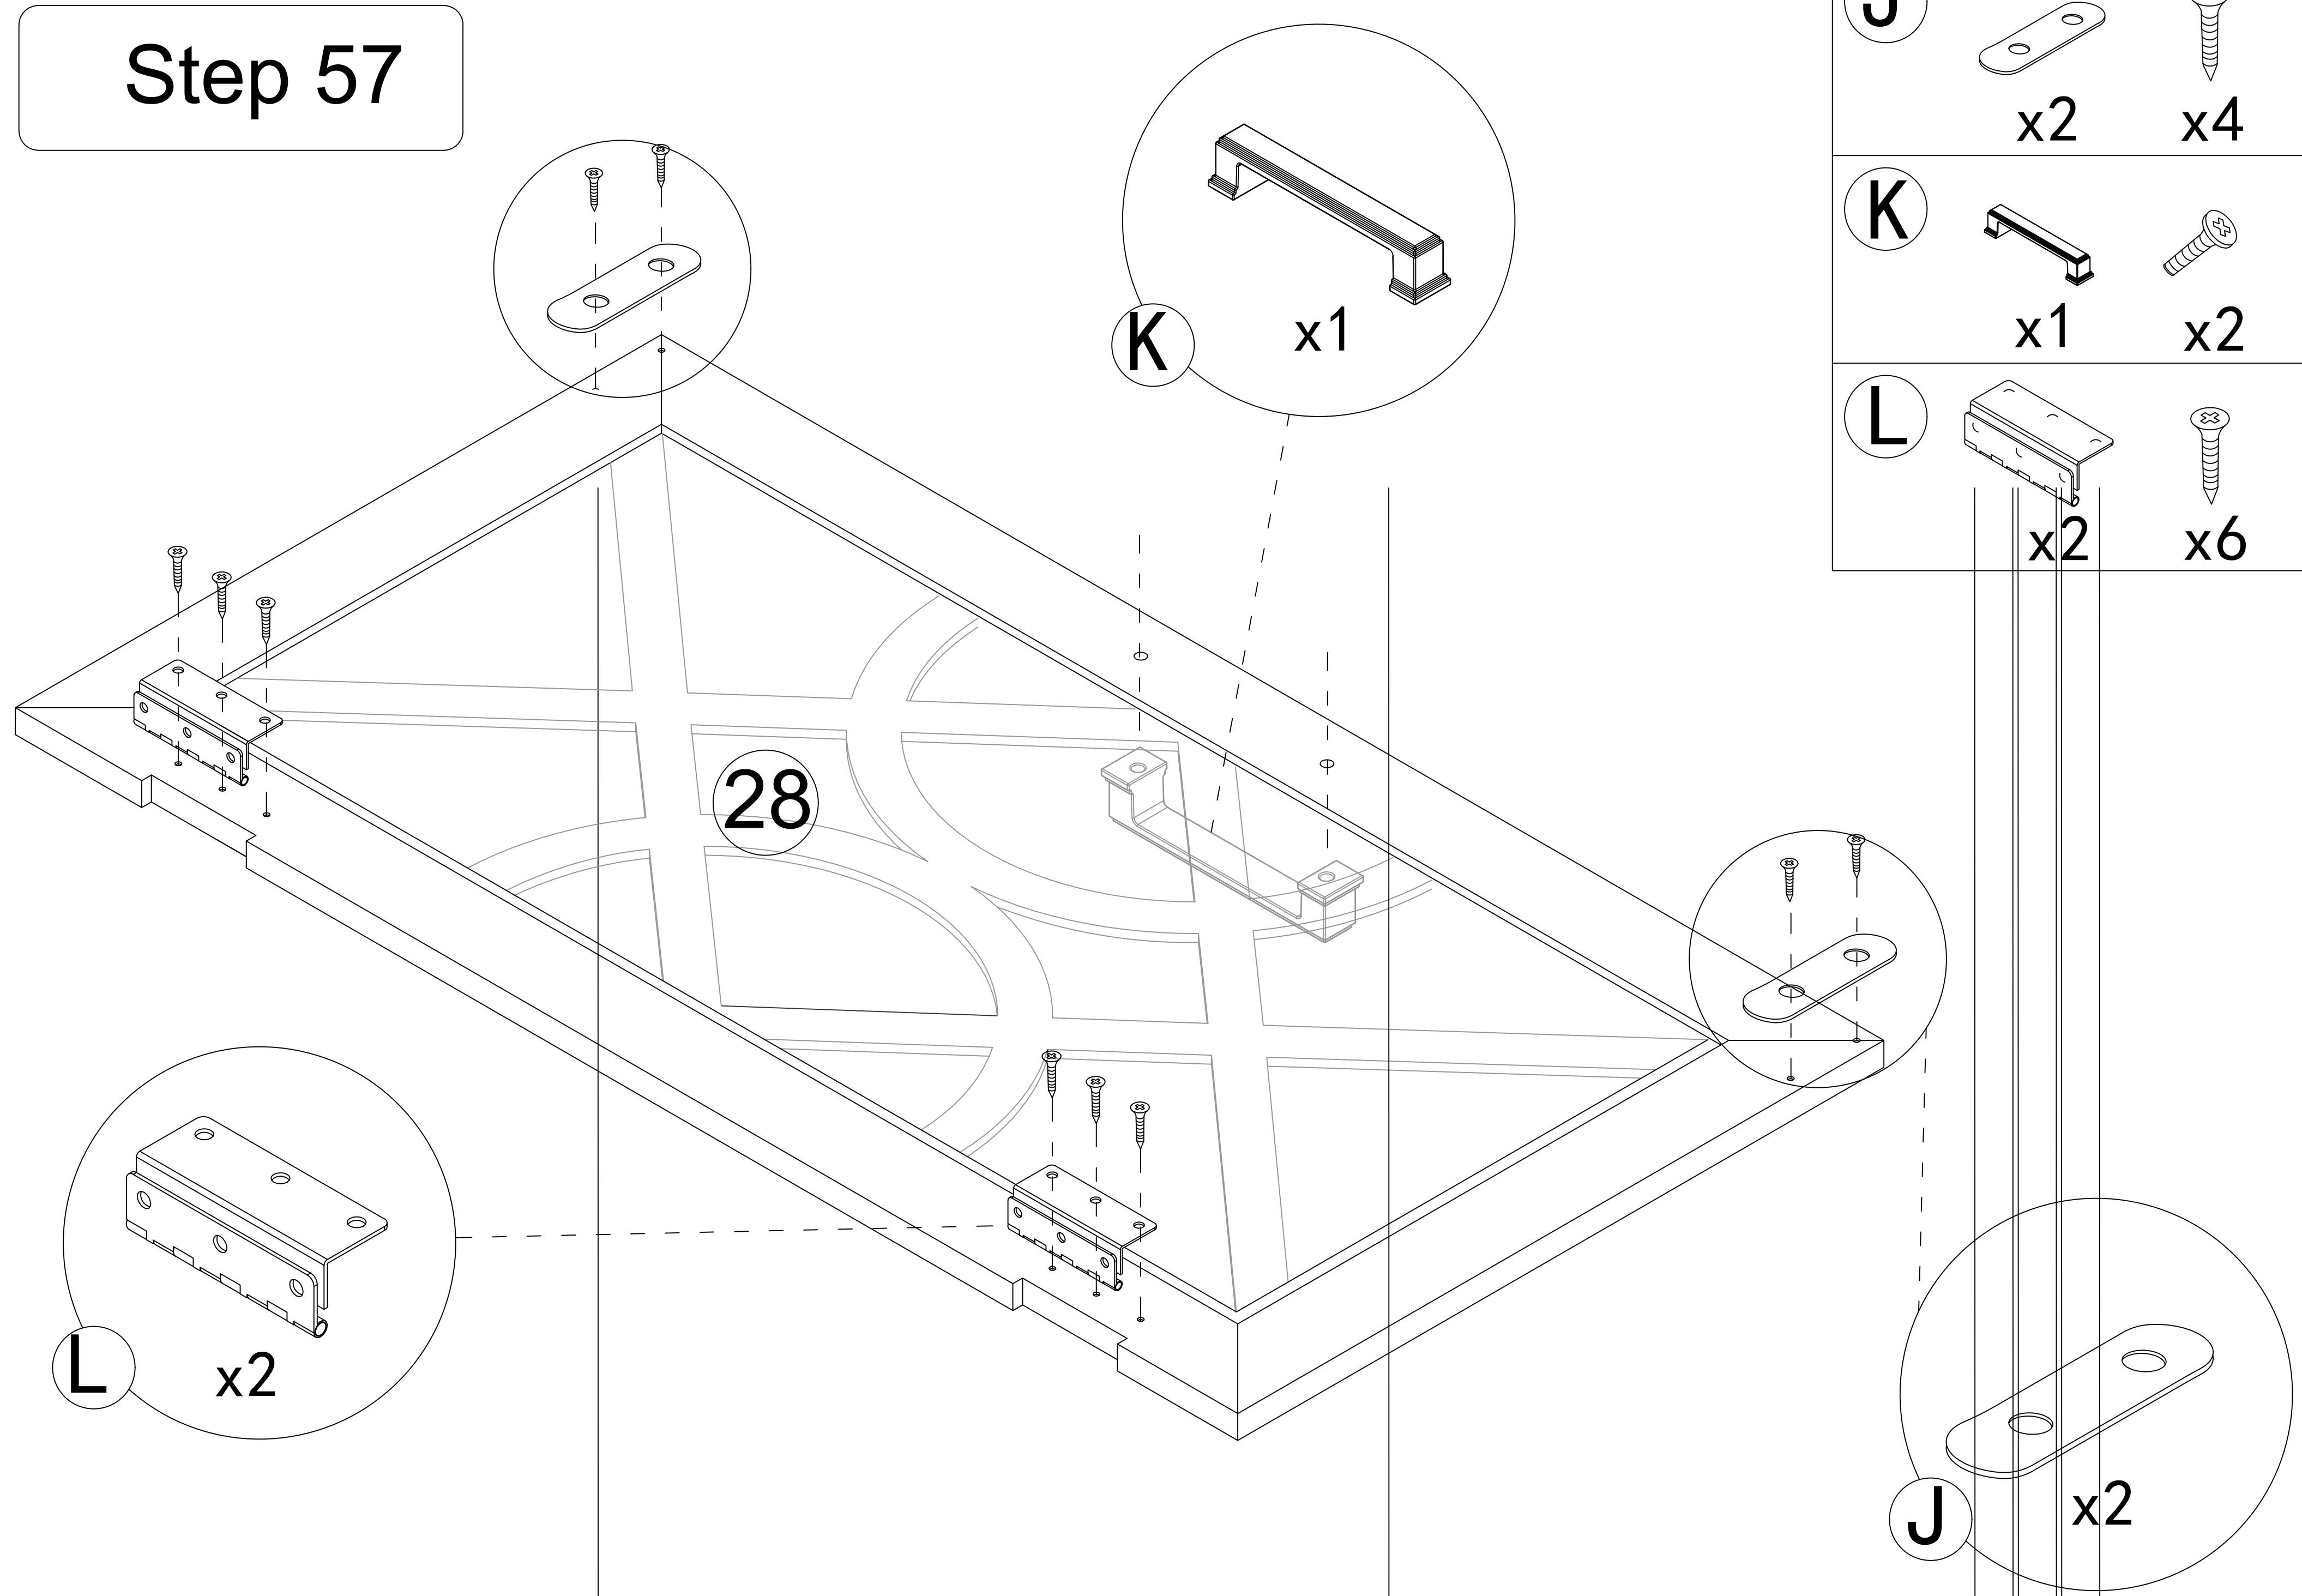


Step 58

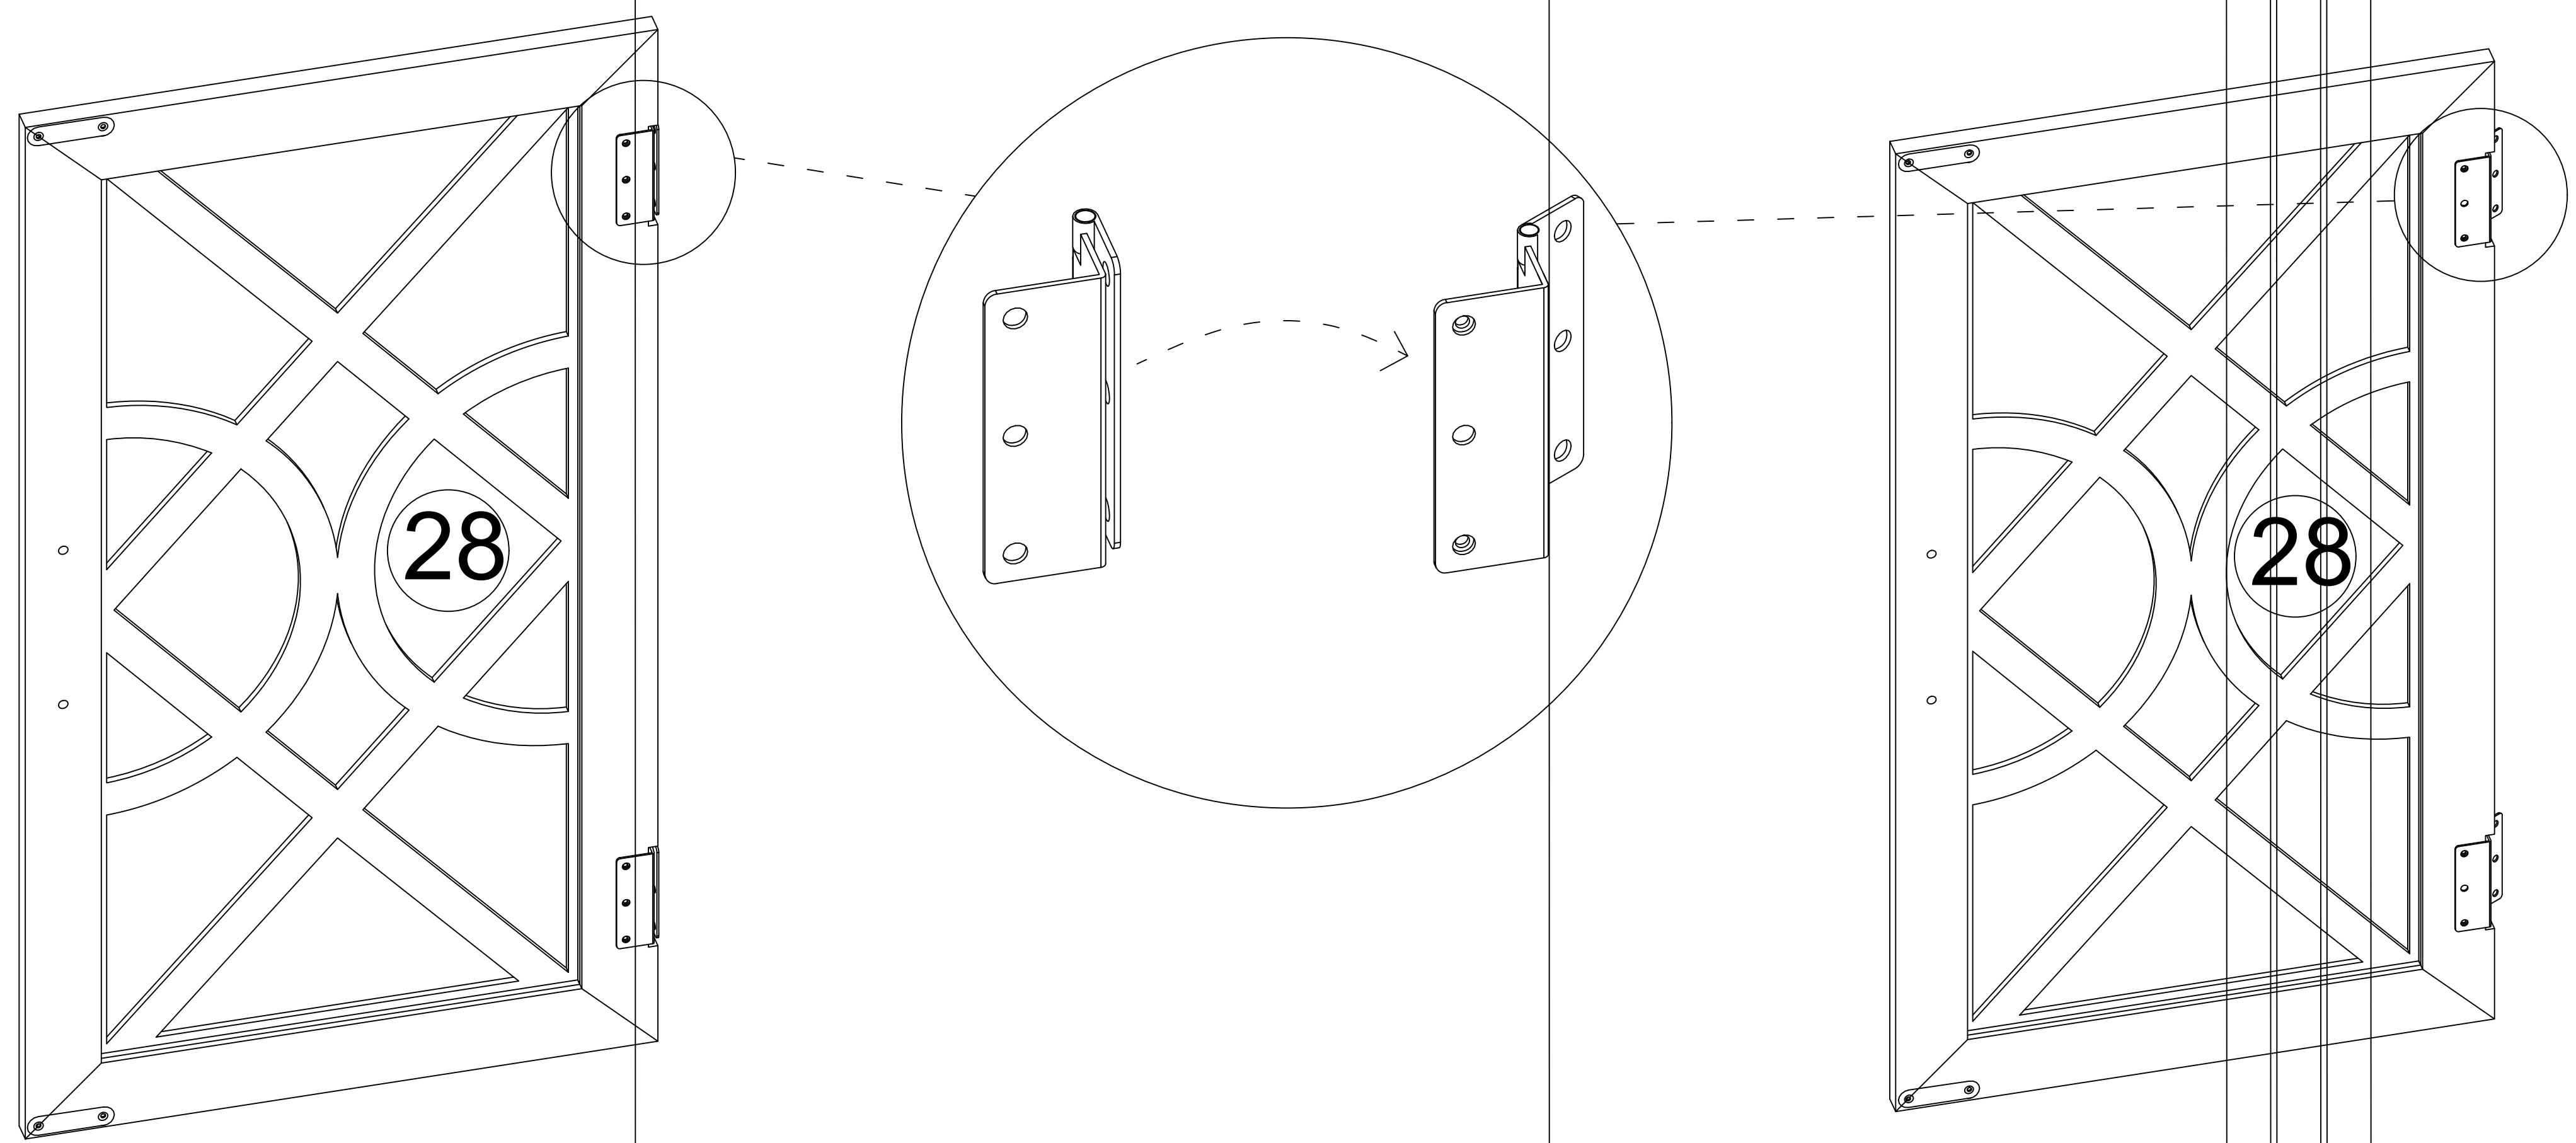


Make the hinge look like the one shown on the right

Step 59


L




x6

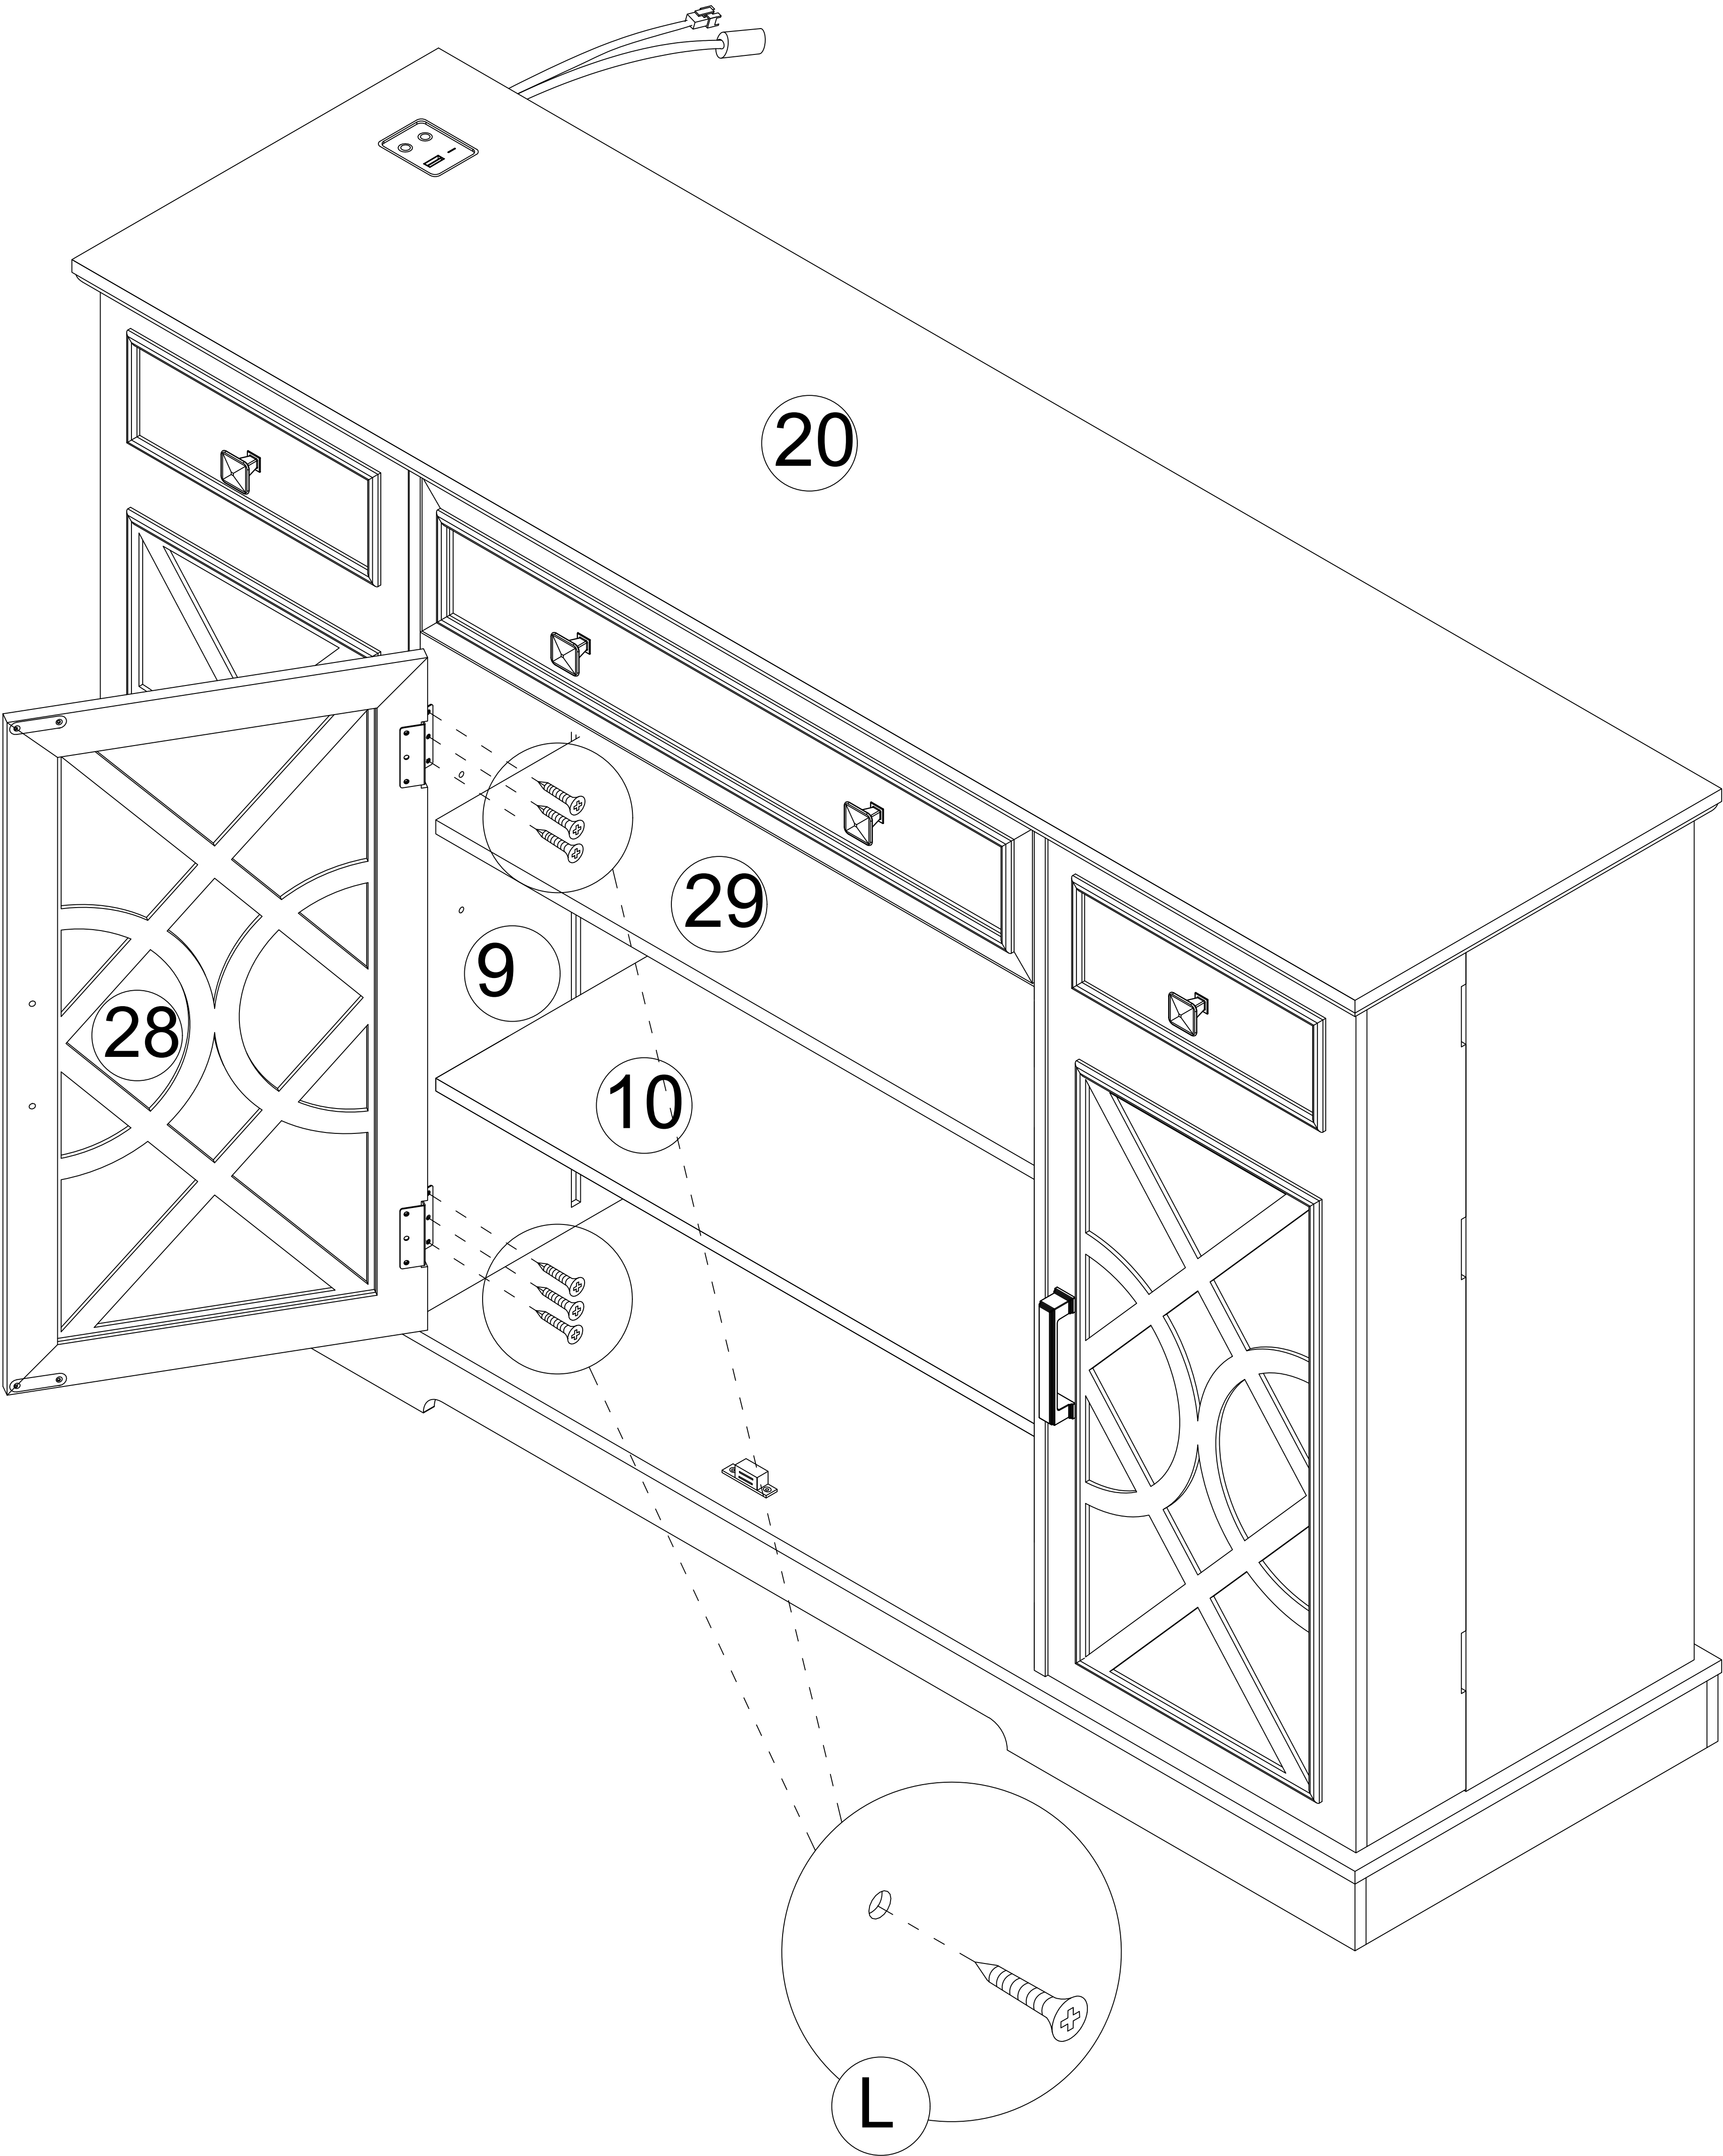

Step 60

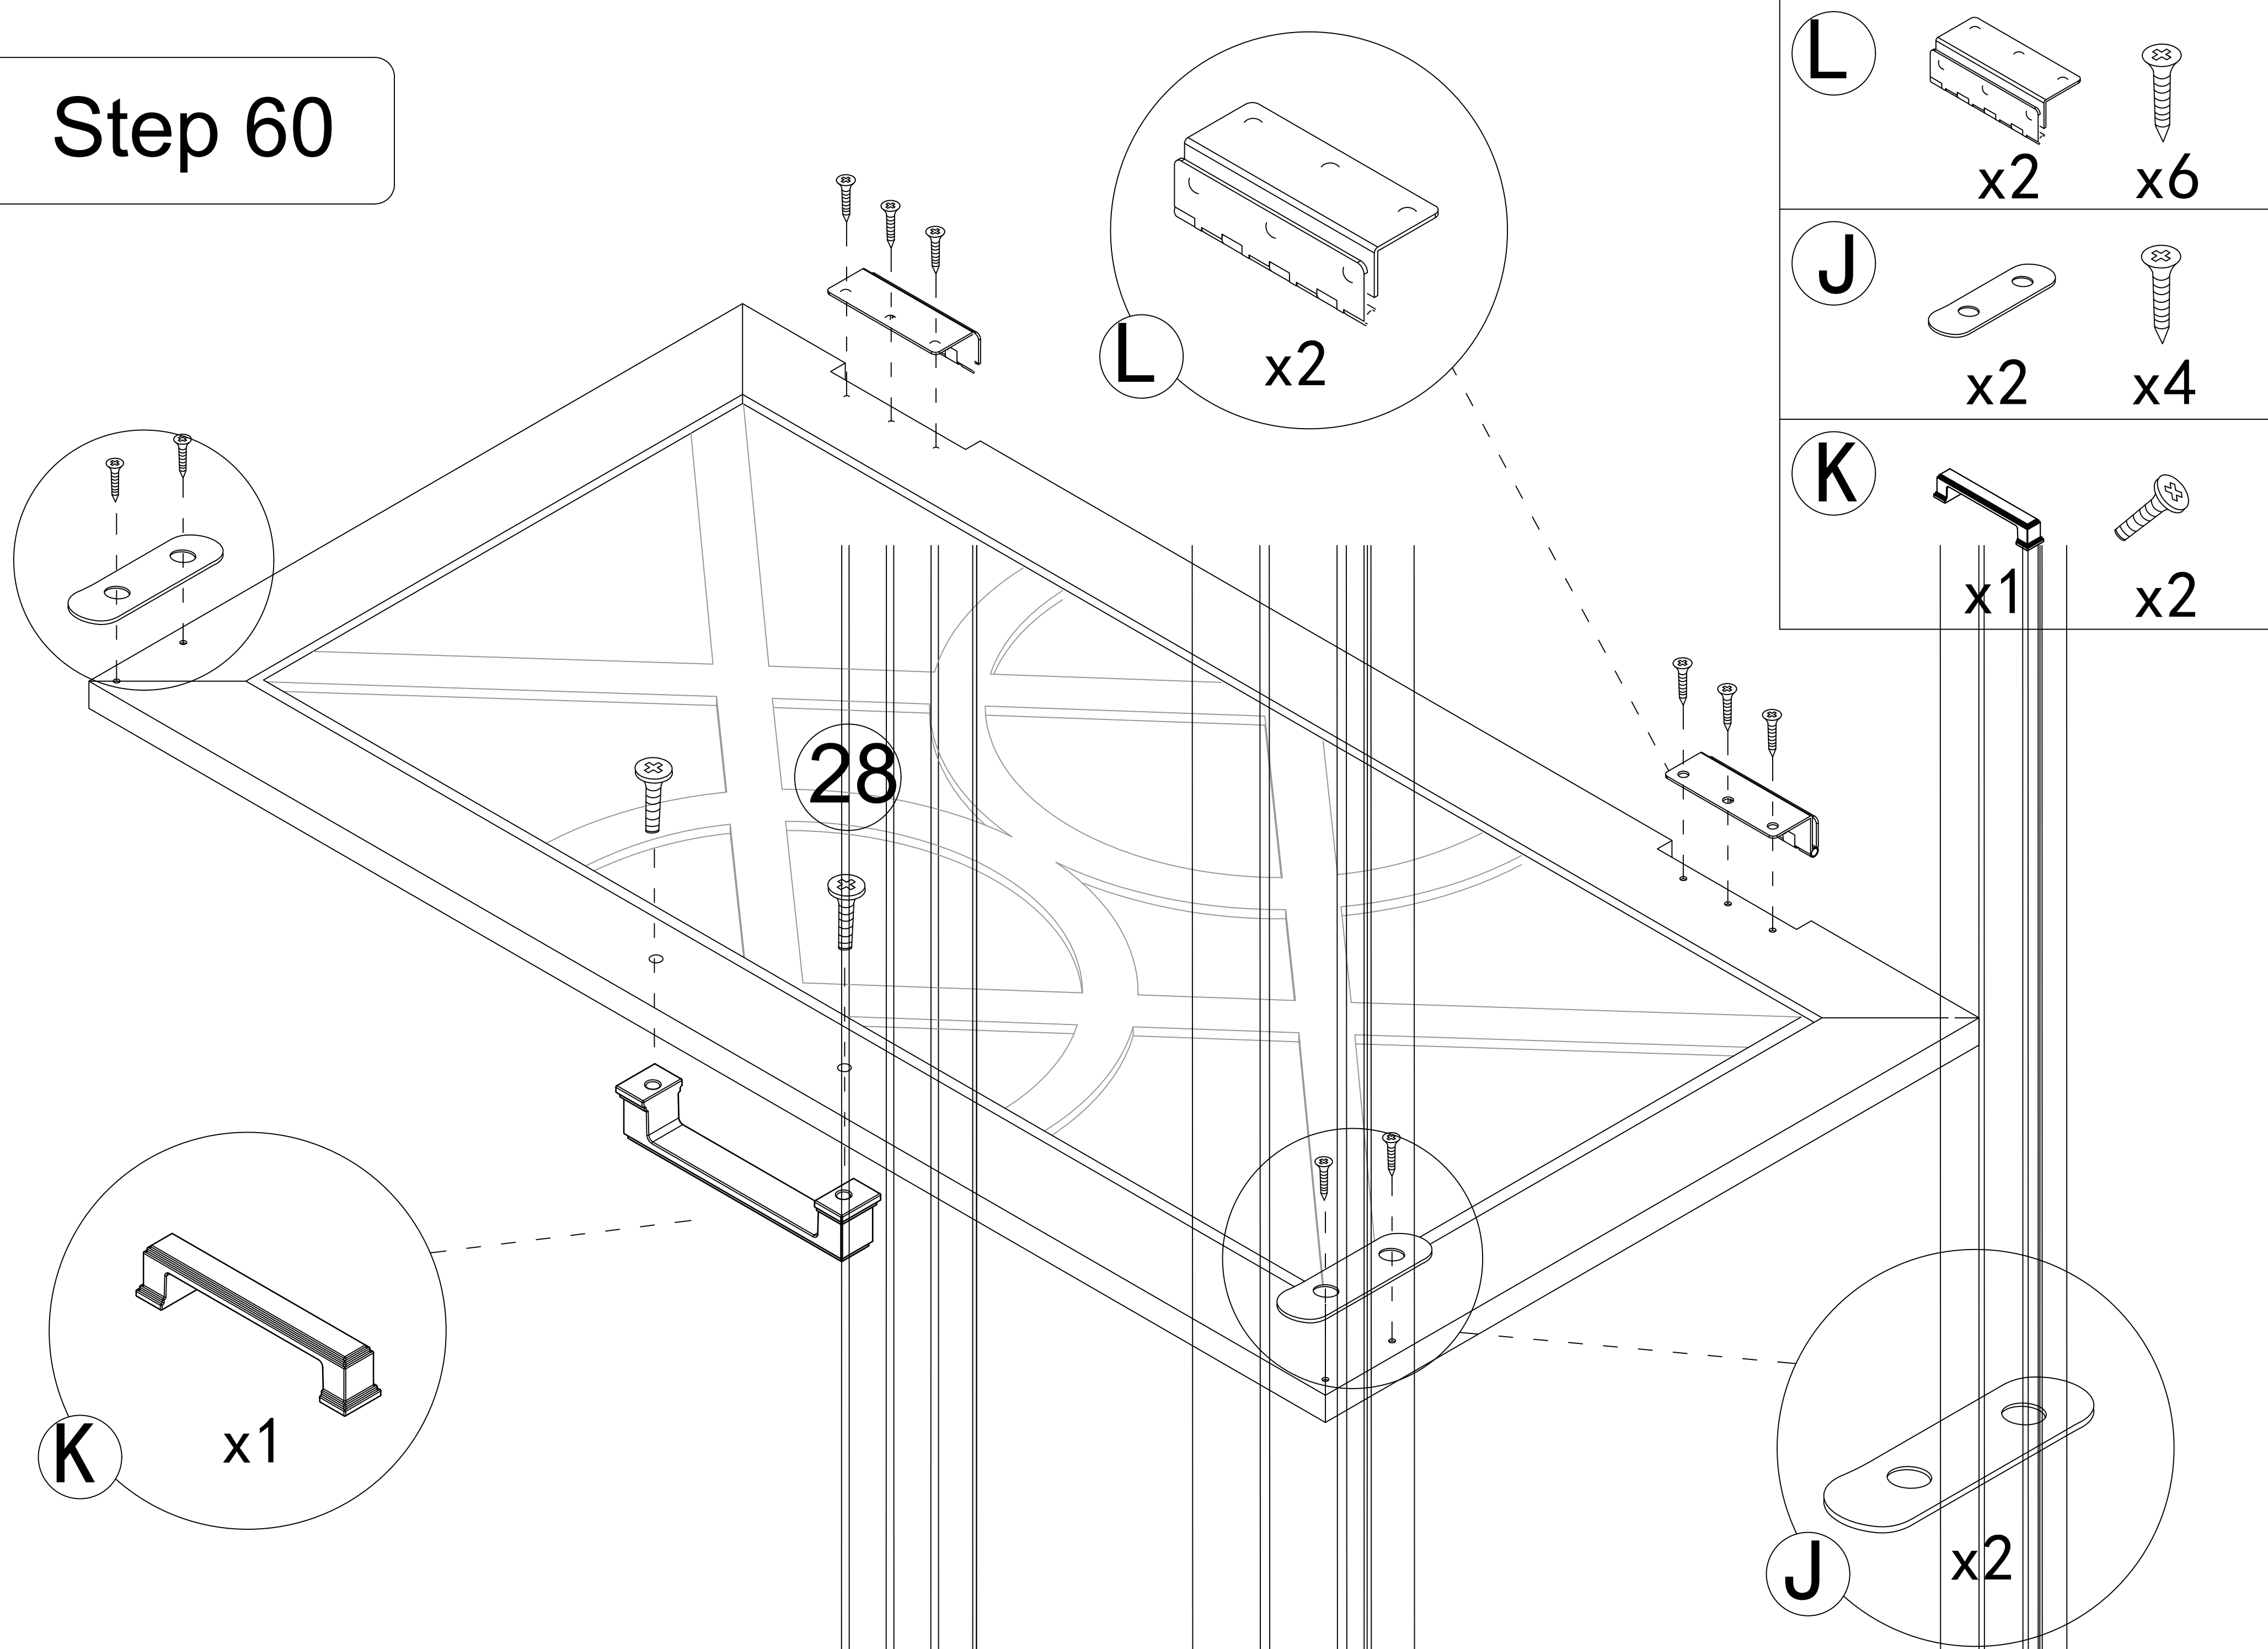


Step 61

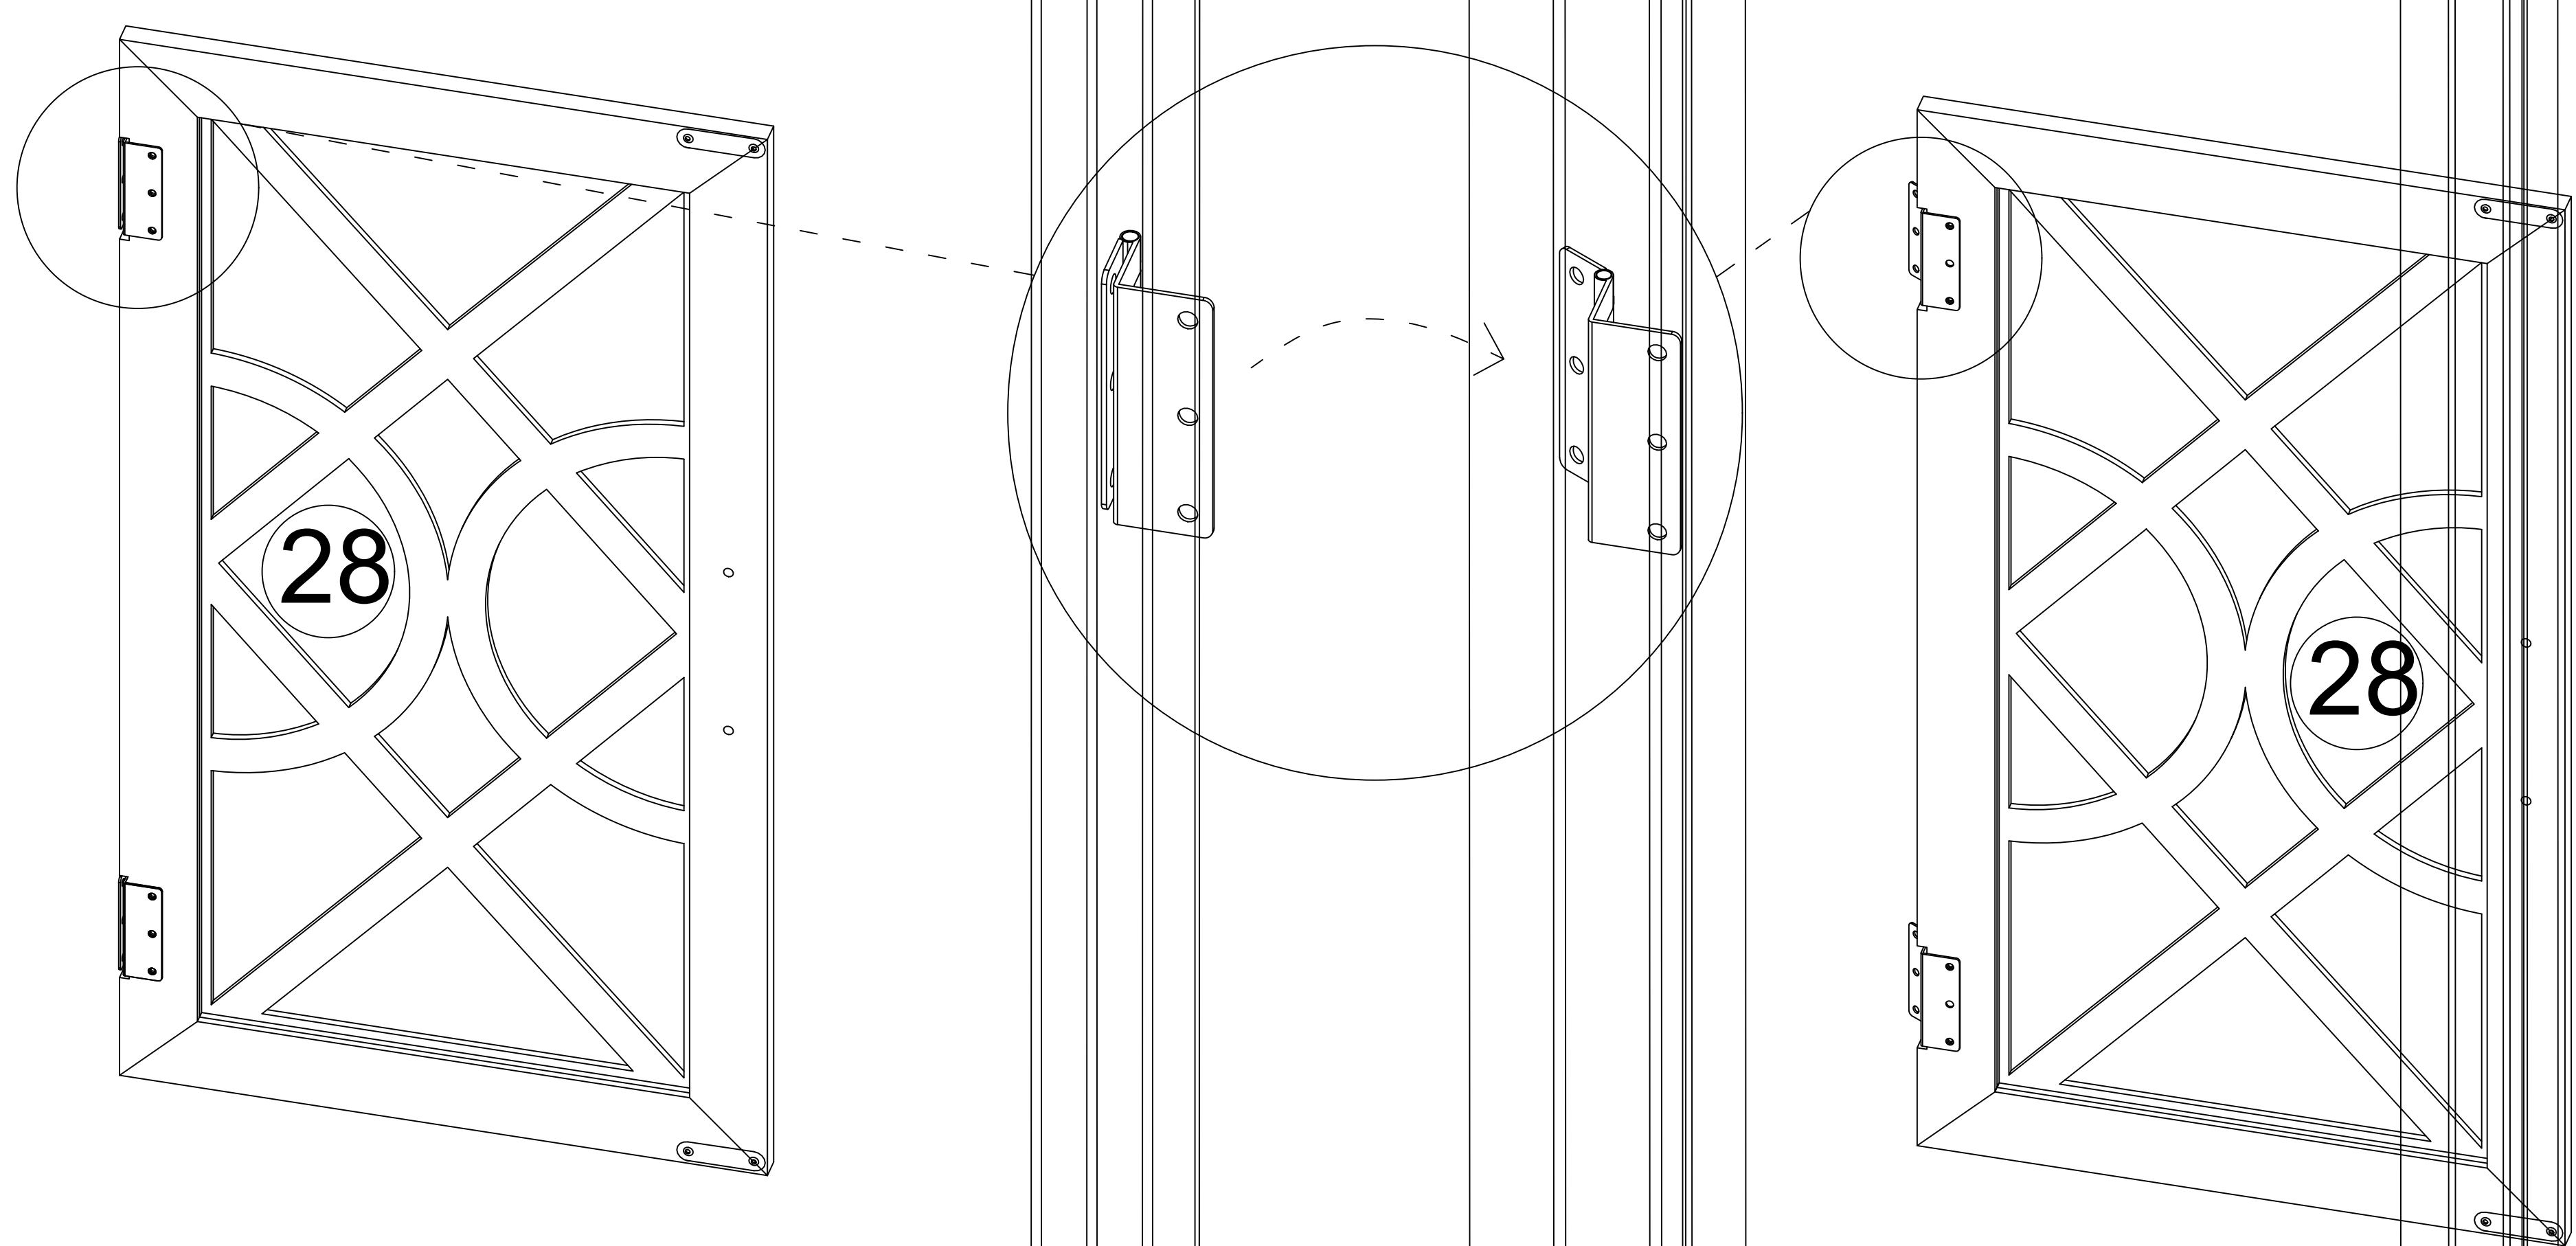


Make the hinge look like the one shown on the right

Step 62

L






x6

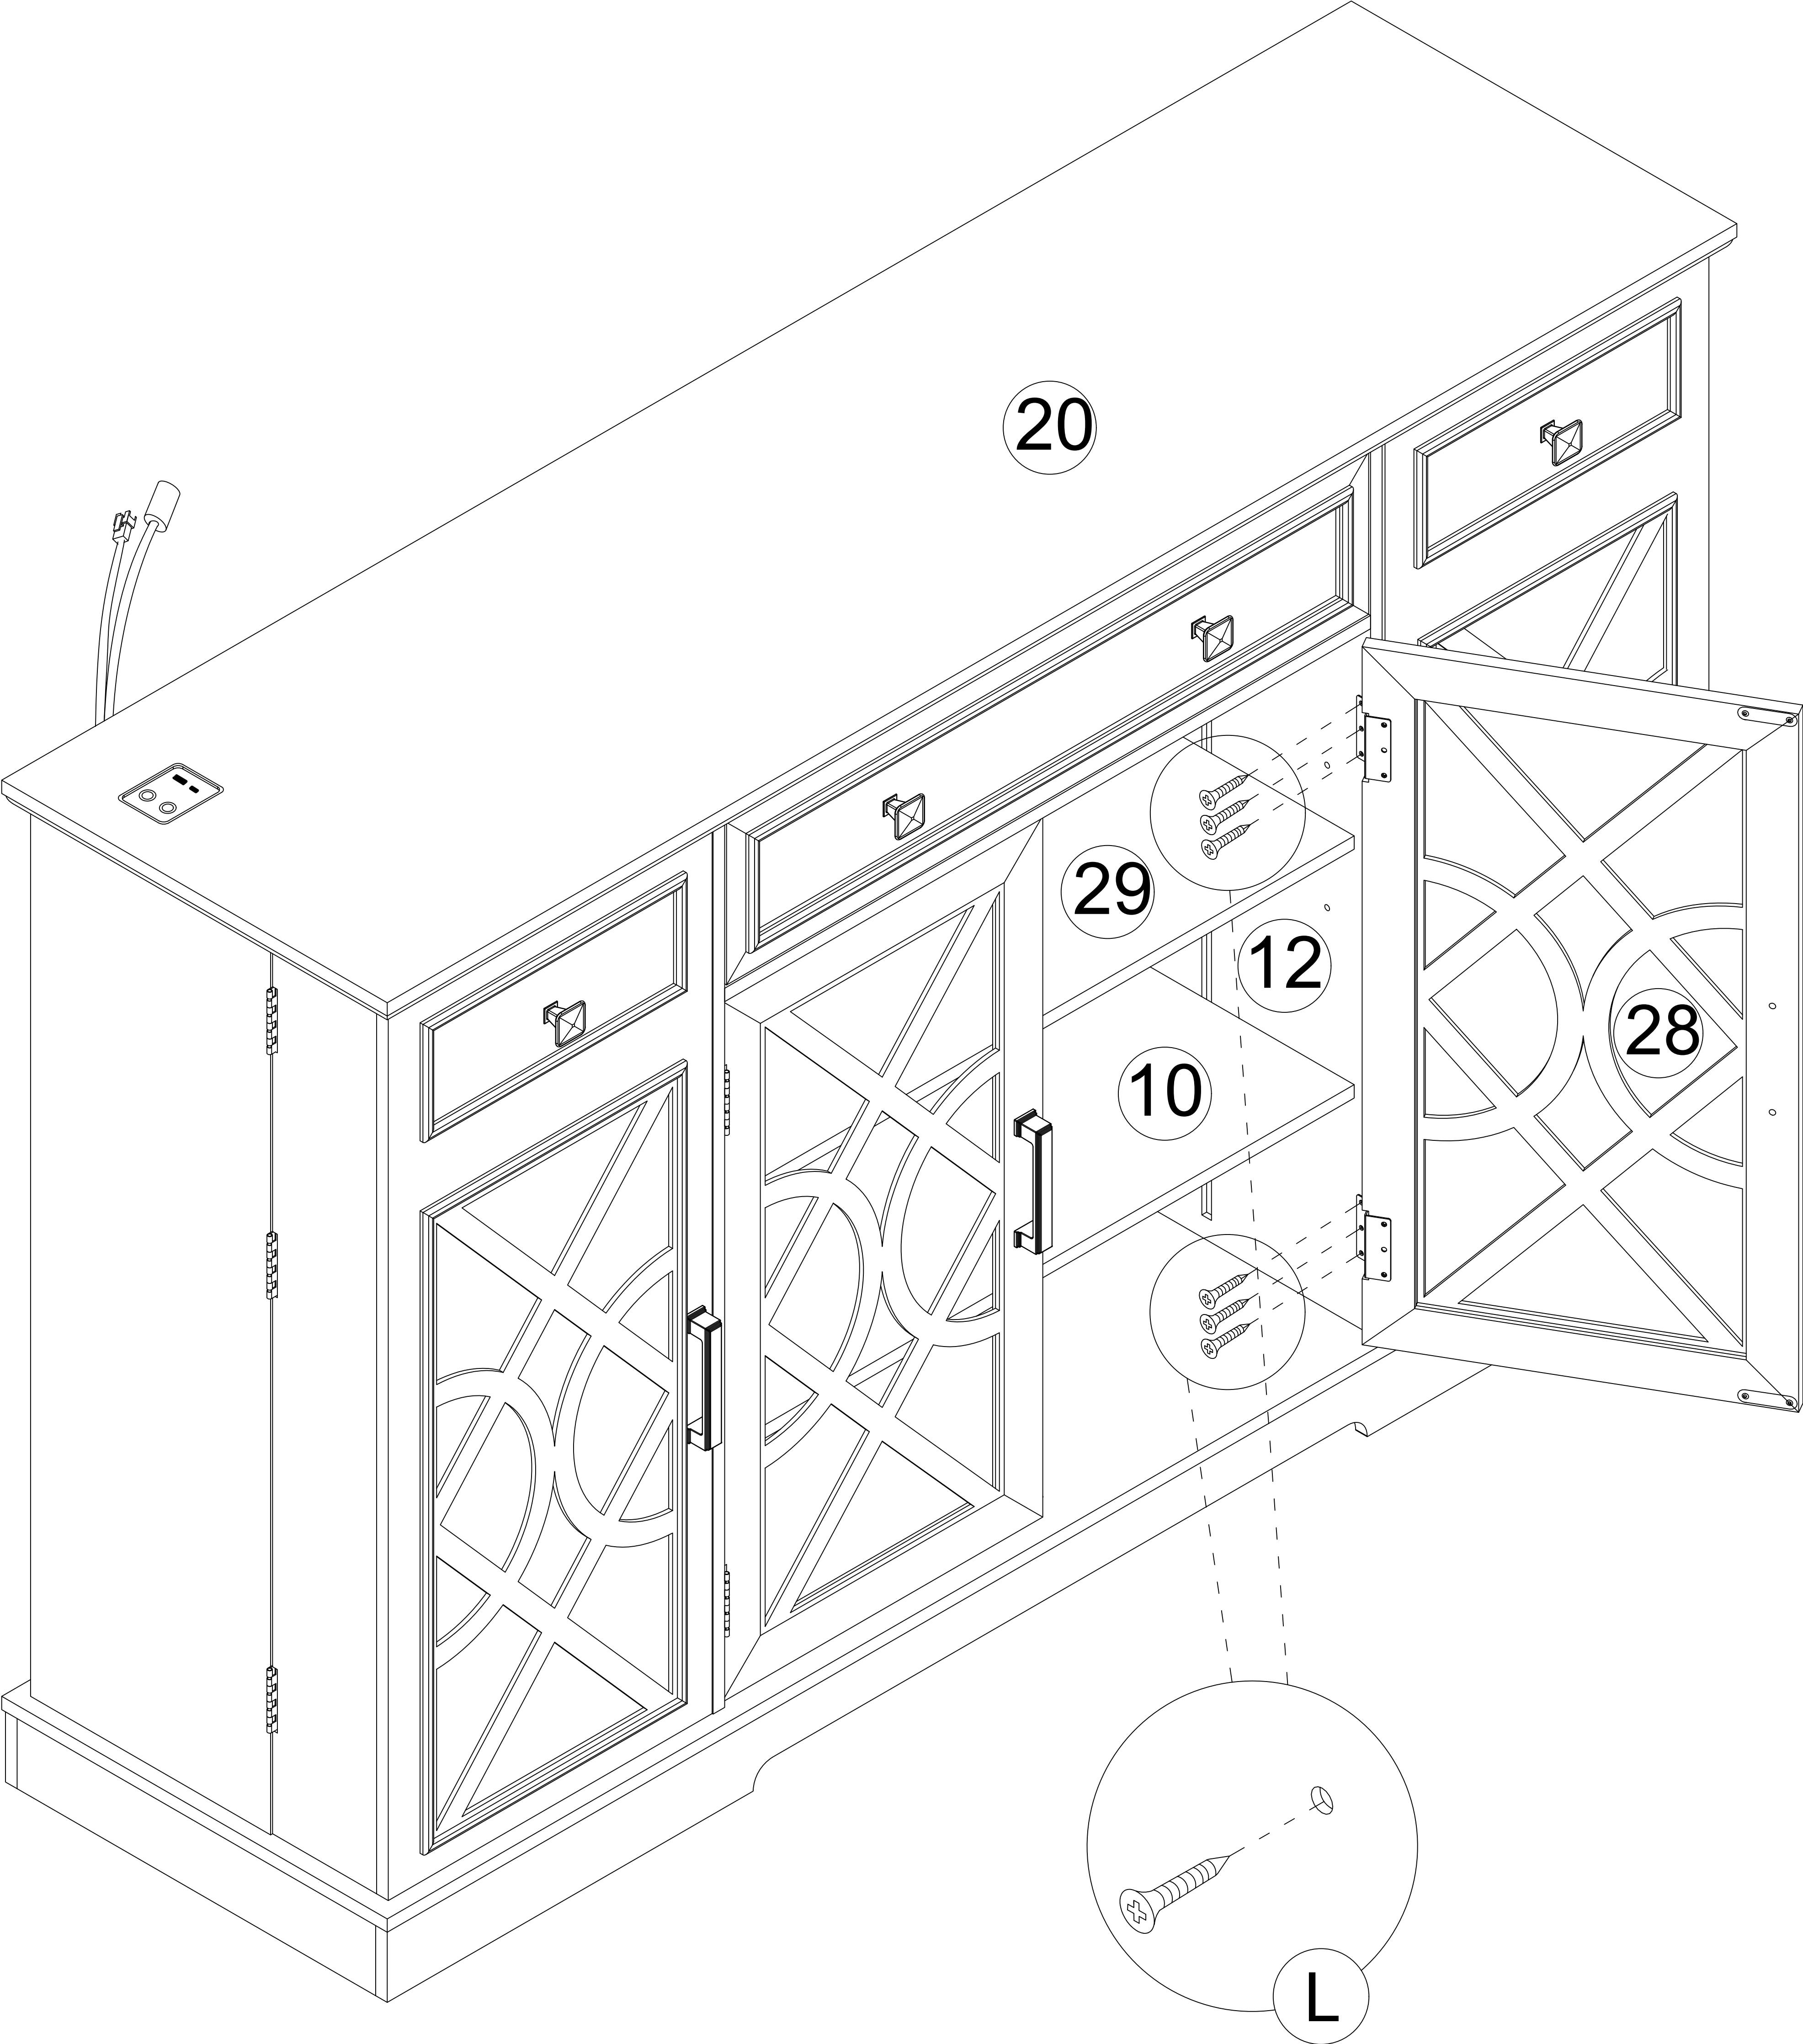

Step 63


M

x1

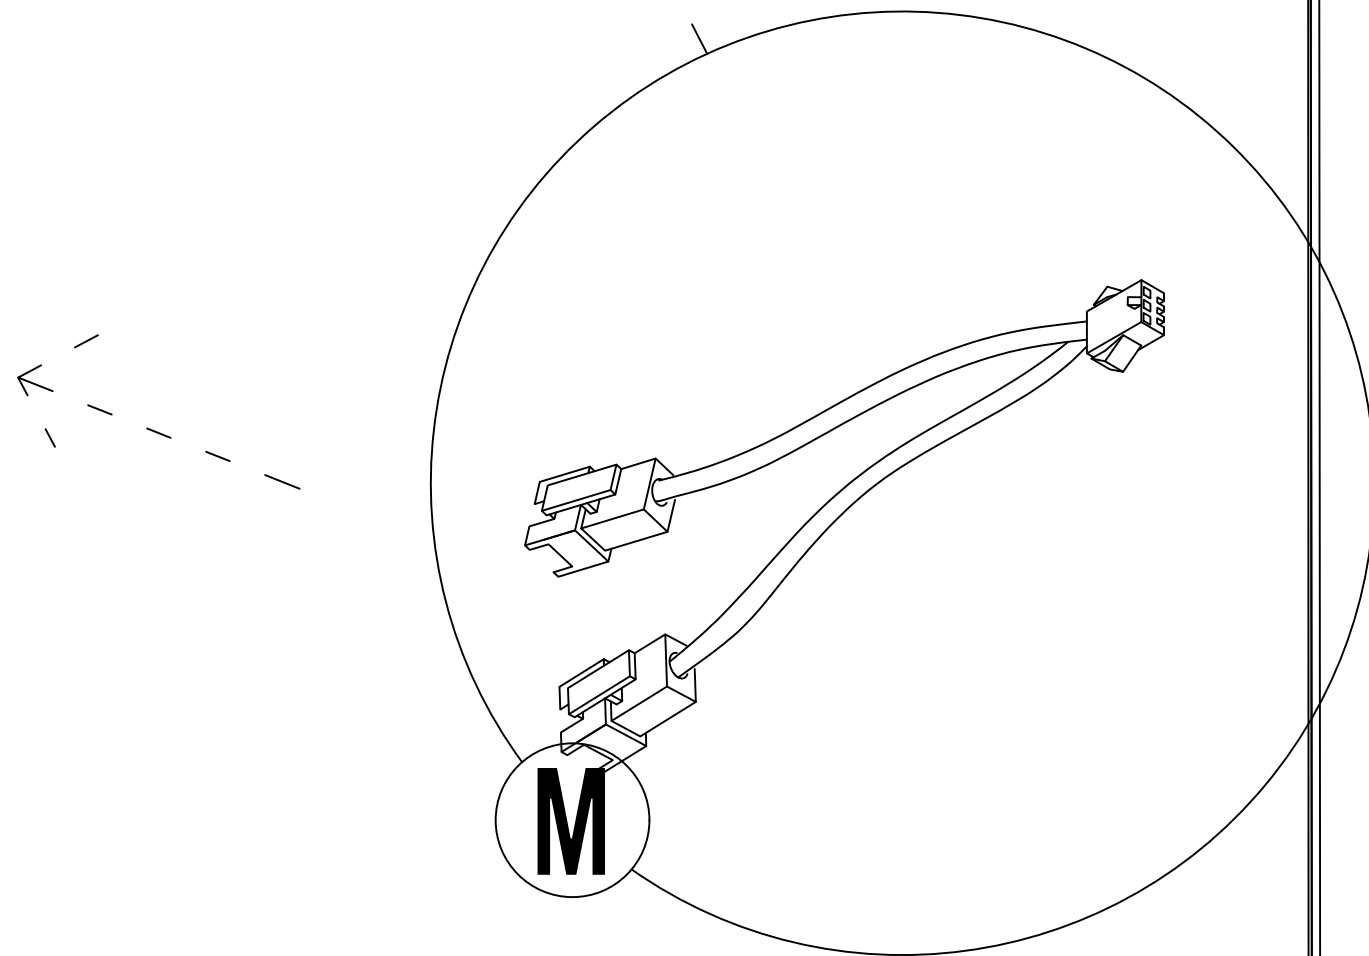
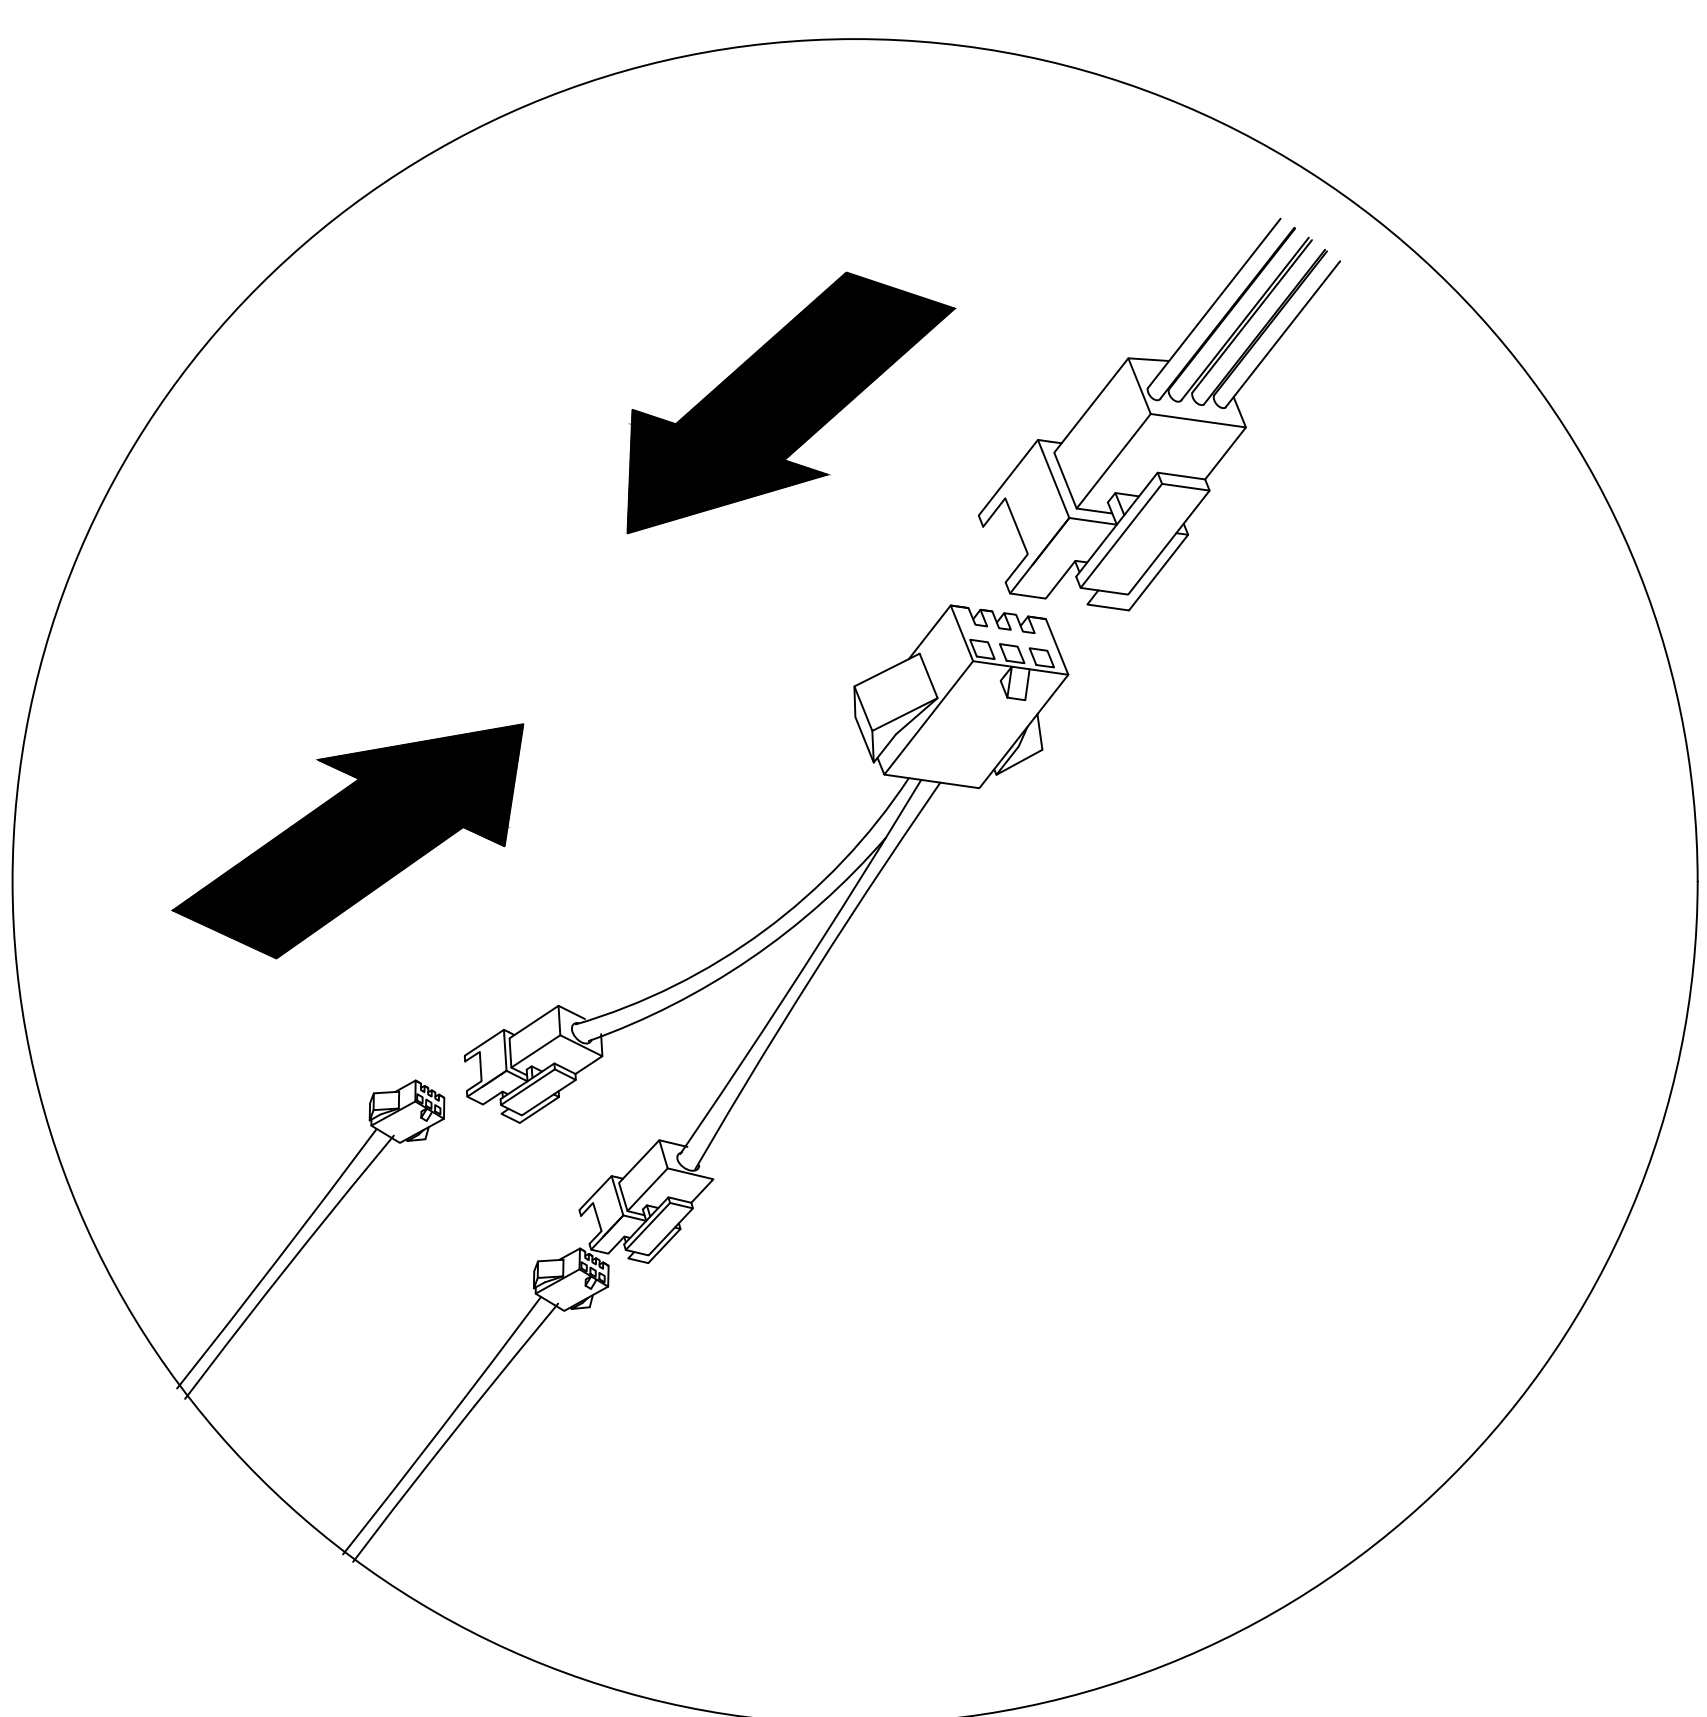
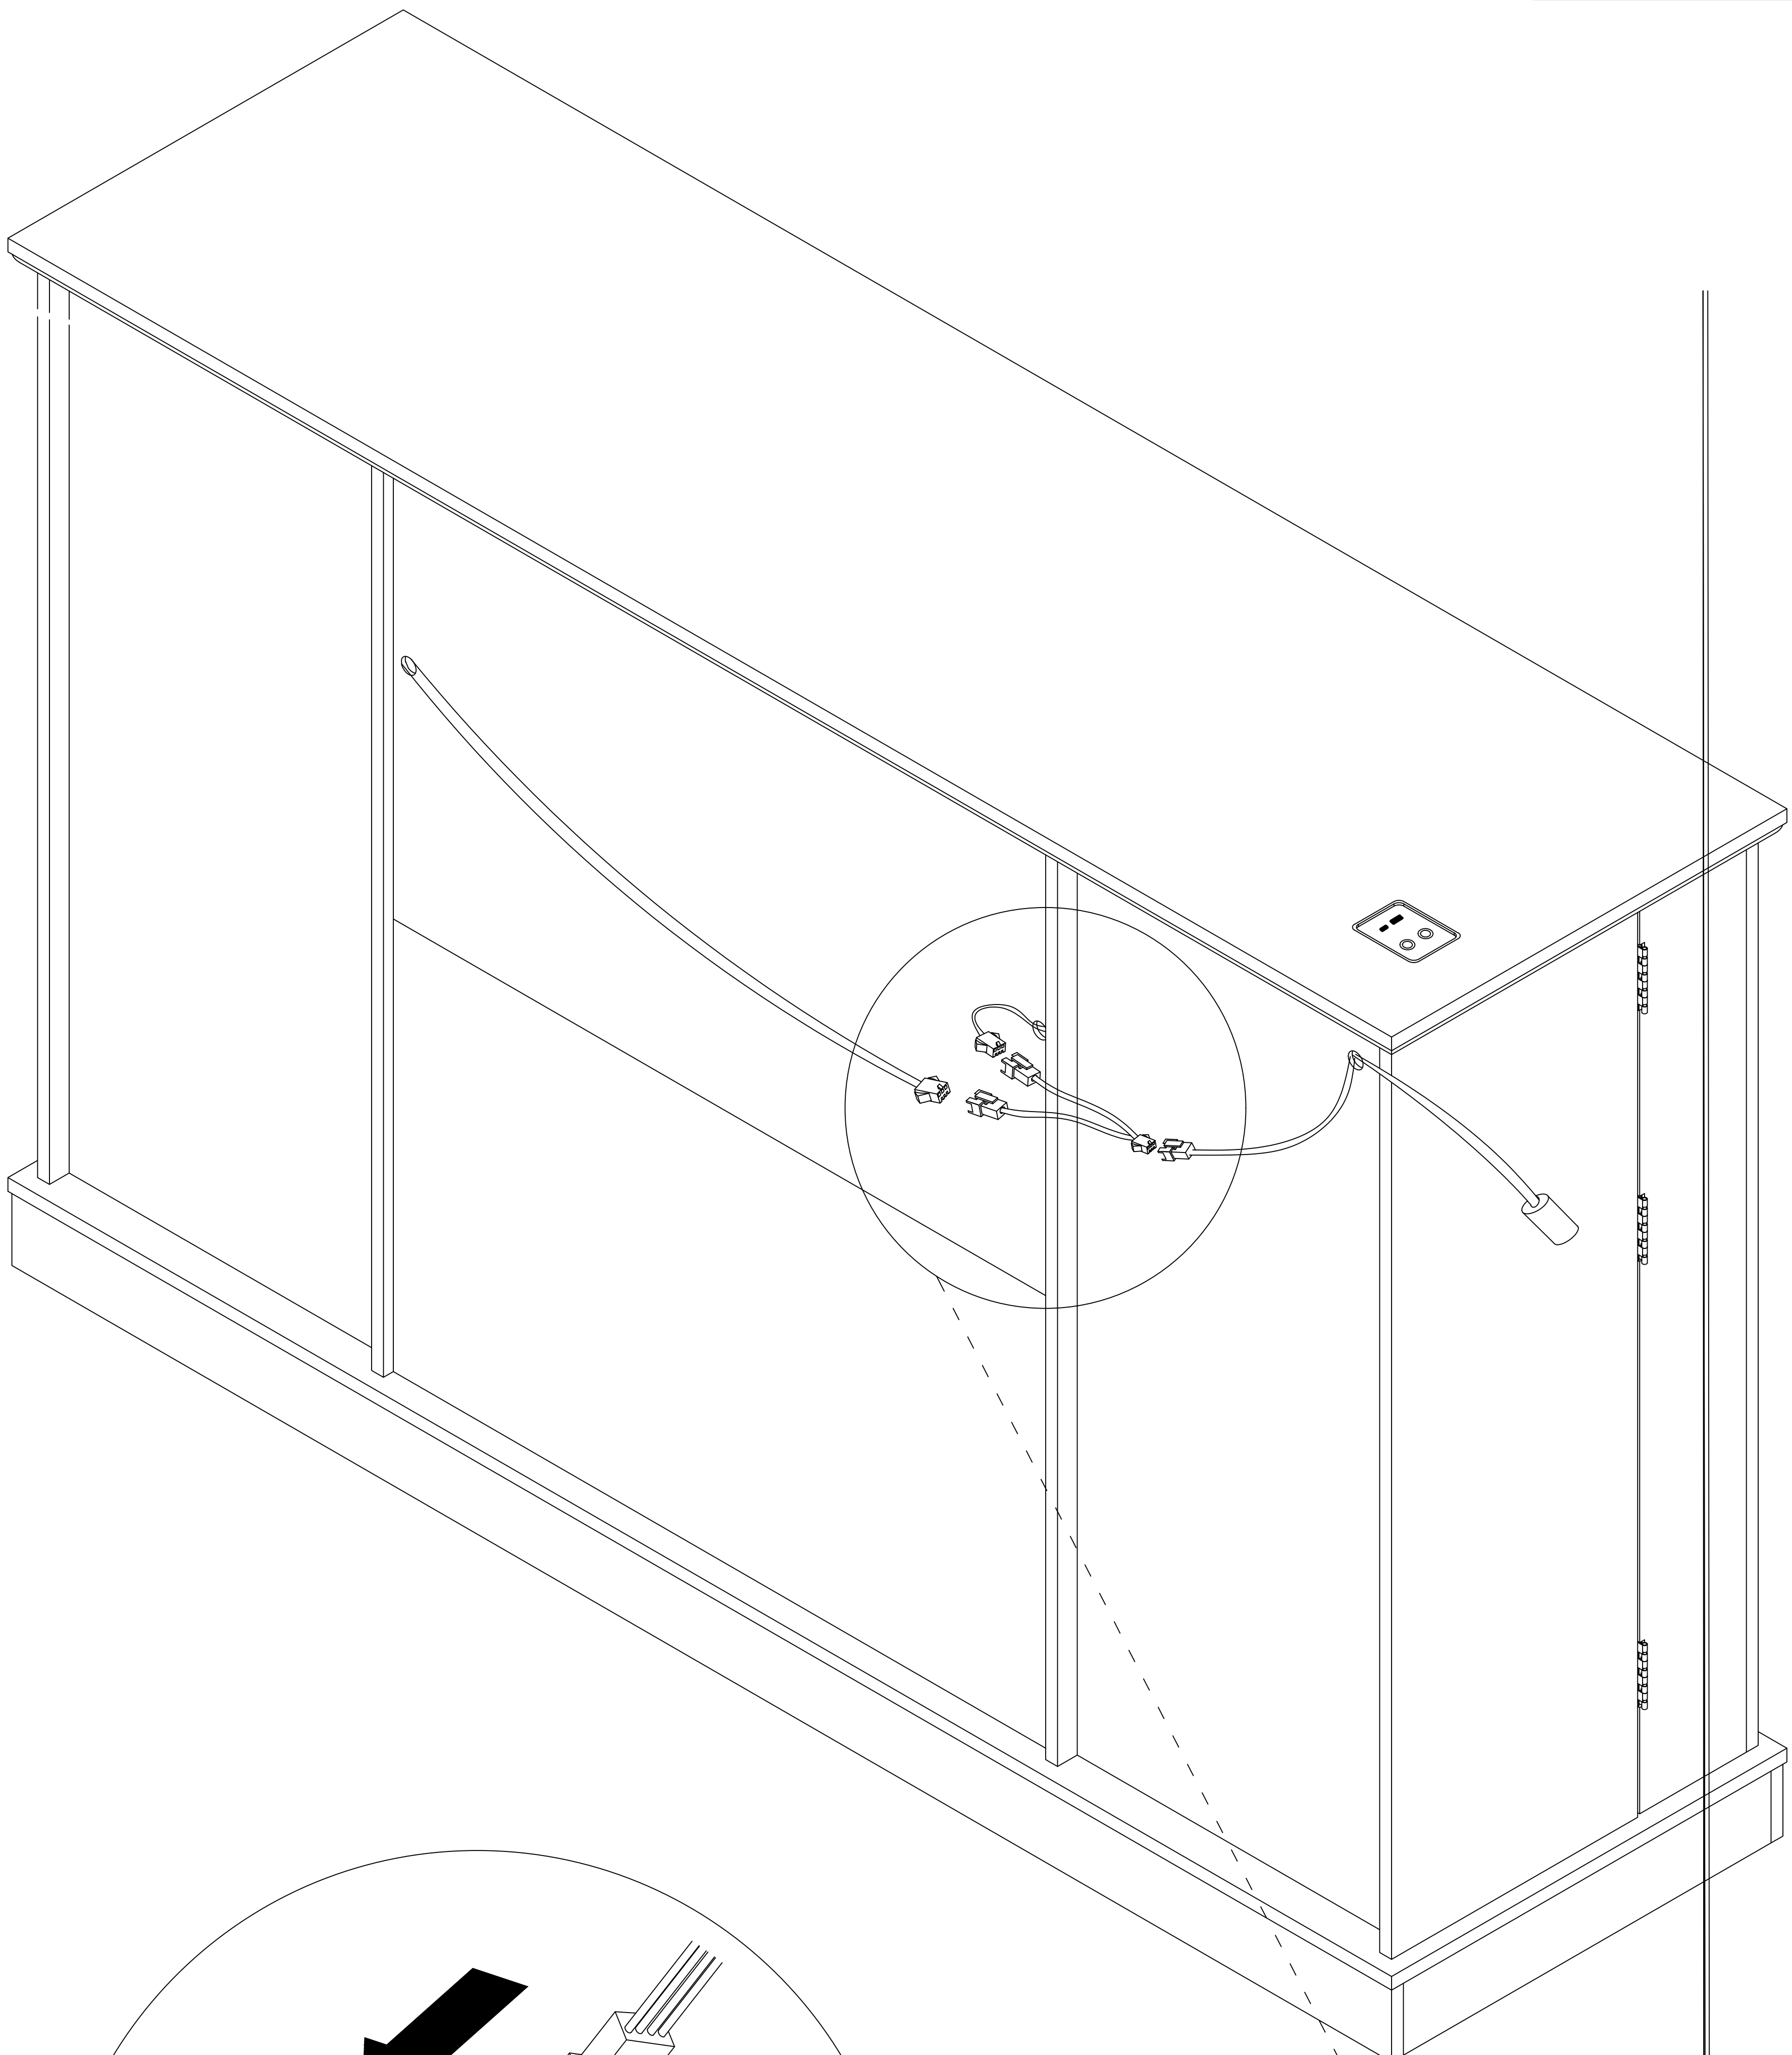


Step 64

N


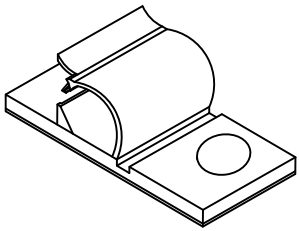


x3

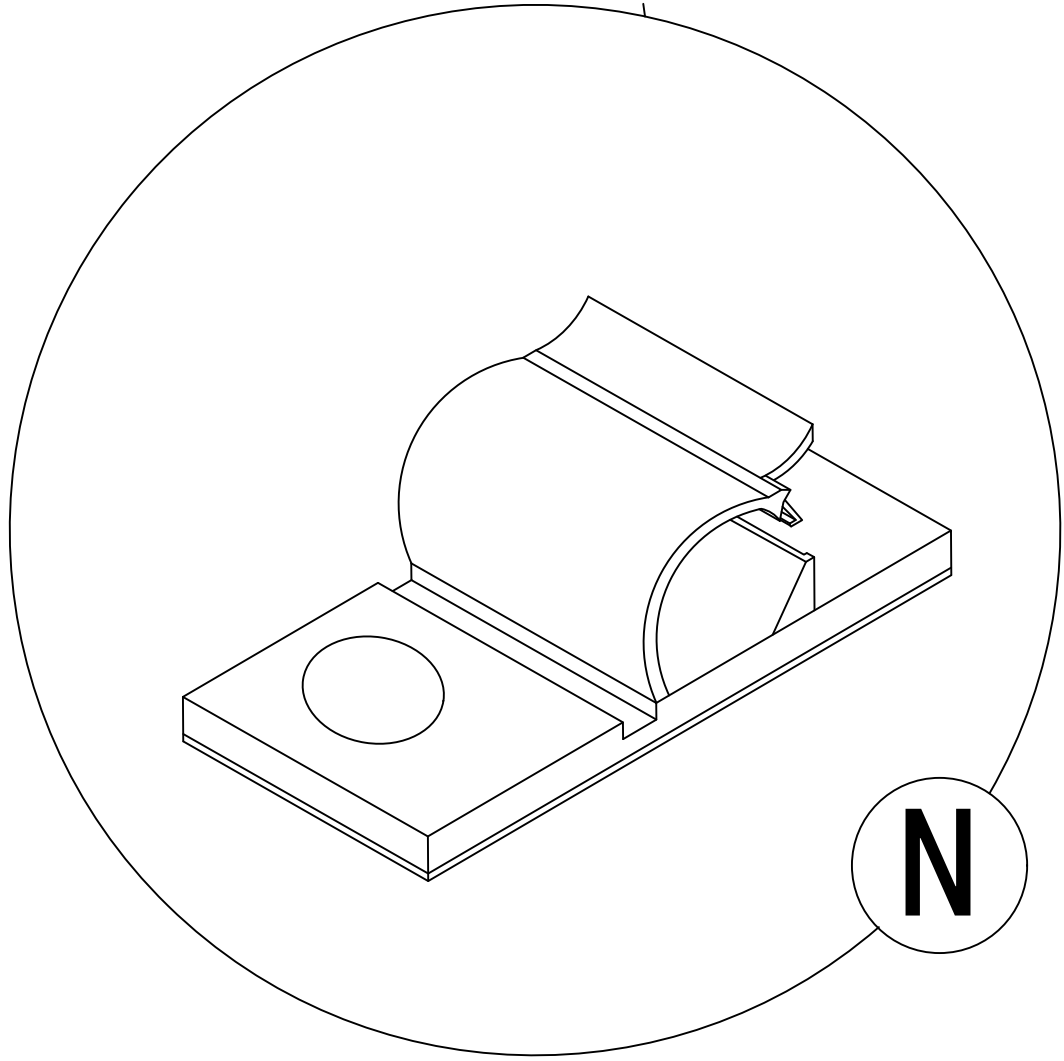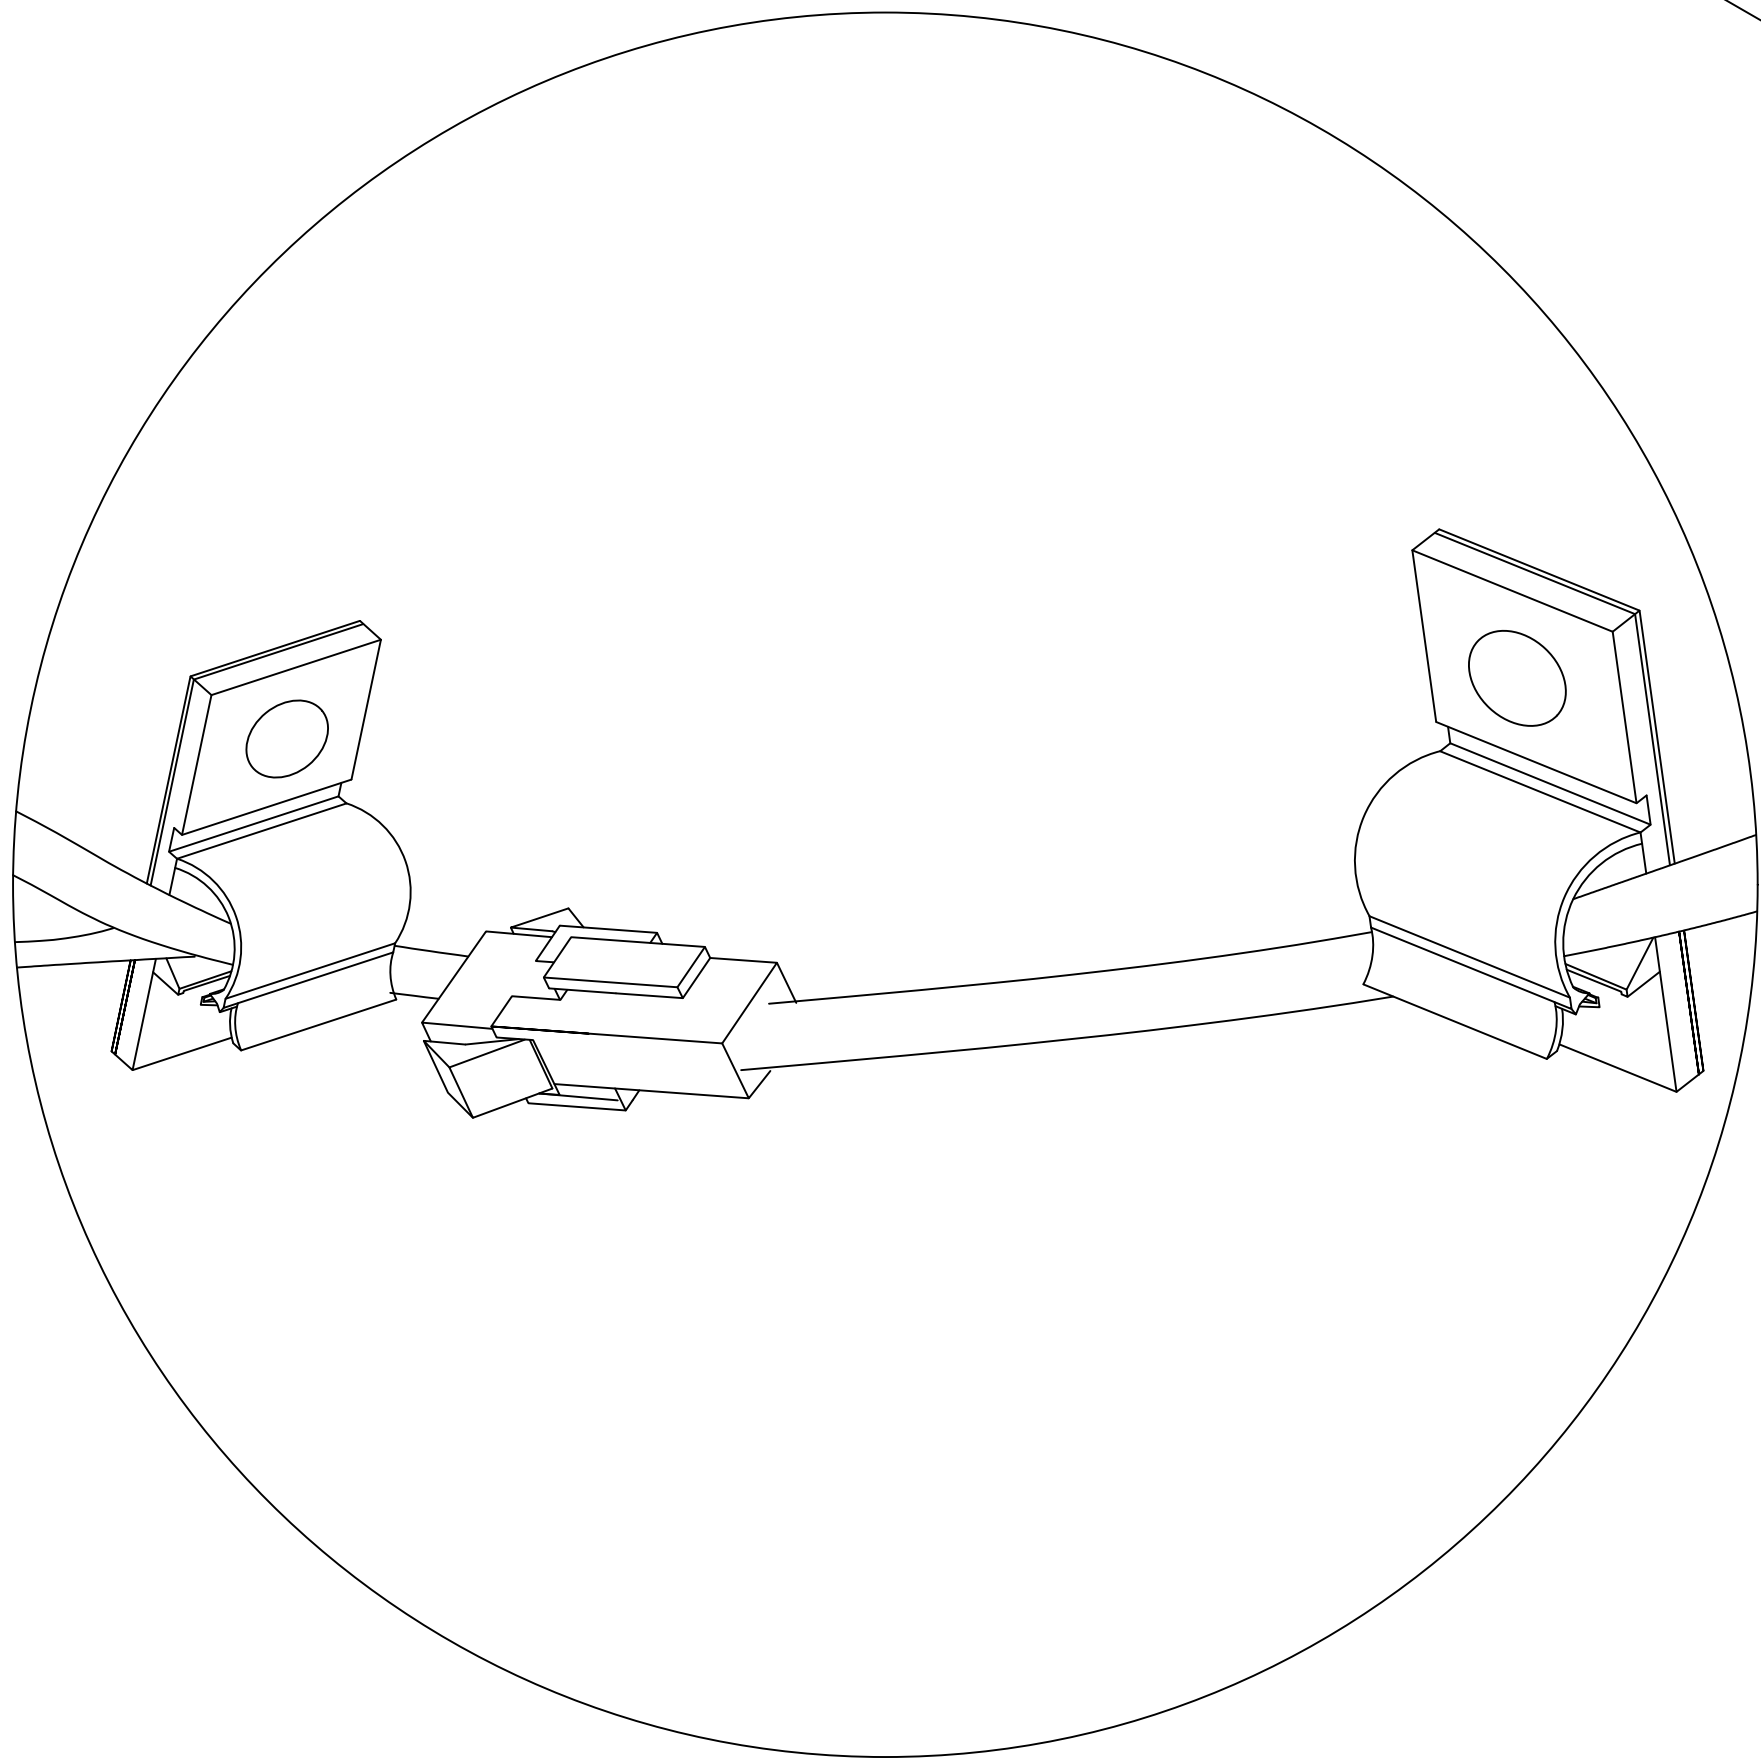
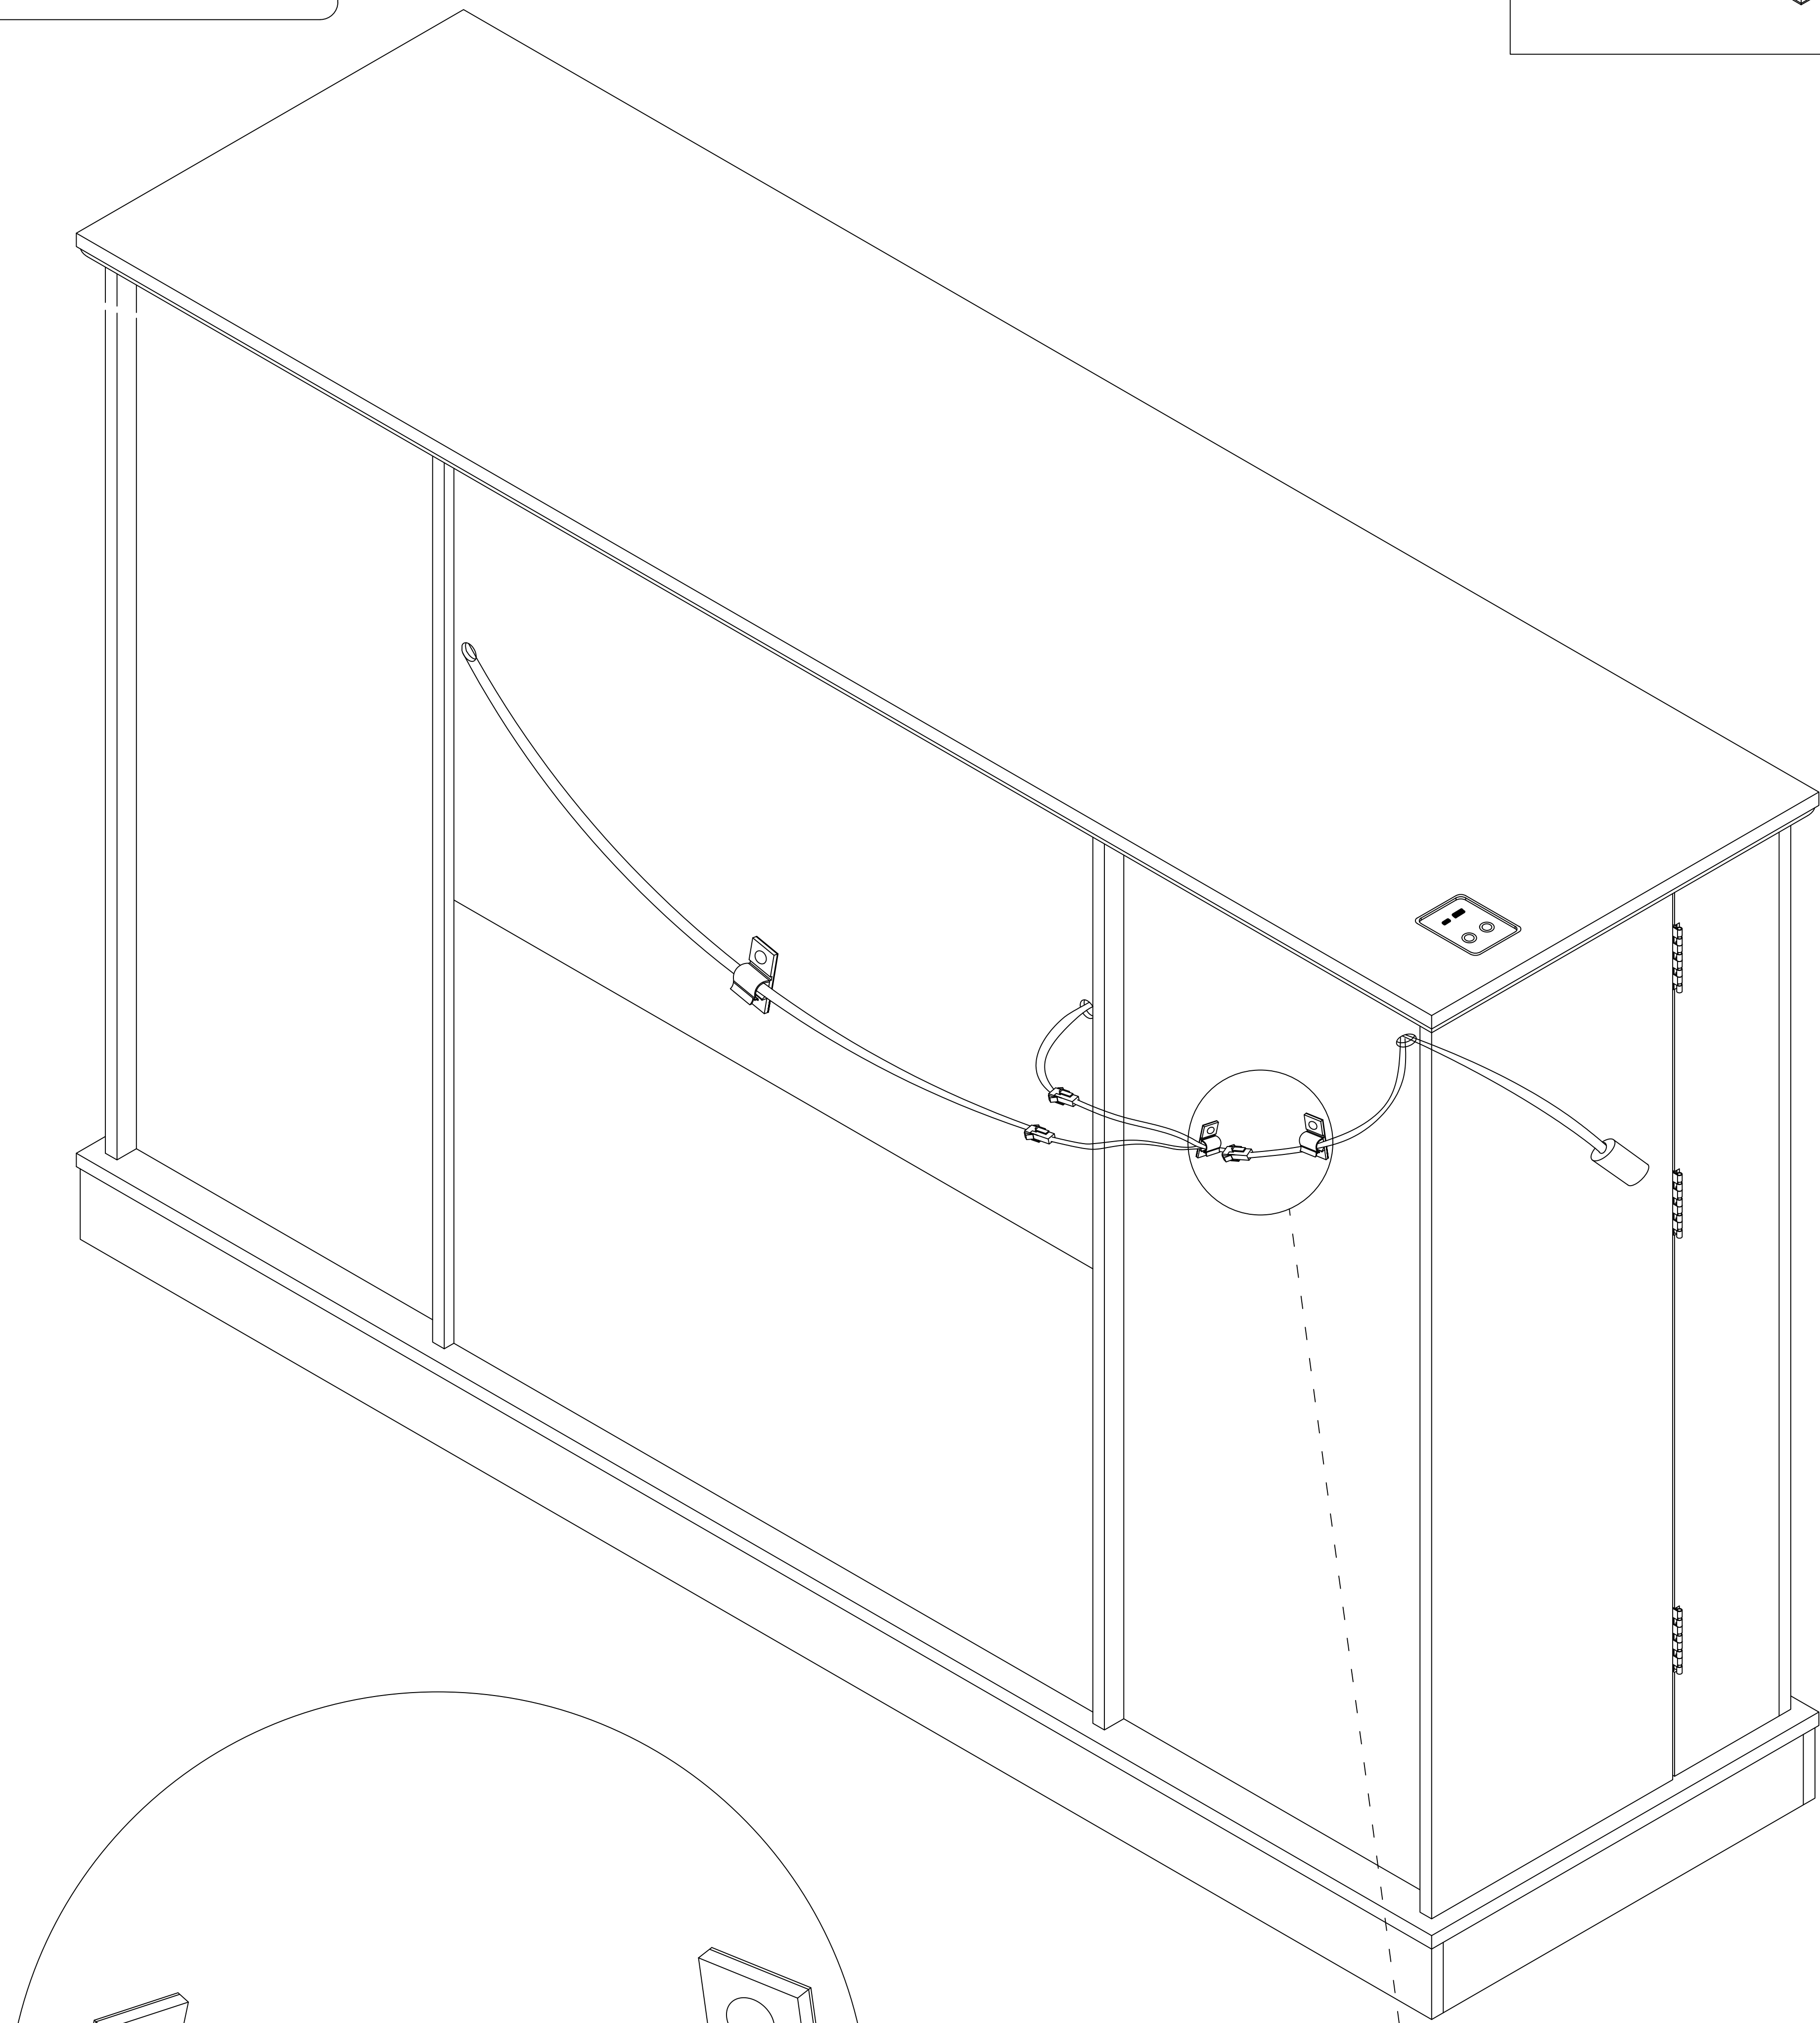



N

Step 65

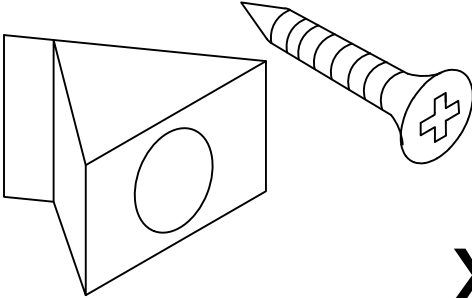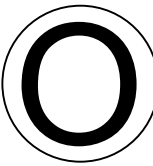


x14

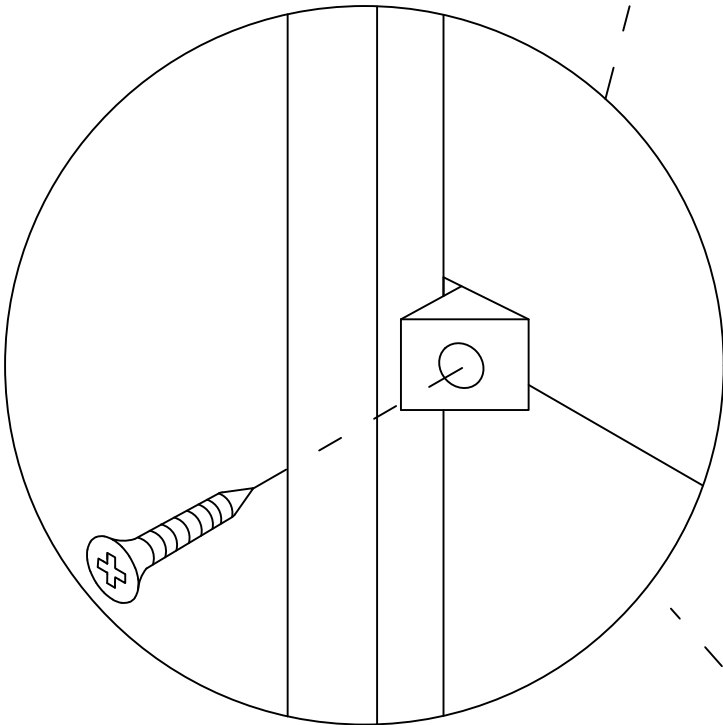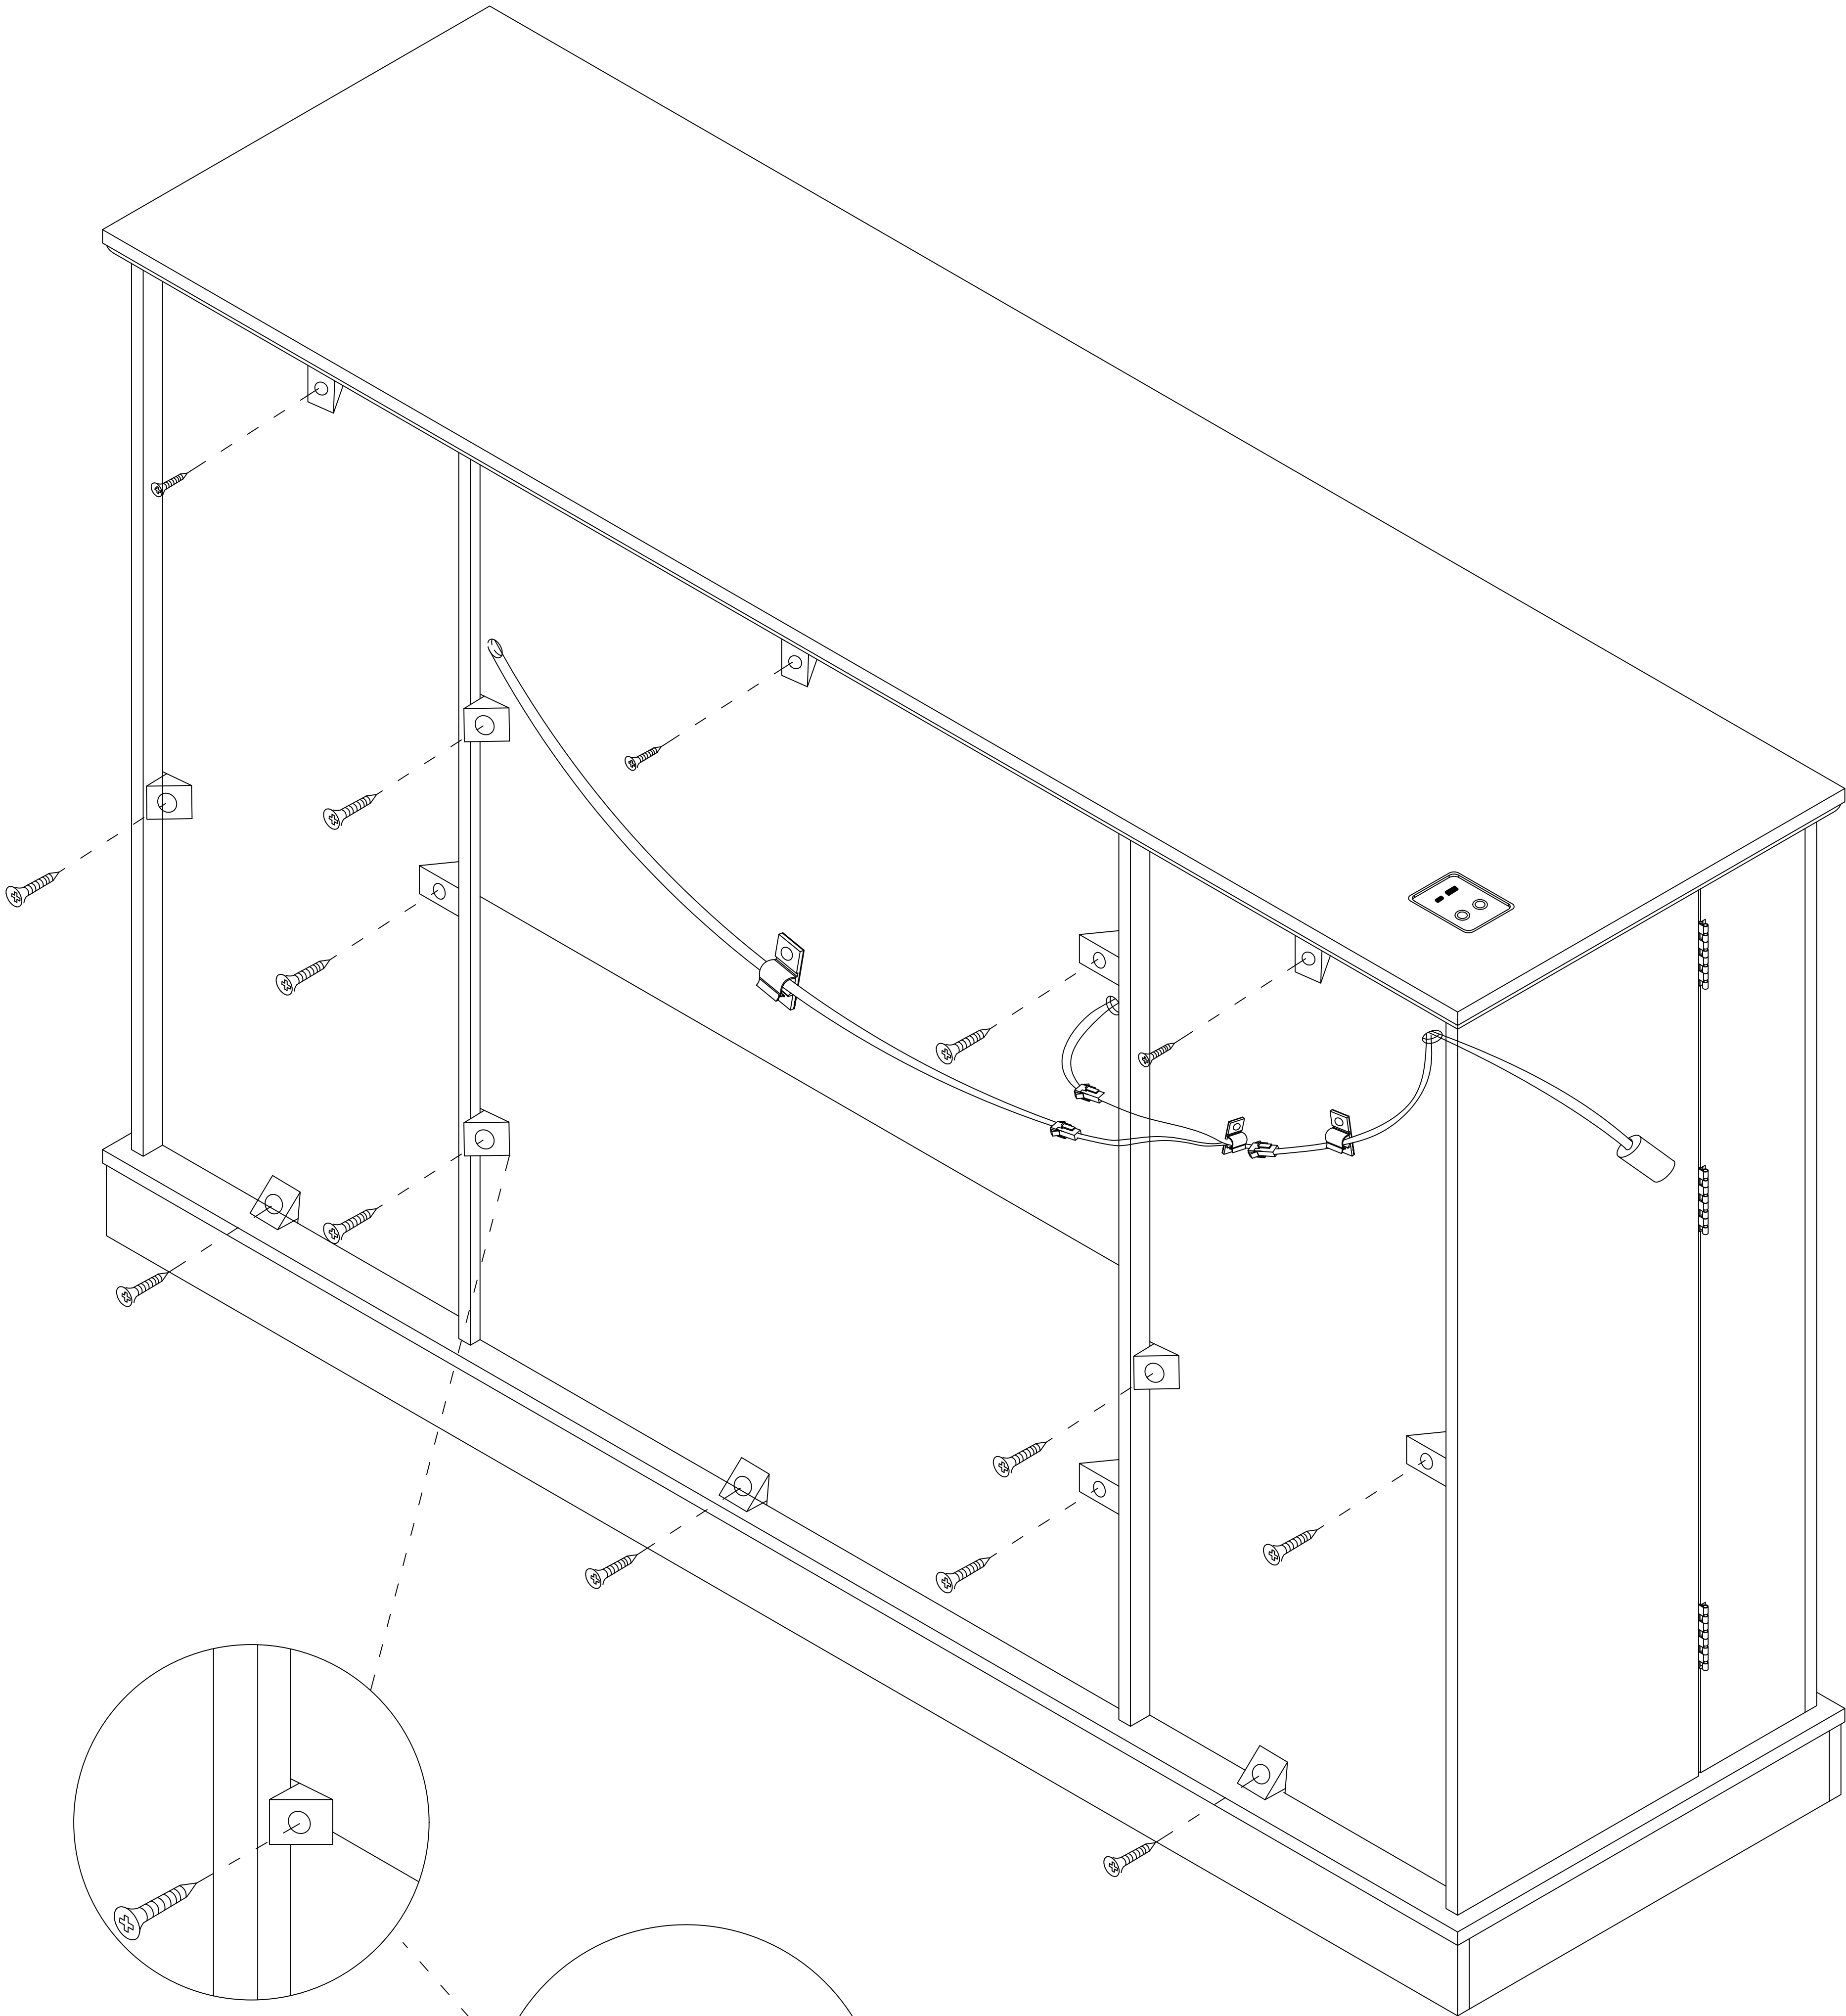

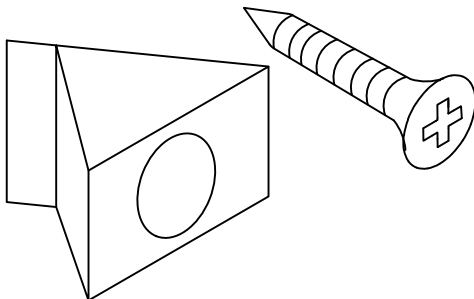



x14


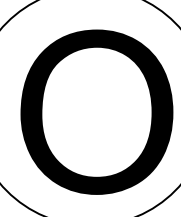


Step 66

Q



x2



x2

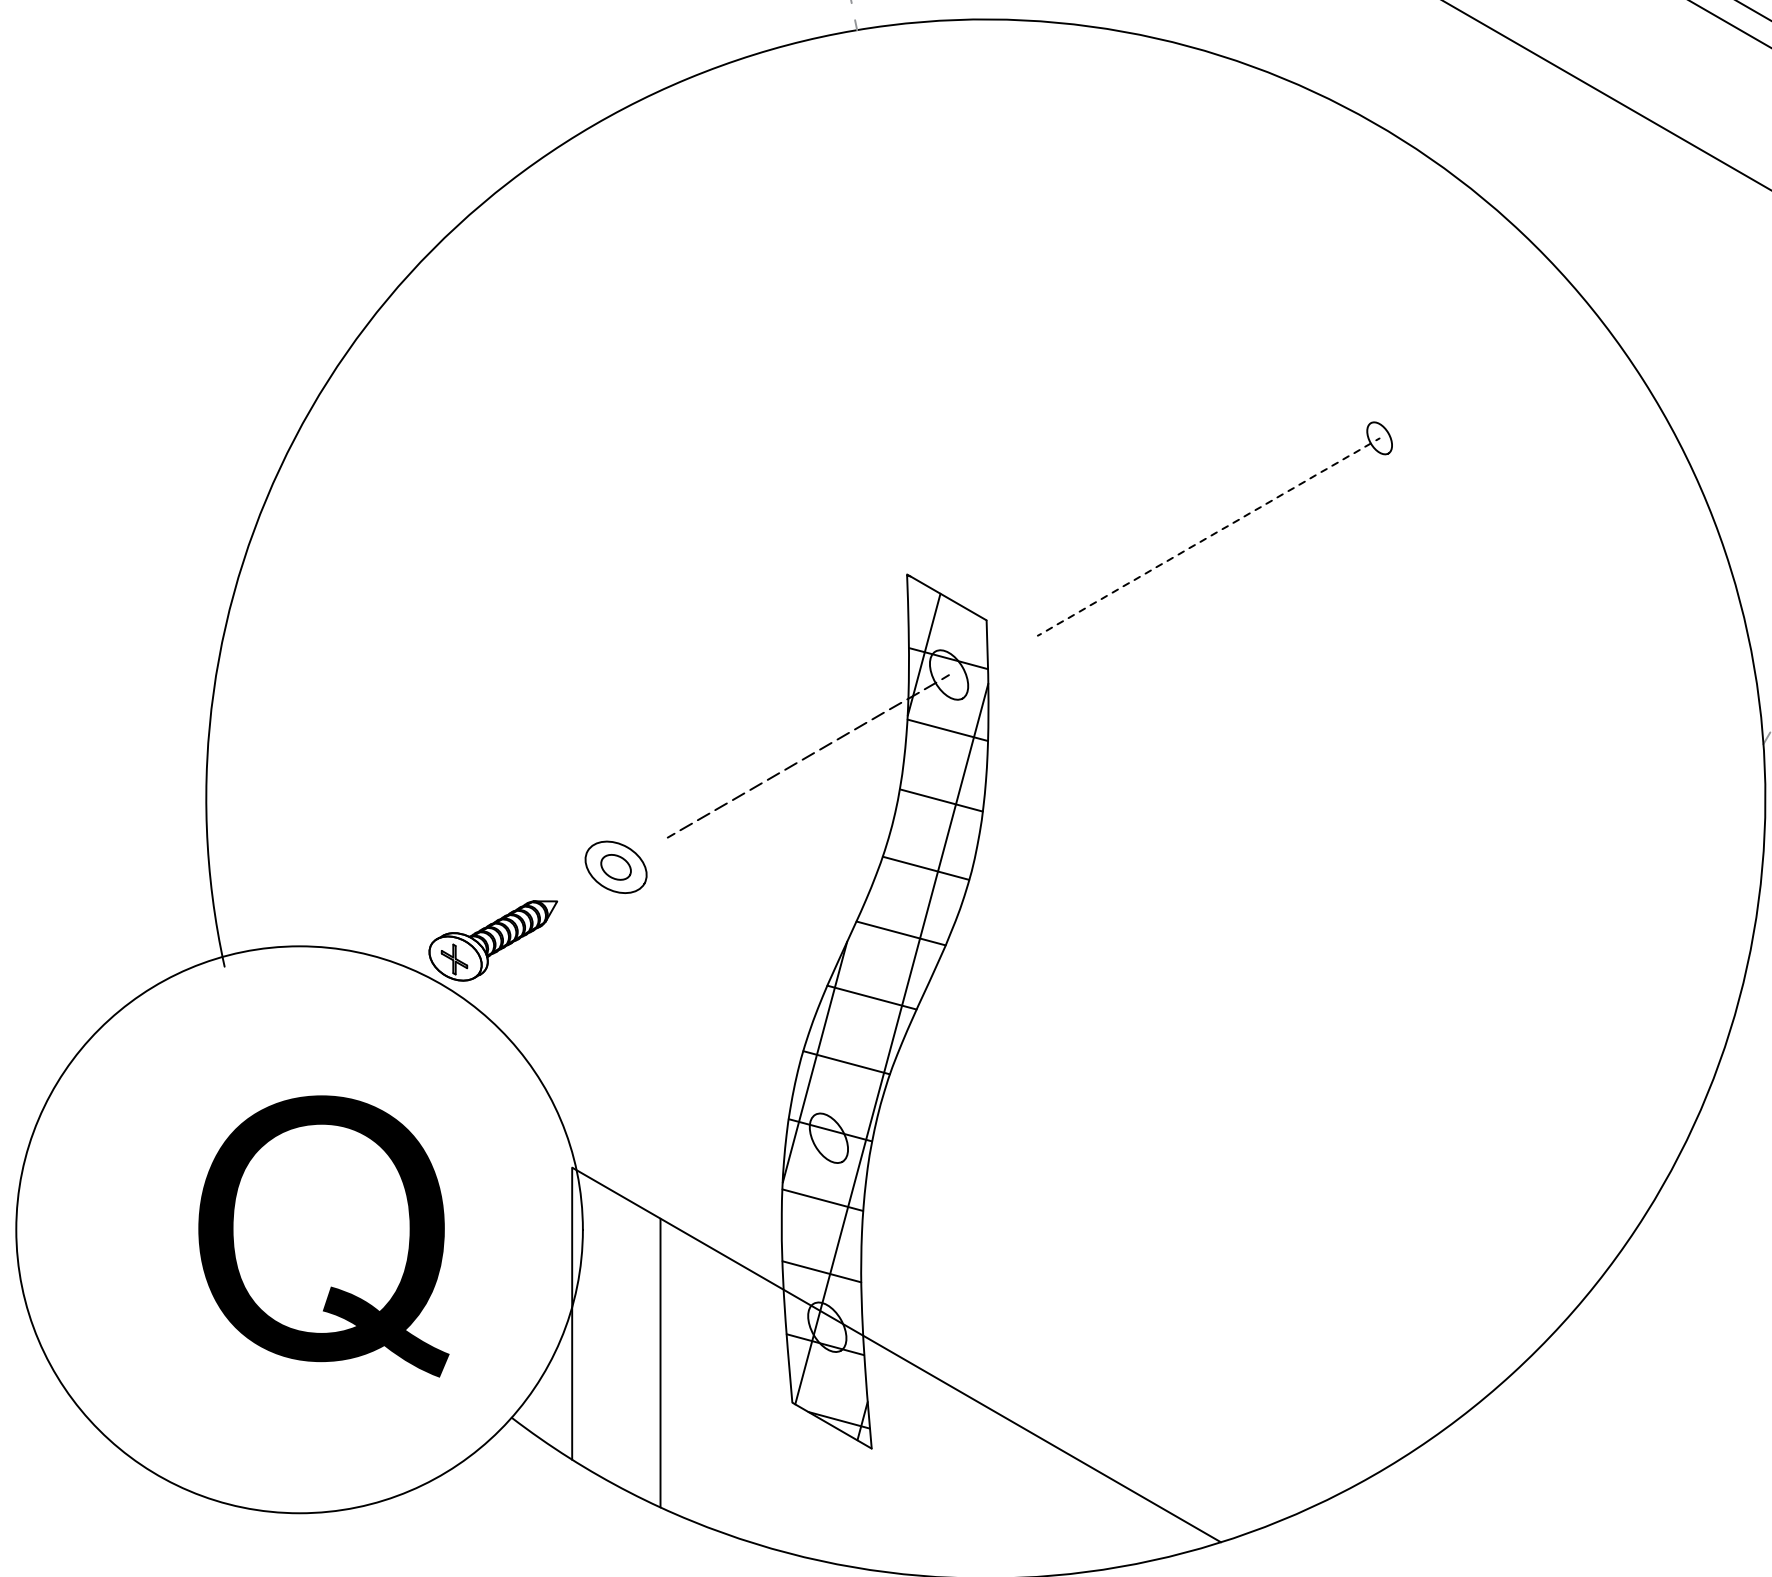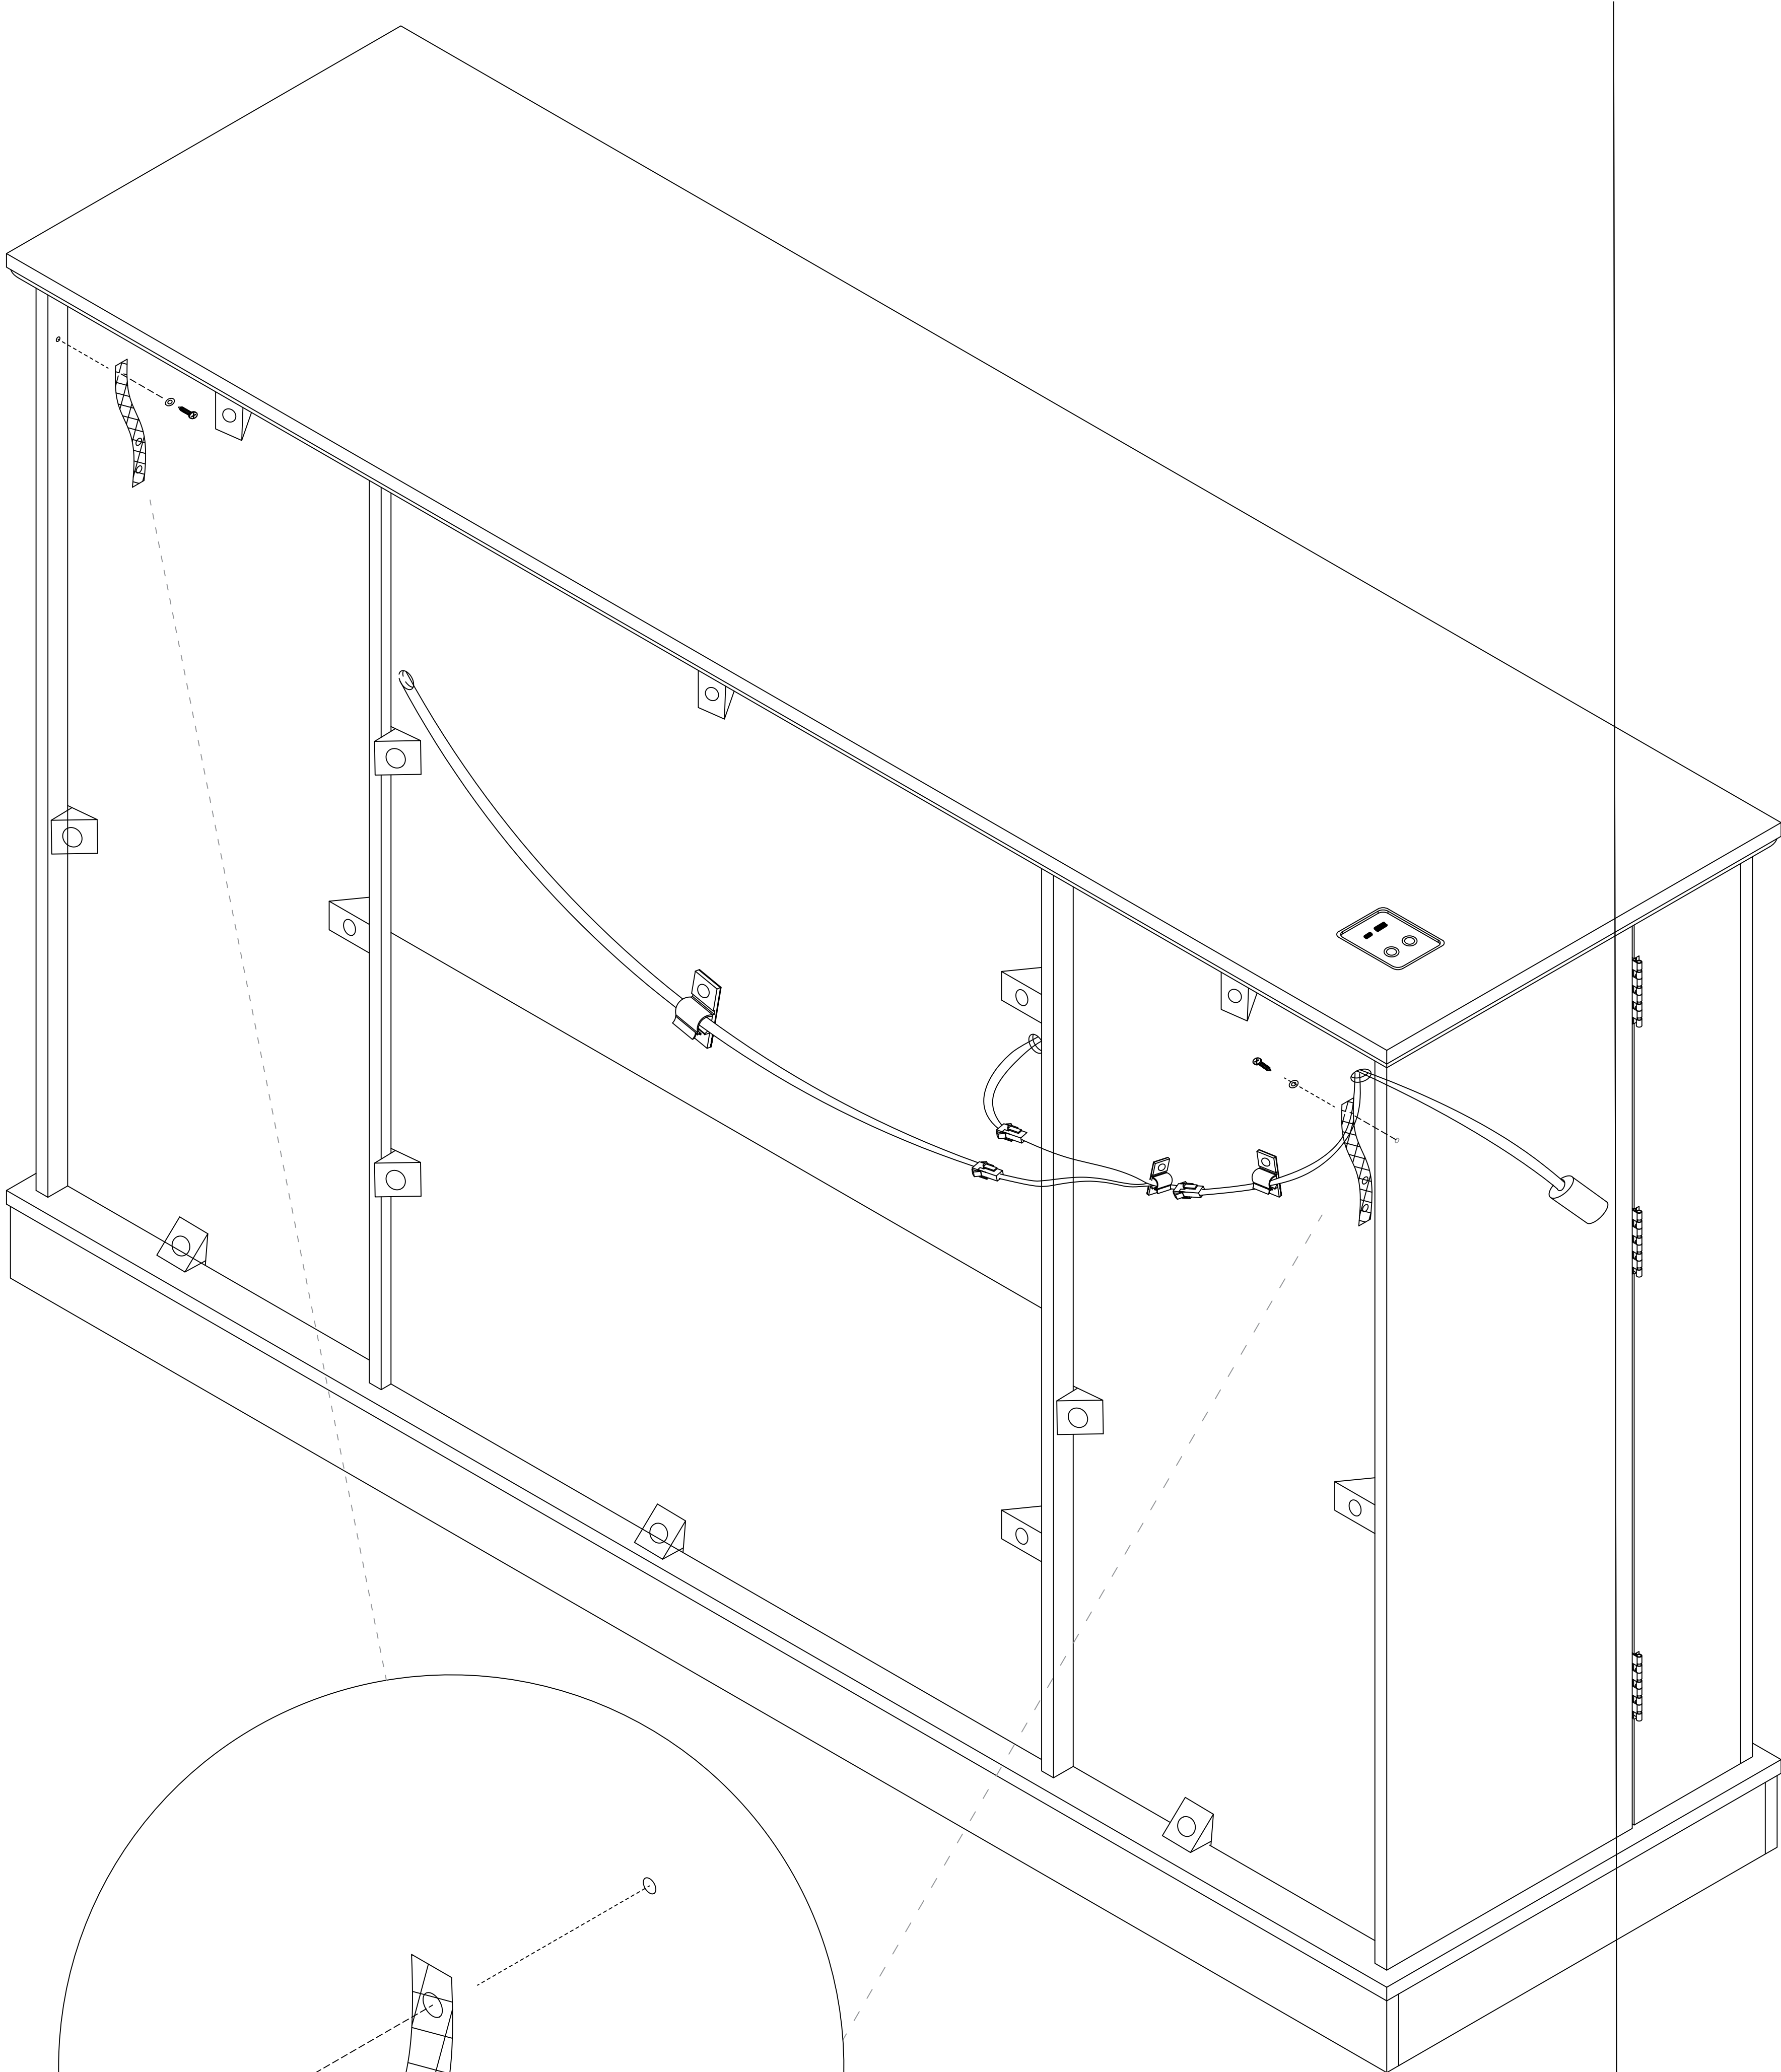


Step 67

T

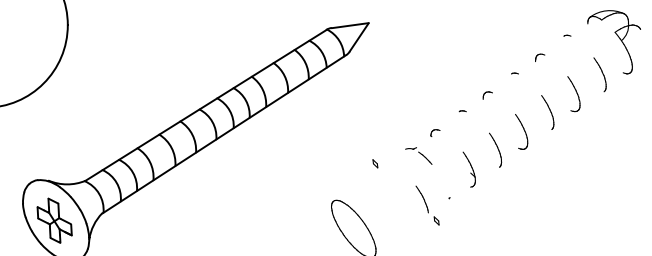

x 2

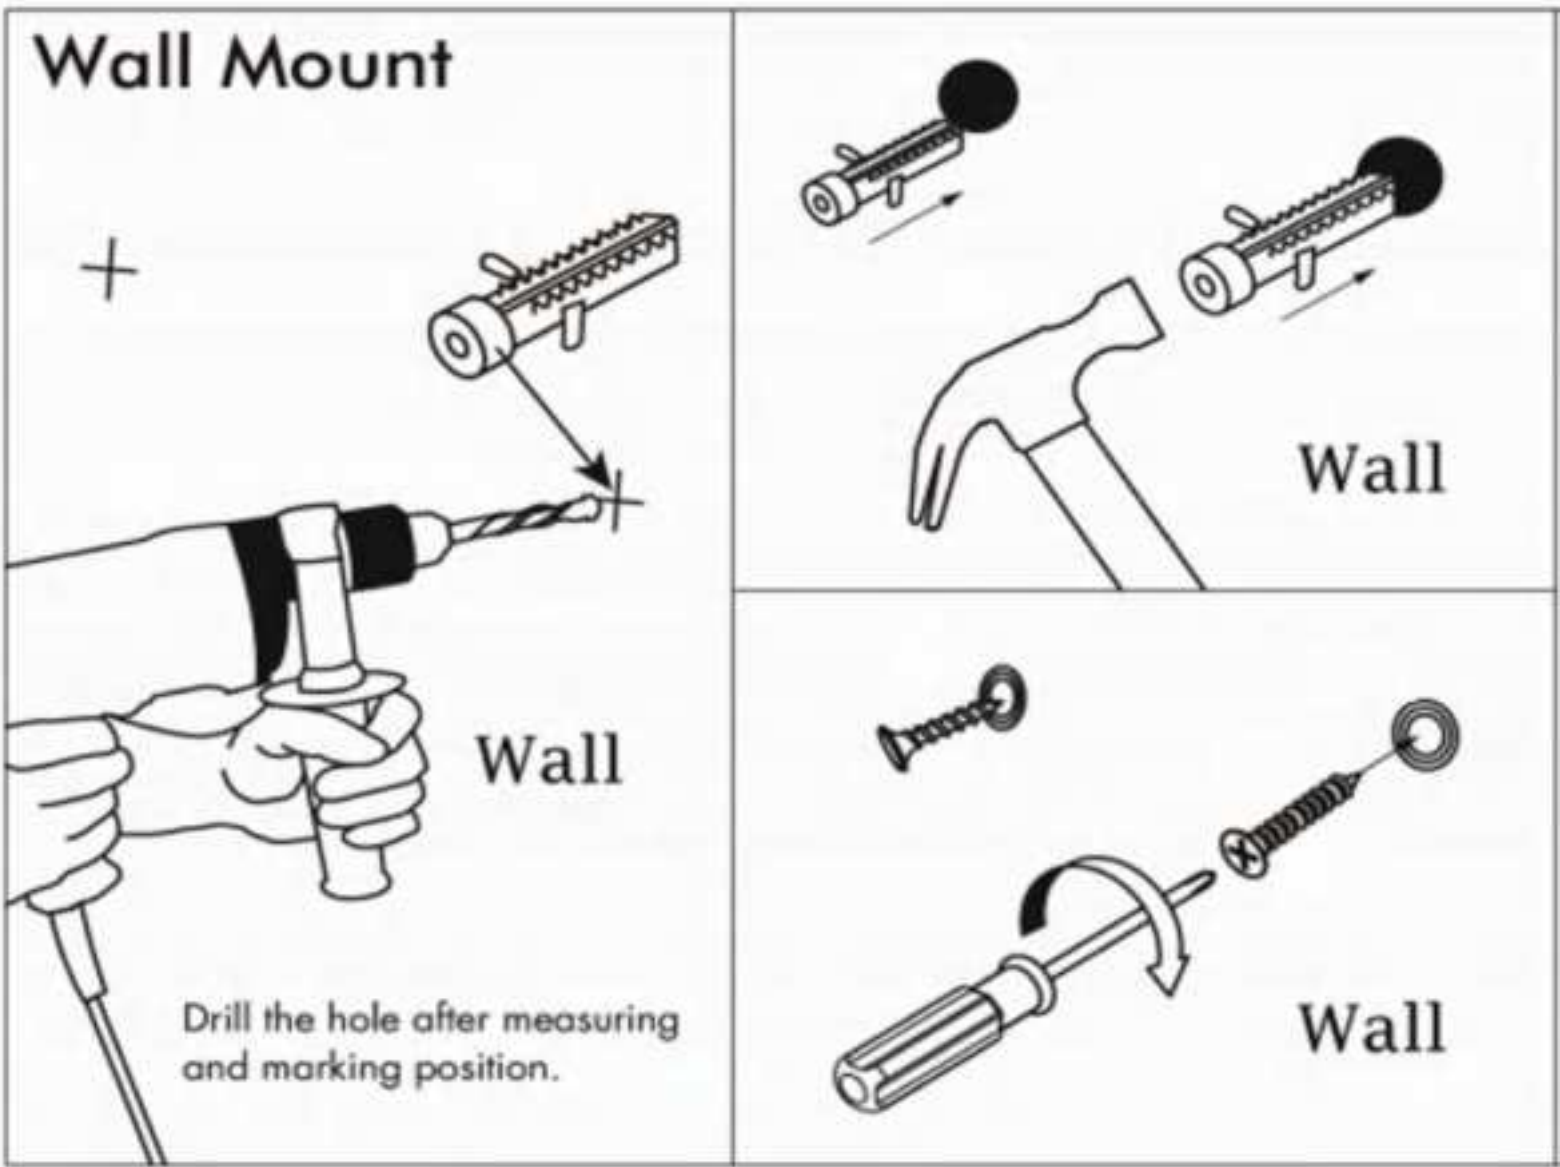



The bedside table is connected to the wall to prevent tipping over

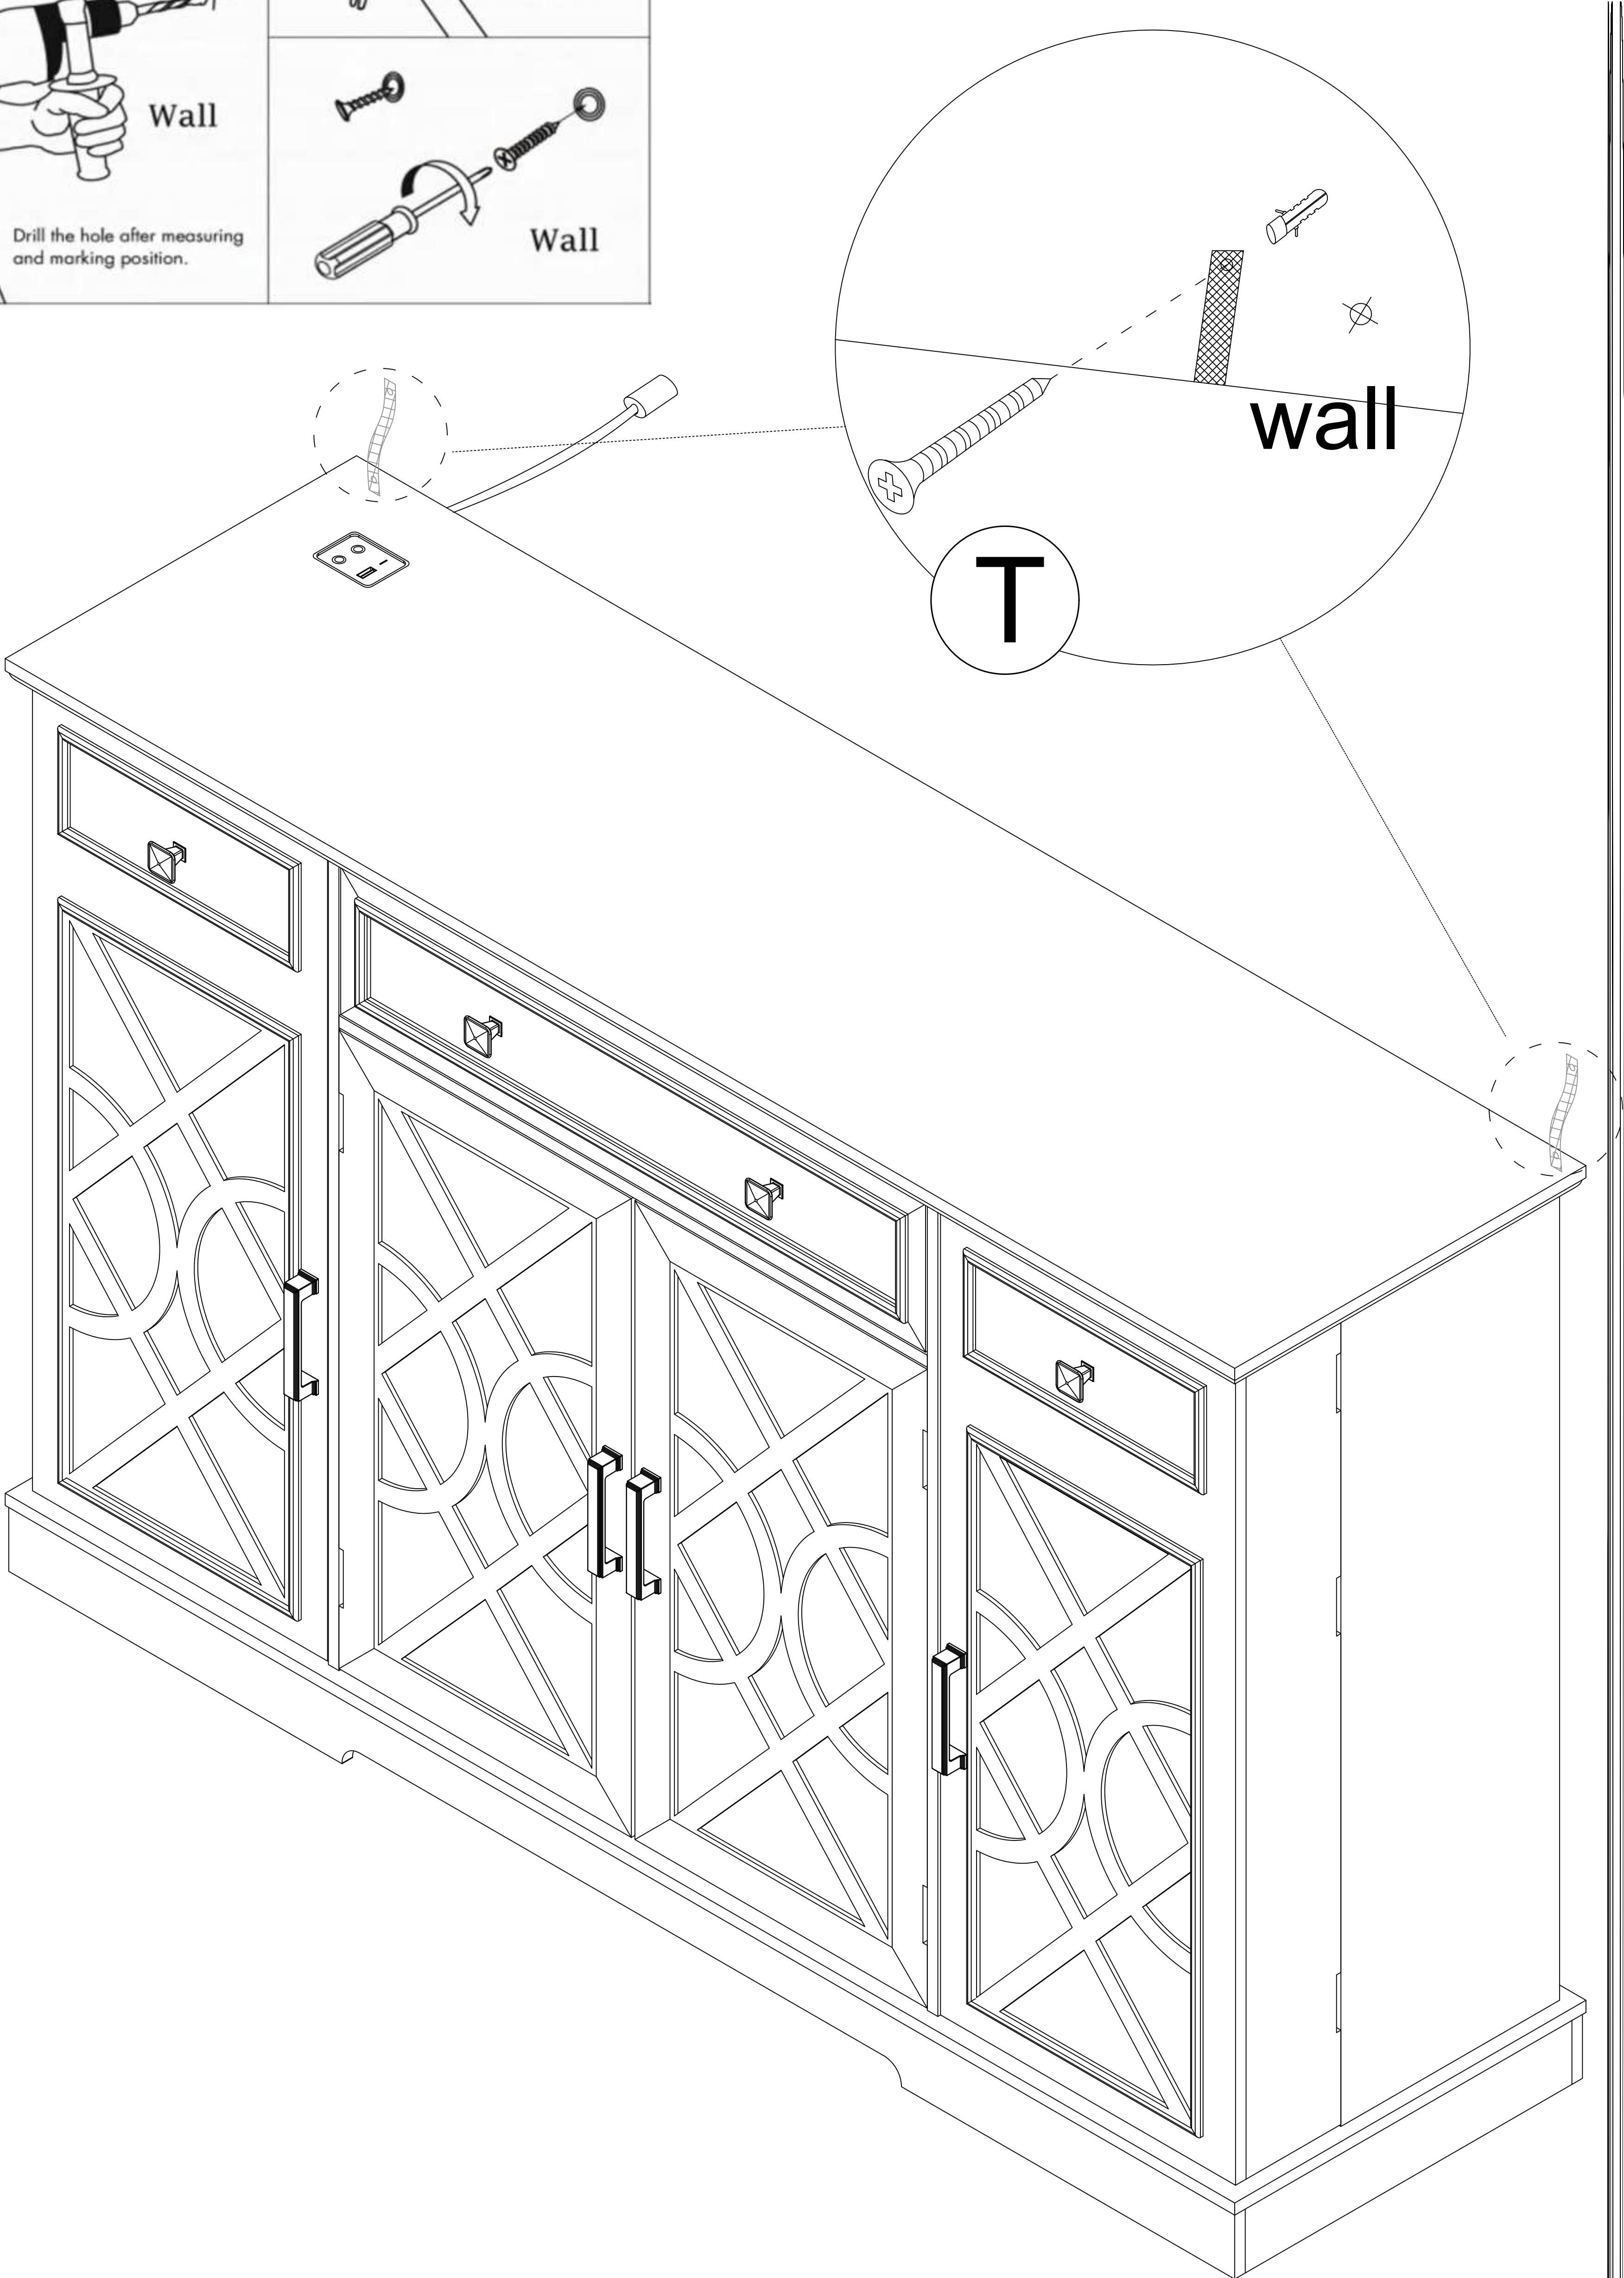

Step 68

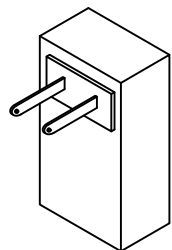

x1

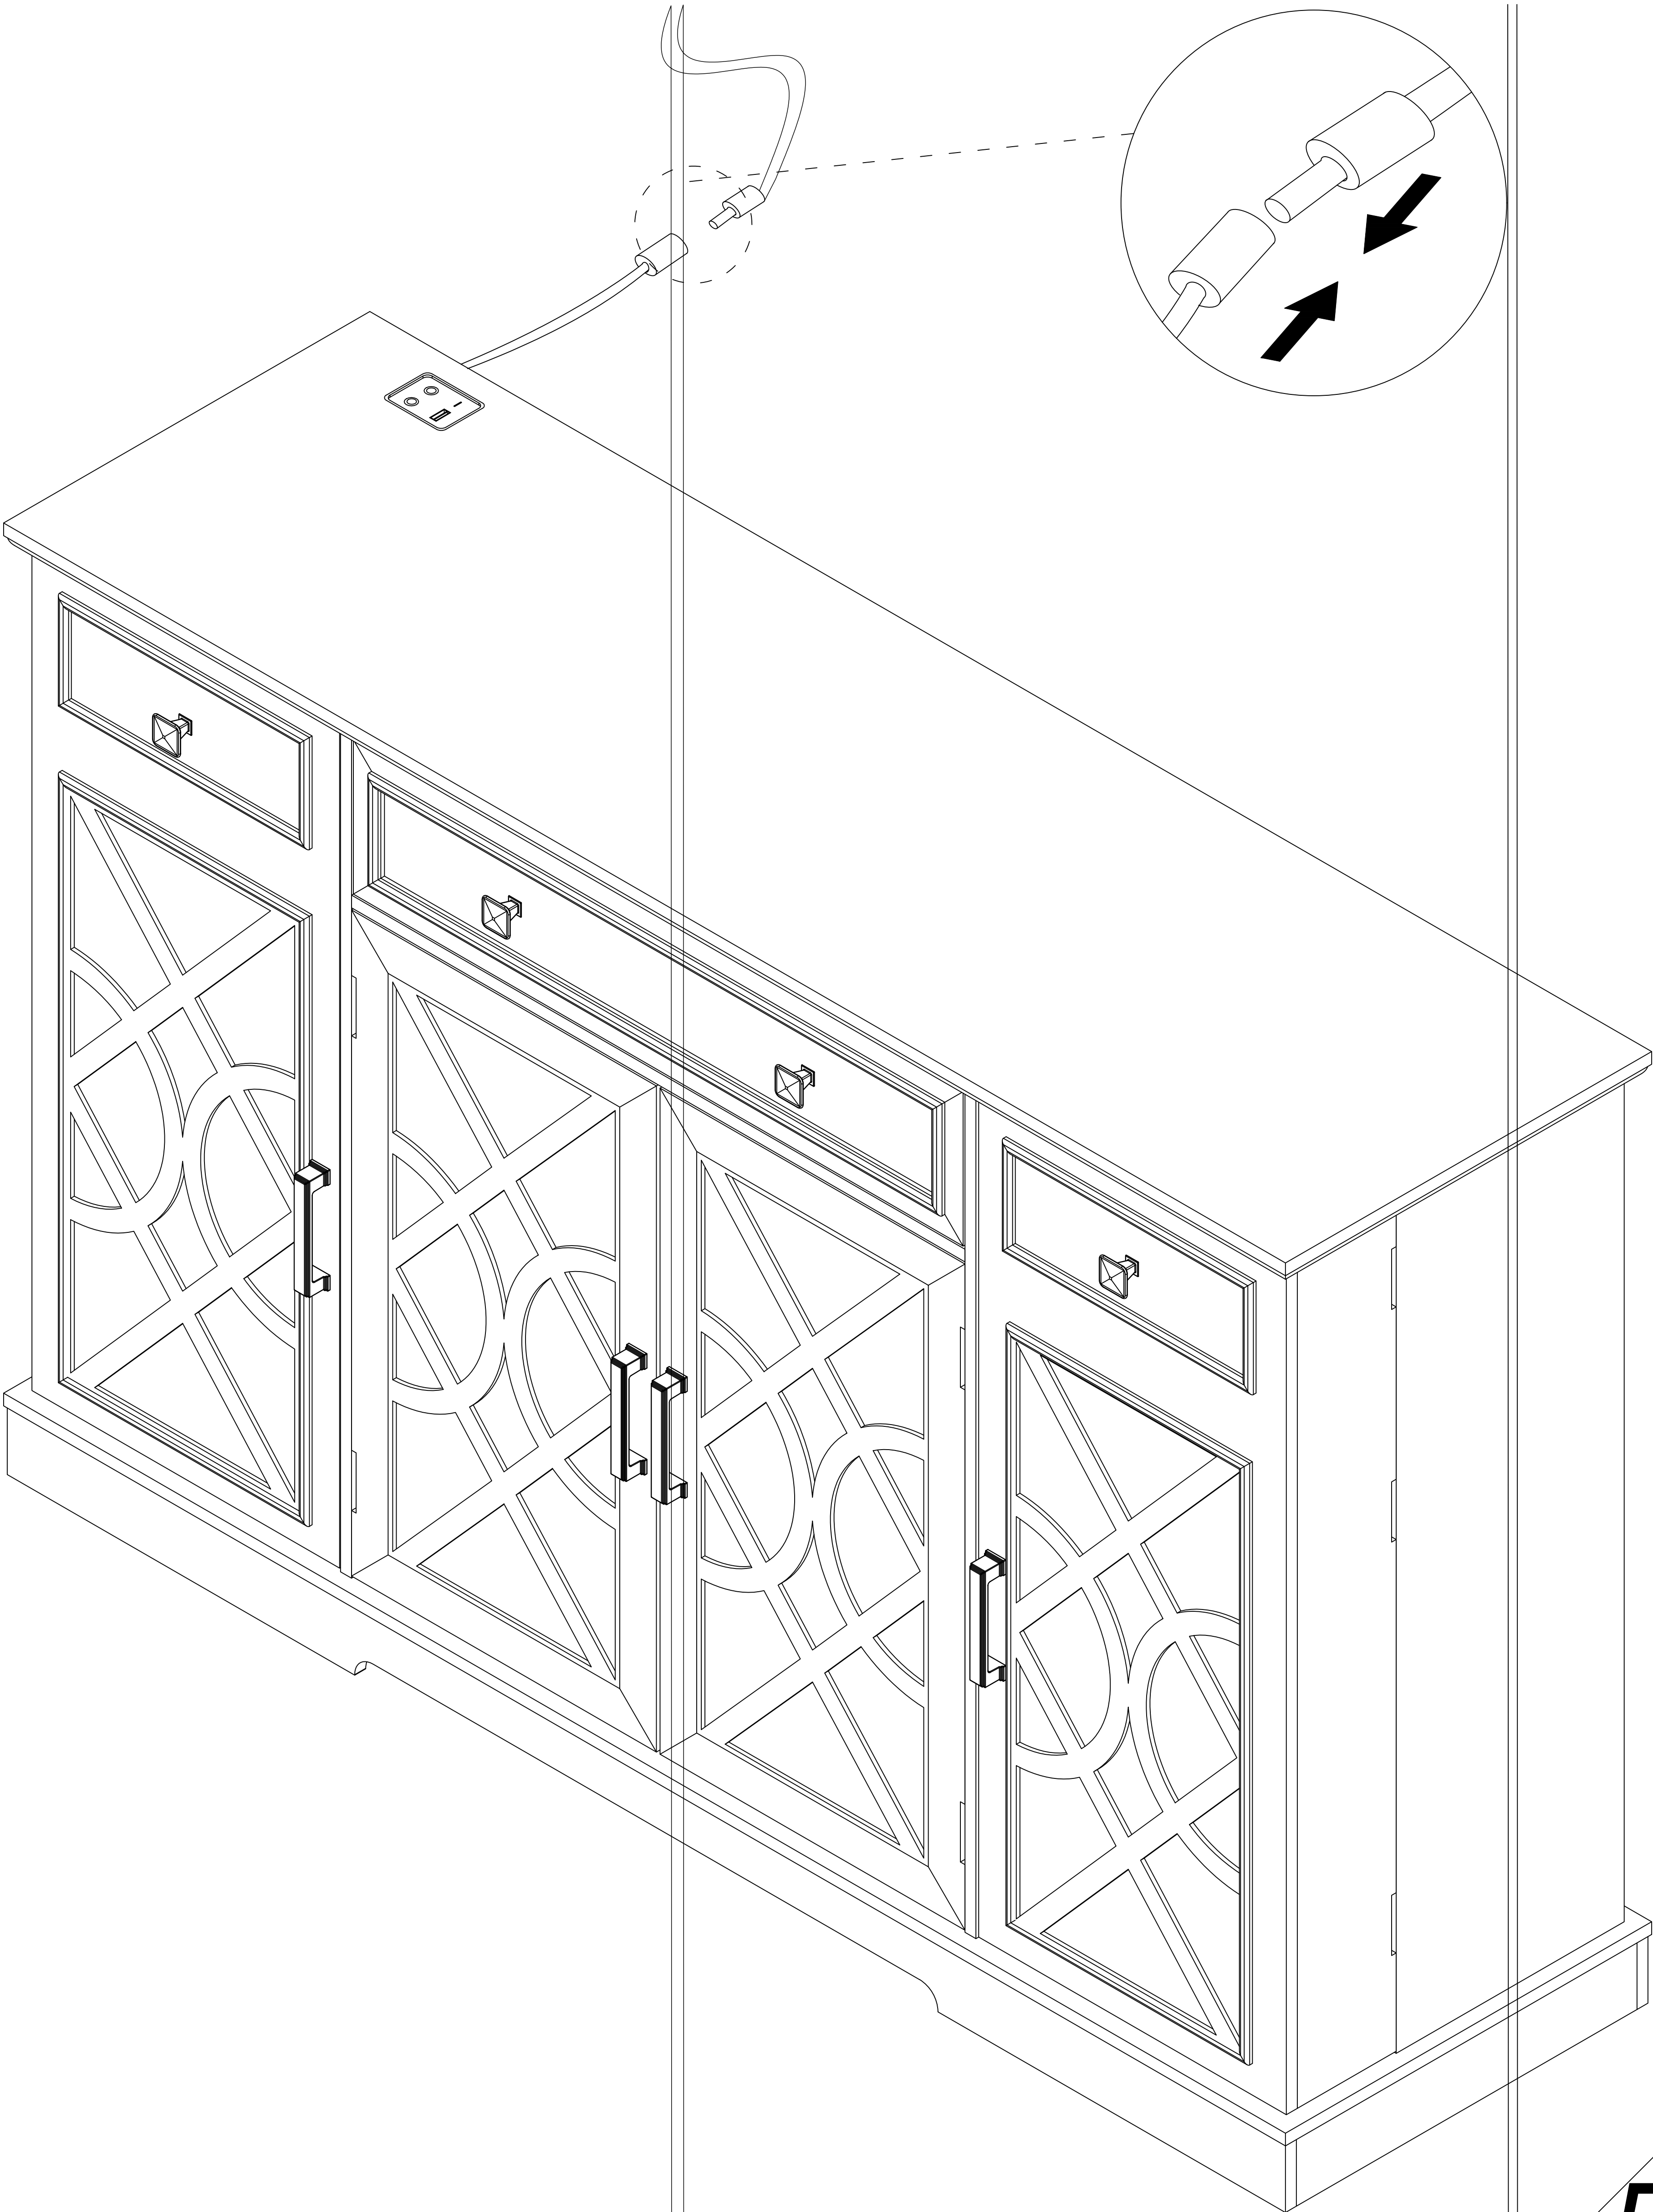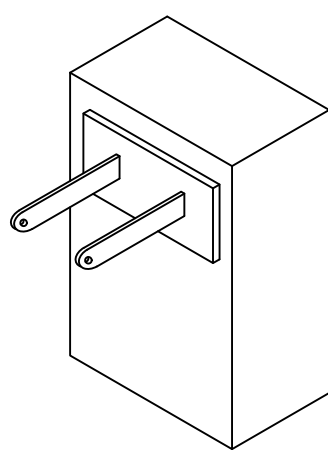

User's Guide

Thank you for purchasing this product. To use this product, please plug it into a 12V DC power supply. Please use if the product works normally after connecting to power.

Introduction

The box is an intelligent controller. It has 1 USB port and 1 type-C port and can distribute the current output up to 5V DC-2A. With 2 touch buttons, it can turn ON/OFF the light, change light colors, and adjust the light luminance.

Product Show

Induction Button



USB output port





Light Button

Type-C



Type-C output port



ATTENTION PLEASE
1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If bubbles appear on the panel, remove the protective film.

Operation



This touch button is used to turn on/off, change colors, and adjust brightness.

A. Short touch -> lighting on -> short touch -> change light color -> short touch -> change light color -> short touch -> lighting off. B. Long touch -> adjust the luminance



This touch button is used to turn on/off the induction function.

A . Short touch to turn on the induction function. It can auto-turn on the light when people are close to the controller in 1 meters. It can auto power off the light when the body is far away from the controller after 30 seconds.

B . Long touch to turn off the induction function.

C . Note: When you touch the light button to change the light modes, the induction function will automatically turn off. It is best to turn on this function after selecting the light color and adjusting the brightness you want.