


# ASSEMBLY INSTRUCTION

## OUTDOOR BENCH LOUNGE ROOF SET



If you have any questions, please feel free to contact us.  
Email: [lowesteam@aminalife.com](mailto:lowesteam@aminalife.com)

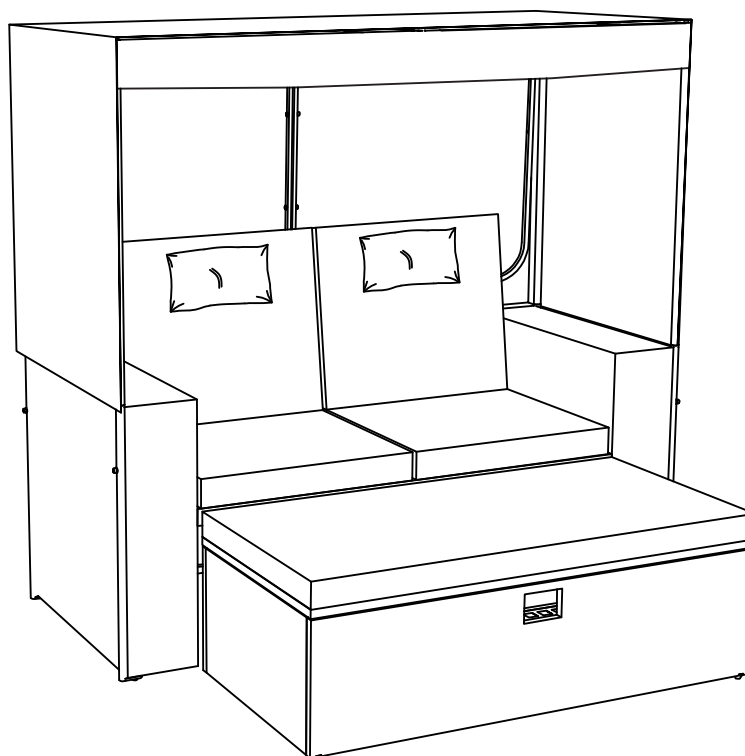





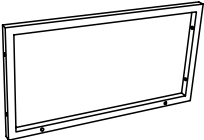
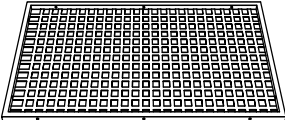
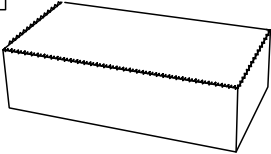

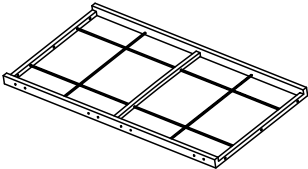
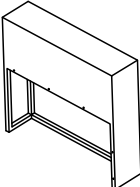
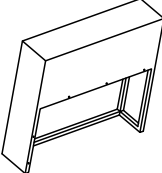
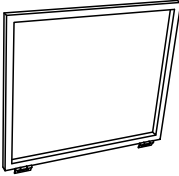
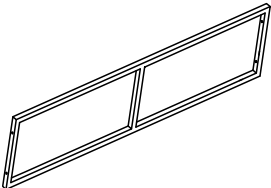
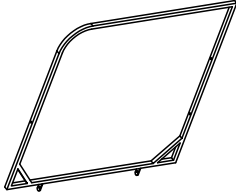
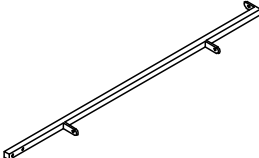
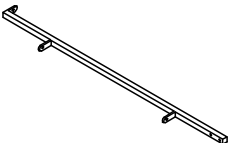
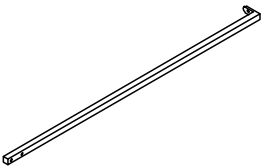
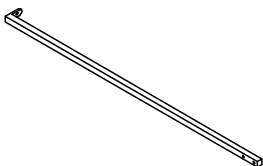
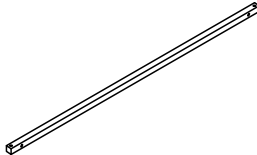









## N715P242872 ; N715P242873

**Please read all instructions carefully:**

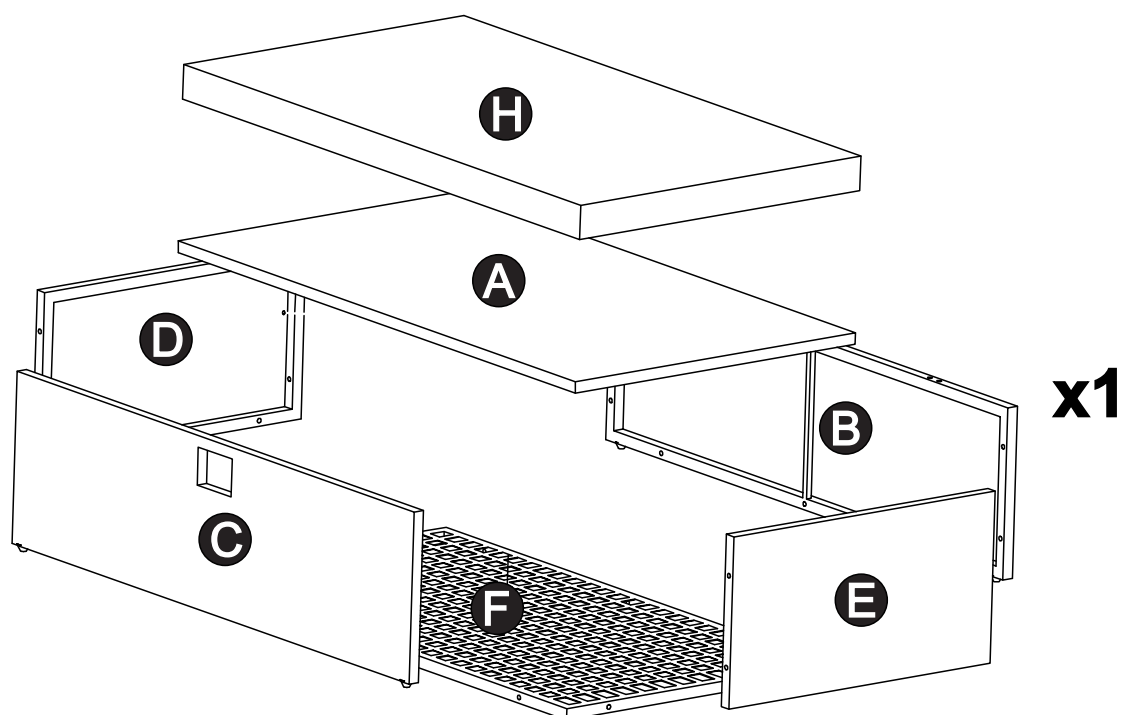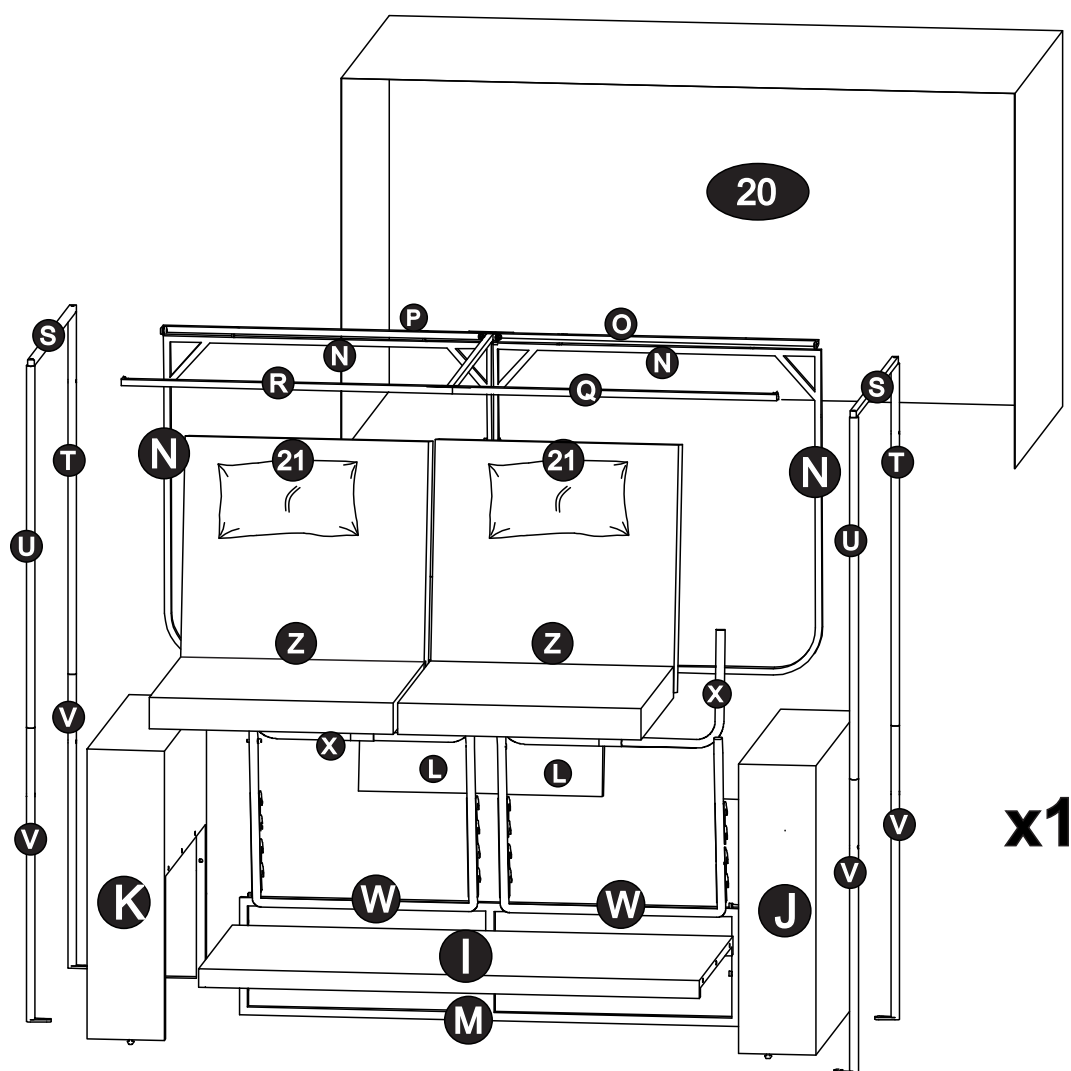



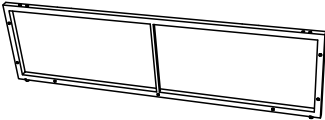

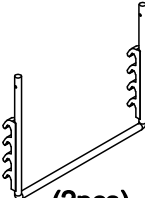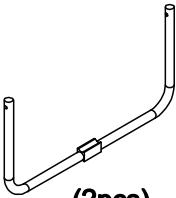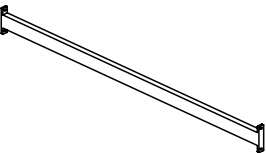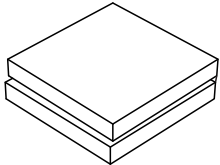
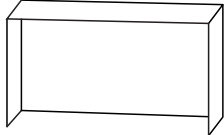










- 1. Have 2 adults on hand for assembly.**
- 2. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.**
- 3. Place the item on a flat ground to adjust and make sure it remains stable.**
- 4. Tighten up all screws with tools gradually.**
- 5. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.**
- 6. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.**
- 7. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.**



# Part List :




















<b>A</b>  <b>Lid Stool (1 pc)</b>	<b>B</b>  <b>Back Frame Stool (1 pc)</b>	<b>C</b>  <b>Front Frame Stool (1 pc)</b>	<b>D</b>  <b>Right Stool (1 pc)</b>
<b>E</b>  <b>Left Stool (1 pc)</b>	<b>F</b>  <b>Bottom Frame Stool (1 pc)</b>	<b>G</b>  <b>Bag Stool (1 pc)</b>	<b>H</b>  <b>Cushion Stool (1 pc)</b>
<b>I</b>  <b>Seat Bench (1 pc)</b>	<b>J</b>  <b>Left Arm Chair (1 pc)</b>	<b>K</b>  <b>Right Arm Chair (1 pc)</b>	<b>L</b>  <b>Backrest (2 pcs)</b>
<b>M</b>  <b>Back Frame Bench (1pc)</b>	<b>N</b>  <b>Back Canopy (2 pcs)</b>	<b>O</b>  <b>(1pc)</b>	<b>P</b>  <b>(1pc)</b>
<b>Q</b>  <b>(1pc)</b>	<b>R</b>  <b>(1pc)</b>	<b>S</b>  <b>(2pcs)</b>	<b>T</b>  <b>(2pcs)</b>
<b>U</b>  <b>(2pcs)</b>	<b>V</b>  <b>(4pcs)</b>	<b>W</b>  <b>(2pcs)</b>	<b>X</b>  <b>(2pcs)</b>
<b>Y</b>  <b>(1pc)</b>	<b>Z</b>  <b>Seat Chair Cushion (2 pcs)</b>	<b>20</b>  <b>Canopy Fabric (1pc)</b>	<b>21</b>  <b>Pillow (2 pcs)</b>

# Hardware list:
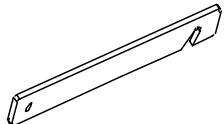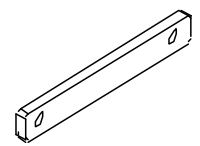
<p>1</p>  <p><b>M6x40mm</b> (16 pcs)</p>	<p>2</p>  <p><b>M6x35mm</b> (24 pcs)</p>	<p>3</p>  <p><b>M6x20mm</b> (40 pcs)</p>	<p>4</p>  <p><b>Ø6 x 14 mm</b> (88 pcs)</p>
<p>5</p>  <p><b>Allenkey</b> (2 pcs)</p>	<p>6</p>  <p><b>M6x45mm</b> (2 pcs)</p>	<p>7</p>  <p><b>M6x60mm</b> (6 pcs)</p>	<p>8</p>  <p><b>Air Lifter 100N</b> (1 pc)</p>
<p>9</p>  <p><b>Nuts</b> (12 pcs)</p>	<p>10</p>  <p><b>Plastic washers 2mm</b> Ø6 x 16 x 2 mm (10 pcs)</p>	<p>11</p>  <p><b>Plastic washers 5mm</b> Ø6 x 16 x 5 mm (4 pcs)</p>	<p>12</p>  <p><b>Wrench</b> (1 pc)</p>
<p>13</p>  <p><b>Part Key</b> (2 pcs)</p>	<p>14</p>  <p><b>Part L</b> (2 pcs)</p>	<p>15</p>  <p><b>Part I - Short</b> (2 pcs)</p>	<p>16</p>  <p><b>Part I - Long</b> (2 pcs)</p>
<p>17</p>  <p><b>Ajustable Foot</b> (8 pcs)</p>	<p>18</p>  <p><b>Plastic washer 10mm</b> Ø6 x 16 x 10 mm (2 pcs)</p>		



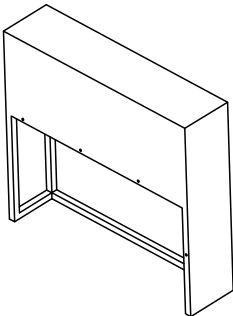
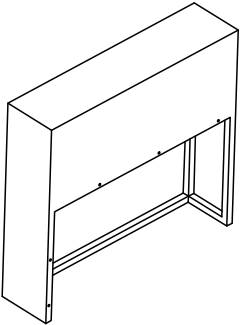
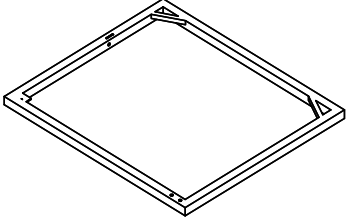
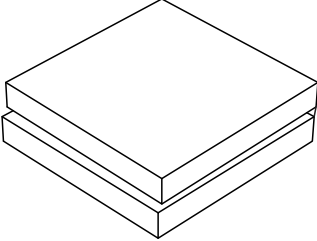
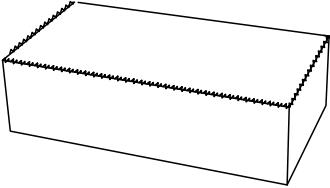
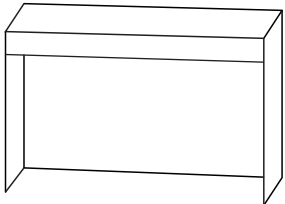

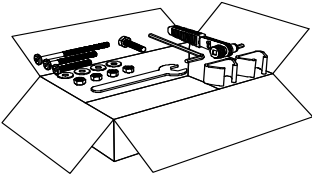
# CARTON CONTENT:

## N715P242872

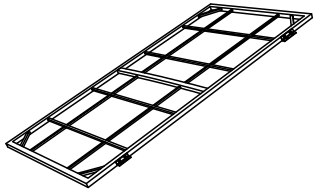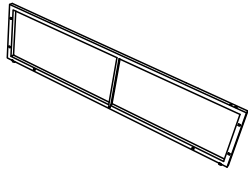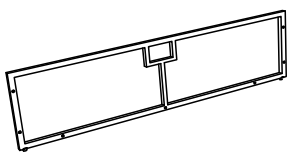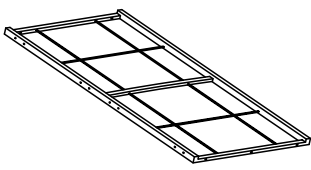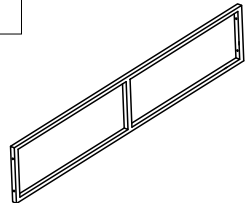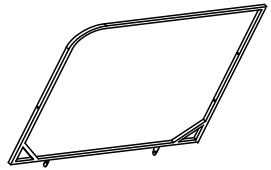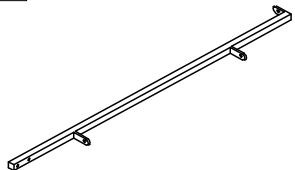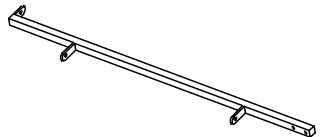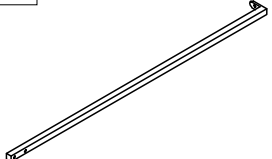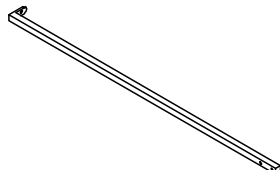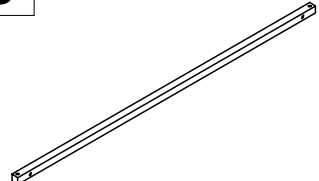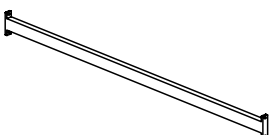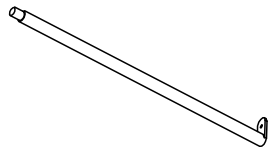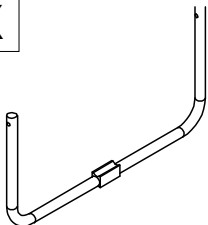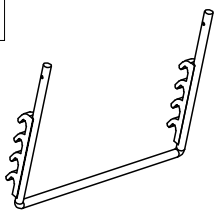
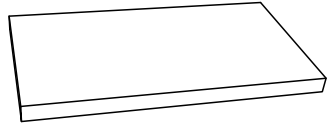
<b>A</b>  <p>Lid Stool (1 pc)</p>	<b>B</b>  <p>Back Frame Stool (1 pc)</p>	<b>C</b>  <p>Front Frame Stool (1 pc)</p>	<b>F</b>  <p>Bottom Frame Stool (1 pc)</p>
<b>I</b>  <p>Seat Bench (1 pc)</p>	<b>M</b>  <p>Back Frame Bench (1pc)</p>	<b>N</b>  <p>Back Canopy (2 pcs)</p>	<b>O</b>  <p>(1 pc)</p>
<b>P</b>  <p>(1 pc)</p>	<b>Q</b>  <p>(1 pc)</p>	<b>R</b>  <p>(1 pc)</p>	<b>S</b>  <p>(2 pcs)</p>
<b>T</b>  <p>(2 pcs)</p>	<b>Y</b>  <p>(1 pc)</p>	<b>U</b>  <p>(2 pcs)</p>	<b>V</b>  <p>(4 pcs)</p>
<b>X</b>  <p>(2 pcs)</p>	<b>W</b>  <p>(2 pcs)</p>	<b>H</b>  <p>(1 pc)</p>	

CARTON CONTENT:

N715P242873


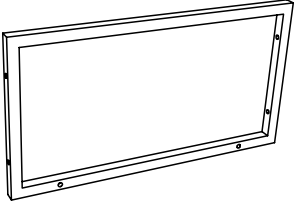
<div>E</div> <div></div> <div>Right Stool (1 pc)</div>	<div>D</div> <div></div> <div>Left Stool (1 pc)</div>	<div>J</div> <div></div> <div>Left Arm Chair (1 pc)</div>	<div>K</div> <div></div> <div>Right Arm Chair (1 pc)</div>
<div>L</div> <div></div> <div>Backrest (2 pcs)</div>	<div>Z</div> <div></div> <div>Seat Chair Cushion (2 pcs)</div>	<div>G</div> <div></div> <div>Bag Stool (1 pc)</div>	<div>20</div> <div></div> <div>Canopy Fabric (1pc)</div>
<div>21</div> <div></div> <div>Pillow (2 pcs)</div>	<div></div> <div>Hardware</div>		

# STEP 1

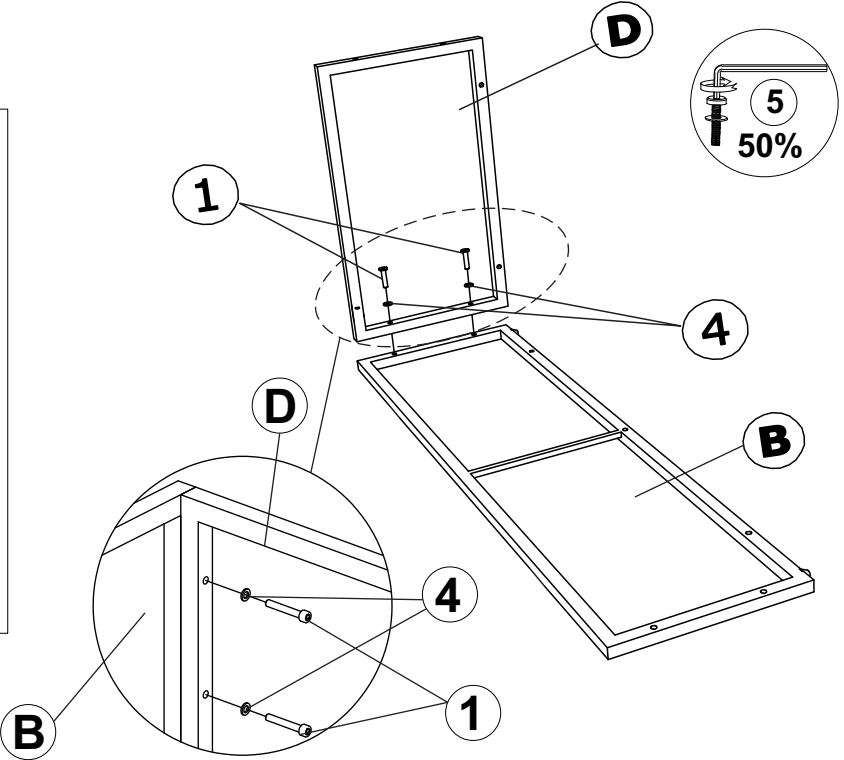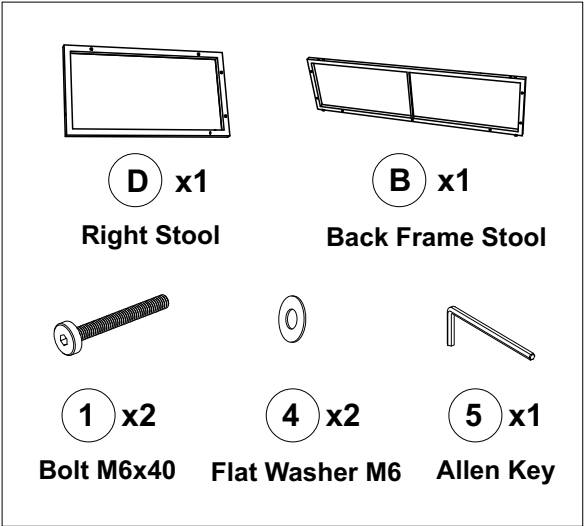



Connect Right Stool (D) & Back Frame Stool (B), tighten Bolt (1) & flat washer (4) with Allen Key (5)

# STEP 2

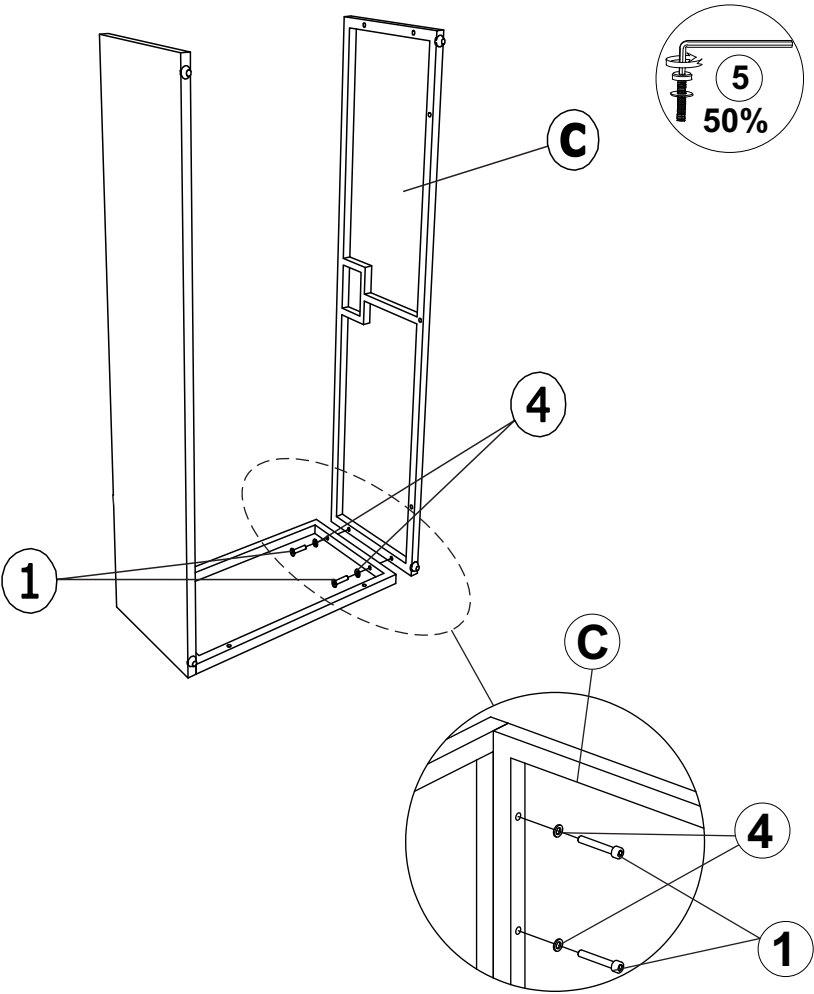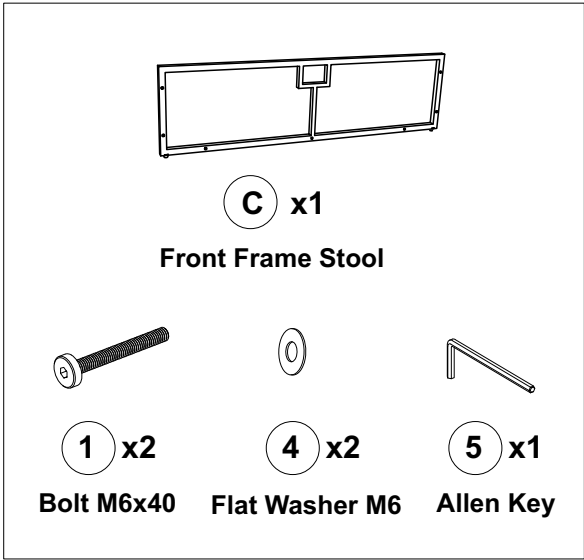



Connect Front Frame Stool (C), tighten Bolt (1) & flat washer (4) with Allen Key (5)

# STEP 3

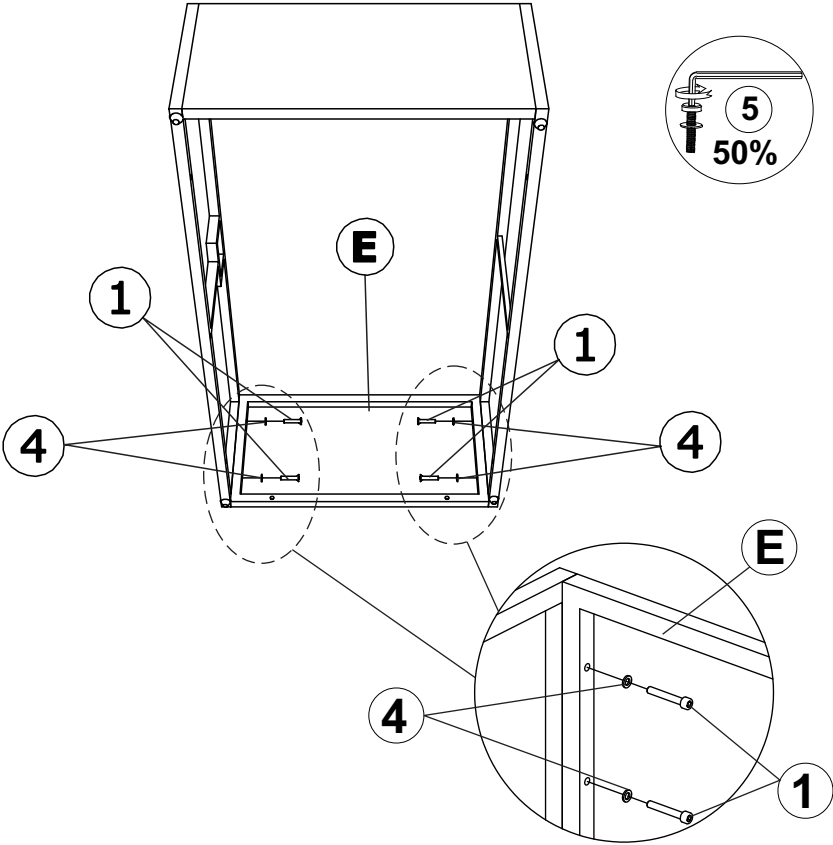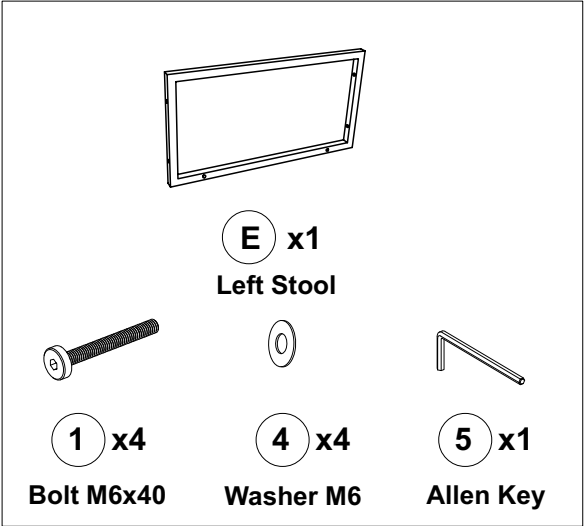

Connect Left Stool (E), tighten Bolt (1) & flat washer (4) with Allen Key (5)



# STEP 4

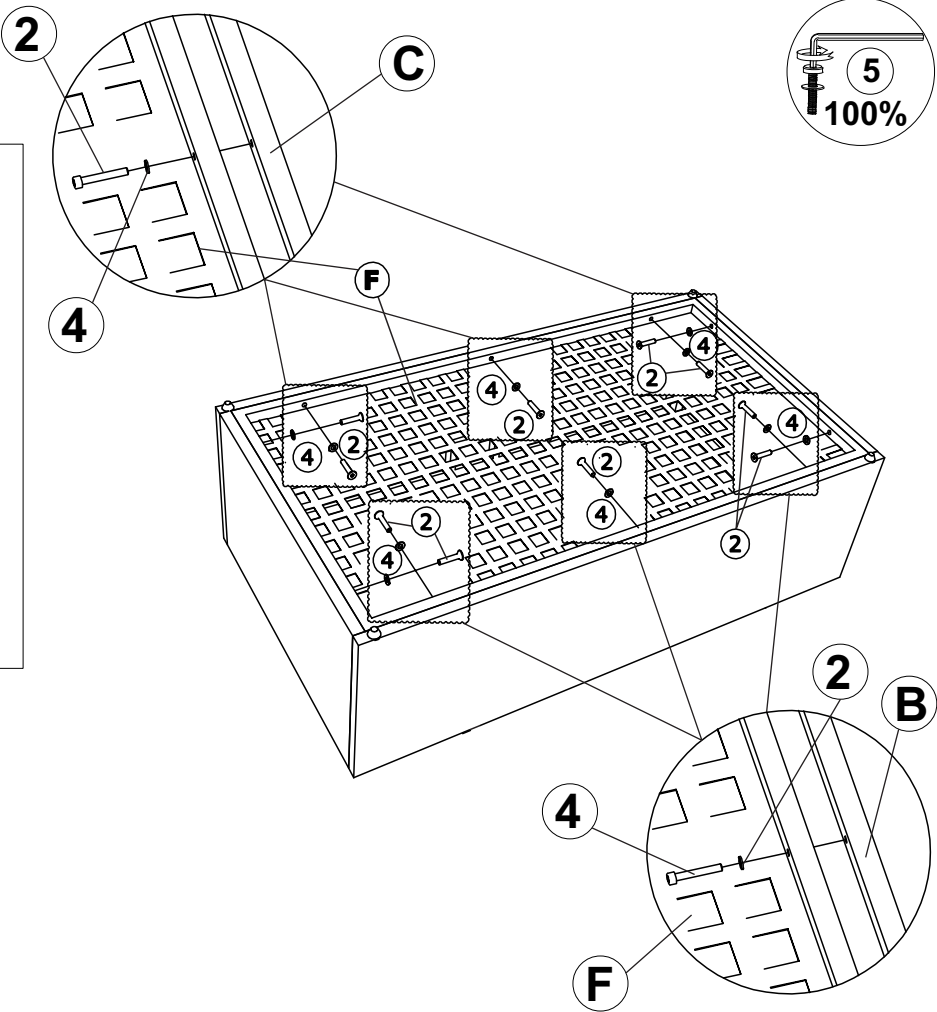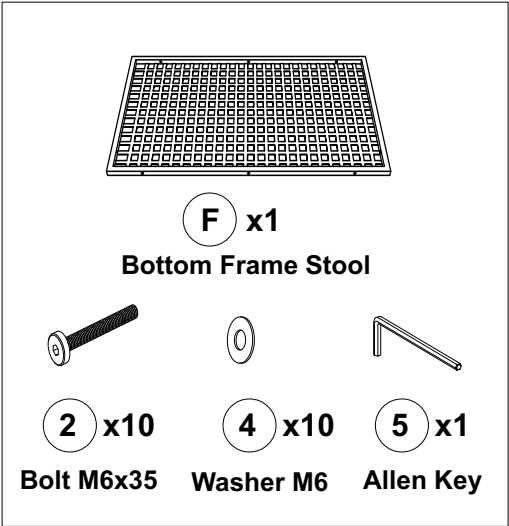

Connect Bottom Frame Stool (F), tighten Bolt (2) & flat washer (4) with Allen Key (5)





## STEP 5

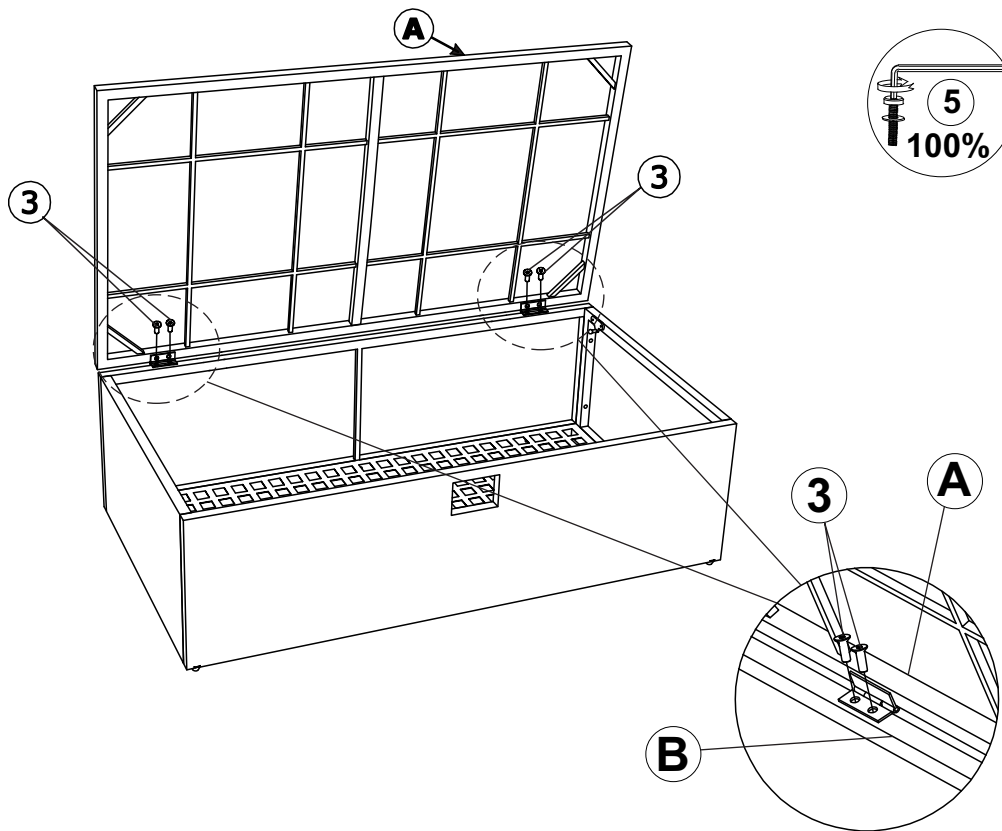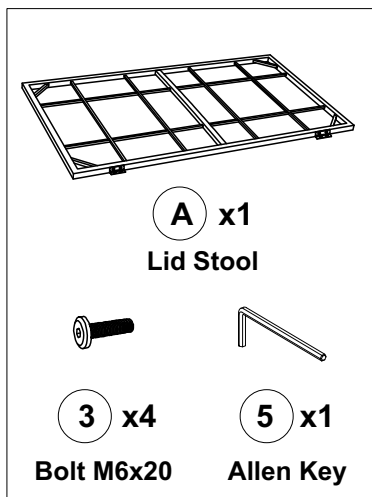



Connect Lid Stool (A), tighten Bolt (3) with Allen Key (5)

## STEP 6

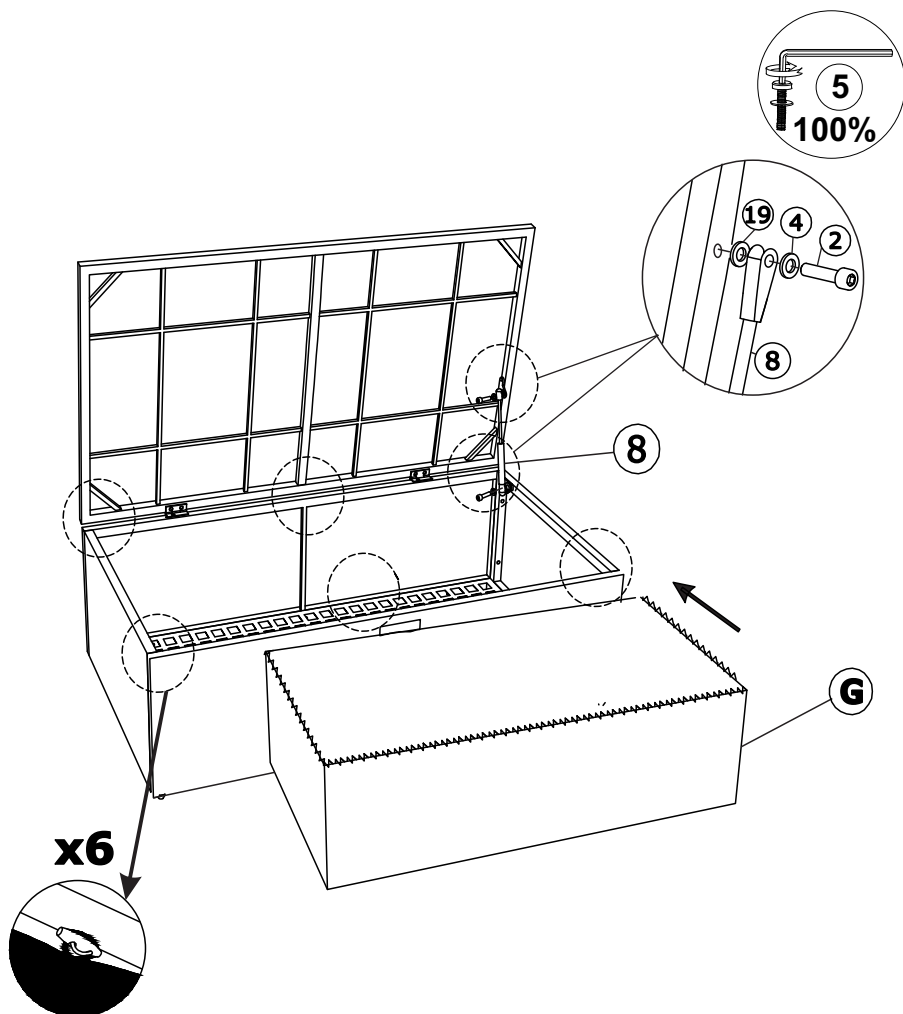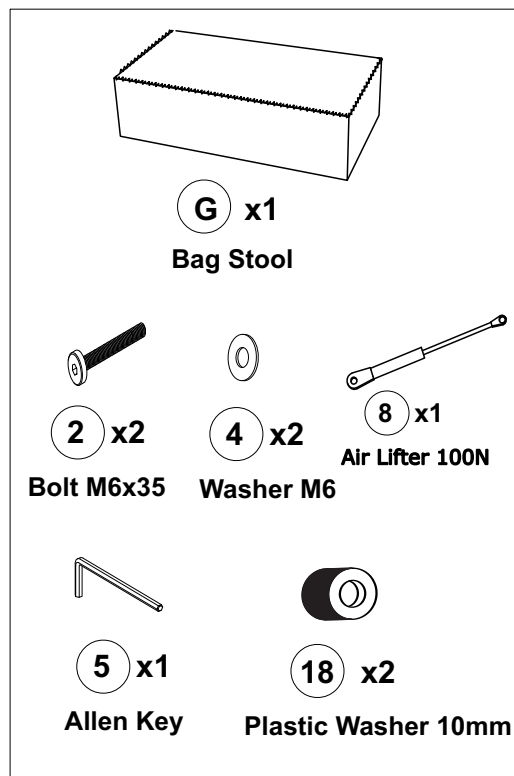

Connect Air Lifter between Lid Stool (A) & Stool, tighten Bolt (2) & washer (4), plastic Washers (18) with Allen Key (5). Then insert the bag stool (G) with 06 buttons attached.



# STEP 7

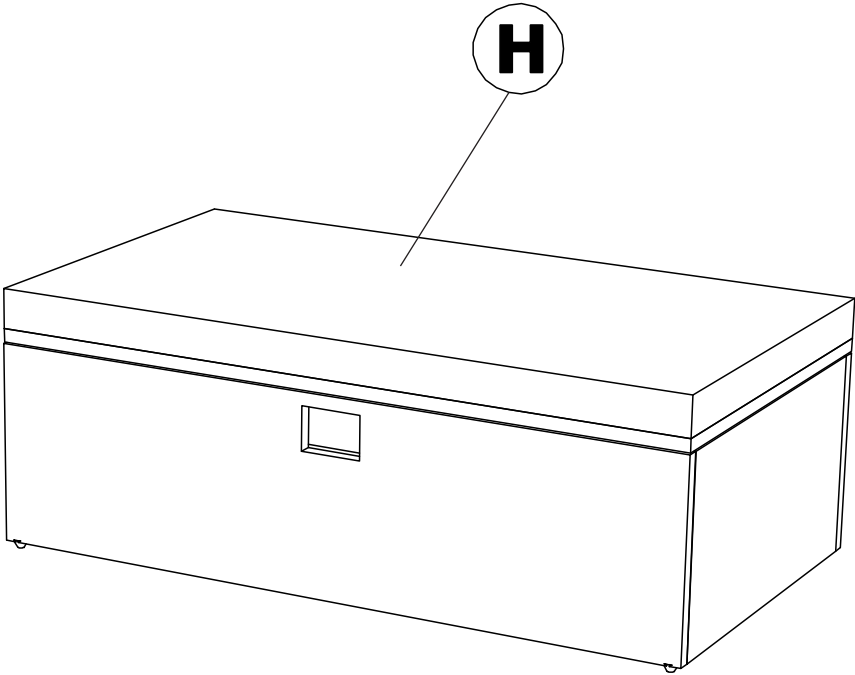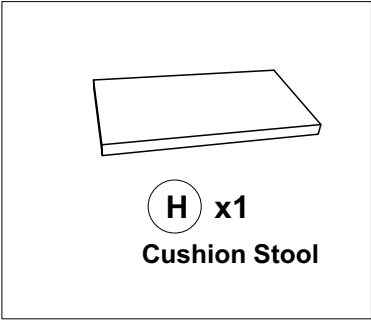

## Finish Stool



Put the Cushion Stool (H) on top of Stool.

# STEP 8

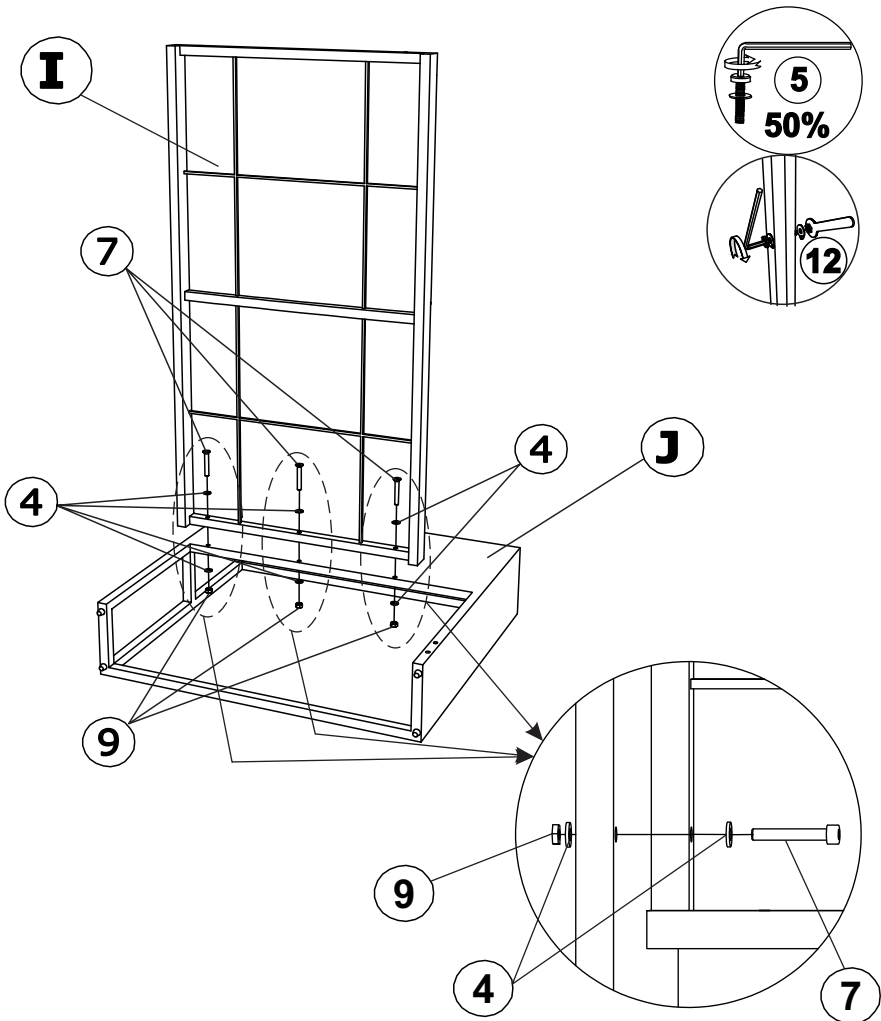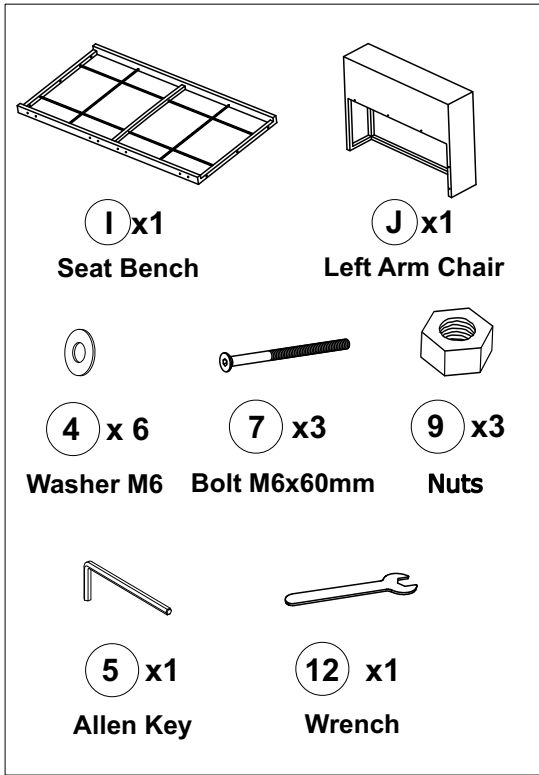



Assemble Left Arm Chair (J) & Seat Bench (I), tighten Bolt (7) & washer (4) & nuts (9) with Allen Key (5) & Wrench (12)

## STEP 9

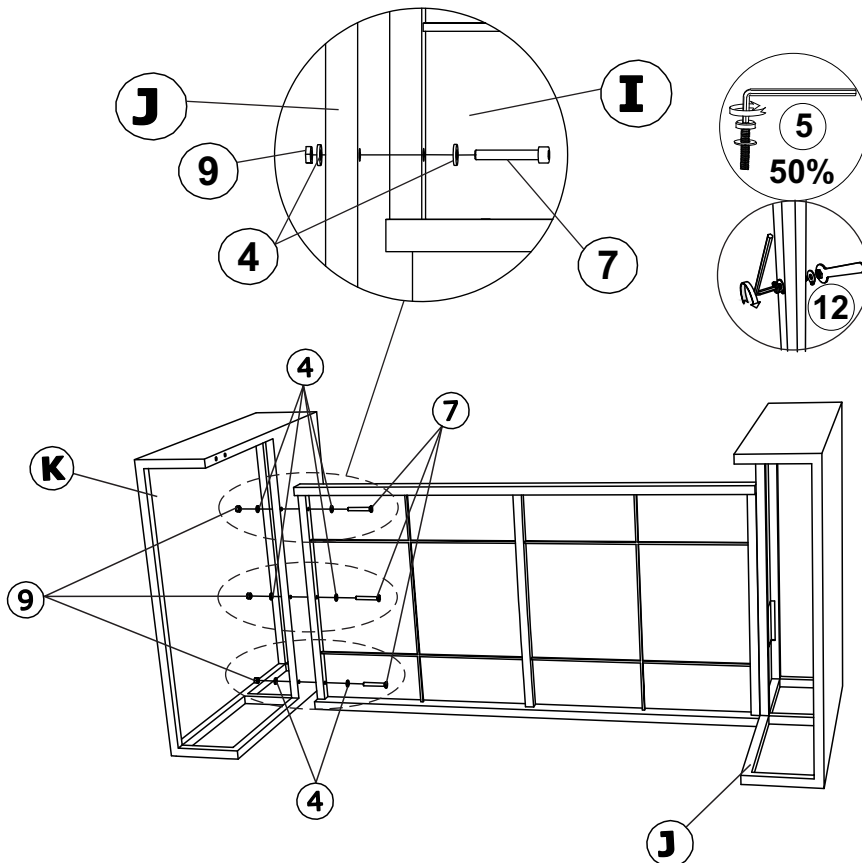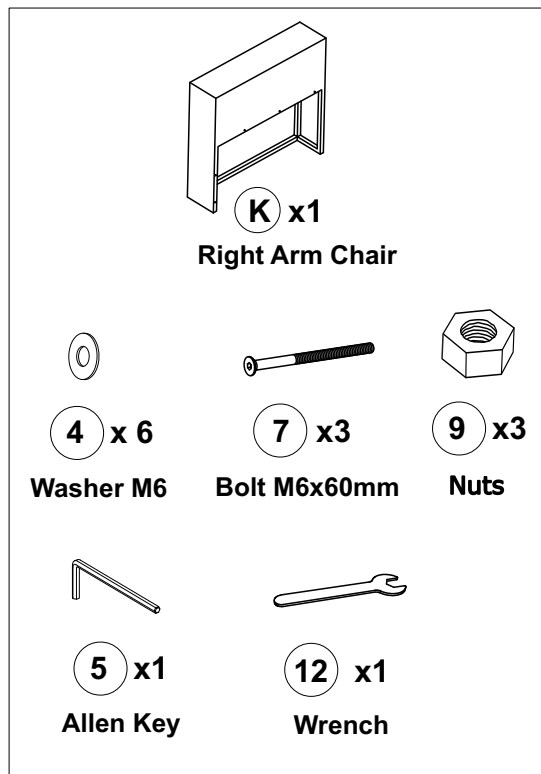



Assemble Right Arm Chair (K) & Seat Bench (I), tighten Bolt (7) & washer (4) & nuts (9) with Allen Key (5) & Wrench (12)

## STEP 10

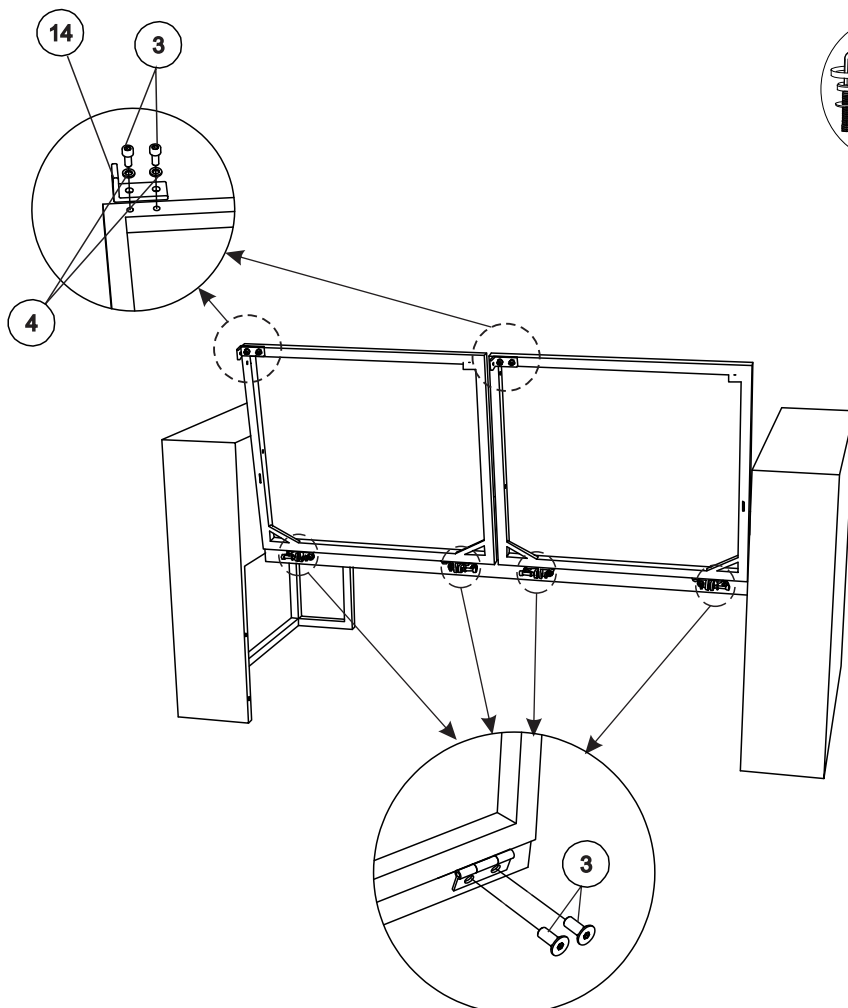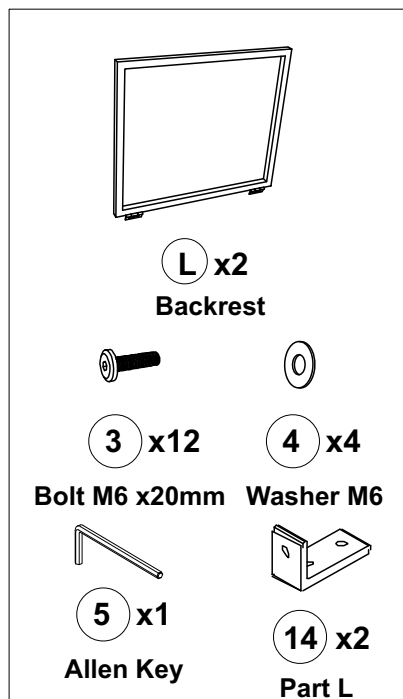



Assemble Backrest (L) & Part L (14) with Allen Key (5)  
Then Assemble Backrest (L) & Seat Bench (I), tighten Bolt (3) & washer (4) (10) with Allen Key (5)

## STEP 11

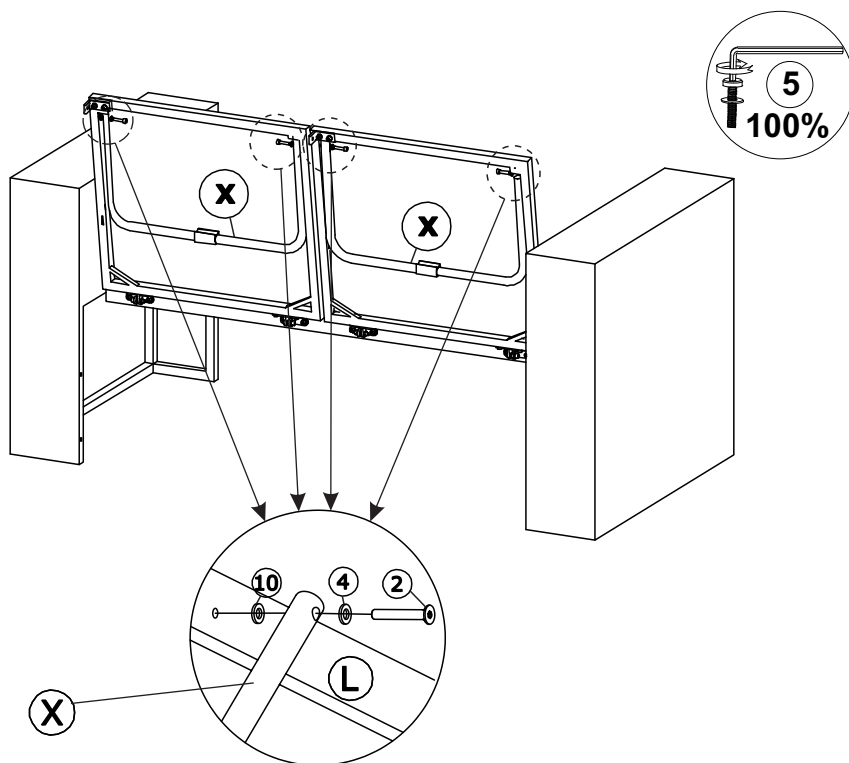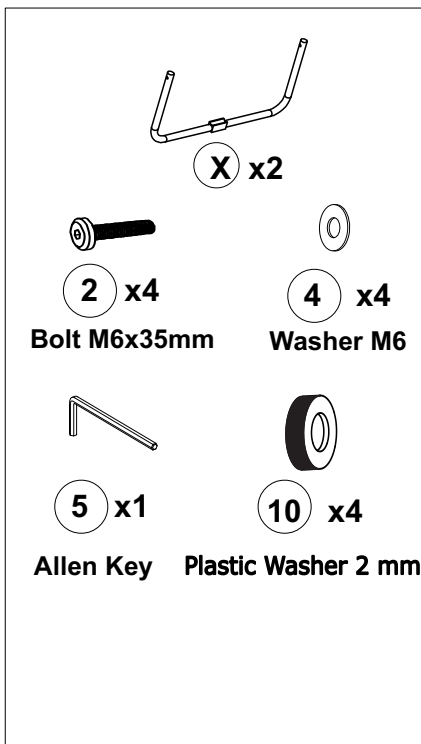




Assemble (X) & Backrest (L), tighten Bolt (2) & washer (4) & washer plastic (10) with Allen Key (5)

## STEP 12

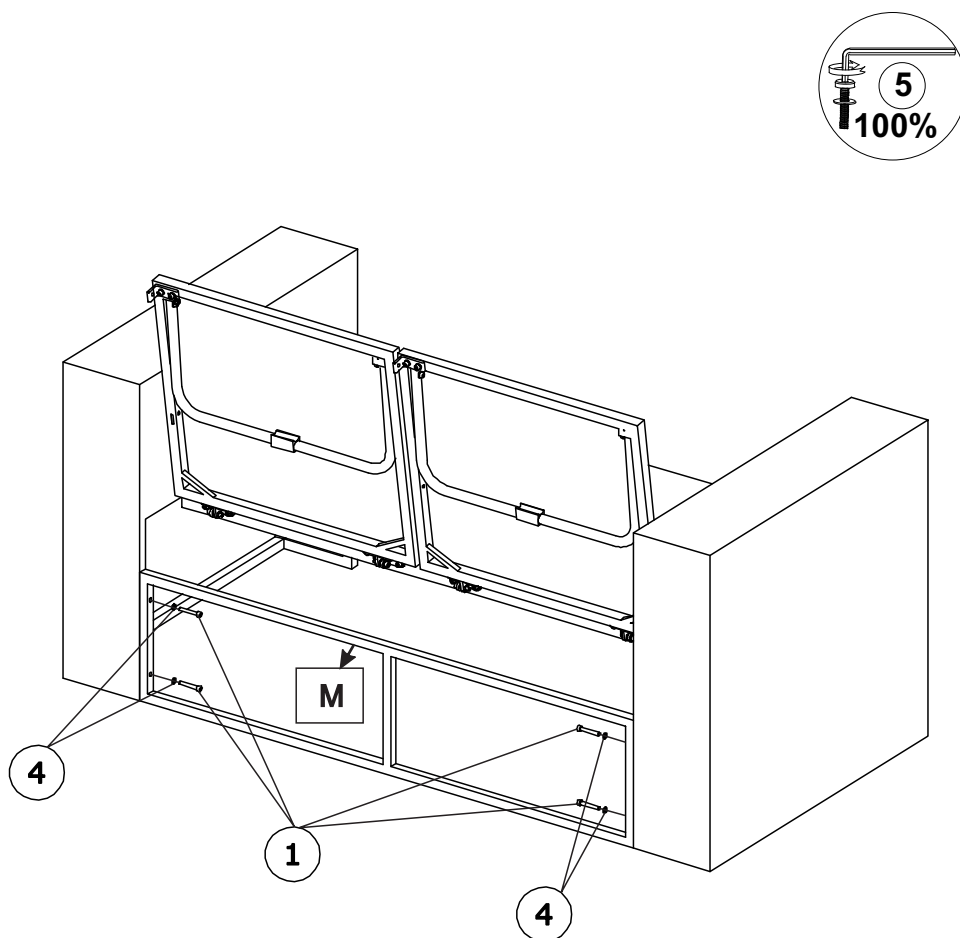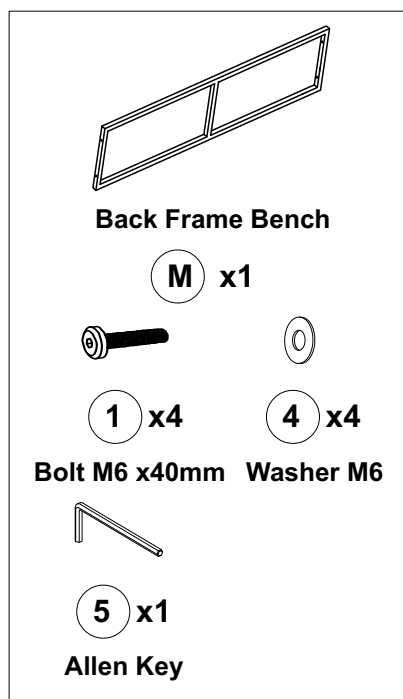



Assemble Back Frame Bench (M) & Bench , tighten Bolt (1) & washer (4) with Allen Key (5)

## STEP 13

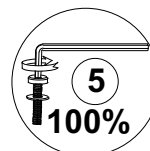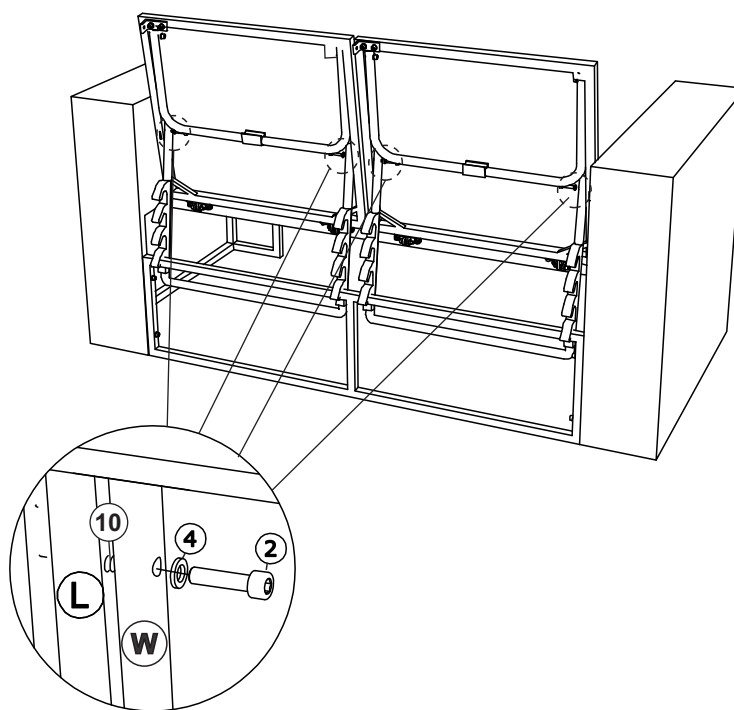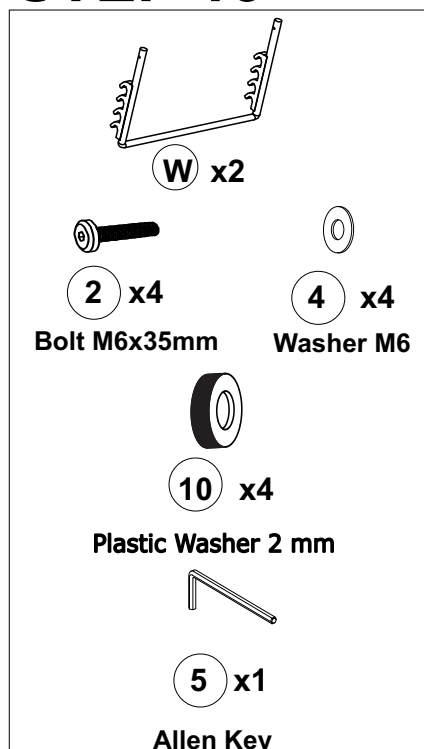



Assemble (W) & Backrest (L), tighten Bolt (2) & washer (4) & washer plastic (10) with Allen Key (5)

## STEP 14

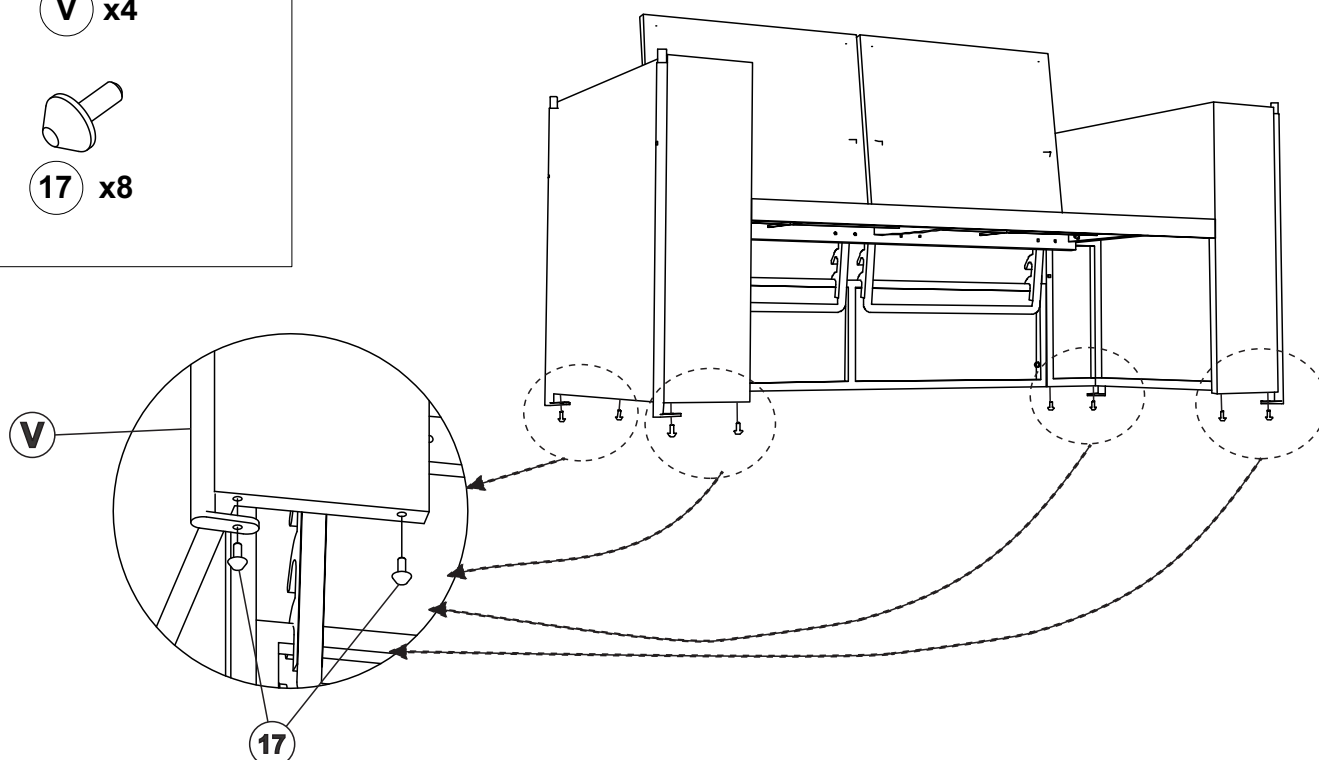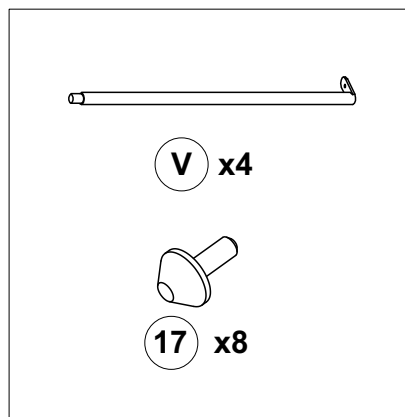



Assemble (V) & Bench, tighten Adjustable Foot (17) with HAND

# STEP 15

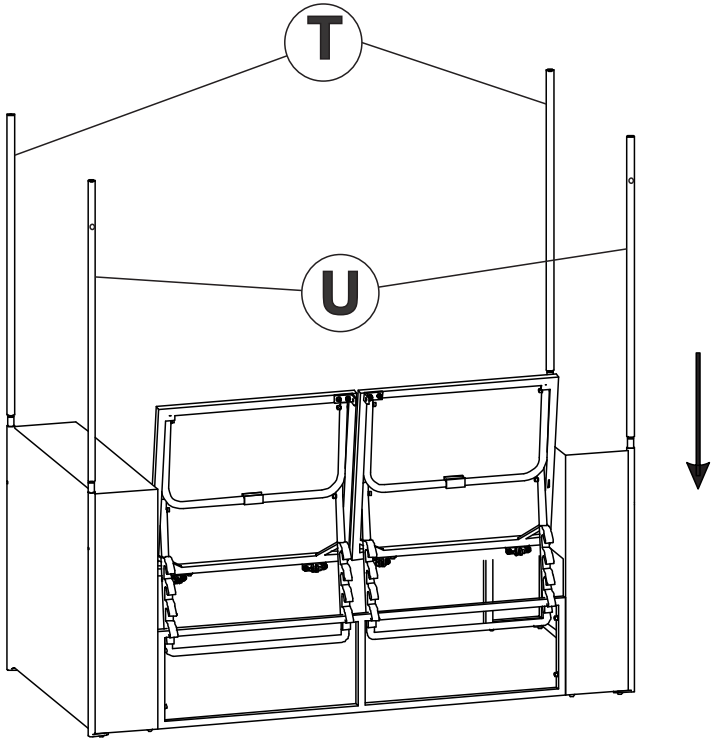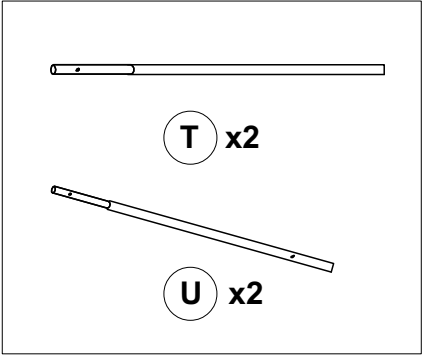



Assemble (T) & (U), Note: Hold of (T) , (U) straight with hold of (V)

# STEP 16

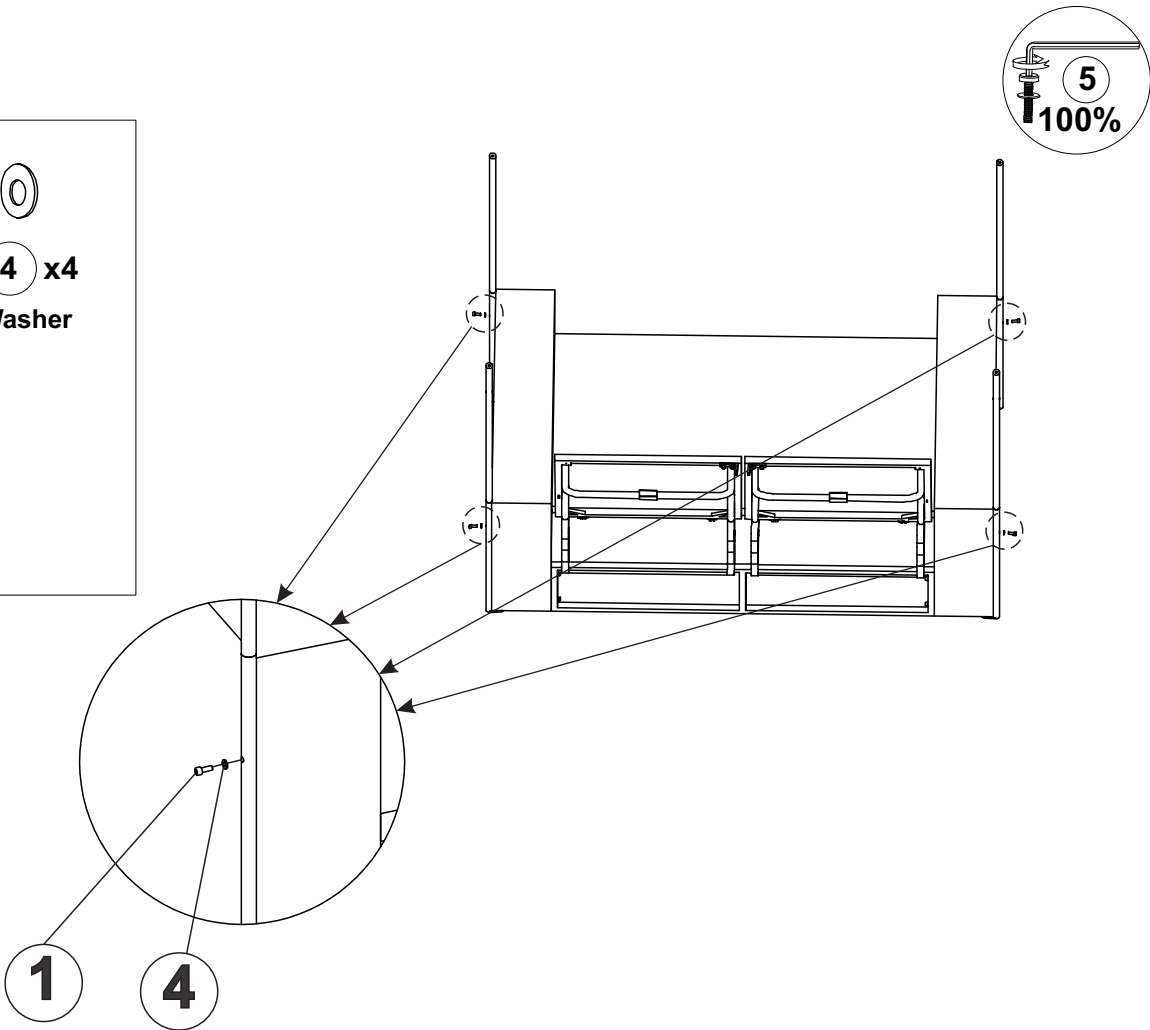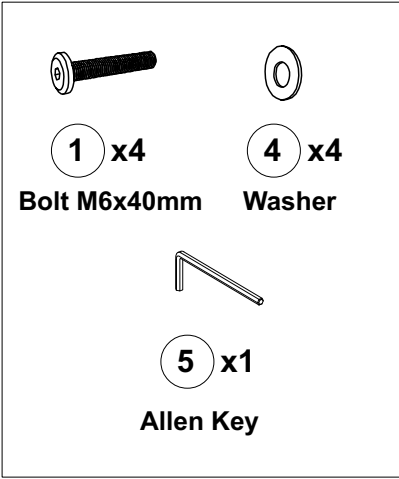



Assemble (V), (U), (T) , tighten bolt (1), Washer (4) with Allen key (5)

# STEP 17

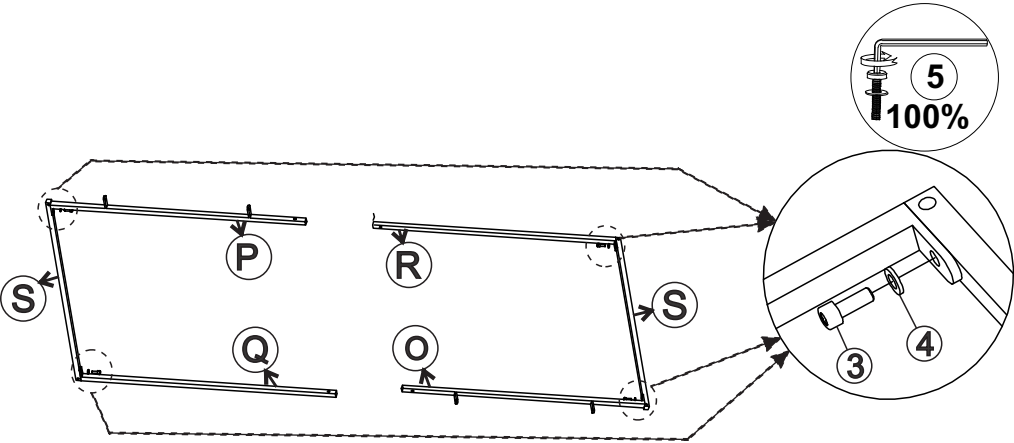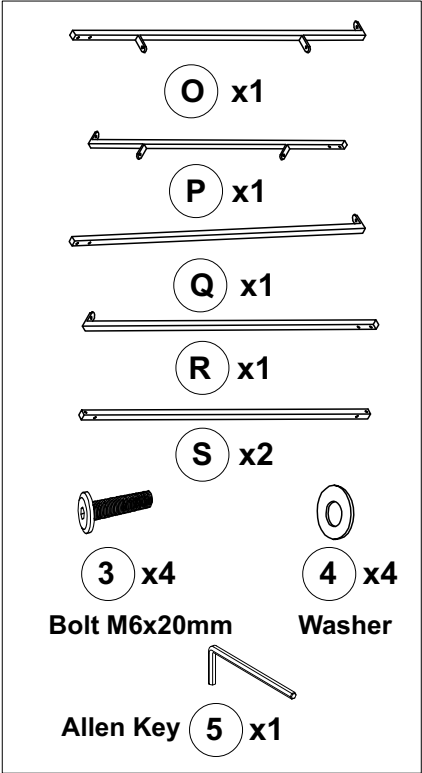


Assemble (O) & (P) with (S), tighten Bolt (3), washer (4) with Allen key (5)  
Assemble (Q) & (R) with (S), tighten Bolt (3), washer (4) with Allen key (5)

# STEP 18

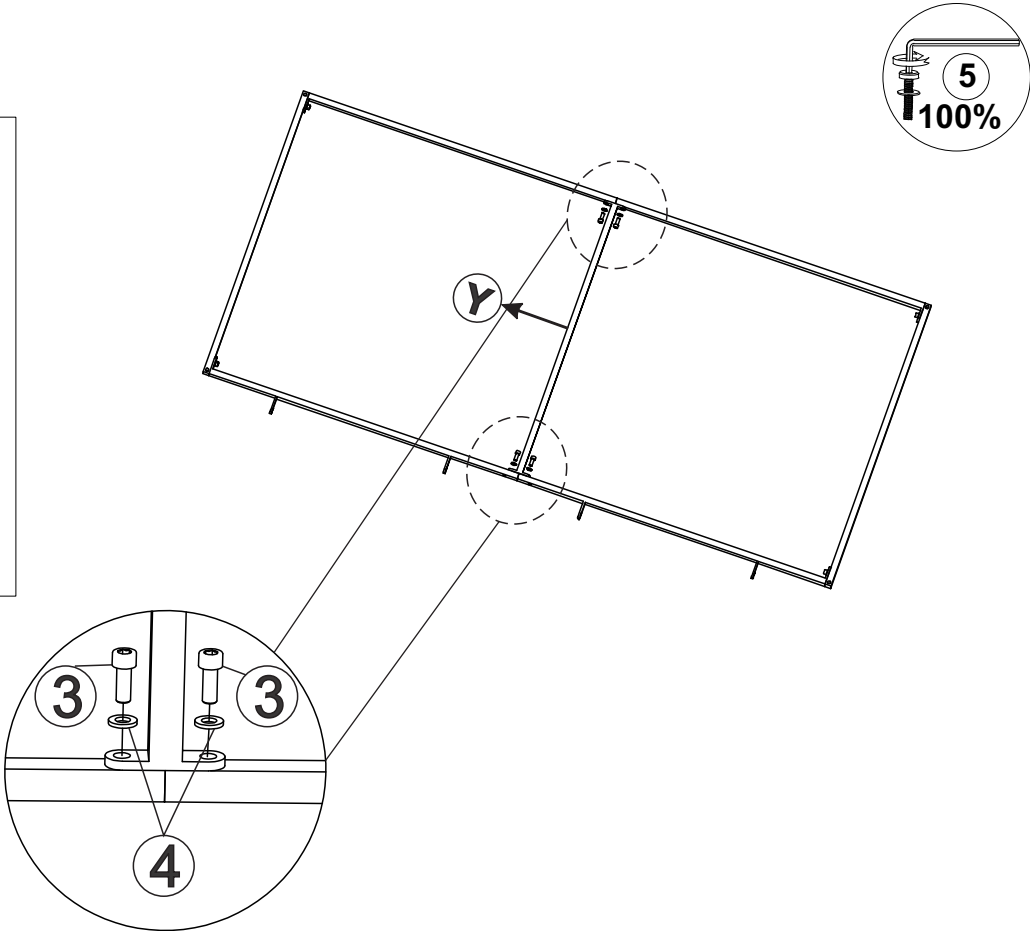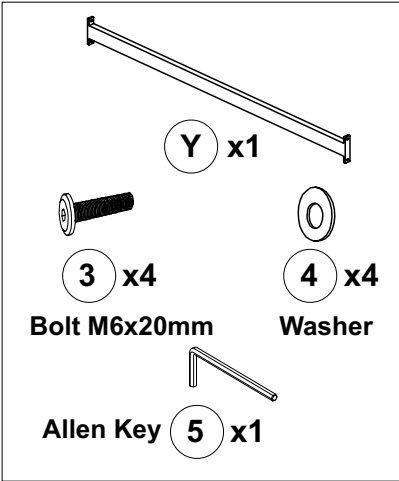


Assemble (Y) & Frame Step 17, tighten bolt (3), Washer (4) with Allen key (5)


# STEP 19




**3** x4  
Bolt M6x20mm




**4** x4  
Washer



**5** x1  
Allen Key




**16** x2  
Part I - Long

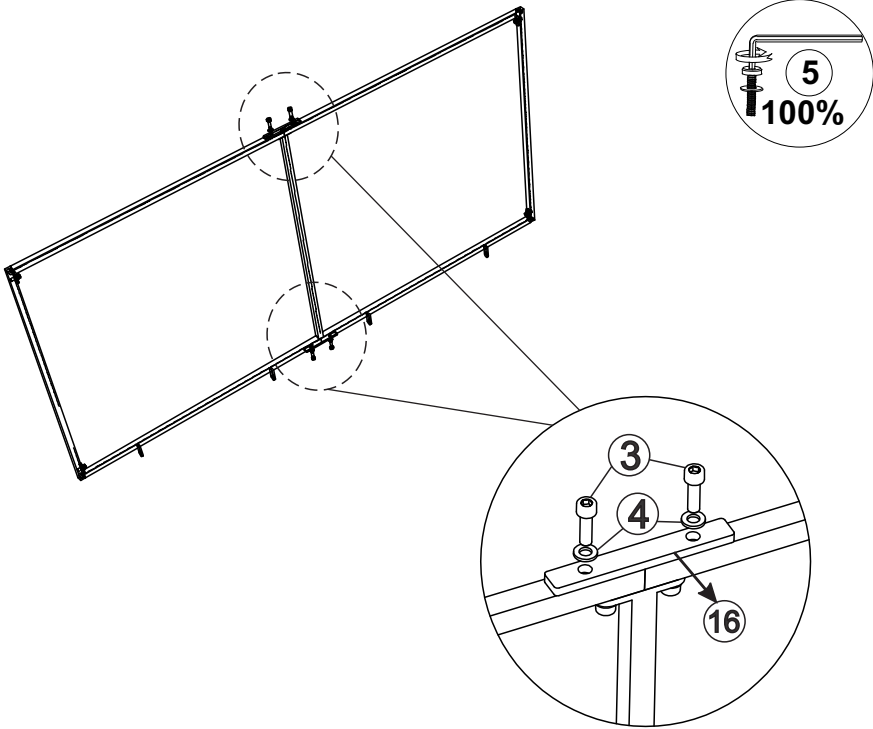


Assemble Part I-Long (16) with Frame Step 18, tighten Bolt (3), washer (4) with Allen key (5)


# STEP 20




**3** x4  
Bolt M6x20mm




**4** x4  
Washer



**5** x1  
Allen Key




**15** x2  
Part I - Short

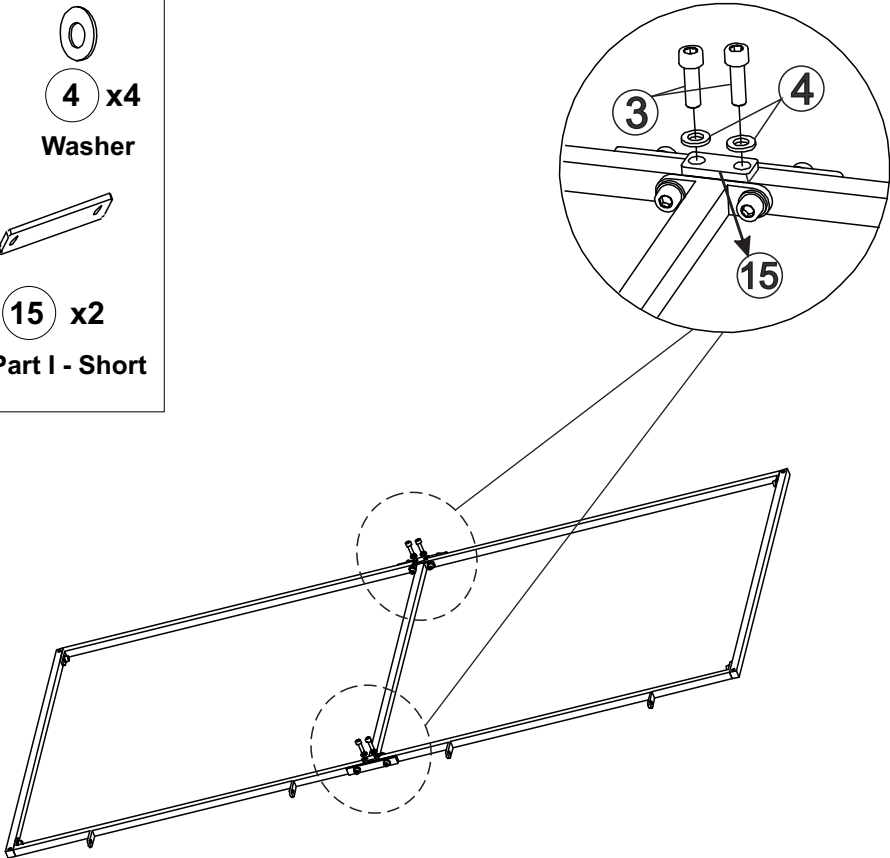


Assemble Part I-Short (15) with Frame Step 19, tighten Bolt (3), washer (4) with Allen key (5)




# STEP 21




2 x4  
Bolt M6x35mm



4 x4  
Washer




5 x1  
Allen Key

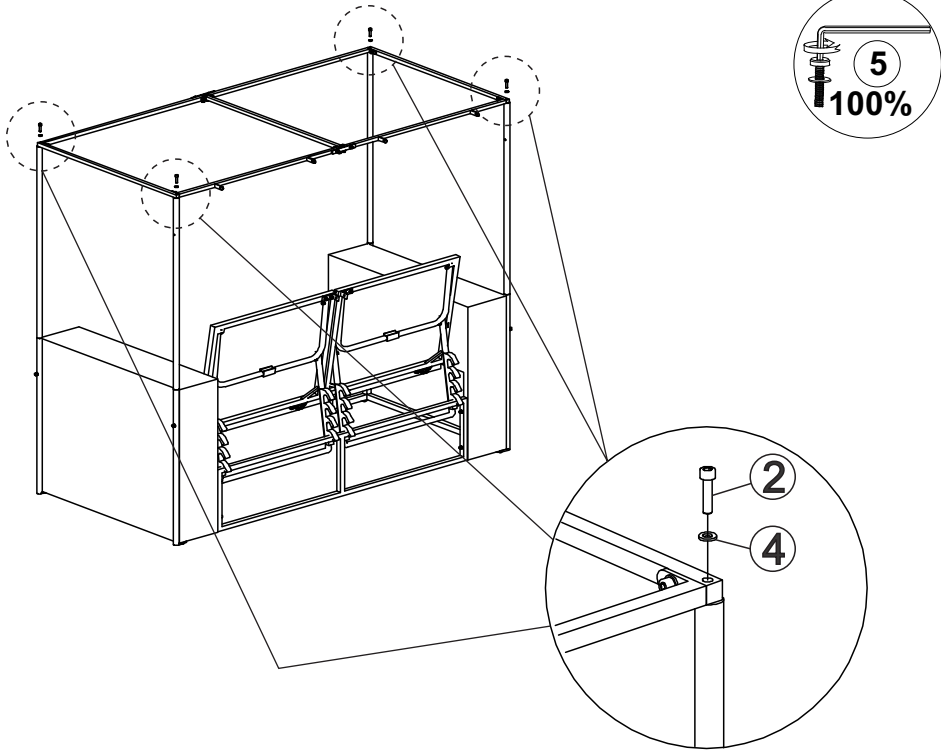


Assemble Frame Step (20) with Bench, tighten Bolt (2), washer (4) with Allen key (5)


# STEP 22

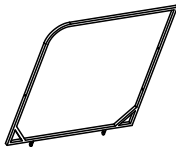


N x2  
Back Canopy




3 x4  
Bolt M6x20mm




4 x8  
Washer




9 x4  
Nuts




11 x4  
Plastic washer 5mm



5 x1  
Allen Key







12 x1  
Wrench

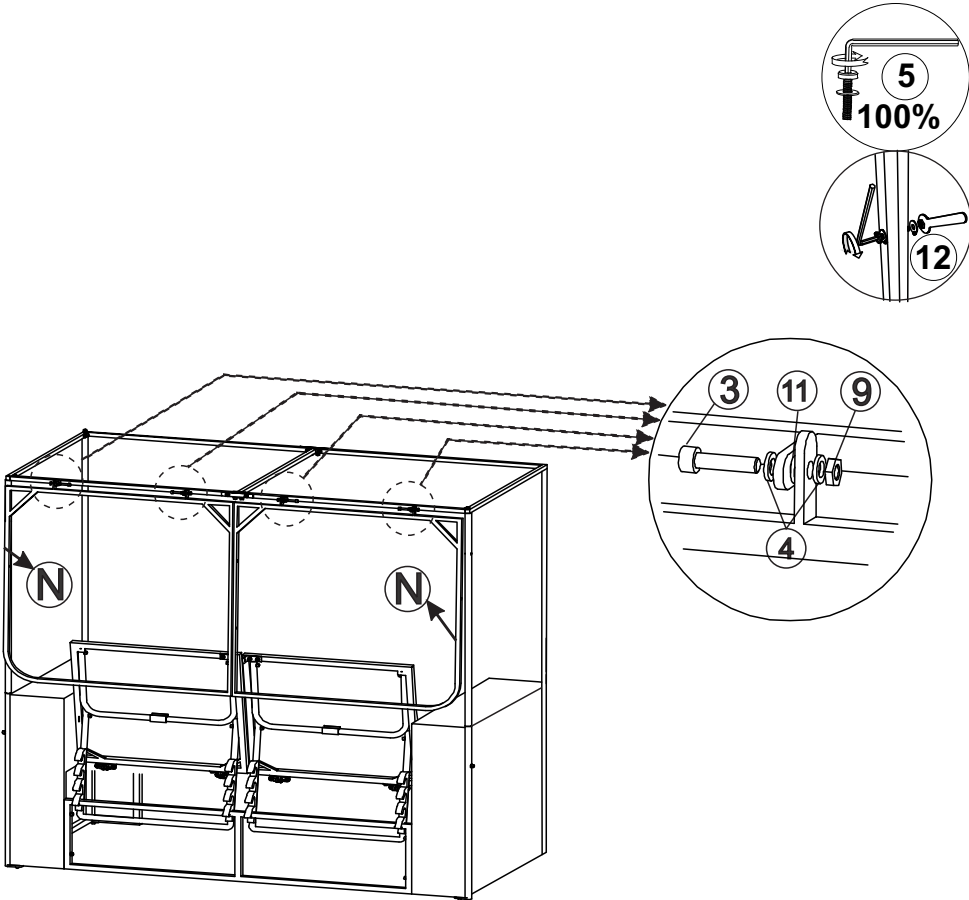





Assemble Back Canopy (N) with Frame Step 21, tighten Bolt (3), washer (4), (11), nuts (9) with Allen key (5) and Wrench (12)

## STEP 23

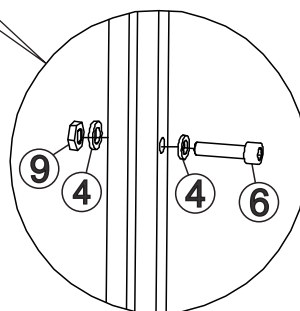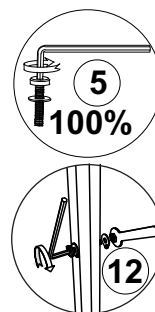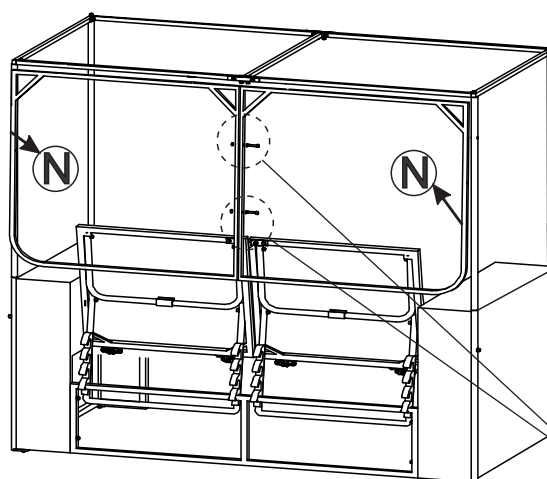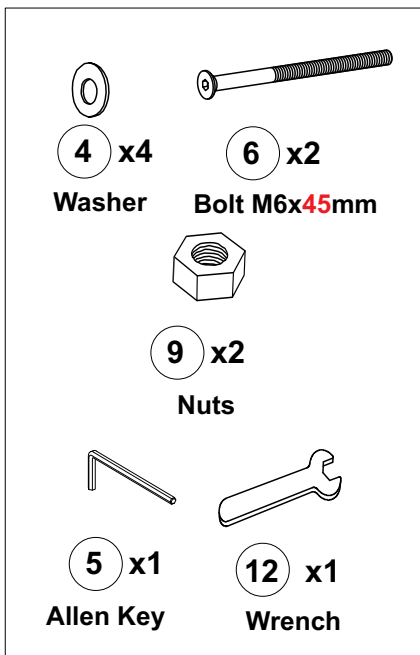



Assemble Back Canopy (N) & Back Canopy (N) , tighten Bolt (6), nuts (9) with Allen key (5) and wrench (12)

## STEP 24

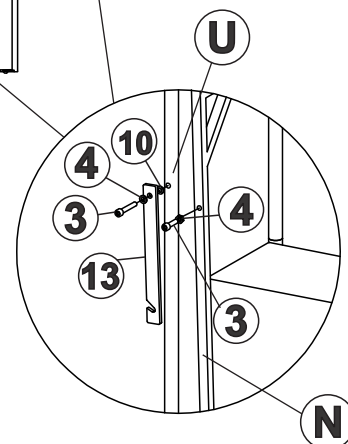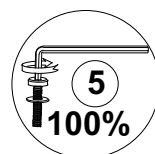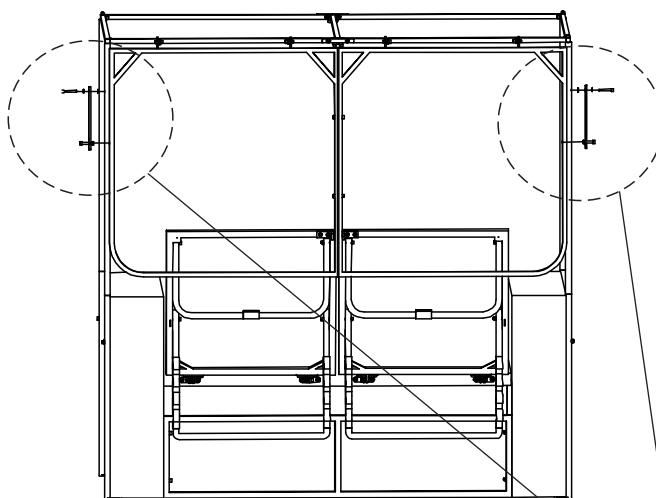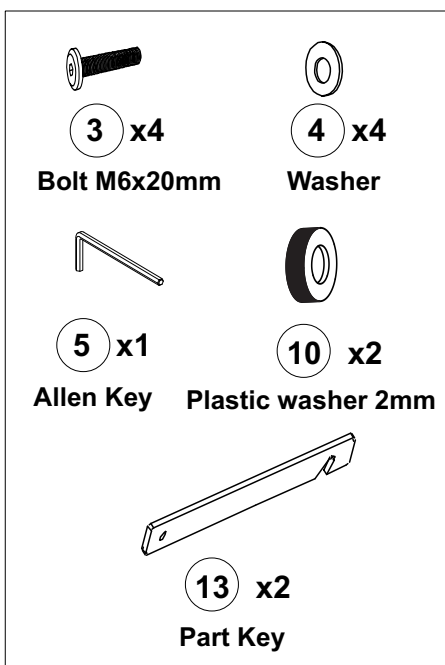


Assemble Part (13) with (U) , tighten Bolt (3), washer (4), (10), with Allen key (5)  
Tighten Bolt (3), washer (4) on Back Canopy (N) with Allen key (5)


# STEP 25

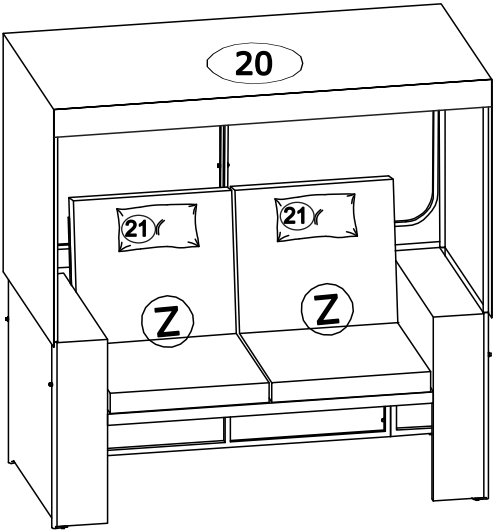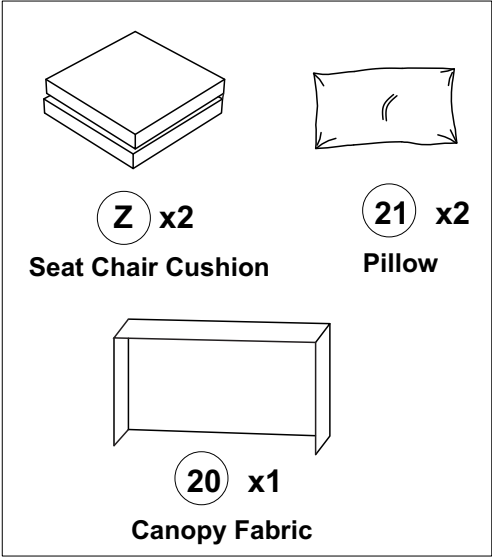


Put Canopy Fabric (20), Seat Chair Cushion (Z), Pillow (21) on Frame and Bench

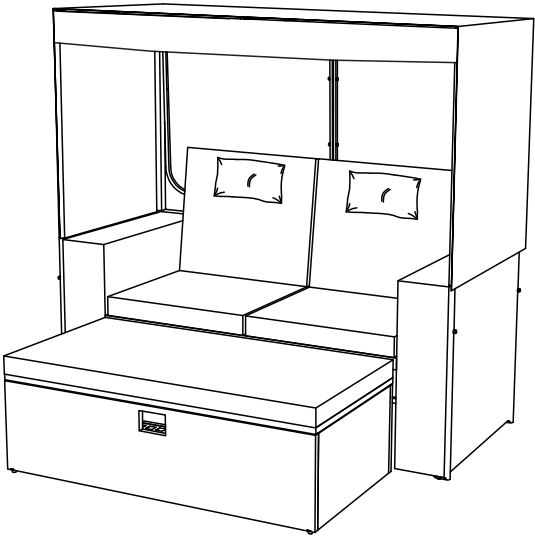


Option 1

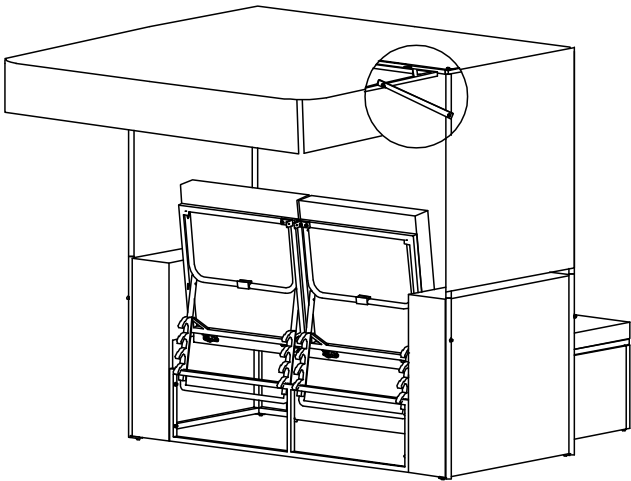

Option 2

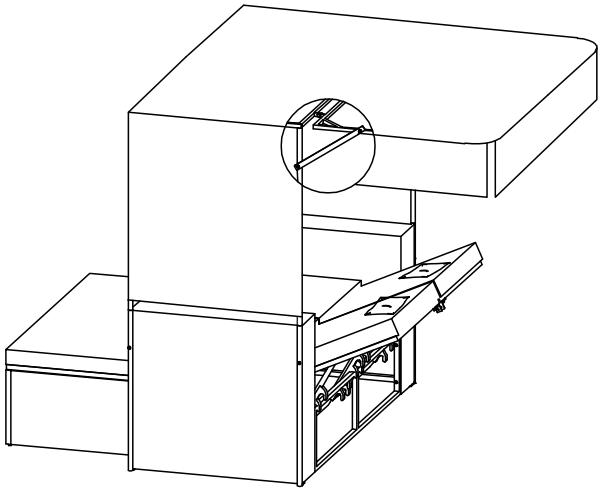

Option 3

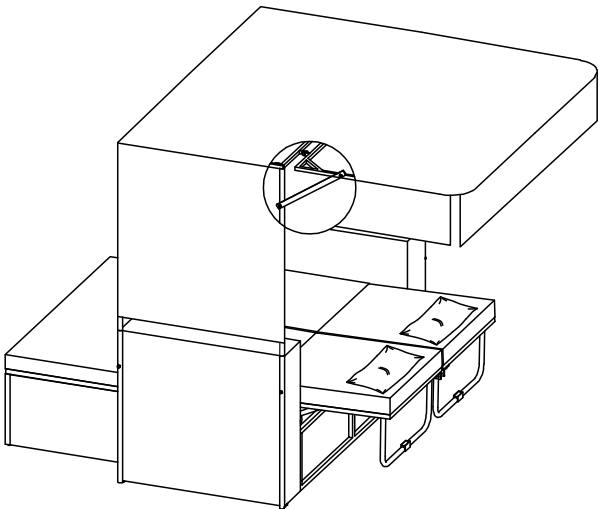

Option 4