

Installation Instructions

Please read the instructions carefully before installing the side step

Steps

1

Front Bracket: Please remove the rubber plug of the third hole from the front outside of the car chassis and then put T-screw into the hole. Remove the M6 screw inside.

Put on the front Bracket, screw on the front side of the bracket. Screw on the rear part with M6 screw. Please do not tighten them.

Please check the positions in the picture below



2

Middle Bracket: Remove 2 clips which are at the middle side of the car chassis. Find a hole hidden inside the guard plate. Cut out a small hole to

put on the T-screw

Put on the middle bracket. Screw on, but do not tighten it.



3

Rear Bracket: Find a oval hole at the rear side of the car chassis. Remove 2 clips of outside place. Find a hole hidden behind the guard plate and cut out a small hole to expose the factory hole.


Put T style screws into these holes and then put on rear brackets. Screw on but do not tighten them.

Note: The installation method of the left and right side is same.



4

Put the pedals on the brackets. Fix the pedals to the brackets. Adjust the positions of the brackets to the best place. Then tighten all screws. Install clips back.

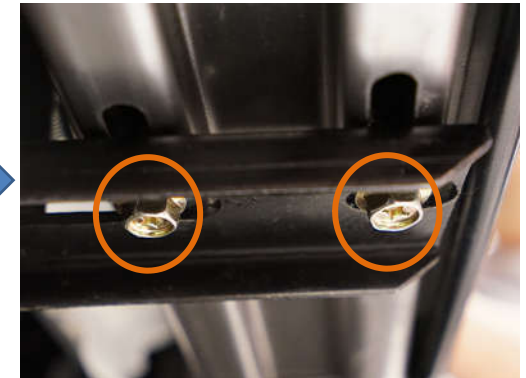

5

Make sure that the brackets and pedals are steady.

