


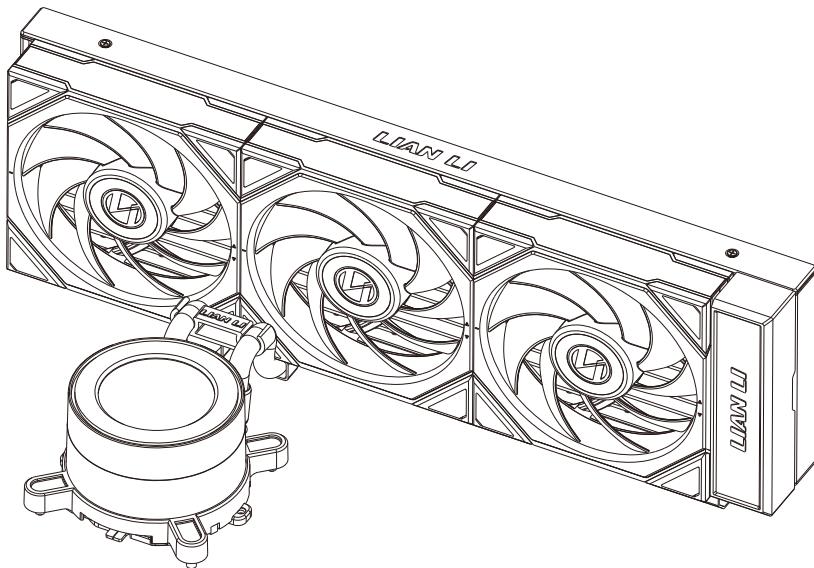

# Hydroshift II LCD-C 360TL




INSTALLATION GUIDE/安裝指南/安装指南

# Hydroshift II LCD-C 360TL


## Hardware List/零件盒部品一覽表/零件盒部品一览表

(A)		X1	(B)		X1	(C)		X1	(M)		X1
(D)		X18	(E)		X1	(F)		X4	(N)		X1
(G)		X1	(H)		X1	(I)		X2	(O)		X2
(J)		X1	(K)		X4	(L)		X4			


## Dimension Compatibility Check/安裝尺寸確認/安装尺寸确认

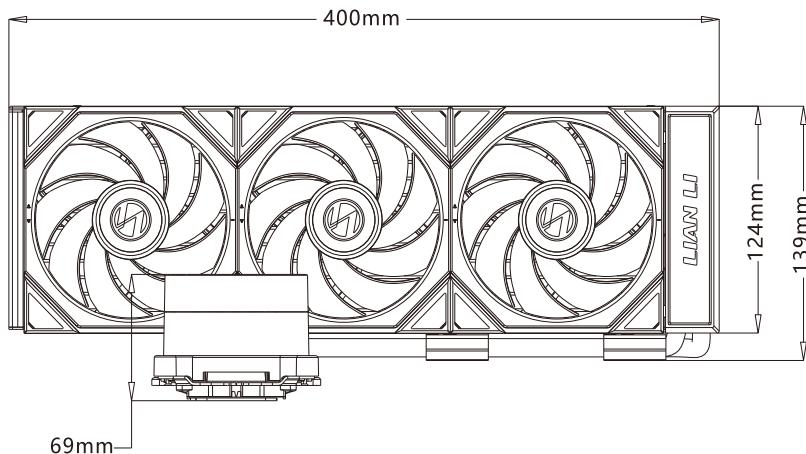

## Receiver Installation /接收器安裝/接收器安装

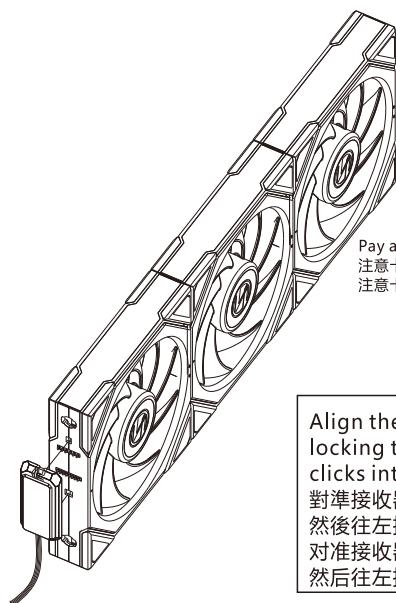

Pay attention to the slot size/  
注意卡槽大小/  
注意卡槽大小

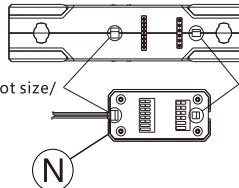


Pay attention to the slot size/  
注意卡槽大小/  
注意卡槽大小

Align the slots on the receiver and fan, insert the receiver's locking tab into the fan's groove, then push leftward until it clicks into place./


對準接收器與風扇的槽位，把接收器的卡位放進風扇的卡槽中，然後往左推，使其卡到風扇上。

对准接收器与风扇的槽位，把接收器的卡位放进风扇的卡槽中，然后往左推，使其卡到风扇上。

push leftward/往左推




## Adjust the position of the water pipe/調節水管位置/调节水管位置

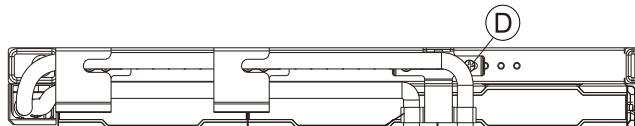

When the screws are unscrewed, this metal component is able to move from side to side./

擰開螺絲後，此金屬件可左右移動/  
拧开螺丝后，此金属件可左右移动

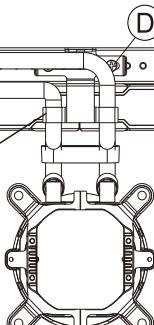

It is possible to adjust the position of the screw based on the case to control the water pipe fastener so that it is right above the CPU./

可根據機箱調節螺絲位置，  
控制水管扣件，使其處於CPU正上方/  
可根据机箱调节螺丝位置，  
控制水管扣件，使其处于CPU正上方

# Hydroshift II LCD-C 360TL

## Intel LGA1700 installation steps/Intel LGA1700 安裝步驟/Intel LGA1700 安装步骤：

### Step 1: Install the backboard and clip bracket/步驟1:安裝背板以及扣具支架


Please install the bracket

after installing the CPU./

請安裝完CPU後再安裝支架/

请安装完CPU后再安装支架

步骤1: 安装背板以及扣具支架

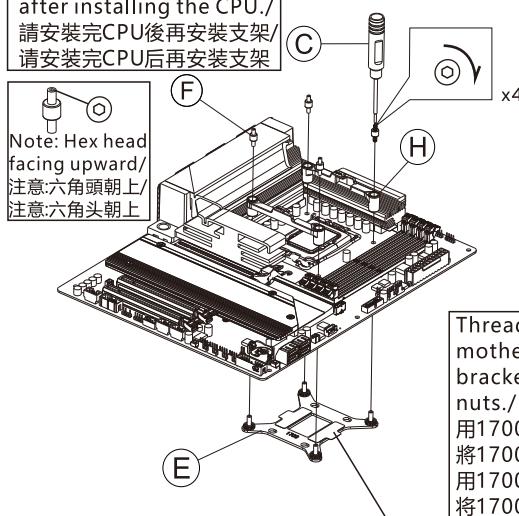


Pay attention to  
the installation direction  
註意安裝方向



Thread the LGA 1700 backplate nuts through the  
motherboard, then secure the LGA 1700 mounting  
bracket onto the motherboard using dual-threaded  
nuts./

用1700背板螺母穿過主板，用雙頭螺母  
將1700扣具支架固定在主板上/  
用1700背板螺母穿过主板，用双头螺母  
将1700扣具支架固定在主板上

Before installation, remove the protective film from the  
double-sided adhesive tape on the backplate/  
安裝前請先撕掉背板上面雙面膠的保護膜/  
安装前请先撕掉背板上面双面胶的保护膜

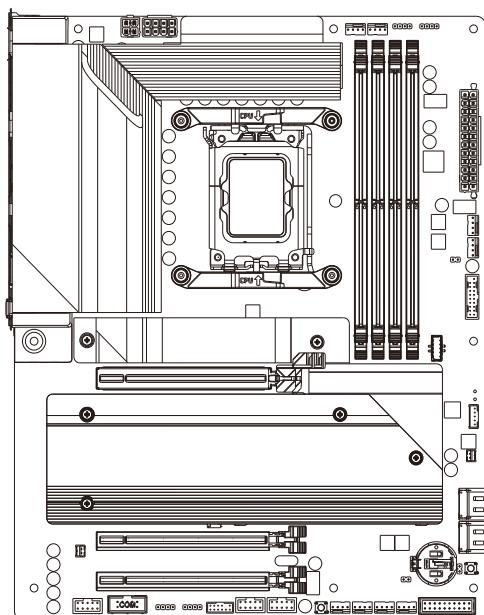

Note: Install the mounting bracket assembly  
first before securing the motherboard to the  
case. It is strongly recommended to complete  
this step prior to motherboard installation. If  
the motherboard is already installed, lay the  
case horizontally to simplify the process./

注意：先将扣具支架安装好之後，再将主板  
安装於機箱。建議先安装好這一步再裝主板，  
如果主板已經先裝了，建議把機箱放平來裝/

注意：先将扣具支架安装好之后，再将主板  
安装于机箱。建议先安装好这一步再装主板，  
如果主板已经先装了，建议把机箱放平来装。

As shown in the diagram, the retention bracket  
is oriented correctly./

如作圖所示，扣具支架為正確的方向/  
如作图所示，扣具支架为正确的方向