




产品说明书

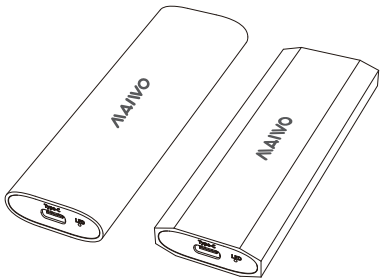

K1689


K1690

固态硬盘盒

操作指南

二、连接电脑：

2.1. 将安装好硬盘的PCBA板装入硬盘盒，然后用Type-C接口数据线连接电脑端。

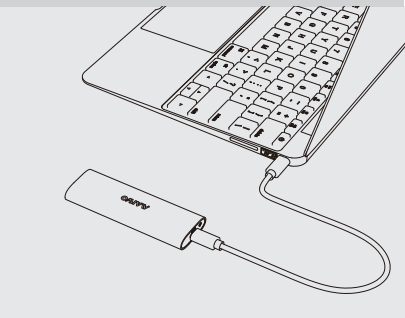

注：如果是旧硬盘，那么在“计算机”里可以发现新增的硬盘，并可以正常读写。

如果是新硬盘，需要先进行初始化、分区和格式化后，才能使用。

前言

感谢您购买MAIWO（麦沃）产品，为了您能够更好的使用本产品，请您在正式使用本产品前，仔细阅读使用本手册所提及的操作要点及注意事项。

声明事项

麦沃只对产品本身存在的问题负有保修和维修责任，对于用户操作所引起的数据资料删改或丢失，不负任何责任，也不因此造成的其它间接损失负责。鉴于数据资料的价值不可估量，正式操作本产品之前，重要资料请自行备份。


注意事项

如果您使用的是新的硬盘，需要将硬盘初始化并格式化后才能正常出盘。具体参考新硬盘初始化、分区与格式化教程。

操作指南


三、新存储卡初始化流程：

3.1.新硬盘初始化：鼠标右键点击“计算机”，查看“管理-磁盘管理”发现新磁盘，将其初始化。

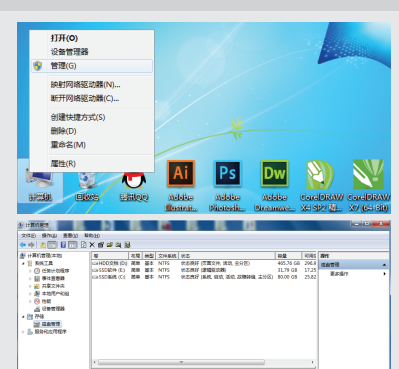

注：新硬盘初始化有MBR和GPT两种格式选择，如果您的硬盘小于或等于2T，请选择MBR格式，大于2T请选择GPT格式。

产品参数

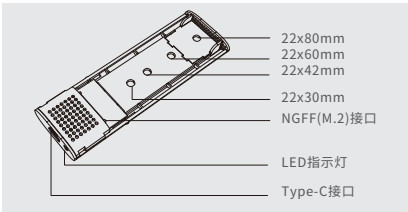


产品名称	固态硬盘盒
型 号	K1689/K1690
盘 位	单盘位
内部接口	M.2 SATA协议或NVMe协议均支持
传输接口	Type-C
材 质	铝合金+塑胶
功 能	数据传输
指 示 灯	通电蓝色灯长亮，硬盘读写数据闪烁
操作系统	Windows7/8/10/11/Mac OS/Linux

操作指南

四、存储卡分区流程：


4.1. 分区格式化：新硬盘初始化后将会变成“磁盘1”，用鼠标右键点击“磁盘1”，然后点击“新建简单卷”进行分区，根据提示操作，可选择需要分区的大小，并勾选格式化选项，可以依次建立多个分区，直到完成。

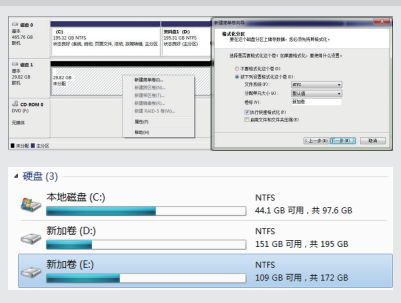

操作指南

一、产品安装：

- 1.1. 按推硬盘盒上箭头所指方向取出硬盘盒PCBA板内托。
- 1.2. 然后把硅胶塞塞入硬盘对应孔位。
- 1.3. 再将NGFF(M.2)SSD或M.2 NVMe协议固态硬盘倾斜45°插入PCBA板NGFF(M.2)接口。
- 1.4. 将硅胶散热片贴在硬盘上，再将铝片贴在硅胶片上。
- 1.5. 调整硅胶塞固定硬盘,装上铝壳和PCBA板内托。

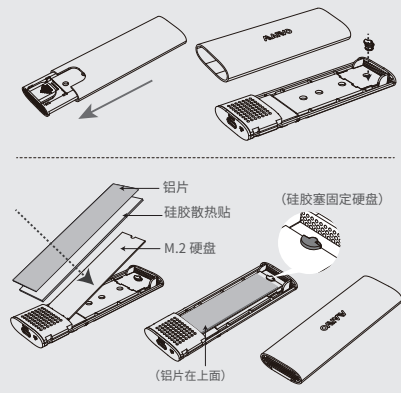

关于保修


- A、本产品执行国家三包政策：如有质量问题，7天包退，15天包换，1年保修。起始时间以客户收到产品的日期起计算。
- B、电源线、USB线等配件不在保修范围内，如损坏需有更换。
- C、天灾造成损坏不在保修范围内，可以提供有偿维修服务。
- D、消费者使用不当，造成产品故障，可以提供有偿维修服务。

如果您在操作过程中遇到问题，请拨打我们的客服热线4000-666-205，我们的技术人员将为您提供技术支持。

保 修 卡			
产品品牌		型 号	
购买日期		保修期限	
用户姓名		联系电话	
客户地址			
技术支持			
客服热线			
销 售 商			
厂家地址			



User Manual

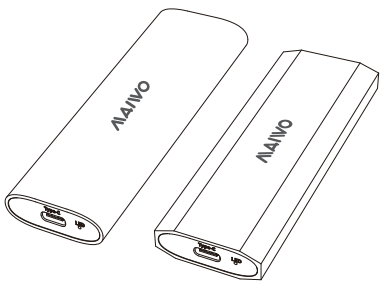


K1689

K1690

M.2 SSD Enclosure

Feature

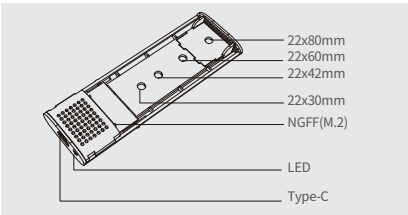


Name	MAIWO USB Type-C Enclosure for M.2 NVMe and SATA SSD
Model	K1689/K1690
Interface	USB Type-C
Support SSD type	NVMe& SATA SSD, M-Key, B+M Key
Support SSD size	2230, 2242, 2260, 2280
Rating	5V via Type-C
USB speed	Up to 10Gbps for NVMe, 6Gbps for SATA
Material	Aluminum alloy+plastic
Compatibility	Windows7/8/10/11/Mac OS/Linux
Indicator	Blue light always on after power, flashing when SSD read and write

Quick Installation Guide

1. Installation:


- 1.1 Press the SSD compartment lock and slide the compartment out of the enclosure.
- 1.2 Push a silicon plug into the hole that corresponds to SSD form factor.



- 1.3. Hold the SSD at approximately 45°, and gently insert it into the M.2 socket.

⚠ (Important! Hold the SSD at an angle as illustrated when inserting it into the socket. Inserting the SSD flat can damage the connector's and socket's pins.)

- 1.4. Press the SSD down so it lies flat in the compartment. Turn the silicon plug so the lip holds the SSD in place.

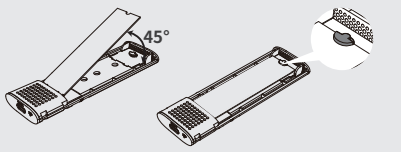


①


Quick Installation Guide

1. Installation:

- 1.5. Attaching the Thermal Pad: (Optional)
1.5.1. Remove the protective strip from the silicon pad to expose the tacky surface, and press the pad onto the top of the SSD.
1.5.2. Remove the protective strip from the top of the silicon pad. Then remove the protective strip from the metal cover, and press the cover onto the pad.

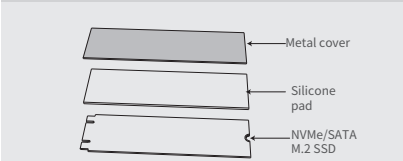

- 1.6. Slide the SSD compartment back into the enclosure until the lock clicks shut.

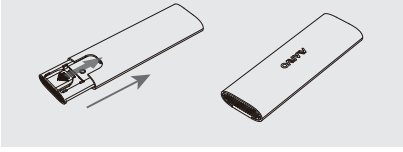


②

Quick Installation Guide

1. Installation:

- 1.5. Connect Type-C cable with housing and PC

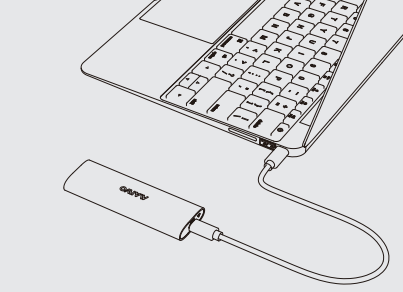


Remark: For partitioned SSD, it will be recognized as "New Volume" after connect with USB cable, it can be read and write directly; for new SSD, you must do initialization and partition before recognize after connect with PC.

③

Quick Installation Guide

2. New hard disk format:

- 2.1. View "computer - Manage - disk management" to find the new disk.

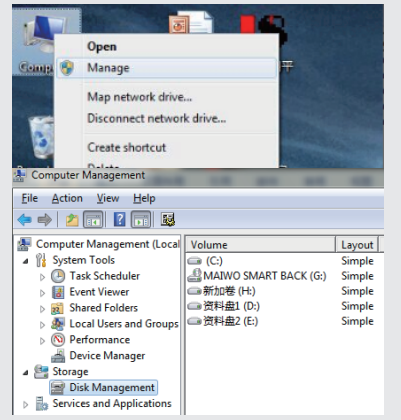


④

Quick Installation Guide

2. New hard disk format:

- 2.2. Right click the "Disk 1", then click "New Simple Volume".

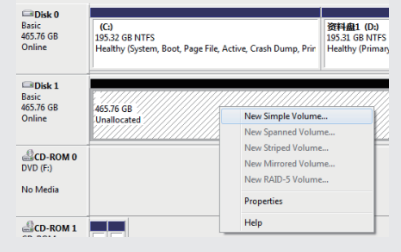


⑤


Quick Installation Guide

3. Hard disk partition:

- 3.1. According to the instruction, choose the size of partition, then click "Next" to finish.

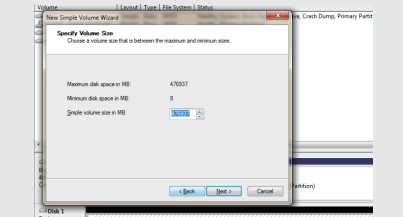

- 3.2. Then you can find the new hard disk in the "Computer", it's ready to be use.

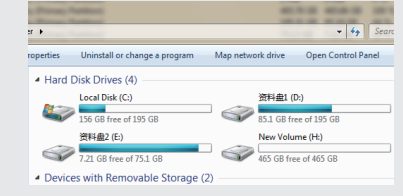

⑥