

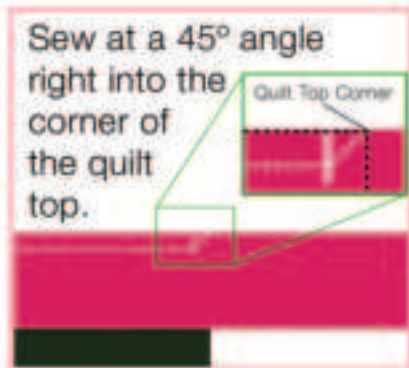


## Sharp Mitered Corners

Mark the stopping point with the Prep-Tool & Marker.

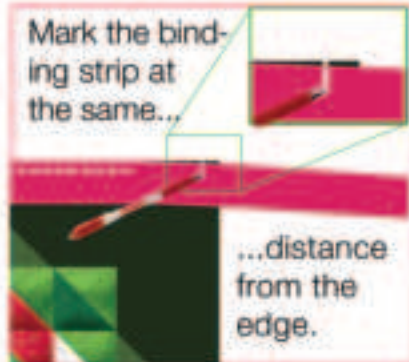

Do the same in the other corners and then stop when you get about 10 to 12 inches from where you started and take a few back-stitches.

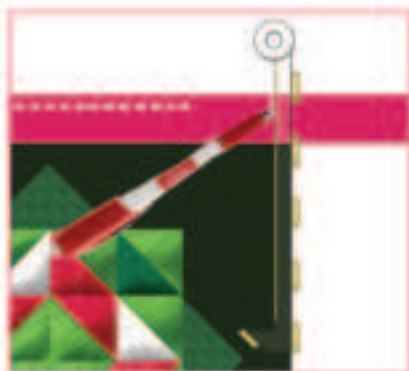