


Ergo-Series E6W Barrel Sauna




Note: Please read manual before construction

Front & Back Walls

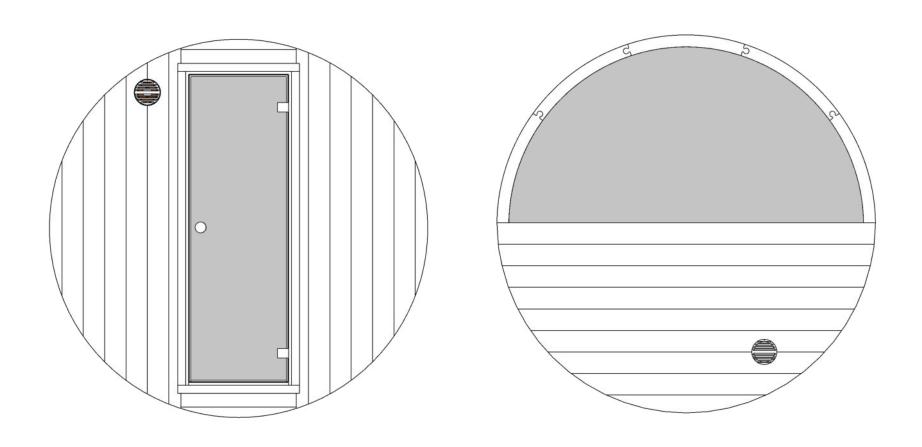


E6W Barrel Sauna 59D" x 81H" **Details list.** 6c • 6d • 6a **९** 6b • 63" + 87 16" + 733 14" 531/2° - 101/3° - 363/3° × 13/3° × 13/3° (x2) (x1) (x1) (x2) (x2)(x1) (x1) (x1) (x2)10a L=~256" B .5d (x2) x2 drain set (x2)(x2) (x2)(x2) (x2) **▶ B1** 5911. · 101/ · • 863/ ·) (x1)(x38/50/62) **20d** 20b (x5/7/8)(x2)(x2)(x2) (x1) Bit PH2 (x16) (x2)~2lbs. (x15) (x90) (x45) (x150) (x50) (x1)20c € (x2) 20a 🖢 (x2) (x3)


Tools needed

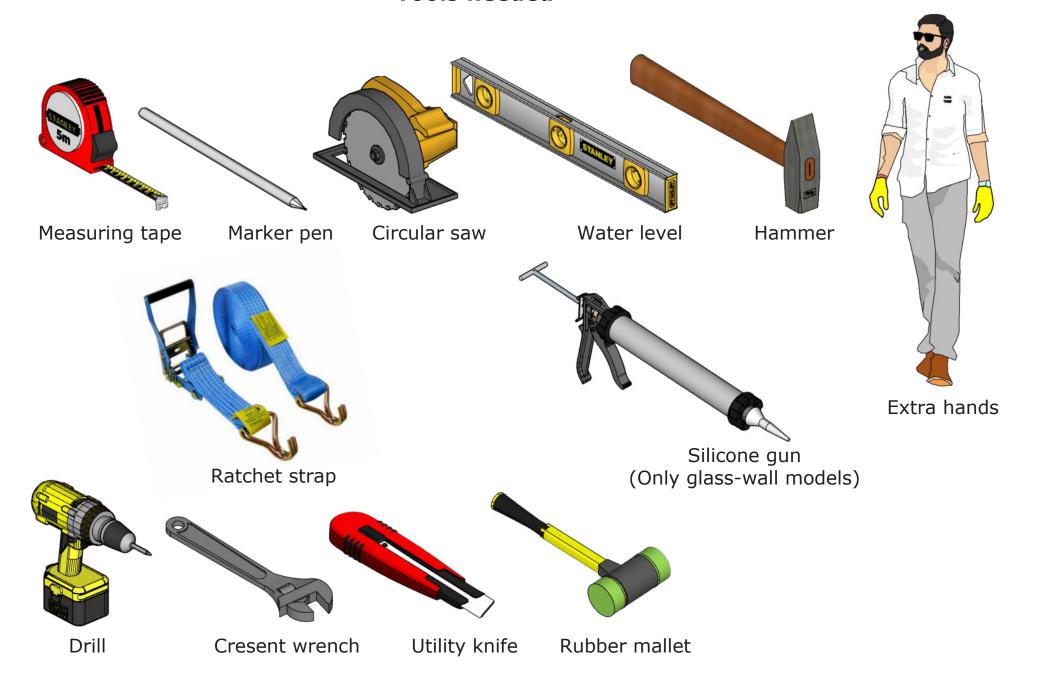


Wooden front wall installation

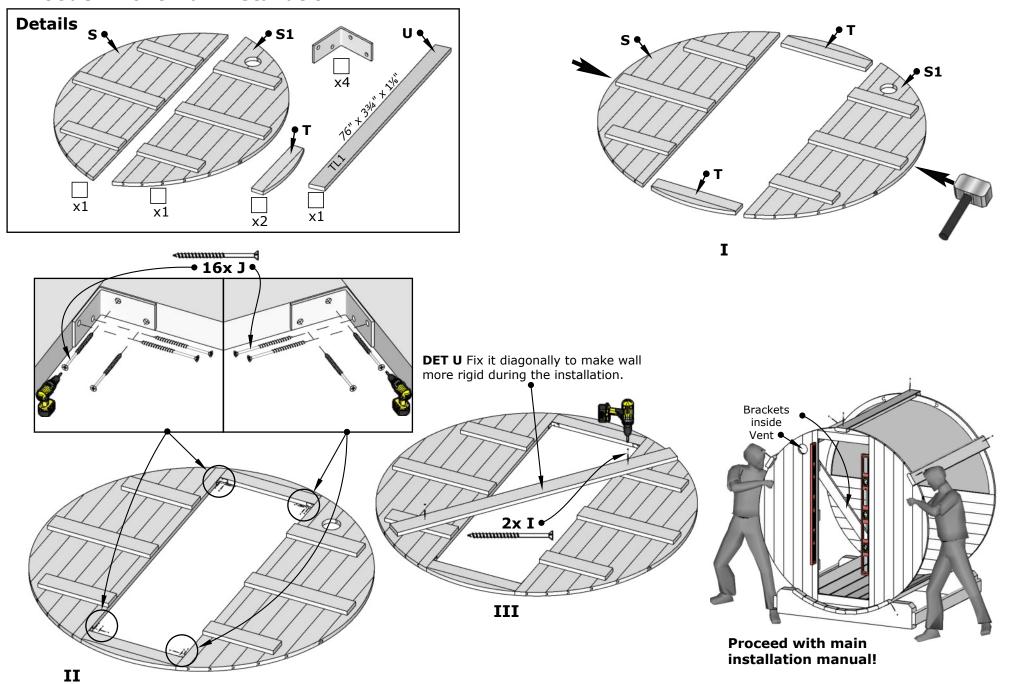


Half-moon wall installation

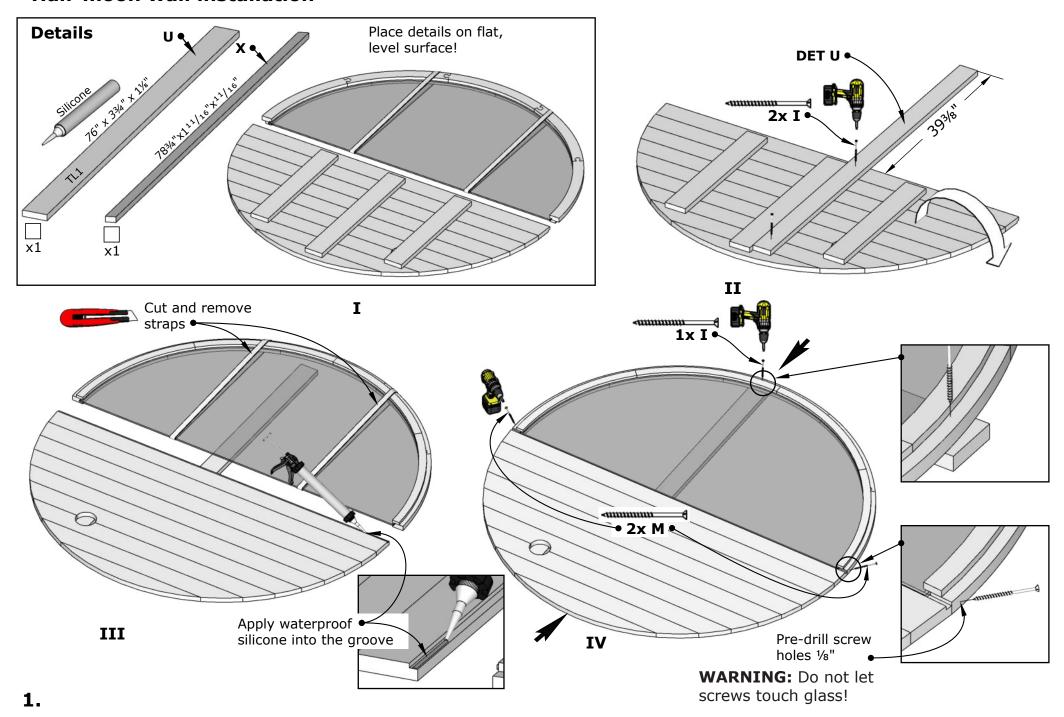


Half-moon wall installation

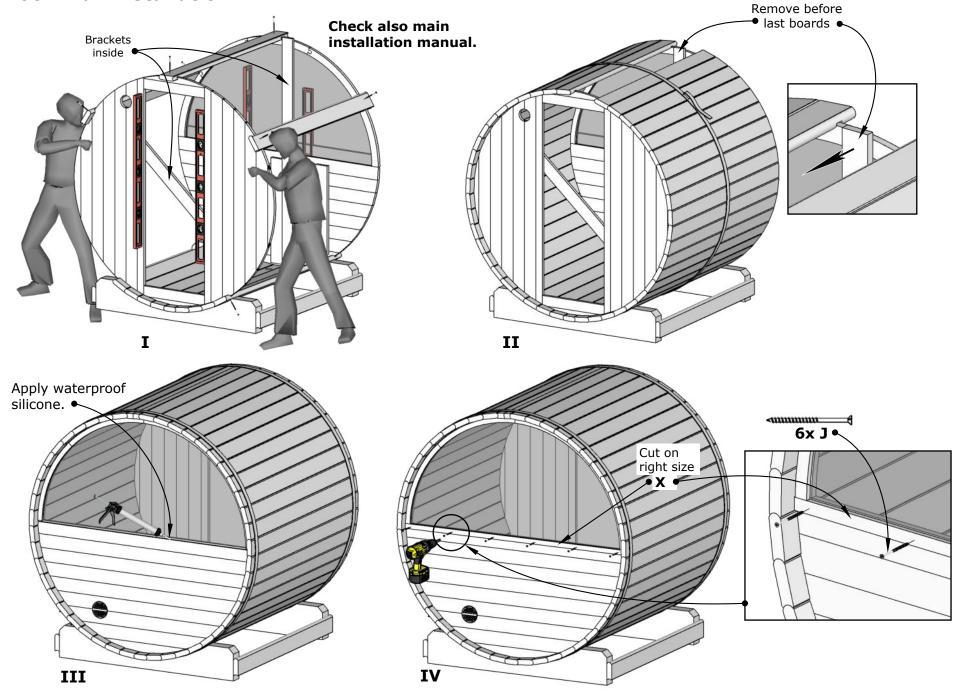


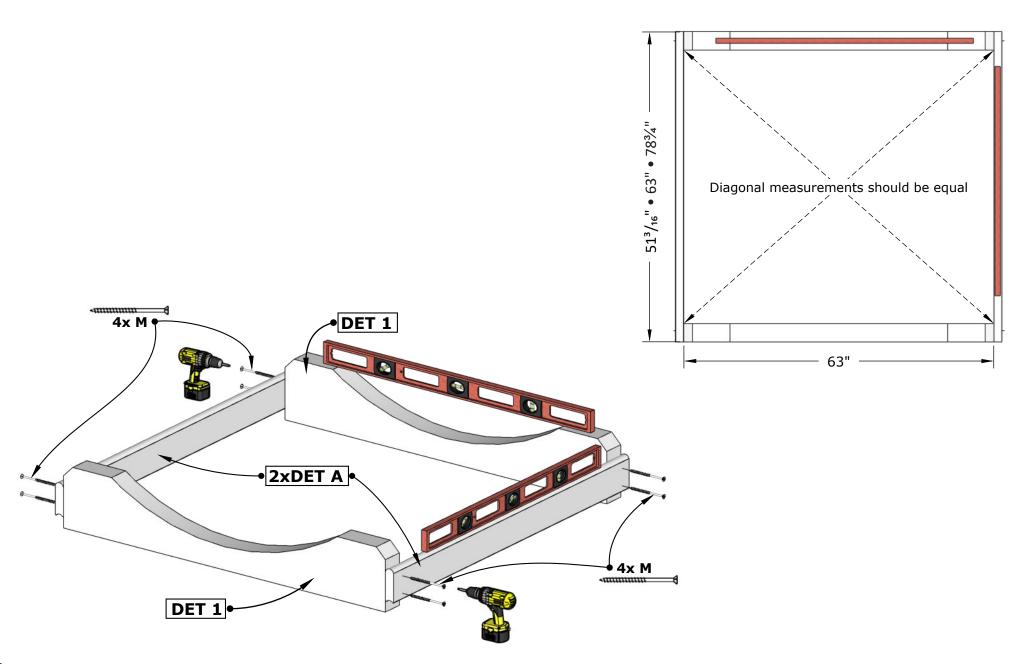



E6W Barrel Sauna 59D" x 81H"

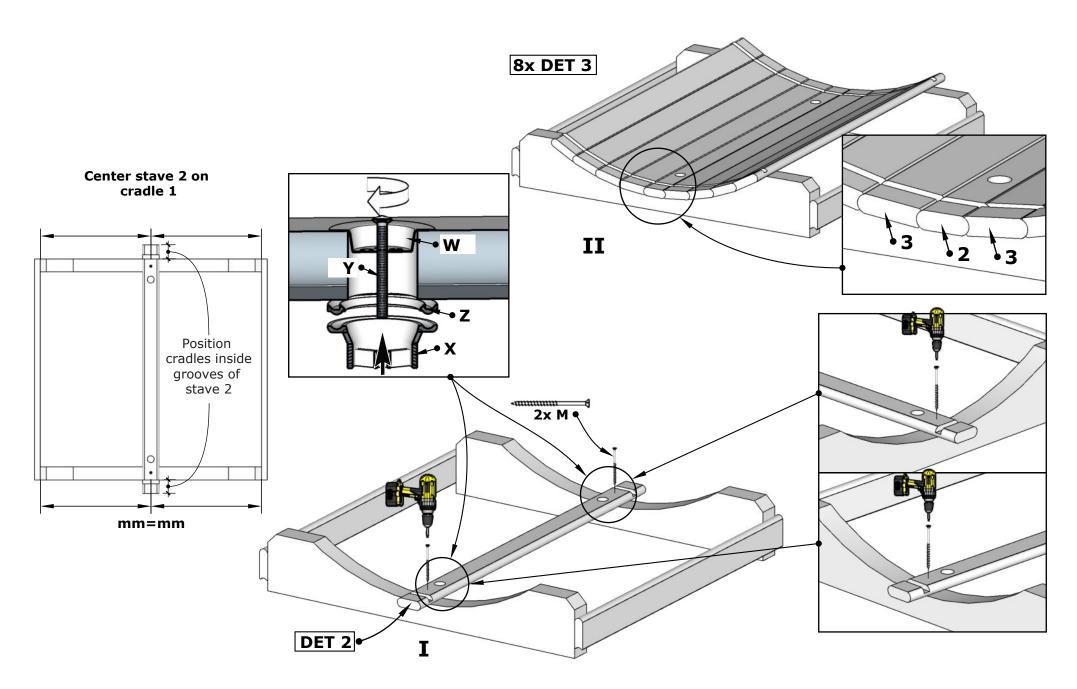

E6W Barrel Sauna 59D" x 81H"

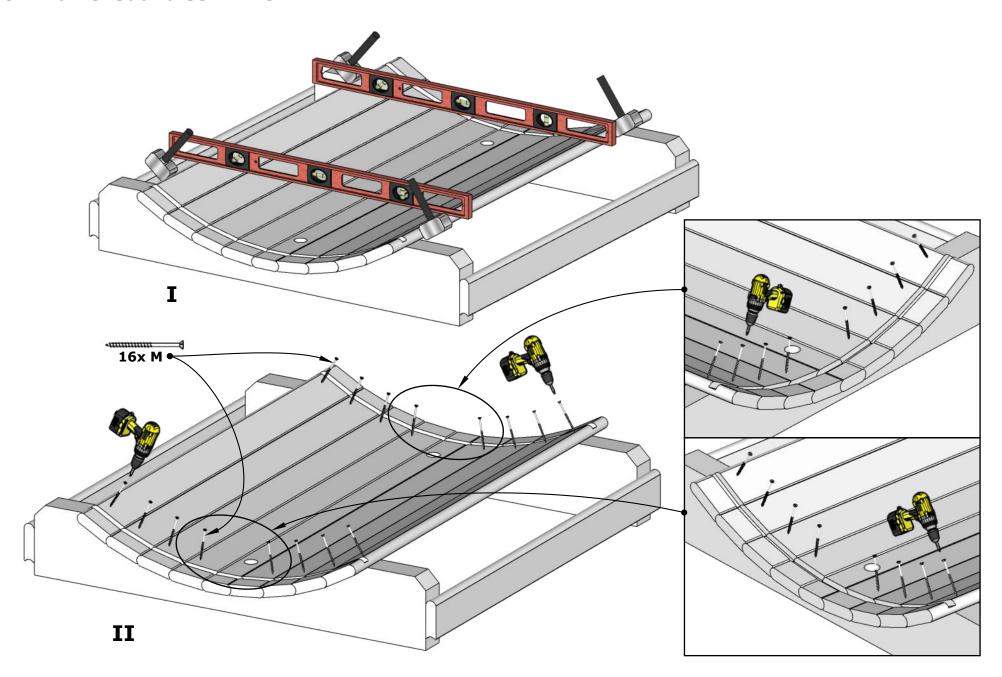

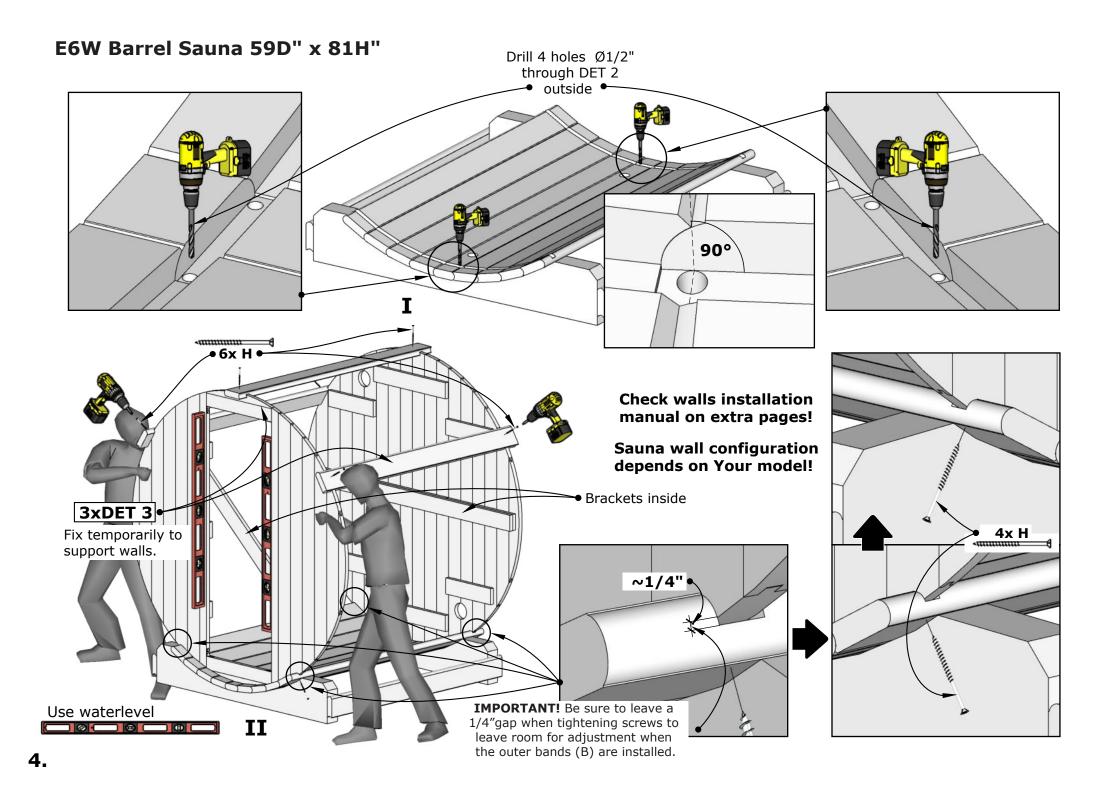

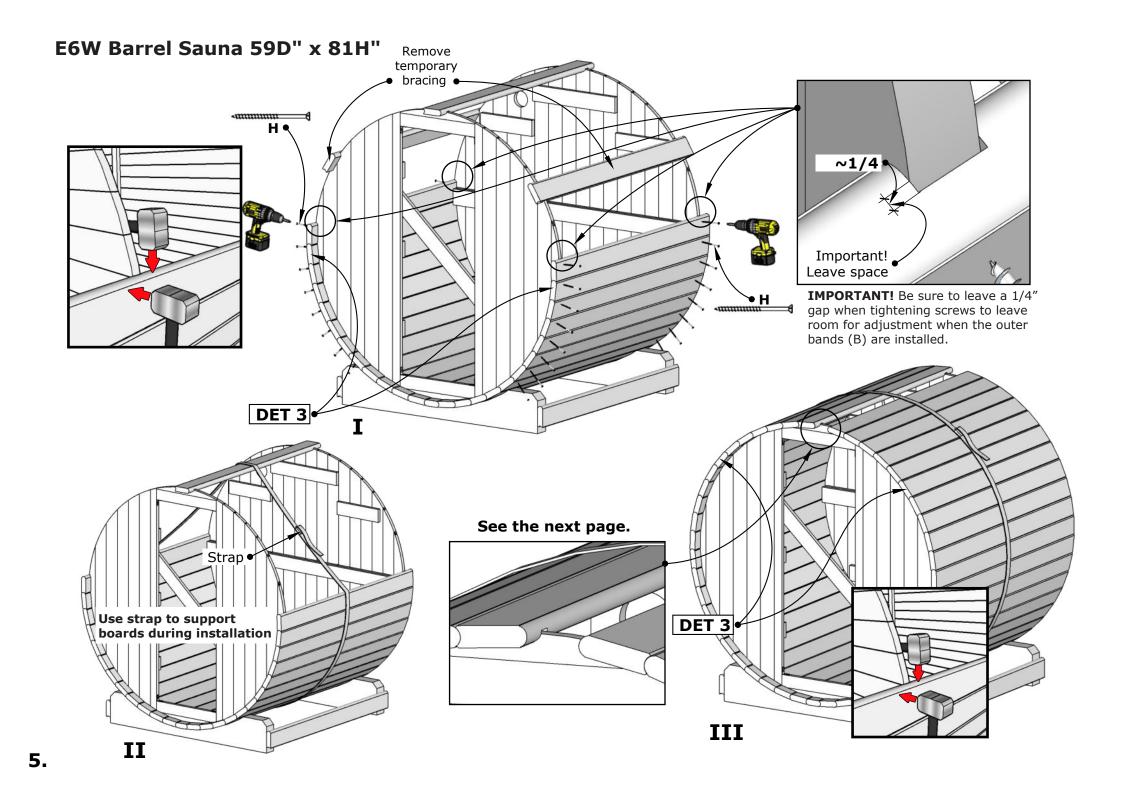

E6W Barrel Sauna 59D" x 81H"

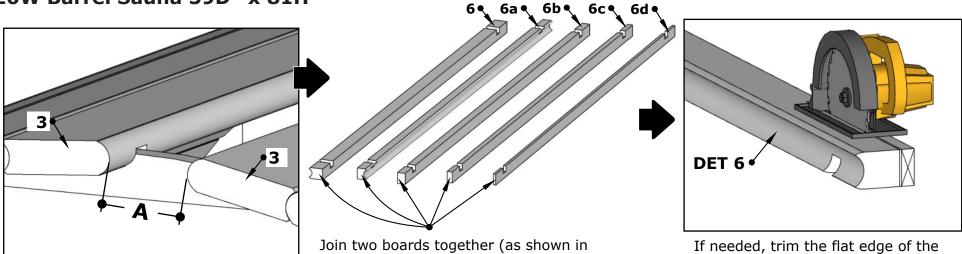



diagram II) that will bridge the width of

the "A" gap. It is recommended that the combined boards are approximately

1/4" wider than the gap.


Raise slightly before installing the combined board

Fasten the two halves using screws

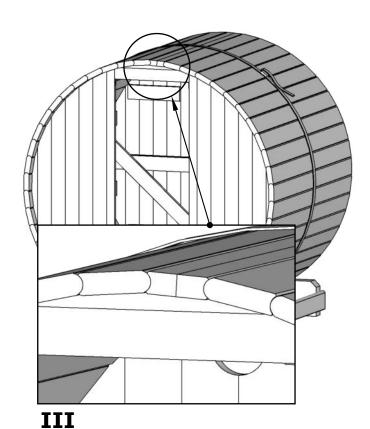


board to create the desired width.

Ι

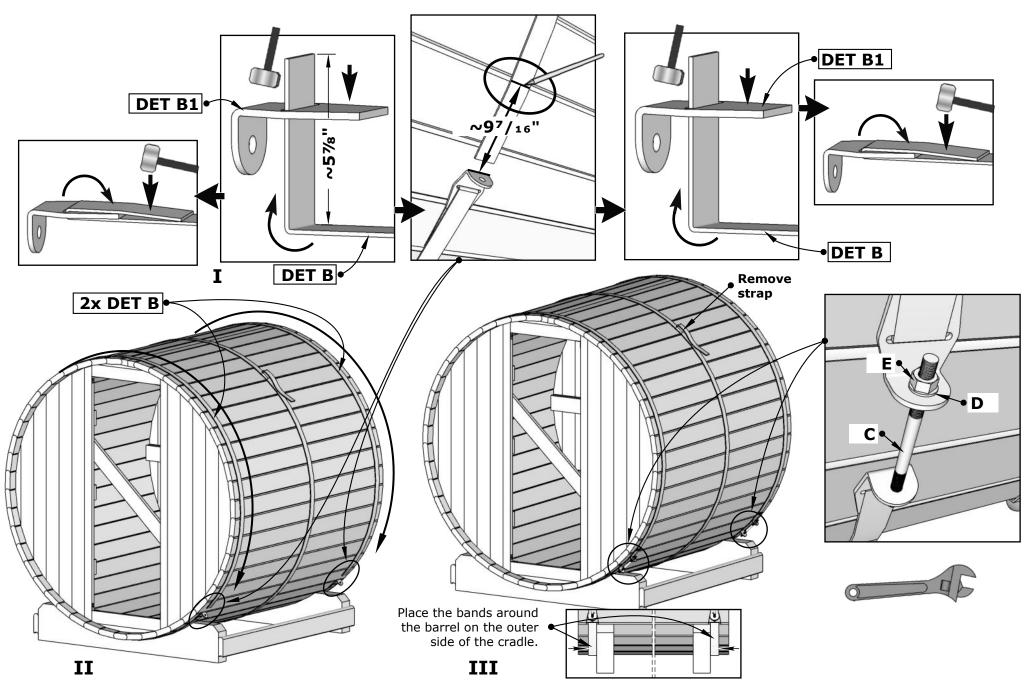



7.


E6W Barrel Sauna 59D" x 81H"

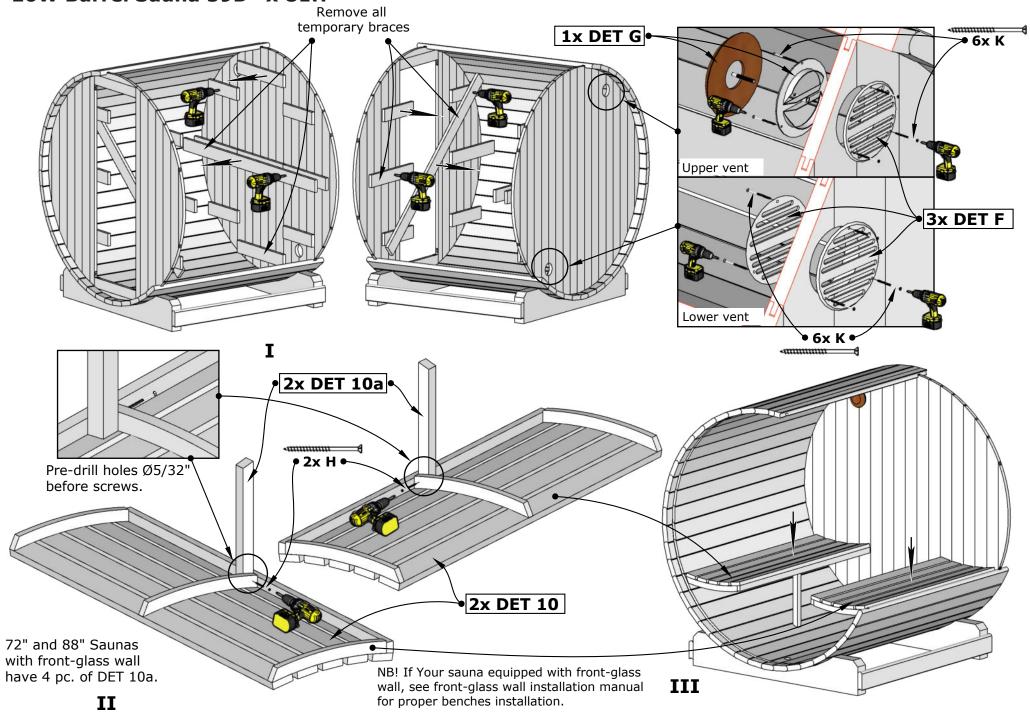


8.

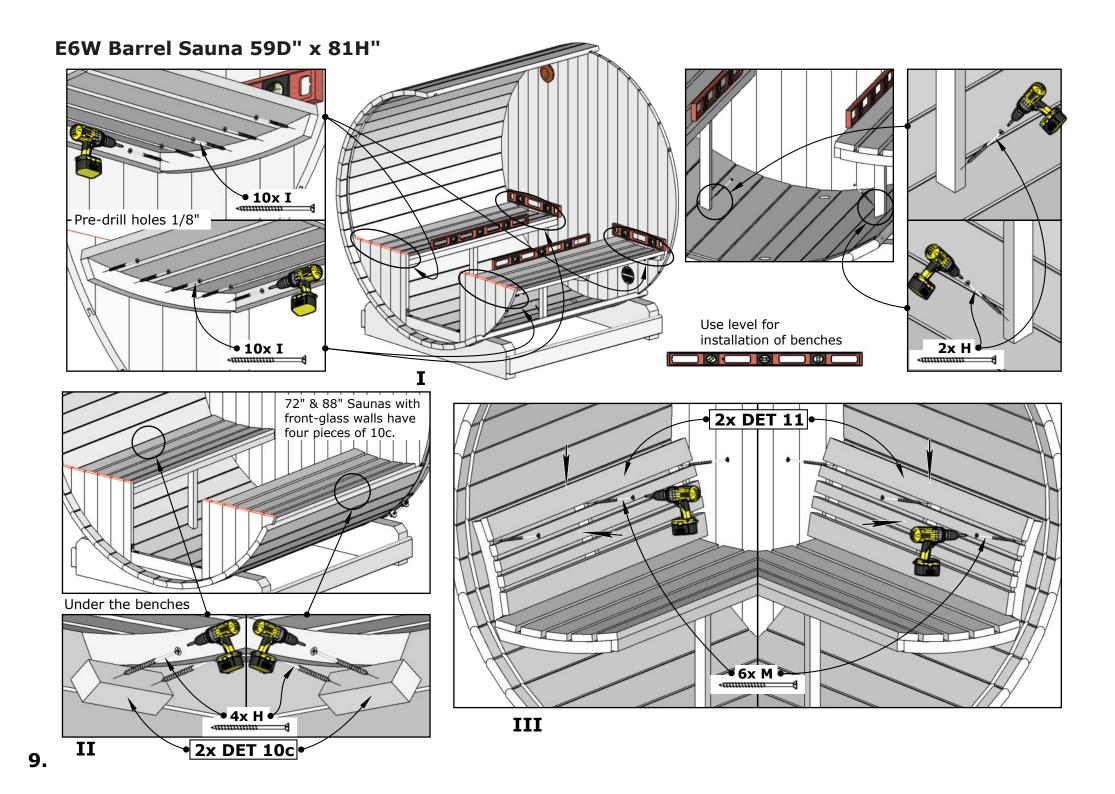


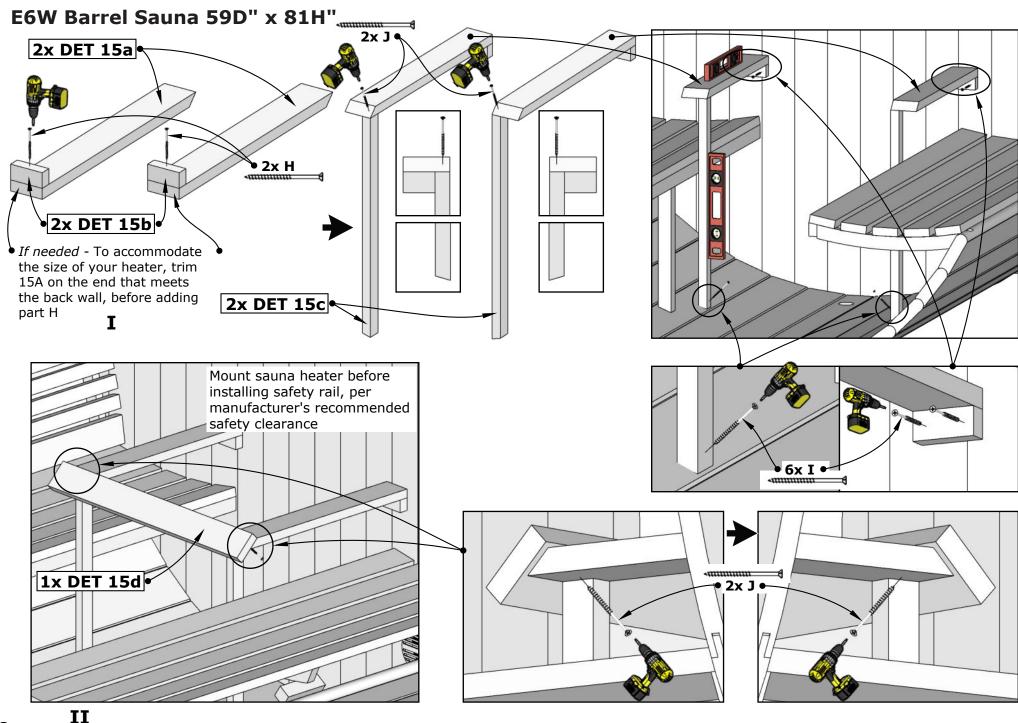

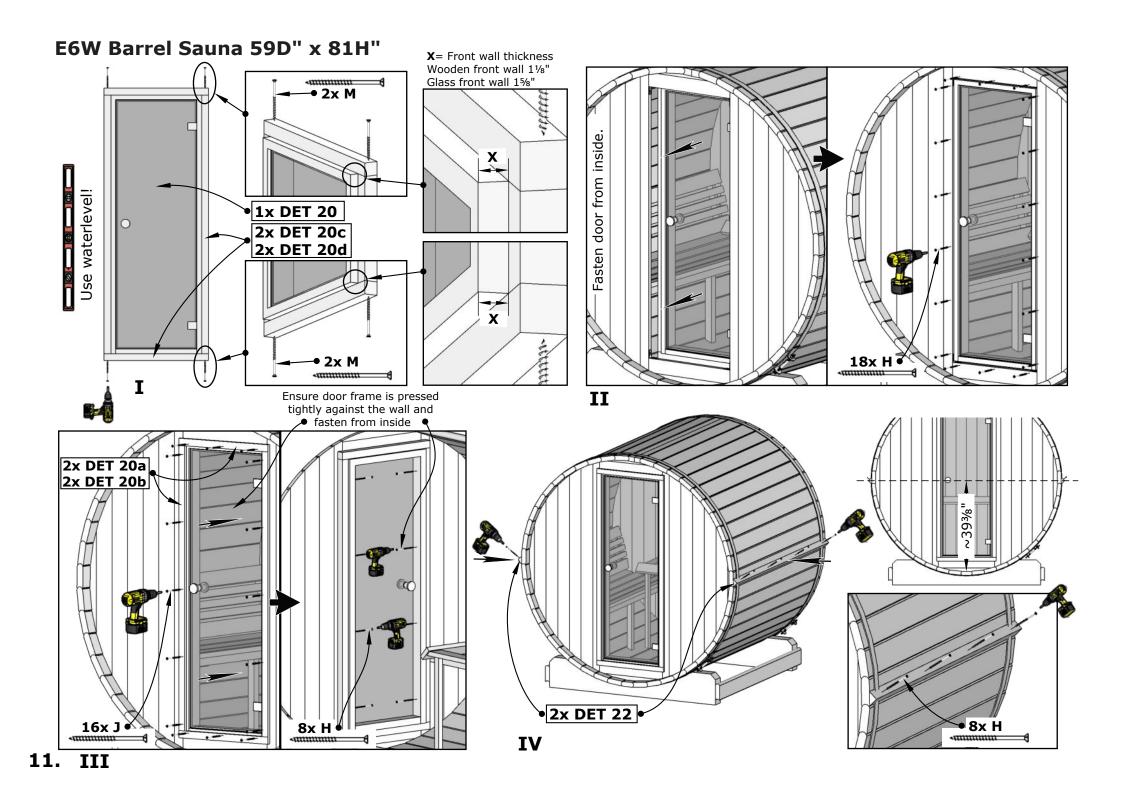

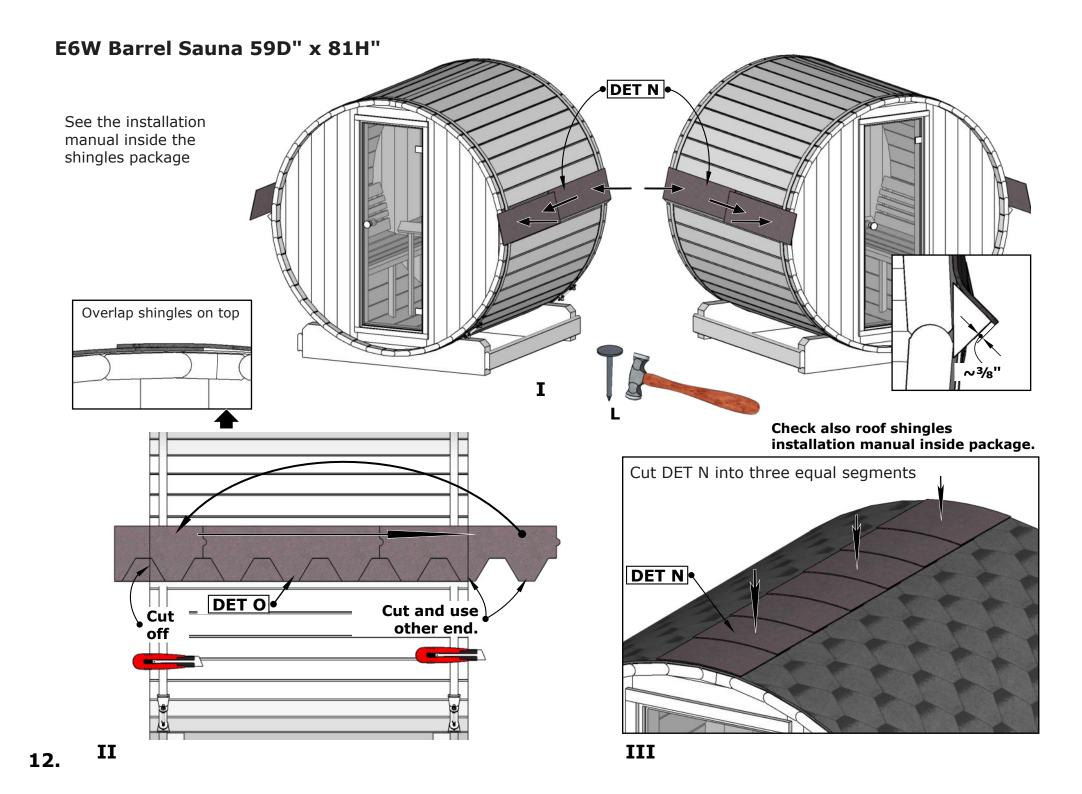

E6W Barrel Sauna 59D" x 81H"

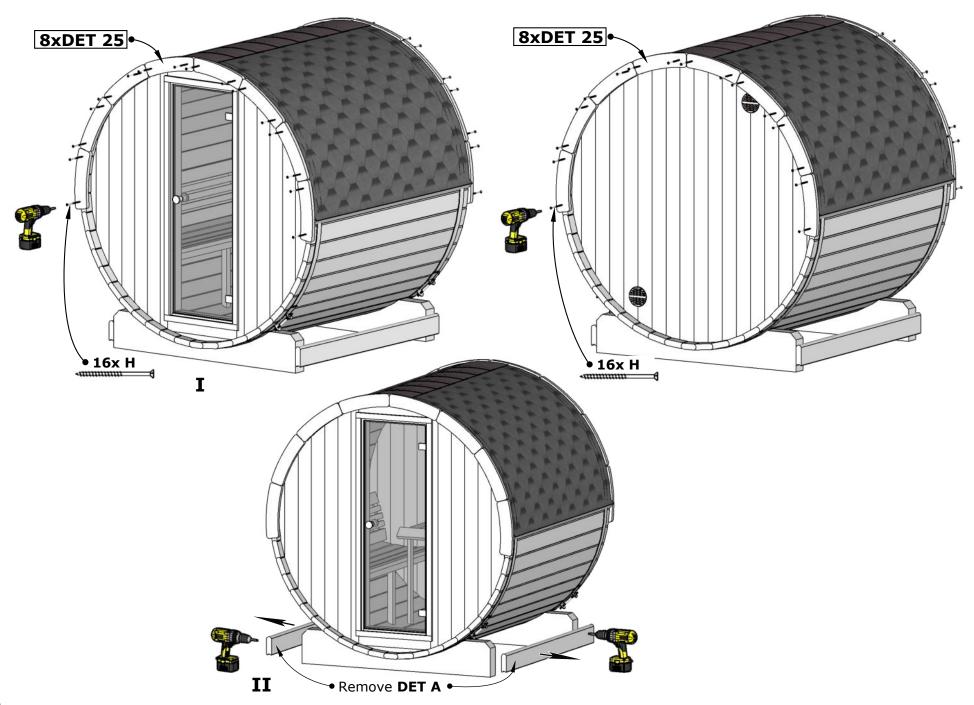

13.