



Ergo-Series E6W Barrel Sauna Half Glass Window 59D" x 81H"






Front & Back Walls

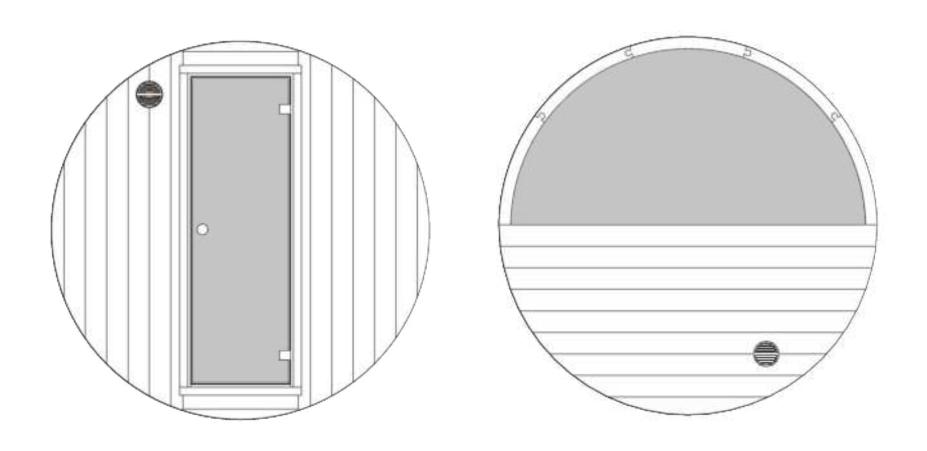


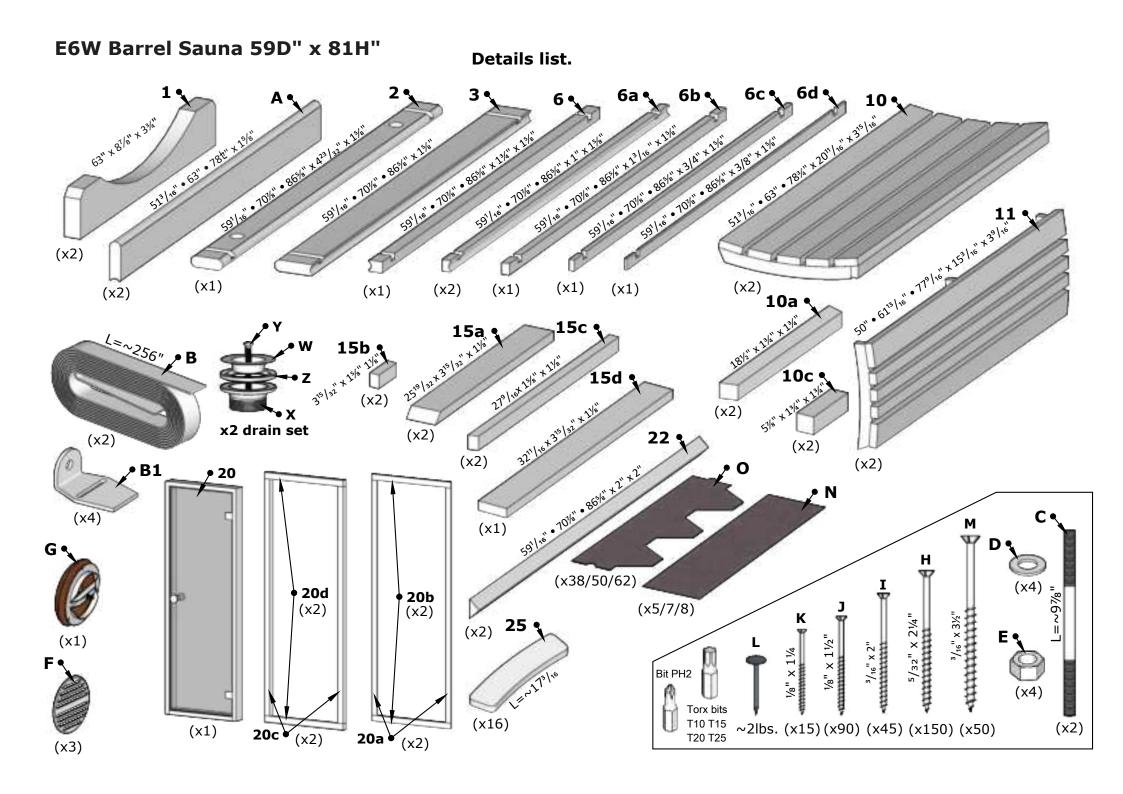


Tools needed

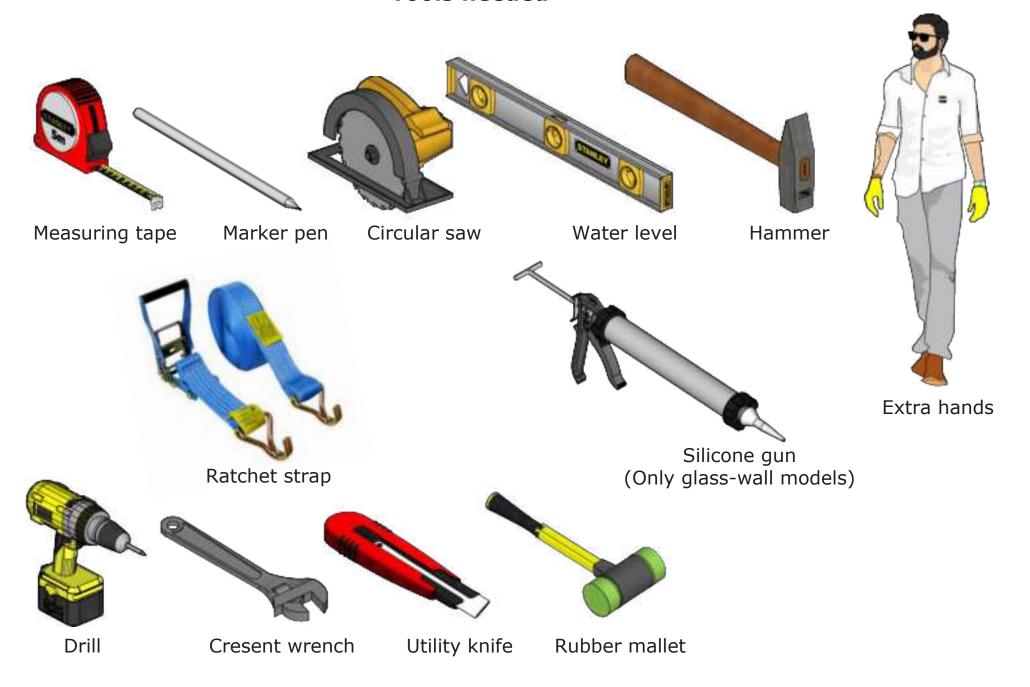


Wooden front wall installation

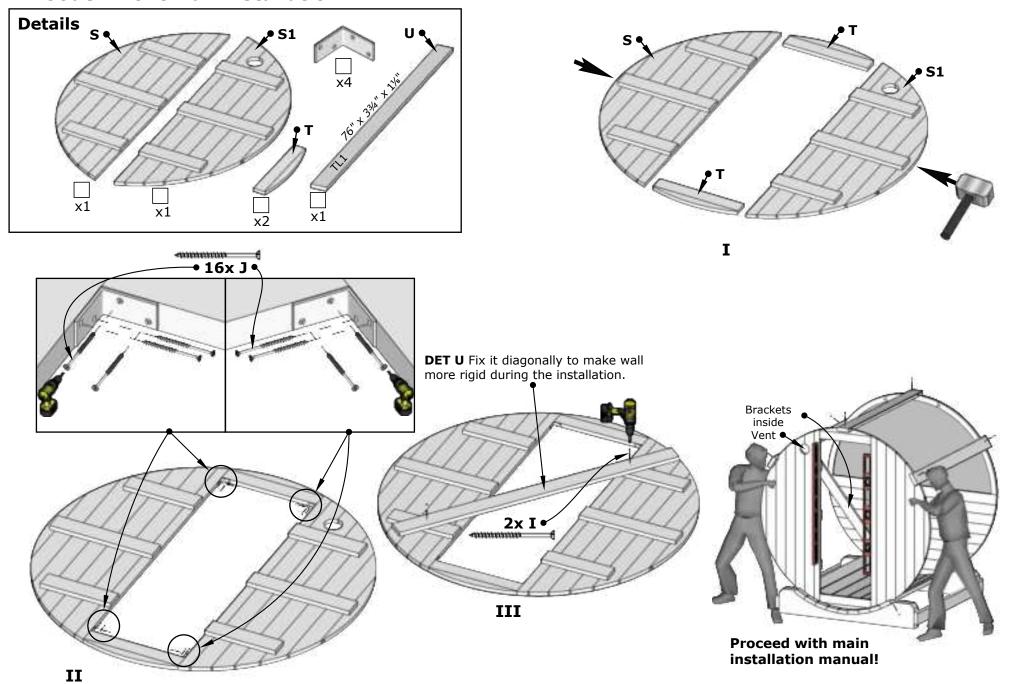


Half-moon wall installation

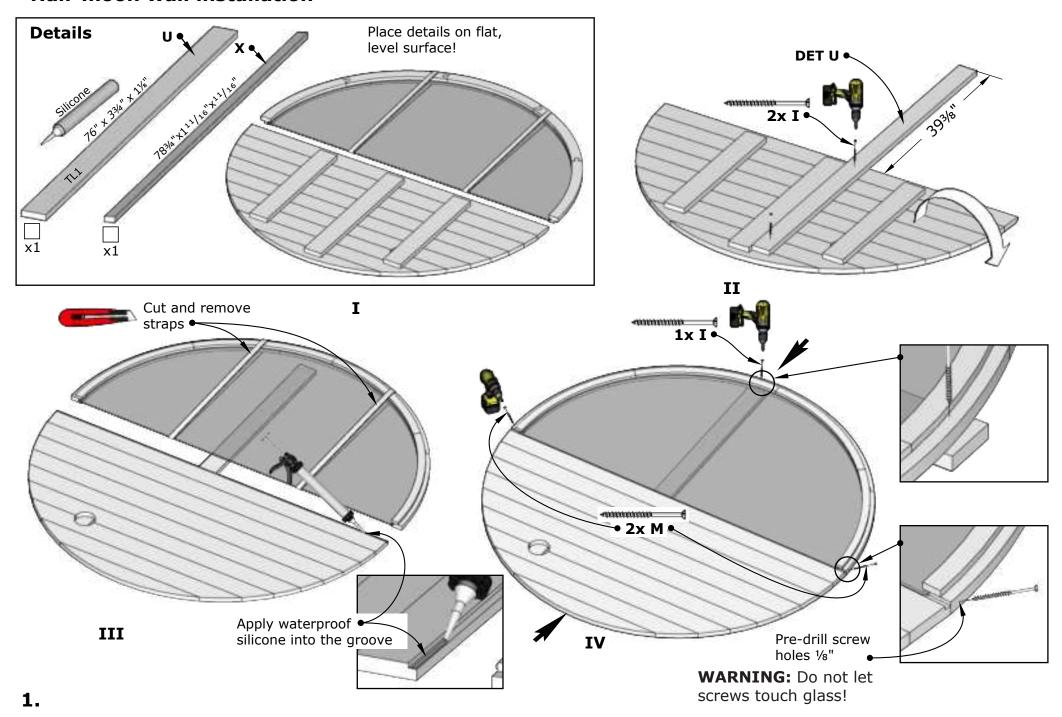


Half-moon wall installation

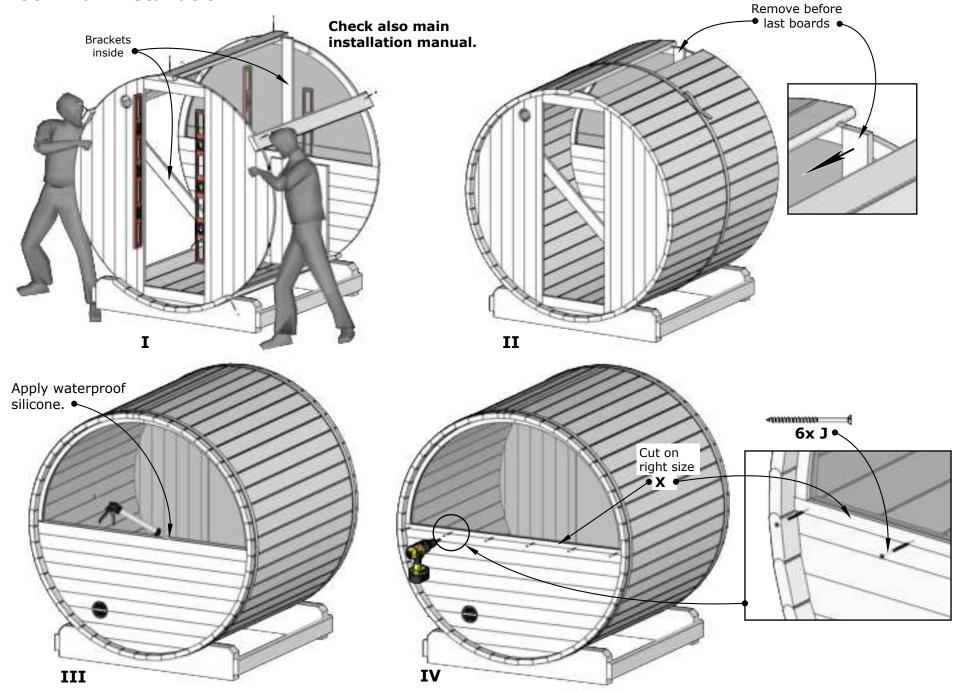


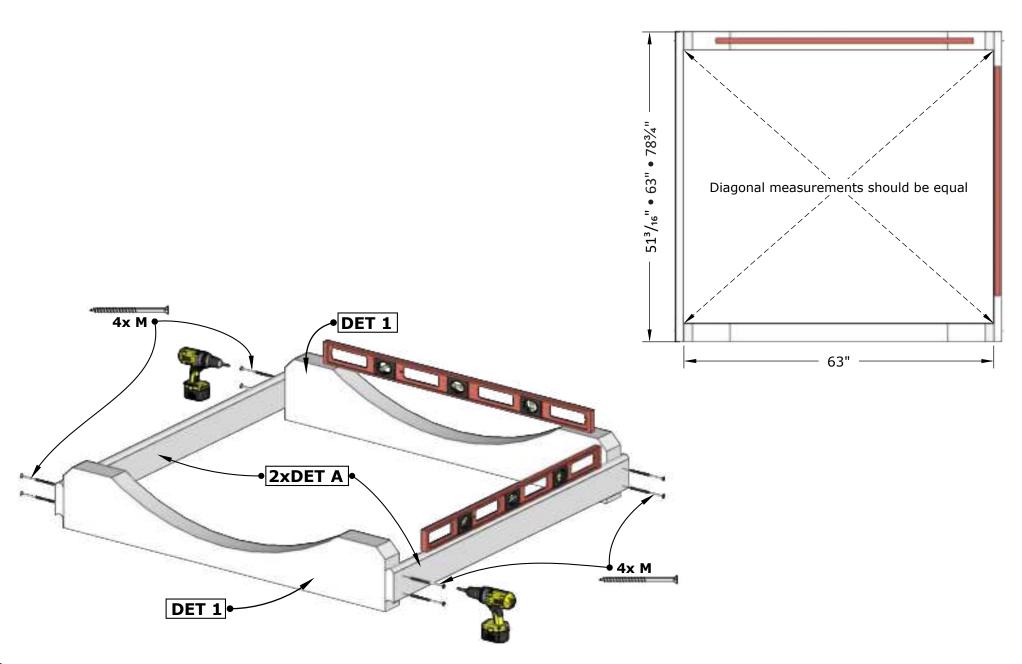



E6W Barrel Sauna 59D" x 81H"

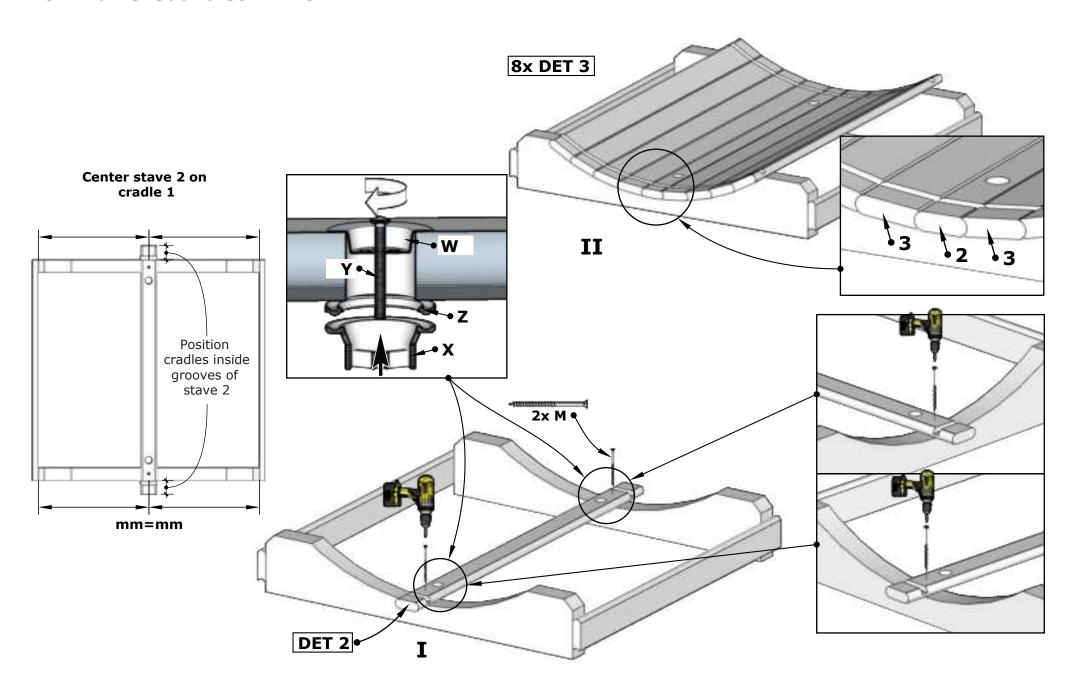


E6W Barrel Sauna 59D" x 81H"

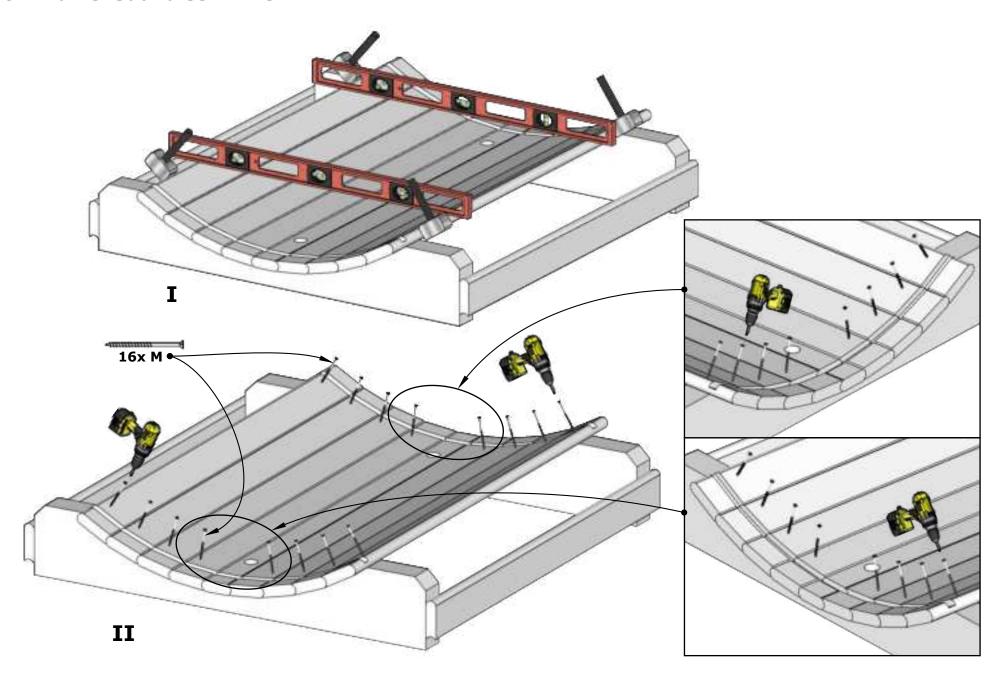

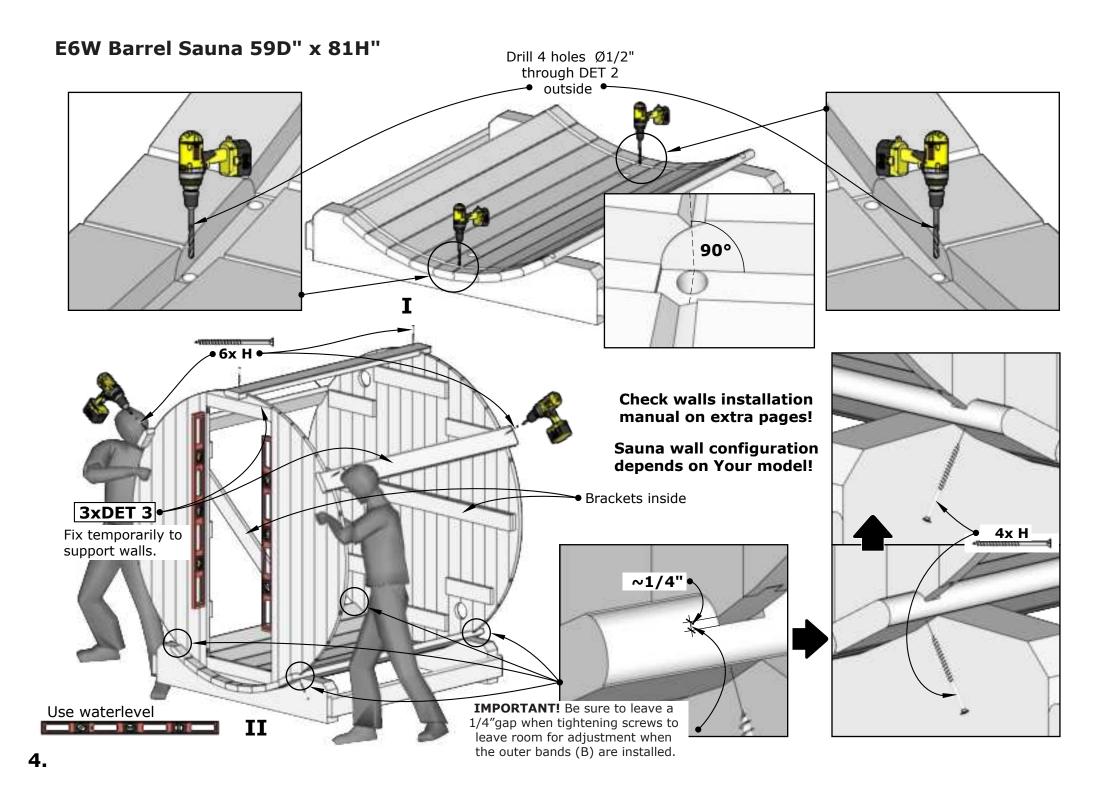


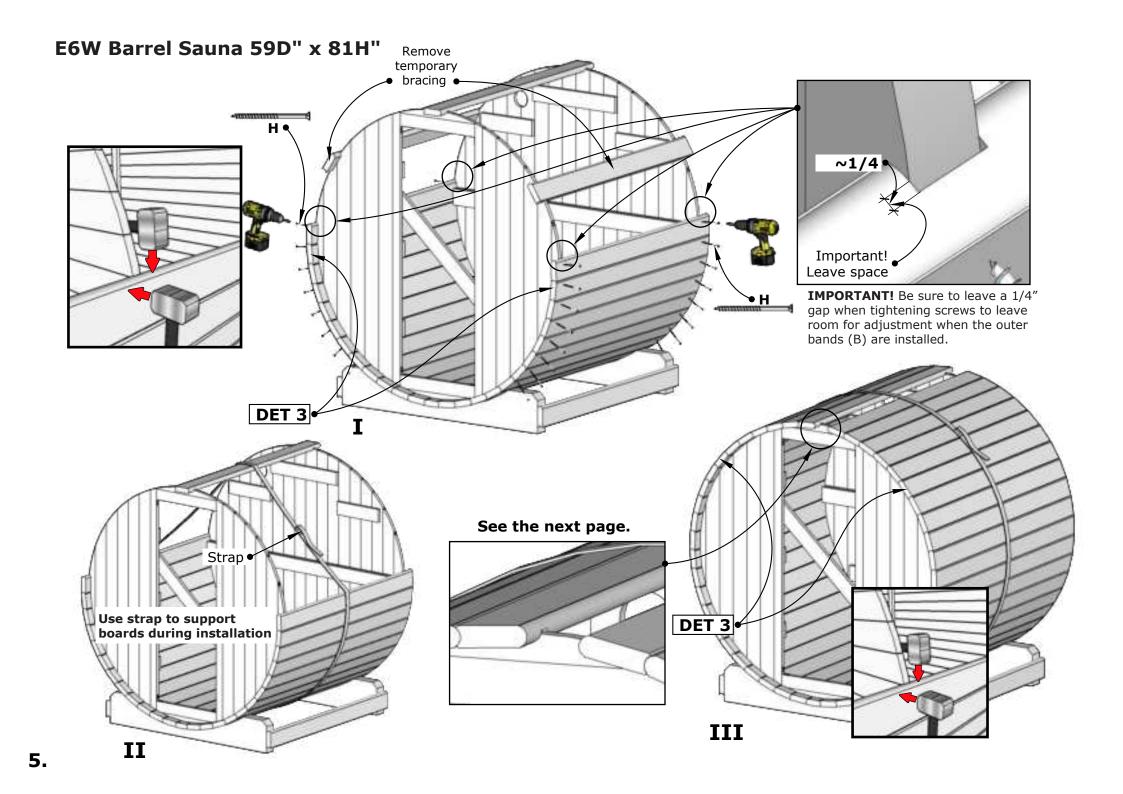




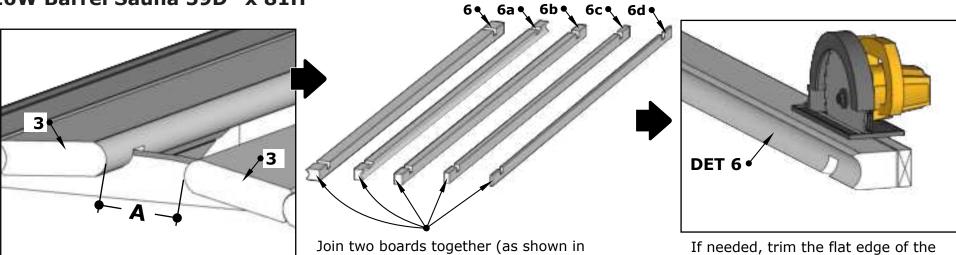

Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

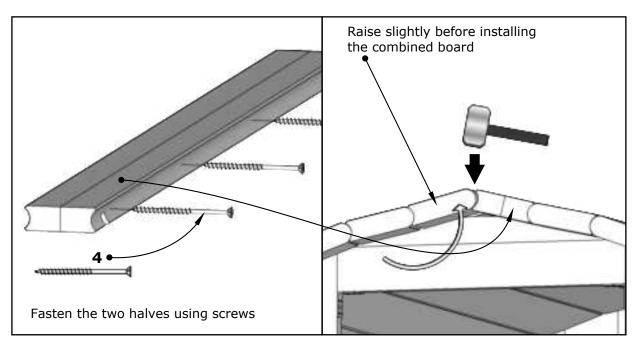


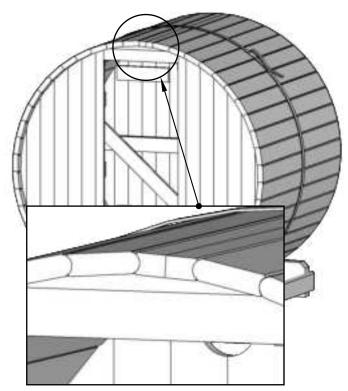


board to create the desired width.


III


Ι

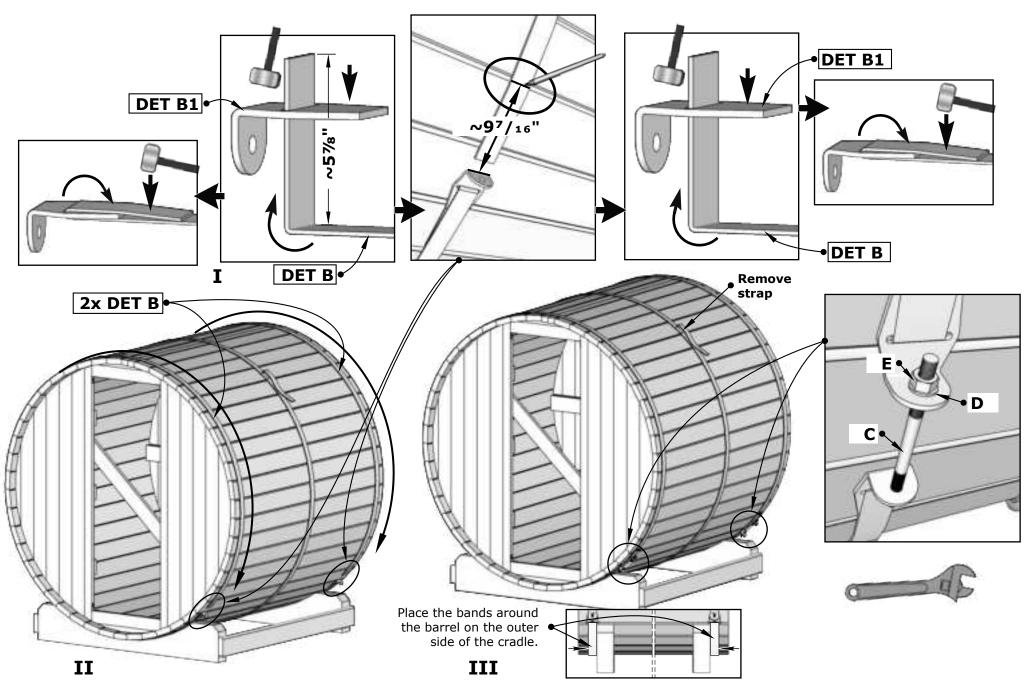



E6W Barrel Sauna 59D" x 81H"

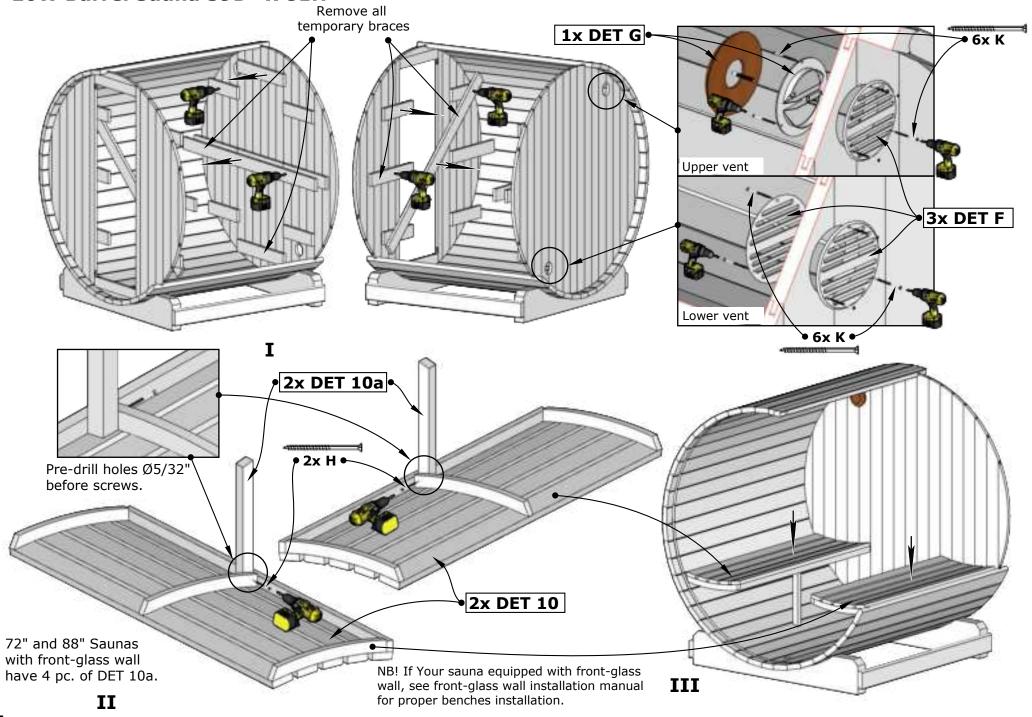

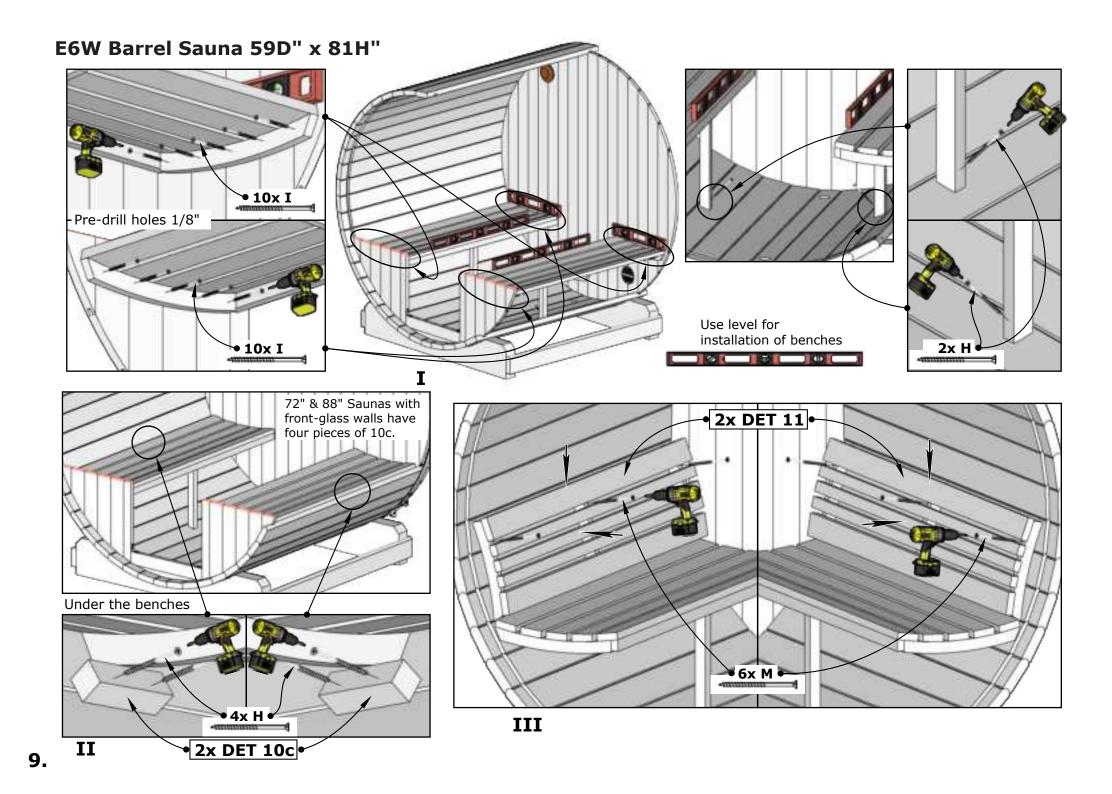

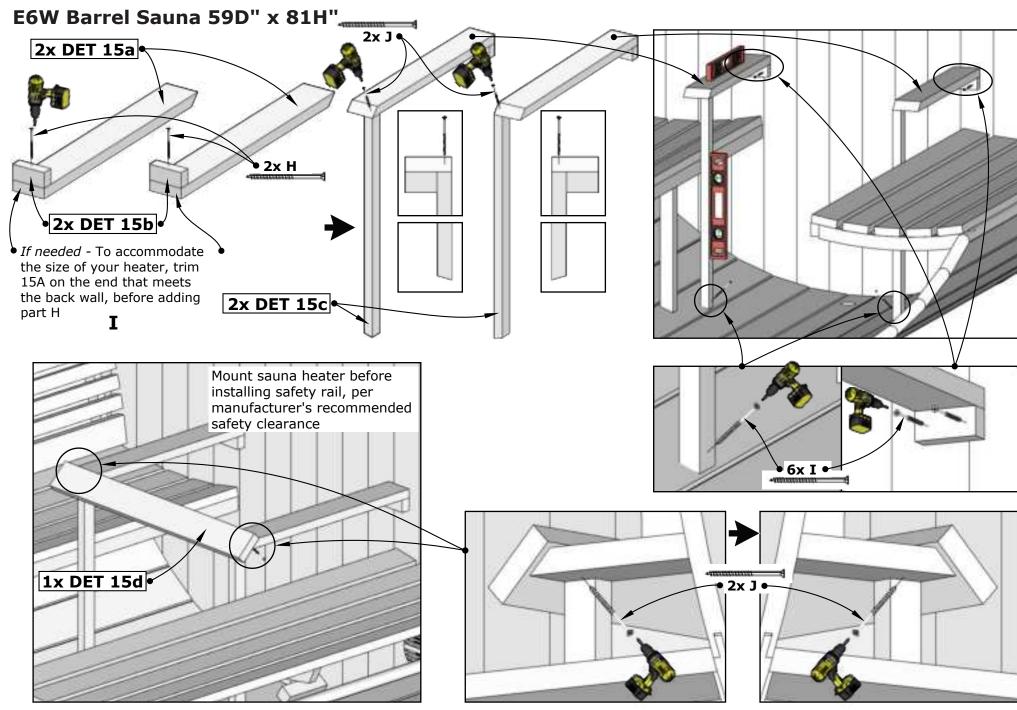

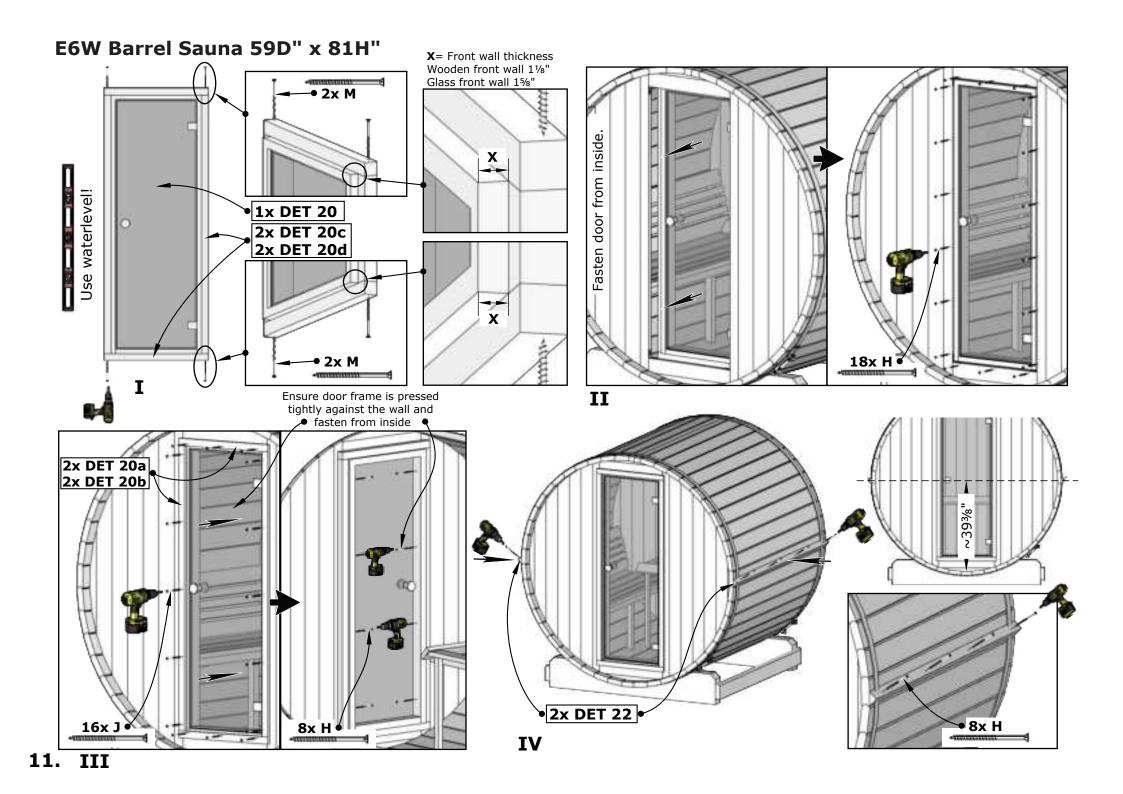

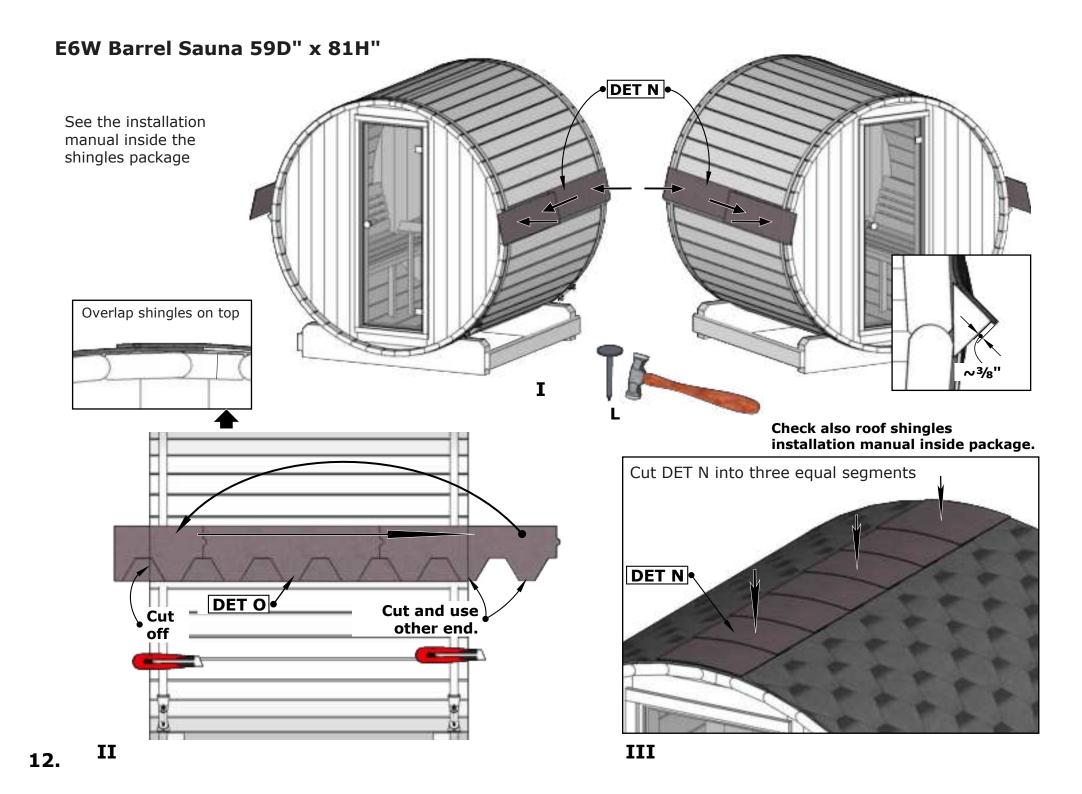

E6W Barrel Sauna 59D" x 81H"

