

Instructions for Use



Up and down adjustment











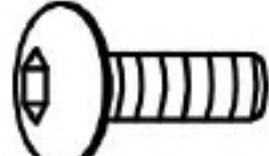



Tilt adjustment



Backrest adjustment

Thanks for purchasing our products. Please read this manual before assembly.
And please assemble in order. After the assembly, keep the instruction properly.
Make sure all the parts are concluded (13 kinds in total).

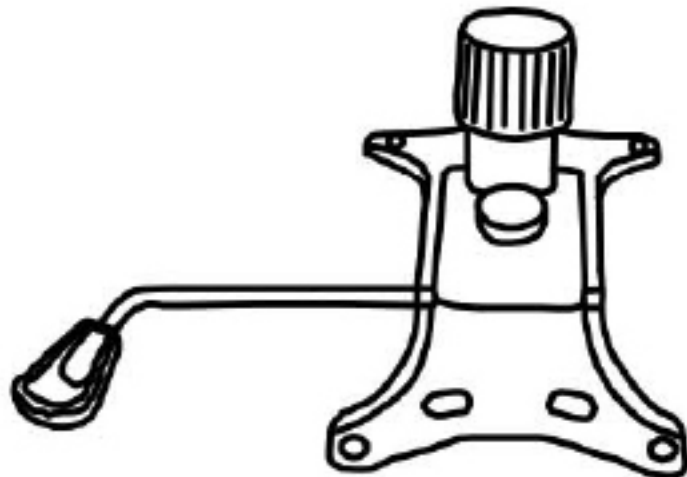Accessories List

| | | | | |
|---|---|---|---|---|
| (1) Backrest | (2) Seat Cushion | (3) Foot Stool | (4) 5 Castors | (5) Air Rod |
|  |  |  |  |  |
| (6) 2 Armrests | (7) Base Plate | (8) 4 Screws (M6X35mm) | (9) 4 Screws (M6X30mm) | (10) 4 Screws (M6x25mm) |
|  |  |  |  |  |
| (11) Hexagon Wrench | (12) 4 Decoration Caps | | | |
|  |  | | | |

Notice [If any question, contact kerdom-service@outlook.com]

- This is a single chair, so please do not seat 2 or more persons, just seat only one person.
- Do not stand on the chair.
- Do not sit reverse or sit outside of the seat cushion.
- Check the screws once every 6 months, to make sure the screws are tight. Do not use the chair when the screws are loose.
- Please assemble according to the instructions.


Assembly Instruction

Please assemble in a wide and flat place.

Step 1

Insert Castors (4) into Foot Stool (3). There are 5 Castors (4) need to be inserted.


* Caution: Confirm the Castors (4) must be inserted into the innermost. Otherwise the casters could easily fall out and the chair could fall down.

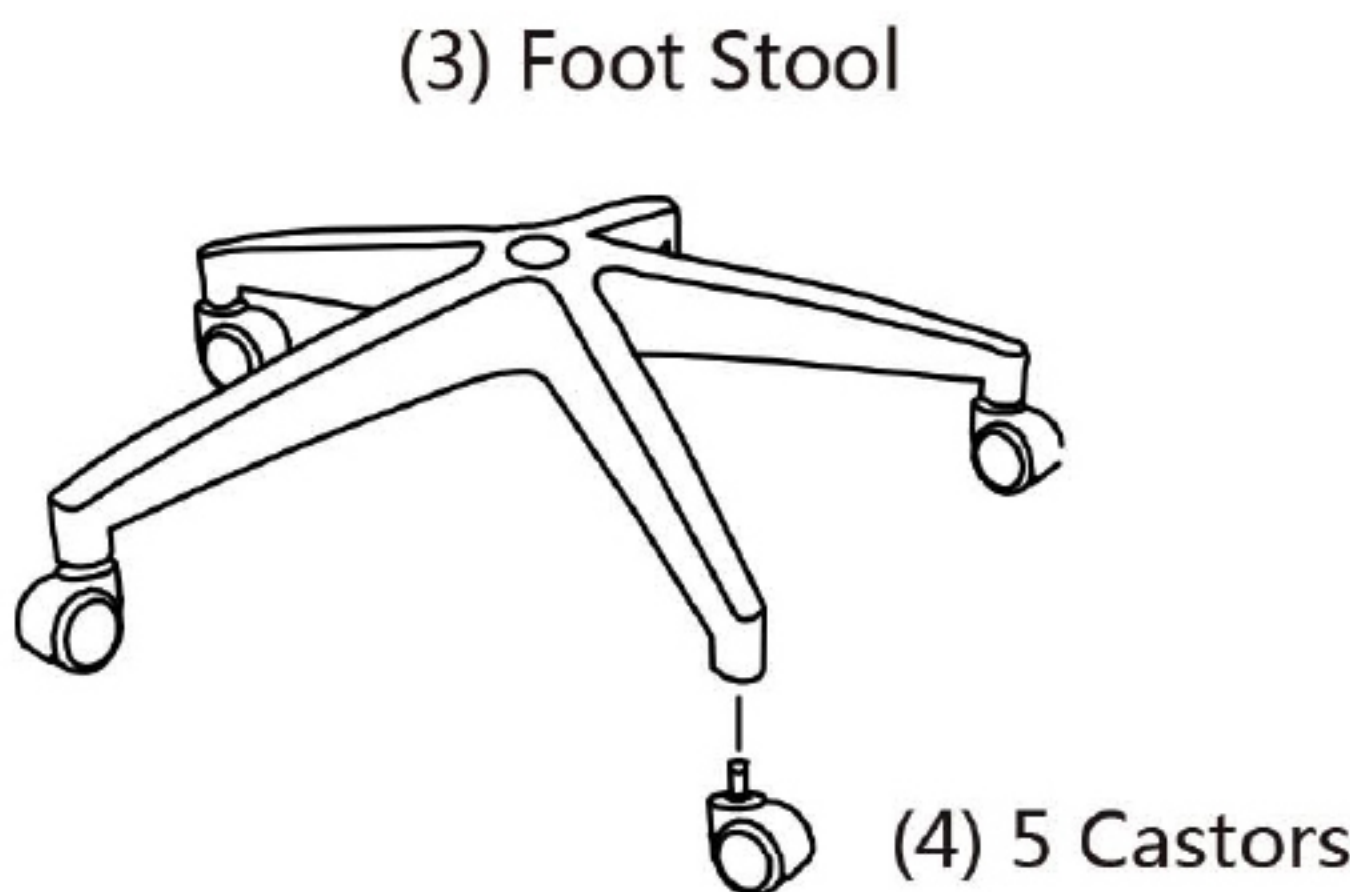

Step 2


Insert Air Rod (5) into the hole of Foot Stool (3). Put it aside and we'll use it in Step 6.

* Caution: Please insert Air Rod (5) straightly, and then press Air Rod (5) firmly into Foot Stool (3).

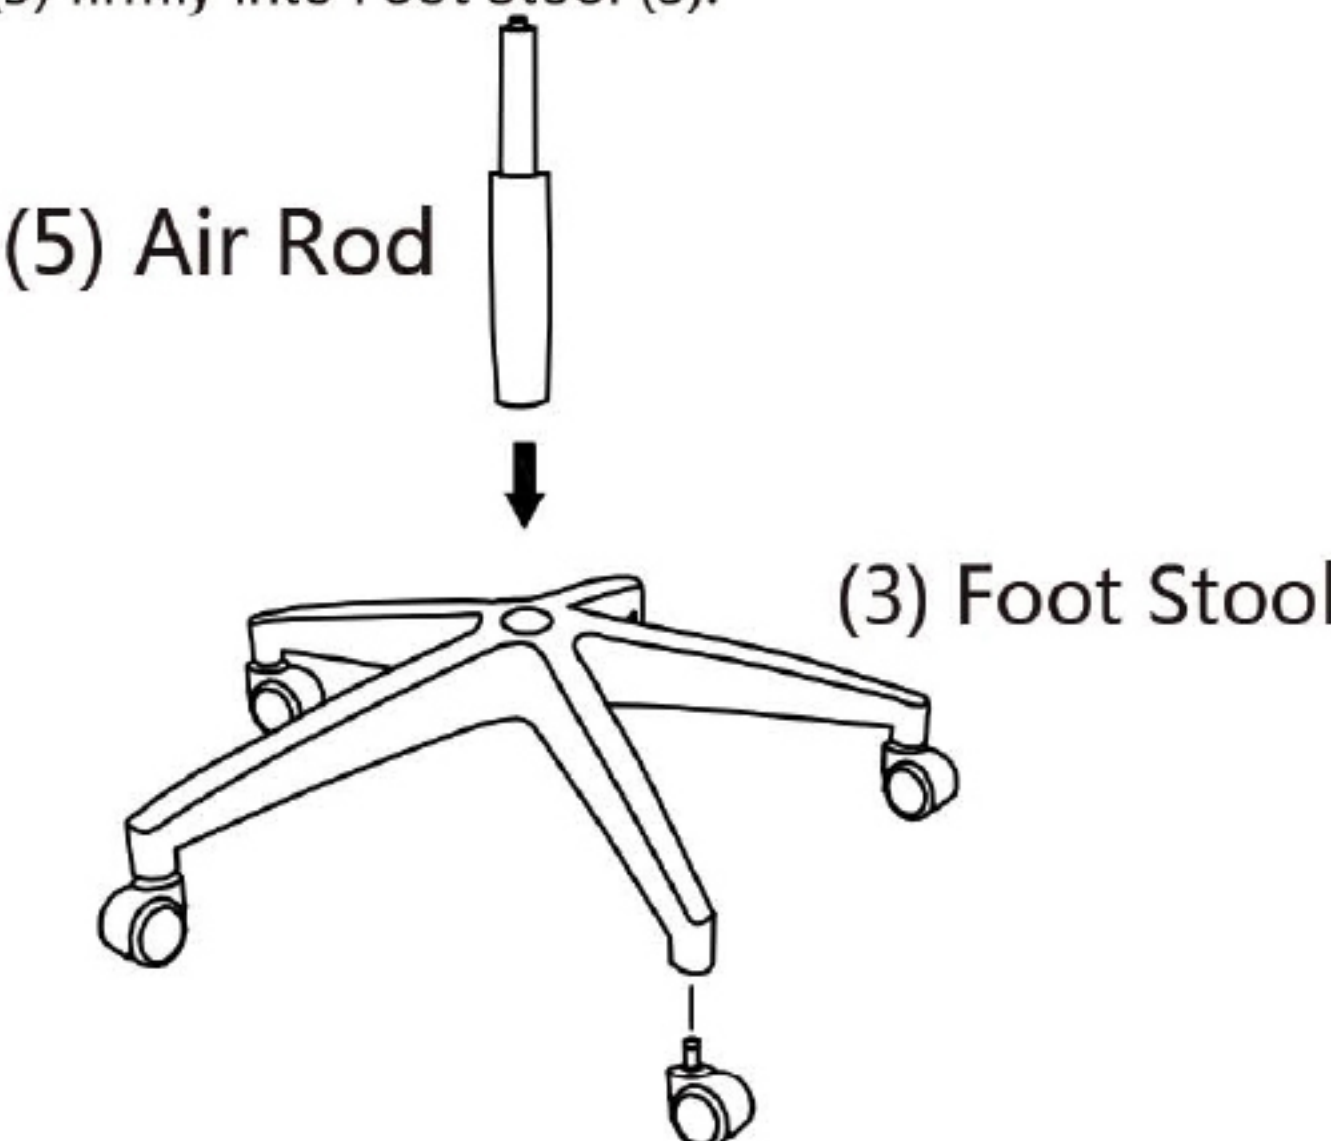

Step 3


Tighten the Screws M6X30mm (9) with Hexagon Wrench (11) to fix 2 Armrests(6) to the back of Backrest(1). Tighten the 4 screws firmly and then cover the screws with Decoration Caps (12).

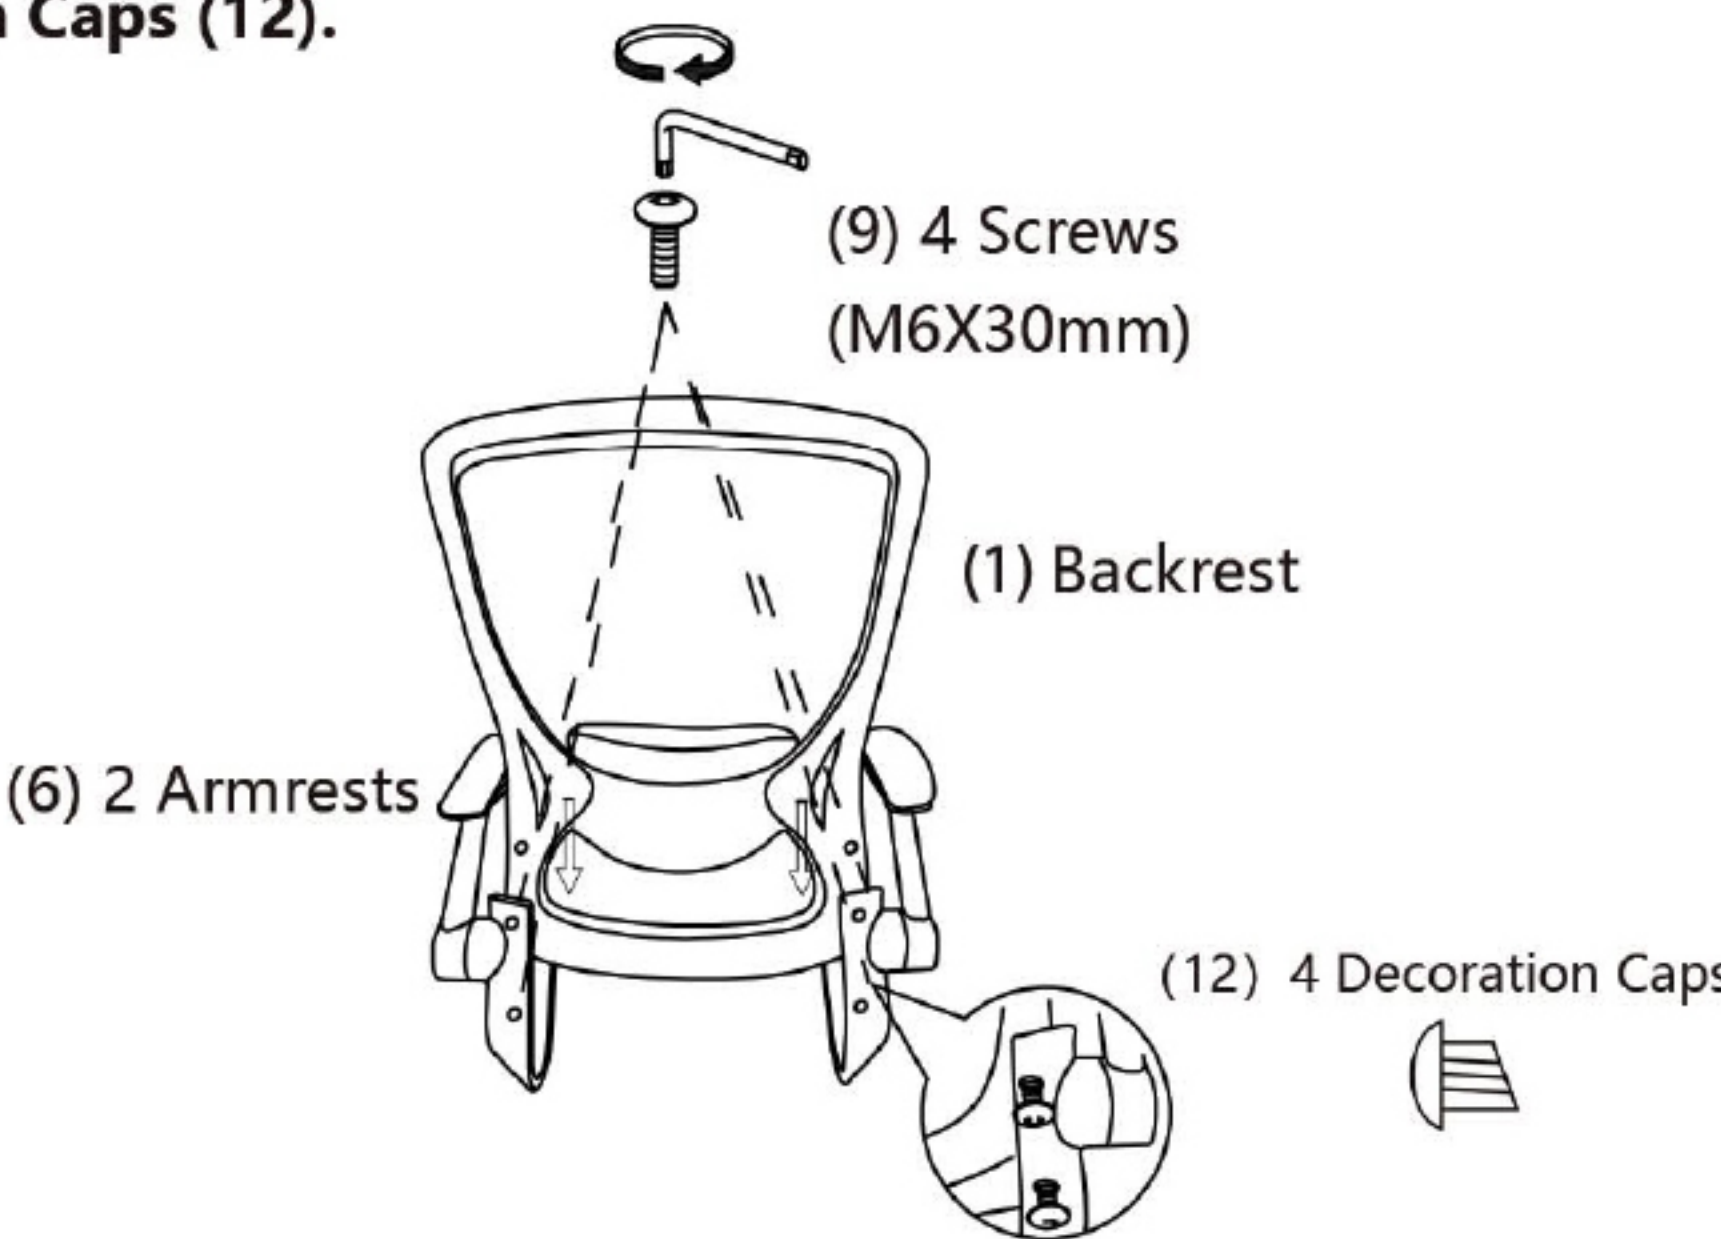

Step 4


After Step 3, fix the bottom of Armrests (6) to the back of Seat Cushion (2). Tighten the Screws M6X35mm (8) with Hexagon Wrench (11) firmly.

* Caution: There is a FRONT sticker on the front of Seat Cushion (2)

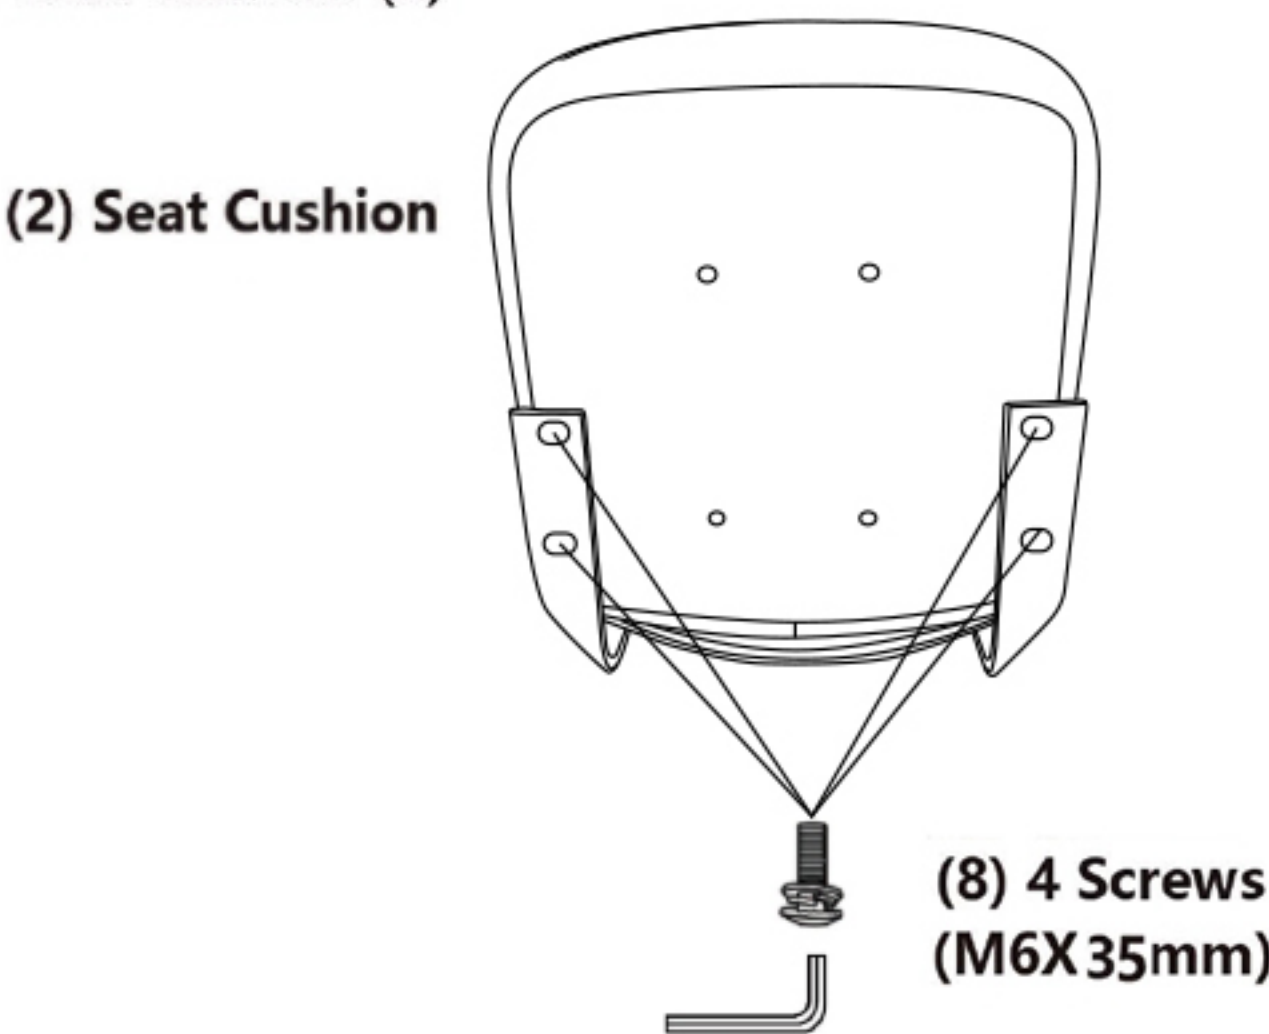

Step 5


Fix Base Plate (7) to the bottom of Seat Cushion (2). Tighten the Screws M6x25mm (10) with Hexagon Wrench (11) firmly.

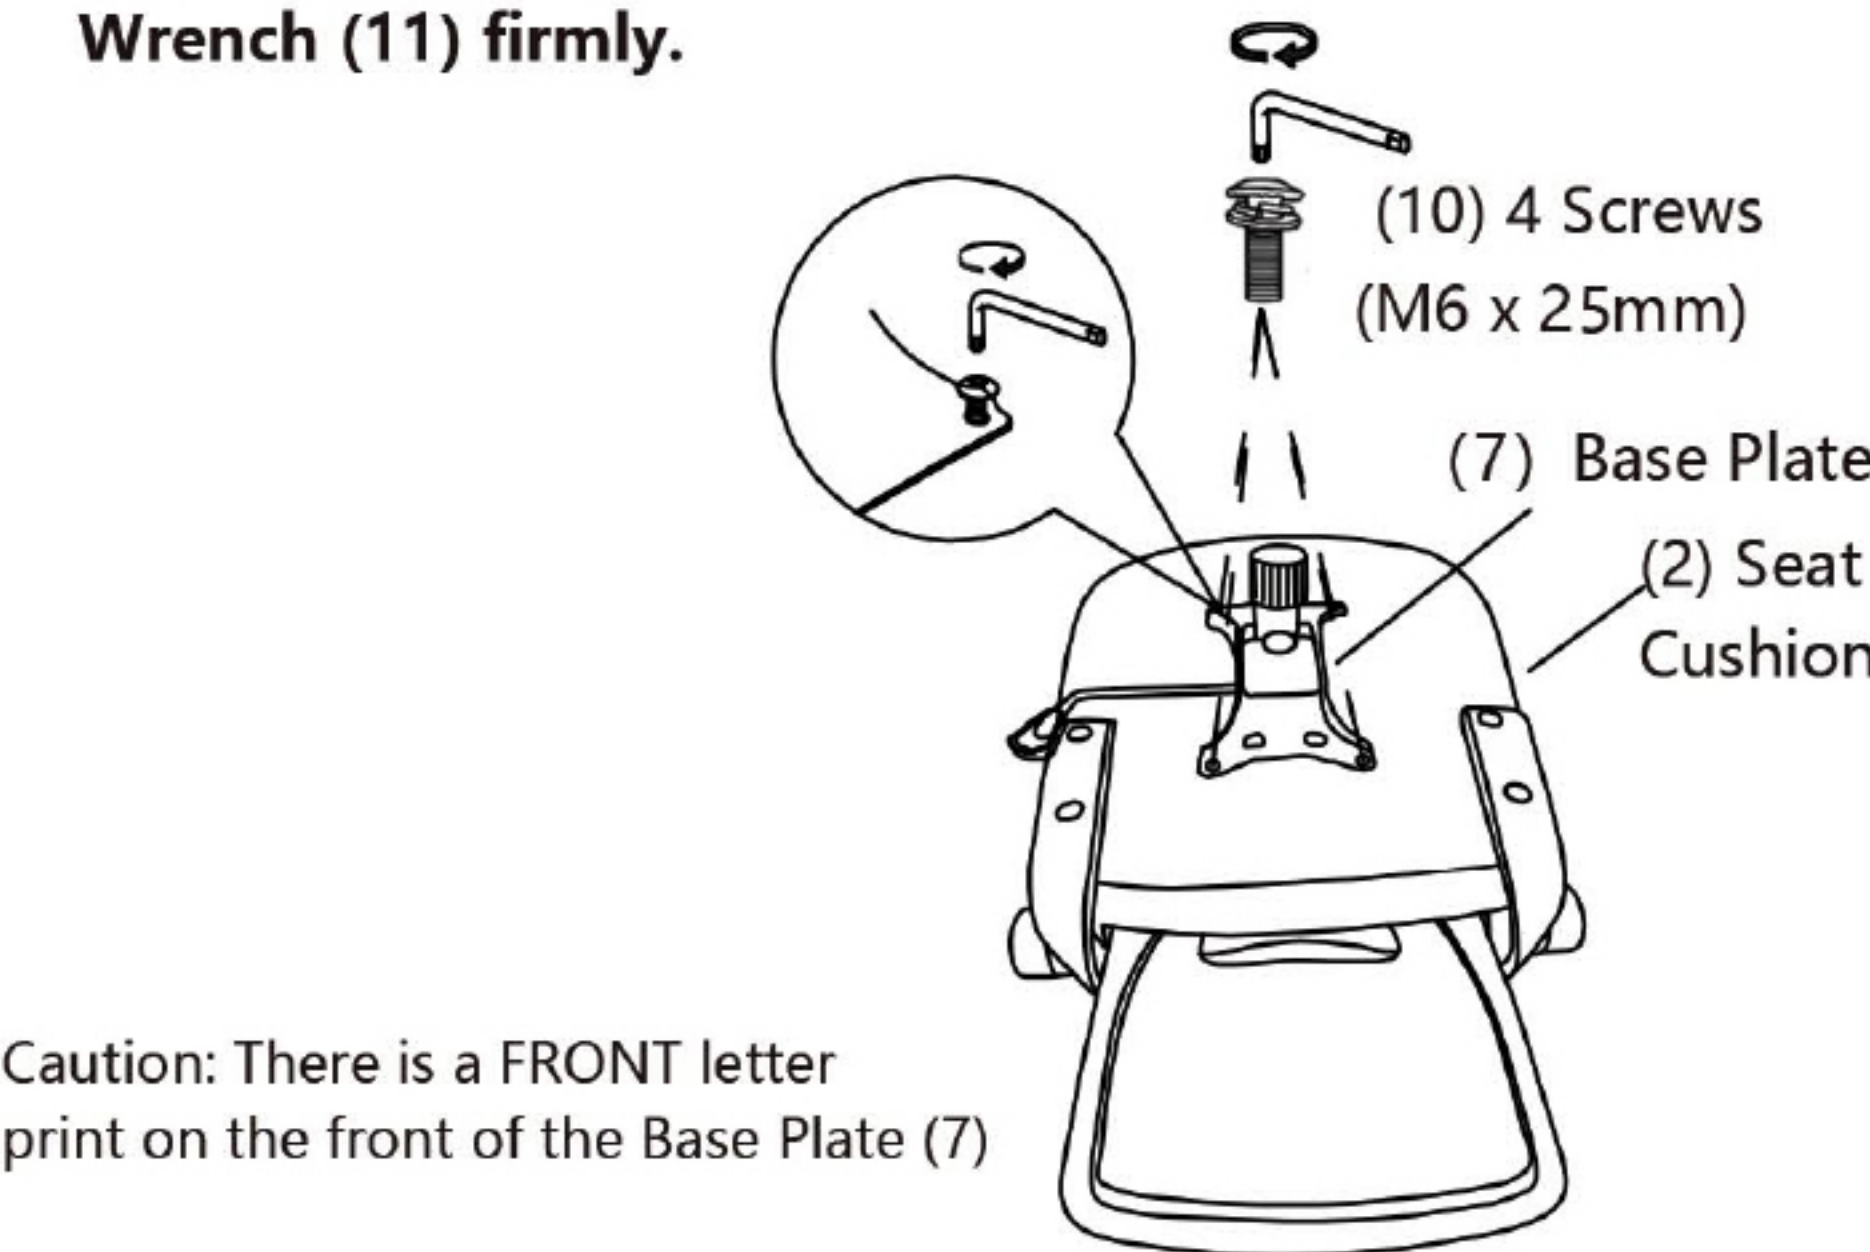

Caution: There is a FRONT letter print on the front of the Base Plate (7)

Step 6

Pick up the Step 2's Air Rod (5) and Foot Stool (3). Insert the Air Rod (5) into Step 5's Base Plate (7). There's a hole in the middle of Base Plate (7). Press the Seat Cushion (2) from top to bottom, use your whole body's strength to insert it firmly, the assembly is complete now.

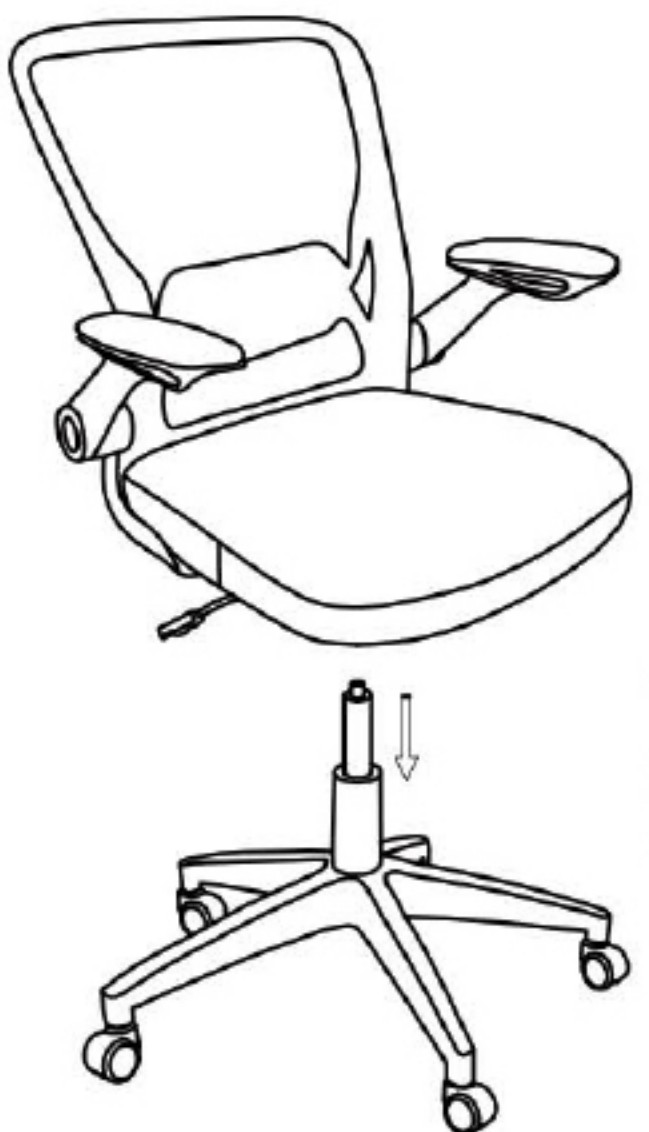

* Caution: If the Air Rod (5) doesn't insert to Base Plate (7) firmly, it's likely to fall off when the chair raises up.

KERDOM serves you wholeheartedly, Before using the product, we recommend that you scan the QR code next to it and activate the warranty first, so that we can bring you a better after-sales guarantee and more considerate service.