


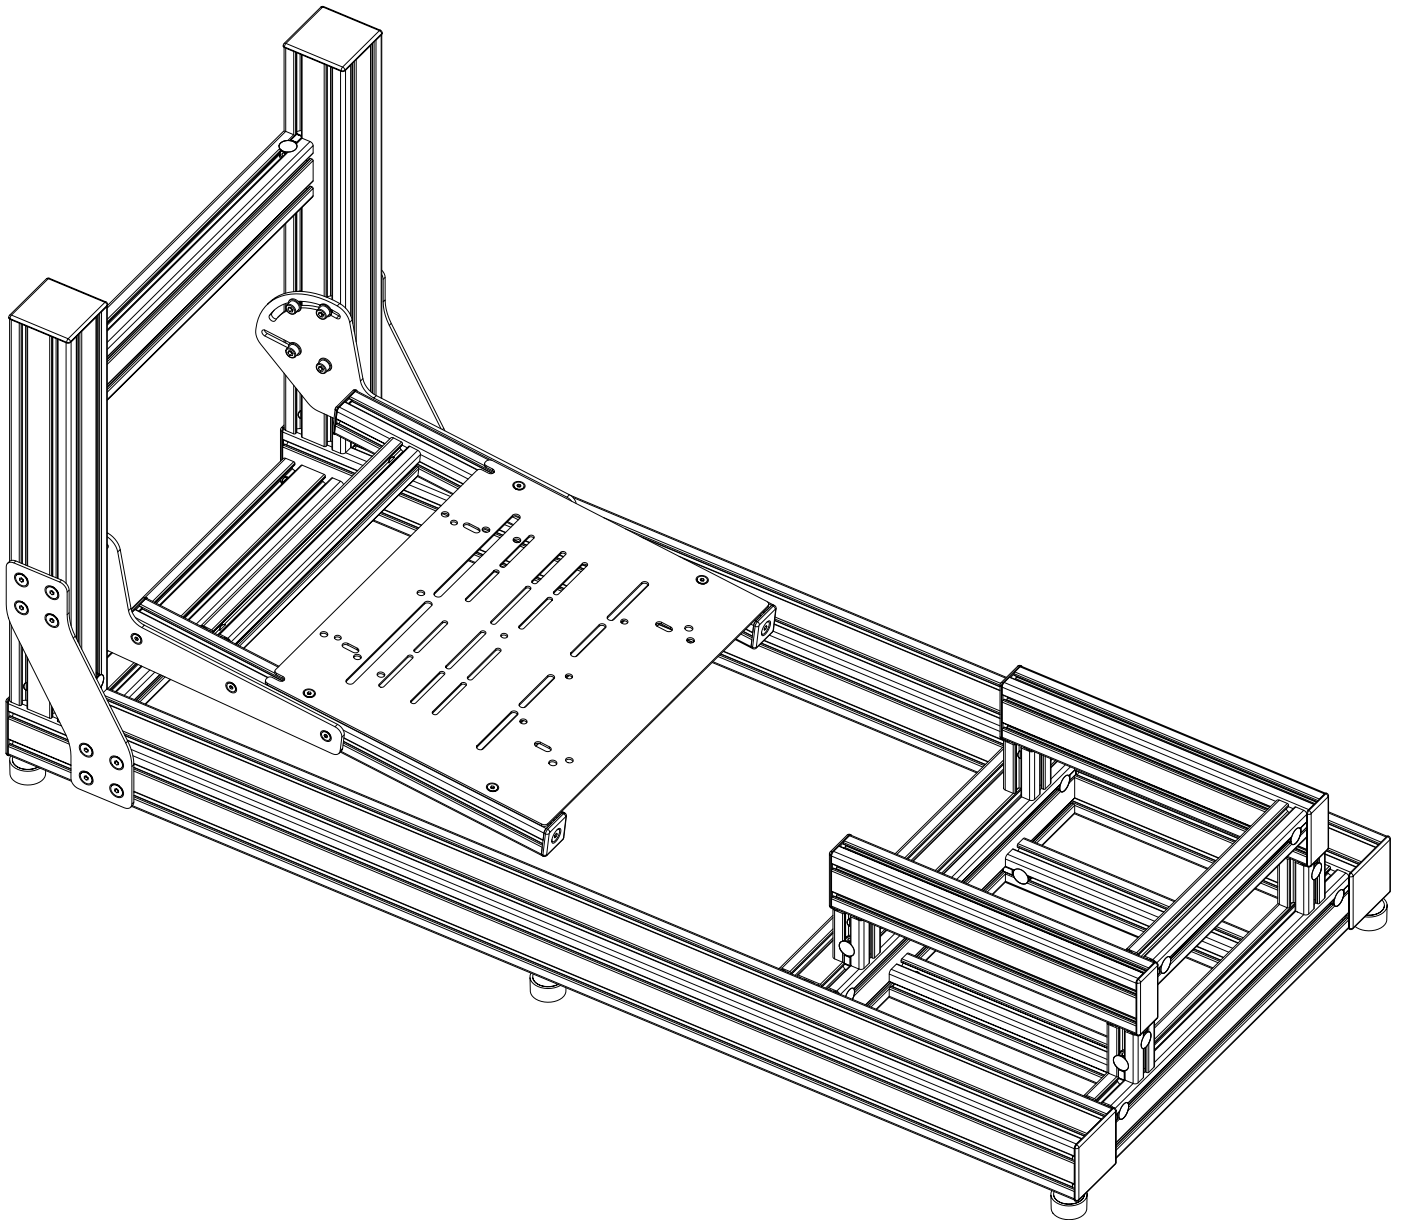




MTS BASE FRAME

Instruction Manual
Bedienungsanleitung
Mode d'emploi







PARTS - BASE FRAME

[dimensions in mm / different scales]
No extra or spare parts listed!

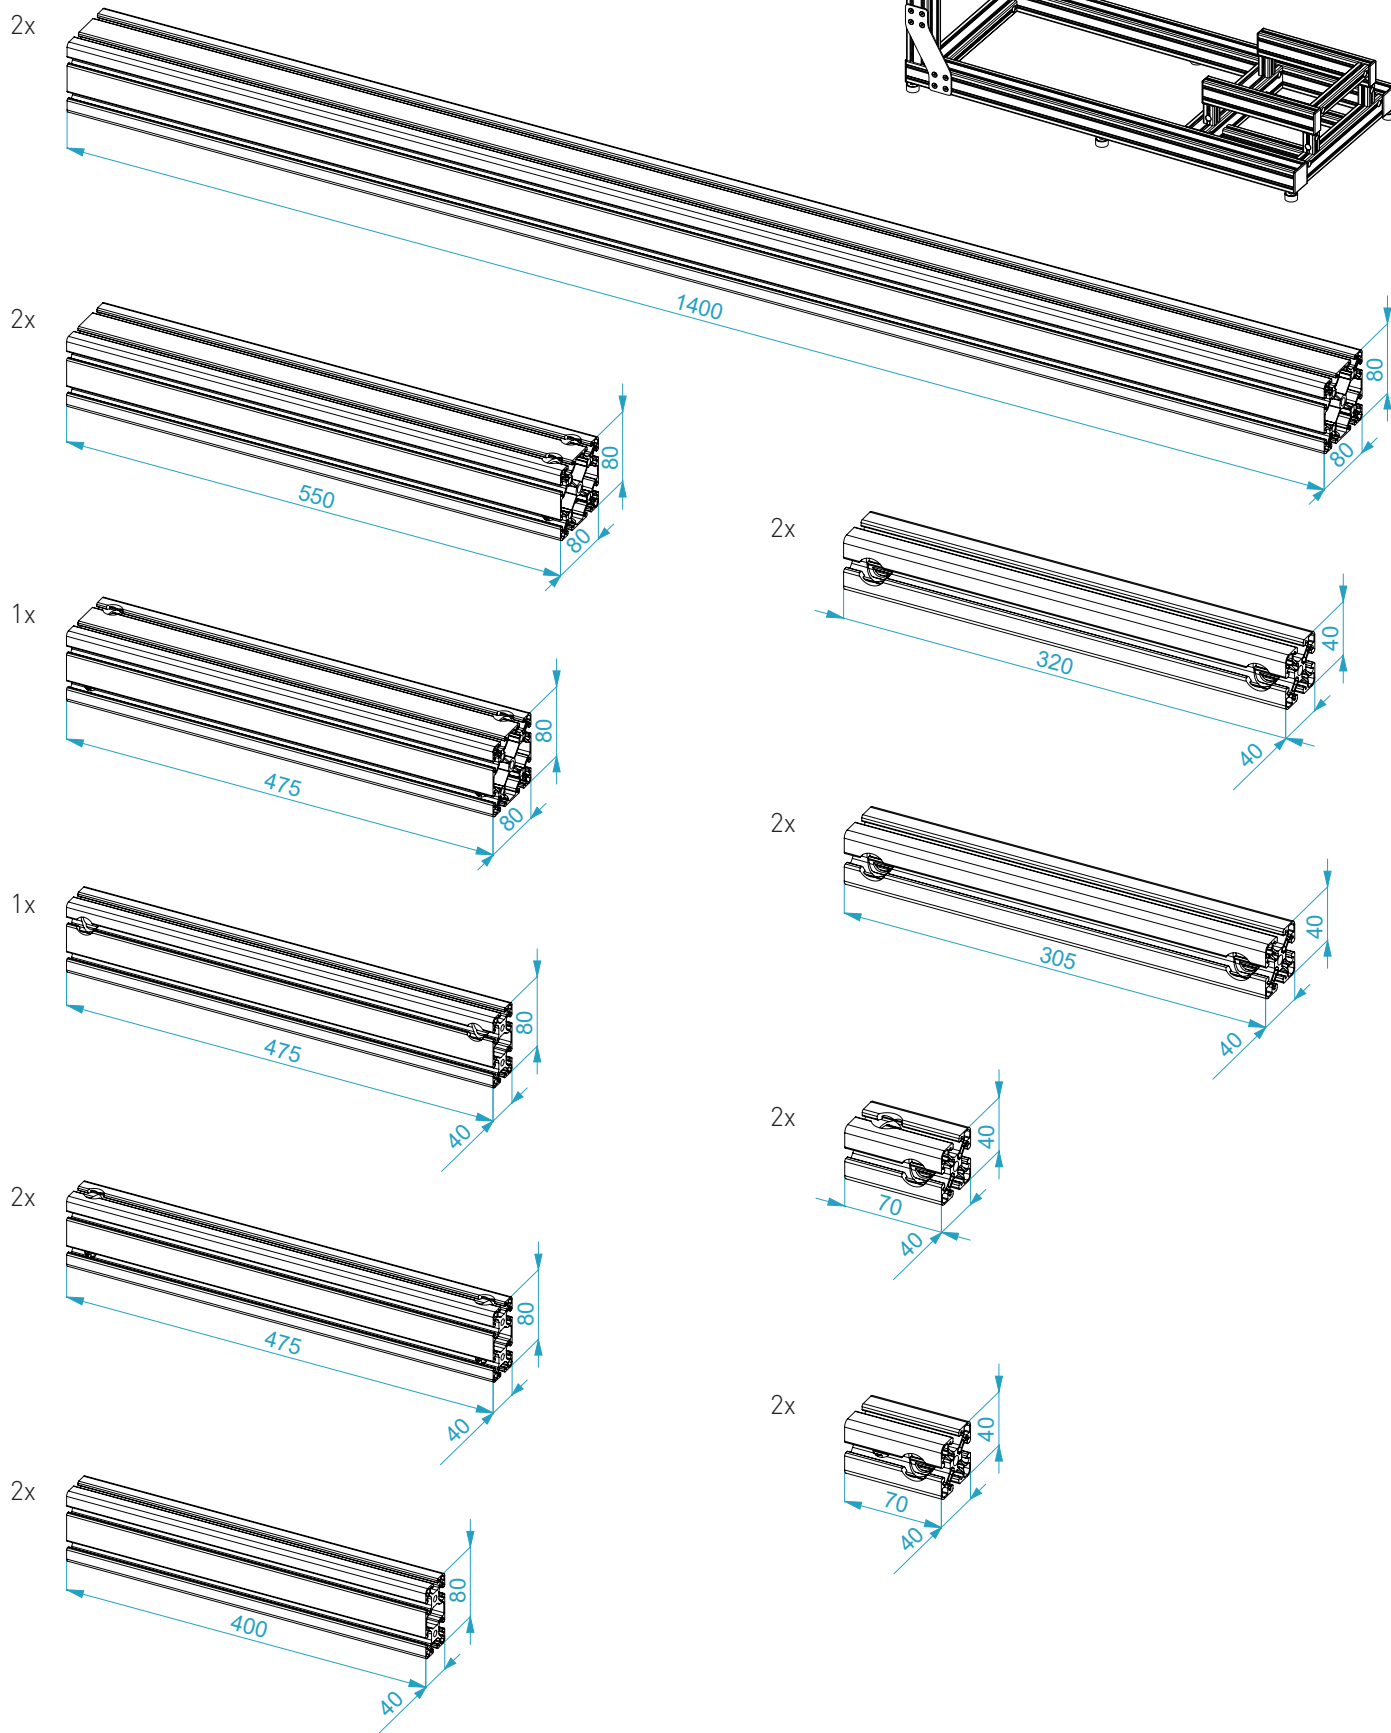

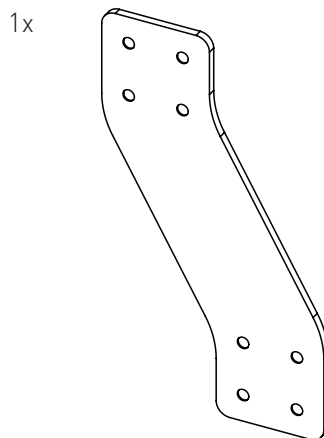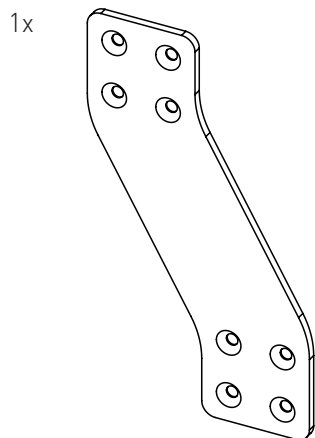


BAG 1

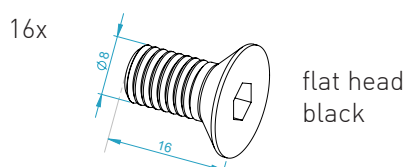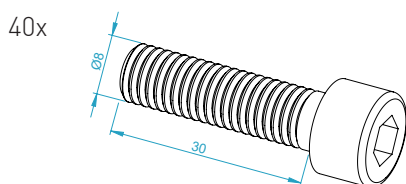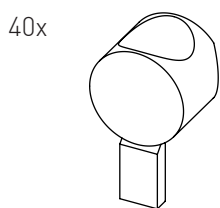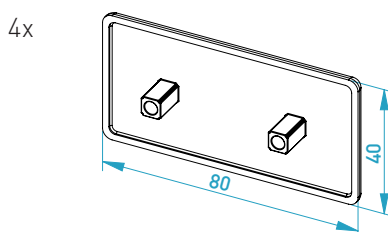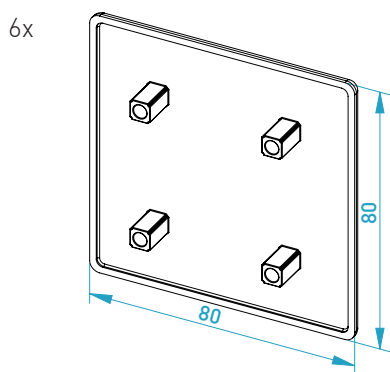


BAG 2 (feet)


6x

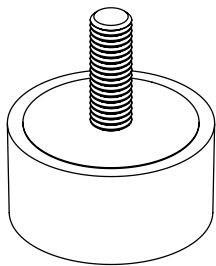


6x




6x

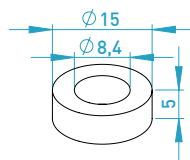



6x

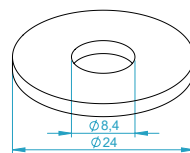

6x




ASSEMBLY



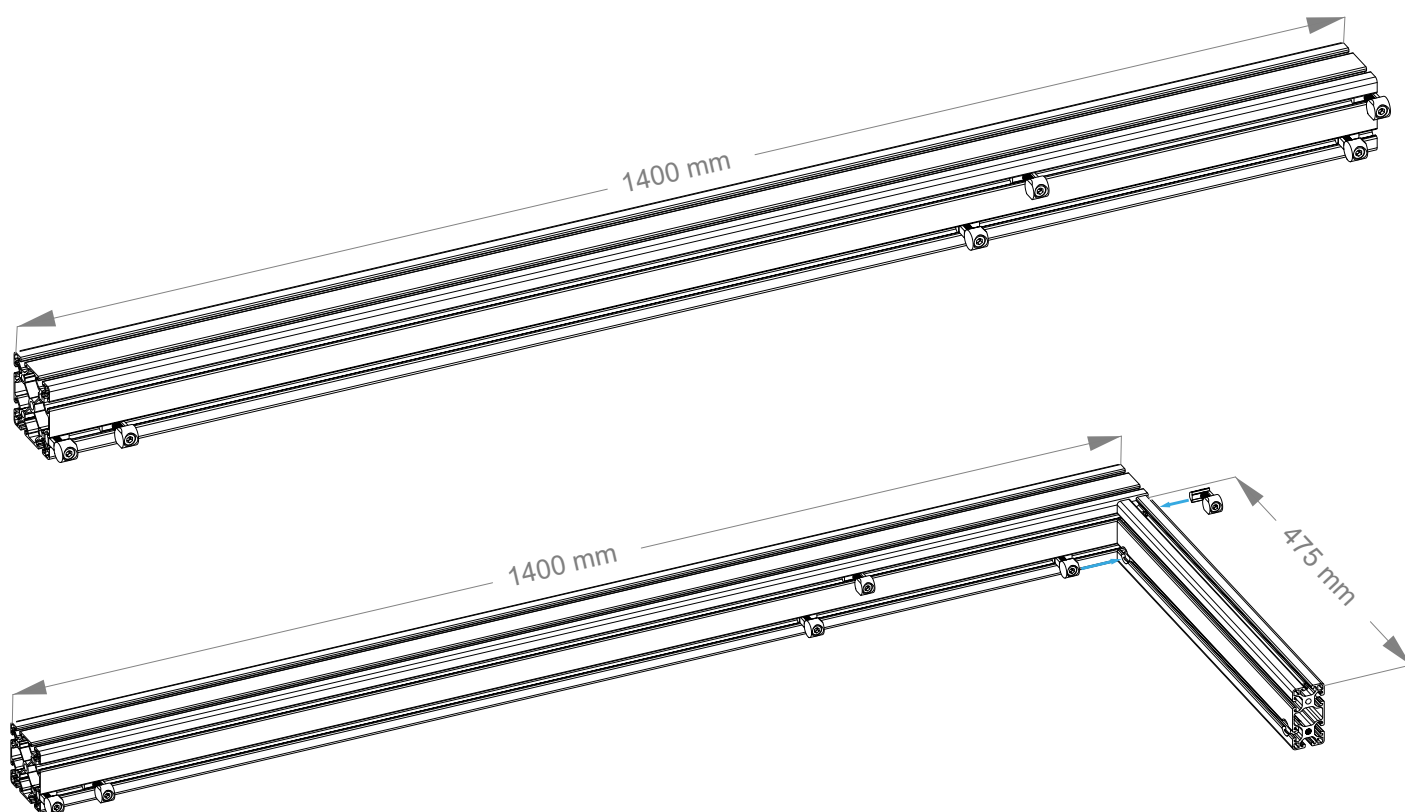
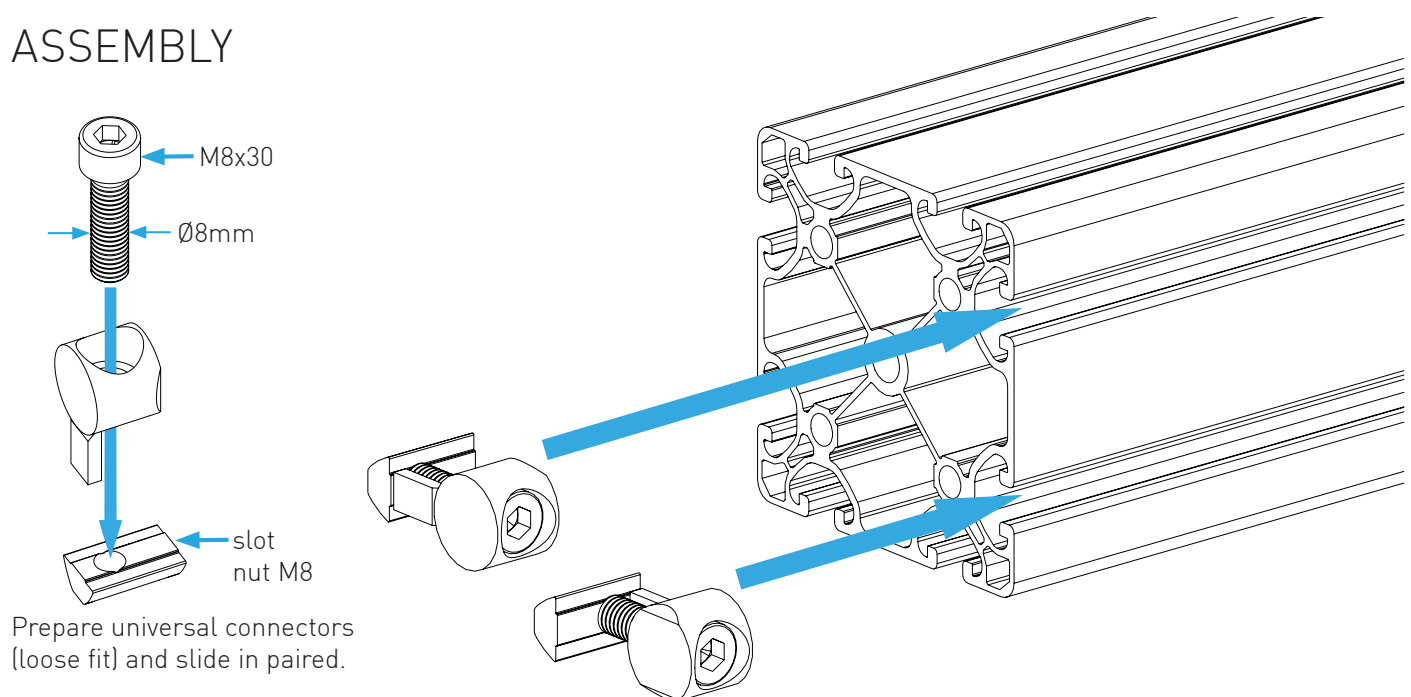


detail


Use a plan surface for assembly.

Tighten slightly until ALL profiles are placed.

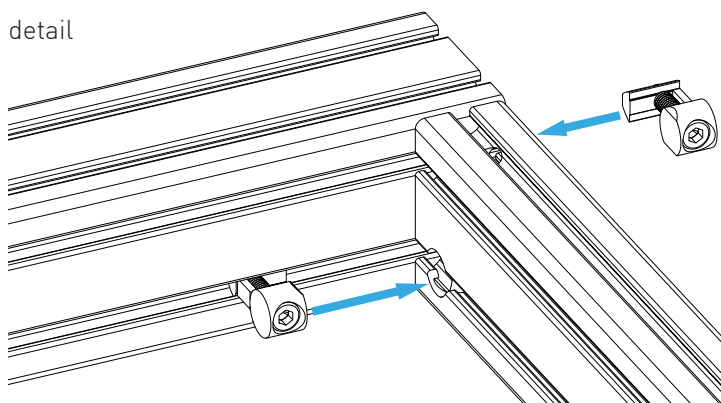


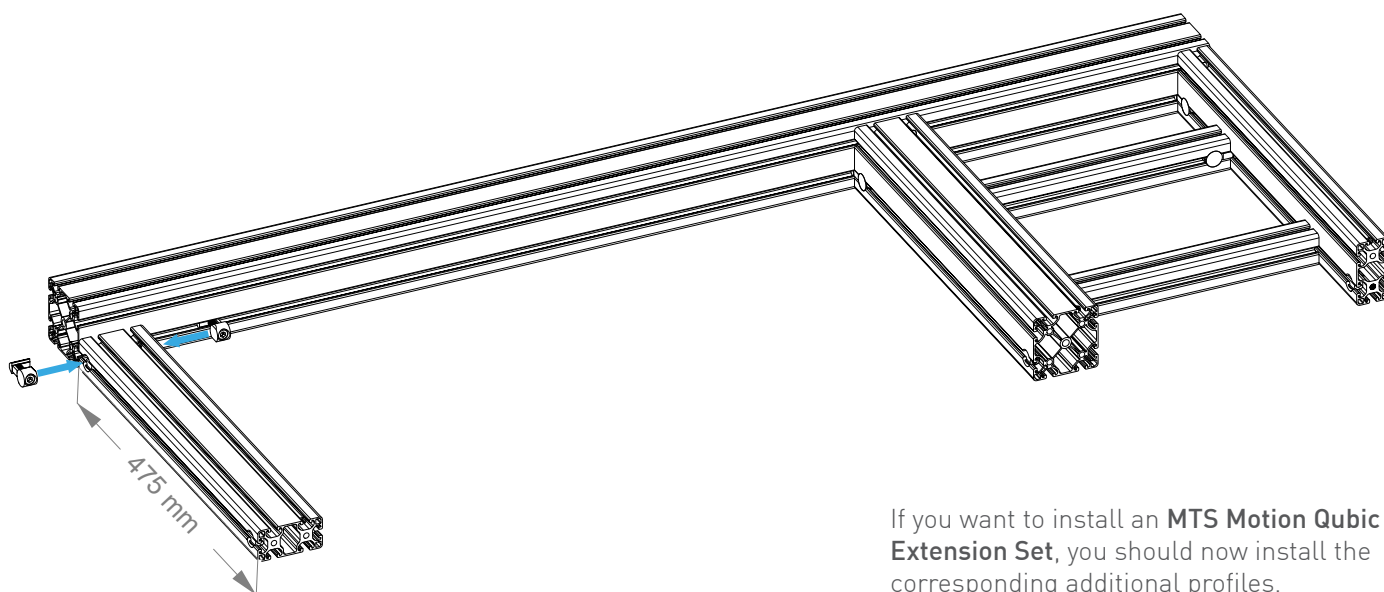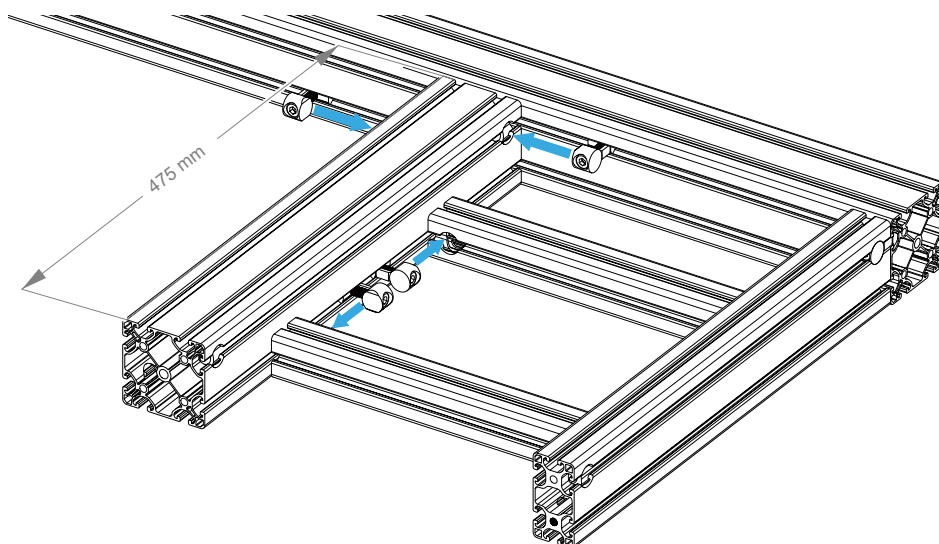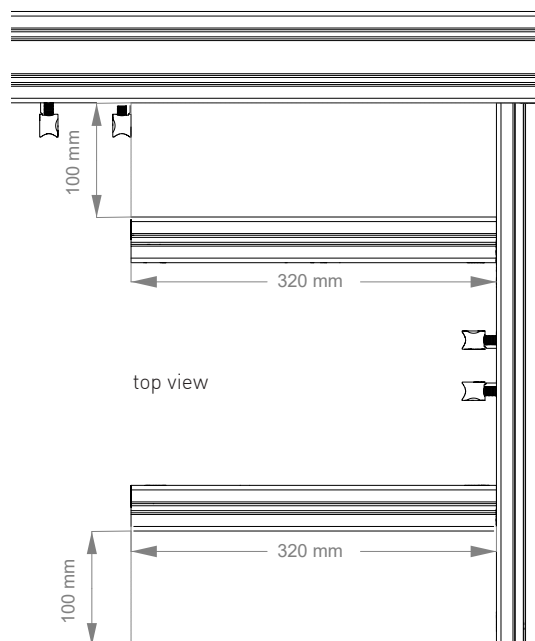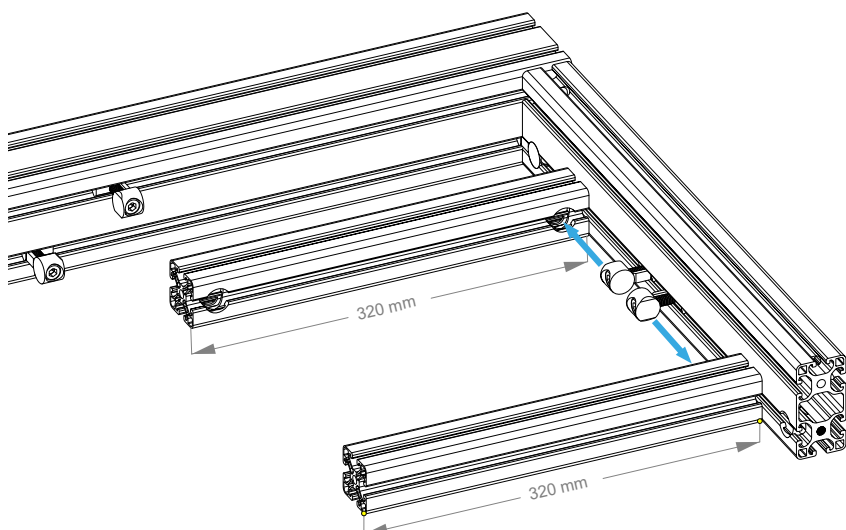



If you want to install an **MTS Motion Qubic Extension Set**, you should now install the corresponding additional profiles.



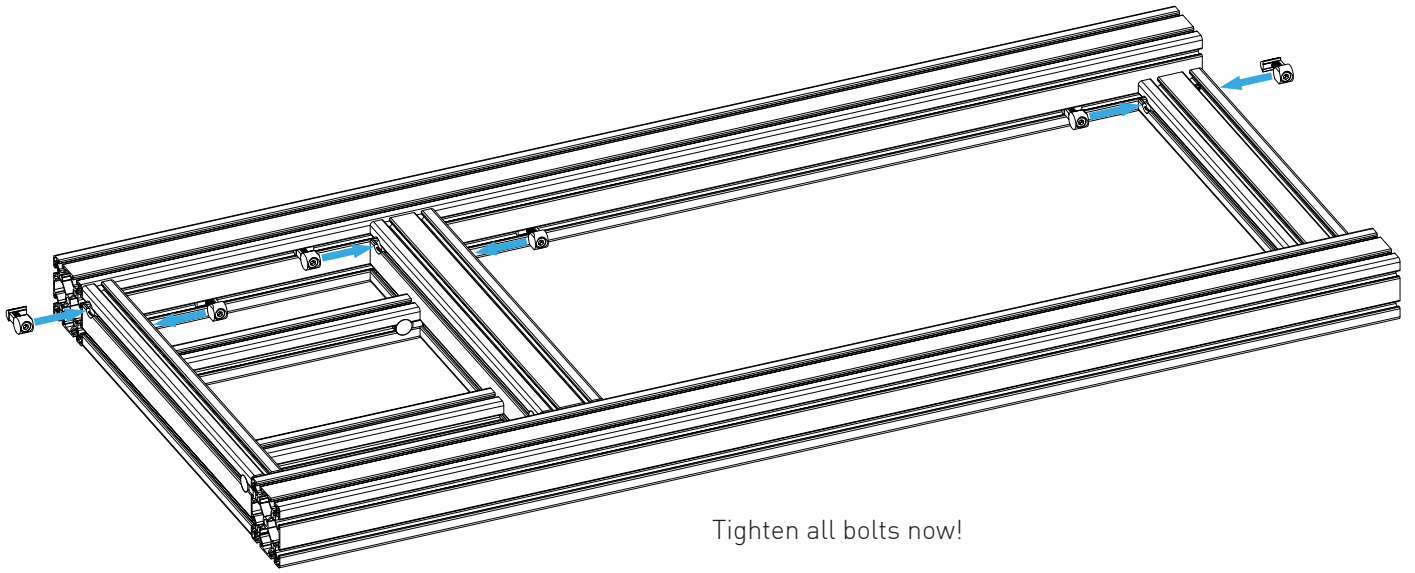


Tighten all bolts now!


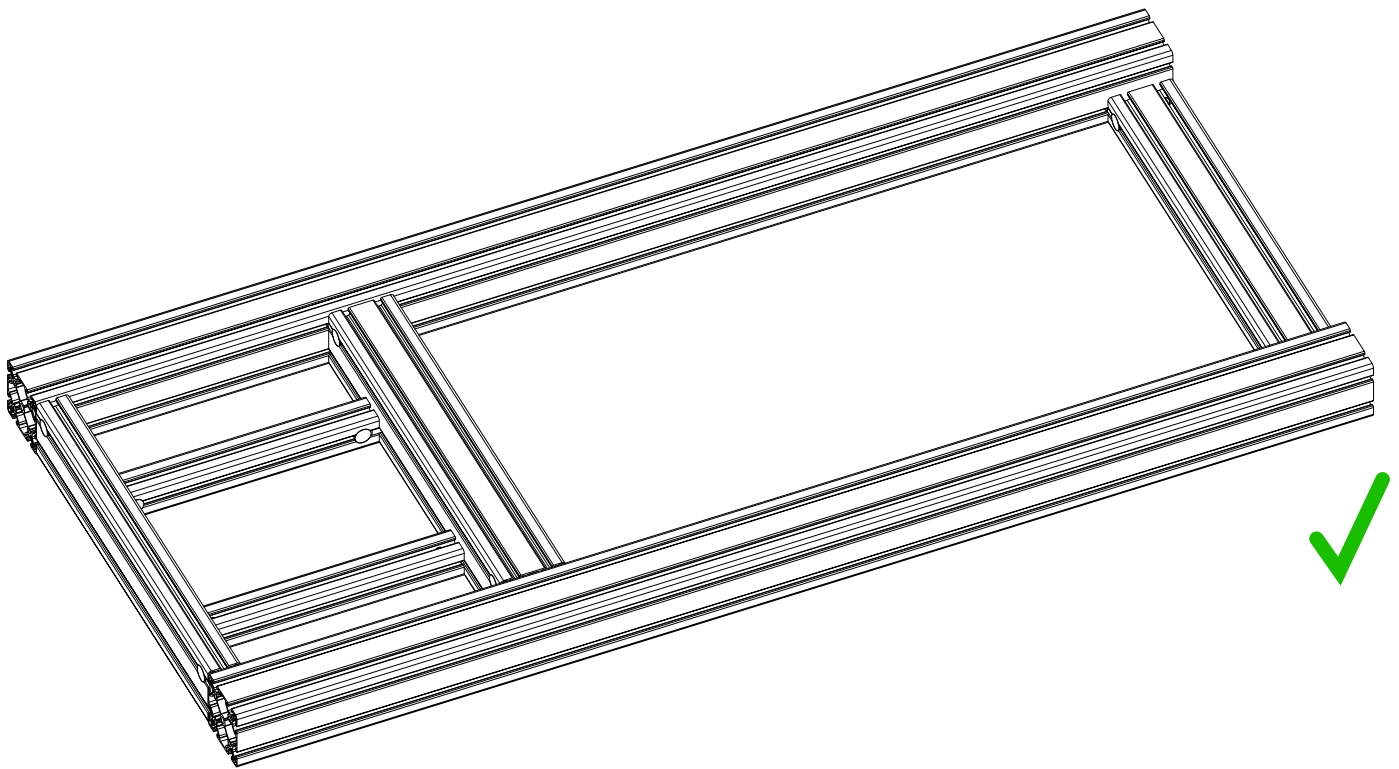


Mounting the feet.
Two in the middle of the profiles.
Four at the ends.

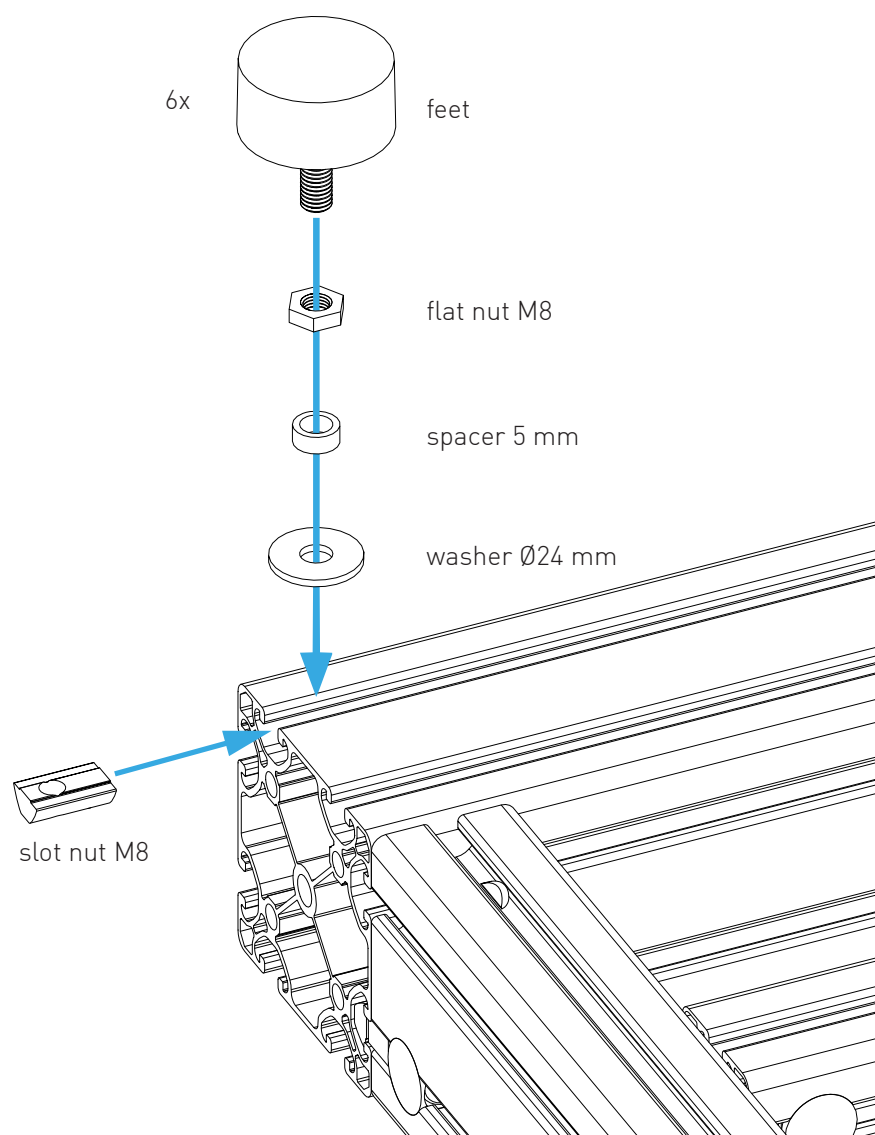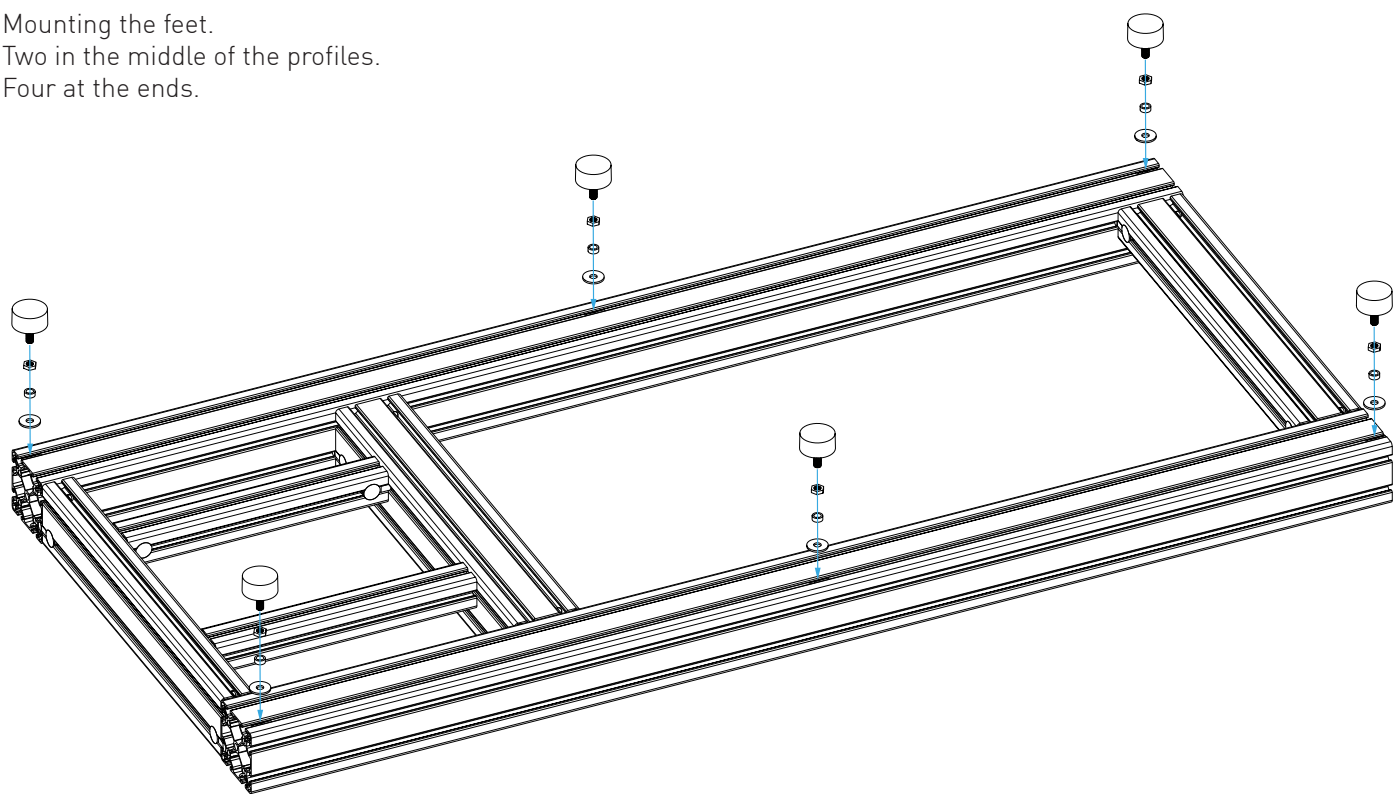


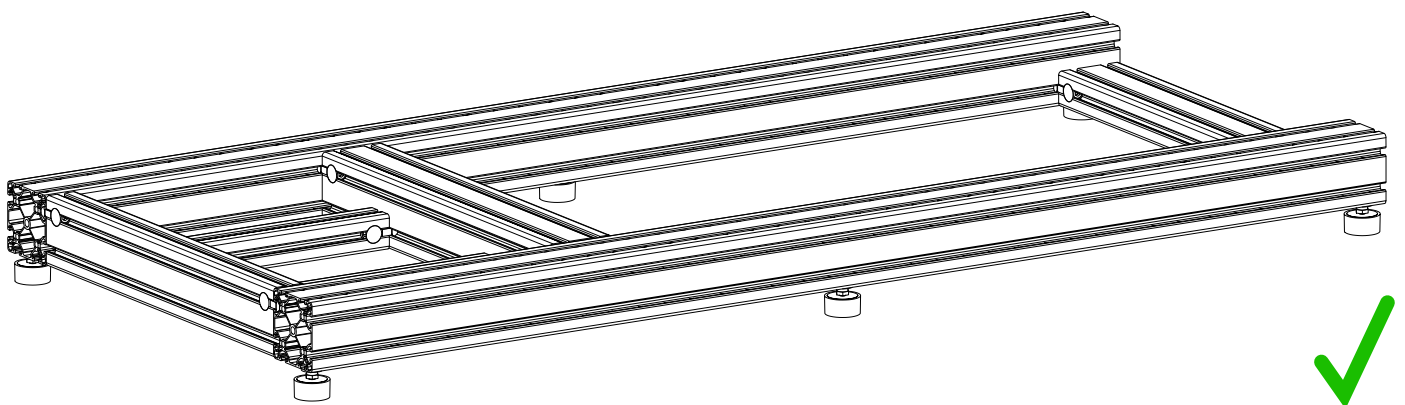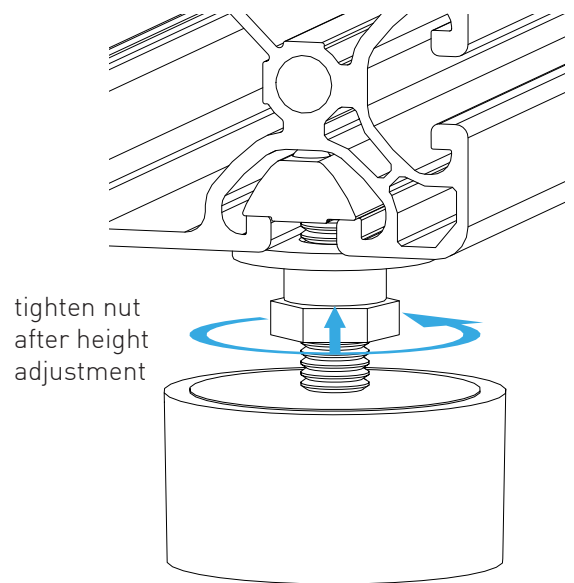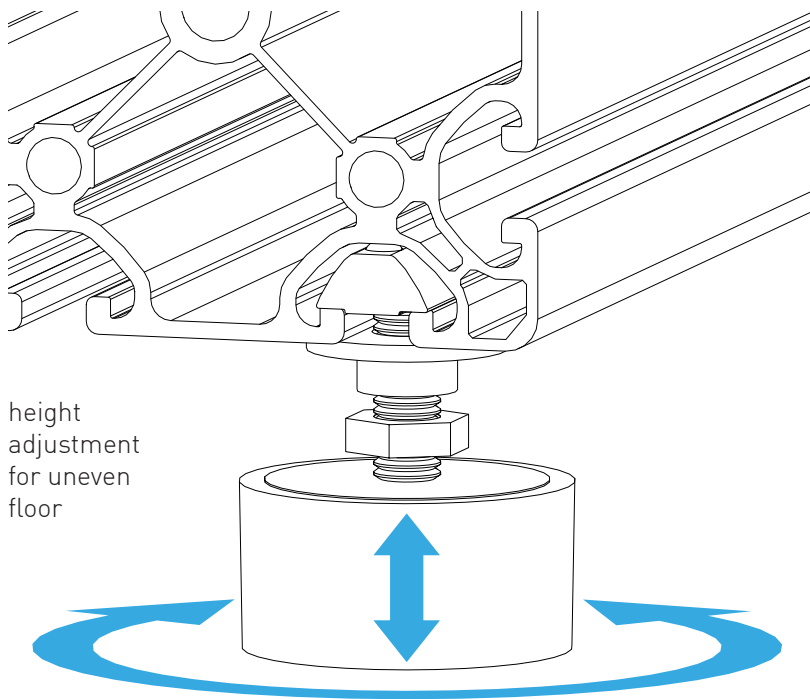


2x

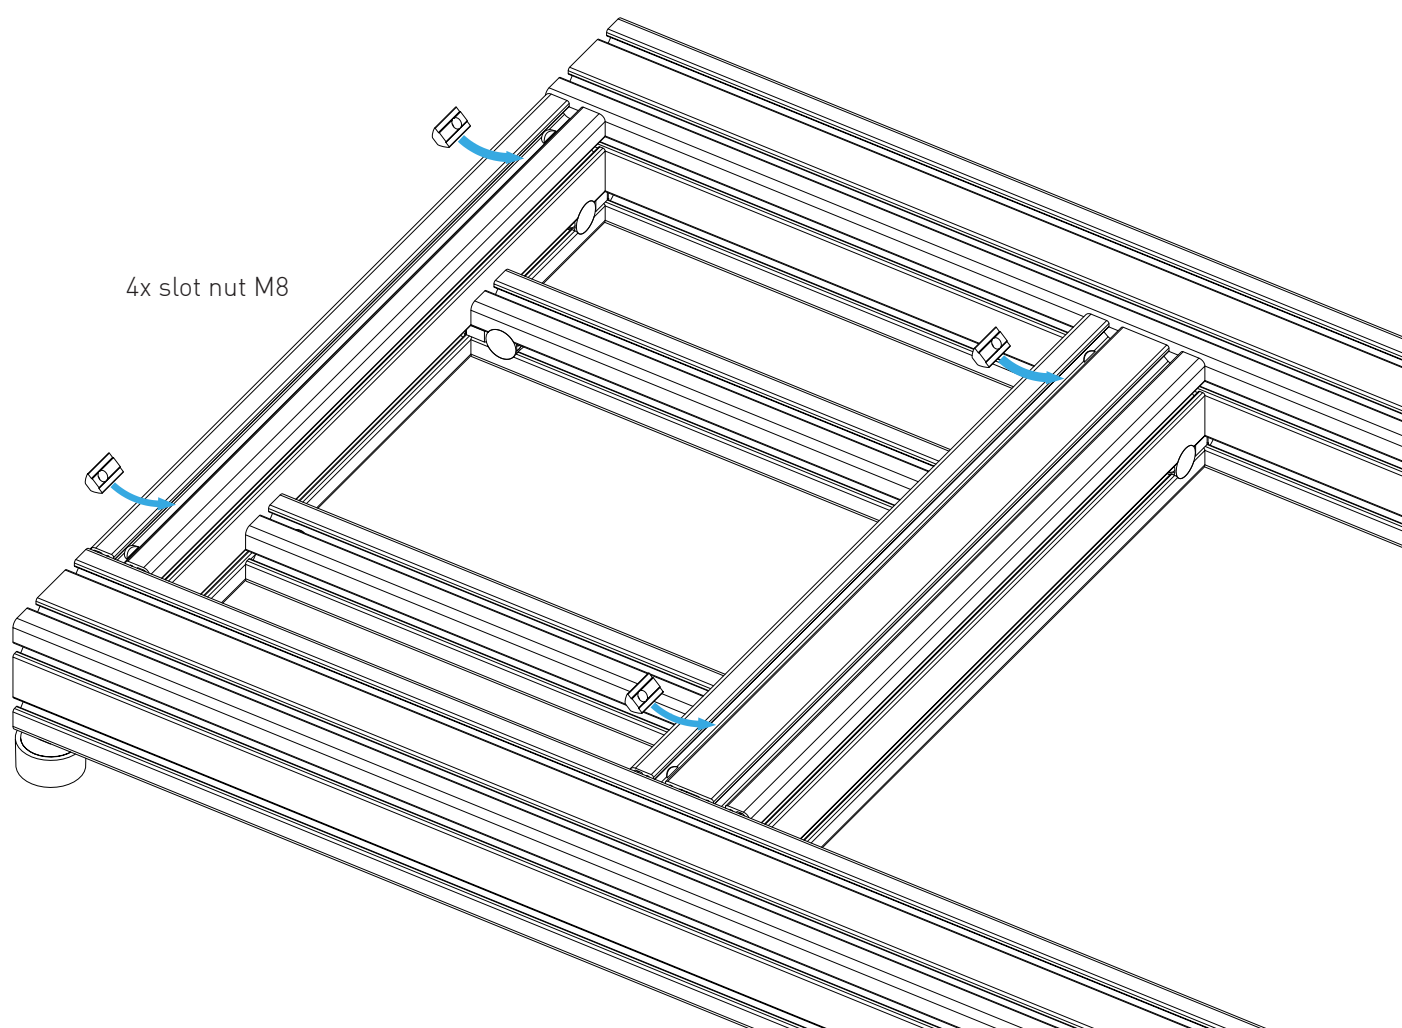
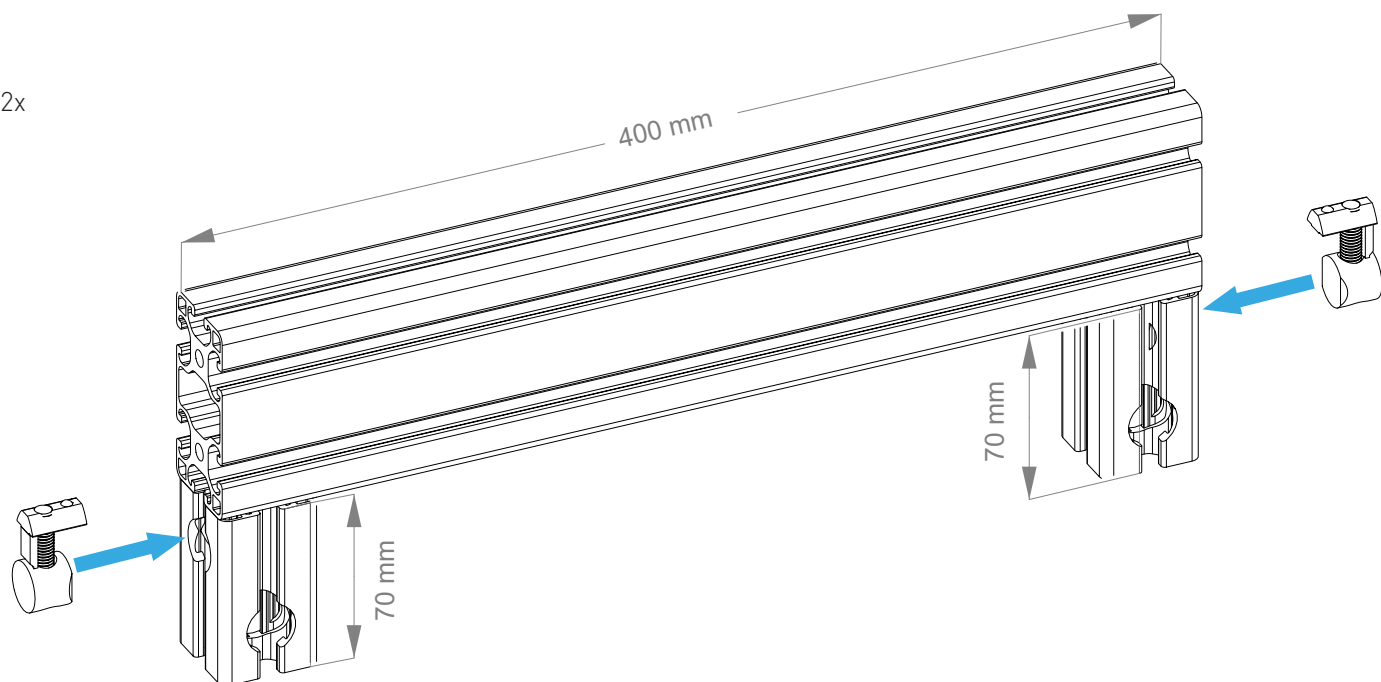




4x


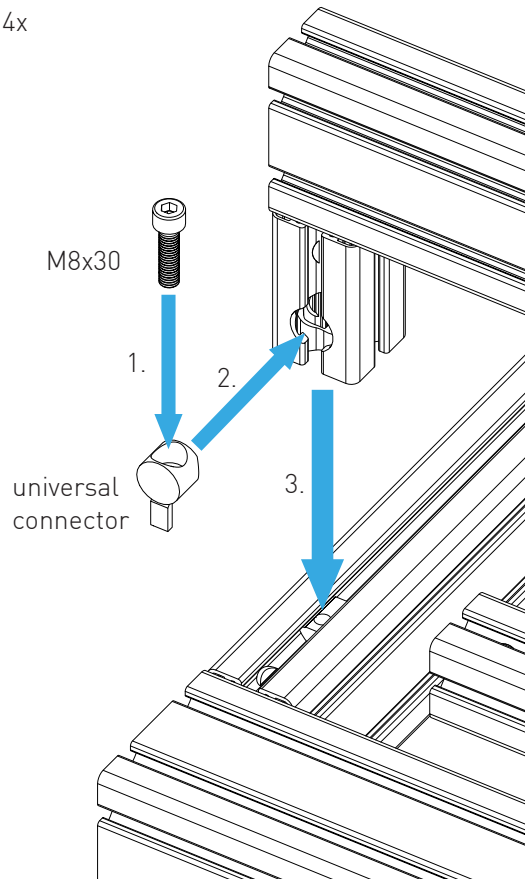


Tighten slightly until all profiles are placed.

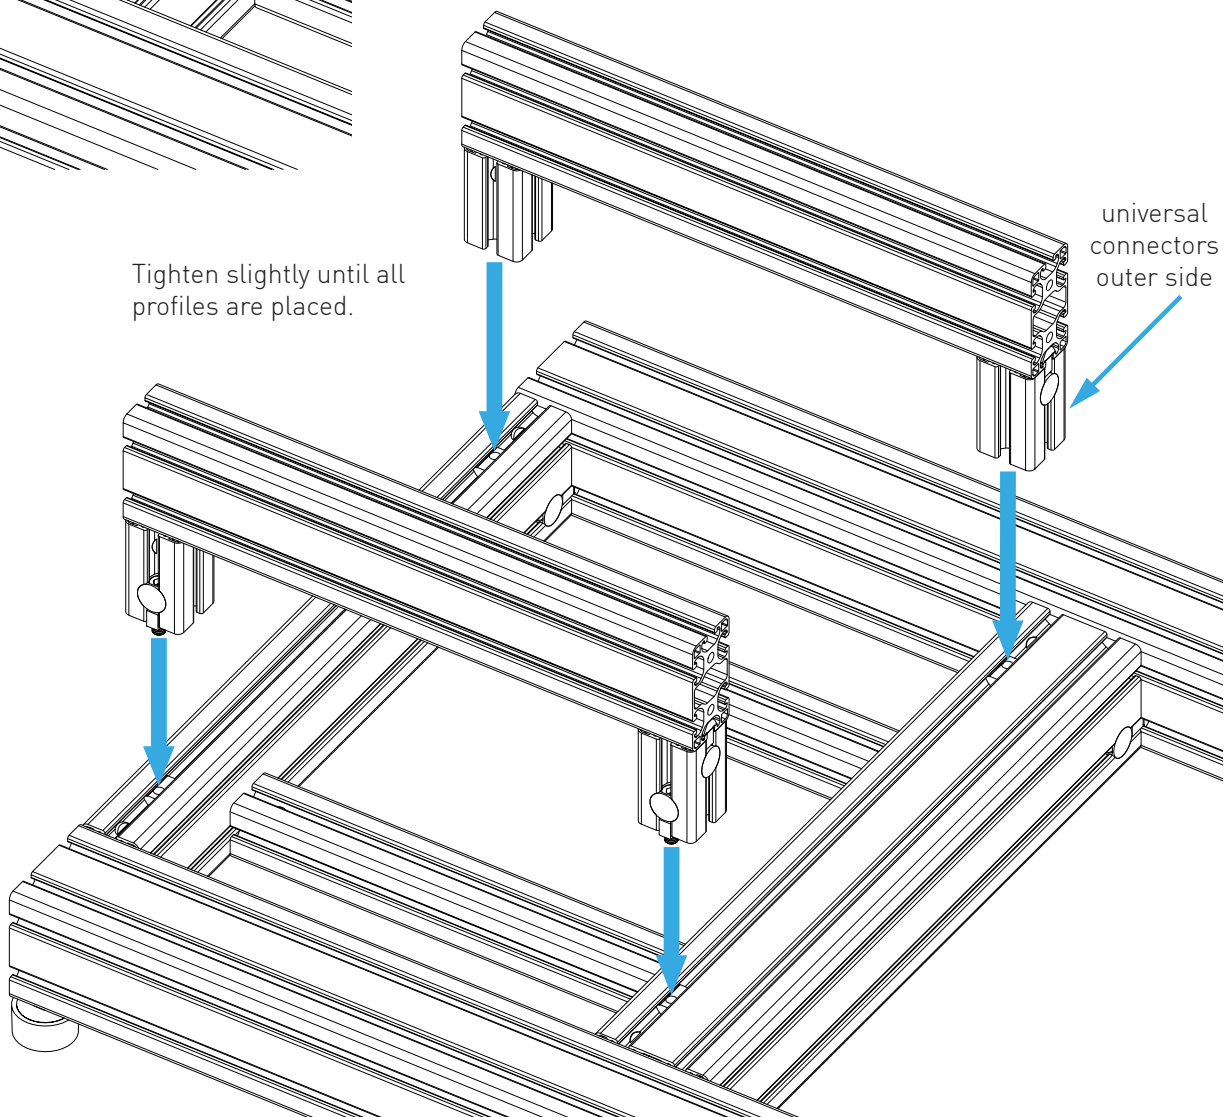

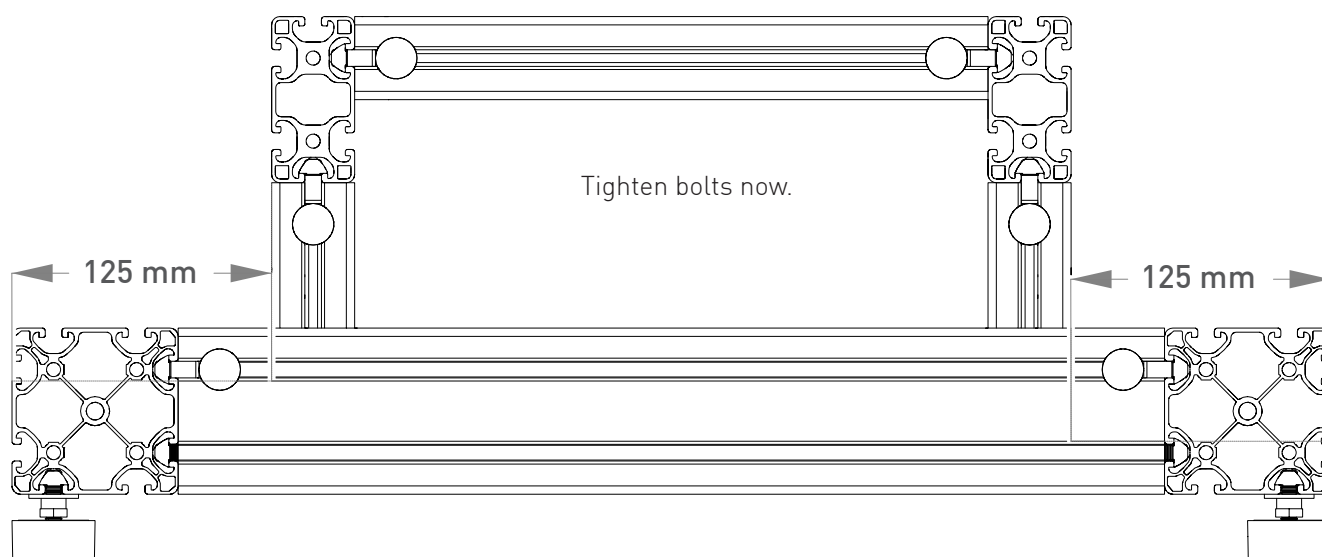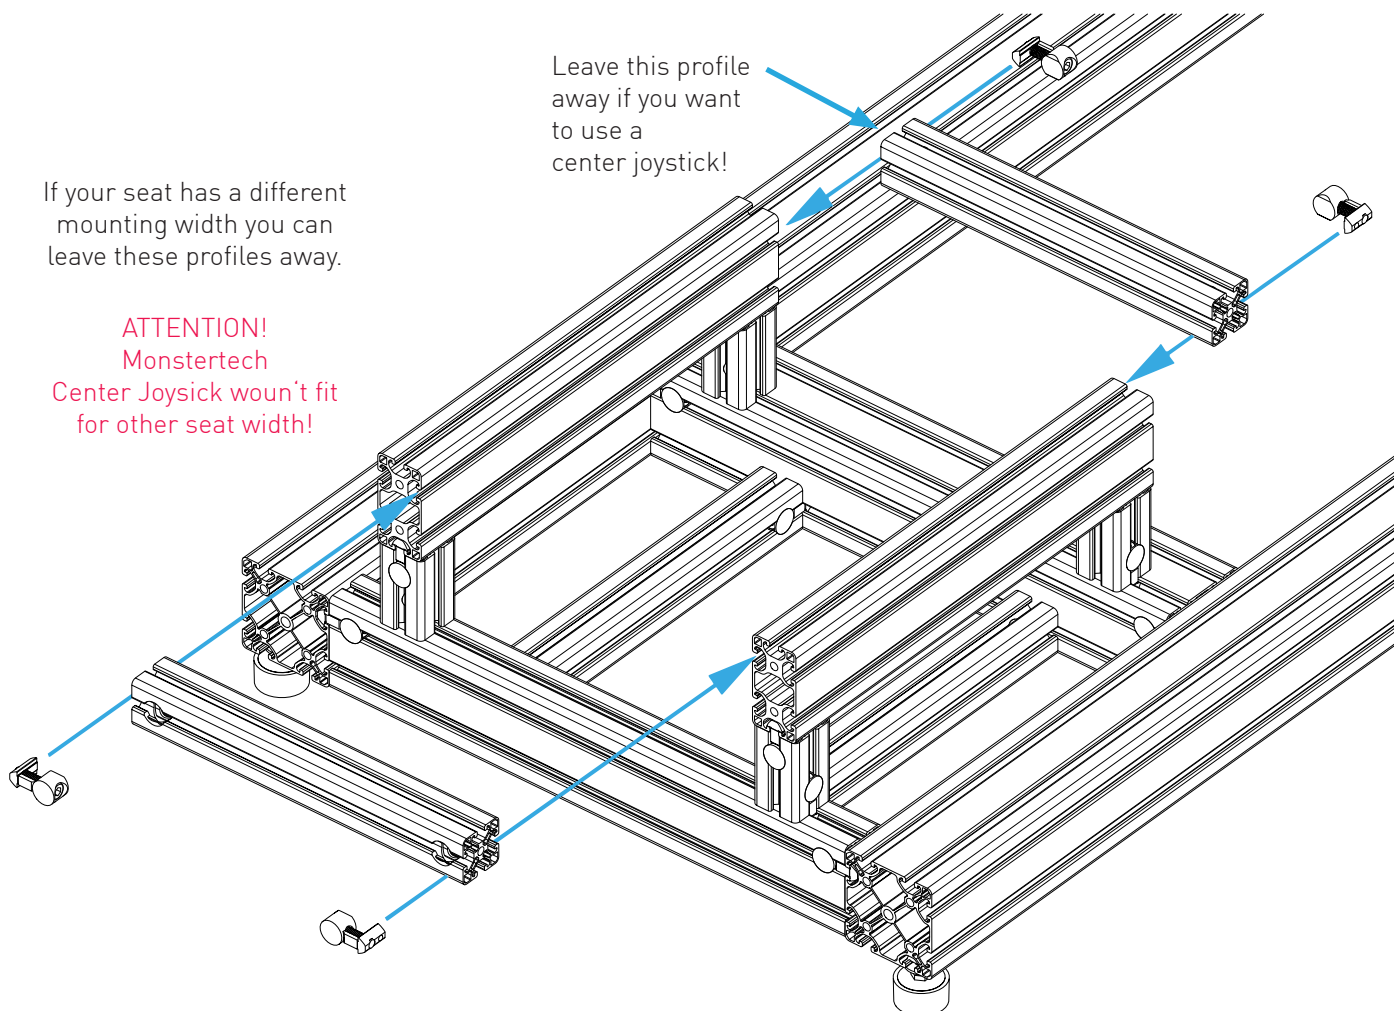

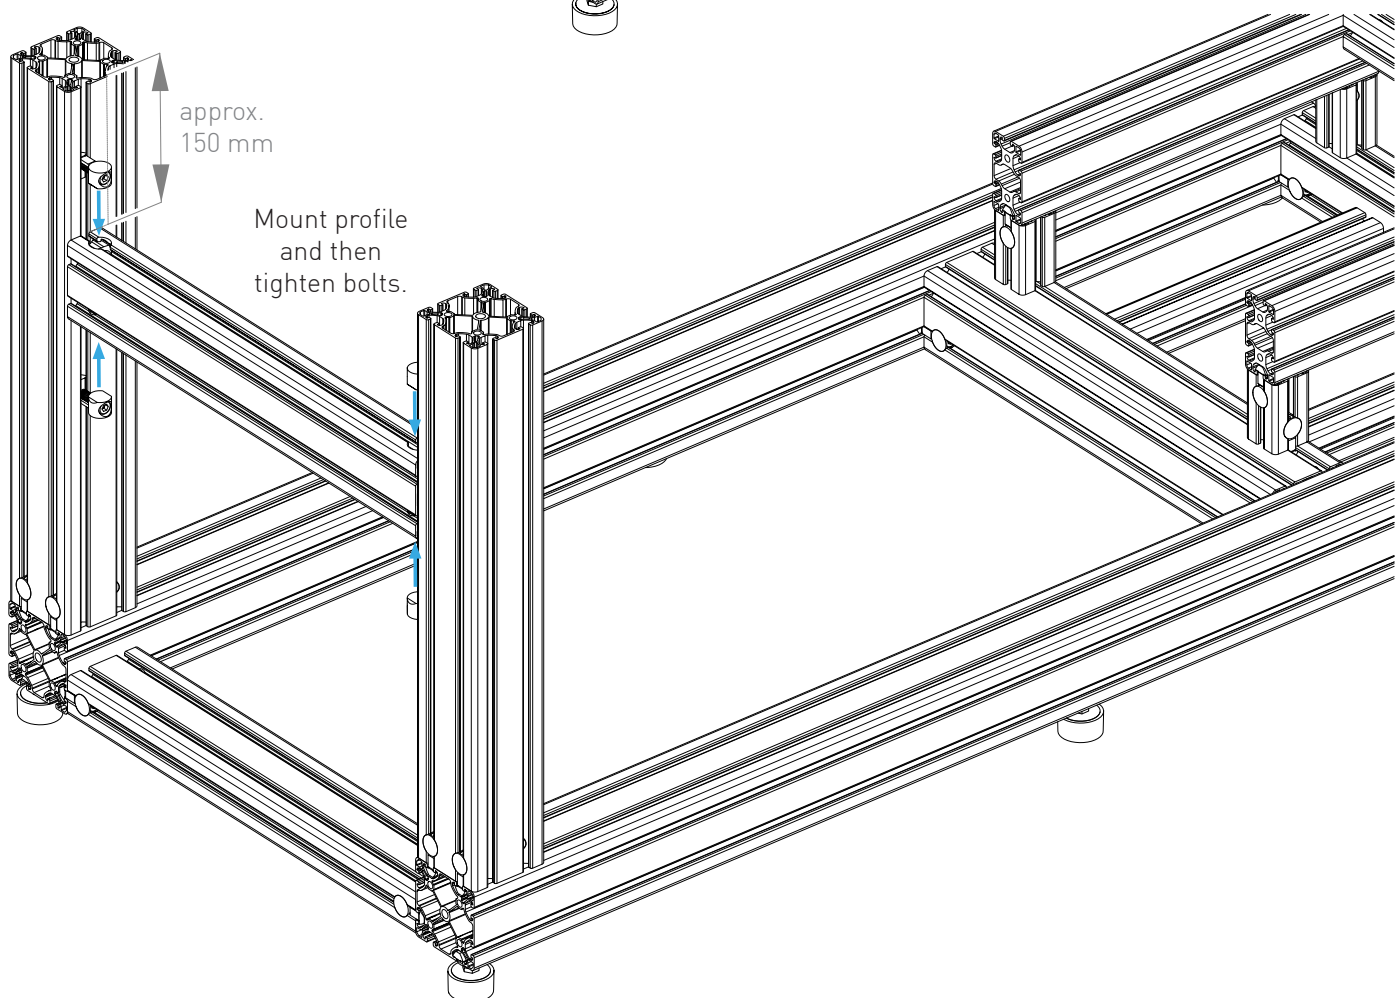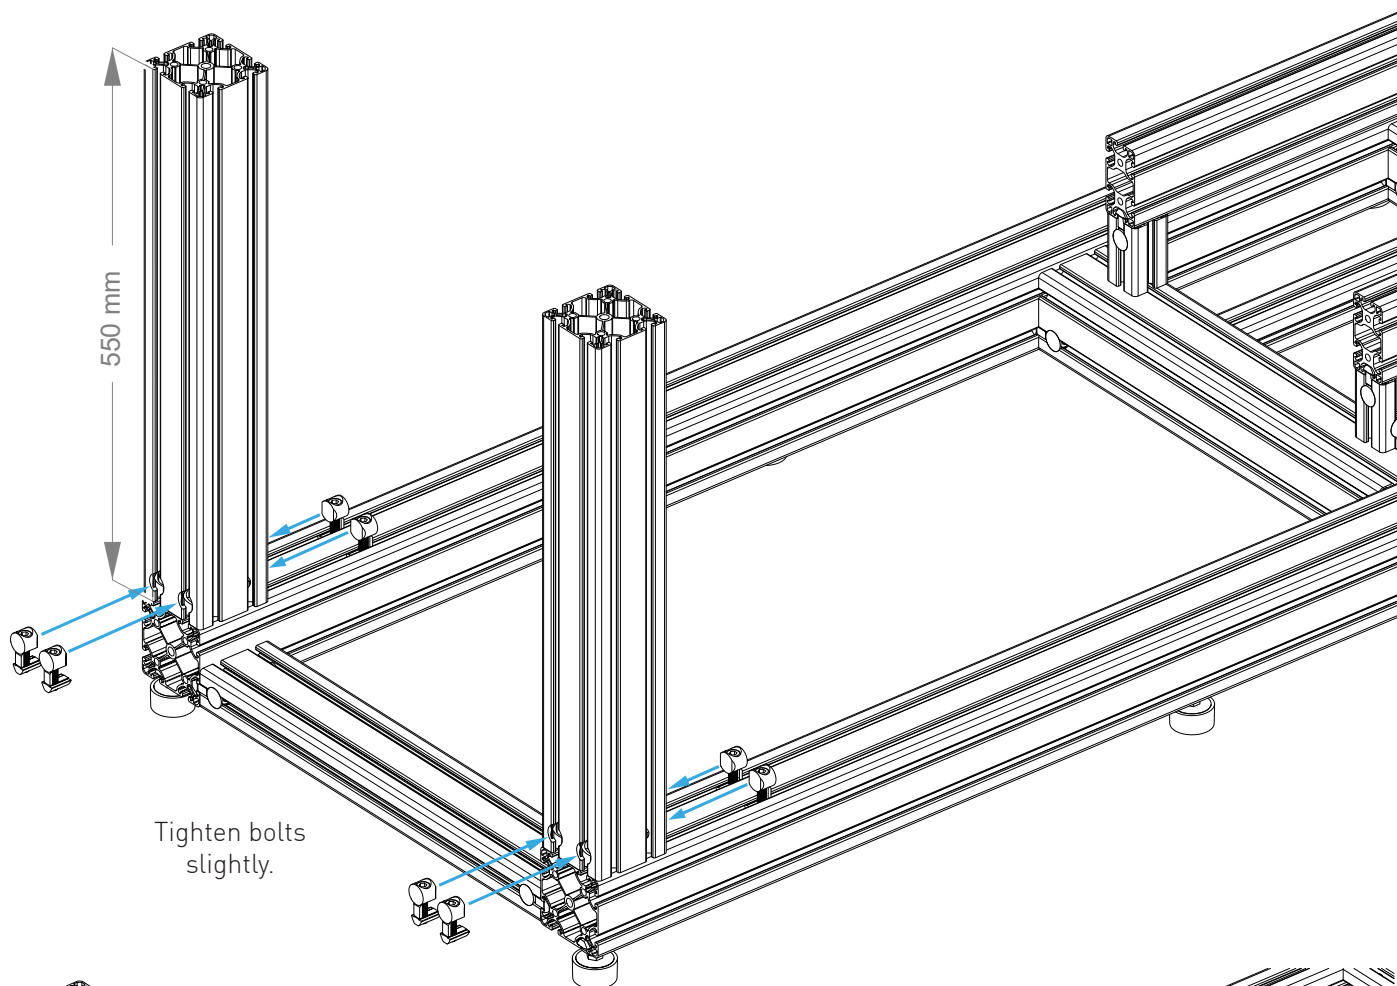


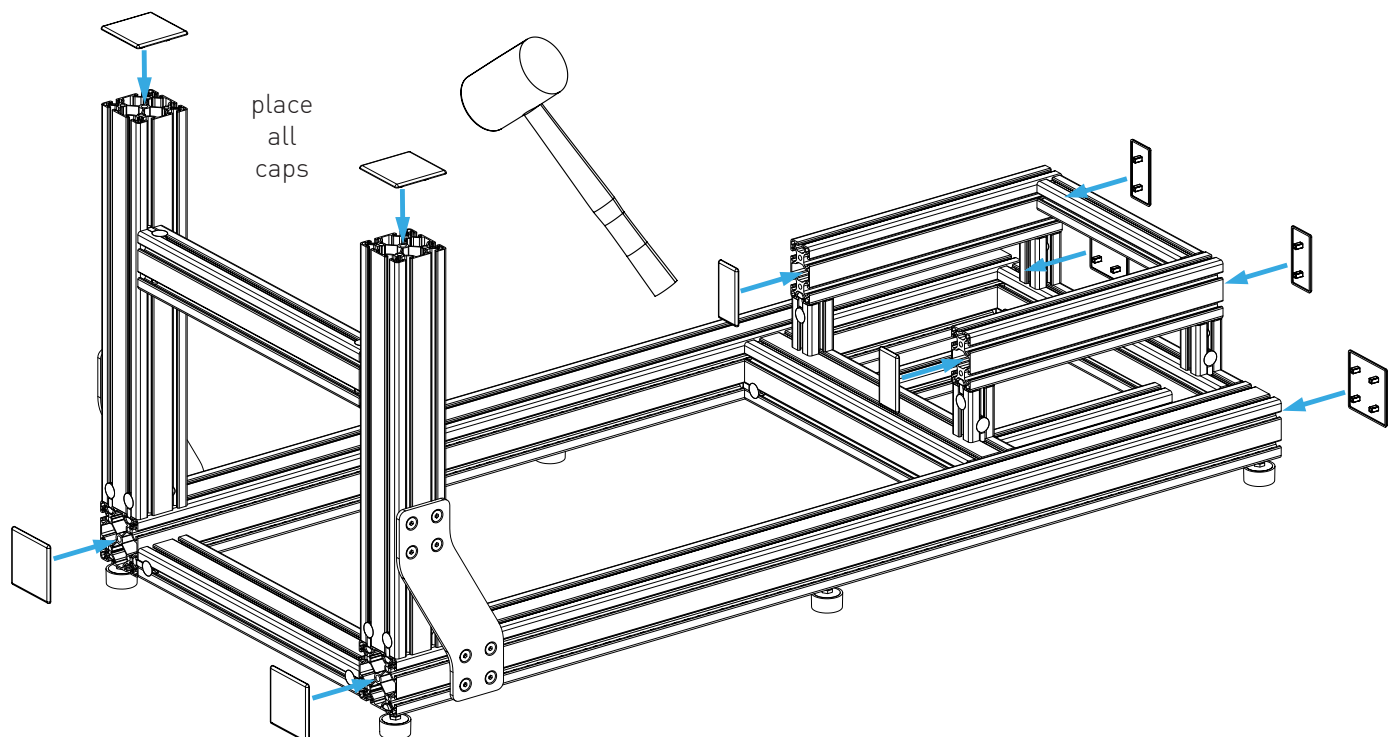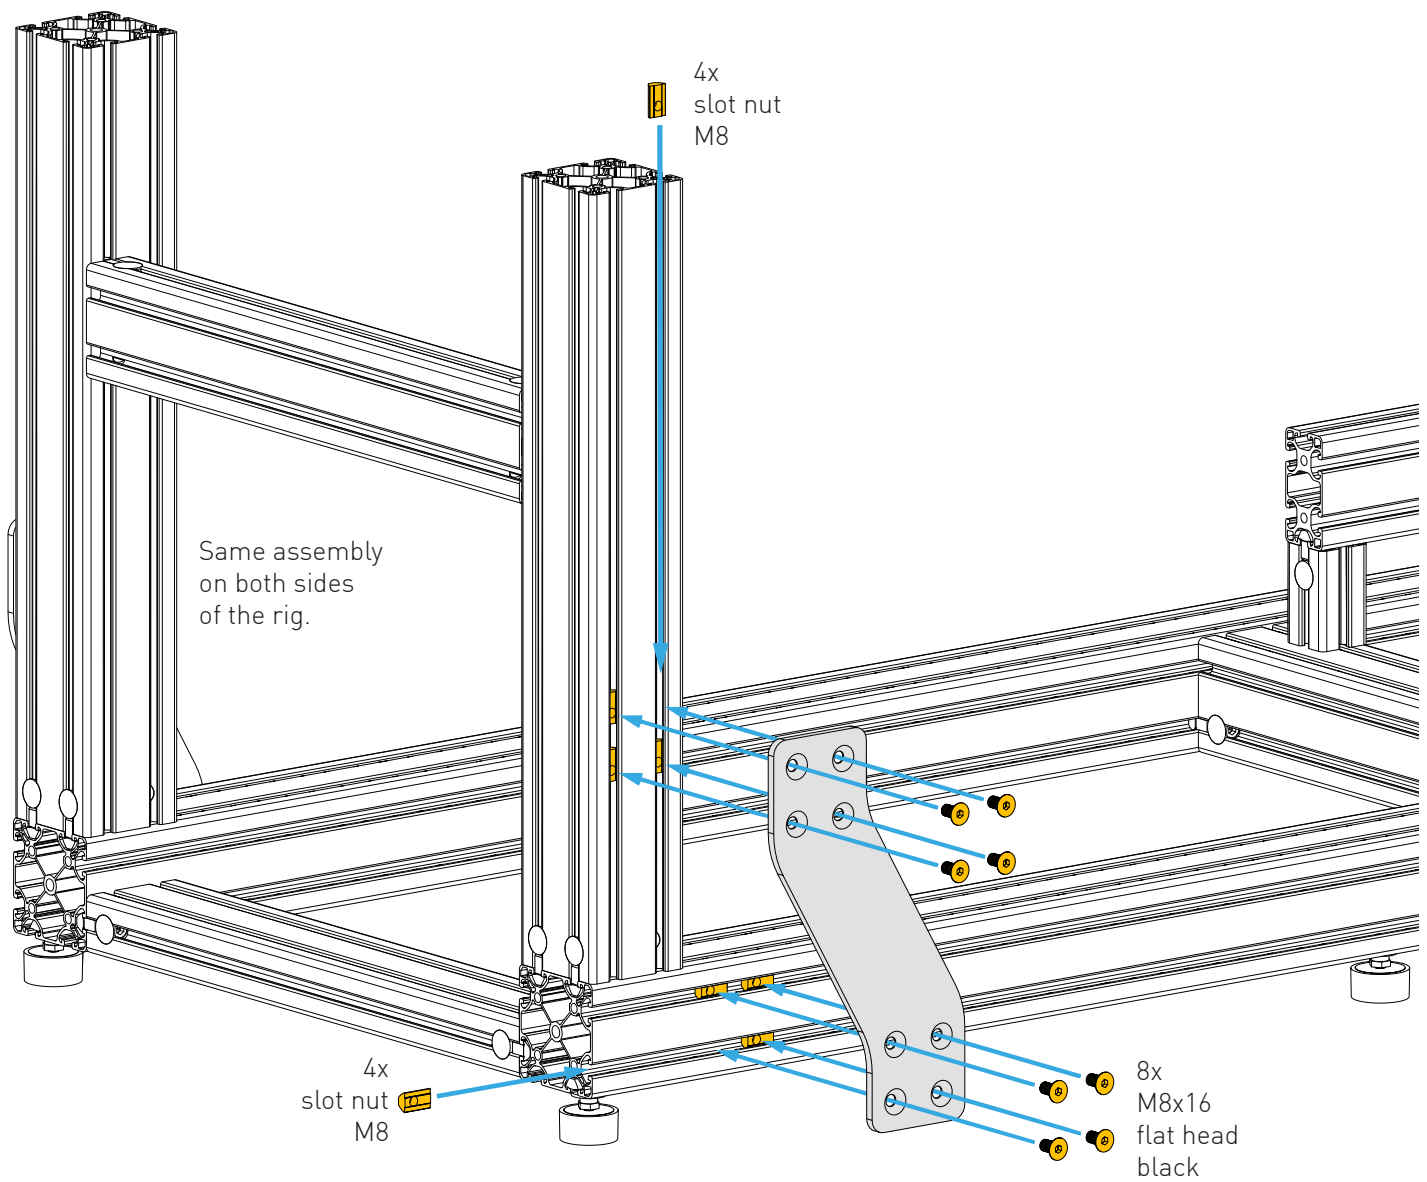



PARTS - PEDALS / RUDDER

[dimensions in mm / different scales]
No extra or spare parts listed!


2x

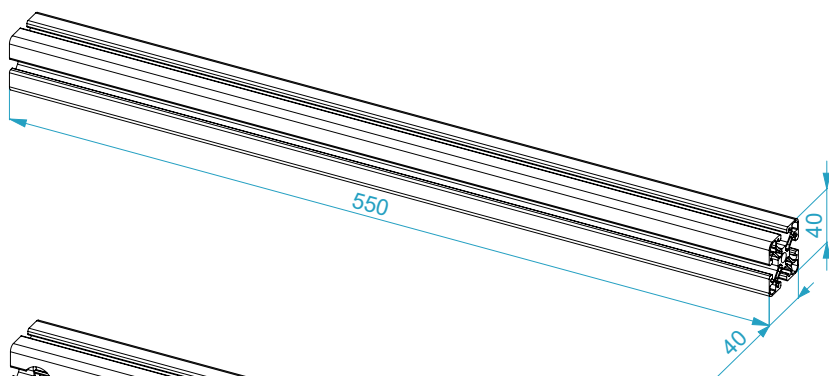


2x

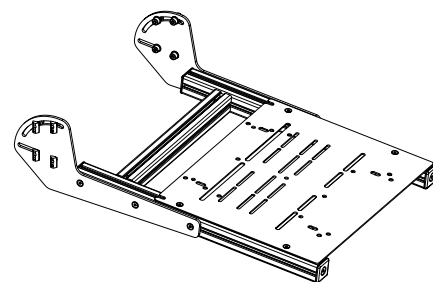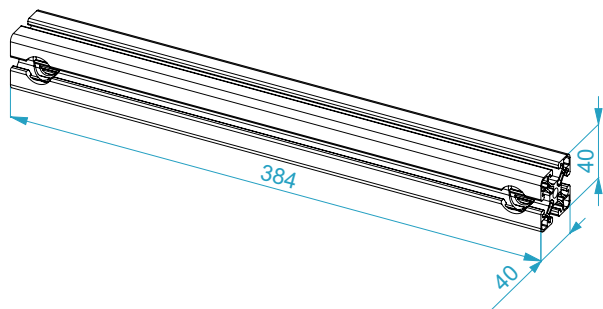


1x

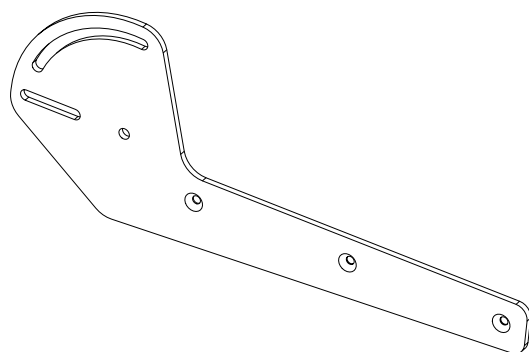

1x

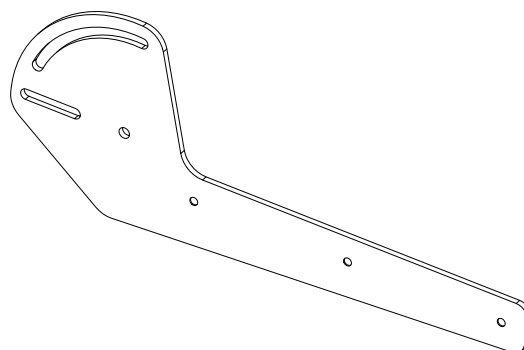


1x

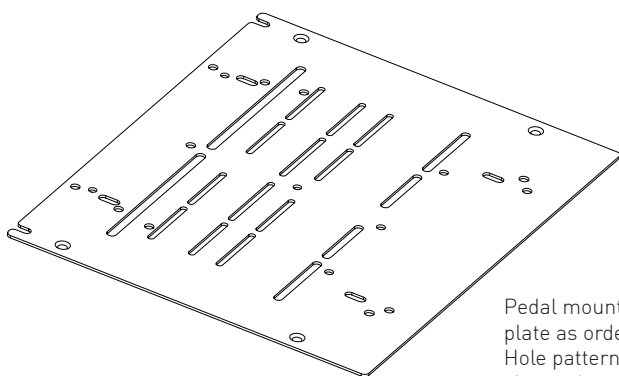

Pedal mounting
plate as ordered.
Hole pattern could
change by updates

BAG 3 (pedals / rudder)

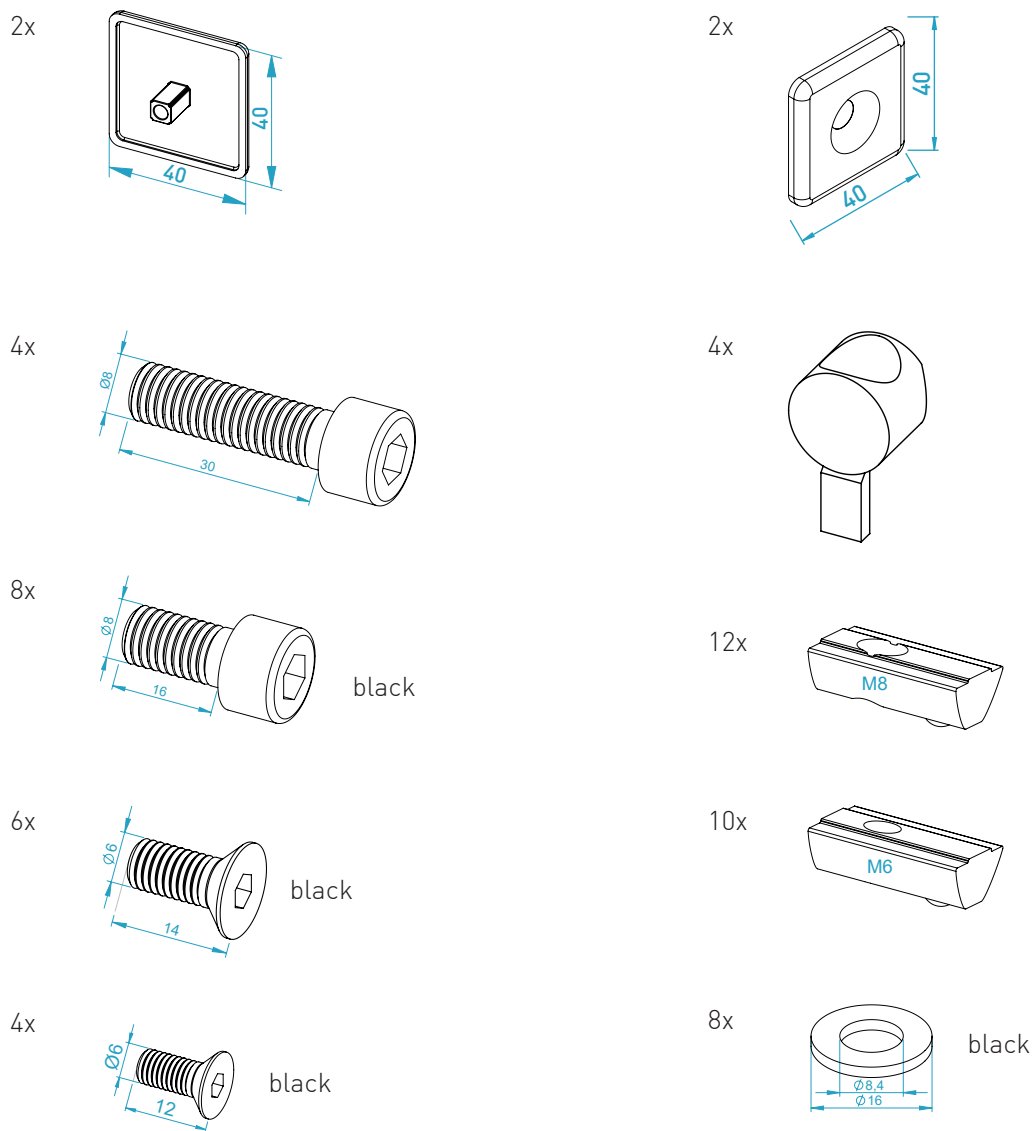

BAG 4



with various bolts and nuts for mounting your pedals.



BAG 5


various tools

ASSEMBLY


Use a plan surface
for assembly.

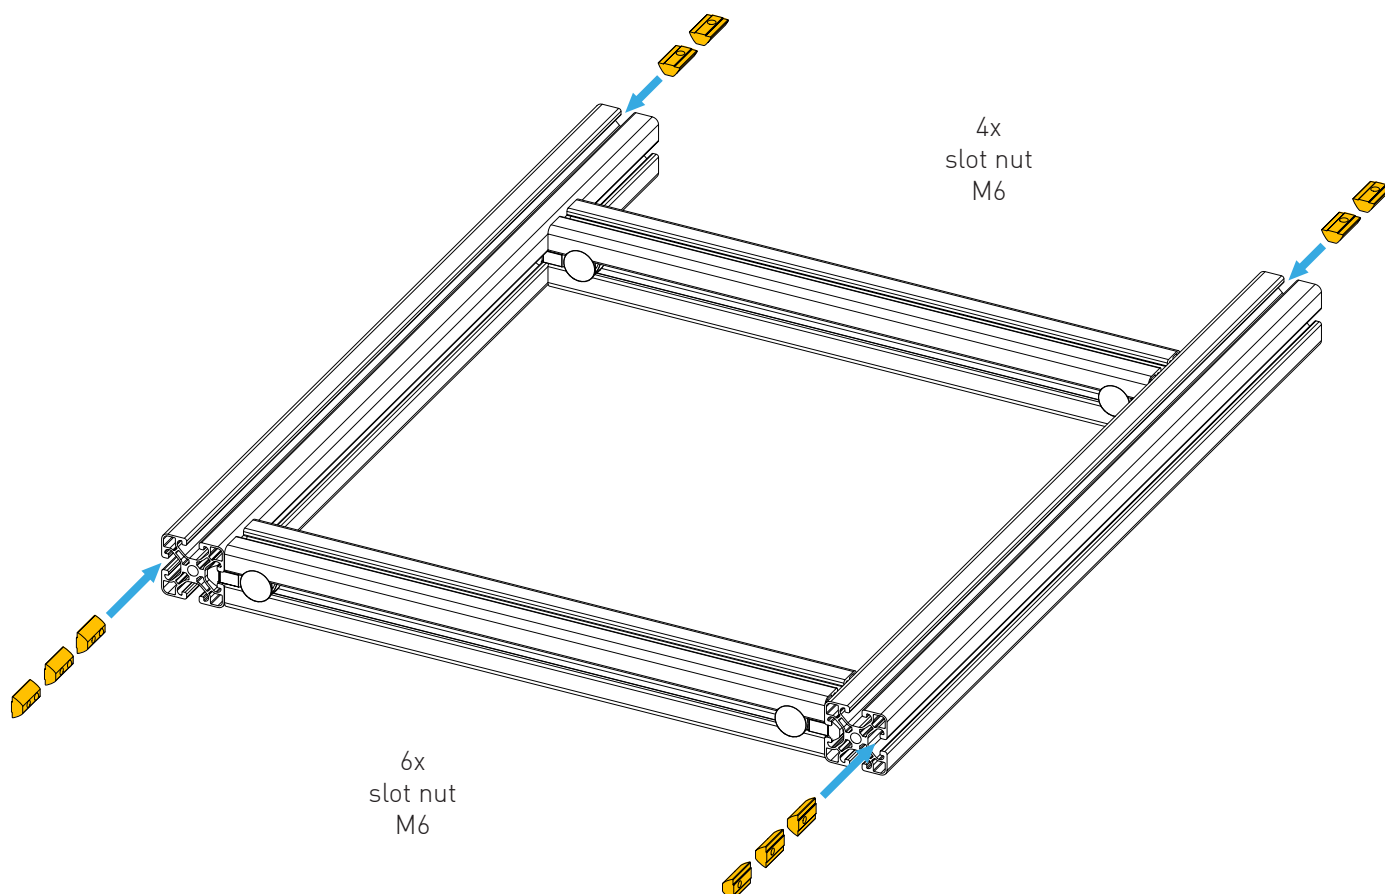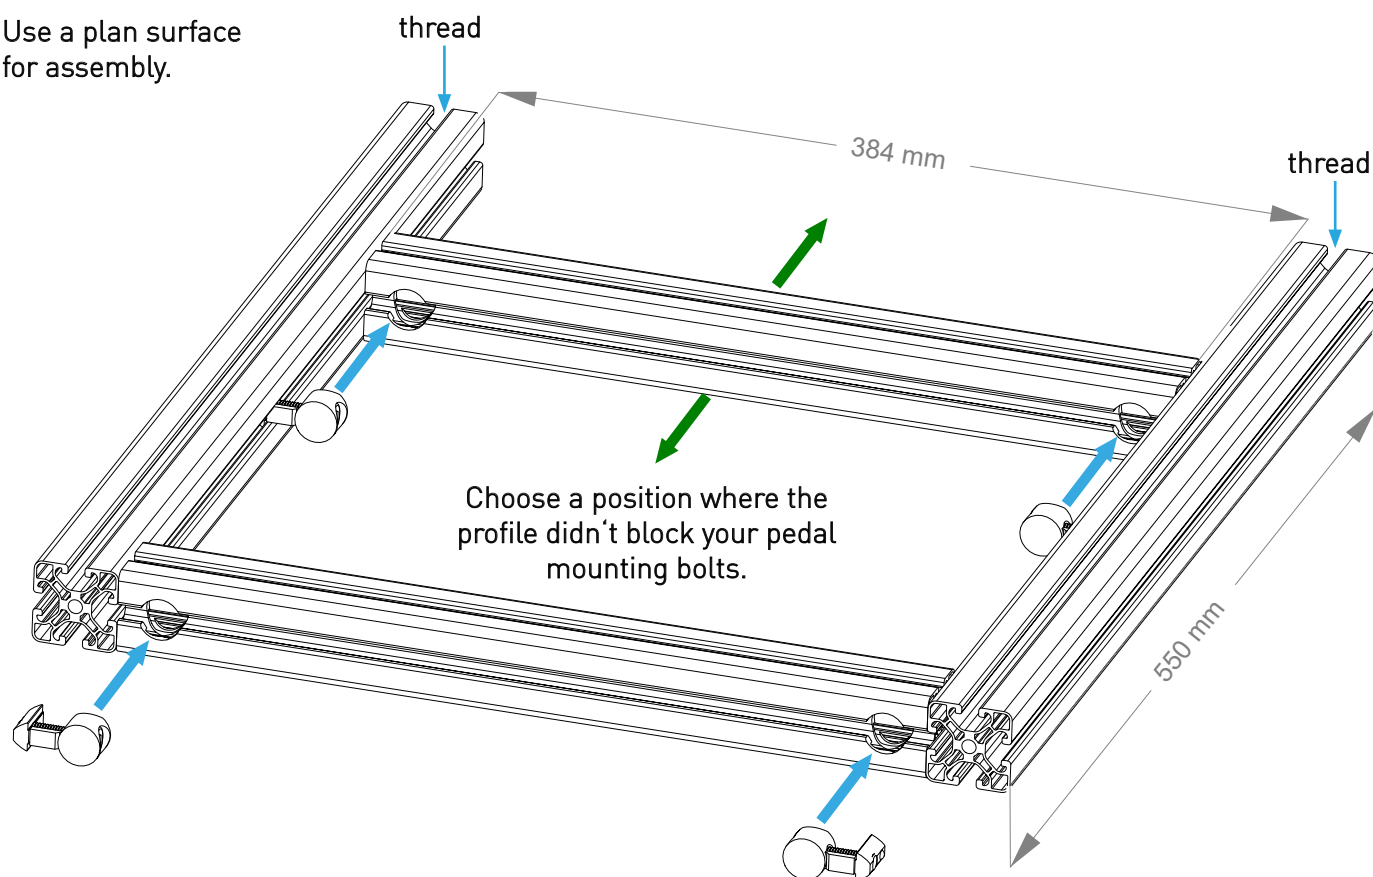

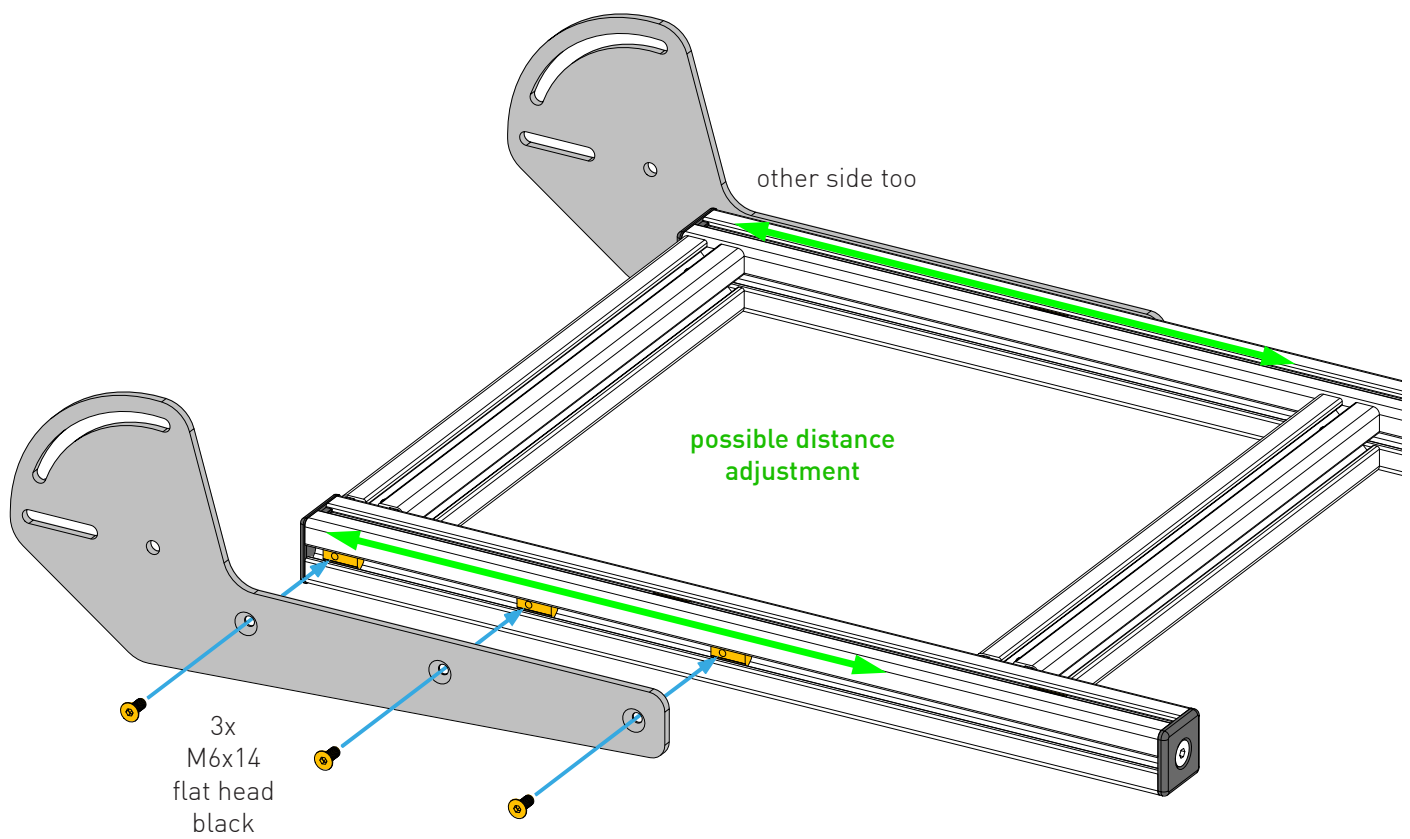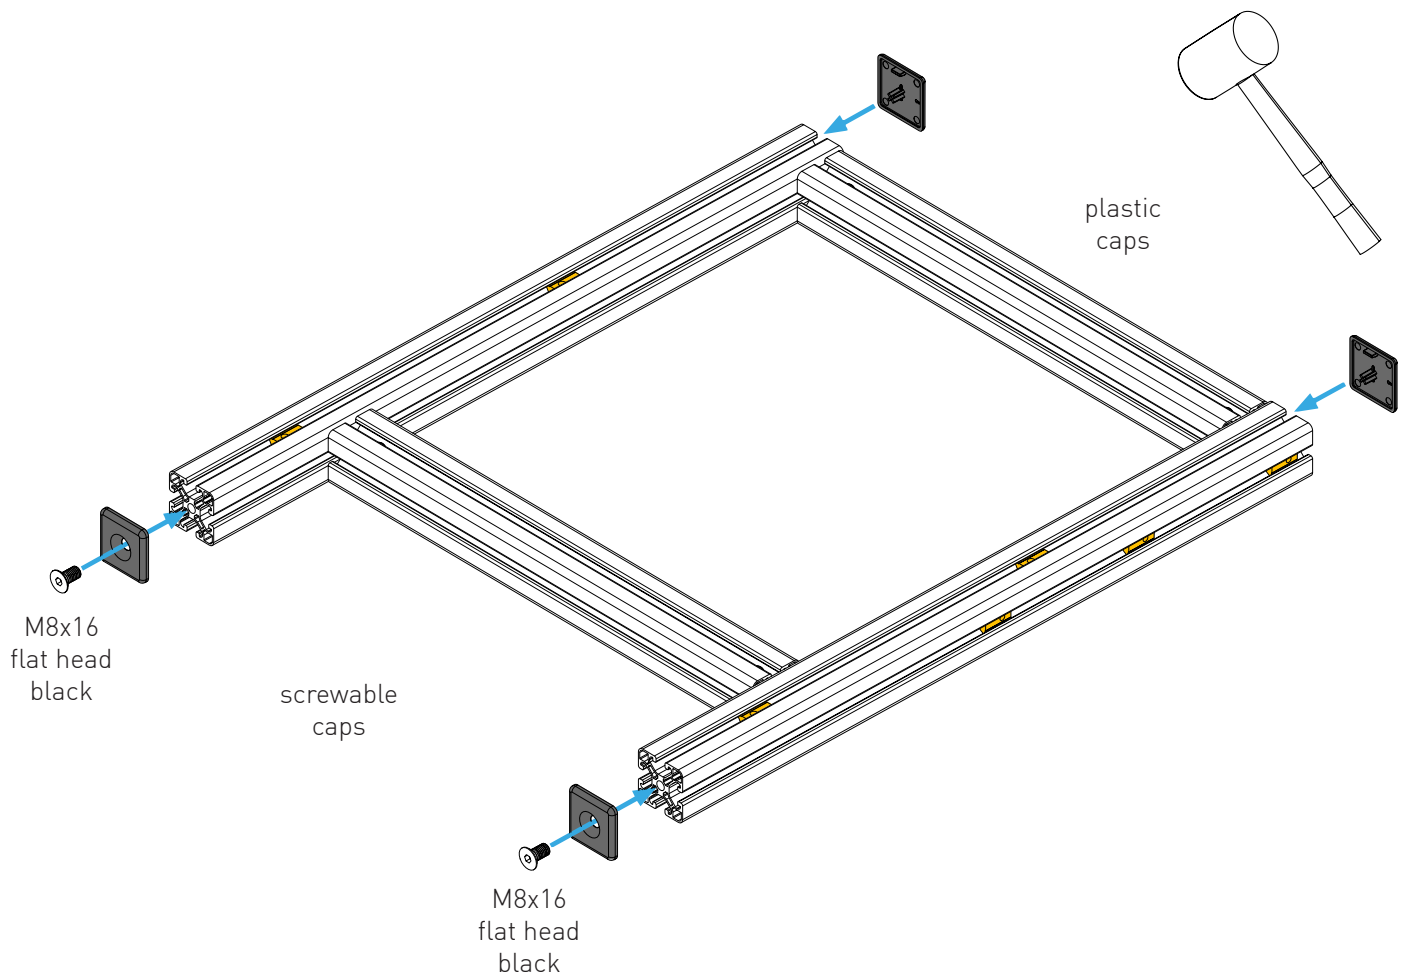


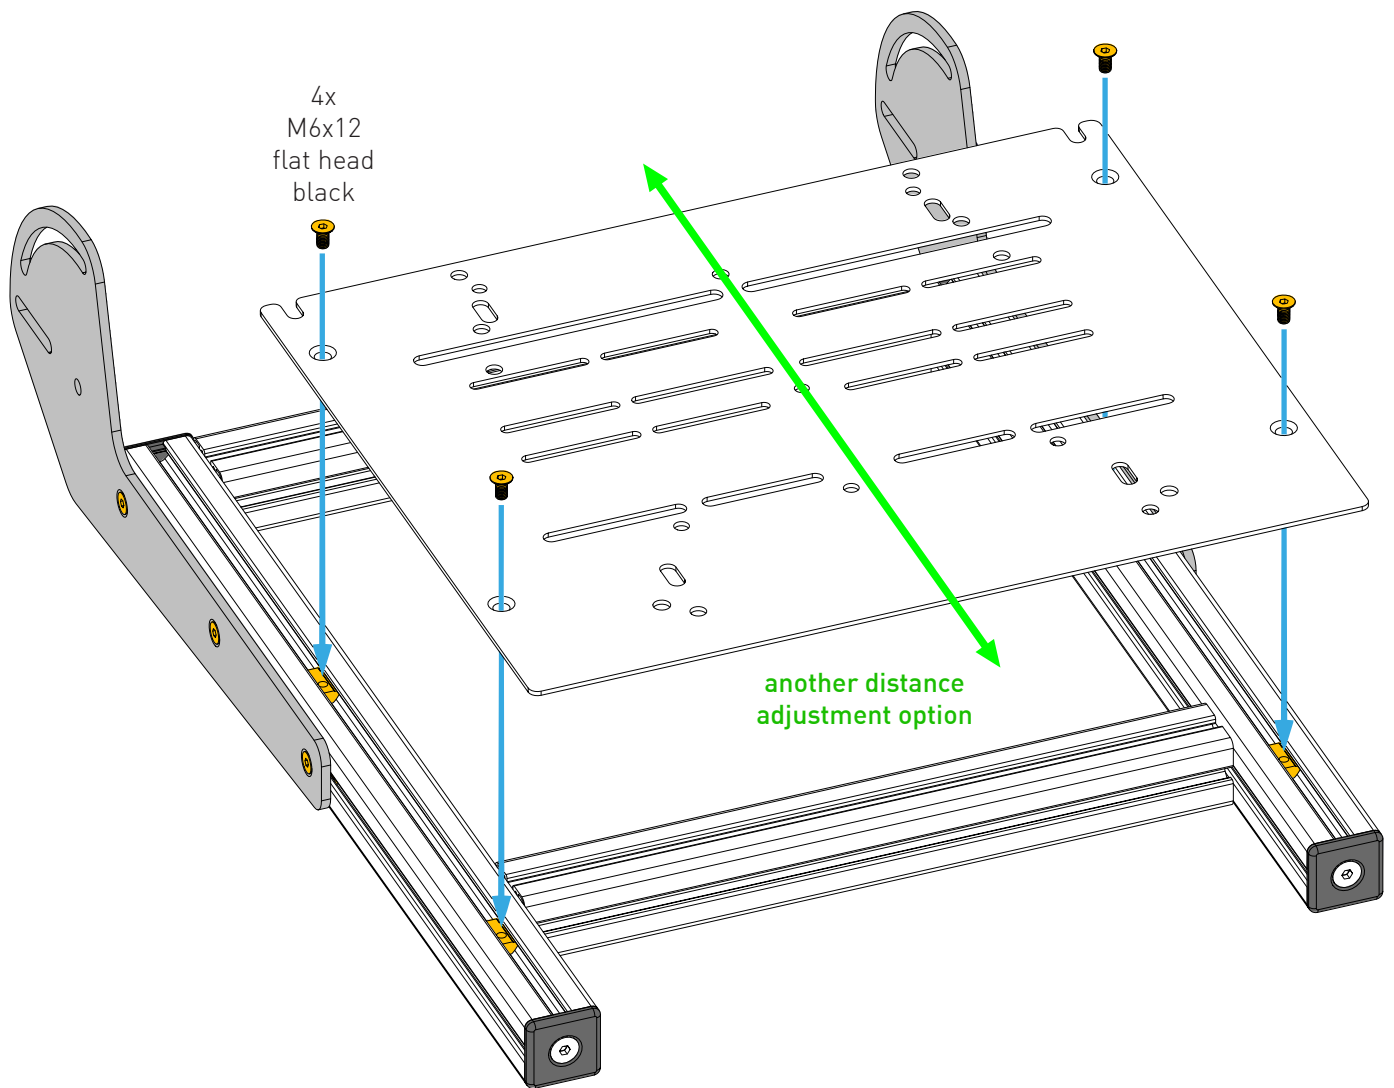


4x
slot nut
M8
both sides

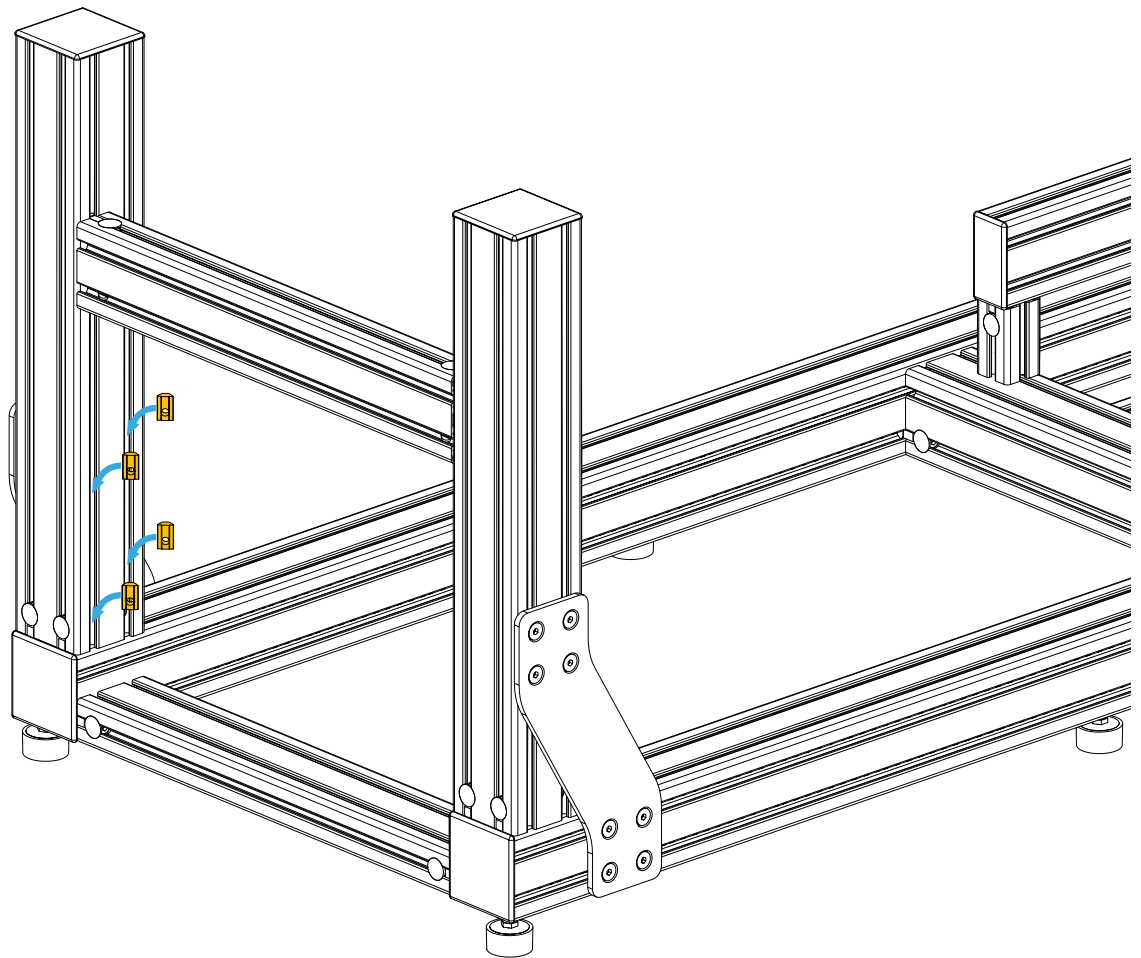

Detail on
next page.



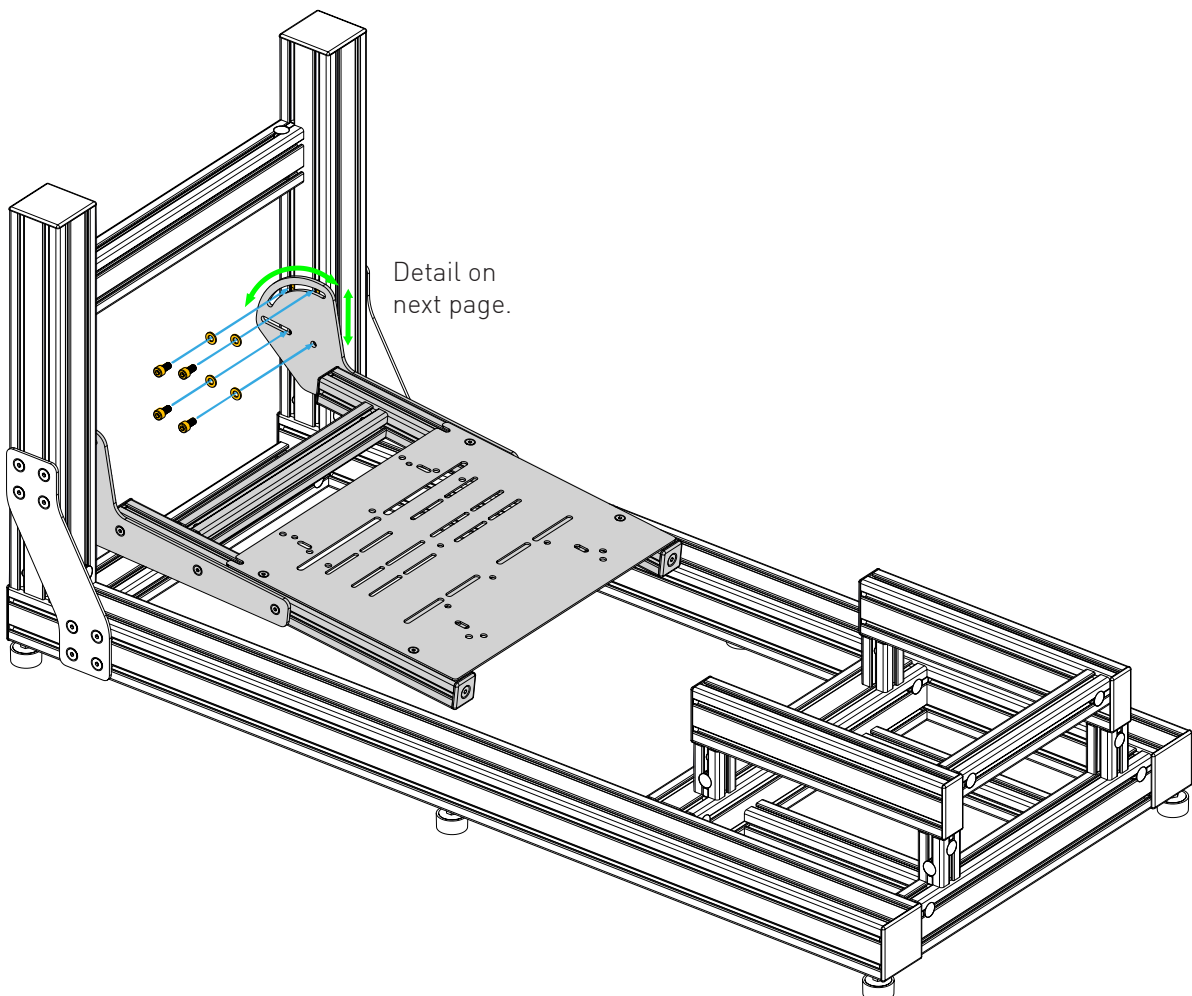


Detail

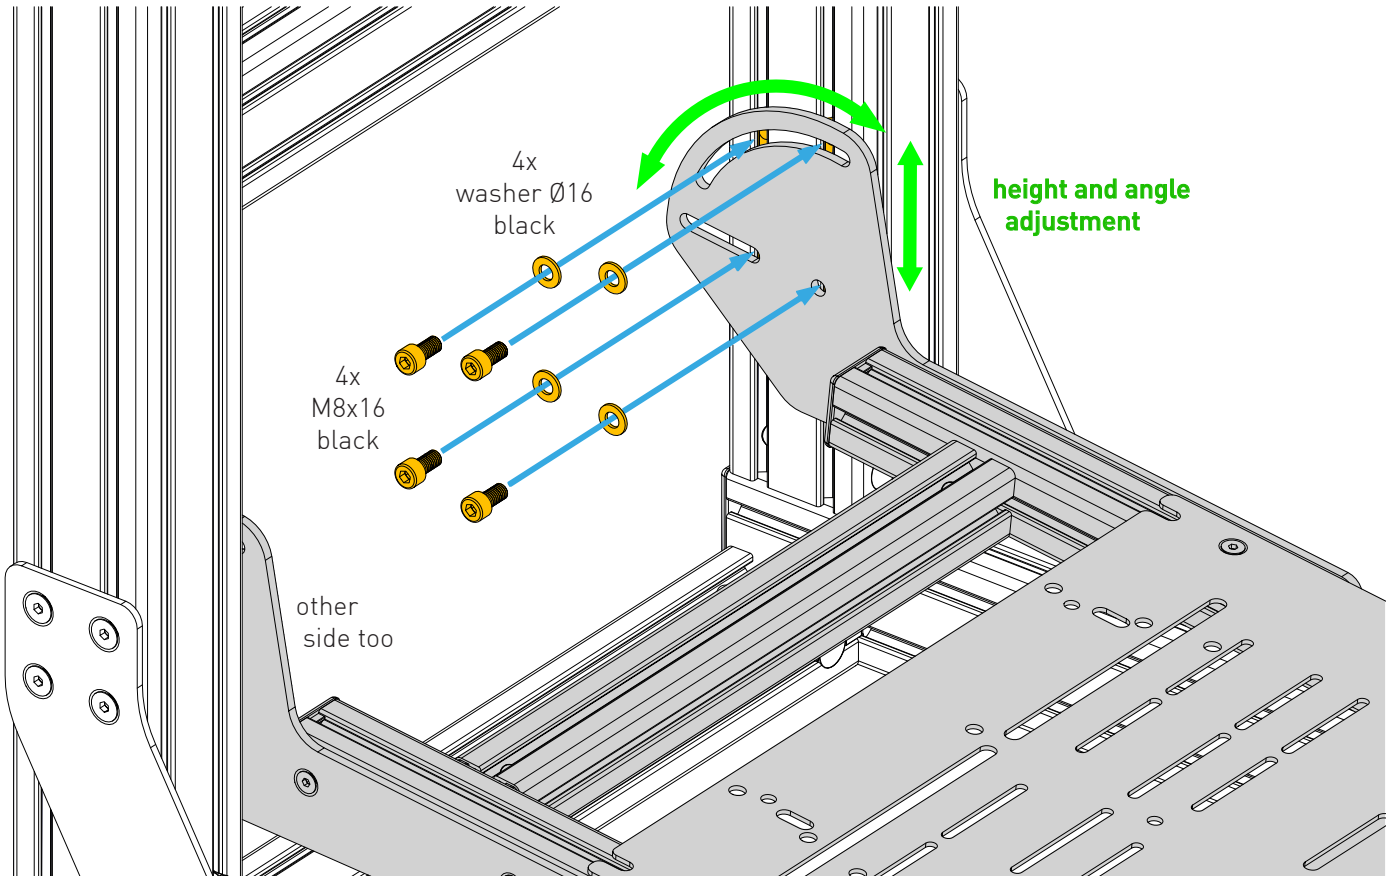


TOOL HOLDER


Mount the tool holder
at any place you like.

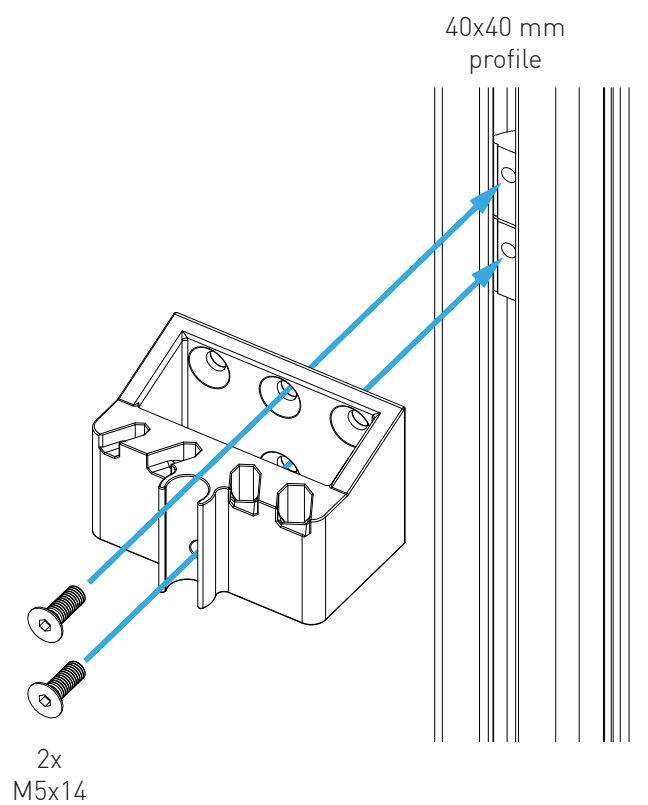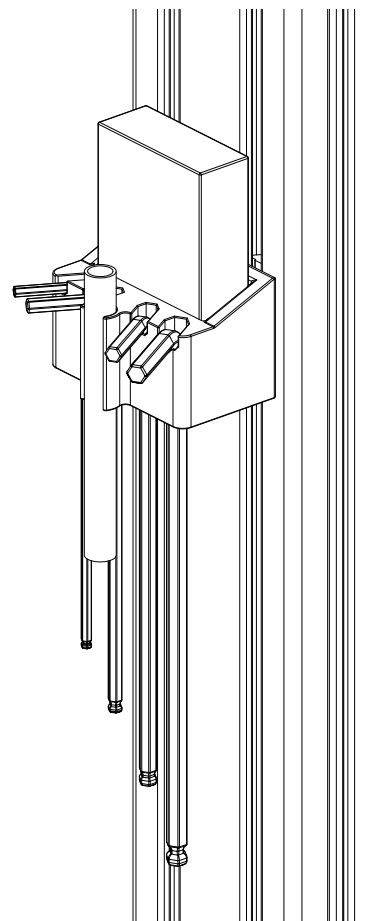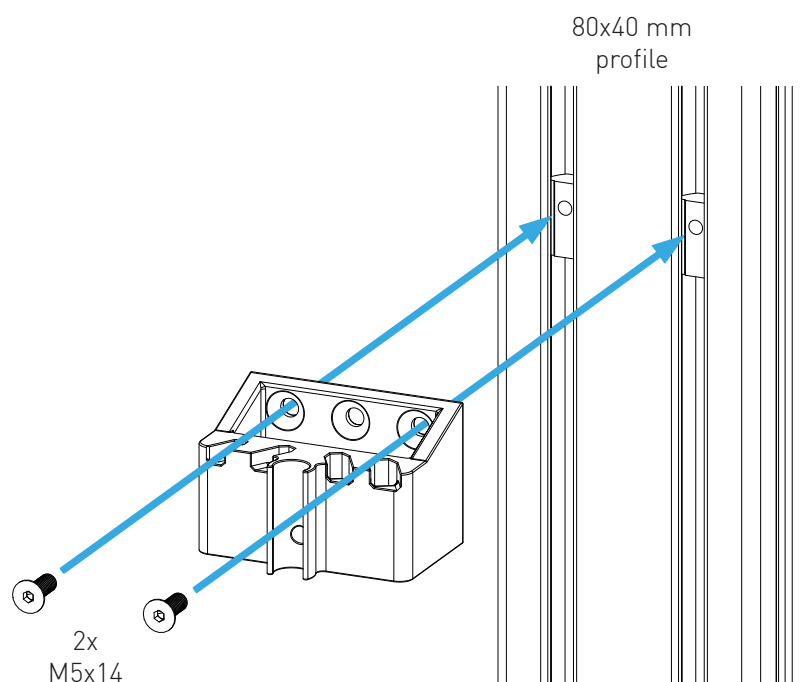

insert the
hex keys

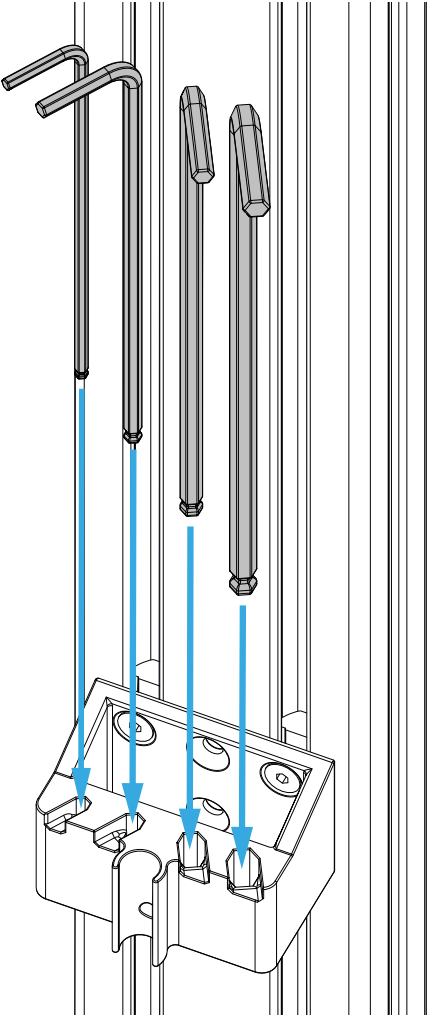

insert the
profile
cleaner

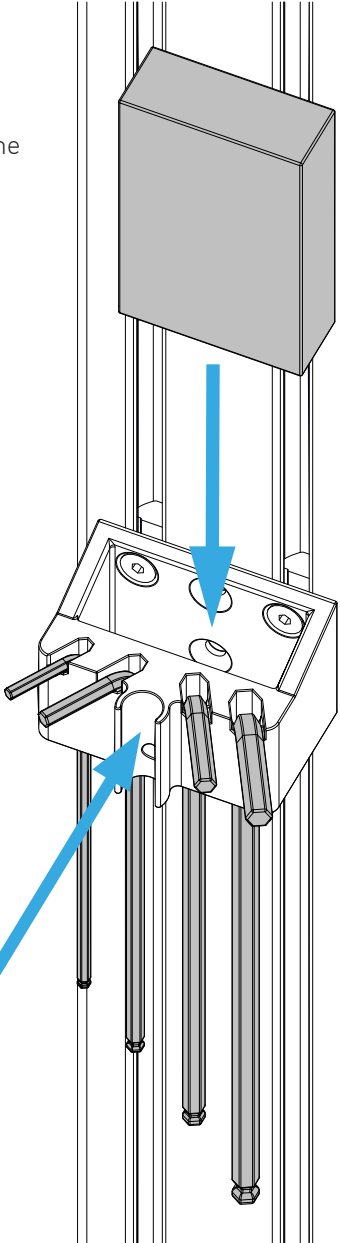

snap in the
extension
pipe

