



OPTION 2 Install with drilling--For rough wall


1. Determine the required length according to window size.

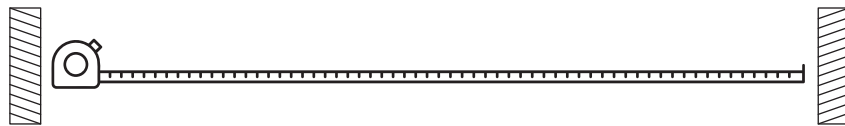

2. Assemble curtain rod, and hang the curtain.

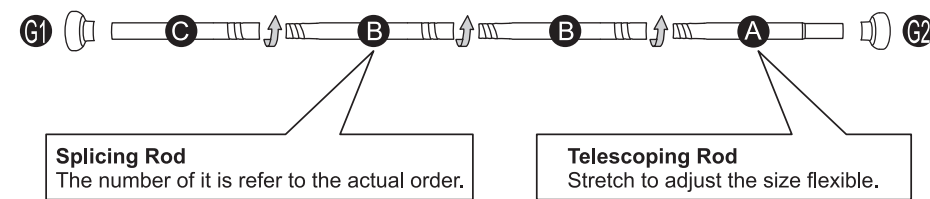


3. As shown, drill holes, install wall anchors, then mount the curtain rod holders with screws.

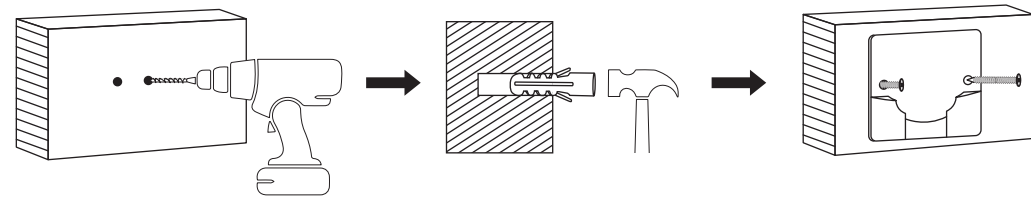


4


4. Rotate the telescoping rod (A) and extend it about 1-3 inches longer than the required length.

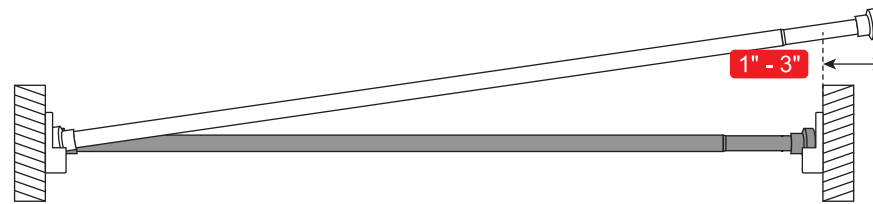

5. Refer to the picture, compress the end rod (C) and push the rod up against the wall until it is level.

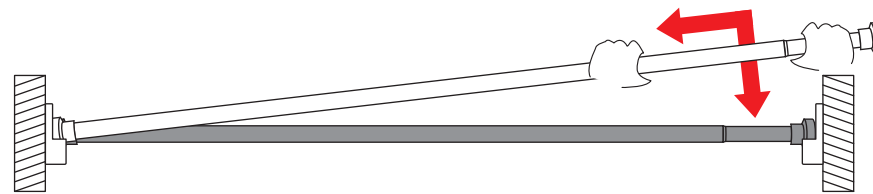

6. Twist the telescoping rod (A) to fix and pull the rod slightly to ensure it is firm.

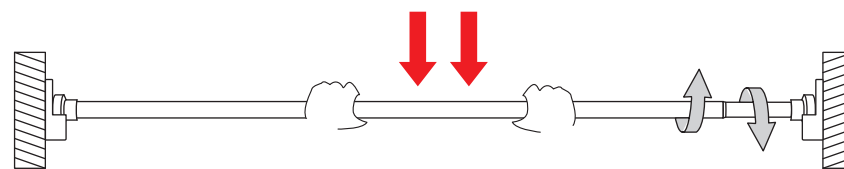


Email: support@enjoybasics.net

5



ENJOYBASICS

Focus on Home, Enjoy Your Life

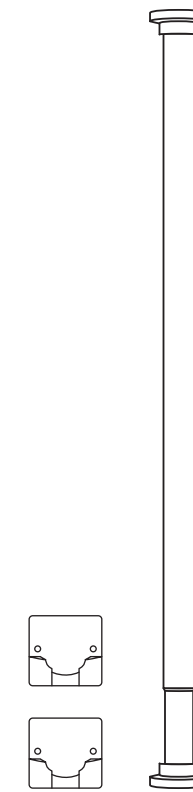

TENSION CURTAIN ROD


USER MANUAL

INSTALLATION INSTRUCTION (Please Read Carefully)

ATTENTION:

- 1.WARNING: CHOKING HAZARD – Small parts. Not for children under 3 yrs.
2.Instruction is for reference only, please refer to the actual order.


A Telescoping Rod



G2 End Cap 19mm




B Splicing Rods




G1 End Cap 22mm



C End Rod



Plastic Wall Anchors



Screws




Curtain Rod Holders



SIZE OPTIONS

The number of splicing rod is refer to the actual order, please assemble the curtain rod according to your needs.

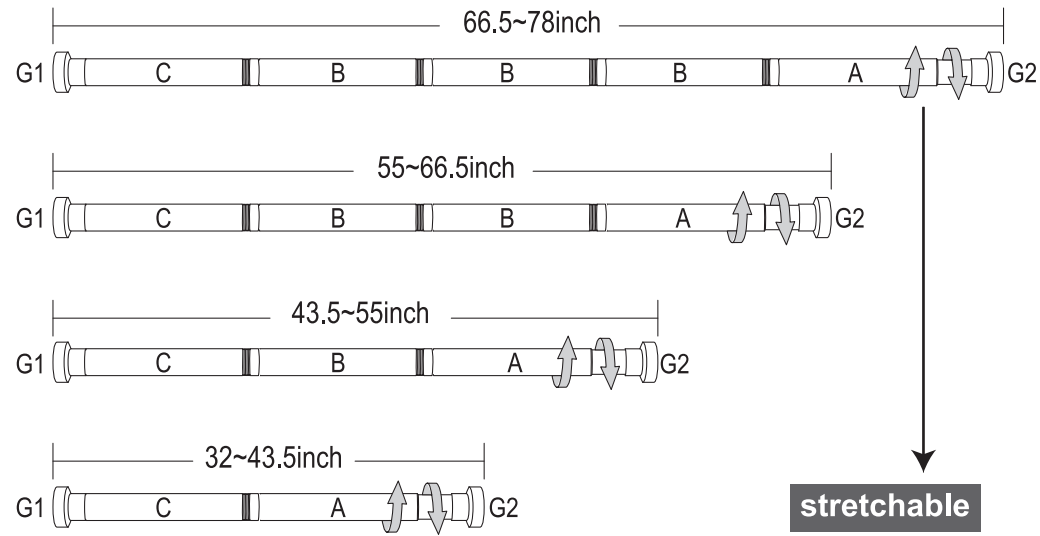

1


OPTION 1

No Drilling--For smooth wall

1. Determine the required length according to wall distance.




2. Assemble curtain rod, and hang the curtain.

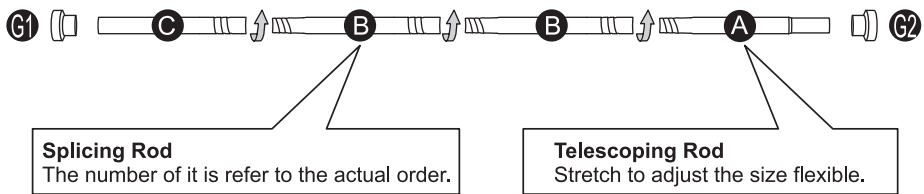


2


3. Rotate the telescoping rod (A) and extend it about 1-3 inches longer than the required length.

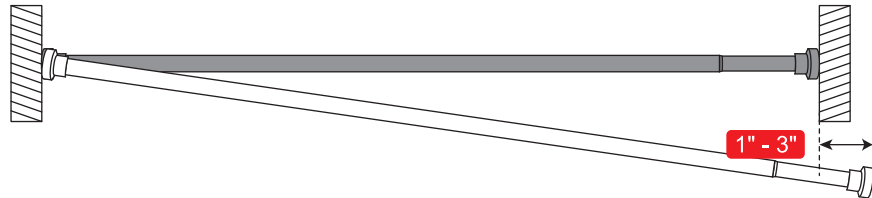

4. Refer to the picture, compress the end rod (C) and push the rod up against the wall until it is level.

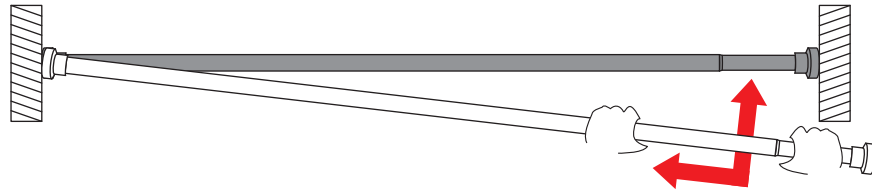

5. Twist the telescoping rod (A) to fix and pull the rod slightly to ensure it is firm.

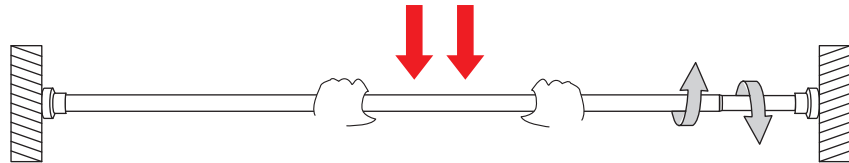

3