


## MOUNTING THE RADIO

### RADIO REMOVAL

1. Pull down glove box and remove.
2. Locate and release climate control cable.
3. On drivers side under dash, locate and release climate control cable.
4. Carefully pry out on radio and climate control dash bezel, disconnect and remove from dash.
5. Remove radio removal access panels on either side of radio.
6. Using two sets of radio removal tools (DT-1) release, disconnect, and remove radio from dash.

**CAUTION:**  
REAR SUPPORT AVAILABLE SEPARATELY.  
REAR SUPPORTING THE RADIO ADDS TO THE  
INSTALLATIONS STRUCTURAL INTEGRITY.

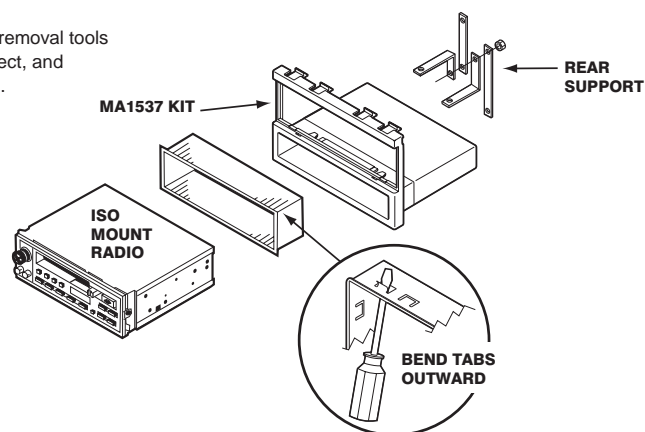

### 1998-03 MAZDA 626

#### RADIO REMOVAL

**NOTE:** The factory radio provision is a DIN radio.

1. Carefully remove plastic covers on radio sides.
2. Using two sets of radio removal tools (DT-1) release, disconnect, and remove radio from dash.

### 1995-03 MAZDA MILLENIA

#### RADIO REMOVAL

**NOTE:** The factory radio provision is a DIN radio.

1. Carefully remove plastic covers on radio sides.
2. Use Scosche DT-1 DIN removal tools to release radio, lift away, disconnect and remove.

### 1999-03 MAZDA PROTÉGÉ

#### RADIO REMOVAL

**NOTE:** The factory radio provision is a DIN radio.

1. Carefully remove plastic covers on radio sides.
2. Use Scosche DT-1 DIN removal tools to release radio, lift away, disconnect and remove.

### 2002-03 MAZDA PROTÉGÉ 5

#### RADIO REMOVAL


**NOTE:** The factory radio provision is a DIN sized radio .

1. Pull glove box down and remove, disconnect climate control cable from lever.
2. Disconnect climate control cable on driver's side under dash above gas pedal.
3. Remove radio's end caps.
4. Insert two sets of Ford DIN removal tools to release clips, pull radio out, disconnect and remove. (We recommend the Scosche DT-1 Ford DIN removal tools).

**SCOSCHE®**

**MA1537B**

## IN-DASH INSTALLATION KIT FOR 1995-03 SELECT MAZDA VEHICLES

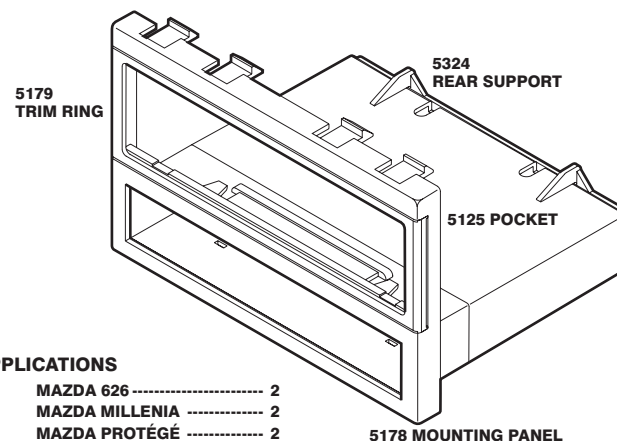

### VEHICLE APPLICATIONS

1998-03	MAZDA 626	2
1995-03	MAZDA MILLENIA	2
1999-03	MAZDA PROTÉGÉ	2
2002-03	MAZDA PROTÉGÉ 5	2

## INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche MA1537B Kit. This kit was manufactured with the highest of quality standards.

### CAUTION:

**DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.**

### NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

### LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (MA1537B) in 2001-UP Select Mazda Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.