

SIMAGIC


P500  
快速指南

## 1.0 配件清单

沉头螺钉M5-10 x 8	沉头螺钉M8-20 x 4
型材螺母 M8-40 x 4	M8法兰螺母 x 4
茶色弹簧 x 1	黄色弹簧 x 1
蓝色弹簧 x 1	黑色弹簧 x 1
螺丝刀 x 1	刹车胶垫 x 3
撬棍 x 1	魔术贴 x 1
润滑脂 x 1	靠墙支架 x 1
六角扳手 x 4 (2mm/2.5mm/3mm/5mm)	





## 2.0 安装在成品支架注意事项

建议在完成本体装配之后, 再对踏板进行固定 (注意在左右两侧预留成品支架的固定孔位)

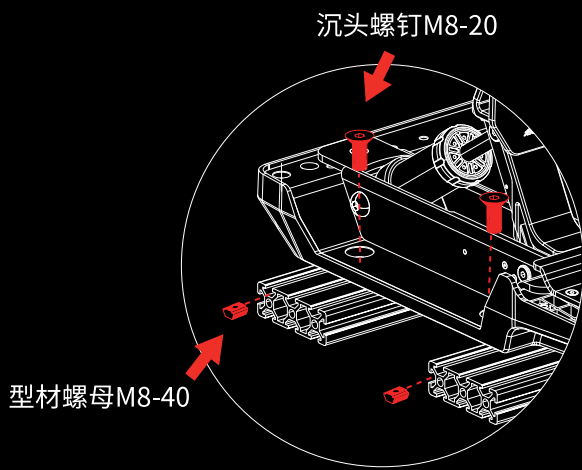


## 3.0 踏板装配步骤

### 3.1 双踏板装配步骤

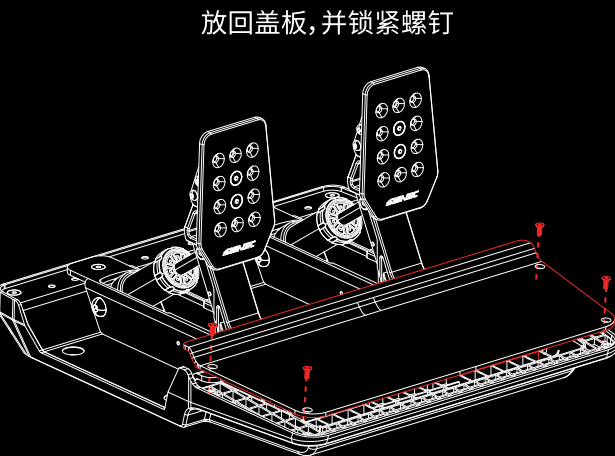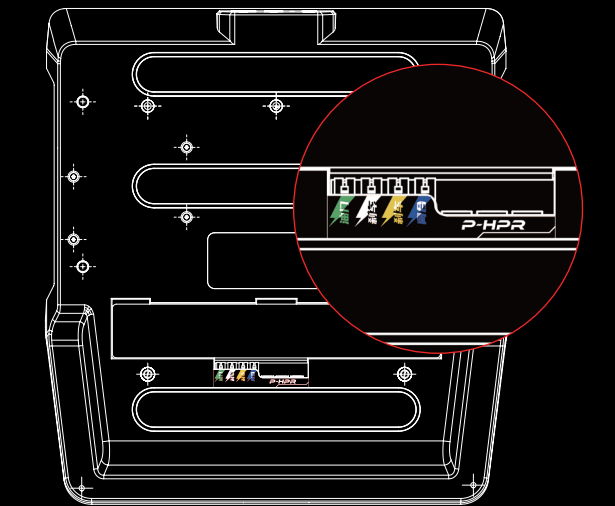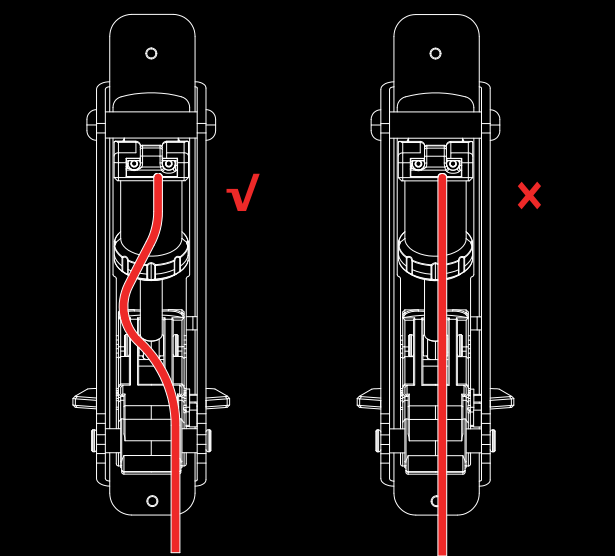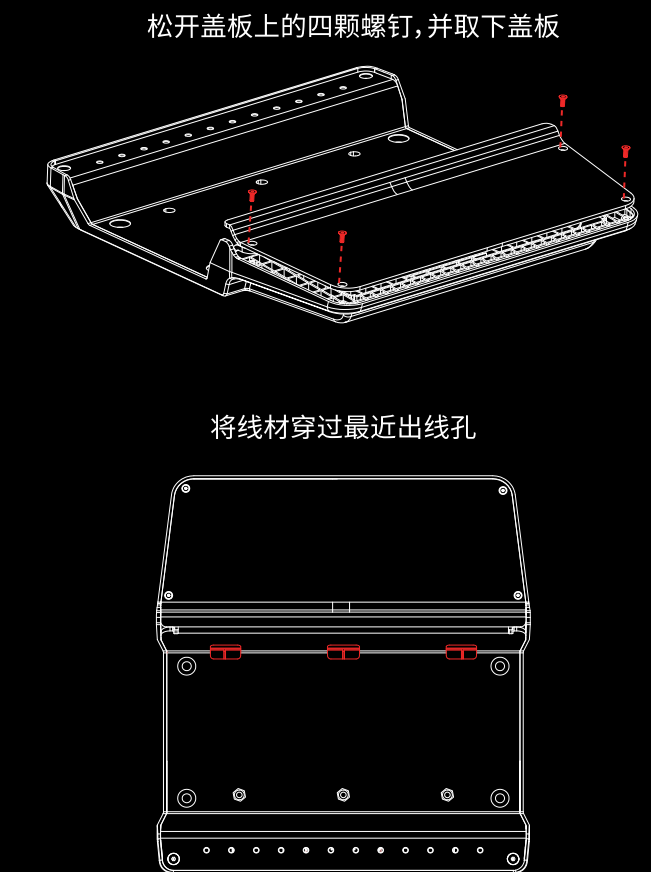


### 3.2 连接 (USB和独立电源)

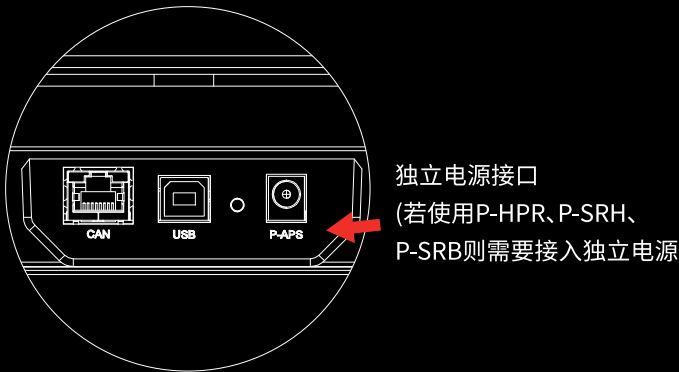


## 4.0 靠墙支架装配步骤

① 使用两颗螺钉将左右支架固定在踏板上

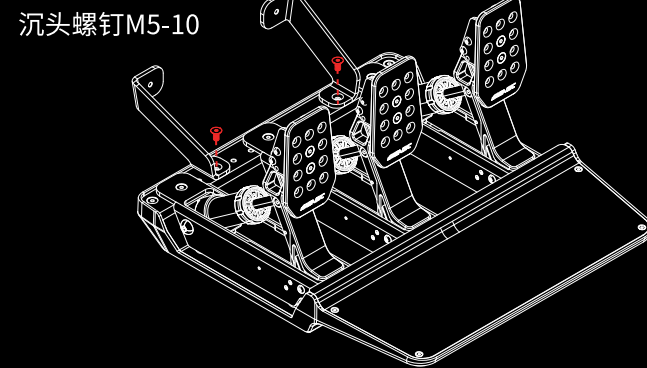


② 将靠墙板装在左右支架上, 使用两颗螺钉锁紧, 装配完成

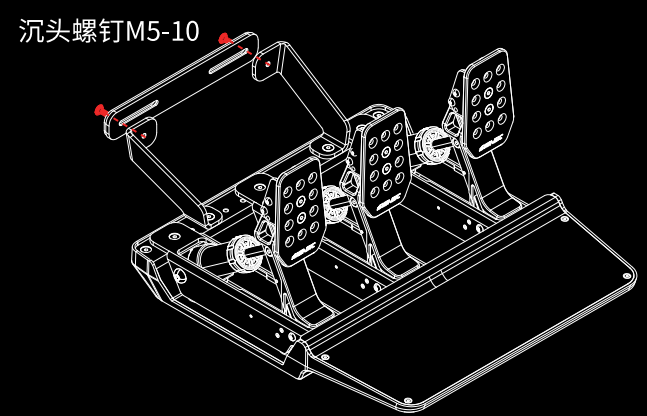


## 5.0 调节

### 5.1 踏板面角度调节

松开踏板侧面的两颗螺钉  
可对踏板面进行角度调节

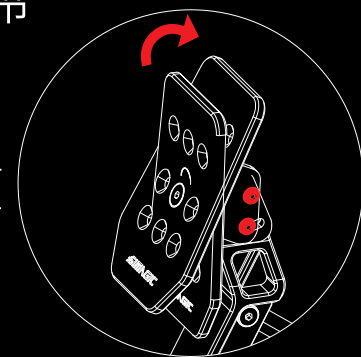


### 5.2 踏板高度及左右调节

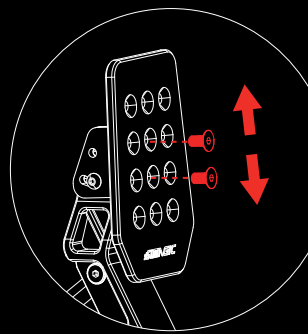


松开踏板正面的两颗螺钉  
可对踏板的高度和左右位置  
进行调节

## 6.0 踏板弹簧更换


### 6.1 拆下弹簧桶

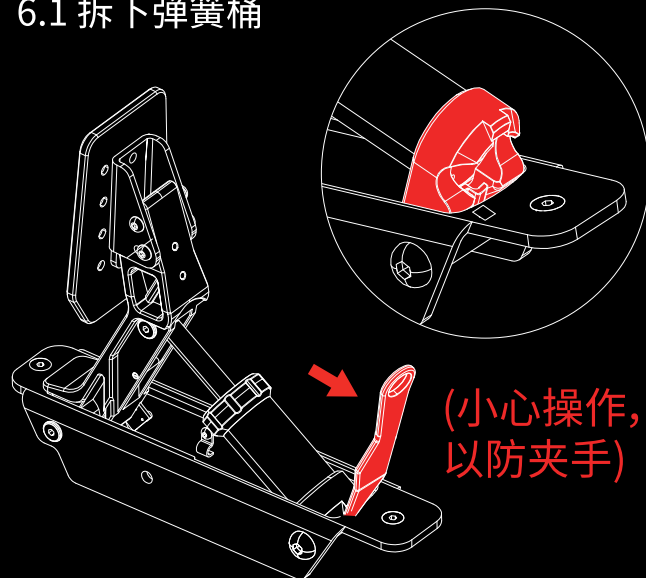

将撬棍放到弹簧桶底侧, 向下用力, 小心的将弹簧桶撬出

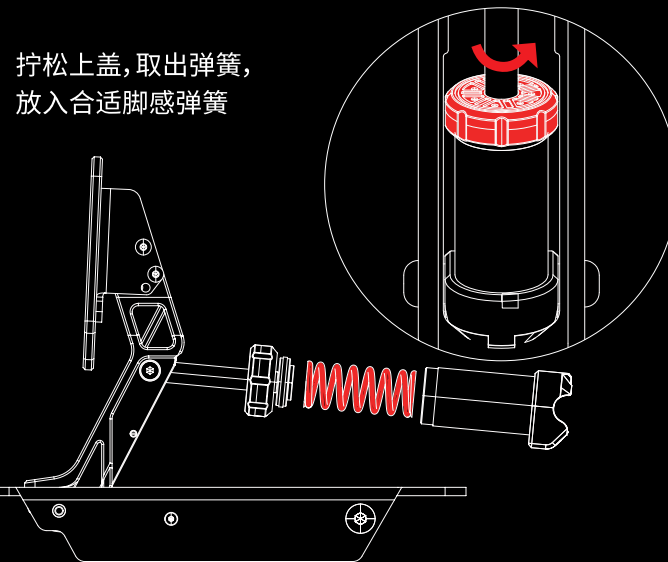


刹车部分可以通过放入刹车胶垫增加脚感  
(仅推荐在支架安装后使用, 更换过程中请小心以防夹伤)

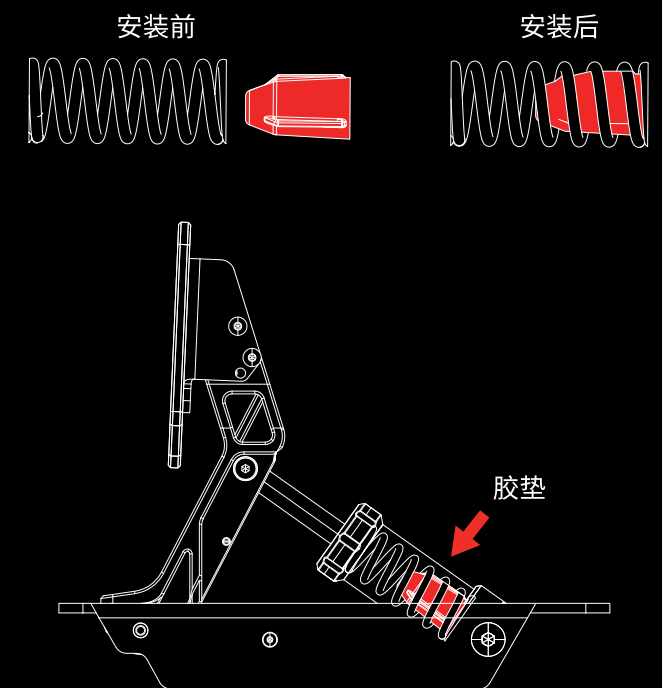


### 6.2 装上弹簧桶

拧回上盖, 将弹簧桶放入卡位

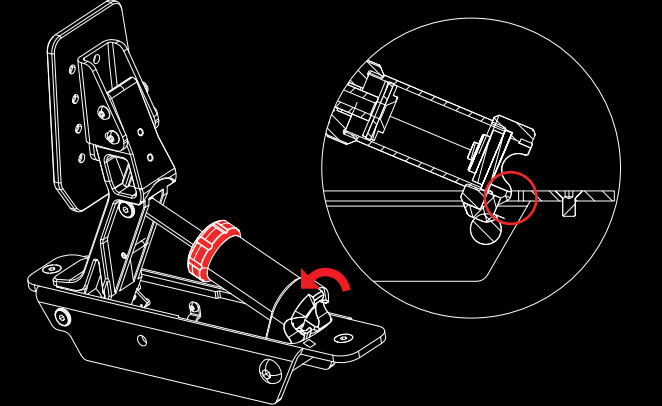


将撬棍翻转, 放入弹簧桶底侧, 向上用力将弹簧桶推入槽内

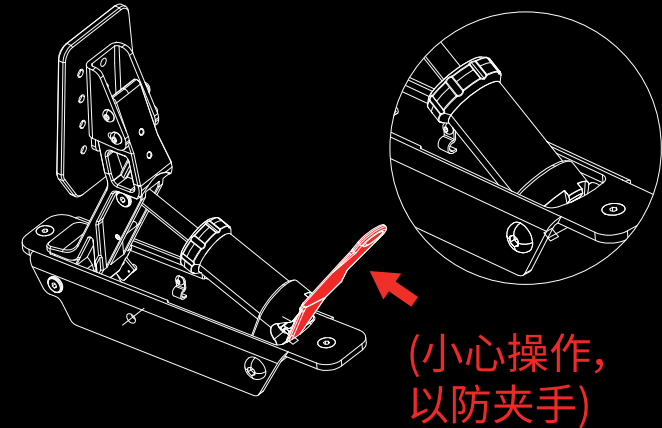

## 7.0 理线销使用方法

安装P-HPR/P-HPR Neo理线销的使用方法:  
使用配套螺丝刀 拧出理线销

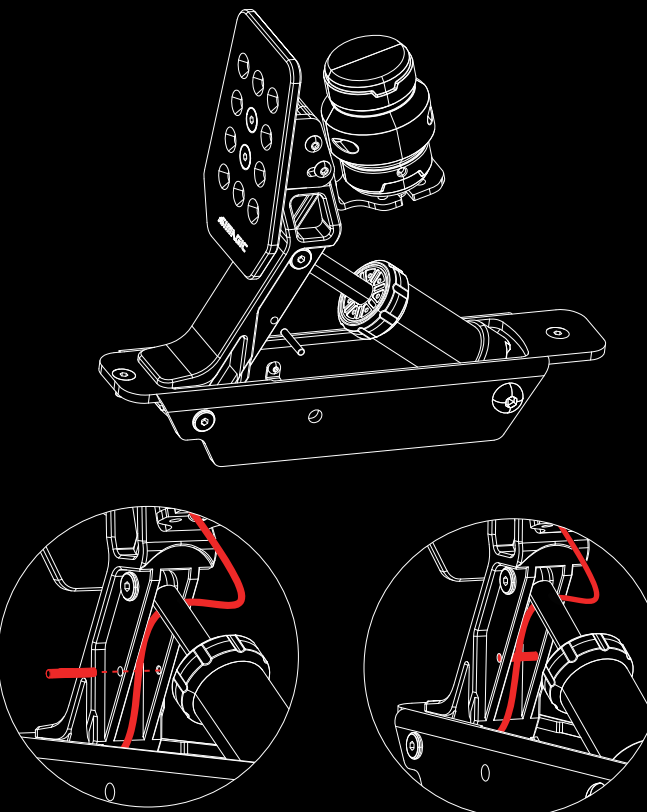

将P-HPR/P-HPR Neo  
线材放入槽内

拧回理线销

注意: 使用该产品需要在PC端下载并安装Simpro Manager进行设置

## 软件及应用



在PC端安装  
SimPro Manager  
进行设置



产品教程  
(更多相关资料扫码查看)



# SIMAGIC

## P500


### Quick Guide

## 1.0 List of accessories

 Countersunk Head Screw (M5-10) x 8	 Countersunk Head Screw (M8-20) x 4
 Roll in T-Nut with Ball Spring (M8-40) x 4	 M8 Flange nut x 4
 Brown Spring x 1	 Yellow Spring x 1
 Blue Spring x 1	 Black Spring x 1
 Slotted Screw Driver x 1	 Brake washers x 3
 Wrench x 1	 Velcro x 1
 Lubricating grease x 1	 Wall Support Bracket x 1
 Allen Key x 4 (2mm/2.5mm/3mm/5mm)	


## 2.0 Profile Rig Installation

After assembling the P500, mount the pedals as shown (ensure sufficient space is left for profile mounting holes)


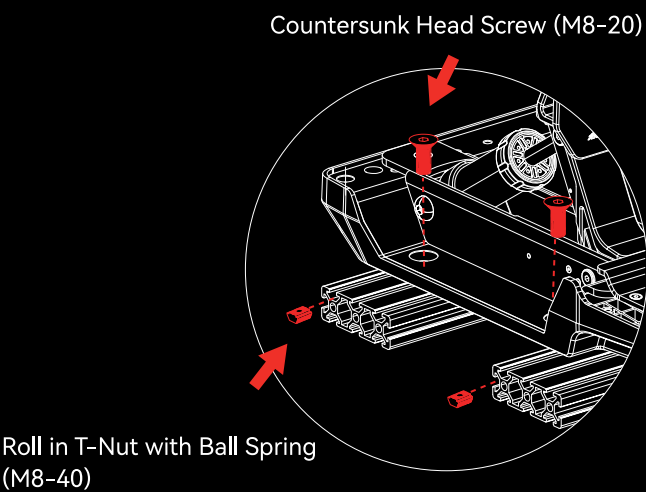


## 3.0 Pedal Assembly


### 3.1 Dual Pedal Assembly

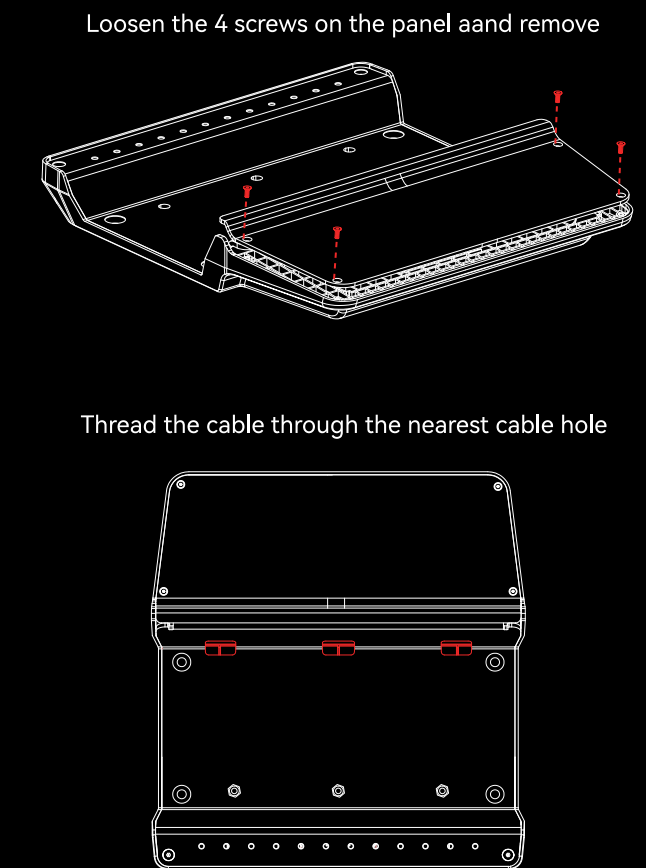

Insert the brake module and tighten the screws

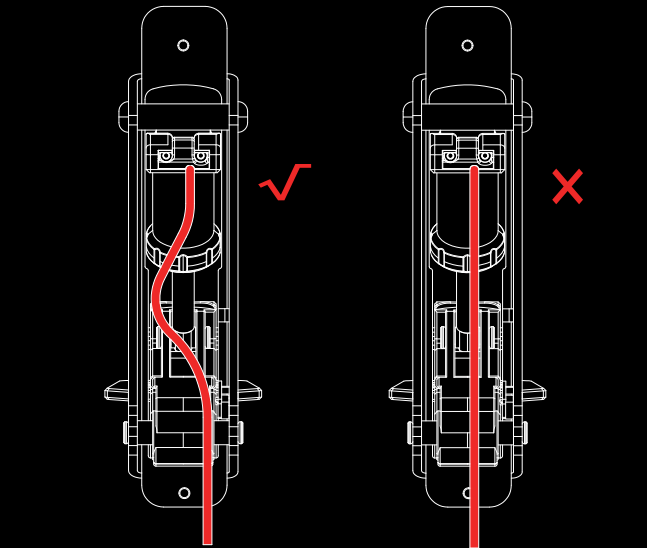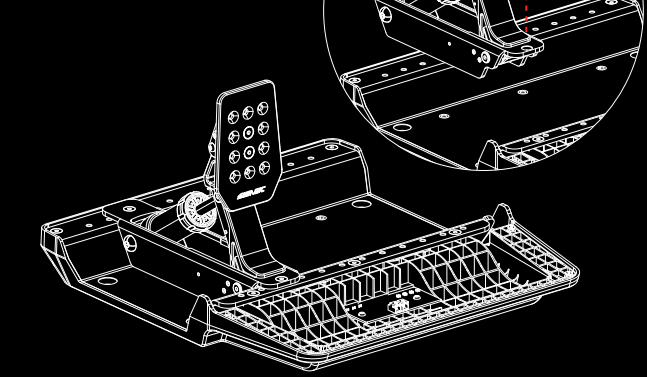


(Note: Be sure to leave enough margin for the brake cable to prevent damage on extension)

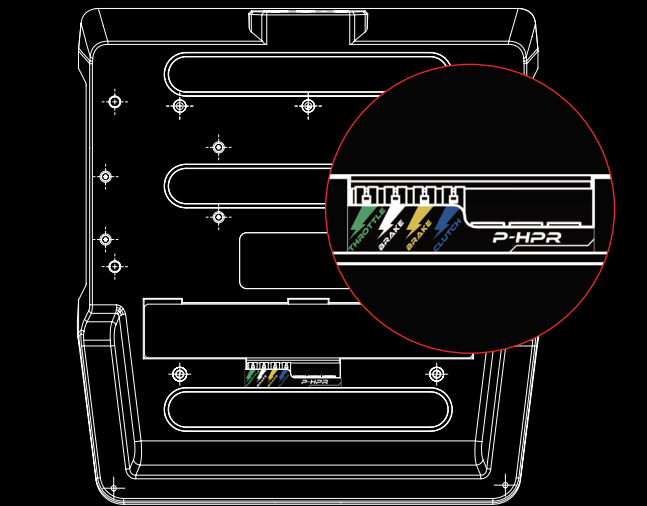


Invert the pedal to connect the cables, and plug the sockets into their corresponding colors

Replace the panel and secure the screws

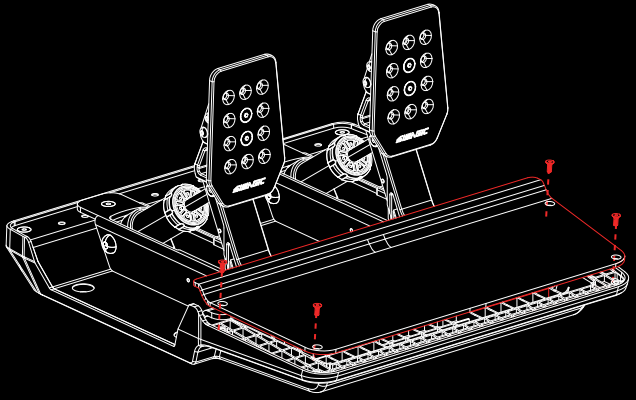


## 3.2 Connection (USB & Power Supply)

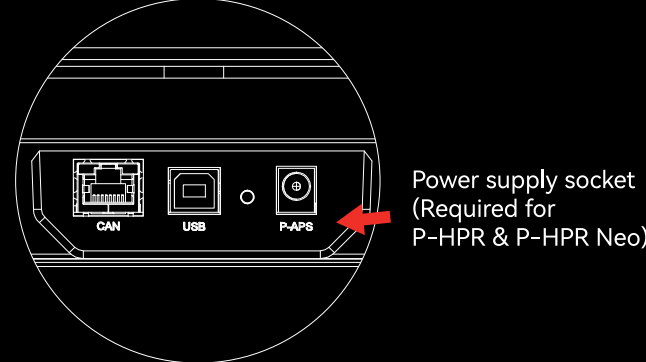


## 4.0 Wall Support Bracket Assembly Steps

① Use two screws to secure the left and right brackets to the pedal.

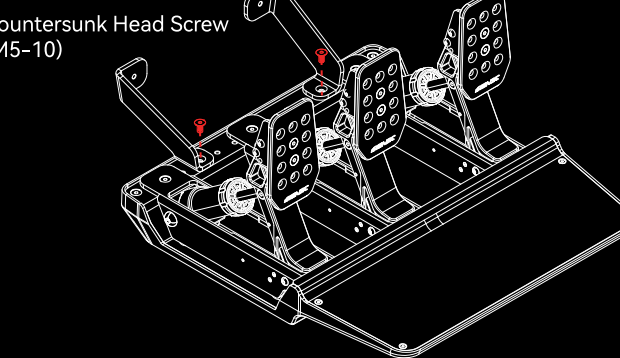


① Attach the wall plate to the left and right brackets, and tighten with two screws to complete the assembly.

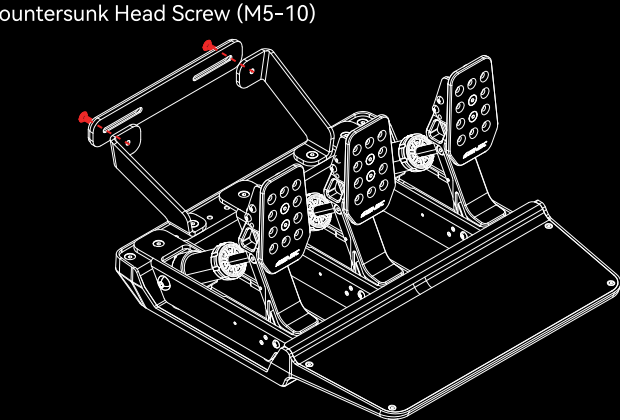


## 5.0 Fine Tuning

### 5.1 Pedal Face Angle Adjustment

Loosen the 2 screws on the side of the pedal arm for angle adjustment

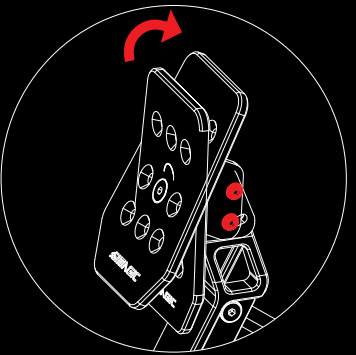


### 5.2 Pedal Height and Displacement Adjustment

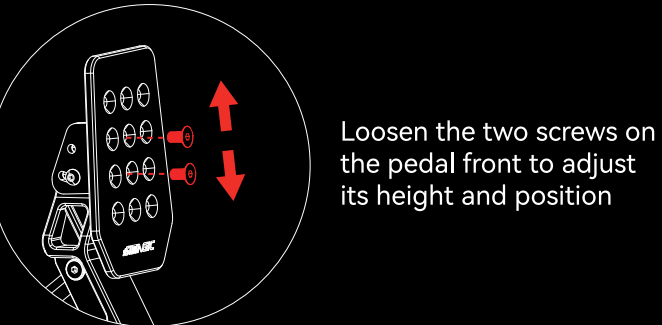


## 6.0 Brake Spring Replacement


### 6.1 Brake Cylinder Removal

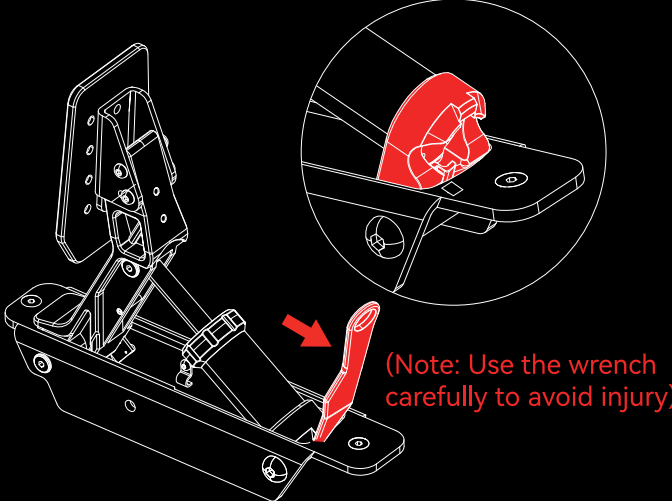

Insert the wrench into the back of the brake cylinder, then pull downward to loosen the cylinder.

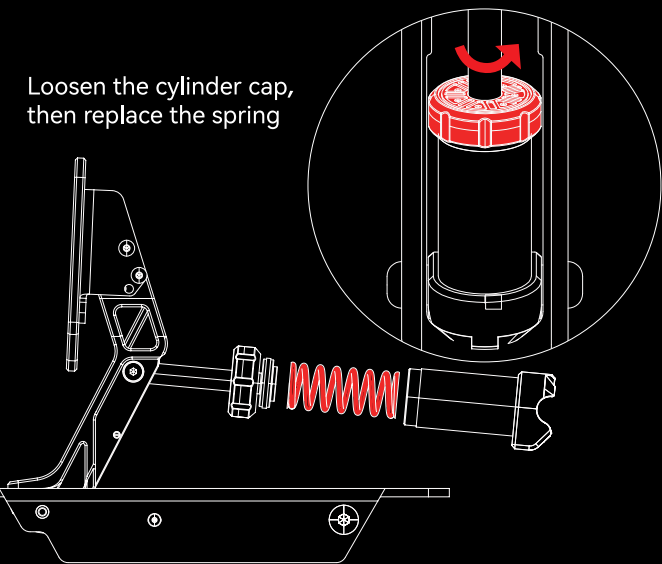


A brake washer can be added to improve brake feel (The washer is recommended for profile rig use only. Be cautious during the replacement process to avoid injuries)

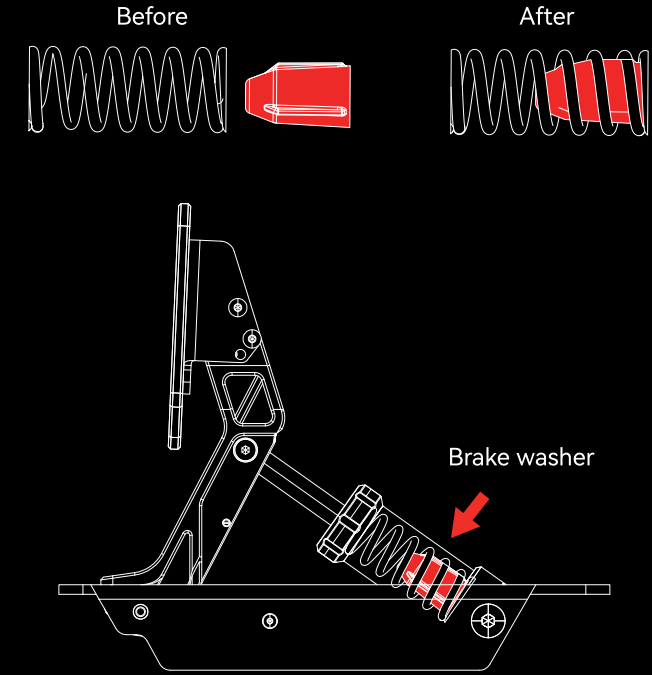


### 6.2 Install the Brake Cylinder

Secure the cylinder cap and slot the cylinder back in place

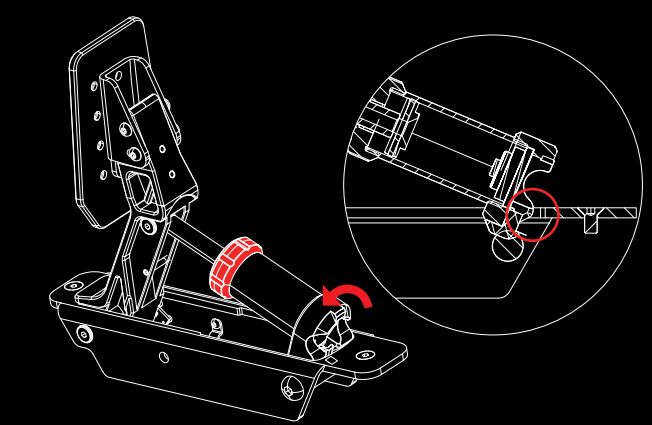


Flip the wrench and insert it into the back of the cylinder, then push upward to push the cylinder back in place

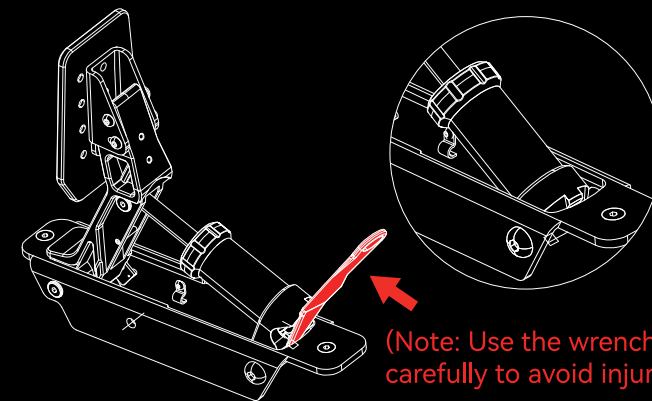

## 7.0 Cable Management

The cable management pin is intended for the P-HPR and P-HPR Neo

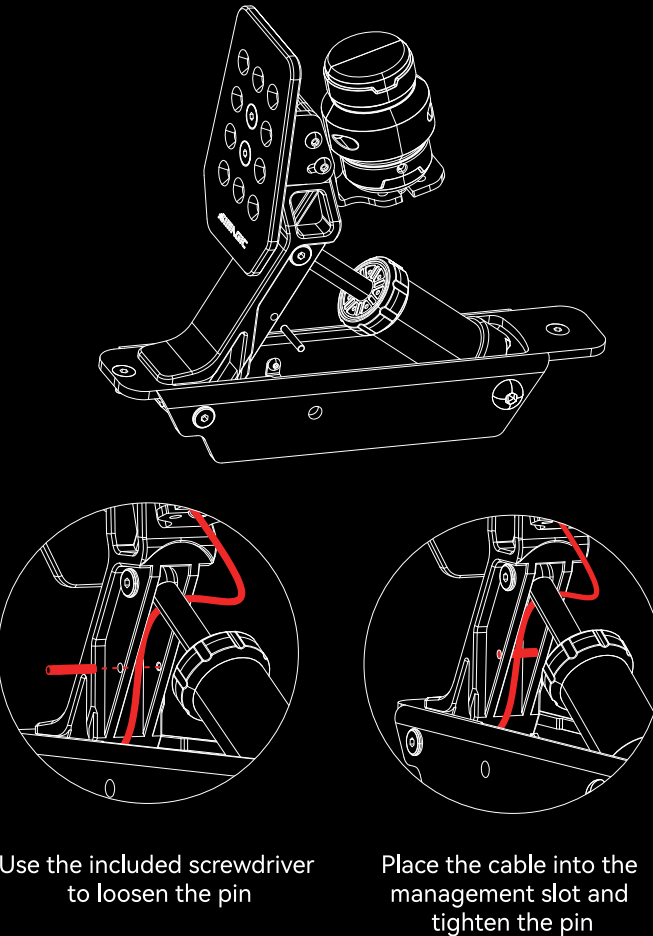

Note: SimPro Manager required to complete setup

## Software and Support



Install SimPro Manager to Configure



Product Tutorial (Scan the QR Code to view more related information)