
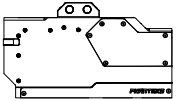
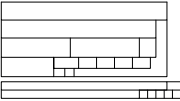








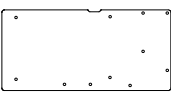


# GLACIER G40 MSI GPU BLOCK

INSTALLATION GUIDE V1.0

PH-GB4090MS\_BK01/CR01/MW01\_BP

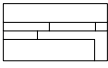PACKAGE CONTENTS					
	GB4090MS block QTY: 1		Block thermal pads QTY: 2 pre-cut pieces		GB4090MS backplate QTY: 1
	GLACIER stop fitting QTY: 2		M3x10 screw (1x) M3 Nut (2x)		Backplate thermal pads QTY: 2 pre-cut pieces
	Support bracket QTY: 1		M2.5x5 screws/washers QTY: 4/4		M2.5x8 flush screws QTY: 11
	Thermal compound QTY: 1		Phanteks D-RGB cable QTY: 1		Motherboard cable QTY: 1

**⚠ WARNING** – This product is intended for advanced users. Improper installation may result in damage to your equipment. While all efforts have been made to provide the most comprehensive information possible, Phanteks assumes no liability expressed or implied for any damage(s) occurring to your components as a result of using Phanteks cooling products, either due to mistake or omission on our part in the below instructions, or due to failure or defect in the Phanteks cooling products. Do not disassemble the water block. Warranty will be voided.


## STEP 1. REMOVING STOCK COOLER

Unscrew all highlighted screws to remove the stock cooler and backplate.

- backplate screws
- stock cooler screws


**⚠** Make sure to unplug the LED and Fan cables when you remove the stock cooler.

**⚠** MSI SUPRIM PCB version: V510-2.2





Some SUPRIM models require you to remove these 2 screws.


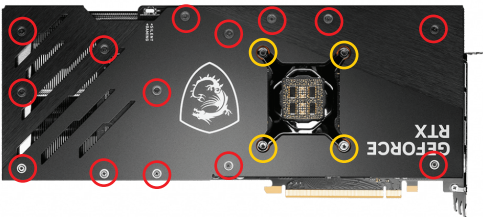
Secure again with 2x M3 Nuts and original screws.



### MSI RTX 4090/4080 SUPRIM (X)



### MSI RTX 4090 GAMING(X) TRIO



Keep for step 3

## STEP 2. APPLYING THERMAL PASTE & PADS



Clean off the original thermal compound. We recommend using isopropanol alcohol.

Remove the protective film and place the the thermal pads on the correct position on the PCB.

Apply the Phanteks Thermal Compound to the center of the GPU chip.

**⚠** Make sure to remove the protective film on both sides of the thermal pads.

### MSI RTX 4090/4080 SUPRIM (X) / GAMING(X) TRIO

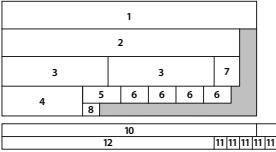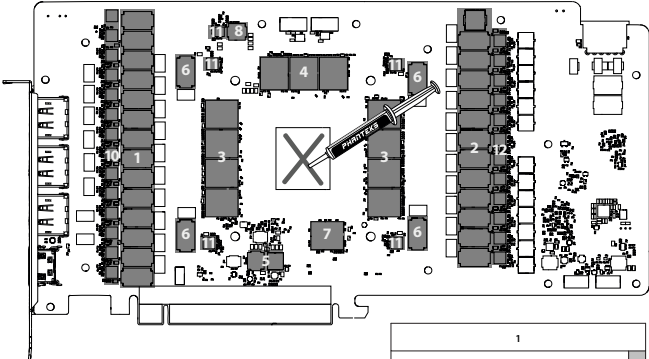

### STEP 3. MOUNT THE WATER BLOCK

Secure the support bracket to the GPU block first.



Carefully position the water block onto the graphics card. Align the mounting holes on the PCB with the holes on the water block.

Secure the water block with 4 M2.5x5mm screws and washers to the PCB.

Secure the Support Bracket with the original cooler screw.





Make sure to lay the GPU with the water block flat down without resting on the PCI bracket.

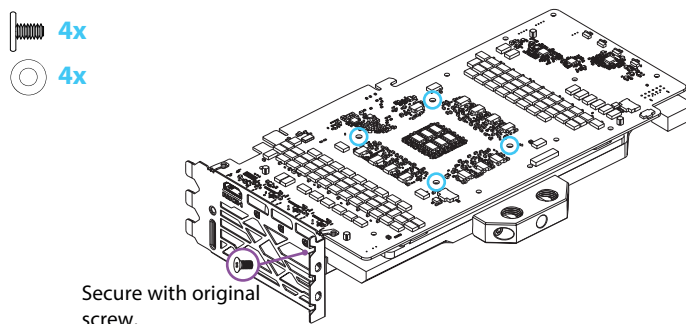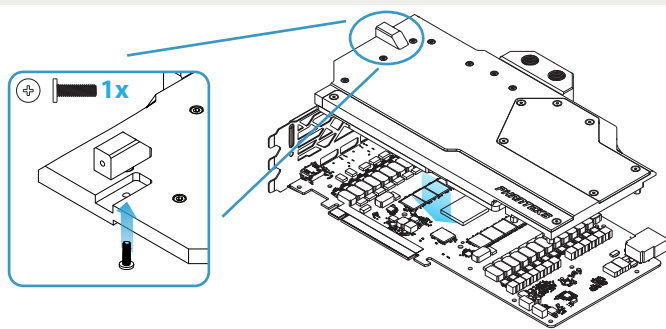

### STEP 4. APPLYING THERMAL PADS


Remove the protective film on both sides and place the thermal pads on the correct position on the backplate.

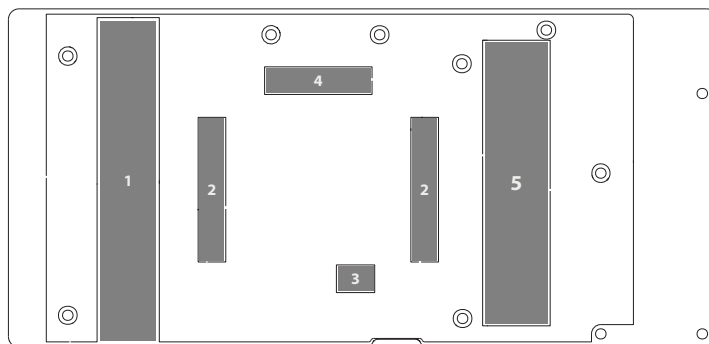

### STEP 5. INSTALL THE BACKPLATE

Carefully position the backplate onto the graphics card. Align the mounting holes on the PCB with the holes on the backplate.

Secure the backplate with 11 M2.5x8mm flush screws to the PCB.

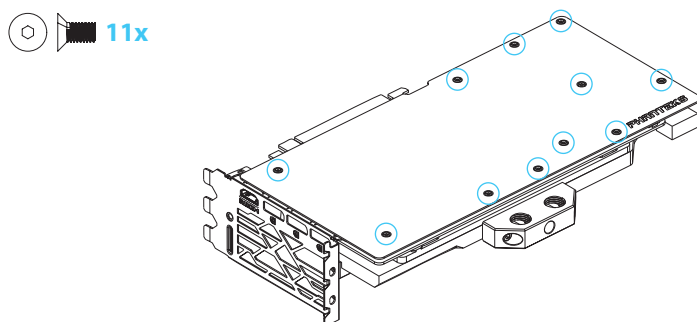

### STEP 6. INSTALL INTO THE SYSTEM

1. Connect the D-RGB cable to the D-RGB strip in the water block.




All Phanteks D-RGB products can be daisy-chained together.

2. Install the GPU into the system.

3. Install the waterloop and Stop Fittings

**⚠ Always perform a leak test before providing power to any system components.**

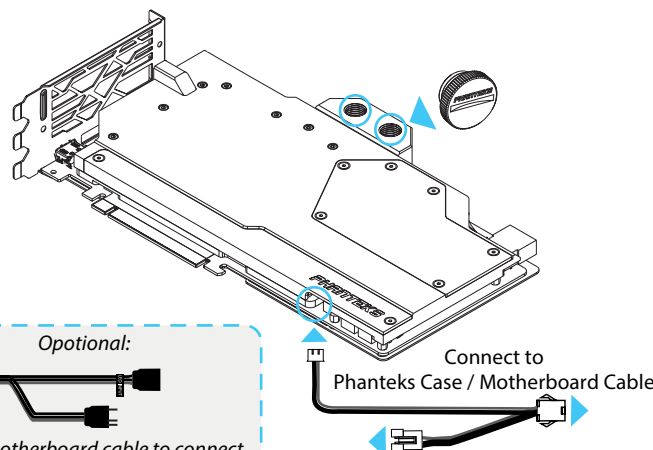

Optional:  
Use the Motherboard cable to connect the LED strip to the motherboard.