



TYGER®

TYGER KOBRA

TG-KB2T25002

Scan to Download the
Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


- | | |
|--|--|
| x1 Driver/Left Tyger Kobra | x3 Passenger/Right Center/Rear Mounting Brackets [D] |
| x1 Passenger/Right Tyger Kobra | x16 8mm Lock Washers |
| x1 Driver/Left Front Mounting Bracket [A] | x16 8mm x 24mm x 2mm Flat Washers |
| x1 Passenger/Right Front Mounting Bracket [C] | x16 8-1.25mm x 30mm Hex Bolts |
| x3 Driver/Left Center/Rear Mounting Brackets [B] | x16 8-1.25mm x 25mm Combination Bolts |

Parts List


Top View

ATTENTION: Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Kobra

P Passenger Side TYGER Kobra

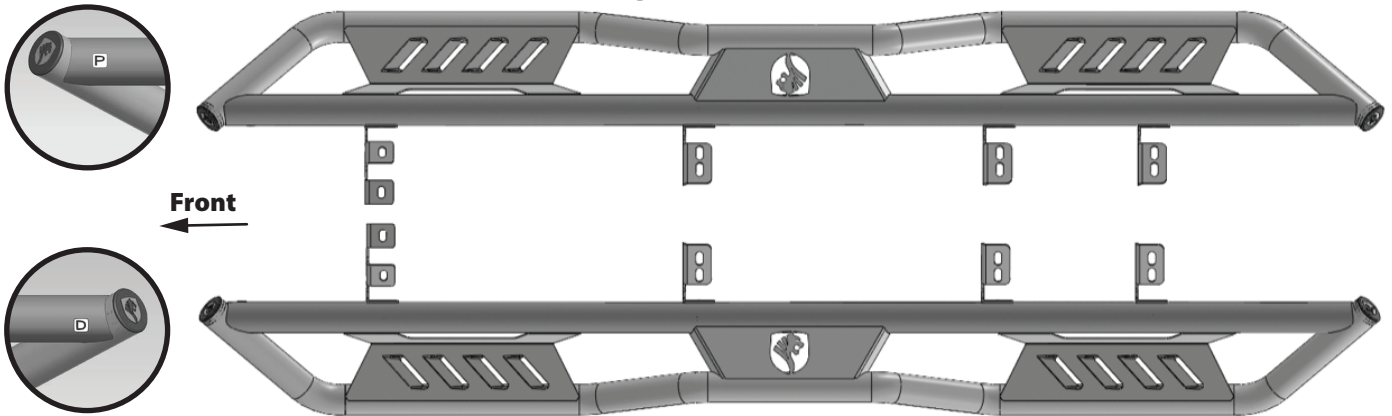


D Driver Side TYGER Kobra

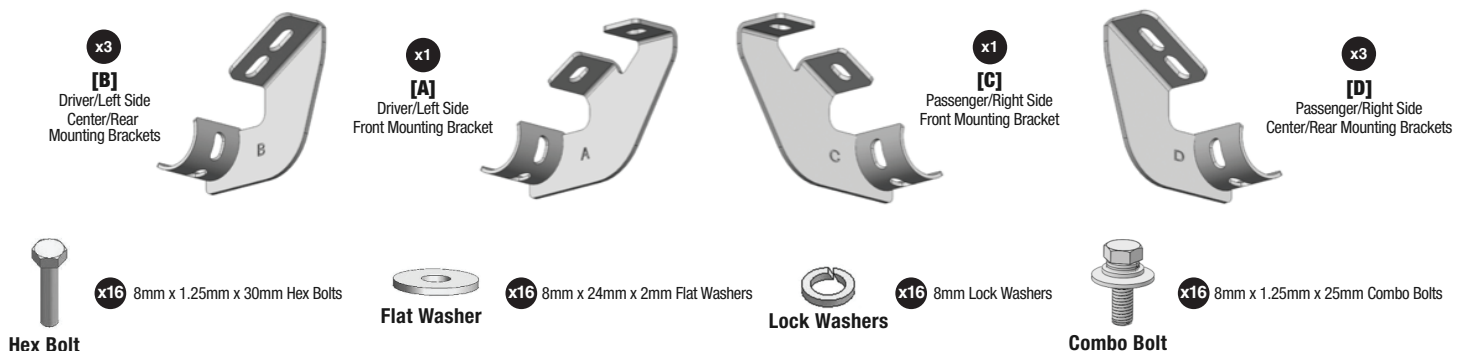


Reference the letters printed on the brackets to determine mounting locations

Top View

D Driver Side TYGER Kobra

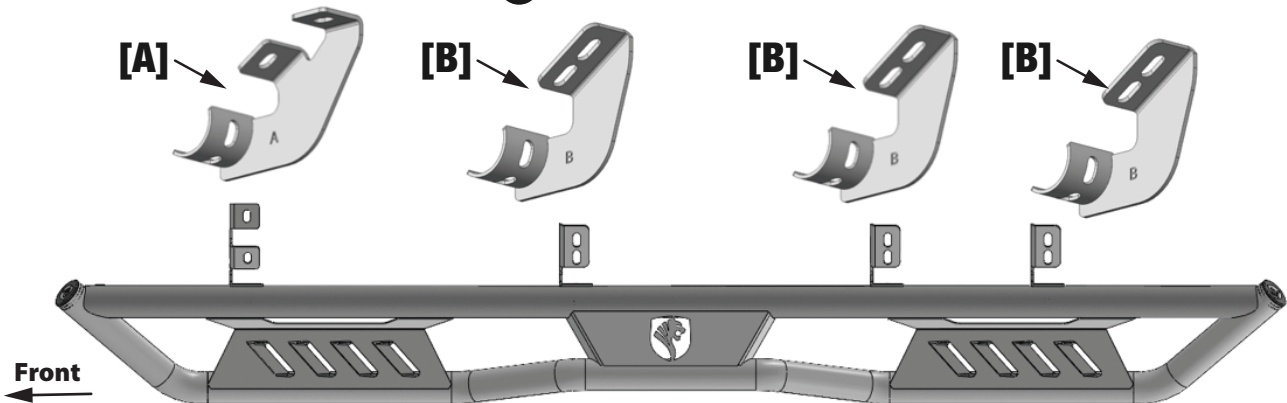


P Passenger Side TYGER Kobra

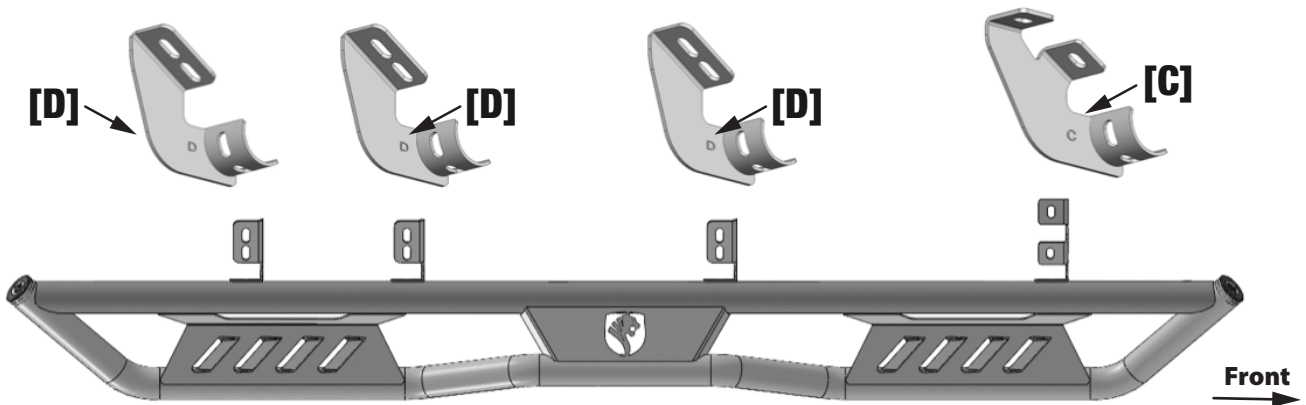


Bottom View


D Driver Side TYGER KOBRA

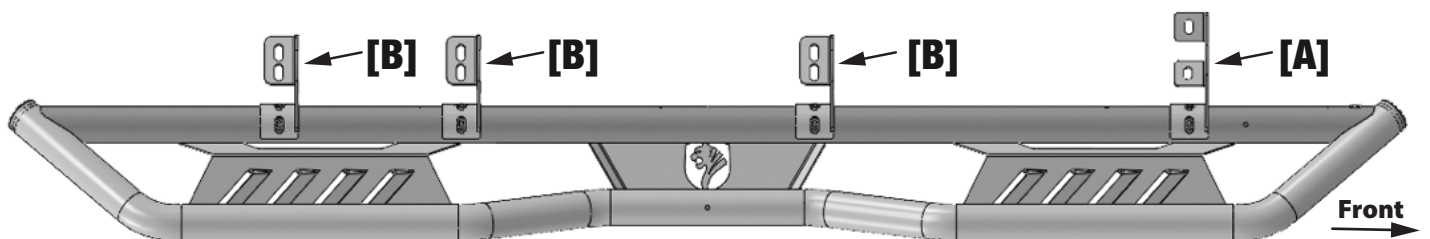

P Passenger Side TYGER KOBRA

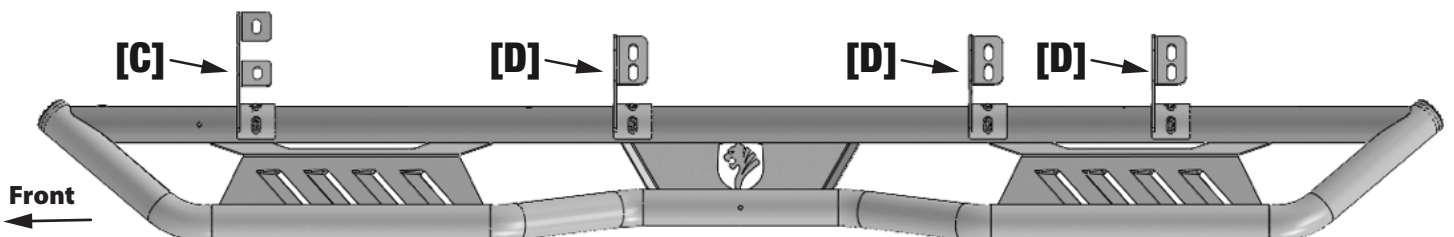


TOOLS REQUIRED



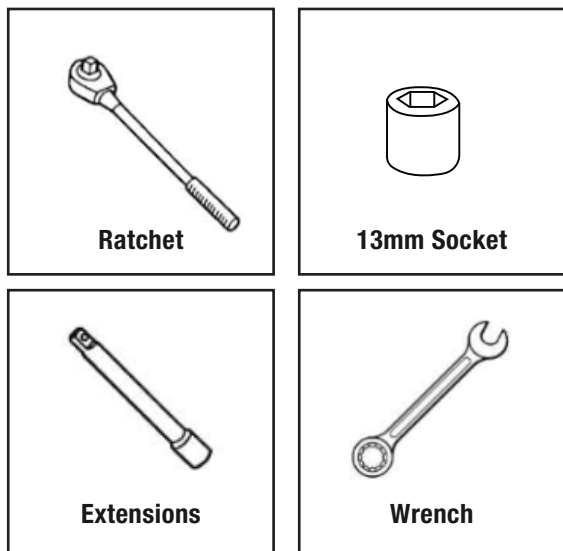


STEP 1 MOUNTING BRACKETS


Follow (Fig 1 – 12) to attach the brackets to the Passenger/Right Side. Ensure all hardware is hand tightened at this point.




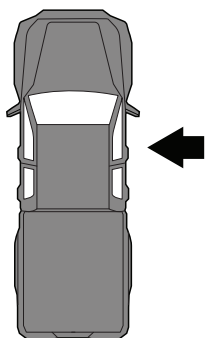


Passenger-side Front Mounting Area

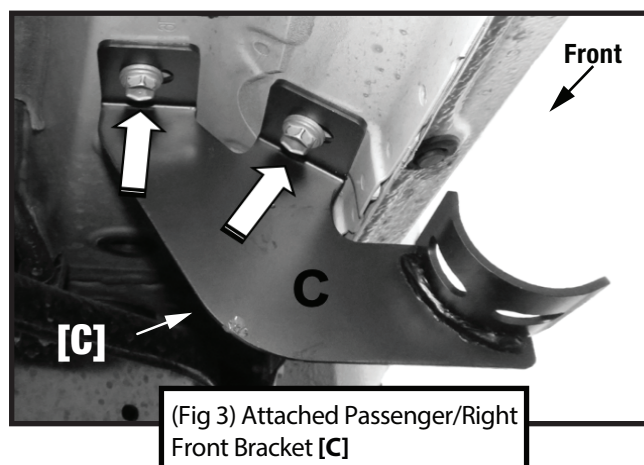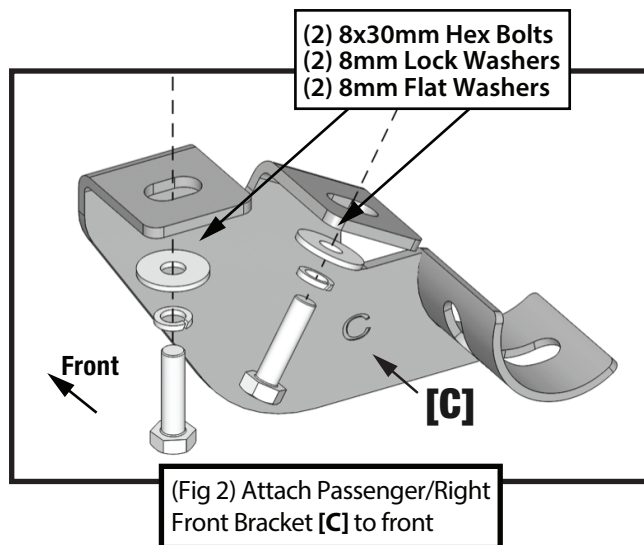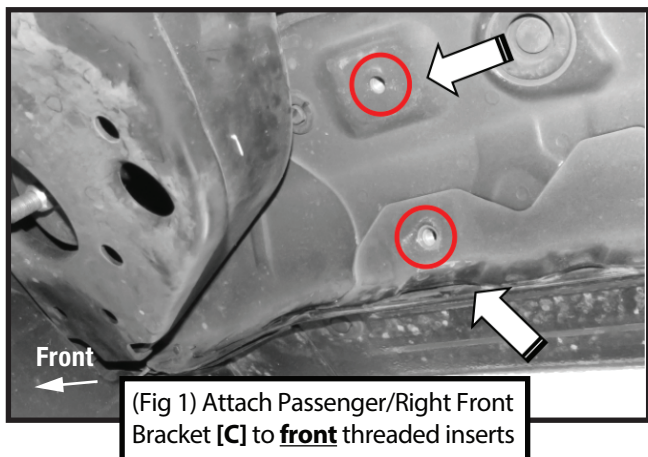


Passenger-side 1st Center Mounting Area

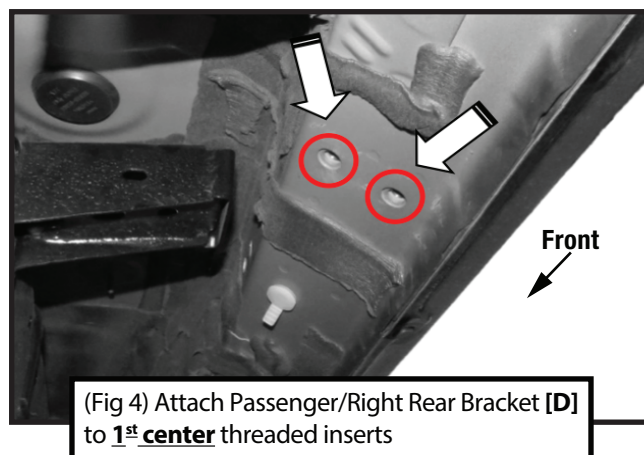


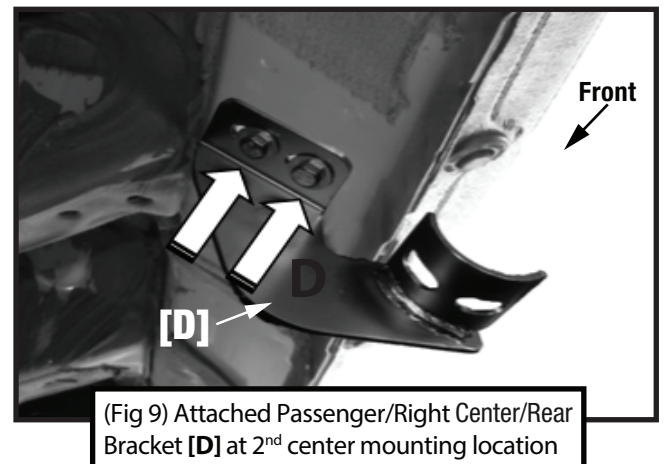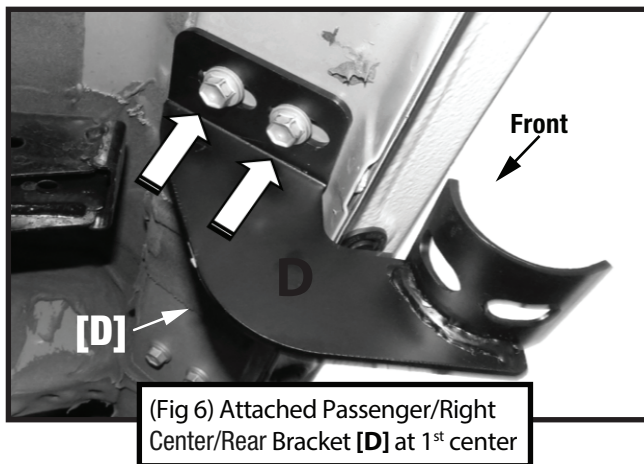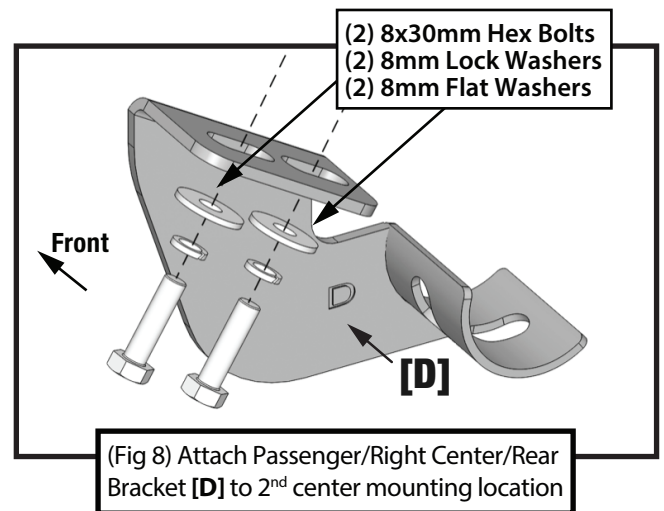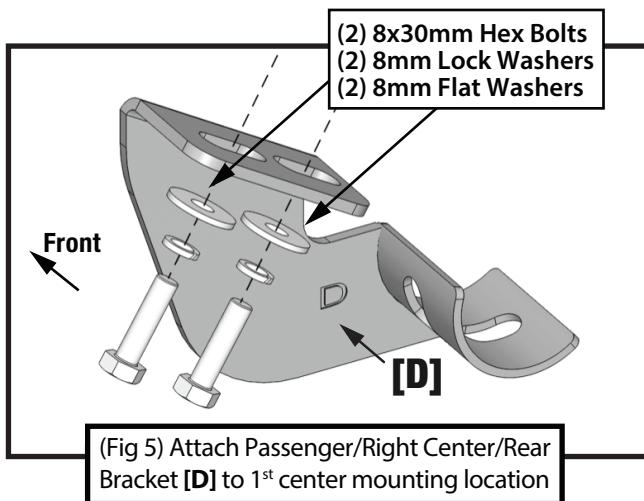


Passenger-side 2nd Center Mounting Area

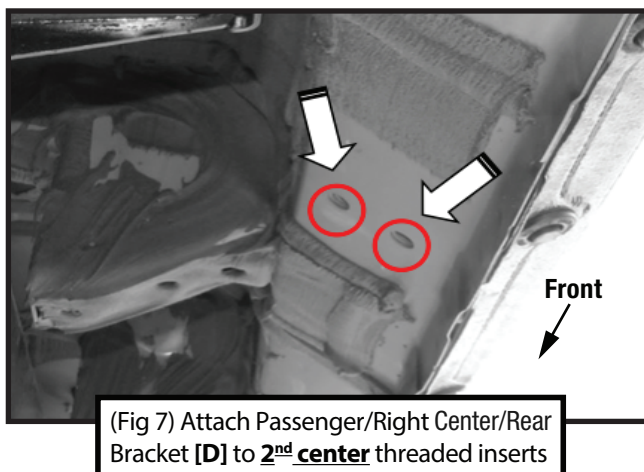

Passenger-side Rear Mounting Area

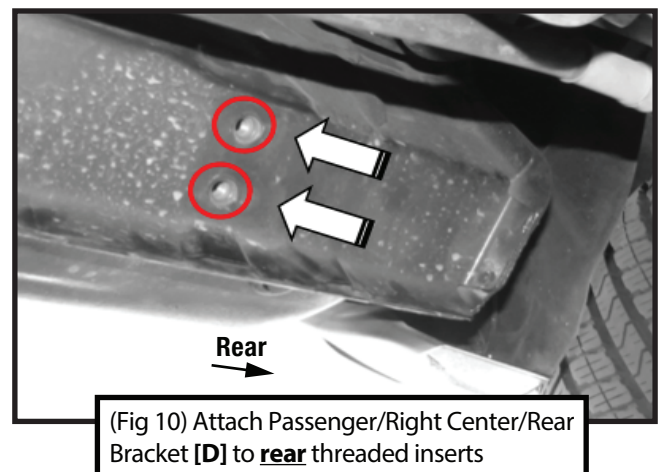


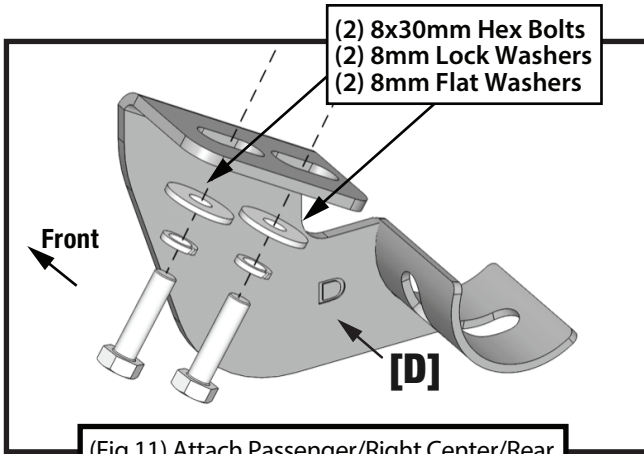

(Fig 11) Attach Passenger/Right Center/Rear Bracket [D] to rear mounting location




(Fig 12) Attached Passenger/Right Center/Rear Bracket [D] at rear mounting location

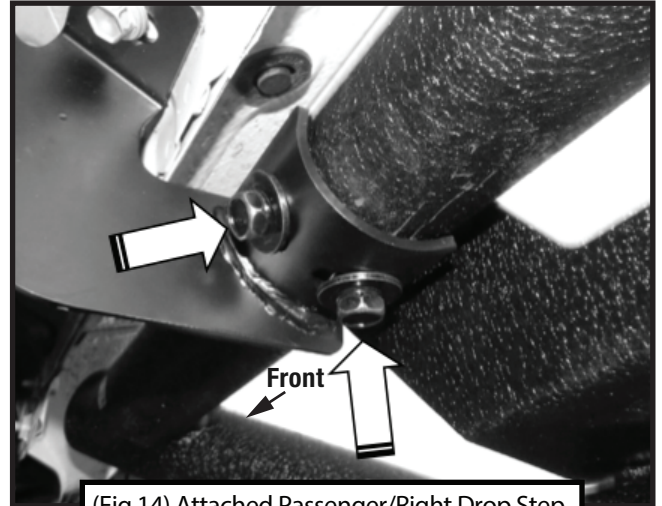

(Fig 14) Attached Passenger/Right Drop Step


STEP 3 DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation.
Use Front Mounting Bracket [A] instead of [C];
Use Center/Rear Mounting Brackets [B] instead of [D].

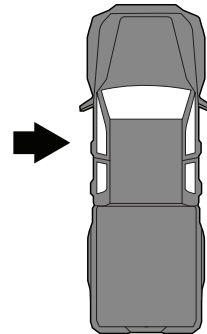

STEP 2 MOUNTING RUNNING BOARD

Follow (Fig 13 – 14) to install the Kobra Drop Step on the Passenger/Right Mounting Brackets. Ensure all hardware is hand tightened at this point.

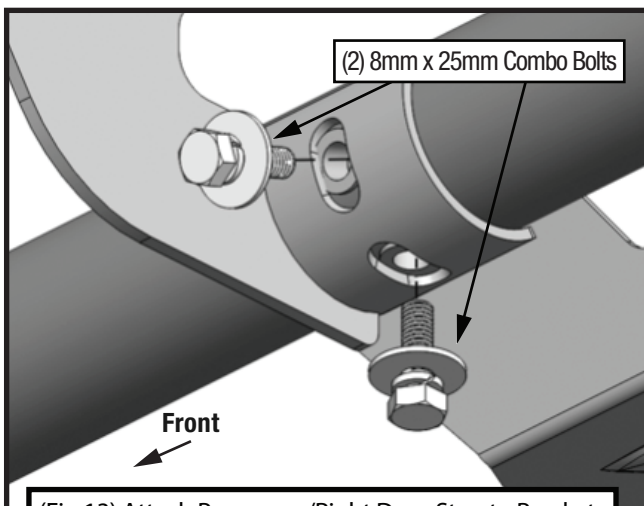

(Fig 13) Attach Passenger/Right Drop Step to Brackets

STEP 4

Ensure Tyger Kobra Drop Step is level and straightened, then tighten all fasteners. Installation is complete. Perform periodic inspections to the installation to make sure that all hardware is secure and tight.



Complete Installation